

Halogen headlights , (8ID)

From July 2018




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Onboard supply control unit, Front left headlight


- J519 Onboard supply control unit
- L174 Left daytime running light bulb
- MX1 Front left headlight
- M5 Front left turn signal bulb
- M29 Left headlight dipped beam bulb
- M30 Left headlight main beam bulb
- T10g 10-pin connector, black
- T46a 46-pin connector, black
- T73b 73-pin connector, black
- V48 Left headlight range control motor

- 288 Earth connection (HRC), in dash panel wiring harness
- 363 Earth connection 8, in engine compartment wiring harness
- 417 Earth connection 9, in engine compartment wiring harness
- 655 Earth point, on left headlight
- B277 Positive connection 1 (15a) in main wiring harness
- B455 Connection (HRC), in main wiring harness

* see applicable current flow diagram for fuses in interior
 *2 see applicable current flow diagram for fuses in engine compartment

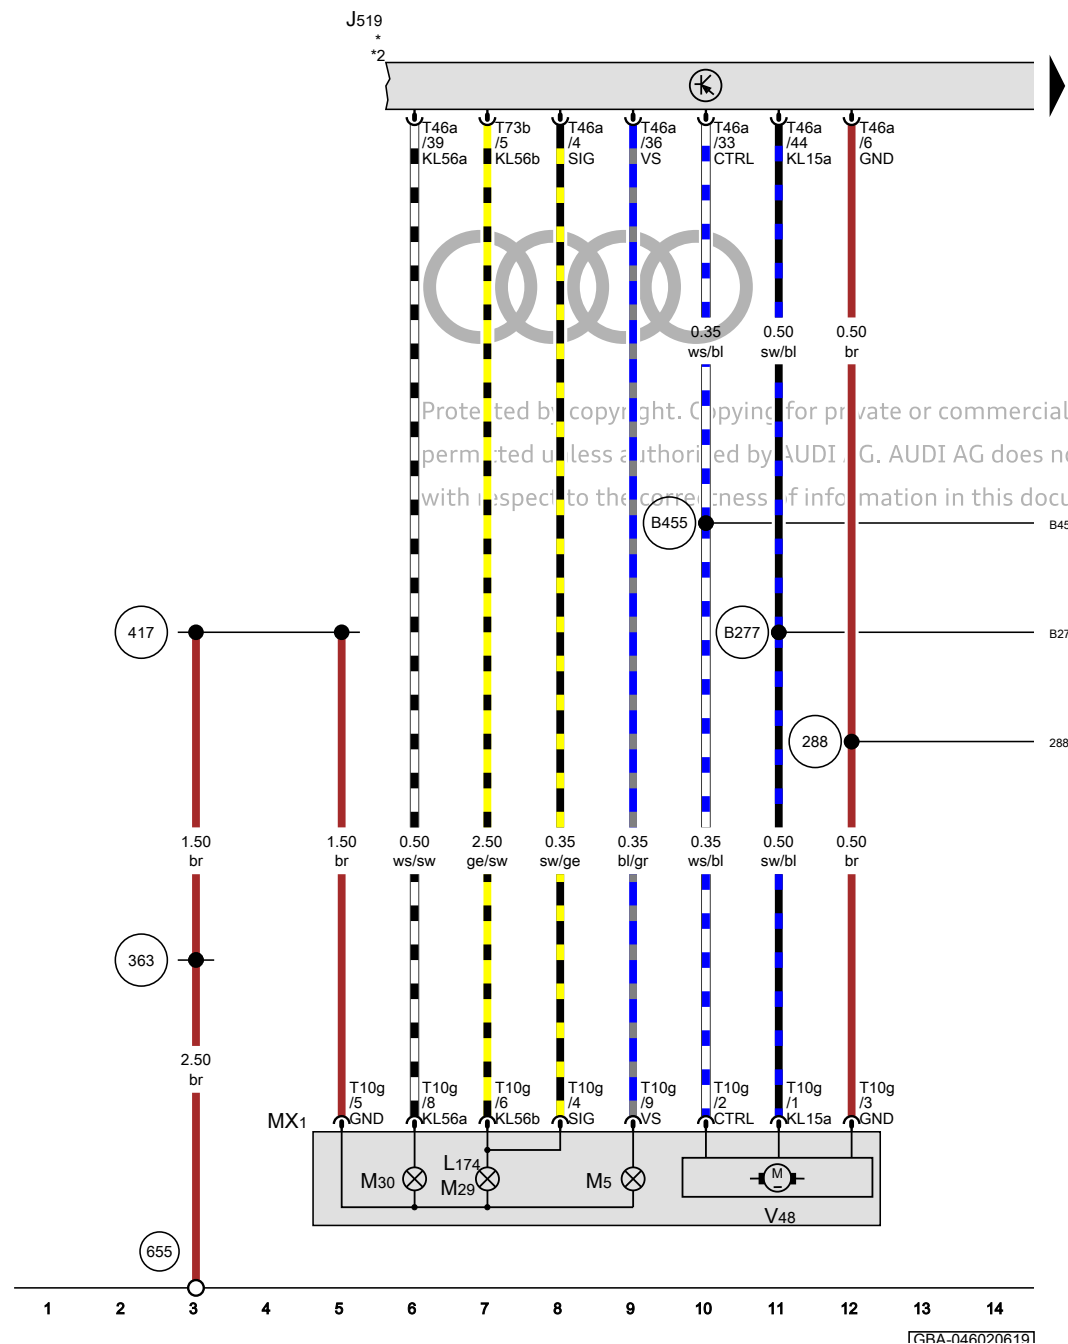

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

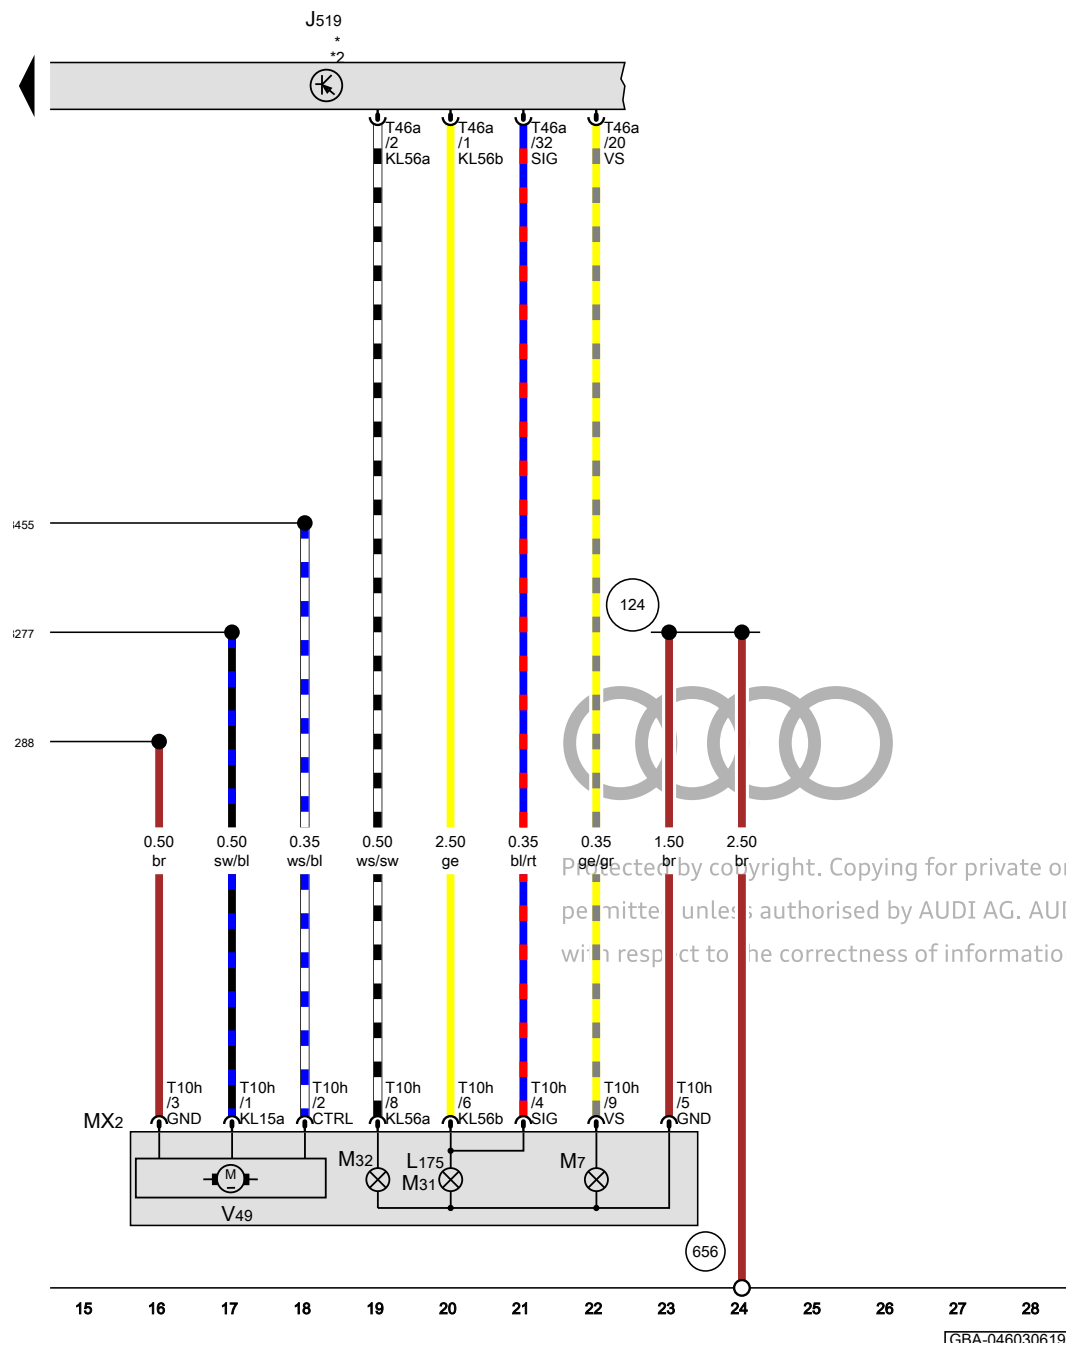

Onboard supply control unit, Front right headlight

- J519 Onboard supply control unit
- L175 Right daytime running light bulb
- MX2 Front right headlight
- M7 Front right turn signal bulb
- M31 Right headlight dipped beam bulb
- M32 Right headlight main beam bulb
- T10h 10-pin connector, black
- T46a 46-pin connector, black
- V49 Right headlight range control motor
- 124 Earth connection, in right side engine compartment wiring harness
- 288 Earth connection (HRC), in dash panel wiring harness
- 656 Earth point, on right headlight
- B277 Positive connection 1 (15a) in main wiring harness
- B455 Connection (HRC), in main wiring harness
- * see applicable current flow diagram for fuses in interior
- *2 see applicable current flow diagram for fuses in engine compartment

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.