

2017 ACCESSORIES AND EQUIPMENT
Interior Trim and Paneling - Sierra, Silverado

SPECIFICATIONS

FASTENER SPECIFICATIONS

Reusable Threaded Fastener Tightening Specifications

NOTE:

All fasteners listed in this table can be reused after removal.

Application	Specification
	Metric (English)
Center Pillar Upper Assist Handle Fastener	9 N.m (80 lb in)
Coat Hook Fastener	6 N.m (53 lb in)
Rear Seat Belt Retractor Fastener	45 N.m (33 lb ft)
Roof Rail Assist Handle Fastener	9 N.m (80 lb in)
Roof Rail Rear Assist Handle Fastener	9 N.m (80 lb in)
Windshield Pillar Assist Handle Fastener	9 N.m (80 lb in)

REPAIR INSTRUCTIONS

FRONT SIDE DOOR ACCESSORY SWITCH MOUNT PLATE REPLACEMENT - DRIVER SIDE (WITH A31)

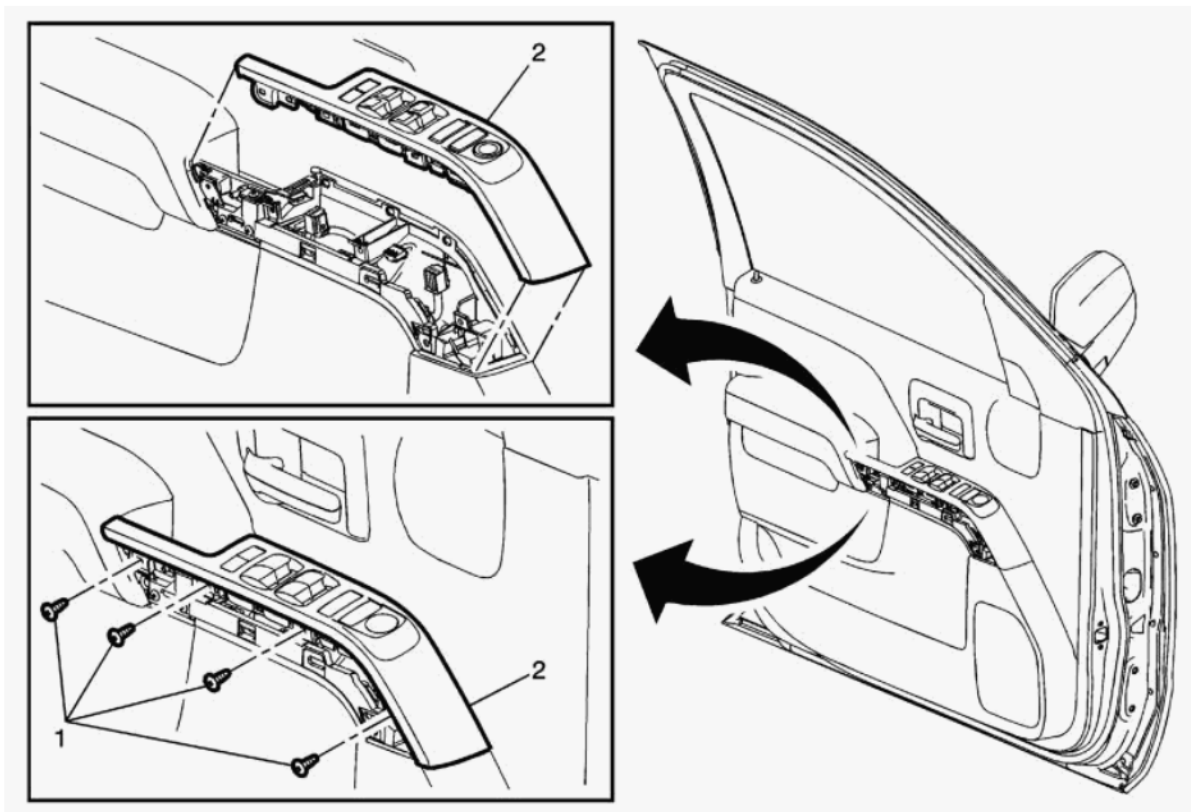


Fig. 1: Front Side Door Accessory Switch Mount Plate - Driver Side (With A31)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front side door armrest cover trim. Refer to Front Side Door Armrest Cover Trim Replacement (With A31) .	
1	Front Side Door Trim Panel Fastener (Qty: 4) CAUTION: Refer to Fastener Caution .
2	Front Side Door Accessory Switch Mount Plate Assembly - Driver Side Procedures 1. Disconnect the electrical connector from the switch assemblies. 2. Transfer parts as necessary.

FRONT SIDE DOOR ACCESSORY SWITCH MOUNT PLATE REPLACEMENT - PASSENGER SIDE

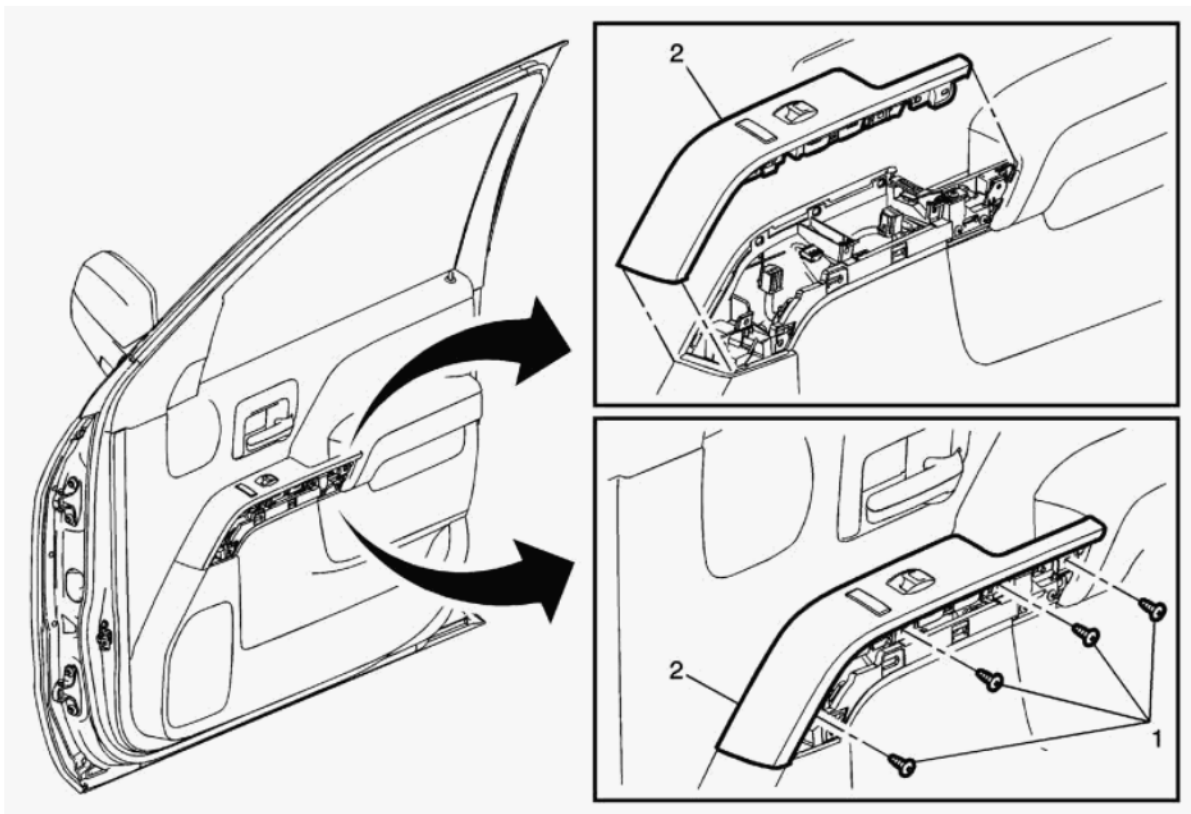


Fig. 2: Front Side Door Accessory Switch Mount Plate - Passenger Side

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front side door armrest cover trim. Refer to Front Side Door Armrest Cover Trim Replacement (With A31) Front Side Door Armrest Cover Trim Replacement (Without A31) .	
1	Front Side Door Trim Panel Fastener (Qty: 4) CAUTION: Refer to Fastener Caution .
2	Front Side Door Accessory Switch Mount Plate Assembly - Passenger Side Procedures 1. Disconnect the electrical connector from the switch assemblies. 2. Transfer parts as necessary.

REAR SIDE DOOR ACCESSORY SWITCH MOUNT PLATE REPLACEMENT (CREW CAB)

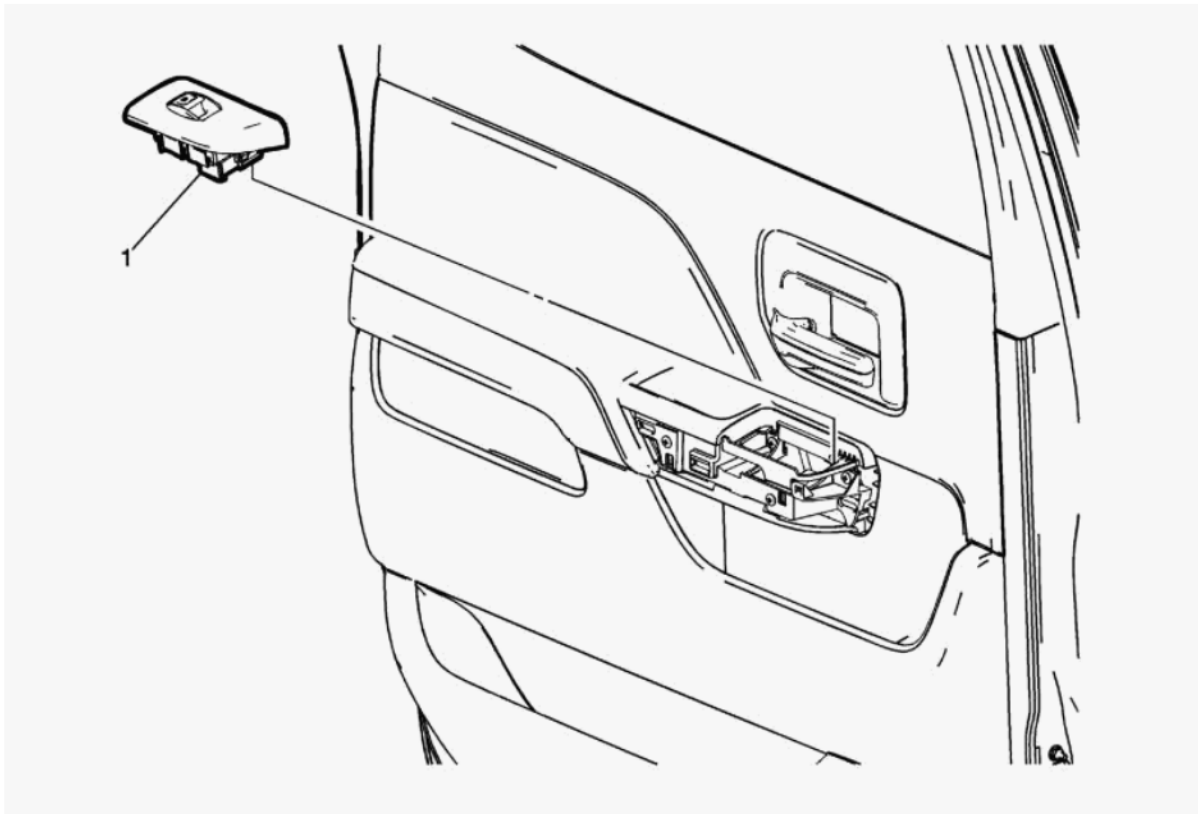


Fig. 3: Rear Side Door Accessory Switch Mount Plate (Crew Cab)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the rear side door armrest cover trim. Refer to Rear Side Door Armrest Cover Trim Replacement (Crew Cab) .	
1	Rear Side Door Accessory Switch Mount Plate Assembly Procedure 1. Use a flat-bladed plastic trim tool in order to release the rear side door accessory switch mount plate from the door trim assembly. 2. Disconnect the electrical connector. 3. Transfer parts as necessary.

REAR SIDE DOOR ACCESSORY SWITCH MOUNT PLATE REPLACEMENT (EXTENDED CAB)

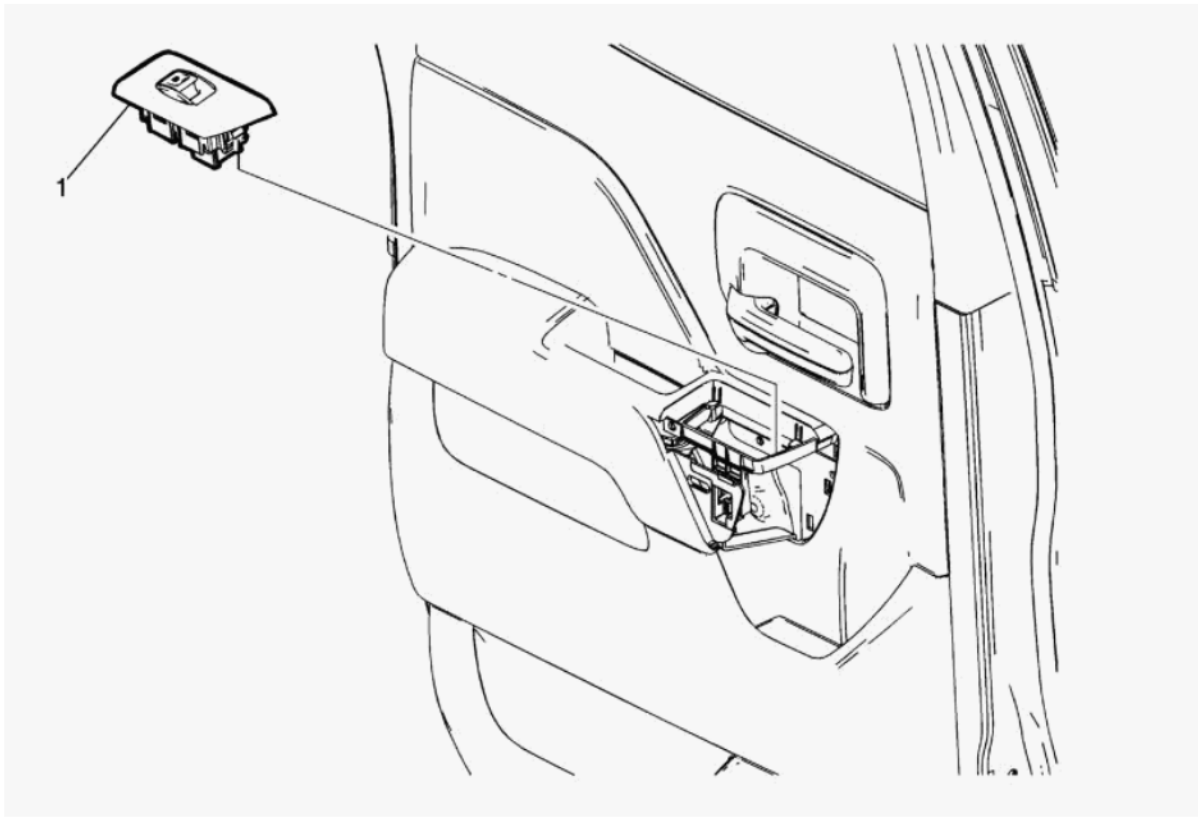


Fig. 4: Rear Side Door Accessory Switch Mount Plate (Extended Cab)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the rear side door armrest cover trim. Refer to Rear Side Door Armrest Cover Trim Replacement (Extended Cab) .	
1	Rear Side Door Accessory Switch Mount Plate Assembly Procedure 1. Use a flat-bladed plastic trim tool in order to release the rear side door accessory switch mount plate from the door trim assembly. 2. Disconnect the electrical connector. 3. Transfer parts as necessary.

FRONT SIDE DOOR ARMREST COVER TRIM REPLACEMENT (WITH A31)

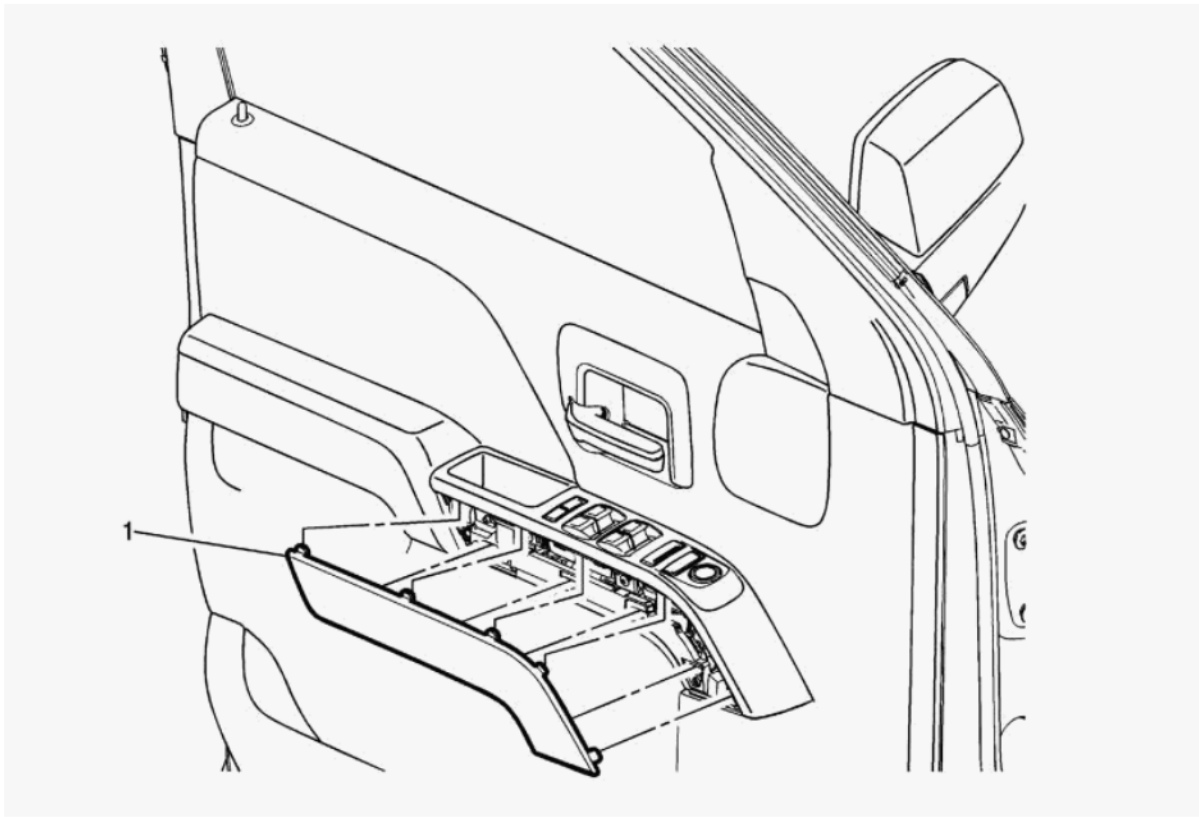


Fig. 5: Front Side Door Armrest Cover Trim (With A31)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Side Door Armrest Cover Trim Assembly Procedure Starting at the bottom of the armrest cover, use a small flat-bladed tool to release the integral clips from the front side door trim panel.

FRONT SIDE DOOR ARMREST COVER TRIM REPLACEMENT (WITHOUT A31)

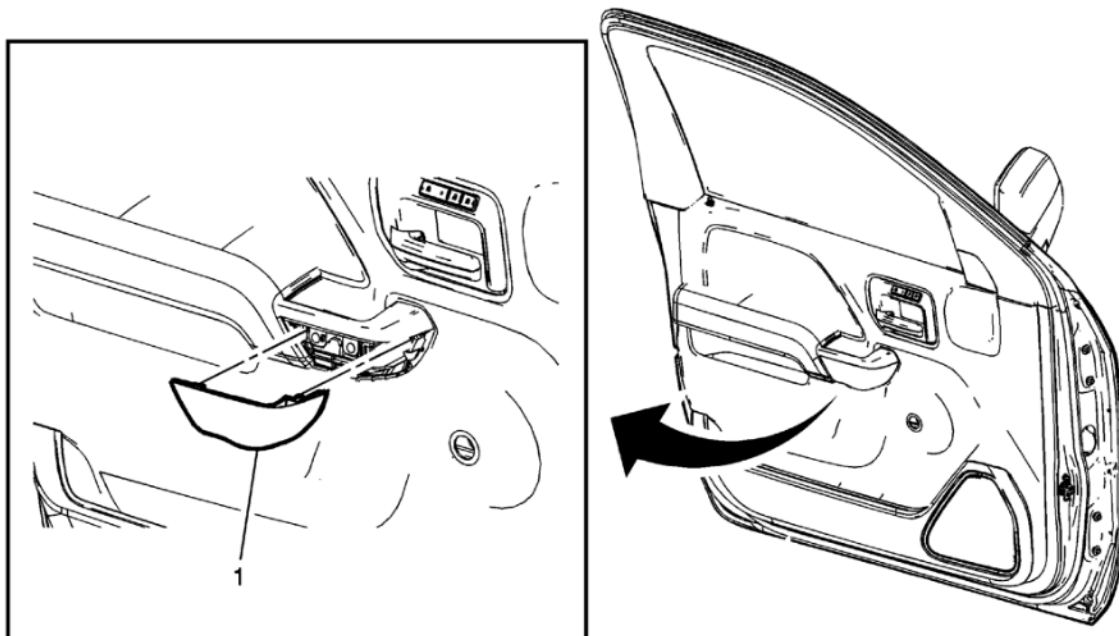


Fig. 6: Front Side Door Armrest Cover Trim (Without A31)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Side Door Armrest Cover Trim Assembly Procedure Use a small flat-bladed tool to release the integral clips from the front side door trim panel.

REAR SIDE DOOR ARMREST COVER TRIM REPLACEMENT (CREW CAB)

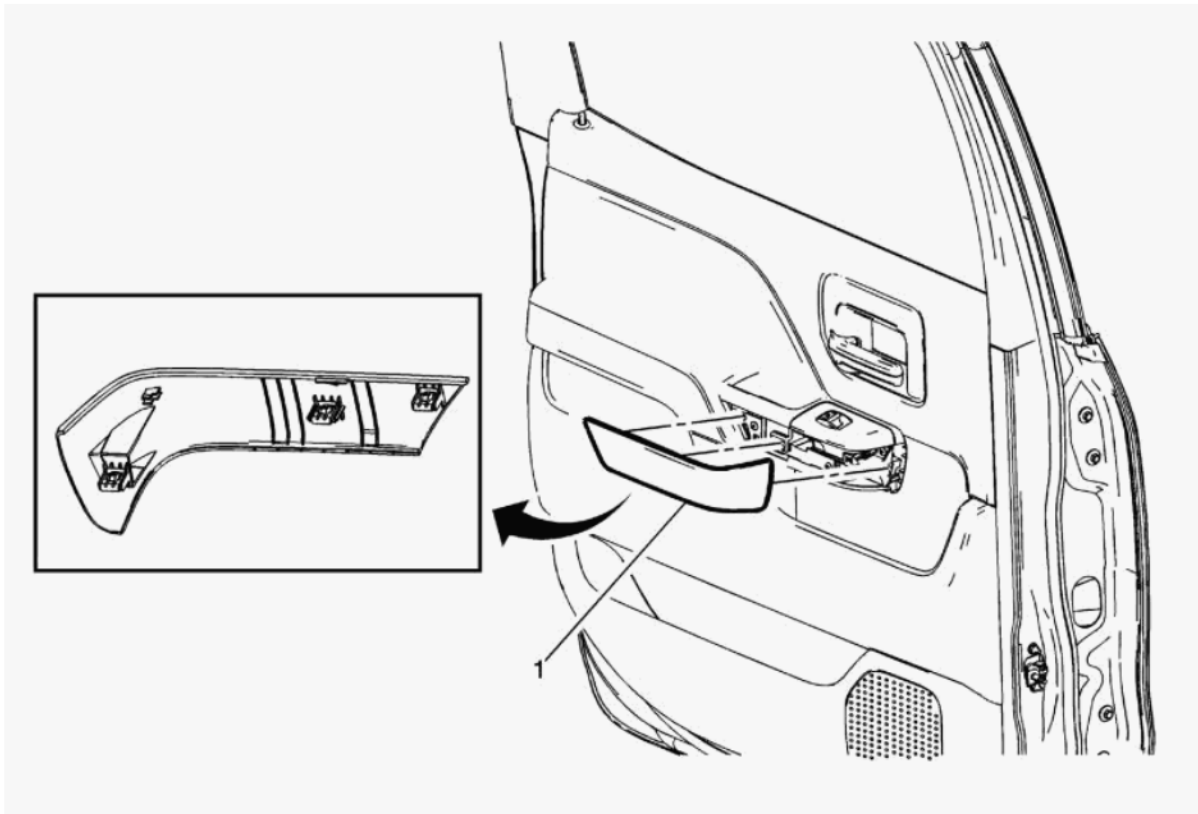


Fig. 7: Rear Side Door Armrest Cover Trim (Crew Cab)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Side Door Armrest Cover Trim Assembly Procedure Use a small flat-bladed tool to release the integral clips from the rear side door trim panel.

REAR SIDE DOOR ARMREST COVER TRIM REPLACEMENT (EXTENDED CAB)

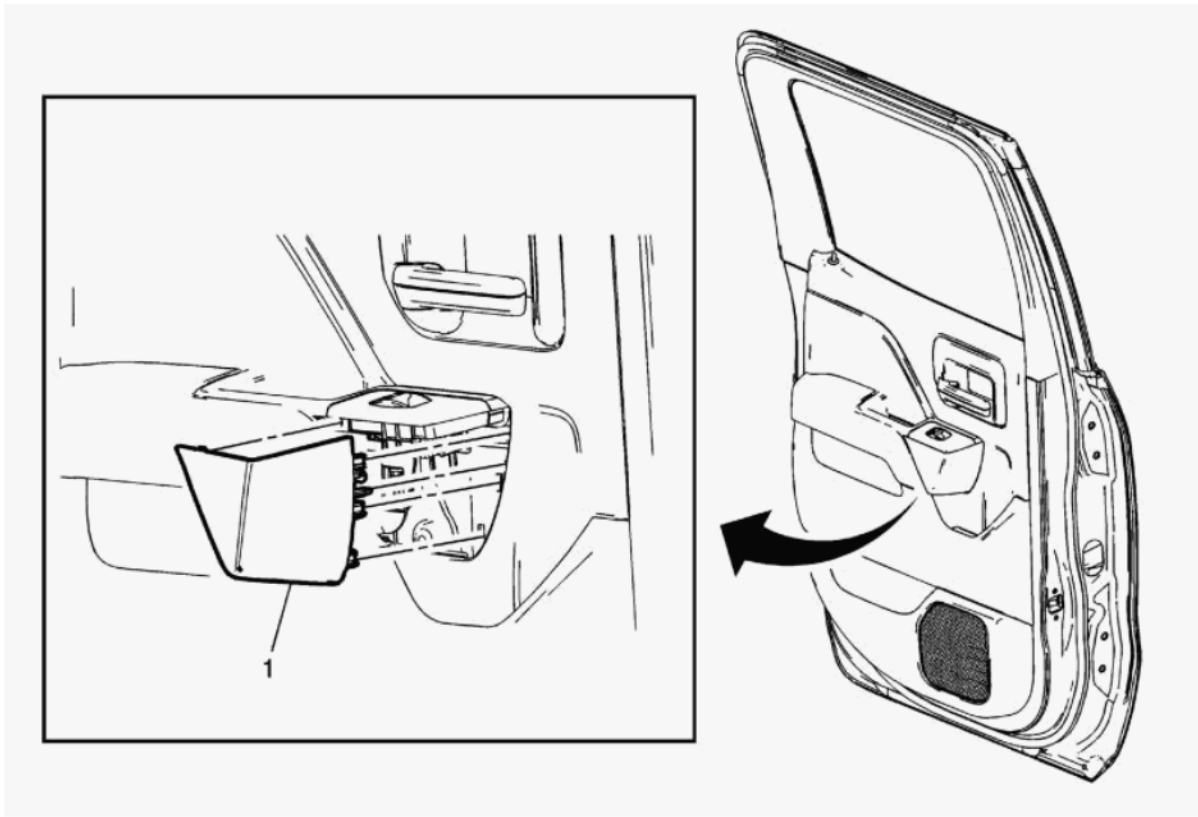


Fig. 8: Rear Side Door Armrest Cover Trim (Extended Cab)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Side Door Armrest Cover Trim Assembly Procedure Use a small flat-bladed tool to release the integral clips from the rear side door trim panel.

FRONT SIDE DOOR PULL HANDLE BRACKET REPLACEMENT

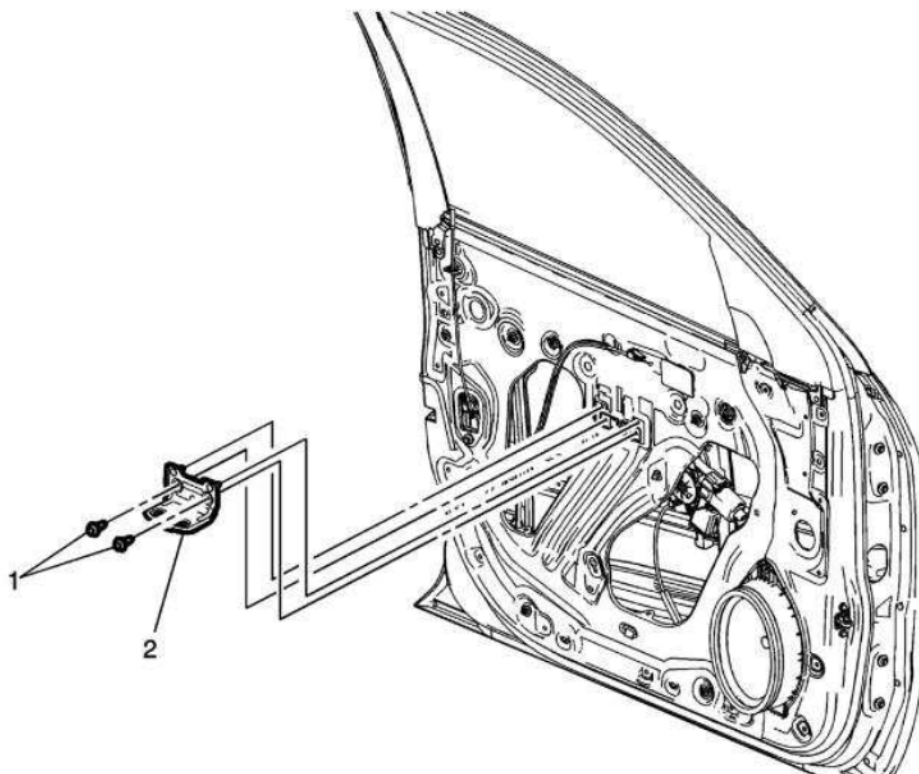


Fig. 9: Front Side Door Pull Handle Bracket
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front side door trim. Refer to Front Side Door Trim Replacement (With A31) Front Side Door Trim Replacement (Without A31) .	
1	Front Side Door Armrest Bracket Fastener (Qty: 2) CAUTION: Refer to Fastener Caution .
2	Front Side Door Pull Handle Bracket

REAR SIDE DOOR PULL HANDLE BRACKET REPLACEMENT

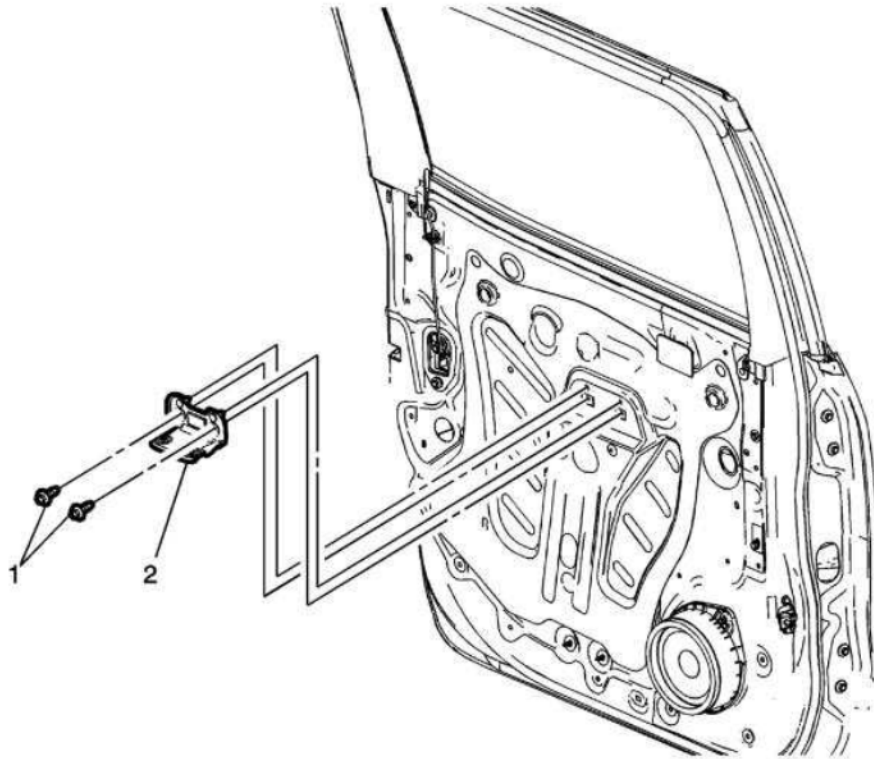


Fig. 10: Rear Side Door Pull Handle Bracket
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the rear side door trim. Refer to Rear Side Door Trim Panel Replacement (Crew Cab, Extended Cab) .	
1	Rear Side Door Armrest Bracket Fastener (Qty: 2) CAUTION: Refer to Fastener Caution .
2	Rear Side Door Pull Handle Bracket

FRONT SIDE DOOR TRIM REPLACEMENT (WITH A31)

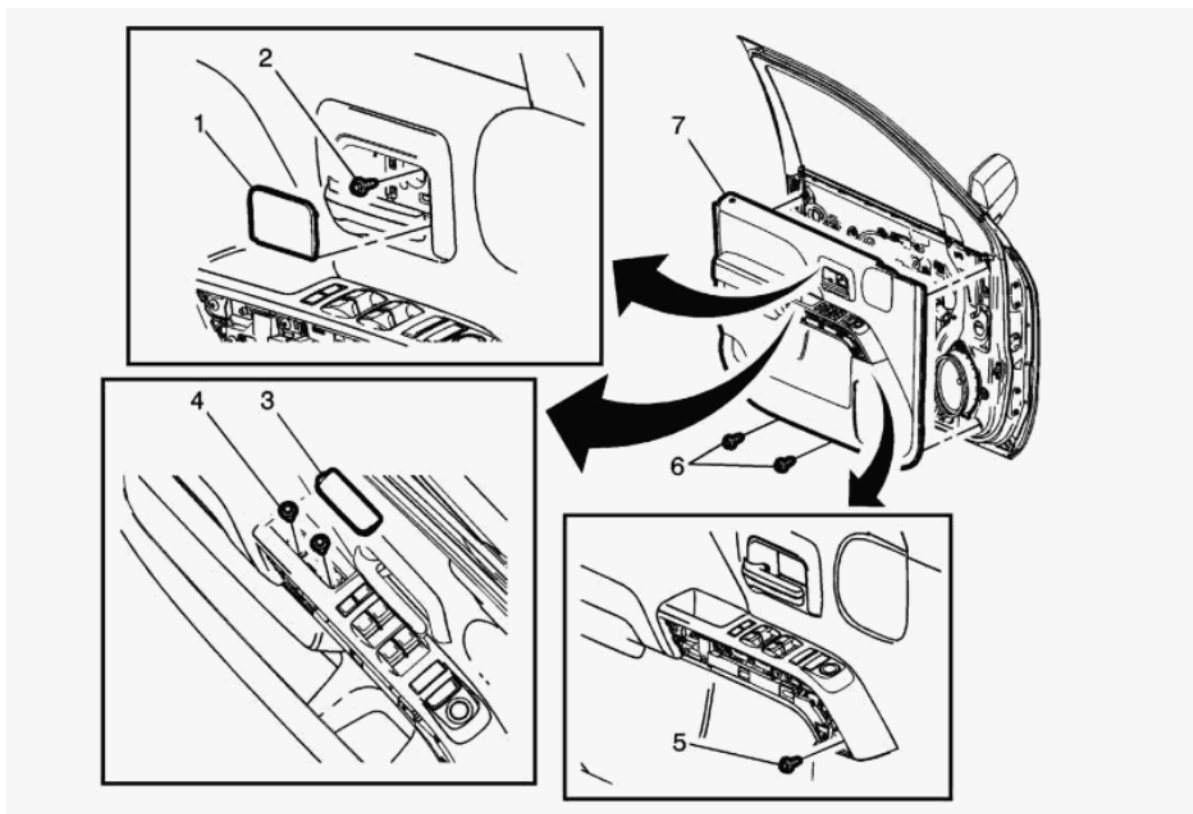


Fig. 11: Front Side Door Trim (With A31)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front side door armrest cover trim. Refer to Front Side Door Armrest Cover Trim Replacement (With A31) .	
1	Front Side Door Inside Handle Bolt Finish Cap
2	Front Side Door Inside Handle Fastener CAUTION: Refer to Fastener Caution .
3	Front Side Door Armrest Pull Cup Bolt Cap
4	Front Side Door Armrest Pull Cup Fastener (Qty: 2)
5	Front Side Door Trim Bracket Fastener
6	Front Side Door Trim Panel Fastener (Qty: 2)
7	Front Side Door Trim Assembly Procedure 1. Gently pull the door trim panel straight away from the door including along the upper edge. 2. Use the appropriate plastic trim tool to aid in the removal of the door trim panel. 3. Disconnect the door lock retainer cable from the door trim panel and the inside

Callout	Component Name
	handle. 4. Disconnect the electrical connector.

FRONT SIDE DOOR TRIM REPLACEMENT (WITHOUT A31)

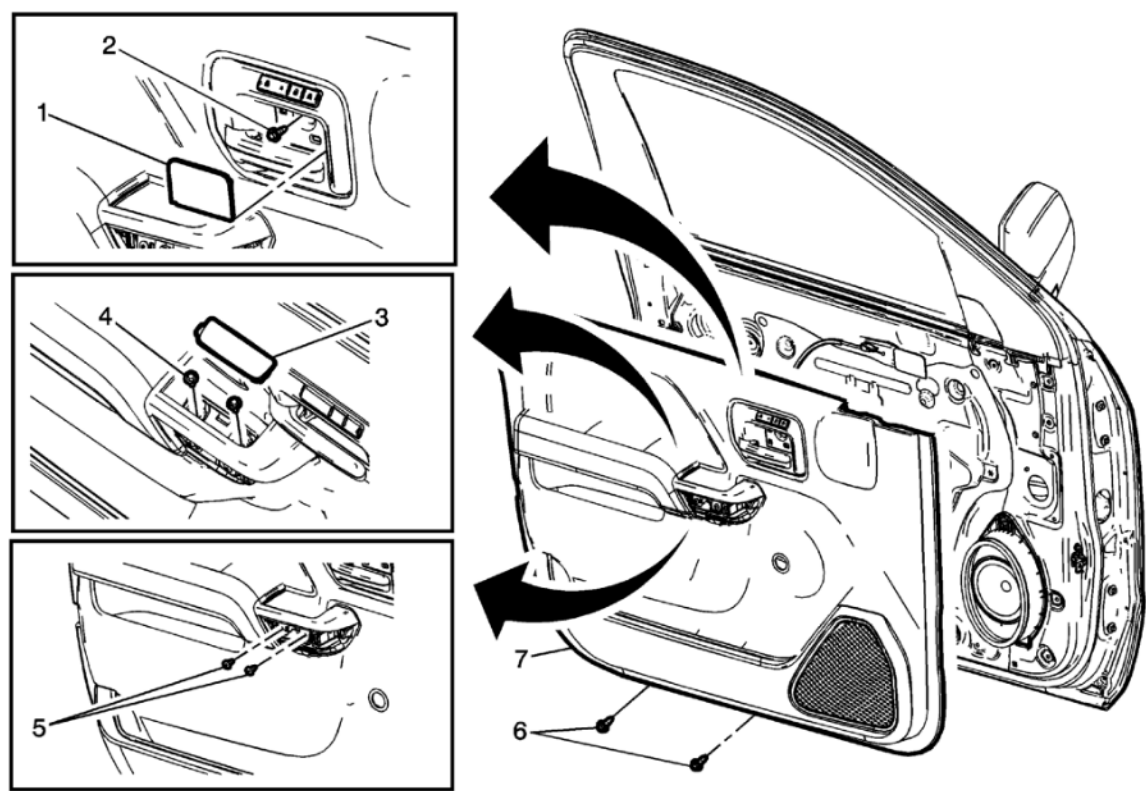


Fig. 12: Front Side Door Trim Replacement (Without A31)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures - Remove the front side door armrest cover trim. Refer to Front Side Door Armrest Cover Trim Replacement (Without A31). - Remove the front side door window regulator handle. Refer to Front Side Door Window Regulator Handle Replacement.	
1	Front Side Door Inside Handle Bolt Finish Cap
	Front Side Door Inside Handle Fastener
2	CAUTION: Refer to Fastener Caution .
3	Front Side Door Armrest Pull Cup Bolt Cap
4	Front Side Door Armrest Pull Cup Fastener (Qty: 2)

Callout	Component Name
5	Front Side Door Trim Bracket Fastener (Qty: 2)
6	Front Side Door Trim Panel Fastener (Qty: 2)
7	Front Side Door Trim Assembly Procedure 1. Using a plastic trim stick, separate the trim panel from the sheet metal at the top right corner until you are able to place your fingers in between. 2. From the top right side, detach door by pulling clockwise around the border of the door trim without pulling up on the top area. 3. Cover the window garnish molding before moving to the next step to prevent damage. 4. Push the door up in order to disengage metal retention clips on top of door. 5. Disconnect the door lock retainer cable from the door trim panel and the inside handle. 6. Release the harness retainer from the door trim. 7. Disconnect the electrical connectors. 8. Place the door trim panel on a clean flat surface. 9. Remove the front side door window inner sealing strip and metal retainer clips from door trim panel, if necessary. Refer to <u>Front Side Door Window Inner Sealing Strip Replacement (Crew Cab, Extended Cab)</u> <u>Front Side Door Window Inner Sealing Strip Replacement (Regular Cab)</u> . 10. When installing the door trim panel, reinstall metal clips and front side door window inner sealing strip prior to installing door trim panel.

REAR SIDE DOOR TRIM PANEL REPLACEMENT (CREW CAB, EXTENDED CAB)

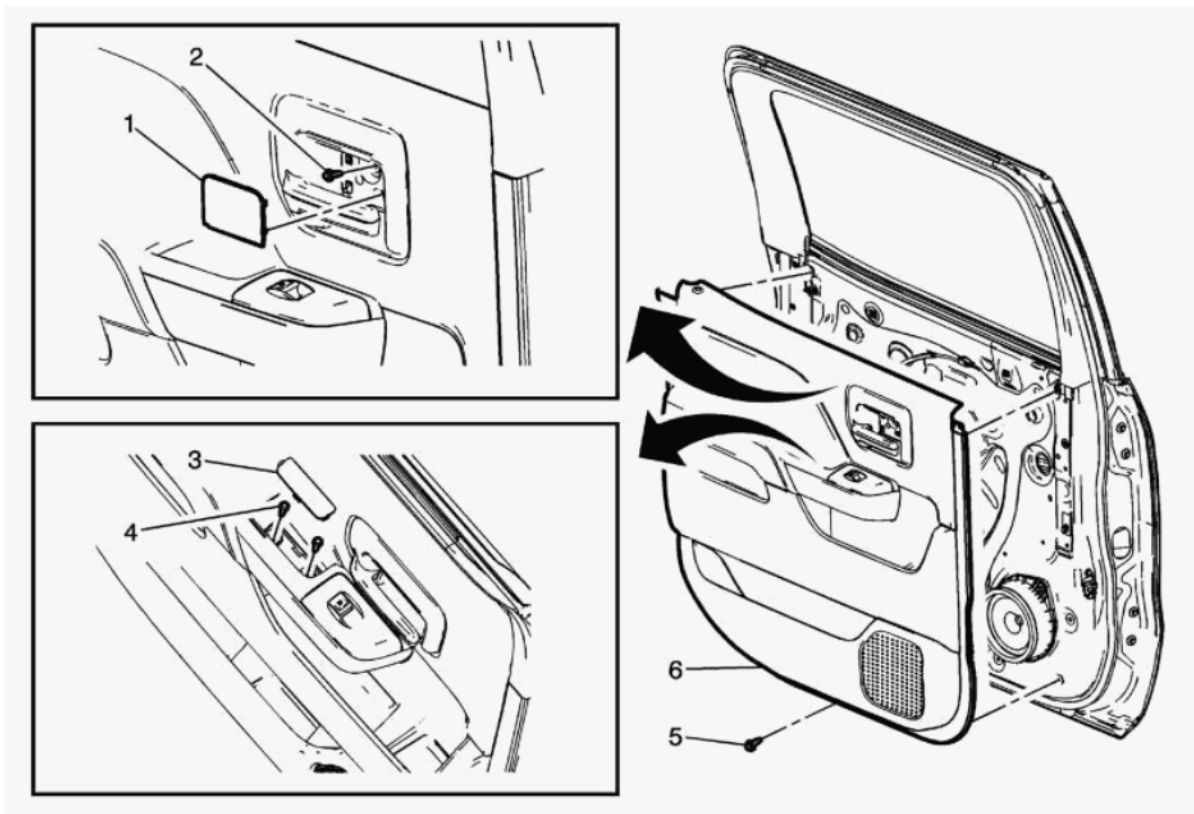


Fig. 13: Rear Side Door Trim Panel (Crew Cab, Extended Cab)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Side Door Inside Handle Bolt Finish Cap
2	Rear Side Door Inside Handle Fastener CAUTION: Refer to Fastener Caution .
3	Rear Side Door Armrest Pull Cup Bolt Cap
4	Rear Side Door Armrest Pull Cup Fastener (Qty: 2)
5	Rear Side Door Trim Panel Fastener
6	Rear Side Door Trim Panel Assembly Procedure 1. Gently pull the door trim panel straight away from the door including along the upper edge. 2. Use the appropriate plastic trim tool to aid in the removal of the door trim. 3. Disconnect the door lock retainer cable from the door trim panel and the inside handle. 4. Disconnect the electrical connector.

FRONT SIDE DOOR SILL GARNISH MOLDING REPLACEMENT (CREW CAB, EXTENDED CAB)

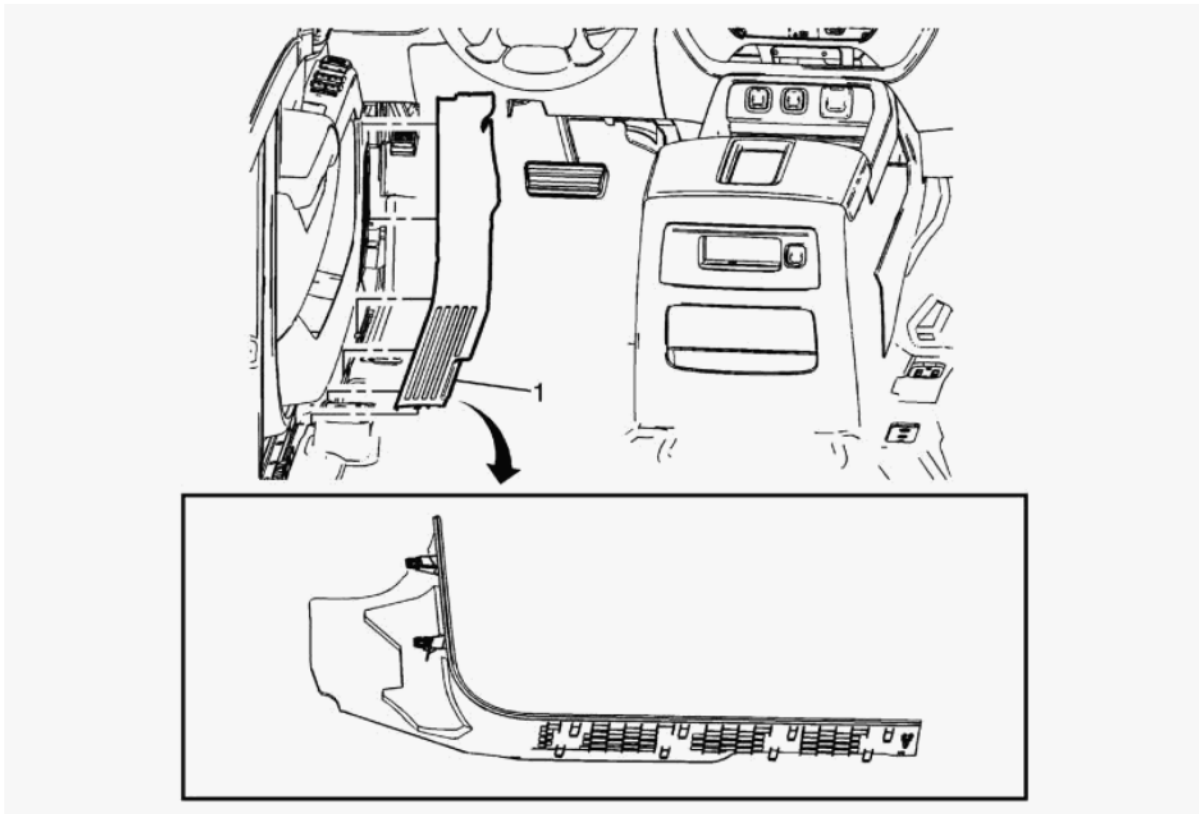


Fig. 14: Front Side Door Sill Garnish Molding (Crew Cab, Extended Cab)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Side Door Sill Garnish Molding Assembly Procedure 1. Pull toward the rear of the vehicle to disengage integral clips. 2. Reposition the front floor panel carpet as needed.

FRONT SIDE DOOR SILL GARNISH MOLDING REPLACEMENT (REGULAR CAB)

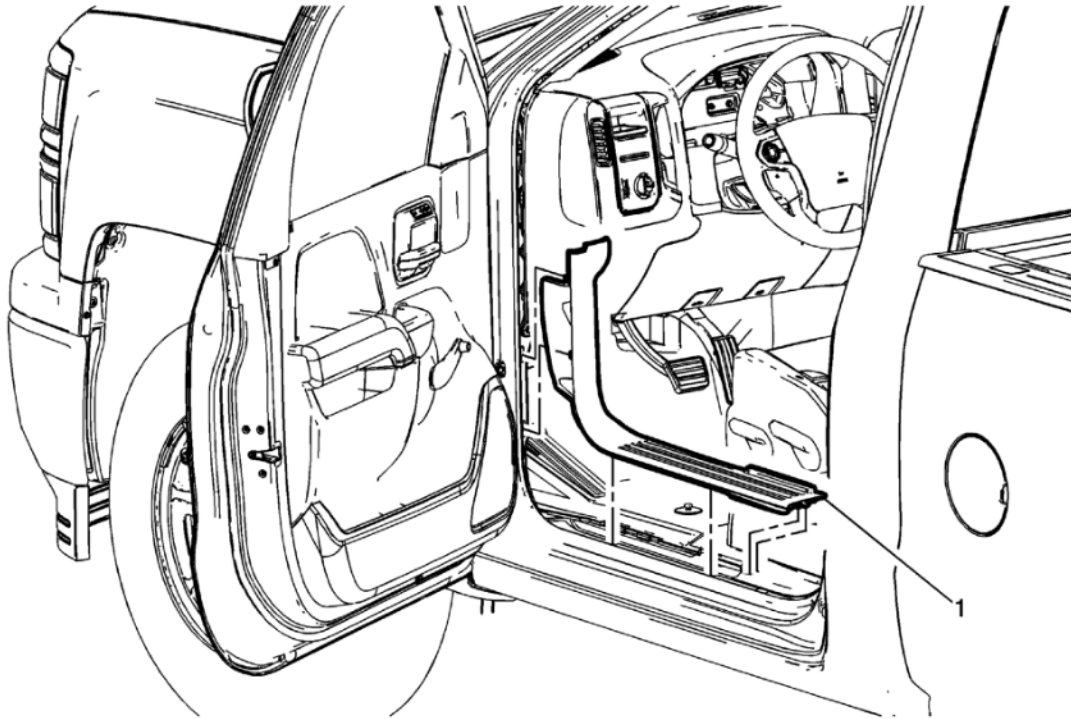


Fig. 15: Front Side Door Sill Garnish Molding Replacement (Regular Cab)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Front Side Door Sill Garnish Molding Assembly Procedure 1. Pull toward the rear of the vehicle to disengage integral clips. 2. Reposition the front floor panel carpet as needed.

REAR SIDE DOOR SILL GARNISH MOLDING REPLACEMENT (CREW CAB)



Fig. 16: Rear Side Door Sill Garnish Molding (Crew Cab)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Side Door Sill Garnish Molding Assembly Procedure Use the appropriate plastic trim tool to aid in the removal of the rear side door sill garnish molding.

REAR SIDE DOOR SILL GARNISH MOLDING REPLACEMENT (EXTENDED CAB)

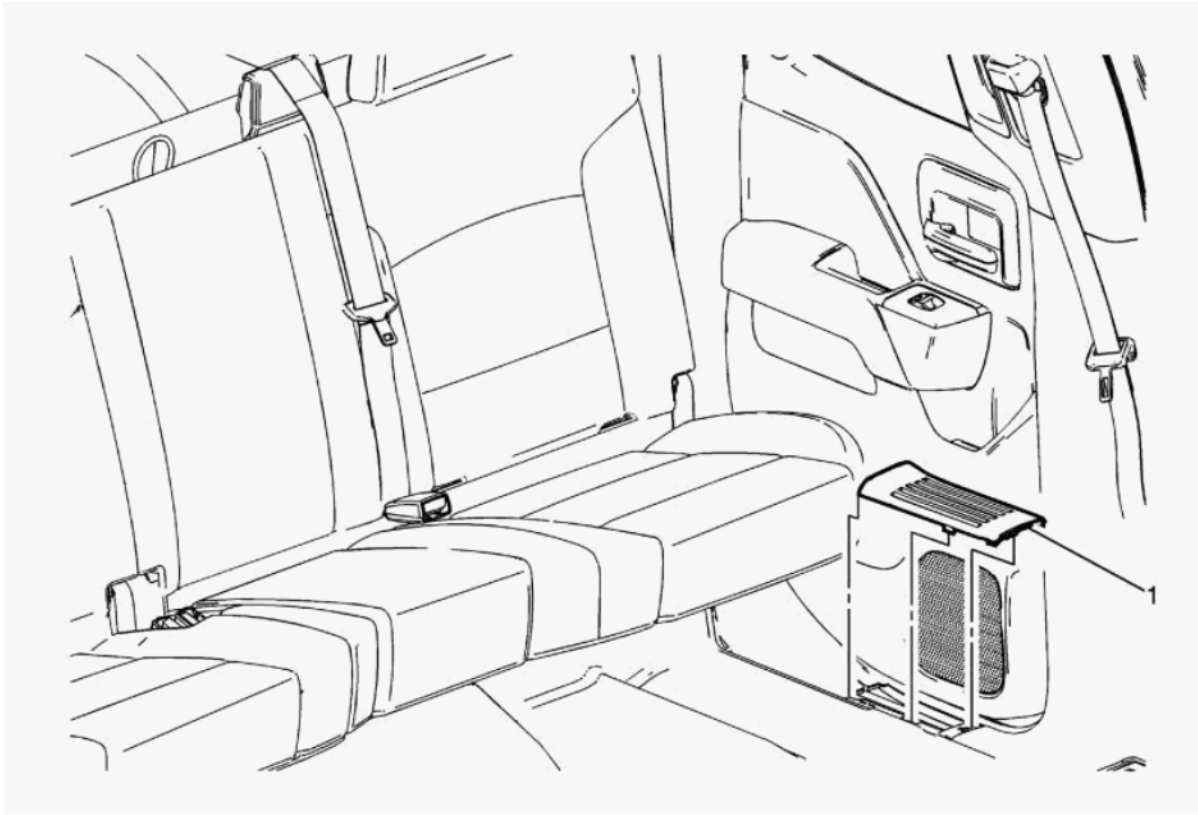


Fig. 17: Rear Side Door Sill Garnish Molding (Extended Cab)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Rear Side Door Sill Garnish Molding Assembly Procedure Use the appropriate plastic trim tool to aid in the removal of the rear side door sill garnish molding.

ROOF RAIL ASSIST HANDLE REPLACEMENT (CREW CAB, EXTENDED CAB)

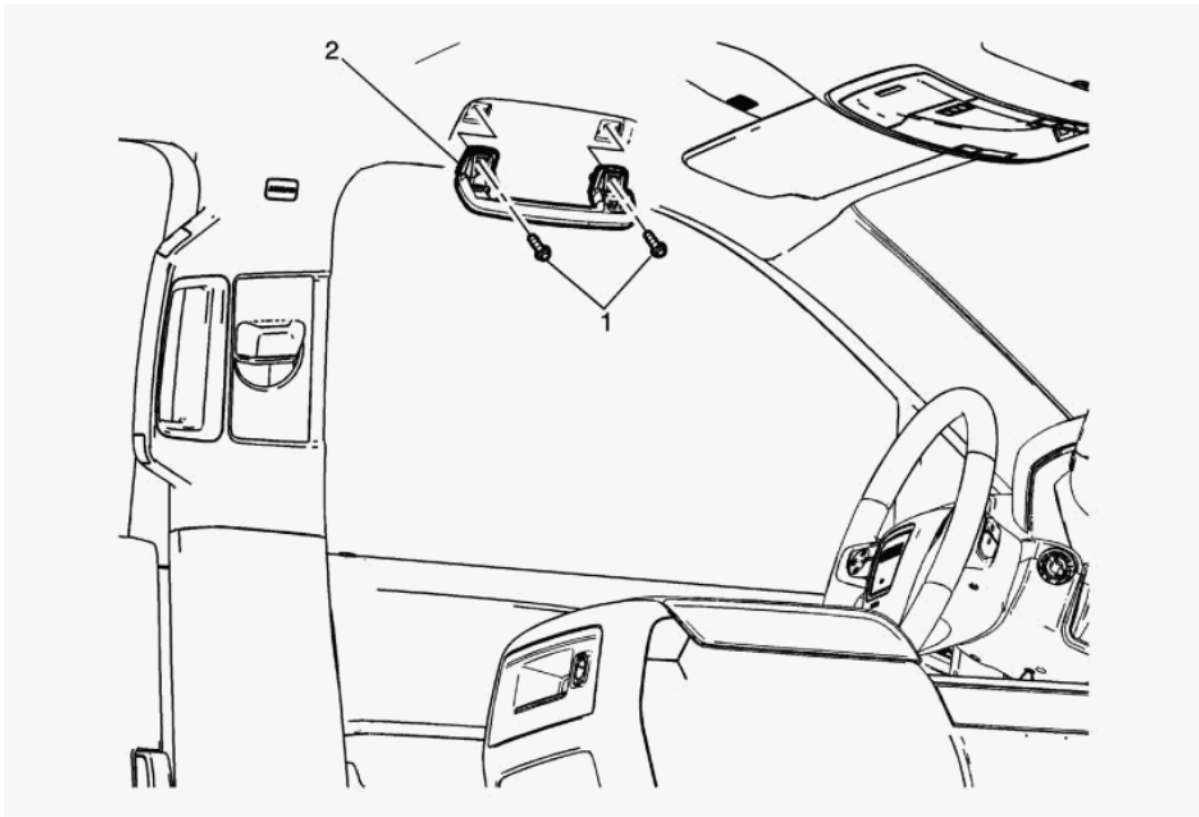


Fig. 18: Roof Rail Assist Handle (Crew Cab, Extended Cab)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Roof Rail Assist Handle Fastener (Qty: 2) CAUTION: Refer to Fastener Caution . Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the fasteners. Tighten 9 N.m (80 lb in)
2	Roof Rail Assist Handle Assembly

ROOF RAIL ASSIST HANDLE REPLACEMENT (REGULAR CAB)

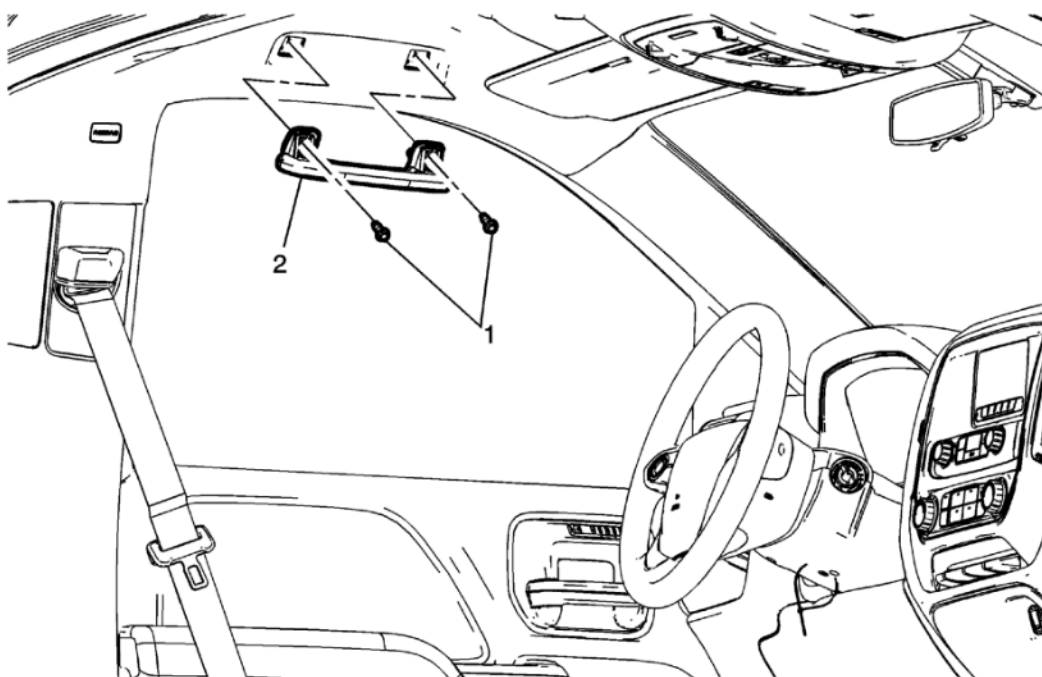


Fig. 19: Roof Rail Assist Handle (Regular Cab)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Roof Rail Assist Handle Fastener (Qty: 2) CAUTION: Refer to Fastener Caution . Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the fasteners. Tighten 9 N.m (80 lb in)
2	Roof Rail Assist Handle Assembly

ROOF RAIL REAR ASSIST HANDLE REPLACEMENT (CREW CAB, EXTENDED CAB)



Fig. 20: Roof Rail Rear Assist Handle (Crew Cab, Extended Cab)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Roof Rail Rear Assist Handle Fastener (Qty: 2) CAUTION: Refer to Fastener Caution . Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the screws. Tighten 9 N.m (80 lb in)
2	Roof Rail Rear Assist Handle Assembly

COAT HOOK REPLACEMENT

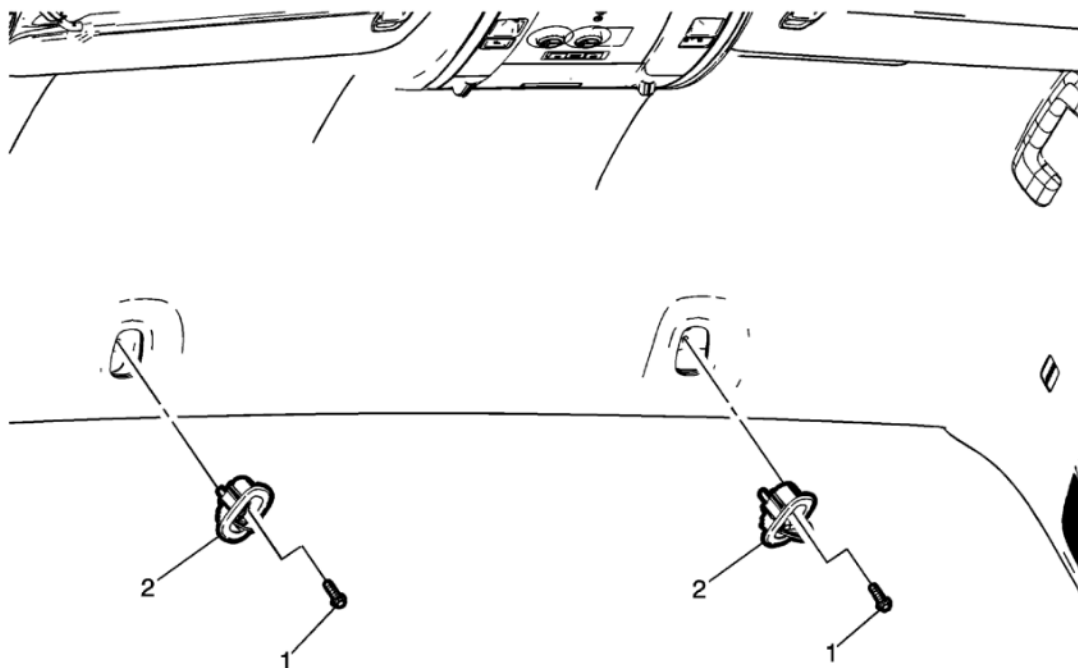


Fig. 21: Coat Hooks

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Coat Hook Fastener (Qty: 2) CAUTION: Refer to Fastener Caution . Procedure Place the coat hook in the open position. Tighten 6 N.m (53 lb in)
2	Coat Hook Assembly (Qty: 2)

SUNSHADE REPLACEMENT (CREW CAB, EXTENDED CAB)

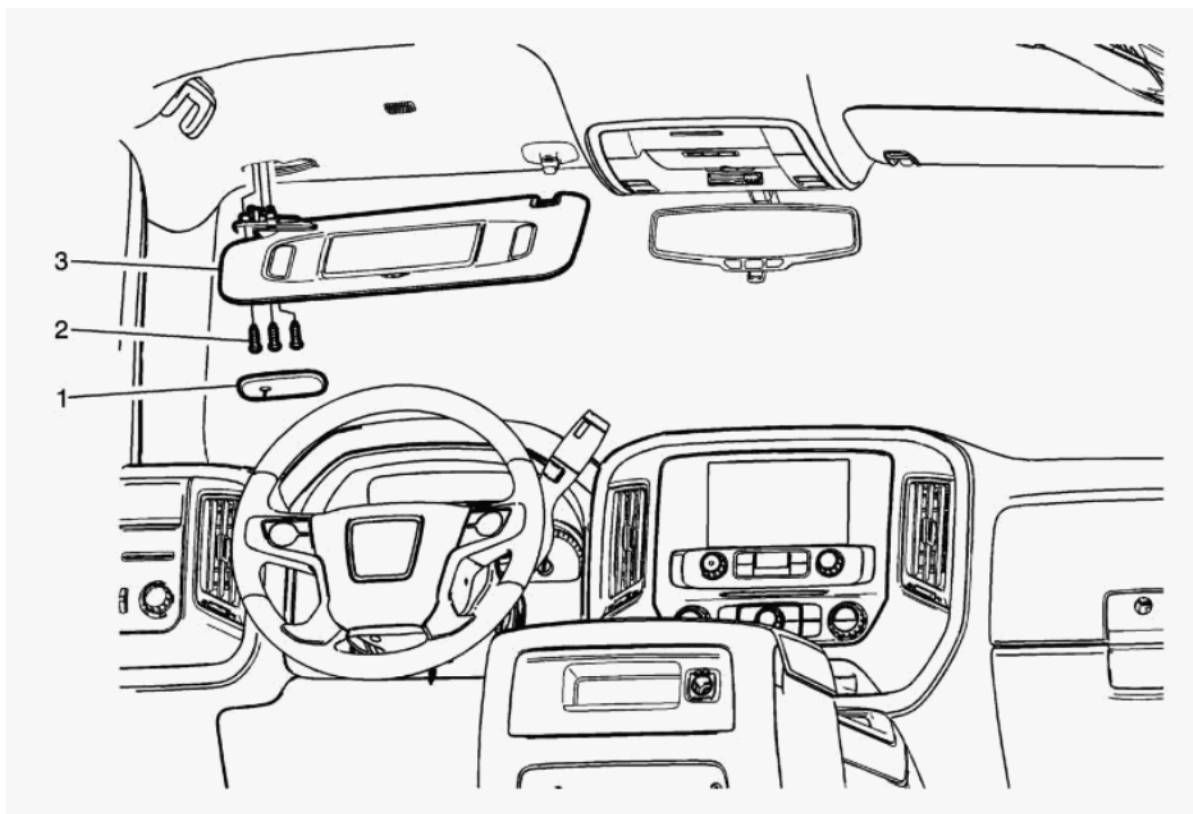


Fig. 22: Sunshade Assembly

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Sunshade Support Bolt Cover Procedure Use a suitable trim tool to release the sunshade support bolt cover from the sunshade assembly. NOTE: Sunshade support bolt cover has notch located on the inboard side of part to aid in removal.
2	Sunshade Fastener (Qty: 3) CAUTION: Refer to Fastener Caution.

Callout	Component Name
3	Sunshade Assembly Procedure Disconnect the electrical connector.

SUNSHADE REPLACEMENT (REGULAR CAB)

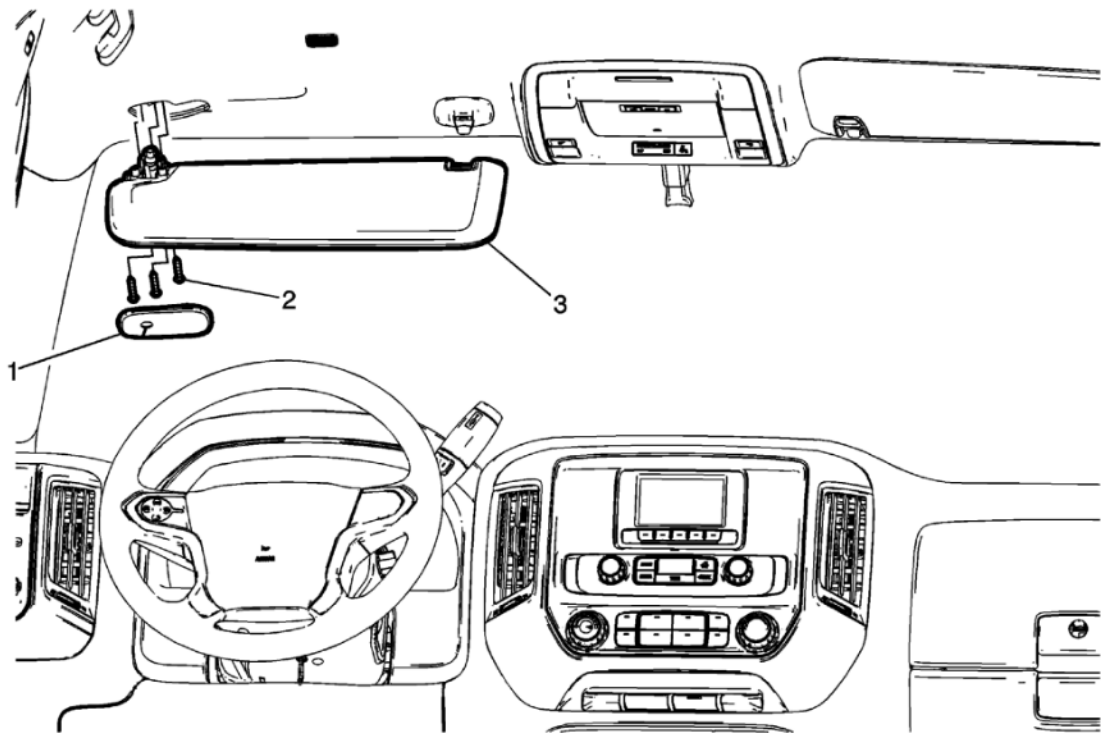


Fig. 23: Sunshade (Regular Cab)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
1	Sunshade Support Bolt Cover Procedure Use a suitable trim tool to release the sunshade support bolt cover from the sunshade assembly. NOTE: Sunshade support bolt cover has notch located on the inboard side of part to aid in removal.

Callout	Component Name
2	Sunshade Fastener (Qty: 3) CAUTION: Refer to Fastener Caution .
3	Sunshade Assembly Procedure Disconnect the electrical connector.

SUNSHADE SUPPORT REPLACEMENT (CREW CAB, EXTENDED CAB)

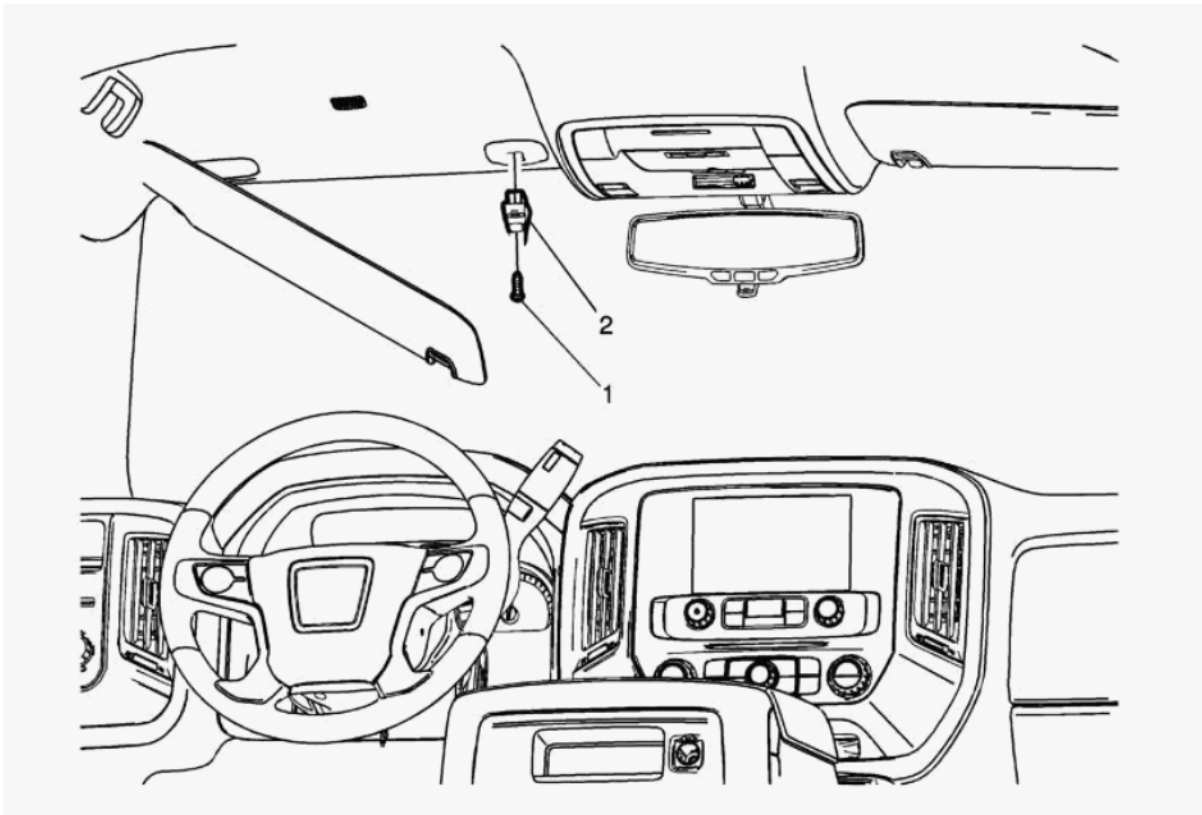


Fig. 24: Sunshade Support (Crew Cab, Extended Cab)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Lower the front of the headliner enough to access the sunshade support retainer. Refer to Headlining Trim Panel Replacement (Crew Cab Without Sunroof) Headlining Trim Panel Replacement (Crew Cab With Sunroof) Headlining Trim Panel Replacement (Extended Cab) .	
1	Sunshade Support Fastener CAUTION: Refer to Fastener Caution .

Callout	Component Name
	NOTE: Pull the cover downward to access the fastener.
2	Sunshade Support Assembly Procedure 1. Unclip the sunshade from the support and reposition. 2. Using the appropriate tool, release the metal sunshade support retainer.

SUNSHADE SUPPORT REPLACEMENT (REGULAR CAB)

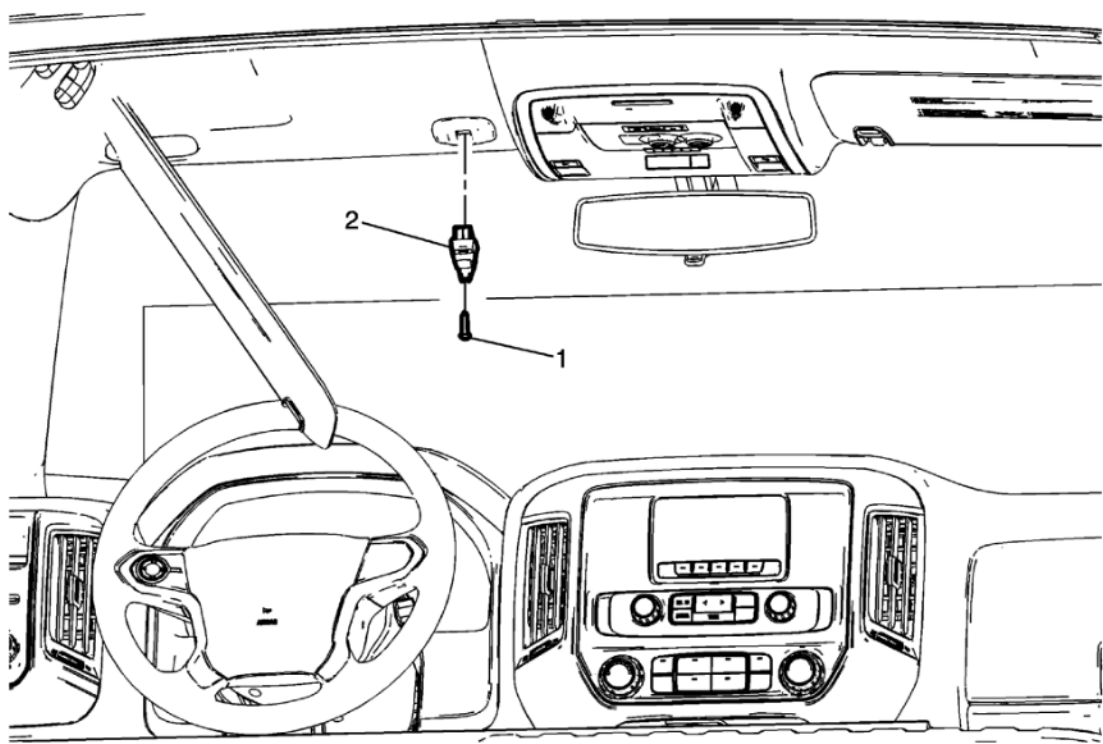


Fig. 25: Sunshade Support (Regular Cab)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Lower the front of the headliner enough to access the sunshade support retainer. Refer to Headlining Trim Panel Replacement (Regular Cab) .	
1	Sunshade Support Fastener CAUTION:

Callout	Component Name
	Refer to Fastener Caution . NOTE: Pull the cover downward to access the fastener.
2	Sunshade Support Assembly Procedure 1. Unclip the sunshade from the support and reposition. 2. Using the appropriate tool, release the metal sunshade support retainer.

WINDSHIELD GARNISH MOLDING REPLACEMENT - LEFT SIDE

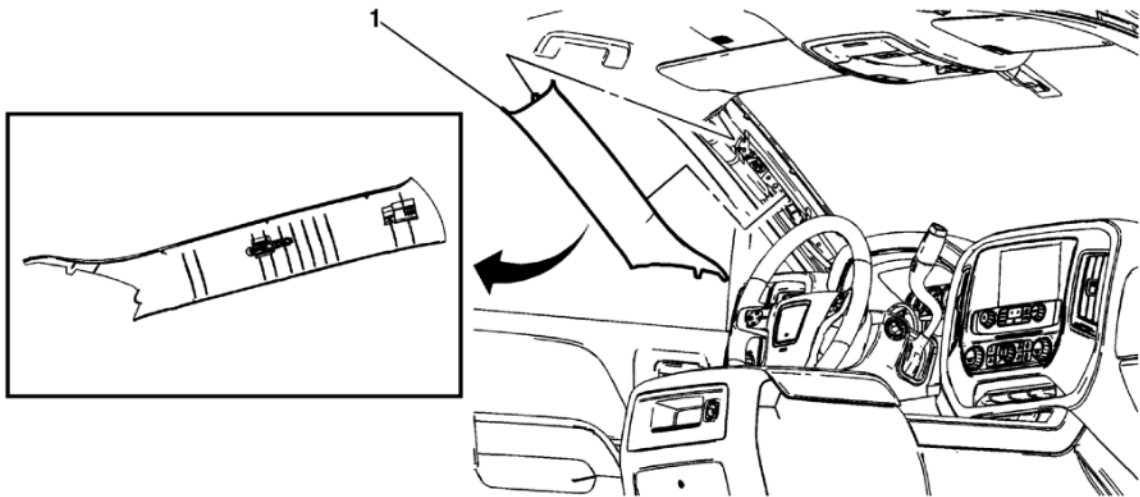


Fig. 26: Windshield Garnish Molding - Left Side
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Disable the SIR system. Refer to SIR Disabling and Enabling .	

Callout	Component Name
1	Windshield Garnish Molding Assembly Procedure The tether clip at the center portion of the garnish molding MUST be replaced every time the windshield garnish molding is removed.

WINDSHIELD GARNISH MOLDING REPLACEMENT - RIGHT SIDE

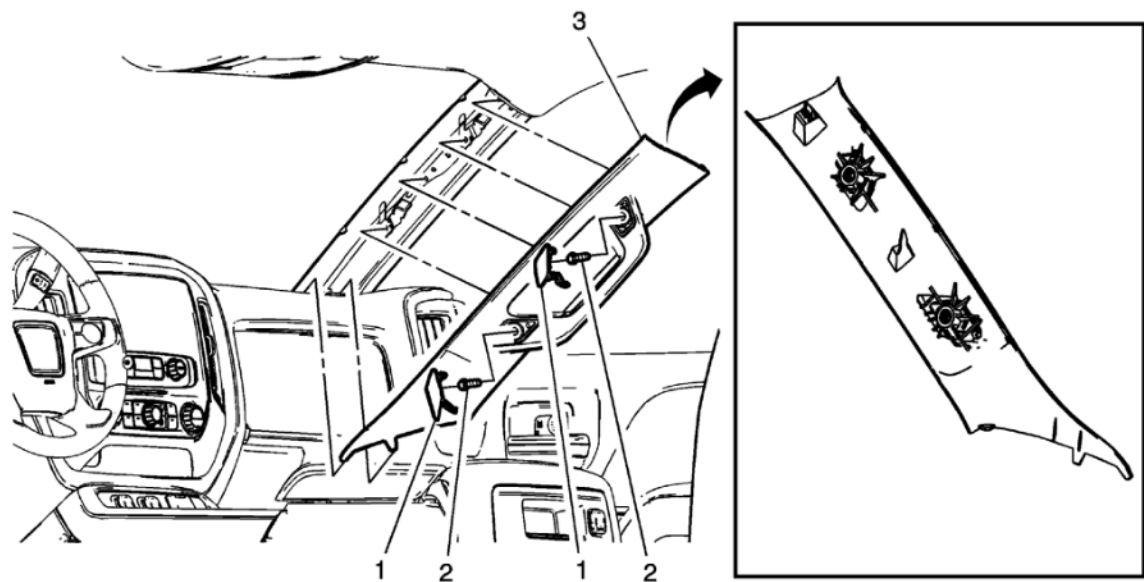


Fig. 27: Windshield Garnish Molding - Right Side
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures Disable the SIR system. Refer to SIR Disabling and Enabling .	
1	Windshield Pillar Assist Handle Cover (Qty: 2)
2	Windshield Pillar Assist Handle Fastener (Qty: 2) CAUTION: Refer to Fastener Caution . Tighten 9 N.m (80 lb in)
3	Windshield Garnish Molding Assembly Procedure

Callout	Component Name
	Ensure tab is fully seated in I/P upper trim panel prior to engaging upper retainer.

CENTER PILLAR UPPER TRIM PANEL REPLACEMENT

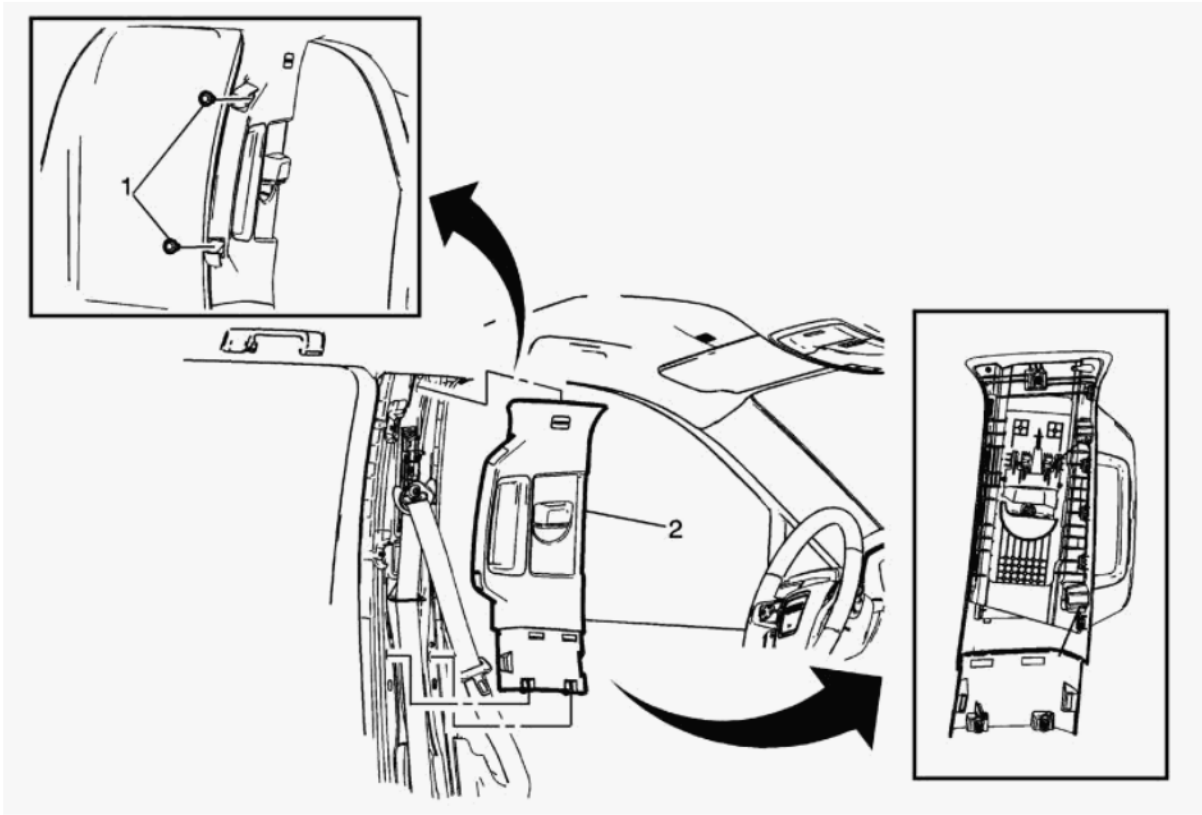


Fig. 28: Center Pillar Upper Trim Panel
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Disable the SIR system. Refer to SIR Disabling and Enabling . 2. Remove the center pillar lower trim panel. Refer to Center Pillar Lower Trim Panel Replacement . 3. Remove the front seat belt anchor plate tensioner fastener. Refer to Seat Belt Retractor Pretensioner Replacement - Front (Crew Cab, Extended Cab) Seat Belt Retractor Pretensioner Replacement - Front (Regular Cab) . 4. Move the seat to the full forward position.	
1	Center Pillar Upper Assist Handle Fastener (Qty: 2) CAUTION: Refer to Fastener Caution .

Callout	Component Name
	Procedure Use a small flat bladed tool to open the assist handle covers to access the fasteners. Tighten 9 N.m (80 lb in)
2	Center Pillar Upper Trim Panel Assembly Procedure When replacing the center pillar upper trim panel, feed the seat belt through the panel.

CENTER PILLAR LOWER TRIM PANEL REPLACEMENT

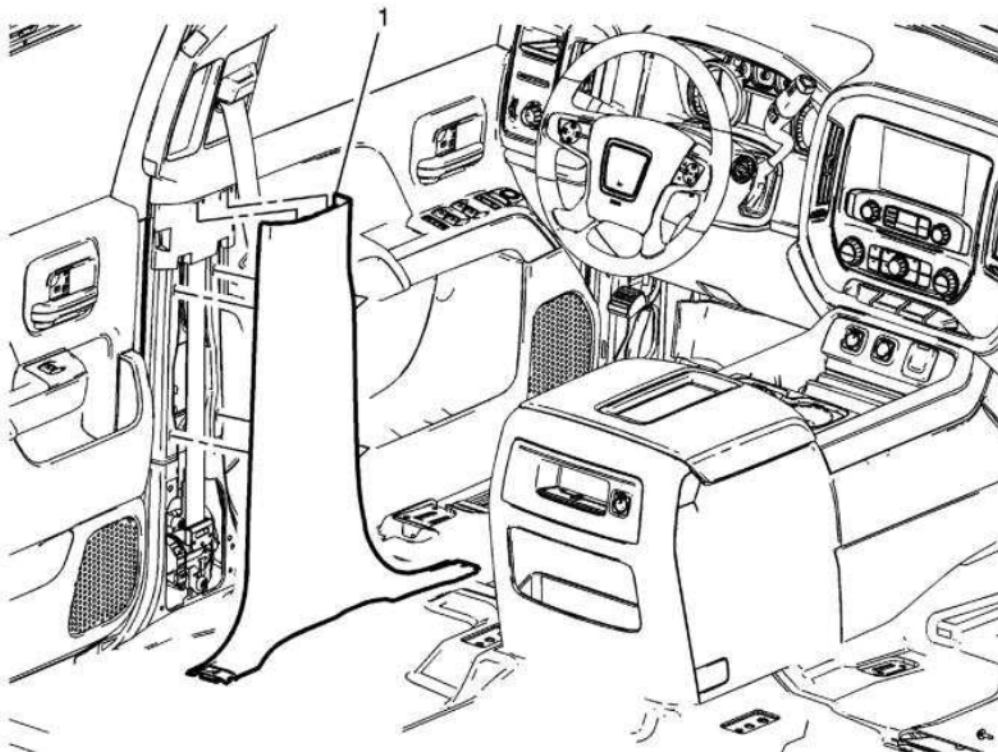


Fig. 29: Center Pillar Lower Trim Panel
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure 1. Remove the front side door sill garnish molding. Refer to Front Side Door Sill Garnish Molding Replacement (Crew Cab, Extended Cab)Front Side Door Sill Garnish Molding Replacement (Regular Cab). 2. Remove the rear side door sill garnish molding. Refer to Rear Side Door Sill Garnish Molding Replacement (Crew Cab)Rear Side Door Sill Garnish Molding Replacement (Extended Cab). 3. Move seat to full forward position.	
1	Center Pillar Lower Trim Panel Assembly Procedure Ensure the seat belt webbing does not become trapped during installation.

BODY REAR PANEL INSULATOR REPLACEMENT

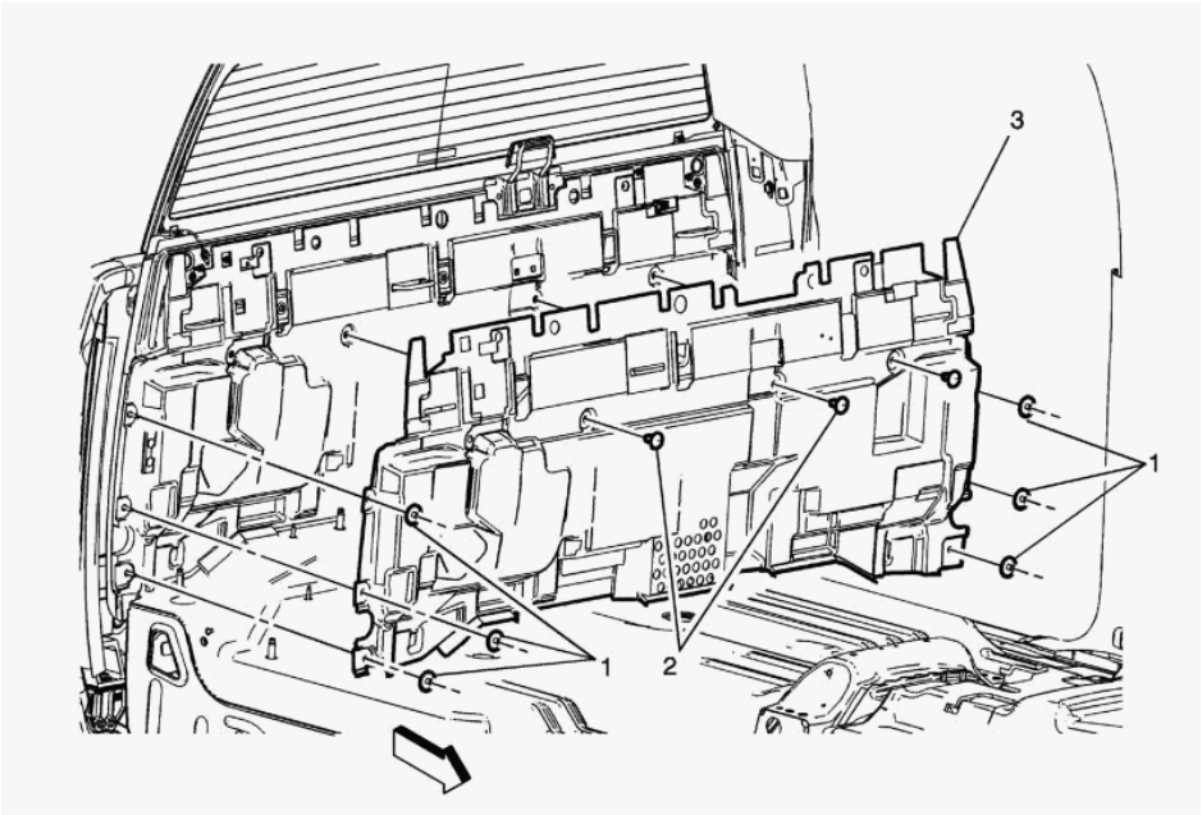


Fig. 30: Body Rear Panel Insulator
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure	
1. Remove the rear seats. Refer to Rear Seat Removal and Installation (Extended Cab with AM7) Rear Seat Removal and Installation (Heavy Duty Crew Cab with A68) Rear Seat Removal and Installation (Light Duty Crew Cab with A68) Rear Seat Removal and Installation (Extended Cab with A68) . 2. Remove the driver and passenger body lock pillar garnish molding. Refer to Body Lock Pillar Garnish Molding Replacement (Crew Cab, Extended Cab)Body Lock Pillar Garnish Molding Replacement (Regular Cab). 3. Remove the rear window lower garnish molding. Refer to Rear Window Lower Garnish Molding Replacement (Crew Cab, Extended Cab)Rear Window Lower Garnish Molding Replacement (Regular Cab). 4. Remove the child seat restraint system belt bracket. Refer to Child Seat Restraint System Belt Bracket Replacement (Crew Cab/Ext Cab) . 5. Only do the steps necessary to unbolt and disconnect the cables from the sliding window regulator and reposition. Refer to Rear Sliding Window Regulator Replacement (Crew Cab) Rear Sliding Window Regulator Replacement (Extended Cab) .	
1	Body Rear Panel Insulator Retainer Nut (Qty: 6)
2	Body Rear Panel Insulator Push-in Retainer (Qty: 2)
3	Body Rear Panel Insulator Assembly

BODY LOCK PILLAR GARNISH MOLDING REPLACEMENT (CREW CAB, EXTENDED CAB)

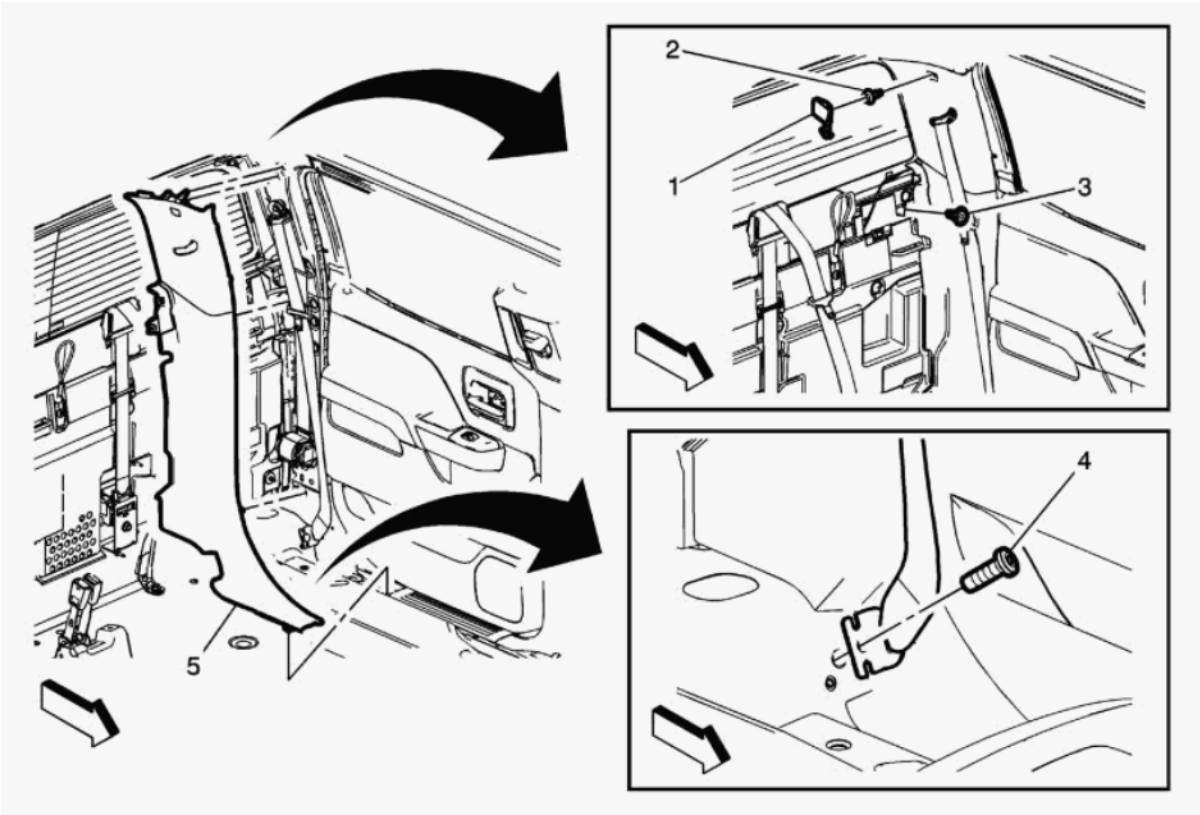


Fig. 31: Body Lock Pillar Garnish Molding (Crew Cab, Extended Cab)
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
1. Disable the SIR system. Refer to SIR Disabling and Enabling .	
2. Remove the rear side door sill garnish molding. Refer to Rear Side Door Sill Garnish Molding Replacement (Crew Cab) Rear Side Door Sill Garnish Molding Replacement (Extended Cab) .	
3. Remove the rear window side garnish molding. Refer to Rear Window Side Garnish Molding Replacement (Left Side) Rear Window Side Garnish Molding Replacement (Right Side, Without A48) Rear Window Side Garnish Molding Replacement (Right Side, With A48) .	
1	Body Lock Pillar Garnish Molding Airbag Plug
2	Body Side Rear Molding Fastener CAUTION: Refer to Fastener Caution .
3	Body Lock Pillar Garnish Molding Retainer
4	Rear Seat Belt Retractor Fastener Tighten 45 N.m (33 lb ft)

Callout	Component Name
5	Body Lock Pillar Garnish Molding Assembly Procedures 1. Route seat belt through body lock pillar garnish molding to remove. 2. Ensure seat belt webbing is not caught by panel clip tower and is in front of it.

BODY LOCK PILLAR GARNISH MOLDING REPLACEMENT (REGULAR CAB)

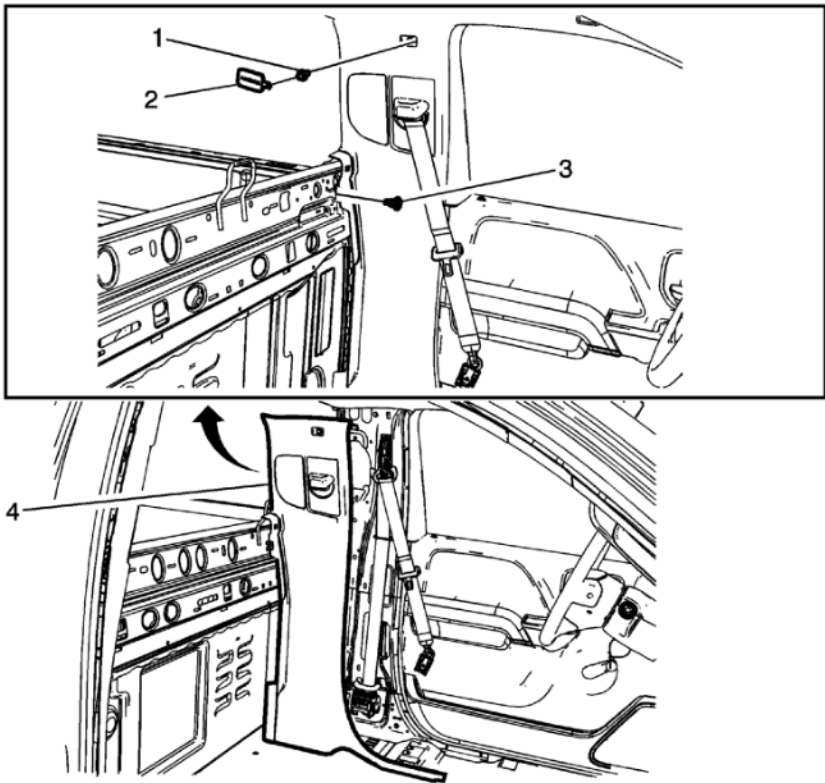


Fig. 32: Body Lock Pillar Garnish Molding (Regular Cab)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Disable the SIR system. Refer to SIR Disabling and Enabling . 2. Remove the front side door sill garnish molding. Refer to Front Side Door Sill Garnish Molding Replacement (Regular Cab). 3. Remove the front seat belt anchor plate tensioner fastener. Refer to Seat Belt Retractor Pretensioner Replacement - Front (Crew Cab, Extended Cab) Seat Belt Retractor Pretensioner Replacement - Front (Regular Cab) 4. Remove the front seat back body panel carpet. Refer to Front Seat Back Body Panel Carpet Replacement (Regular Cab)	
1	Body Lock Pillar Garnish Molding Airbag Plug

Callout	Component Name
2	Body Side Rear Molding Fastener CAUTION: Refer to Fastener Caution .
3	Body Lock Pillar Garnish Molding Retainer
4	Body Lock Pillar Garnish Molding Assembly Procedures 1. Route seat belt through body lock pillar garnish molding to remove. 2. Ensure seat belt webbing is not caught by panel clip tower and is in front of it.

REAR WINDOW SIDE GARNISH MOLDING REPLACEMENT (LEFT SIDE)

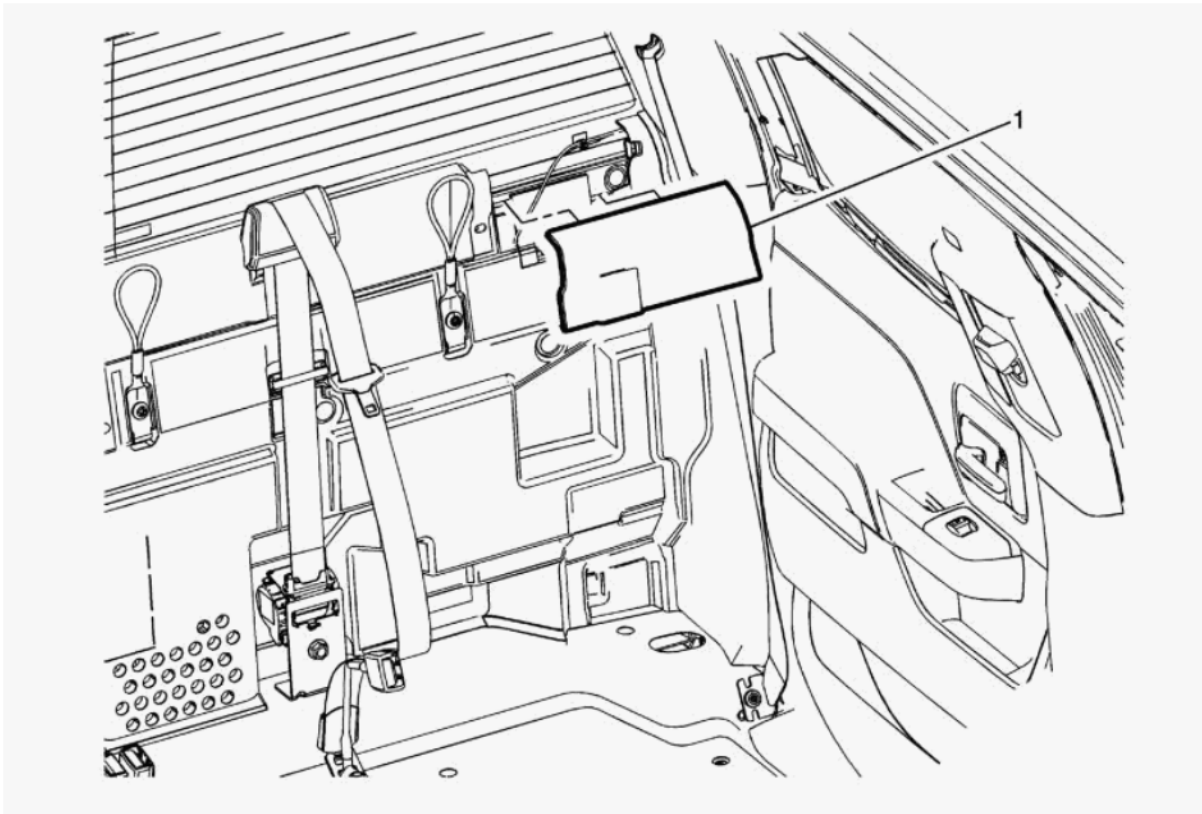


Fig. 33: Rear Window Side Garnish Molding (Left Side)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the rear seat. Refer to Rear Seat Removal and Installation (Extended Cab with AM7) Rear Seat Removal and Installation (Heavy Duty Crew Cab with A68) Rear Seat Removal and Installation (Light Duty Crew Cab with A68) Rear Seat Removal and Installation (Extended Cab with A68) .	

Callout	Component Name
1	Rear Window Lower Garnish Molding Assembly Procedure Use a small flat-bladed tool to release the integral clips from the body rear outer panel.

REAR WINDOW SIDE GARNISH MOLDING REPLACEMENT (RIGHT SIDE, WITHOUT A48)

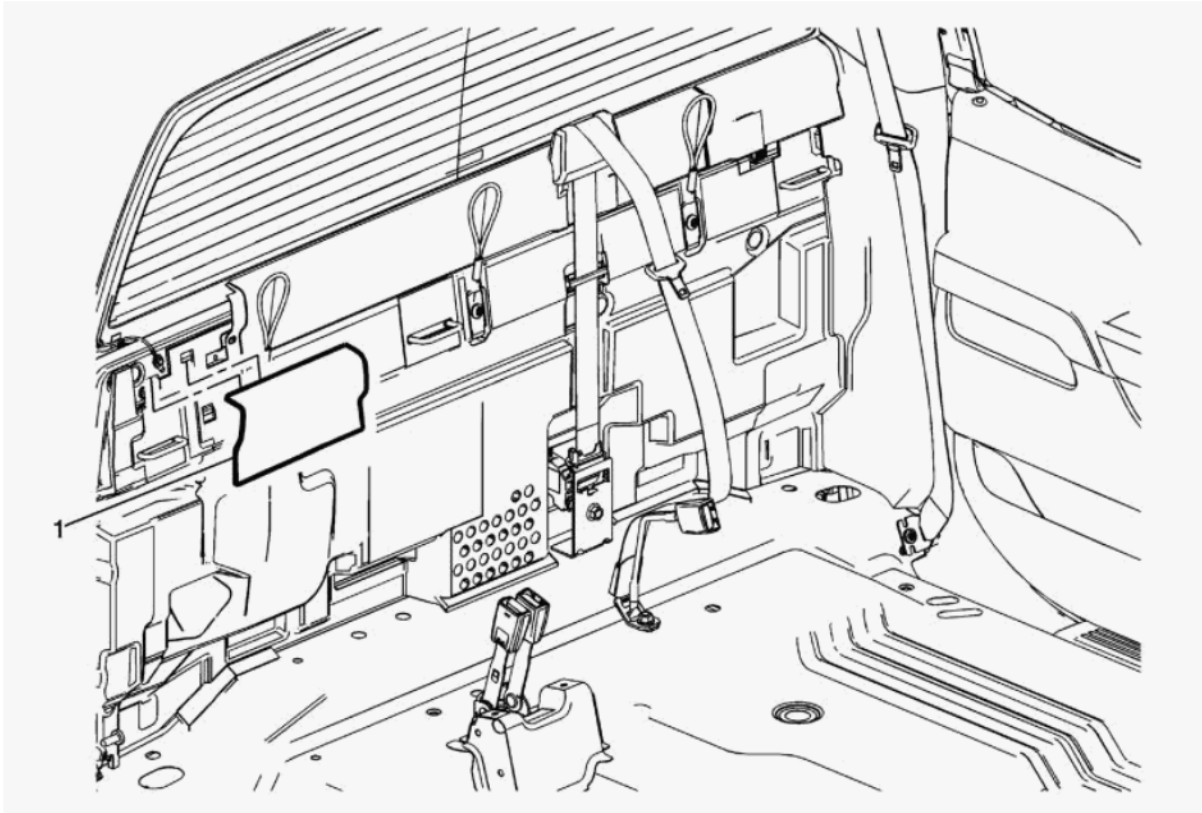


Fig. 34: Rear Window Side Garnish Molding (Right Side, Without A48)
 Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the rear seat. Refer to Rear Seat Removal and Installation (Extended Cab with AM7) Rear Seat Removal and Installation (Heavy Duty Crew Cab with A68) Rear Seat Removal and Installation (Light Duty Crew Cab with A68) Rear Seat Removal and Installation (Extended Cab with A68) .	
1	Rear Window Lower Garnish Molding Assembly Procedure Use a small flat-bladed tool to release the integral clips from the body rear outer panel.

REAR WINDOW SIDE GARNISH MOLDING REPLACEMENT (RIGHT SIDE, WITH A48)

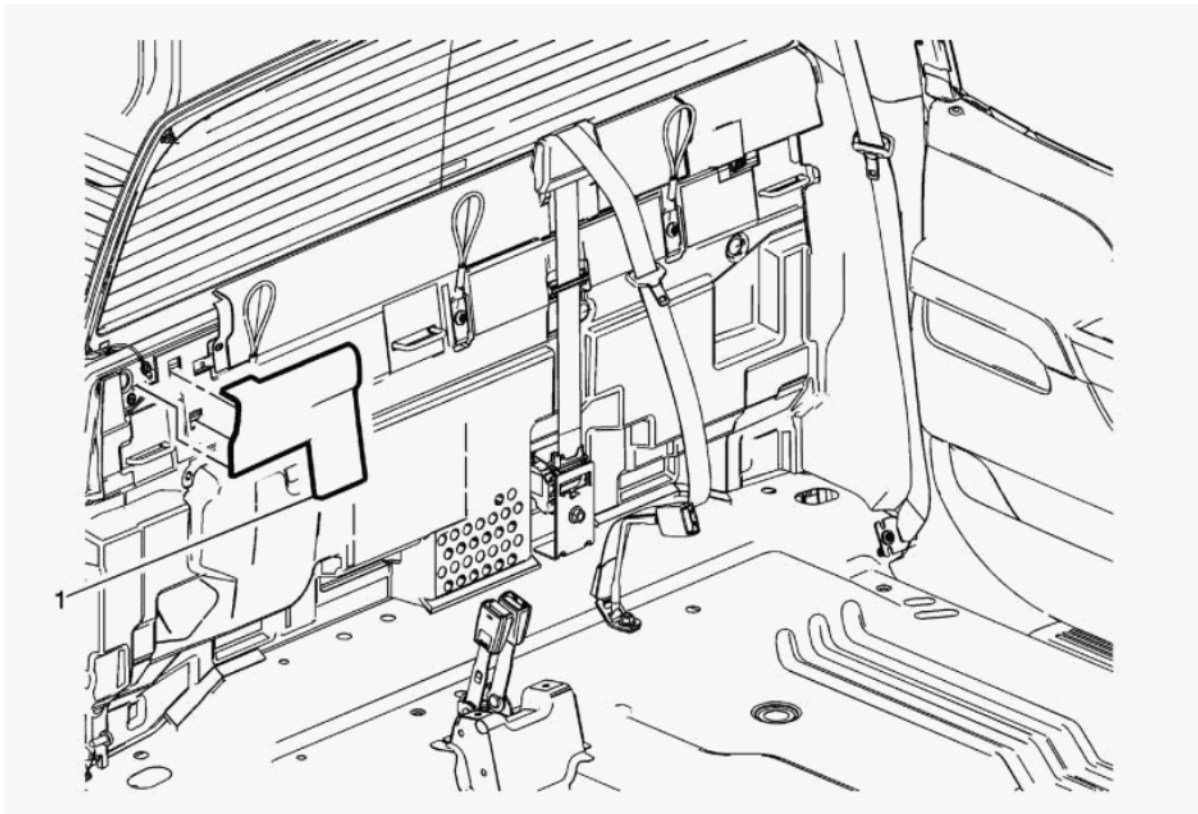


Fig. 35: Rear Window Side Garnish Molding (Right Side, With A48)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the rear seat. Refer to Rear Seat Removal and Installation (Extended Cab with AM7) Rear Seat Removal and Installation (Heavy Duty Crew Cab with A68) Rear Seat Removal and Installation (Light Duty Crew Cab with A68) Rear Seat Removal and Installation (Extended Cab with A68) .	
1	Rear Window Lower Garnish Molding Assembly Procedure Use a small flat-bladed tool to release the integral clips from the body rear outer panel.

REAR WINDOW LOWER GARNISH MOLDING REPLACEMENT (CREW CAB, EXTENDED CAB)

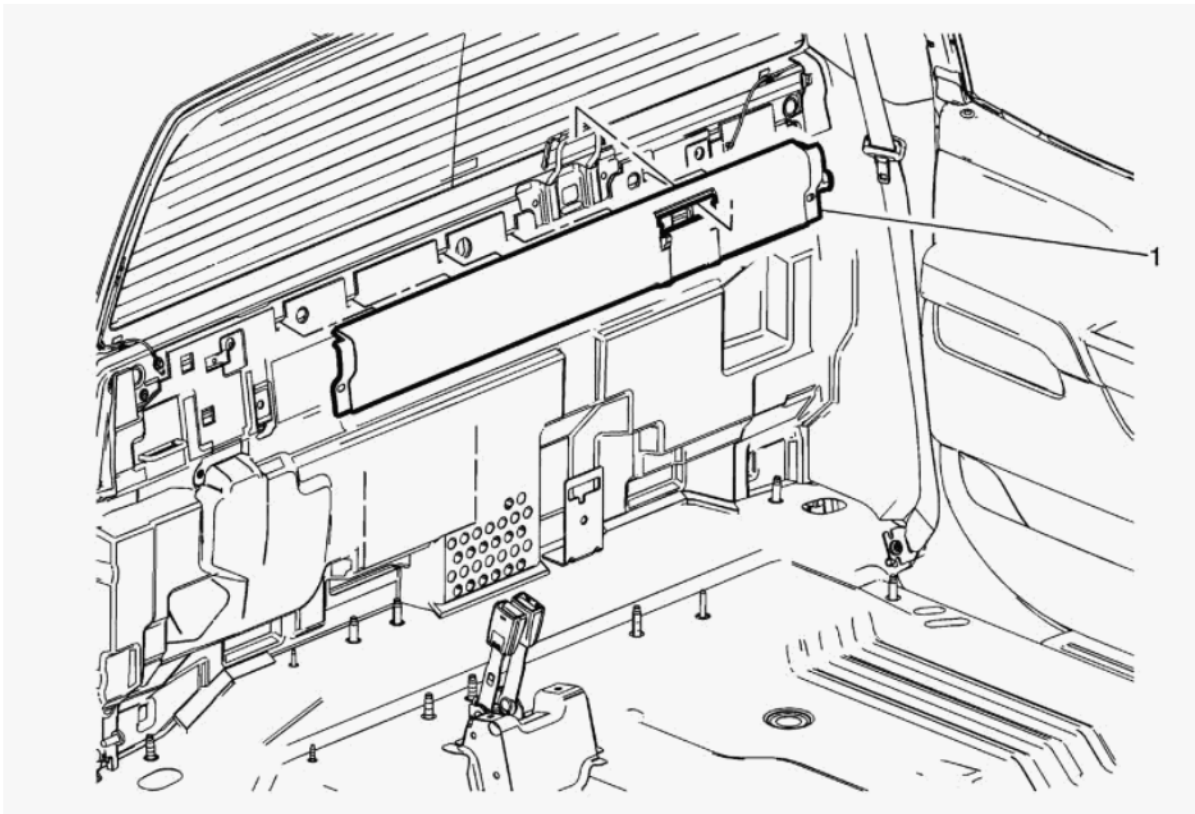


Fig. 36: Rear Window Lower Garnish Molding (Crew Cab, Extended Cab)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
1. Remove the rear seat. Refer to Rear Seat Removal and Installation (Extended Cab with AM7) Rear Seat Removal and Installation (Heavy Duty Crew Cab with A68) Rear Seat Removal and Installation (Light Duty Crew Cab with A68) Rear Seat Removal and Installation (Extended Cab with A68) . 2. Remove the passenger seat shoulder belt guide adjuster rear cover. Refer to Passenger Seat Belt Guide Adjuster Rear Cover Replacement . 3. Remove the lower rear center belt assembly nut. Refer to Rear Center Seat Belt Retractor Replacement (Crew Cab) Rear Center Seat Belt Retractor Replacement (Extended Cab) . 4. Remove the rear window side garnish moldings Rear Window Side Garnish Molding Replacement (Left Side)Rear Window Side Garnish Molding Replacement (Right Side, Without A48)Rear Window Side Garnish Molding Replacement (Right Side, With A48).	
1	Rear Window Lower Garnish Molding Assembly Procedure Route the seat belt through guide on the body rear inner panel.

REAR WINDOW LOWER GARNISH MOLDING REPLACEMENT (REGULAR CAB)

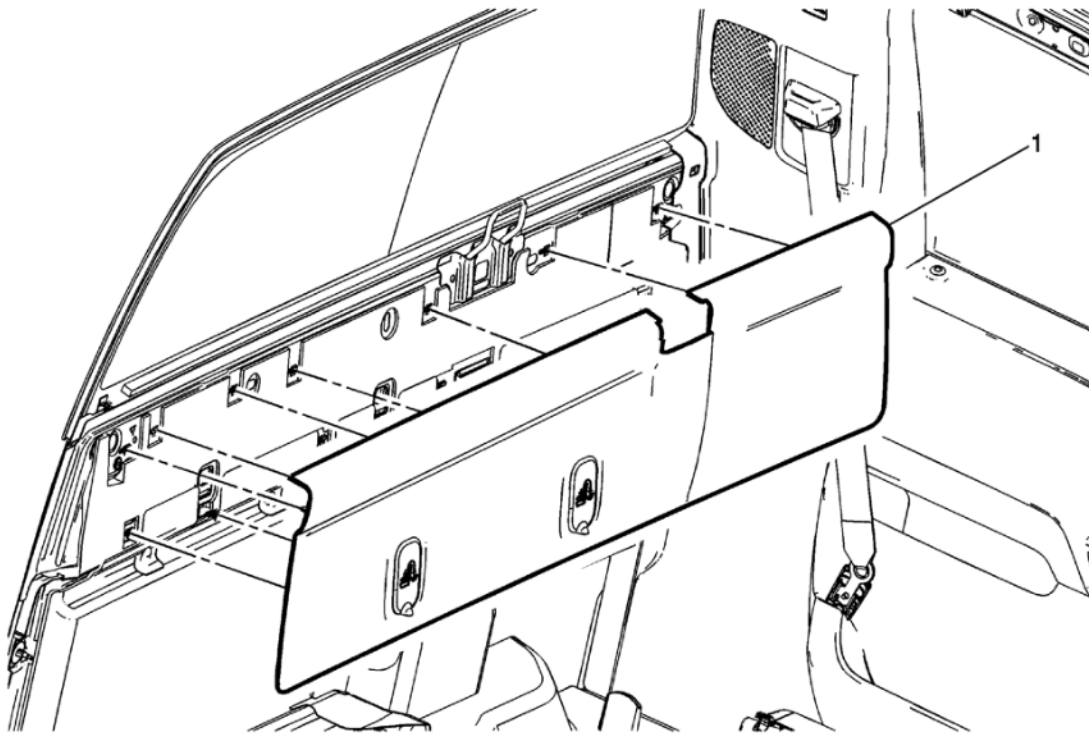


Fig. 37: Rear Window Lower Garnish Molding (Regular Cab)

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures 1. Remove the driver and passenger seat. Refer to Driver or Passenger Seat Removal and Installation . 2. Remove the center front seat. Refer to Front Center Seat Removal and Installation (Except HP5) Front Center Seat Removal and Installation (HP5) .	
1	Rear Window Lower Garnish Molding Assembly Procedure 1. Remove the front seat belt guide trim cover. 2. Route the seat belt through guide on the body rear inner panel.

BODY PRESSURE RELIEF VALVE REPLACEMENT

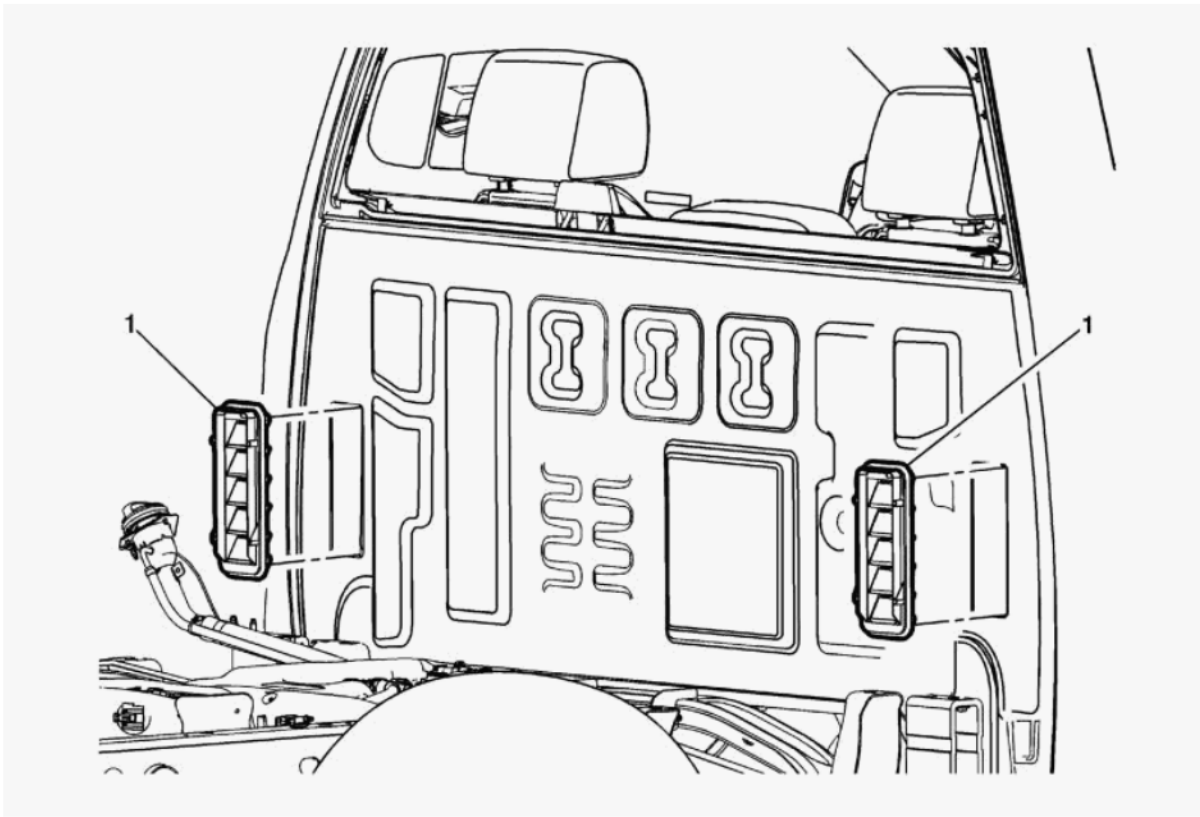


Fig. 38: Body Pressure Relief Valve
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedures	
1. Remove the pickup box from the vehicle. Refer to Pickup Box Replacement (Long Box) Pickup Box Replacement (Standard Box) .	
2. Remove the Body Rear Panel Insulator. Refer to Body Rear Panel Insulator Replacement .	
1	Body Pressure Relief Valve (Qty: 2) Procedure Depress the retaining tab at the top of body pressure relief valve to release the valve from the body rear outer panel.

Article GUID: A00854565