


Dual clutch gearbox 0D9 , (0ES)

From July 2018




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

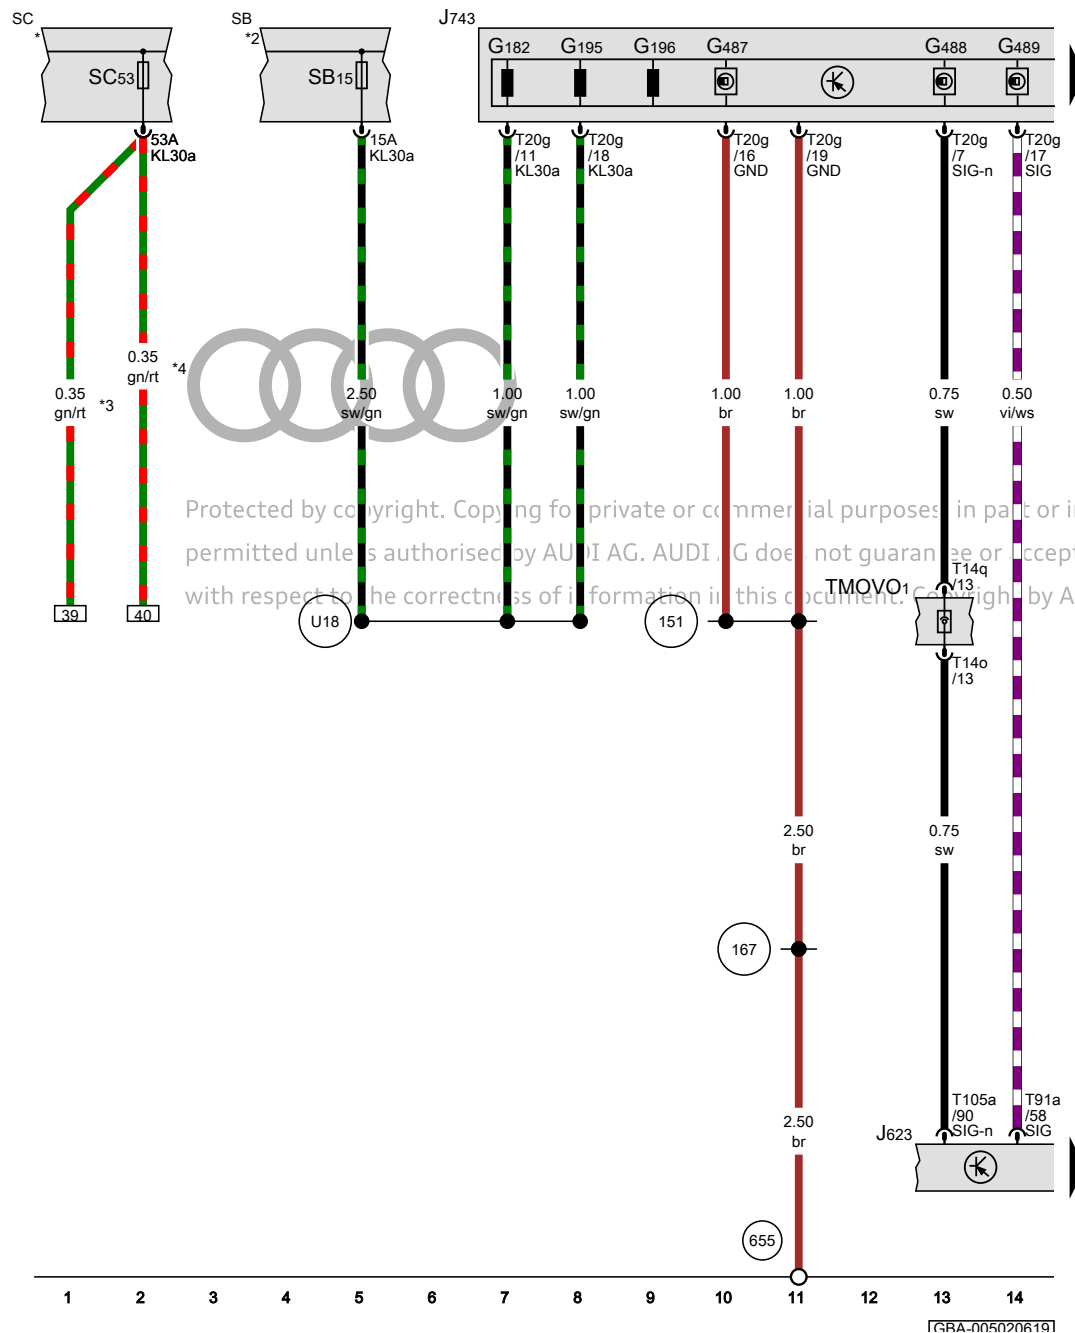

Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C

- G182 Gearbox input speed sender
- G195 Gearbox output speed sender
- G196 Gearbox output speed sender 2
- G487 Gear selector movement sensor 1
- G488 Gear selector movement sensor 2
- G489 Gear selector movement sensor 3
- J623 Engine/motor control unit
- J743 Mechatronic unit for dual clutch gearbox
- SB Fuse holder B
- SB15 Fuse 15 on fuse holder B
- SC Fuse holder C
- SC53 Fuse 53 on fuse holder C
- T14o 14-pin connector, grey
- T14q 14-pin connector, grey
- T20g 20-pin connector, black
- T91a 91-pin connector, black
- T105a 105-pin connector, black
- TMOVO1 Coupling point 1 for engine prewiring harness

- 151 Earth connection 1, in front wiring harness
- 167 Earth connection 4, in engine compartment wiring harness
- 655 Earth point, on left headlight
- U18 Positive connection (30a), in automatic gearbox wiring harness
- * see applicable current flow diagram for fuses in interior
- *2 see applicable current flow diagram for fuses in engine compartment
- *3 For models with entry and start authorisation
- *4 For models with no entry and start authorisation


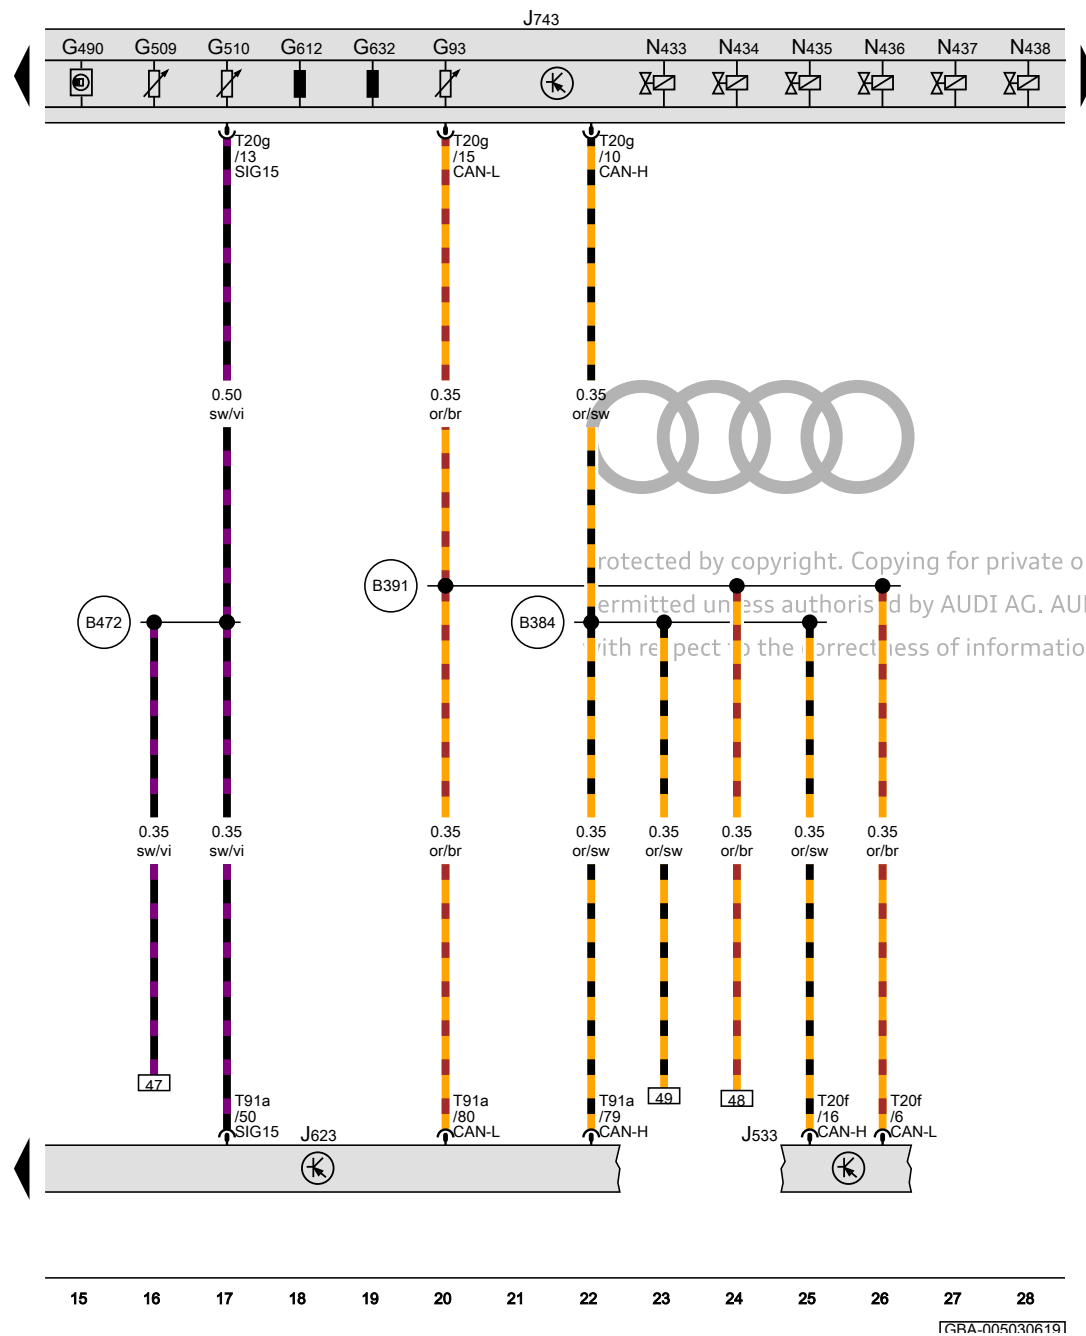


Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox

- G93 Gearbox oil temperature sender
- G490 Gear selector movement sensor 4
- G509 Clutch temperature sender
- G510 Temperature sender in control unit
- G612 Gearbox input speed sender 2
- G632 Gearbox input speed sender 1
- J533 Data bus diagnostic interface
- J623 Engine/motor control unit
- J743 Mechatronic unit for dual clutch gearbox
- N433 Valve 1 in gear train half 1
- N434 Valve 2 in gear train half 1
- N435 Valve 3 in gear train half 1
- N436 Valve 4 in gear train half 1
- N437 Valve 1 in gear train half 2
- N438 Valve 2 in gear train half 2
- T20f 20-pin connector, red
- T20g 20-pin connector, black
- T91a 91-pin connector, black

- B384 Connection 2 (powertrain CAN bus, high), in main wiring harness
- B391 Connection 2 (powertrain CAN bus, low), in main wiring harness
- B472 Connection 8, in main wiring harness

 - ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

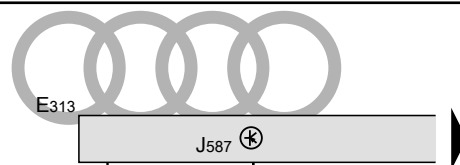

Protected by copyright. Copying for private or commercial purposes in any form or by any means, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee the correctness of information in this document.


Selector lever, Mechatronic unit for dual clutch gearbox, Ignition key withdrawal lock solenoid

- E313 Selector lever
- J587 Selector lever sensors control unit
- J743 Mechatronic unit for dual clutch gearbox
- N92 Solenoid valve 5
- N376 Ignition key withdrawal lock solenoid
- N439 Valve 3 in gear train half 2
- N440 Valve 4 in gear train half 2
- N471 Cooling oil valve
- N472 Main pressure valve
- T2ds 2-pin connector, black
- T10f 10-pin connector, black


- 238 Earth connection 1, in interior wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A167 Positive connection 3 (30a) in dash panel wiring harness
- B114 Connection (inhibitor switch), in interior wiring harness

- * For models with no entry and start authorisation
- *2 For left-hand drive models
- *3 For right-hand drive models
- *4 For models with entry and start authorisation

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

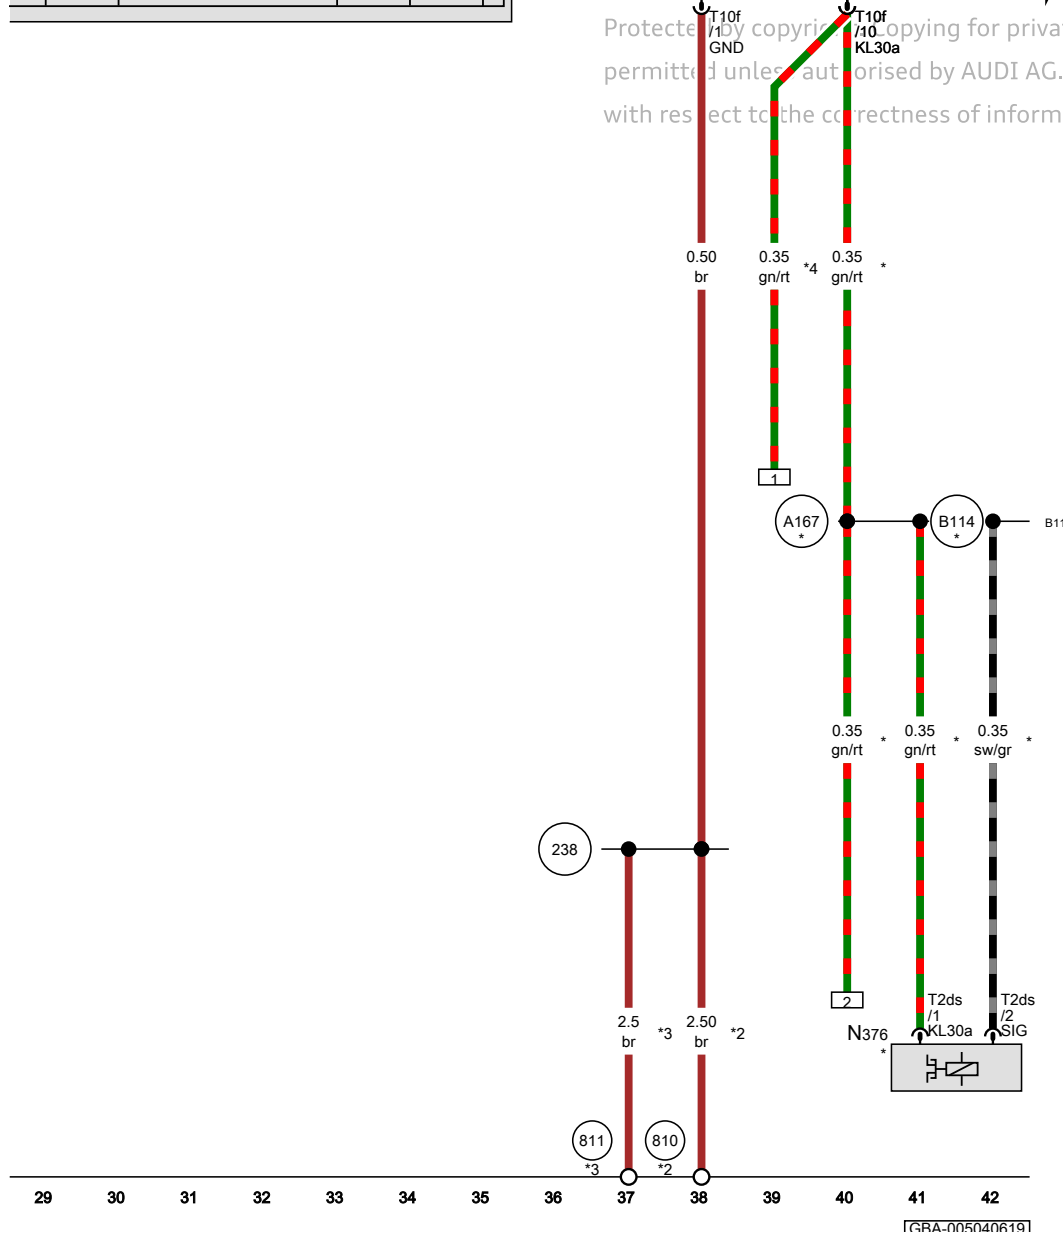

16BA-0050406191

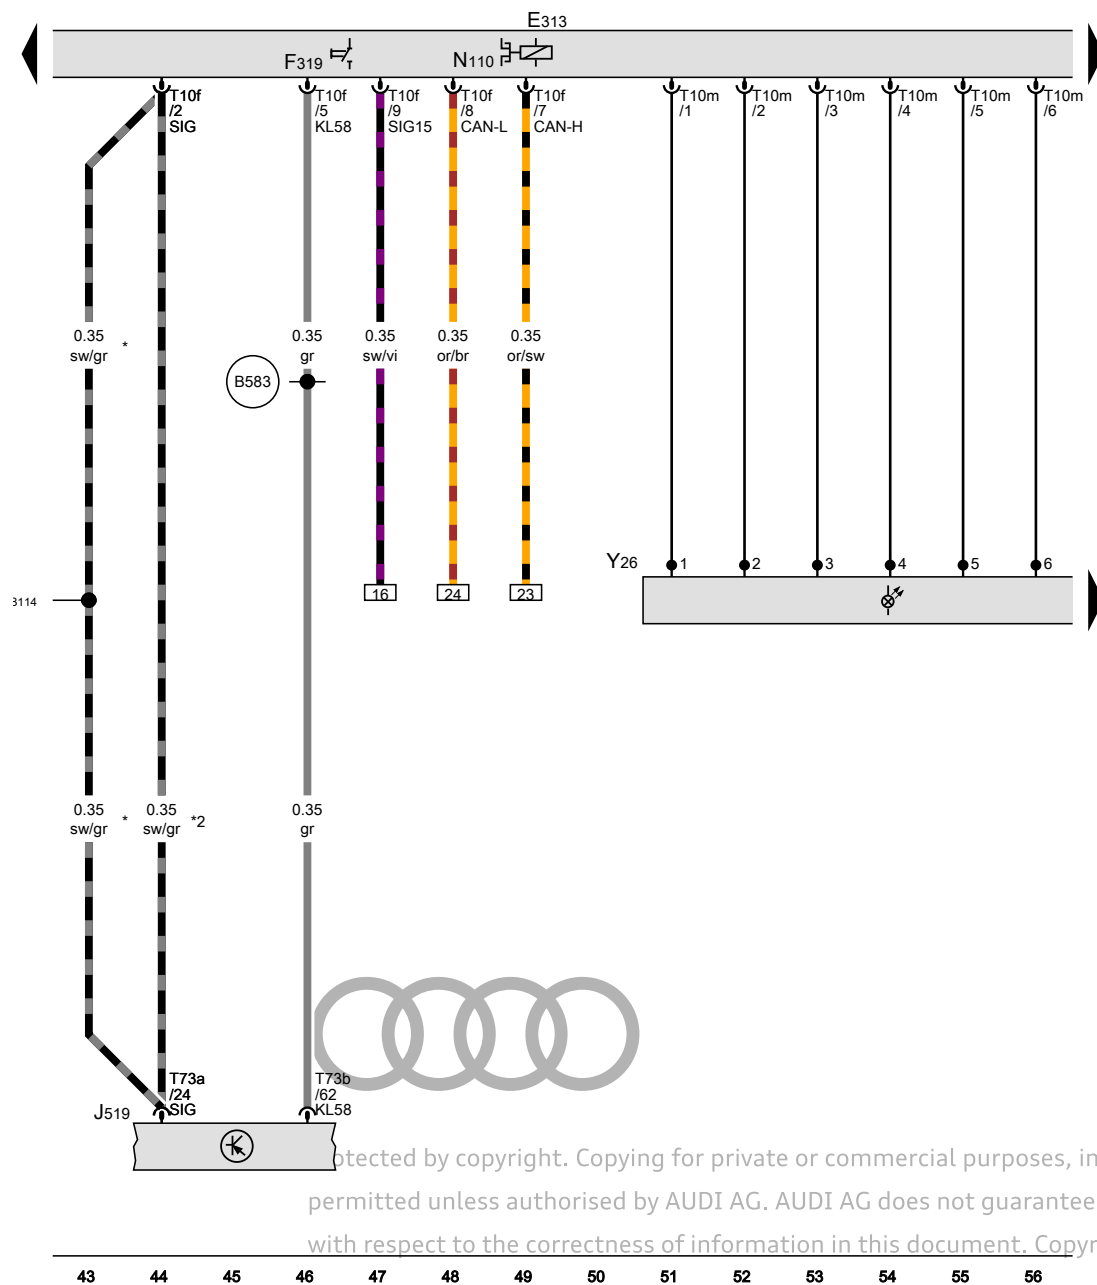

Selector lever, Onboard supply control unit, Selector lever position display

- E313 Selector lever
- F319 Selector lever locked in position P switch
- J519 Onboard supply control unit
- N110 Selector lever lock solenoid
- T10f 10-pin connector, black
- T10m 10-pin connector, black
- T73a 73-pin connector, black
- T73b 73-pin connector, black
- Y26 Selector lever position display

B114 Connection (inhibitor switch), in interior wiring harness

B583 Positive connection (58), in interior wiring harness


* For models with no entry and start authorisation

*2 For models with entry and start authorisation

protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept responsibility with respect to the correctness of information in this document. Copyright by AUDI AG.

Selector lever, Selector lever position display

E313 Selector lever
T10m 10-pin connector, black
Y26 Selector lever position display

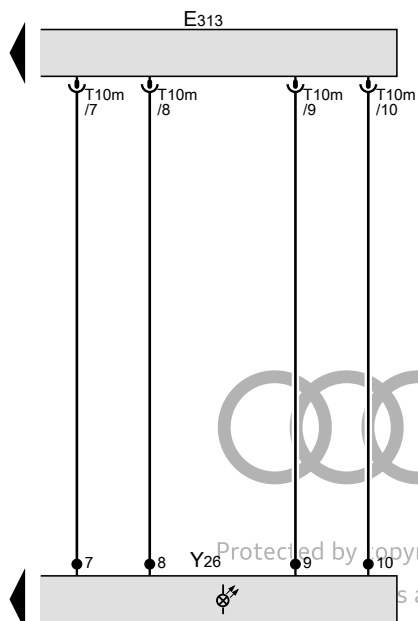

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink