
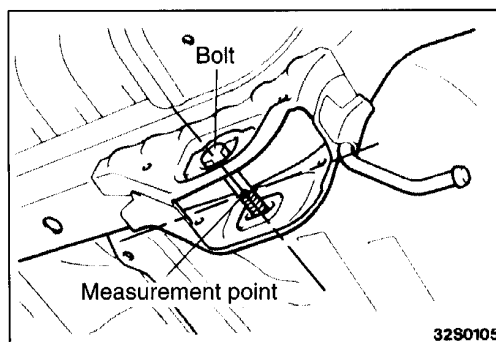
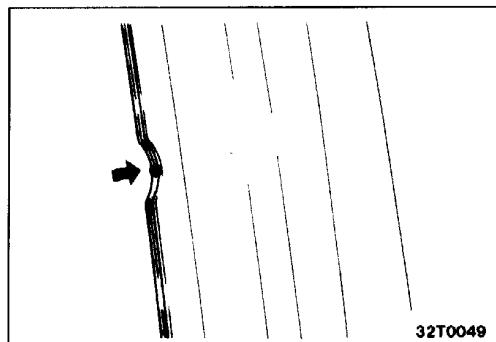
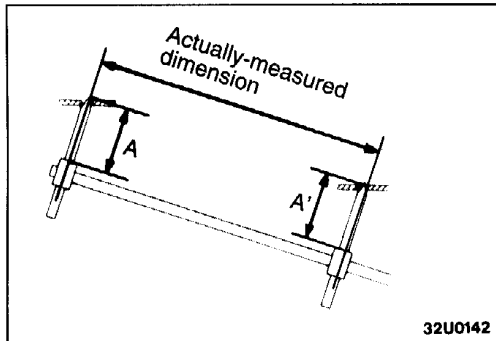


2 BODY DIMENSIONS

BODY DIMENSIONS AND MEASUREMENT	
METHODS.....	2-3
<SPACE RUNNER>	
TYPE A	
(PROJECTED DIMENSIONS)	2-4
UNDER BODY.....	2-4
SUSPENSION INSTALLATION DIMENSIONS.....	2-6
TYPE B	
(ACTUAL-MEASUREMENT DIMENSIONS)	2-8
UNDER BODY	2-8
SUSPENSION INSTALLATION DIMENSIONS.....	2-10
FRONT BODY	2-12
SIDE BODY	2-13
REAR BODY	2-15
INTERIOR.....	2-16
<SPACE WAGON>	
TYPE A	
(PROJECTED DIMENSIONS)	2-17
UNDER BODY.....	2-17
SUSPENSION INSTALLATION DIMENSIONS.....	2-19
TYPE B	
(ACTUAL-MEASUREMENT DIMENSIONS)	2-21
UNDER BODY.....	2-21
SUSPENSION INSTALLATION DIMENSIONS.....	2-23
FRONT BODY	2-25
SIDE BODY	2-26
REAR BODY	2-27
INTERIOR.....	2-28

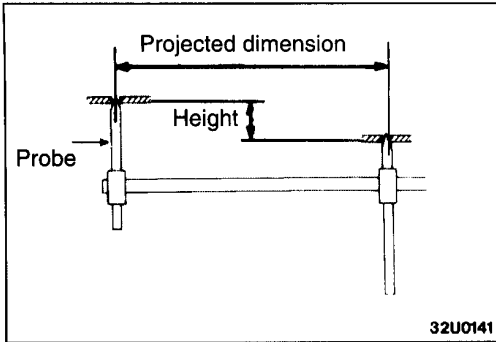

BODY DIMENSIONS AND MEASUREMENT METHODS

STANDARD DIMENSIONS INDICATIONS AND MEASUREMENT METHODS

1. Type A (projected dimensions)
Indicates the dimension when a measurement location is projected onto a plane. The difference in height of the measurement points should be taken into consideration when measuring.

2. Type B (actual-measurement dimensions)
Indicates the actual distance between the measurement points.

Measure using a tracking gauge or a measuring tape, etc.

NOTES

- Make the lengths of the tracking gauge probes the same ($A=A'$).
- Do not bend or twist the measuring tape.

3. Insert the tracking gauge probes securely into the measurement holes.

4. When the standard dimensions in the illustration are enclosed by $\square$, this indicates that the symmetrical left and right positions have the same dimensions.

2

5. When using a notch for dimension measurement, make the measuring point at the centre of the notch.

6. When measuring the suspension mounting arm or the link mounting position, use the suspension mounting bolt as the measuring point.


BODY CENTRE POINT

The body centre points are shown for the purpose of checking the position of the left and right symmetry locations.


<SPACE RUNNER>

**<SPACE RU
TYPE A (PR
UNDER BODY**

mm

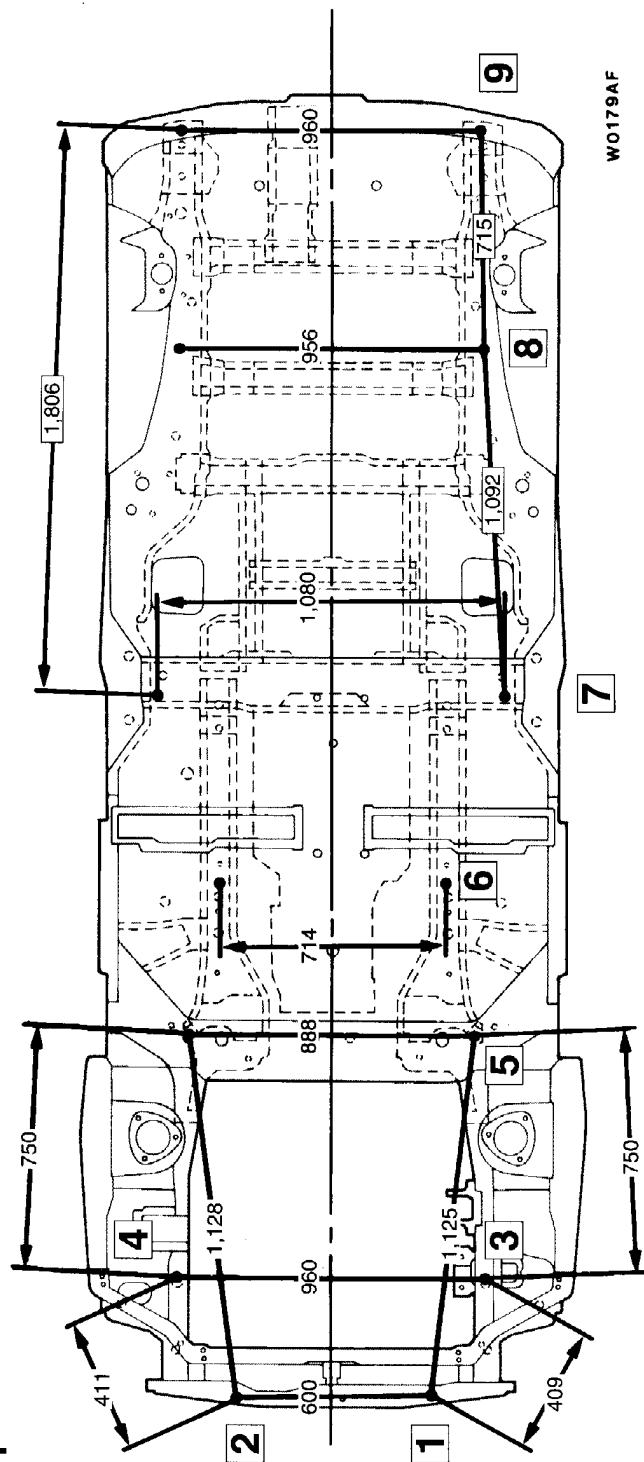


WO179AF

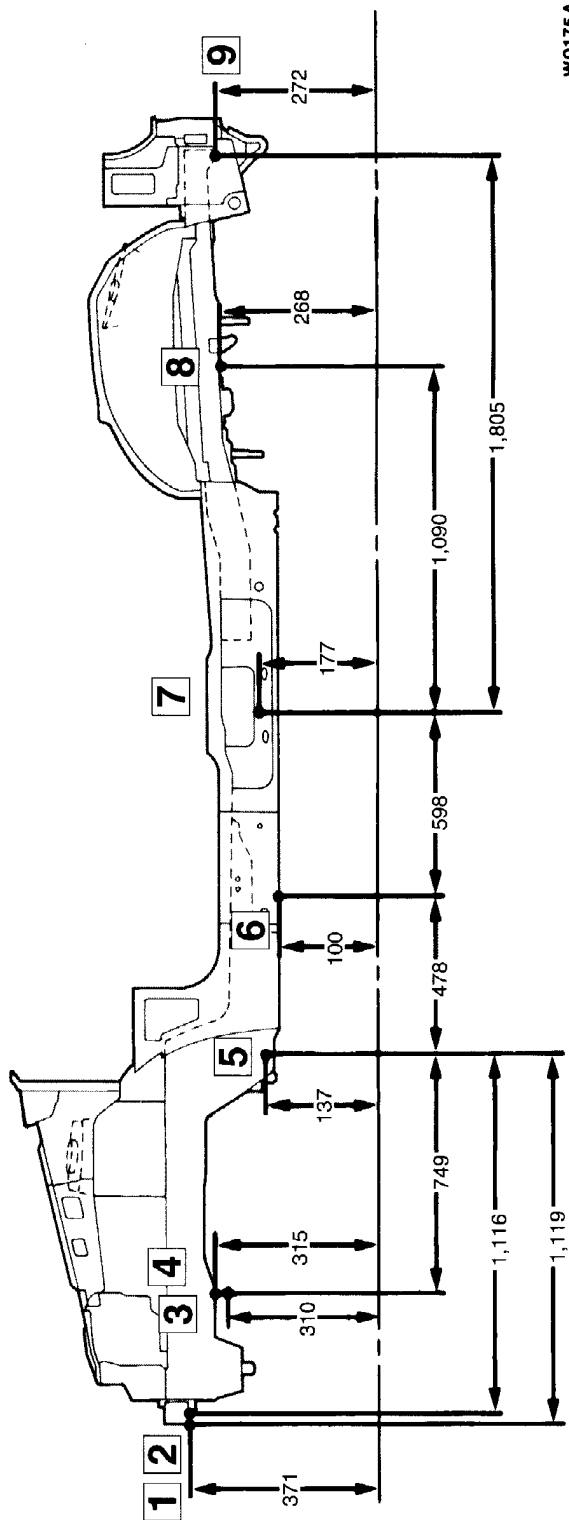





W0175AF

mm

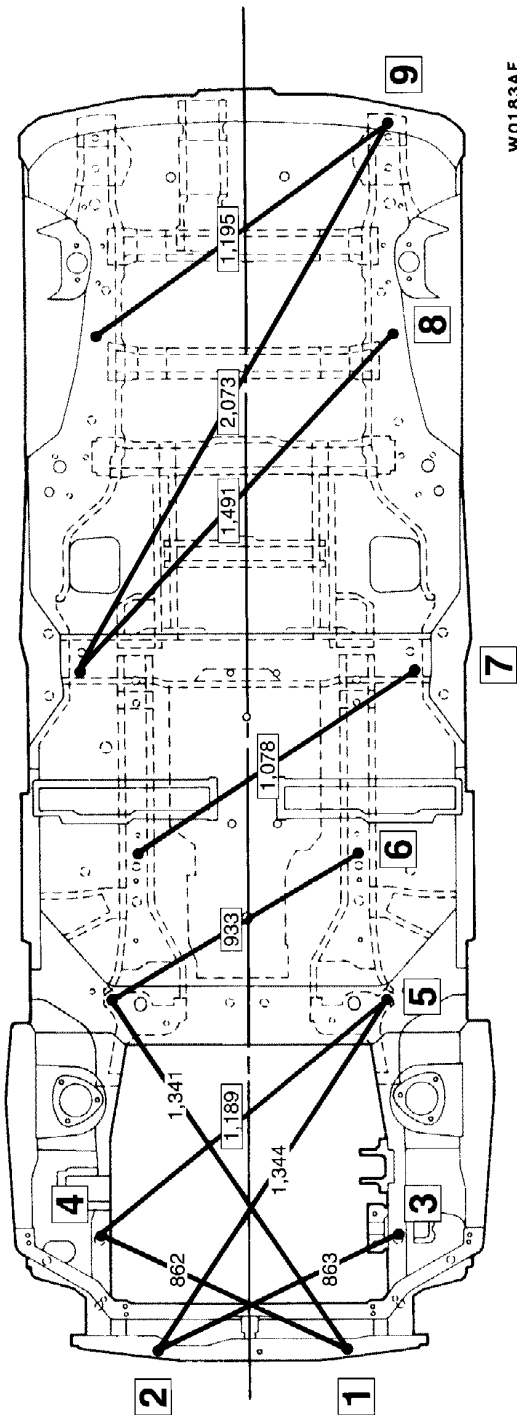


No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm
1	Centre of front bumper face mounting hole	○	7 × 12	4	Rear edge of front sidemember positioning hole	○	19
2	Centre of front bumper face mounting hole	○	8	5*	Centre of front suspension stay mounting hole	○	15
3	Rear edge of front sidemember positioning hole	○	19	6*	Centre of sidemember connection bolt hole	○	13
				7*	Centre of rear floor crossmember (A) drain hole	○	10
				8*	Centre of rear sidemember drain hole	○	12
				9*	Centre of rear end crossmember positioning hole	○	14


NOTE: The * mark indicates the mounting position for the frame centering gauge.

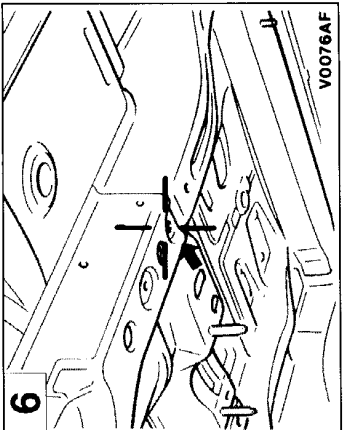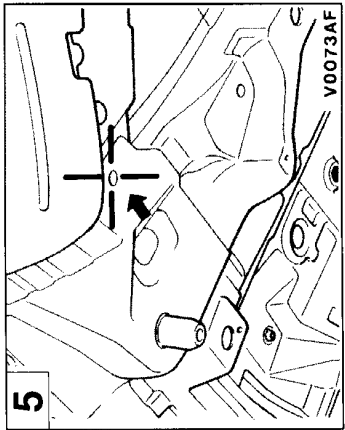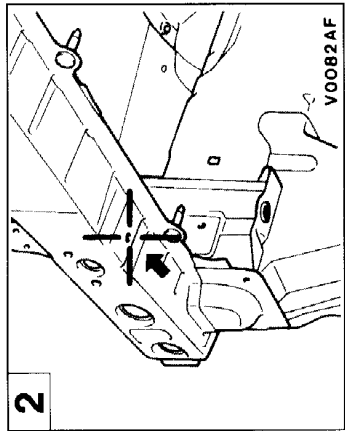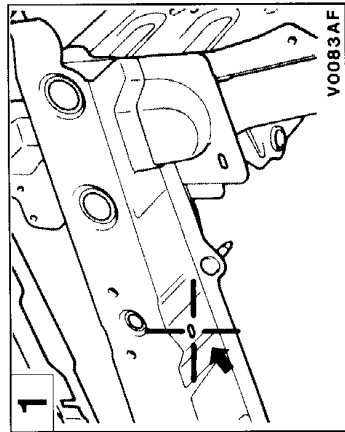





SUSPENSION INSTALLATION DIMENSIONS

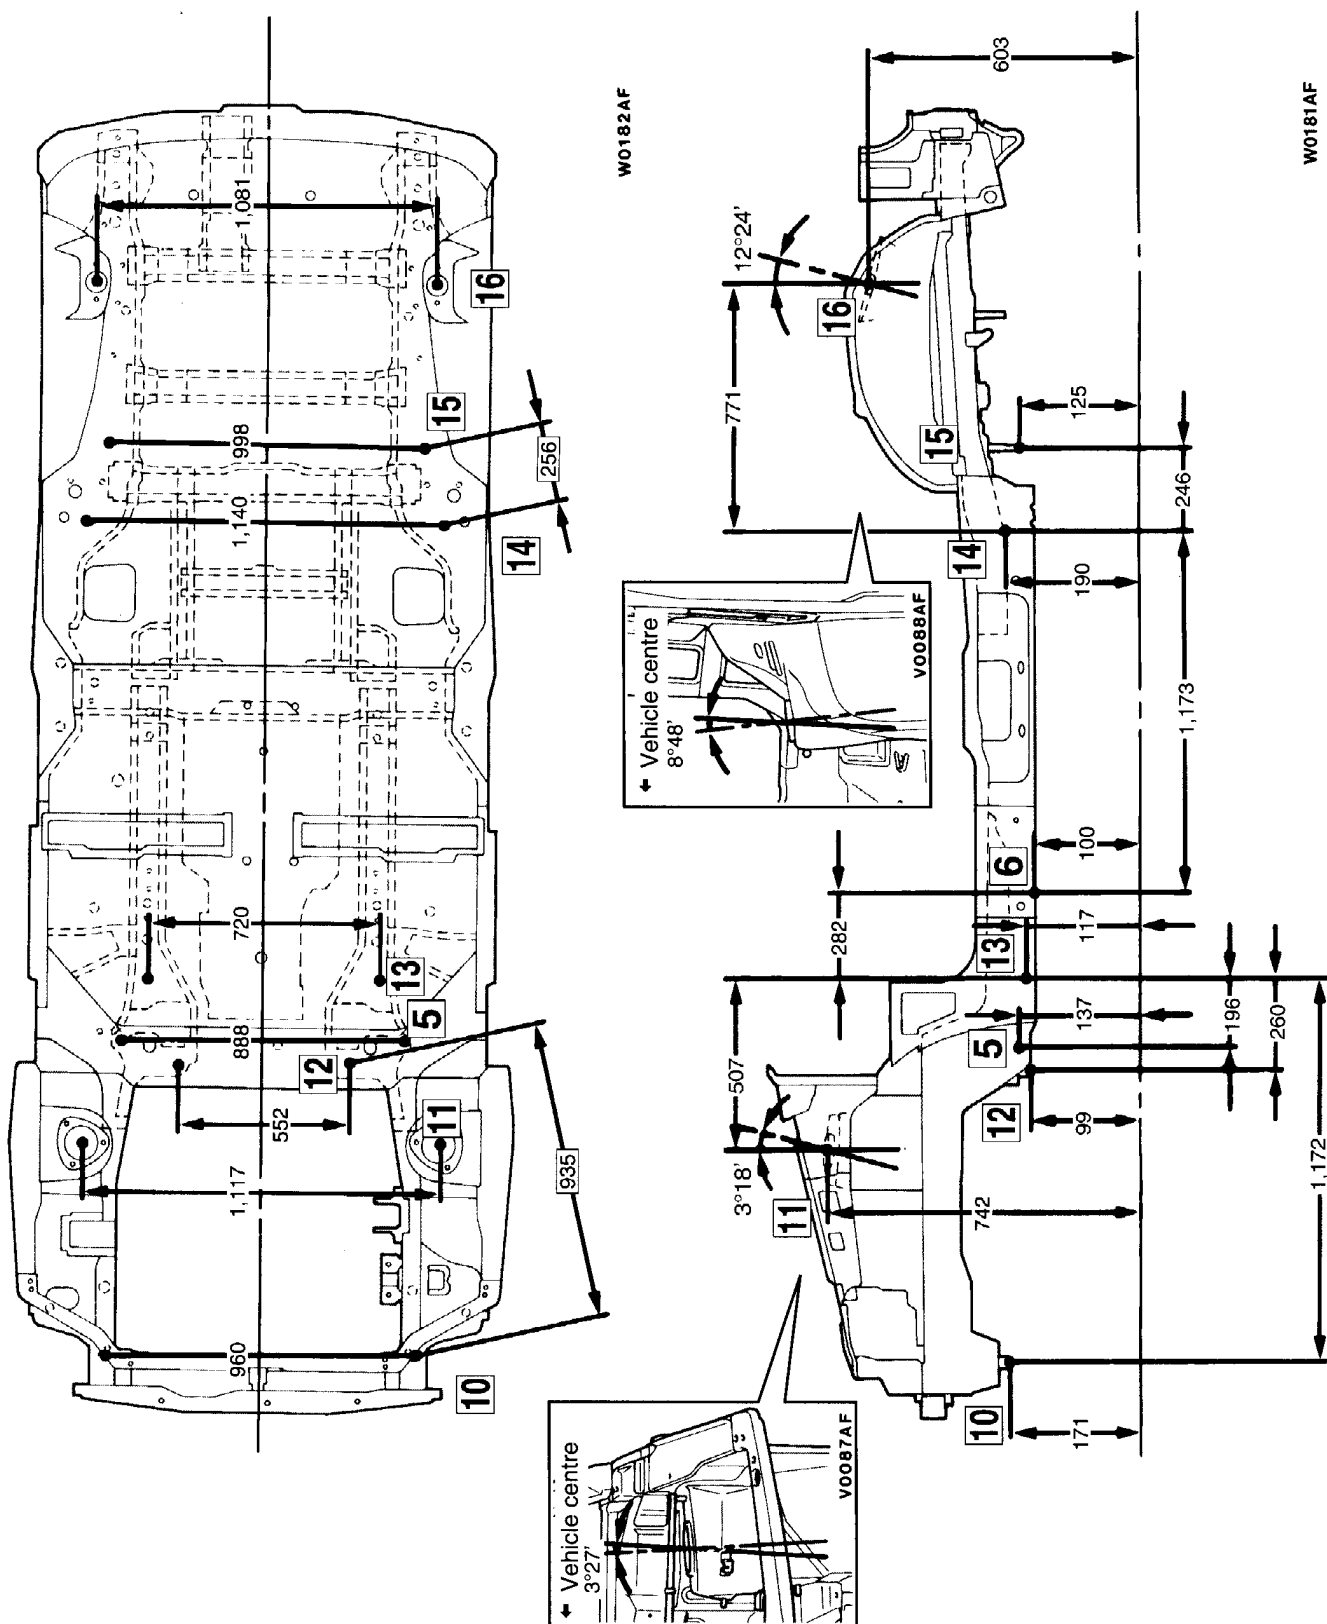

mm

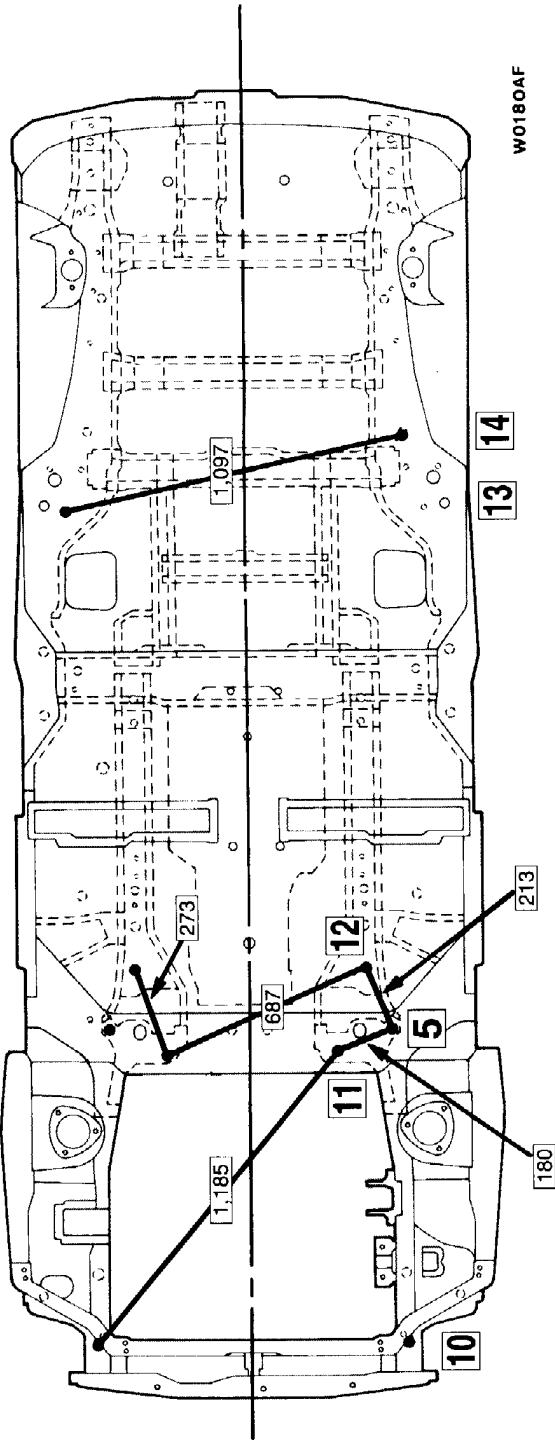


No.	Standard measurement point	Hole shape — Size mm	No.	Standard measurement point	Hole shape — Size mm	No.	Standard measurement point	Hole shape — Size mm
5	Centre of front suspension stay mounting hole	○ — 15	11	Centre of front shock absorber mounting hole	○ — 103.4	14	Centre of suspension crossmember mounting hole	○ — 14
6	Centre of sidemember connection bolt hole	○ — 13	12	Centre of front suspension stay mounting hole	○ — 15	15	Front edge of suspension crossmember mounting hole	—
10	Centre of frontmember mounting hole	○ — 15	13	Centre of front suspension stay mounting hole	○ — 15	16	Centre of rear shock absorber mounting hole	○ — 60

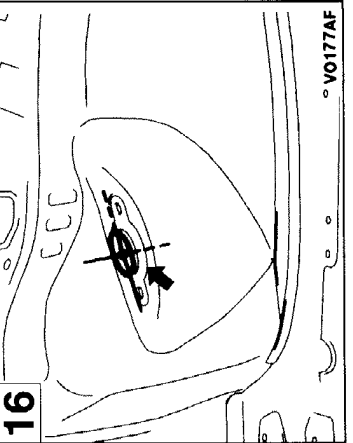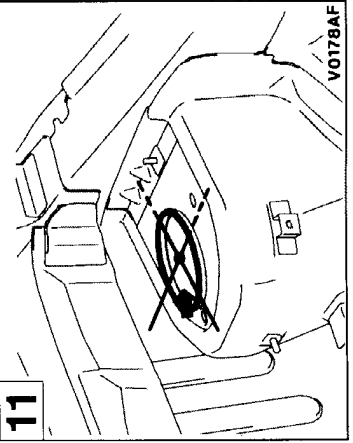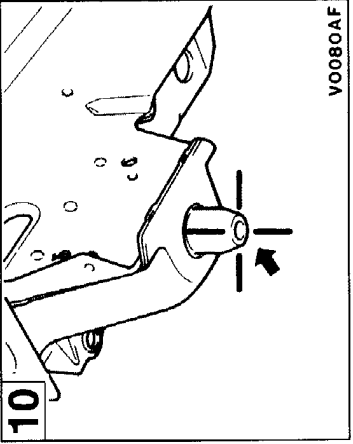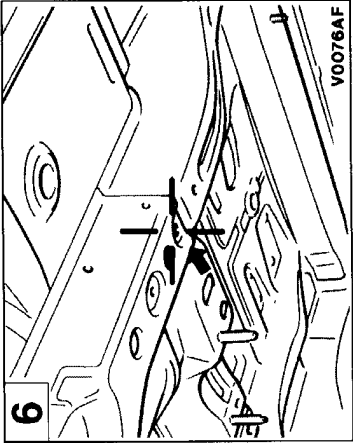


mm

TYPE B (ACTUAL-MEASUREMENT DIMENSIONS)

UNDER BODY






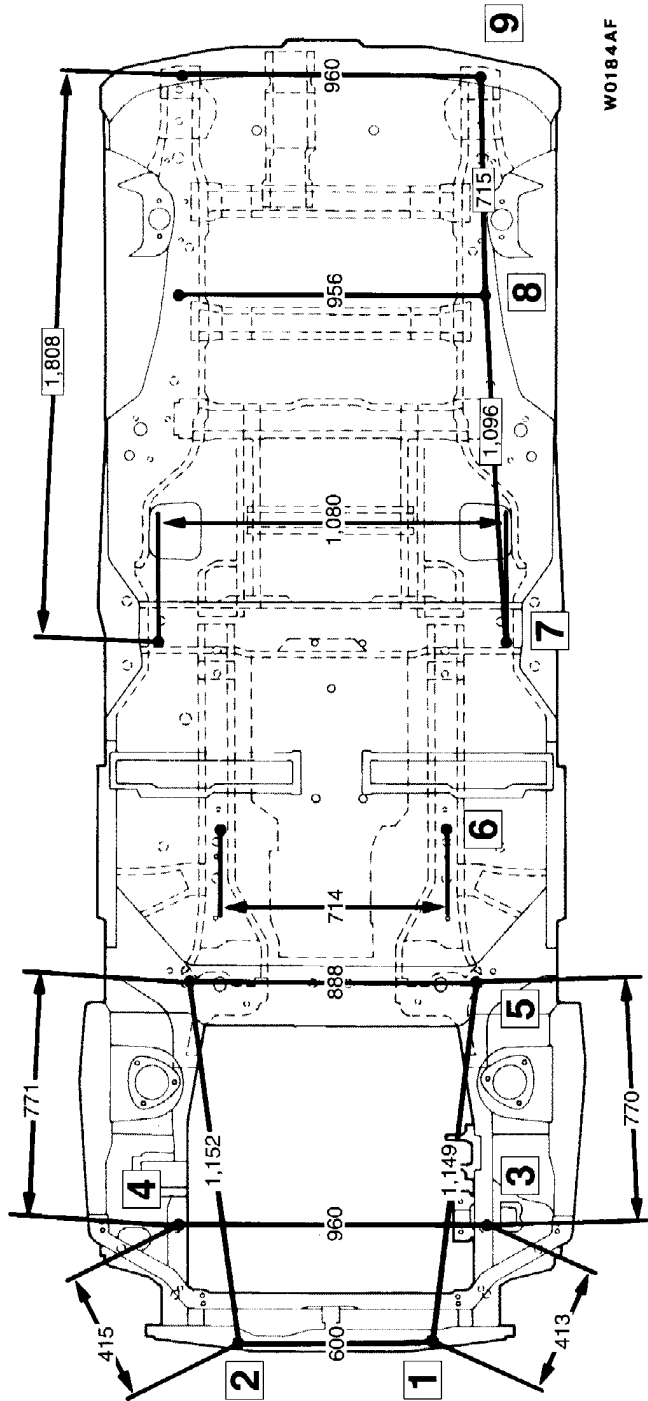


W0184AF

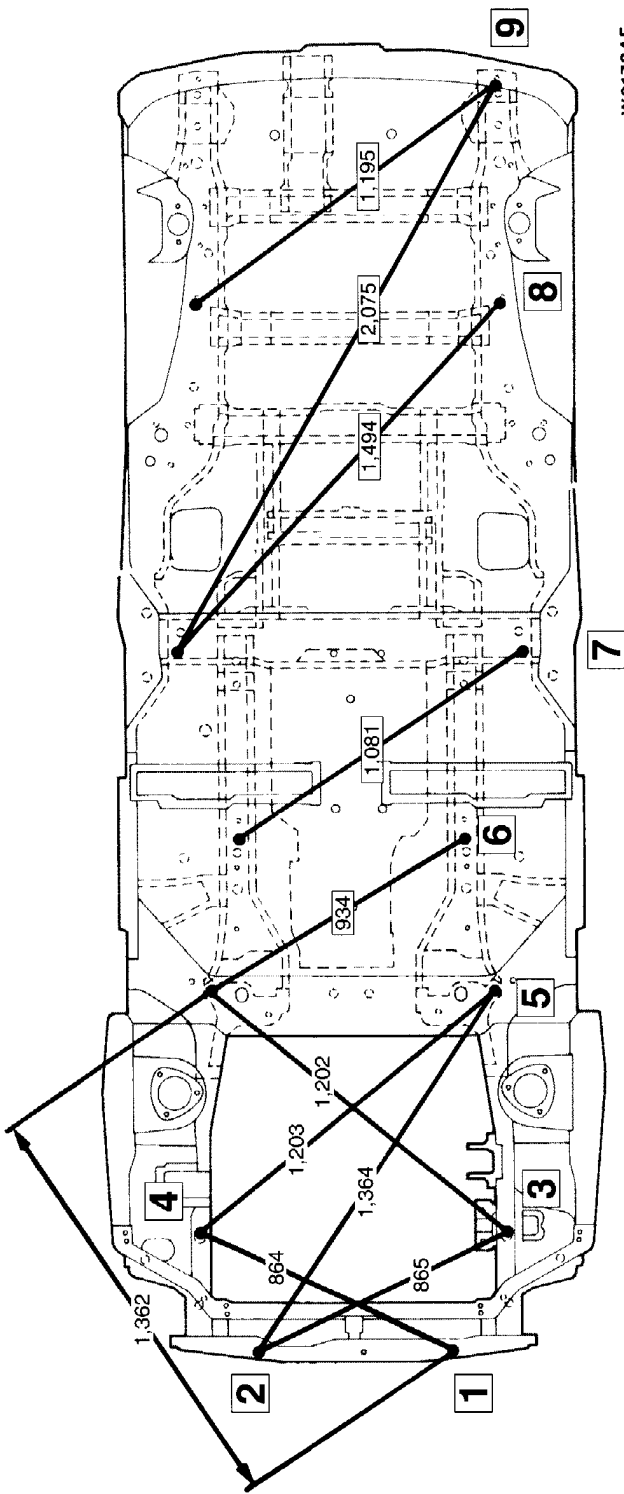


W0178AF

No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm
1	Centre of front bumper face mounting hole	○	7 × 12	4	Centre of front suspension stay mounting hole	○	15	7	Centre of rear floor crossmember (A) drain hole	○	10
2	Centre of front bumper face mounting hole	○	8	5	Centre of front suspension stay mounting hole	○	15	8	Centre of rear sidemember drain hole	○	12
3	Rear edge of front sidemember positioning hole	○	19	6	Centre of sidemember connection bolt hole	○	13	9	Centre of rear end crossmember positioning hole	○	14

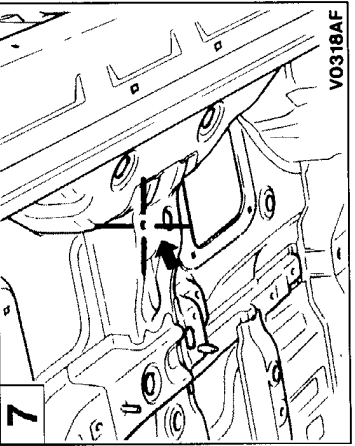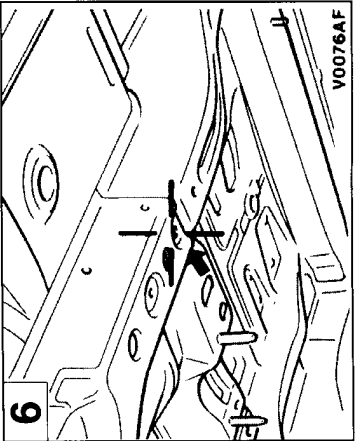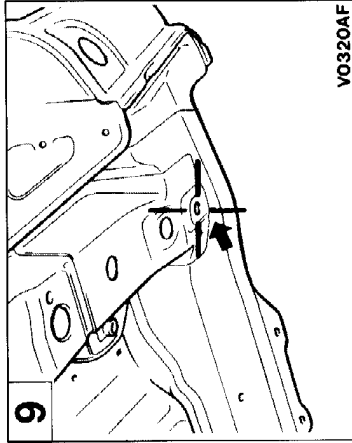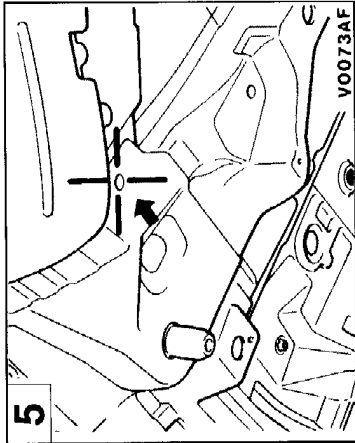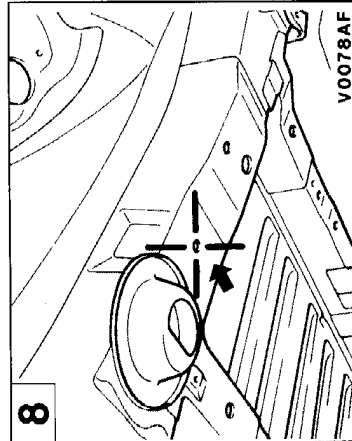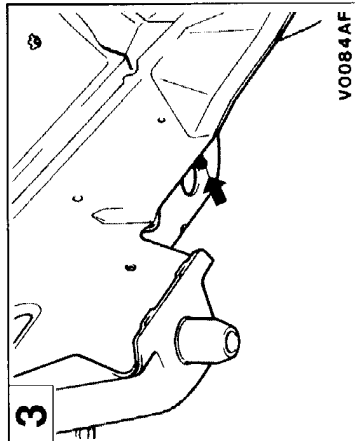


mm

SUSPENSION INSTALLATION DIMENSIONS





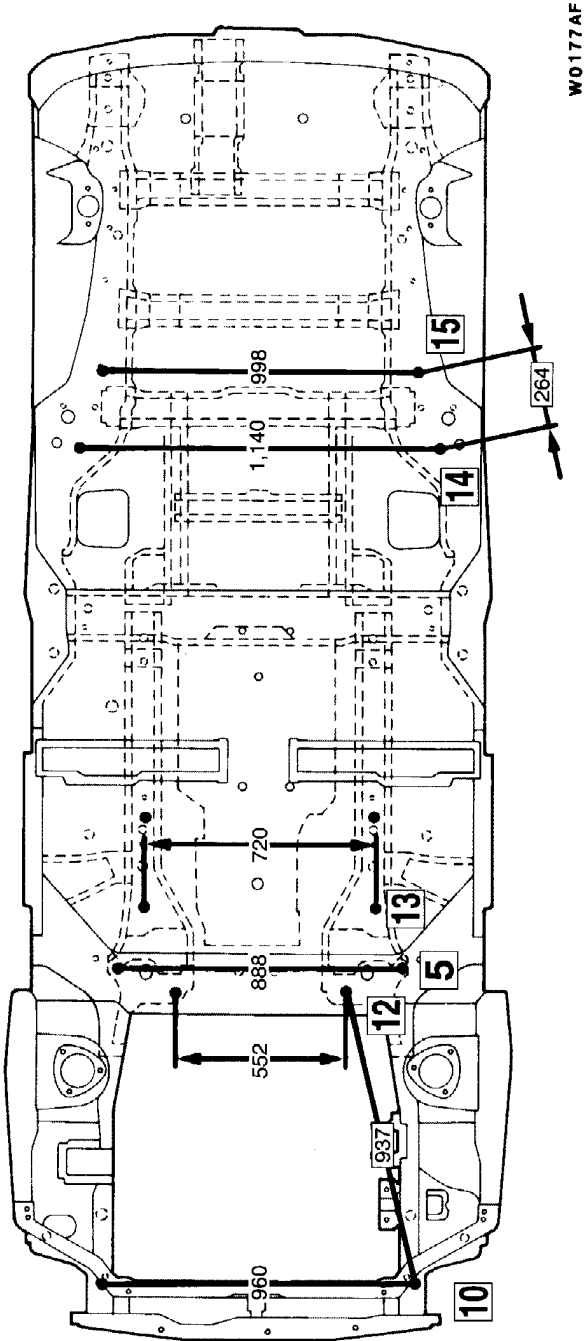


W0177AF

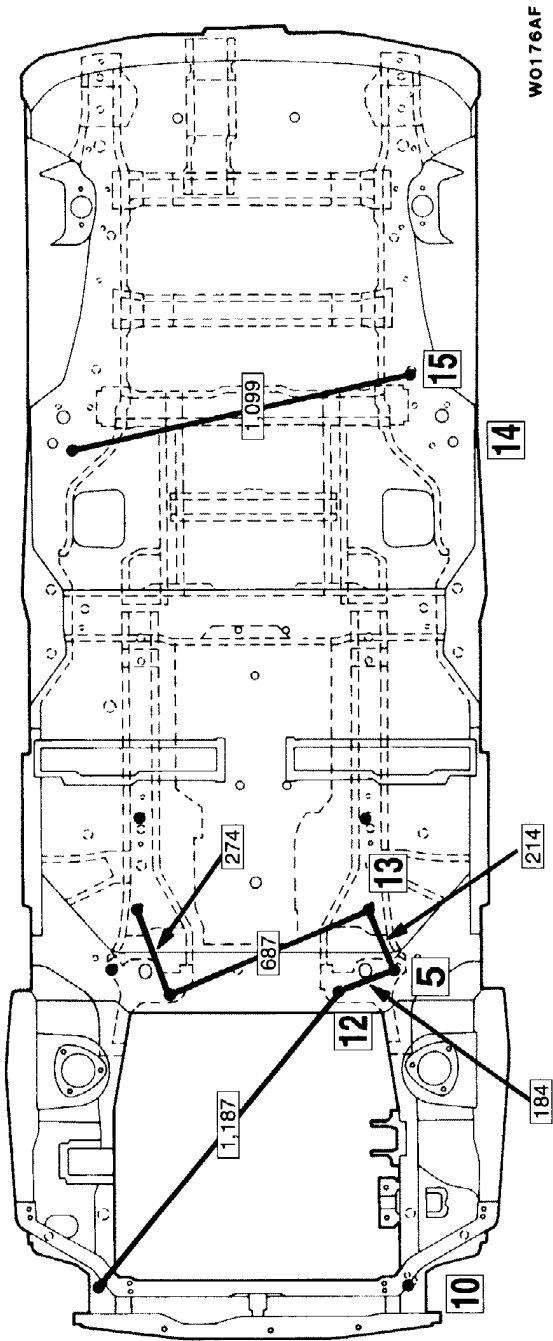

W0176AF


No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm
5	Centre of front suspension stay mounting hole	○	15	14	Centre of suspension crossmember mounting hole	○	14
10	Centre of frontmember mounting hole	○	15	15	Front edge of suspension crossmember mounting bolt	—	—

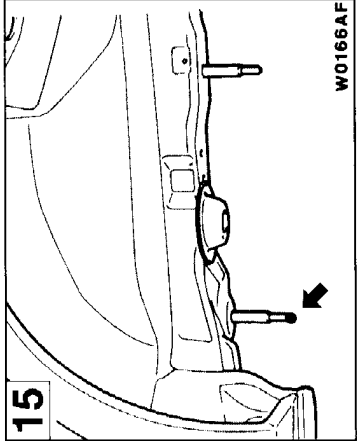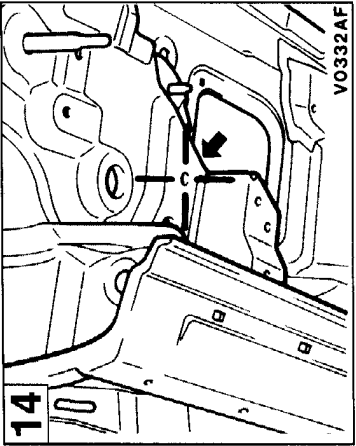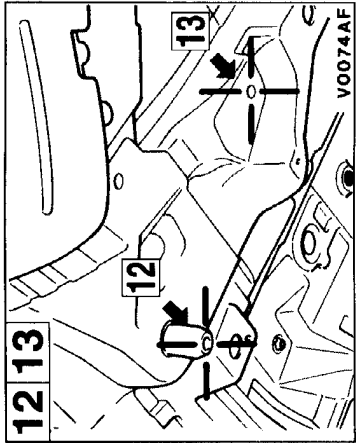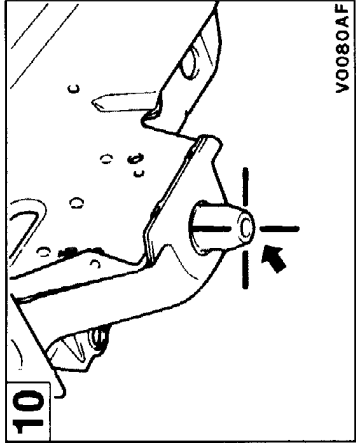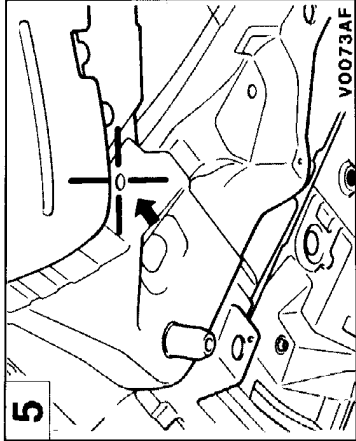




2-12 BODY DIMENSIONS – Type B (Actual-Measurement Dimensions) <SPACE RUNNER>

FRONT BODY

mm

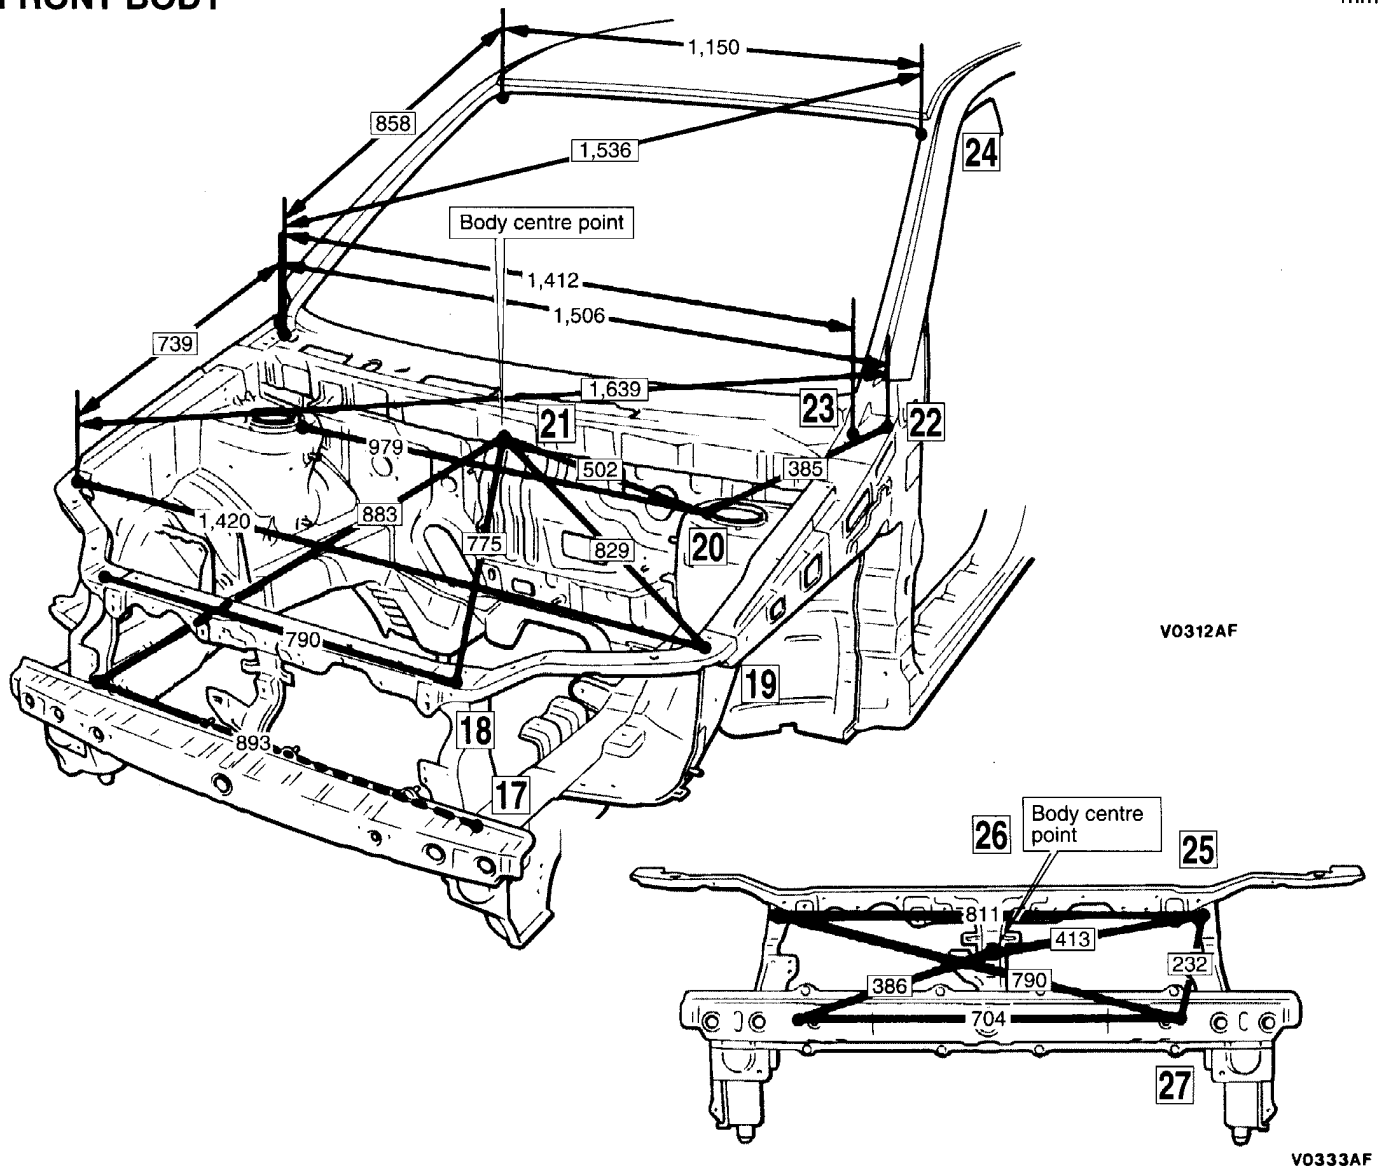


No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm
17	Centre of dynamic damper mounting hole	○	11	23	Centre of hood hinge mounting hole	○	9
18	Centre of radiator mounting hole	○	9	24	Joint of roof panel and front pillar	—	
19	Centre of front fender mounting hole	○	6.6	25	Centre of headlamp mounting hole	○	6.6
20	Centre of strut mounting hole	○	11.5	26	Centre of hood latch mounting hole (body centre point)	○	6.8
21	Body centre point	—		27	Centre of air guide panel mounting hole	○	9
22	Centre of front fender mounting hole	○	6.6				

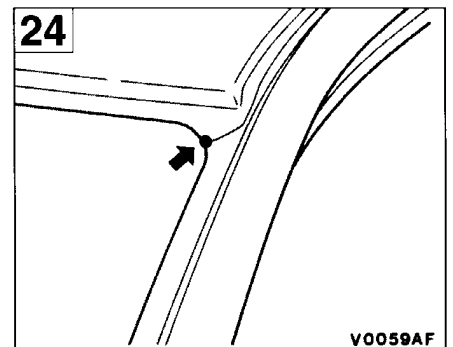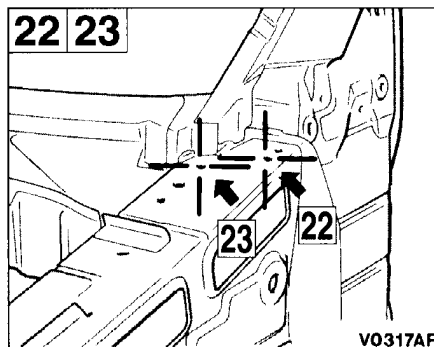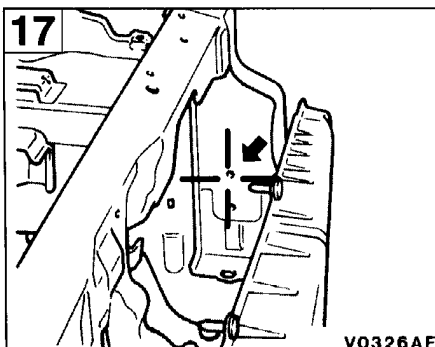


SIDE BODY

mm

Left side



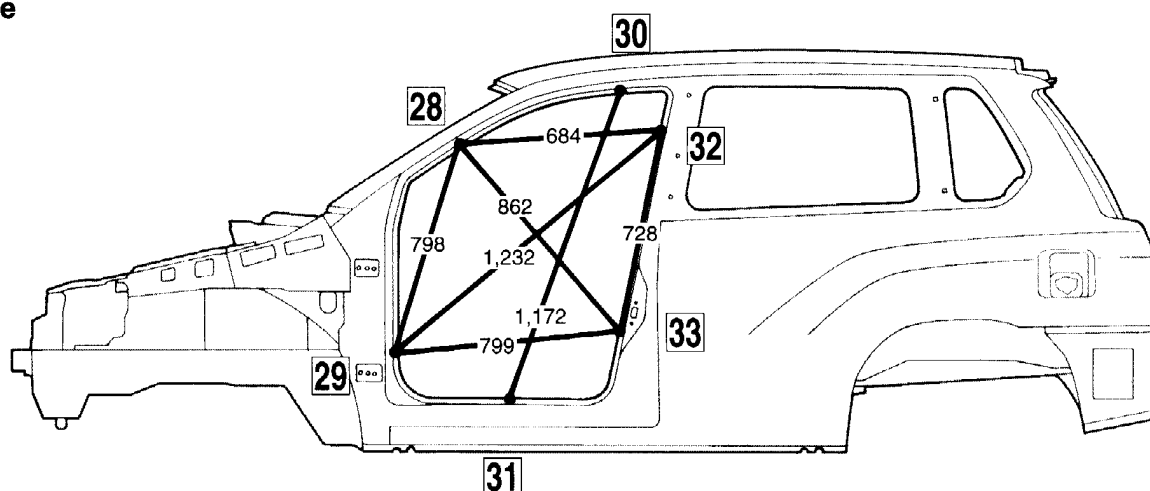


W0170AF

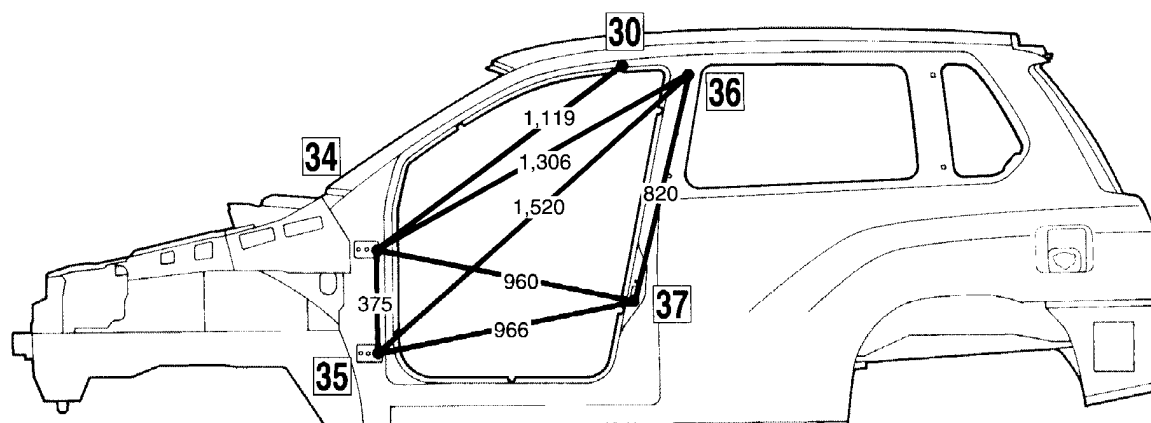

W0169AF


No.	Standard measurement point	Hole shape — Size mm	No.	Standard measurement point	Hole shape — Size mm
28	Front pillar positioning notch (upper)	—	33	Center pillar positioning notch (lower)	—
29	Front pillar positioning notch (lower)	—	34	Centre of front door hinge mounting hole (upper)	○ – 11
30	Side roof rail positioning notch (front)	—	35	Centre of front door hinge mounting hole (lower)	○ – 11
31	Side sill positioning notch (front)	—	36	Centre of garnish mounting hole	○ – 22
32	Center pillar positioning notch (upper)	—	37	Centre of front door switch mounting hole	○ – 5

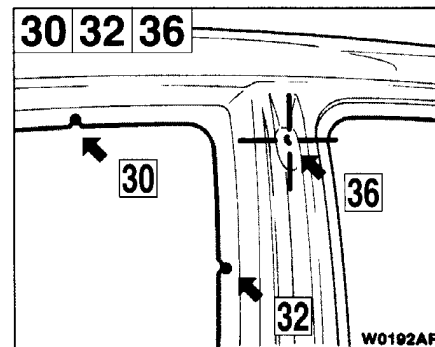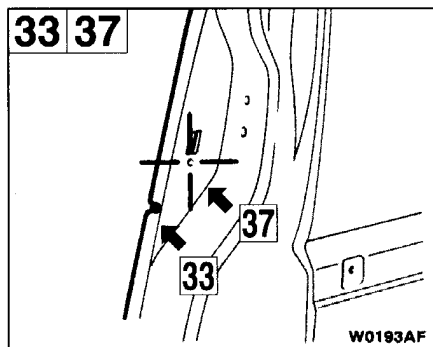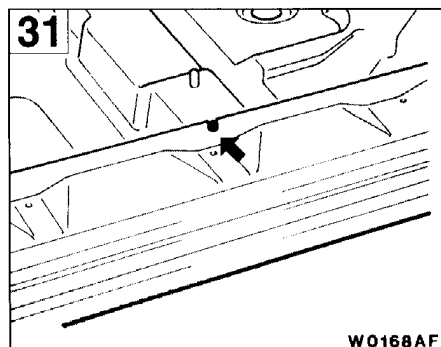


2-14 BODY DIMENSIONS – Type B (Actual-Measurement Dimensions) <SPACE RUNNER>

Right side

mm



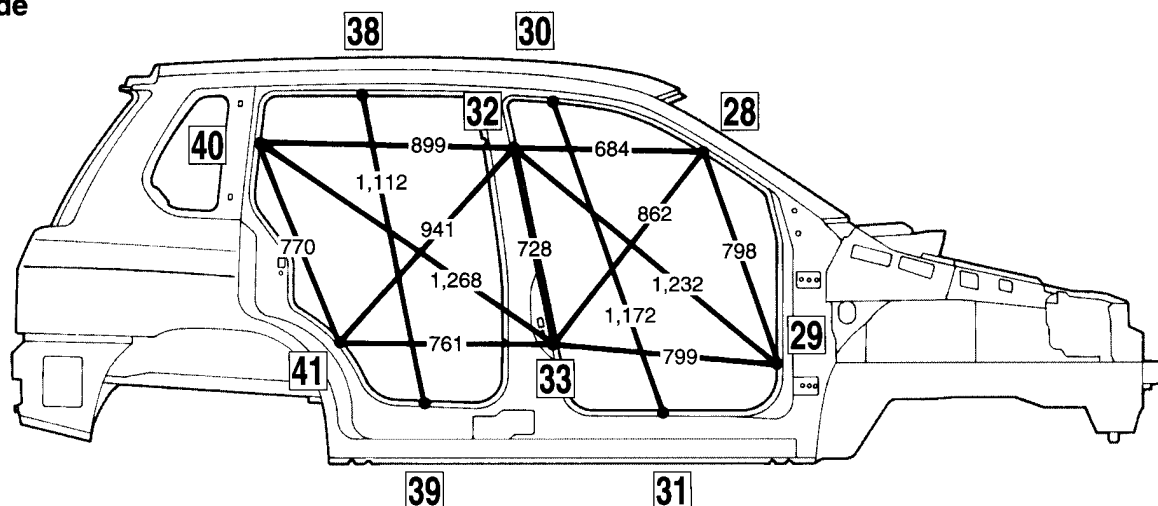


W0171AF

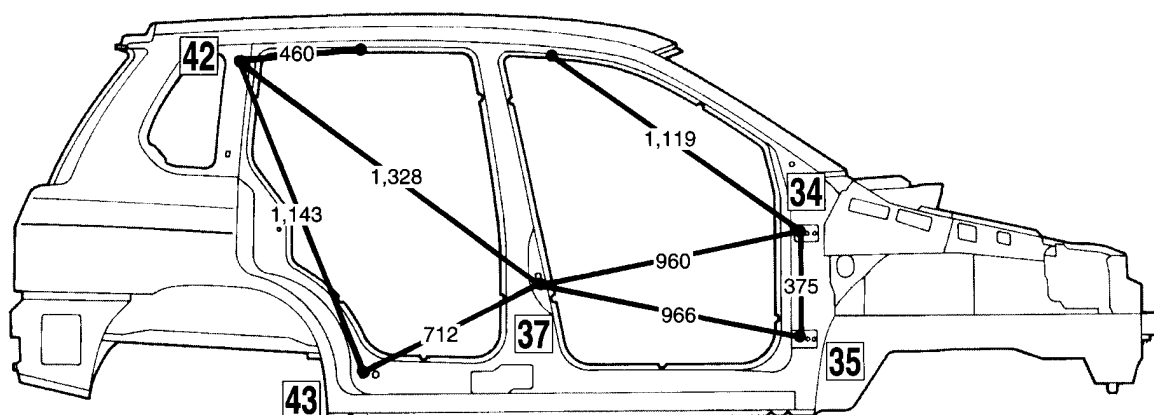


W0172AF

No.	Standard measurement point	Hole shape — Size mm	No.	Standard measurement point	Hole shape — Size mm
28	Front pillar positioning notch (upper)	—	37	Centre of front door switch mounting hole	○ — 5
29	Front pillar positioning notch (lower)	—	38	Side roof rail positioning notch (rear)	—
30	Side roof rail positioning notch (front)	—	39	Side sill positioning notch (rear)	—
31	Side sill positioning notch (front)	—	40	Quarter panel positioning notch (upper)	—
32	Center pillar positioning notch (upper)	—	41	Quarter panel positioning notch (lower)	—
33	Center pillar positioning notch (lower)	—	42	Centre of garnish mounting hole	□ — 8 × 5
34	Centre of front door hinge mounting hole (upper)	○ — 11	43	Centre of safety cable mounting hole	○ — 6
35	Centre of front door hinge mounting hole (lower)	○ — 11			

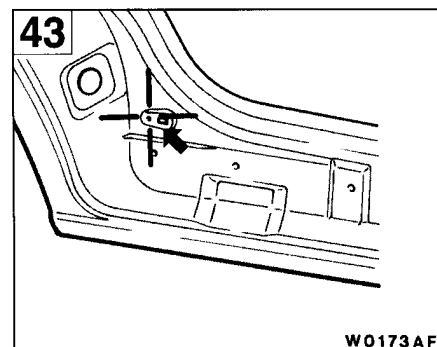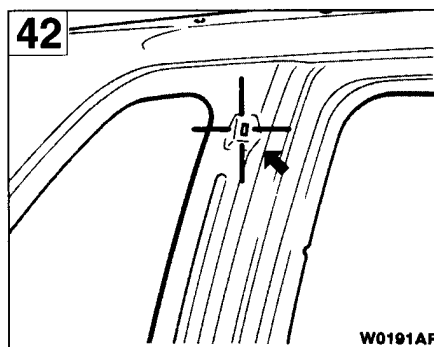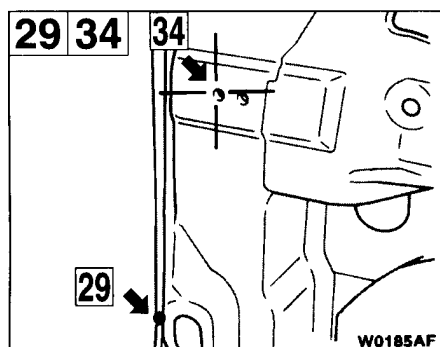





REAR BODY

mm

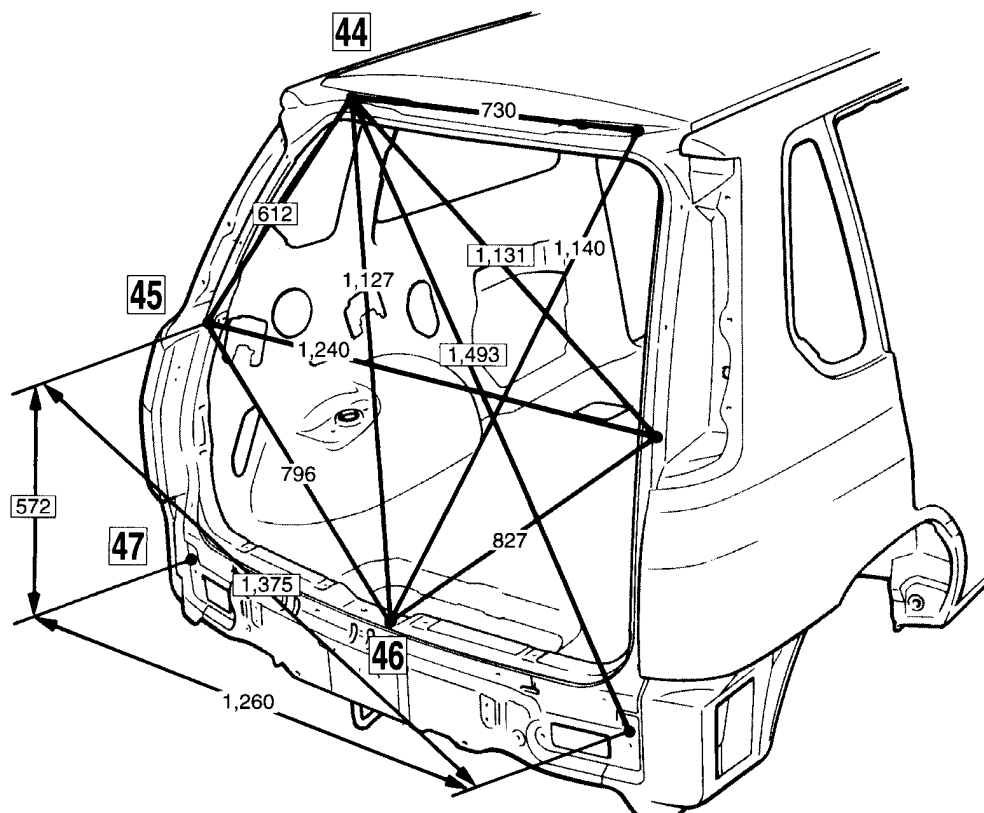

W0167AF


No.	Standard measurement point	Hole shape — Size mm	No.	Standard measurement point	Hole shape — Size mm
44	Centre of tailgate hinge mounting hole	○ — 11	46	Centre of tailgate striker mounting hole	○ — 14×11
45	Centre of rear combination lamp mounting hole	□ — 8.5×8.5	47	Centre of rear bumper mounting hole	○ — 10

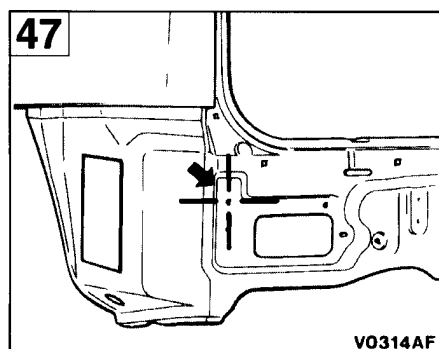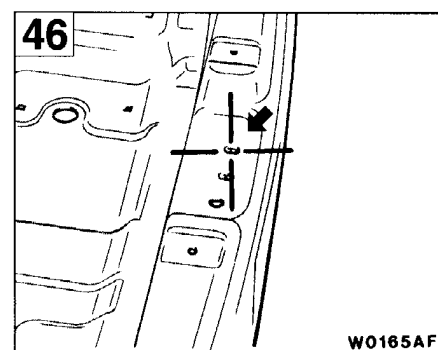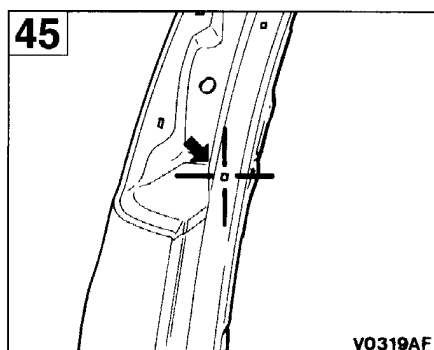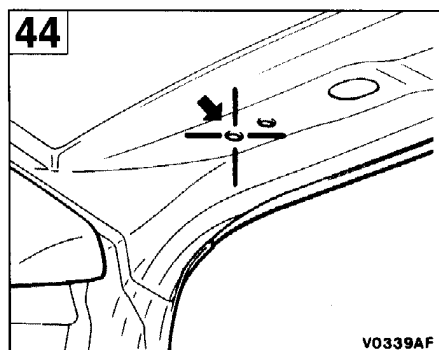

2-16 BODY DIMENSIONS – Type B (Actual-Measurement Dimensions) <SPACE RUNNER>







INTERIOR

mm

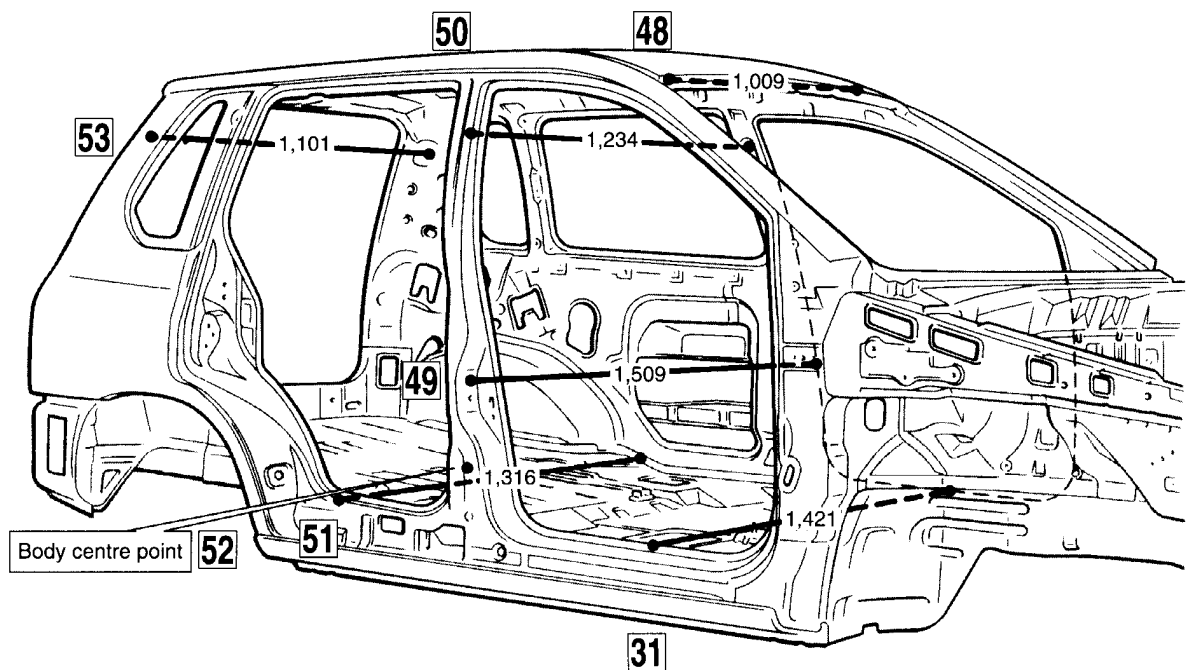

W0174AF


No.	Standard measurement point	Hole shape — Size mm	No.	Standard measurement point	Hole shape — Size mm
31	Side sill positioning notch (front)	—	51	Centre of trim mounting hole	□ — 8.5×8.5
48	Centre of sun visor mounting hole	○ — 5.5	52	Body centre point	—
49	Centre of front door striker mounting hole	○ — 14	53	Centre of seatbelt mounting hole	○ — 15
50	Centre of front seatbelt mounting hole	○ — 14			

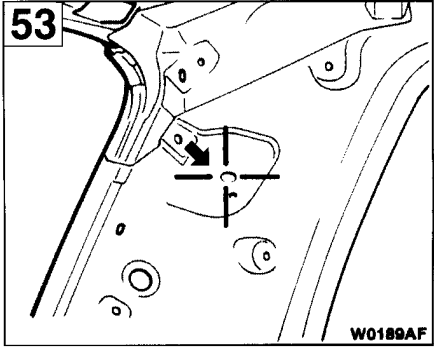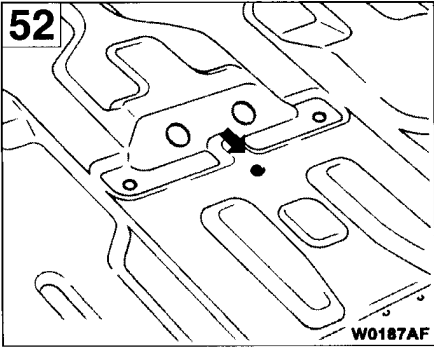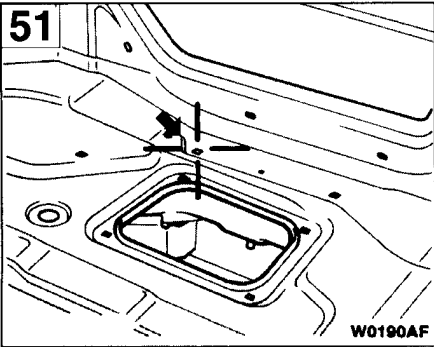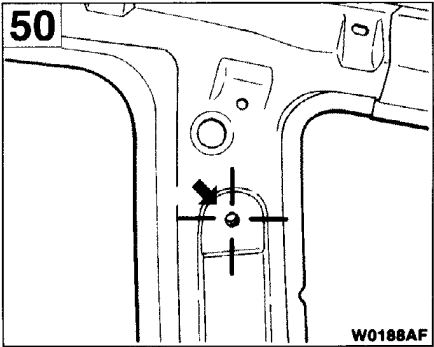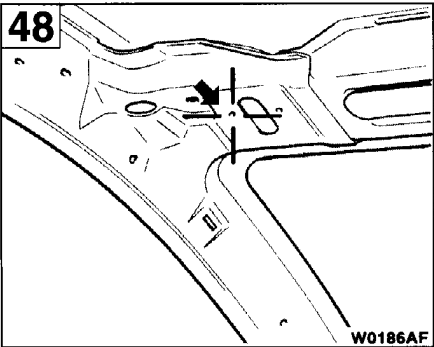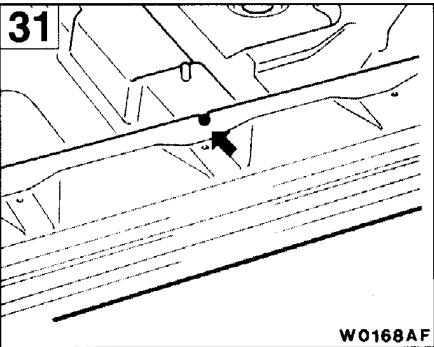


mm

<SPACE WAGON>
TYPE A (PROJECTED DIMENSIONS)

UNDER BODY

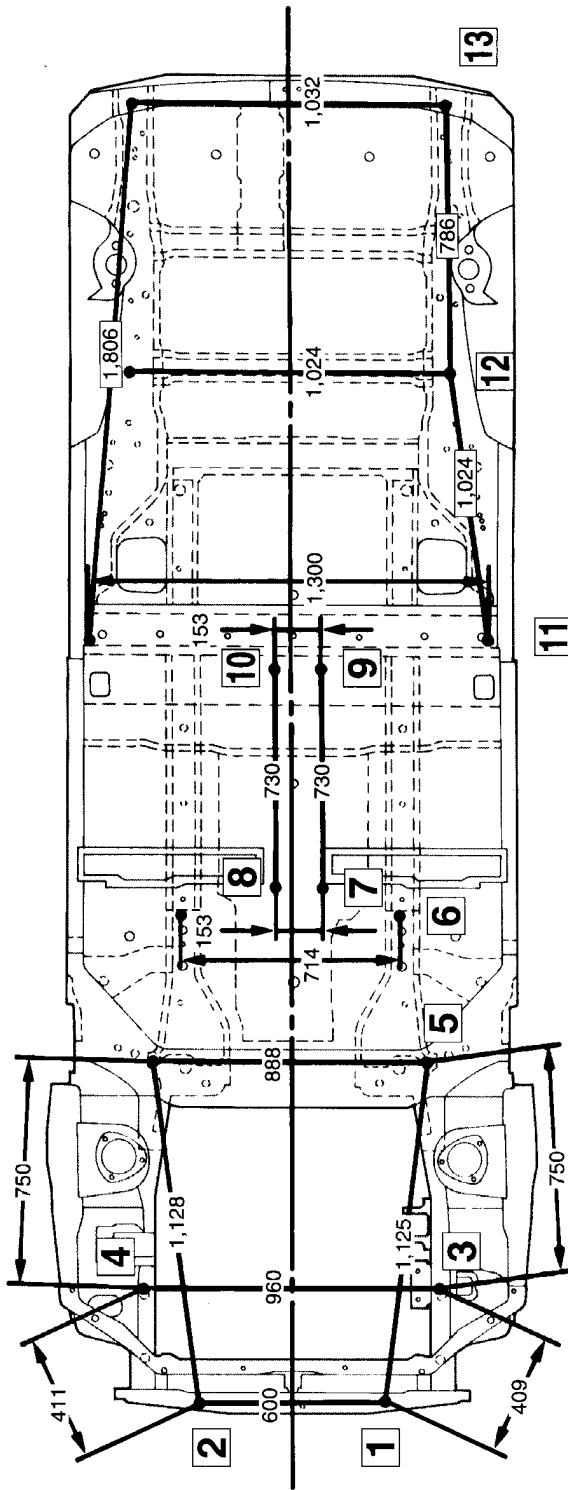


V0038AF

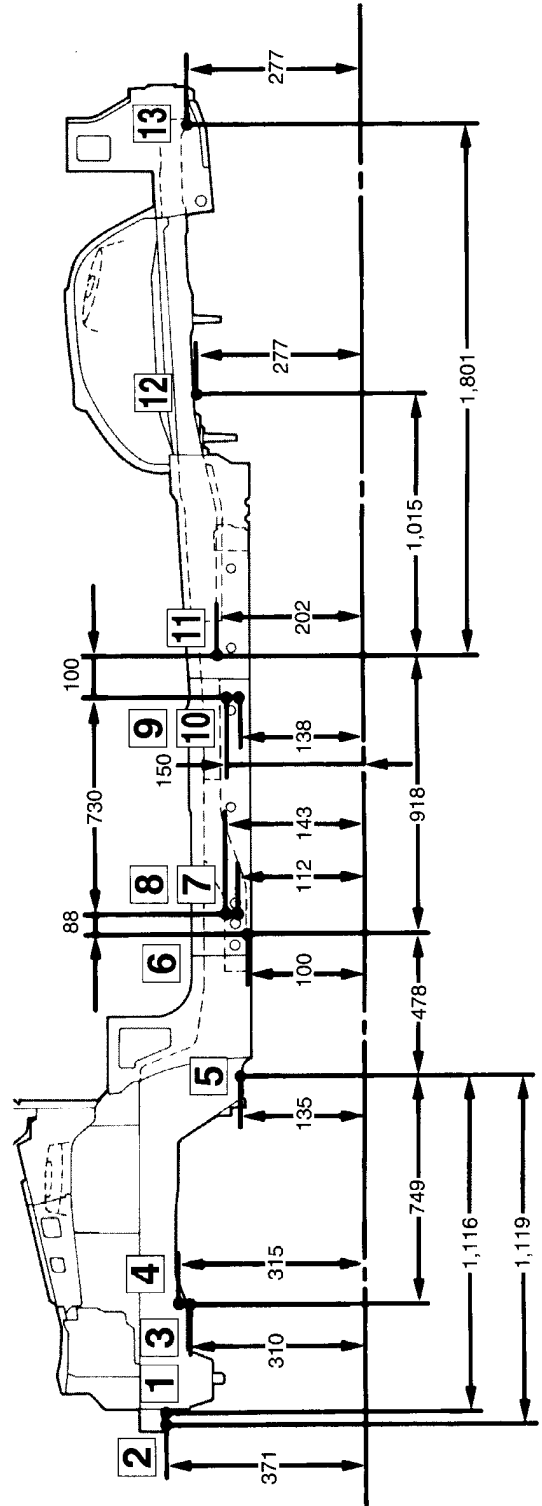

V0039AF

2-18 BODY DIMENSIONS – Type A (Projected Dimensions) <SPACE WAGON>





mm

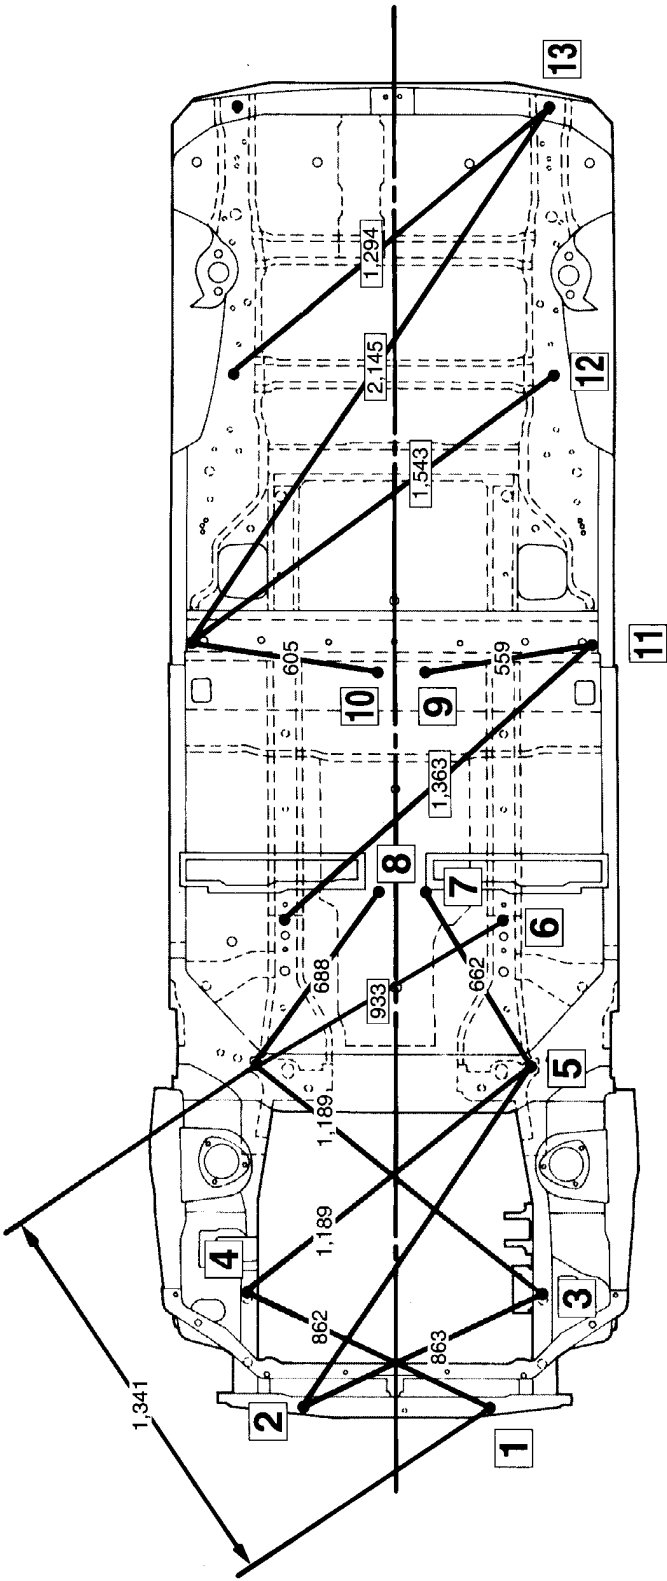

V0040AF


No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm
1	Centre of front bumper face mounting hole	○	7 × 12	6*	Centre of sidemember connection bolt hole	○	11
2	Centre of front bumper face mounting hole	○	8	7	Front of center bearing mounting bolt (4WD)	—	—
3	Rear edge of front sidemember positioning hole	○	30	8	Front of center bearing mounting bolt (4WD)	—	—
4	Rear edge of front sidemember positioning hole	○	30	9	Centre of center bearing mounting hole (4WD)	○	11
5*	Centre of front suspension stay mounting hole	○	15				
				10	Front of center bearing mounting bolt (4WD)	○	10
				11*	Centre of rear floor crossmember (A) drain hole	○	12
				12*	Centre of rear sidemember drain hole	○	12
				13*	Centre of rear end crossmember positioning hole	○	14

NOTE: The * mark indicates the mounting position for the frame centering gauge.

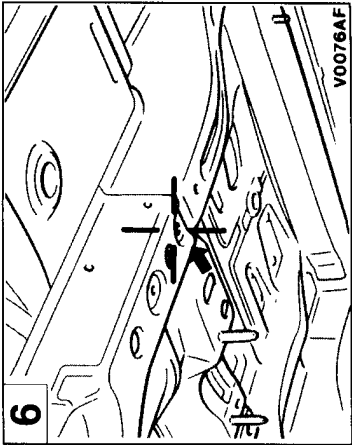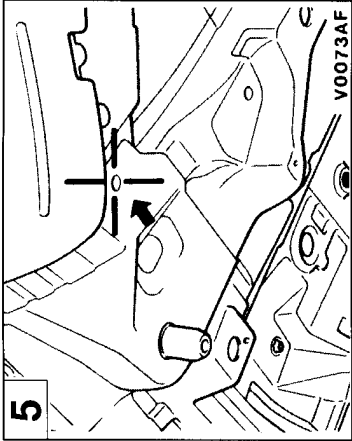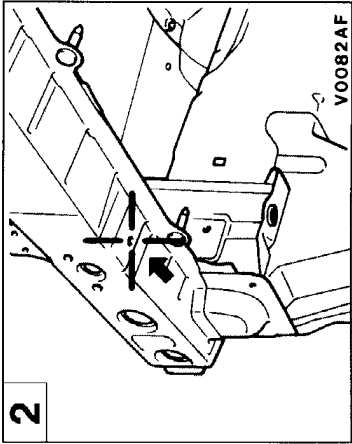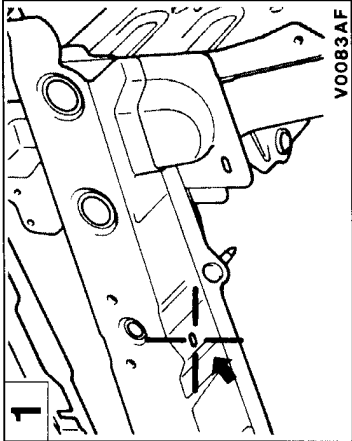


mm

SUSPENSION INSTALLATION DIMENSIONS

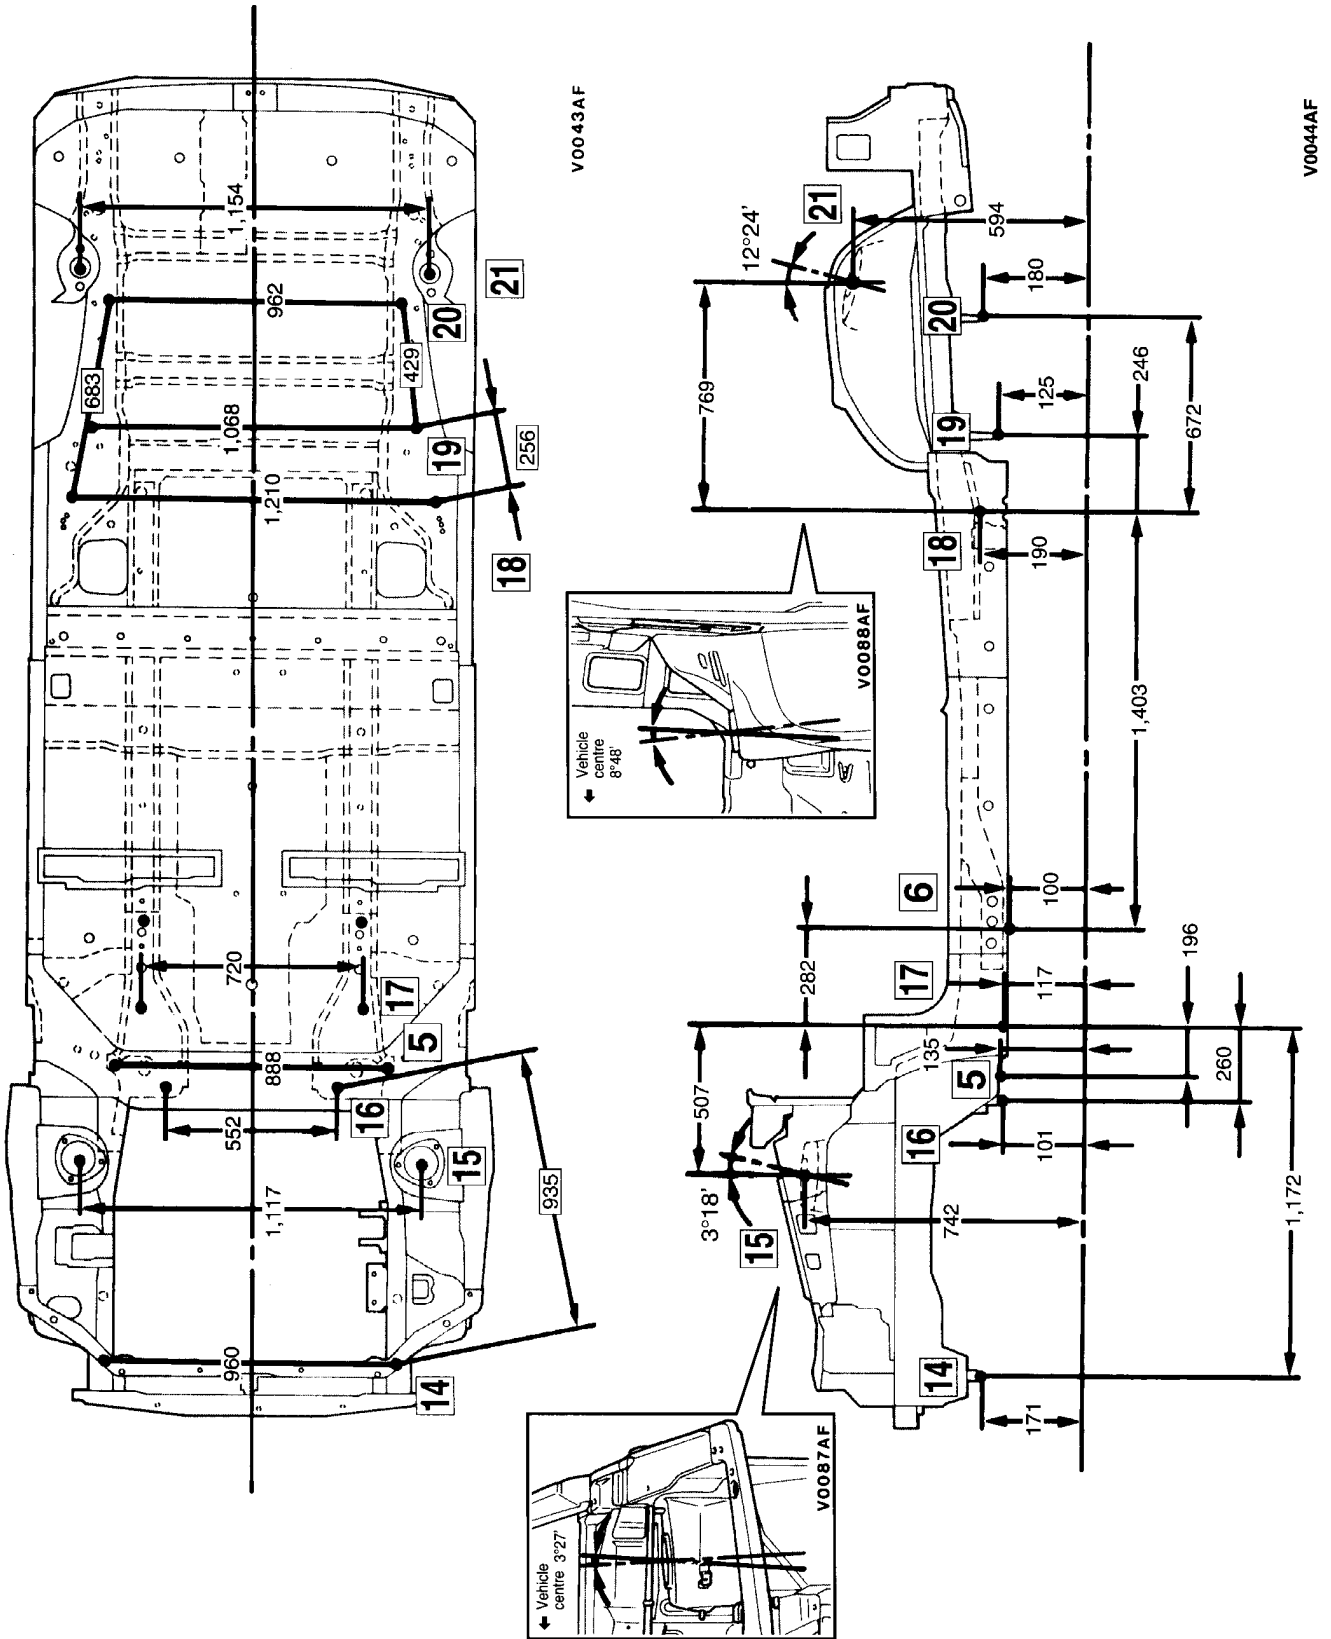





2-20 BODY DIMENSIONS – Type A (Projected Dimensions) <SPACE WAGON>

mm

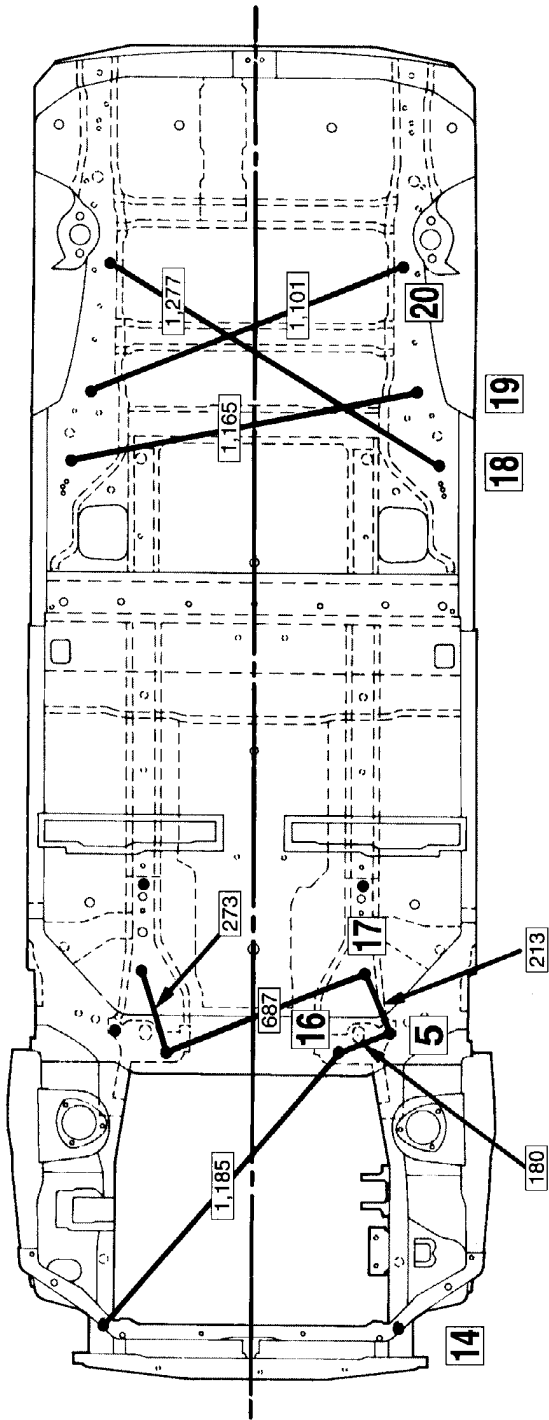

V0045AF


No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm
5	Centre of front suspension stay mounting hole	○	15	16	Centre of front suspension stay mounting hole	○	15
6	Centre of sidemember connection bolt hole	○	11	17	Centre of front suspension stay mounting hole	○	15
14	Centre of frontmember mounting hole	○	15	18	Centre of suspension crossmember mounting hole	○	14
15	Centre of front shock absorber mounting hole	○	103.4	19	Front edge of suspension crossmember mounting hole	○	15
				20	Front edge of rear differential support mounting bolt (4WD)	○	15
				21	Centre of rear shock absorber mounting hole	○	60

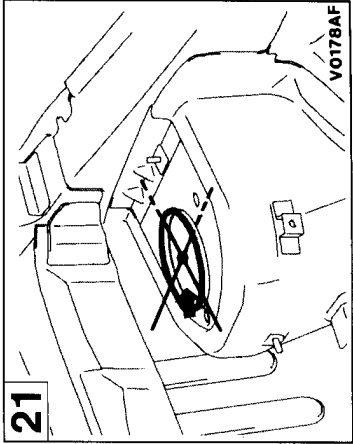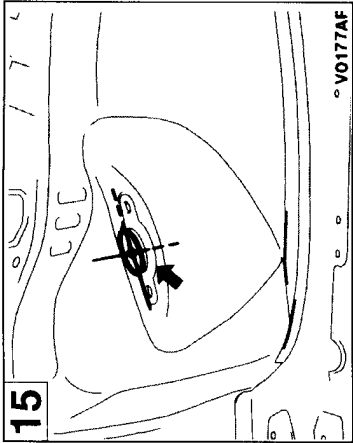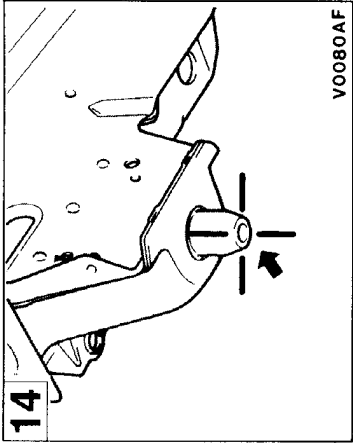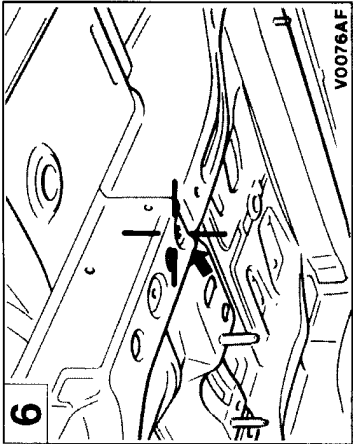


mm

TYPE B (ACTUAL-MEASUREMENT DIMENSIONS)

UNDER BODY

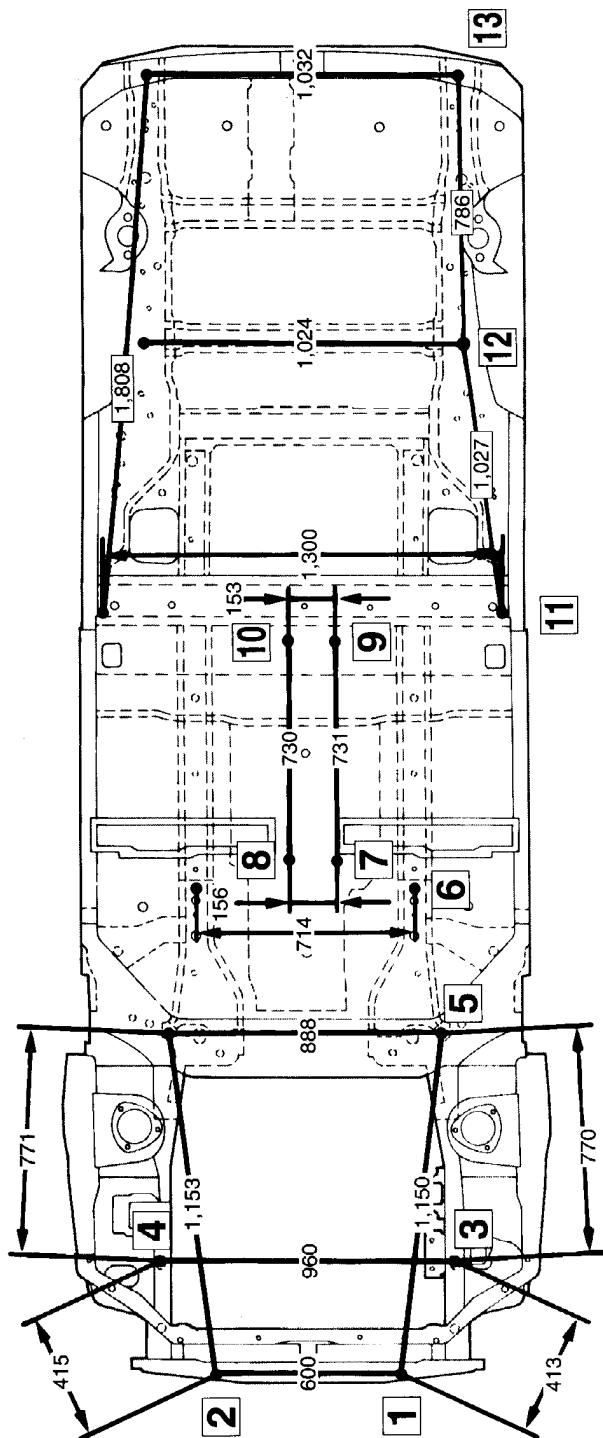









V0041AF

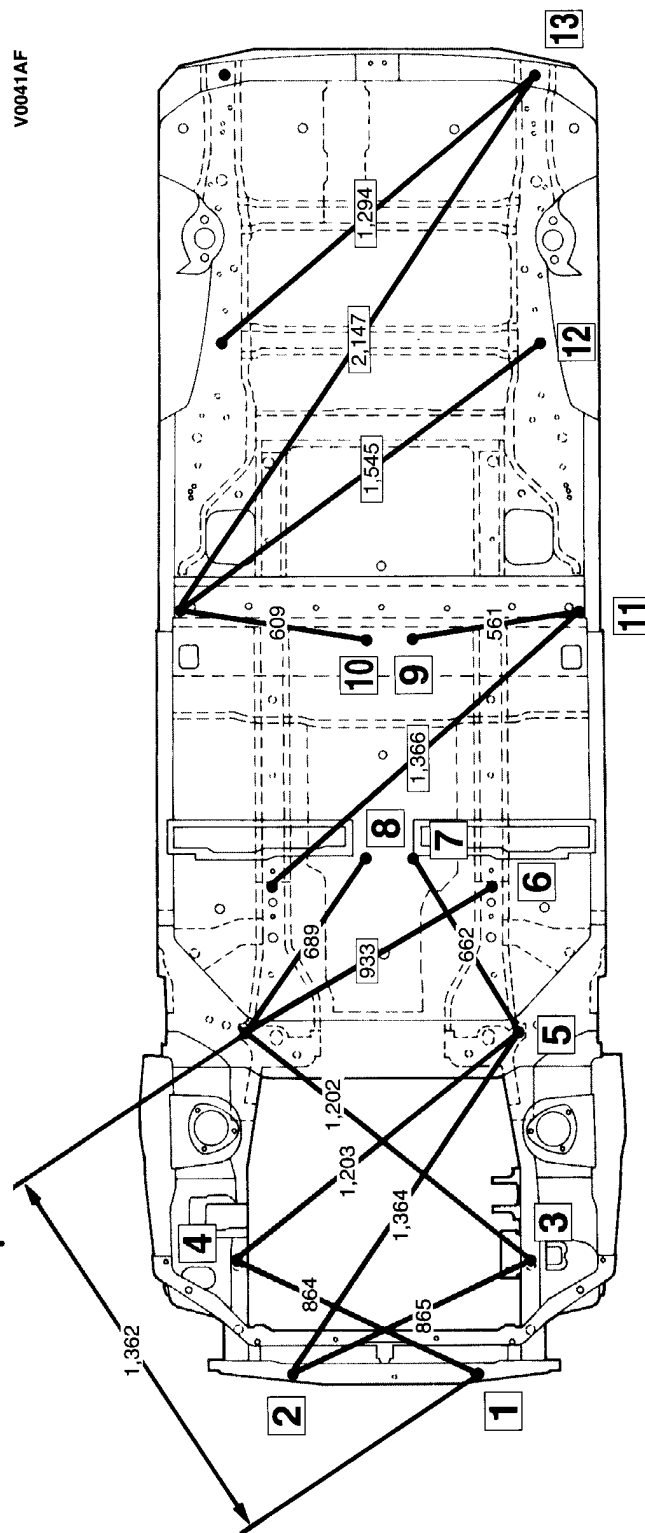

V0042AF


2-22 BODY DIMENSIONS – Type B (Actual-Measurement Dimensions) <SPACE WAGON>

No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm
1	Centre of front bumper face mounting hole	○	7 × 12	6	Centre of sidemember connection bolt hole	○	11	10	Front of center bearing mounting bolt (4WD)	○	—
2	Centre of front bumper face mounting hole	○	8	7	Front of center bearing mounting bolt (4WD)	○	—	11	Centre of rear floor crossmember (A) drain hole	○	10
3	Rear edge of front sidemember positioning hole	○	30	8	Front of center bearing mounting bolt (4WD)	○	—	12	Centre of rear sidemember drain hole	○	12
4	Rear edge of front sidemember positioning hole	○	30	9	Centre of center bearing mounting hole (4WD)	○	11	13	Centre of rear end crossmember positioning hole	○	14
5	Centre of front suspension stay mounting hole	○	15								

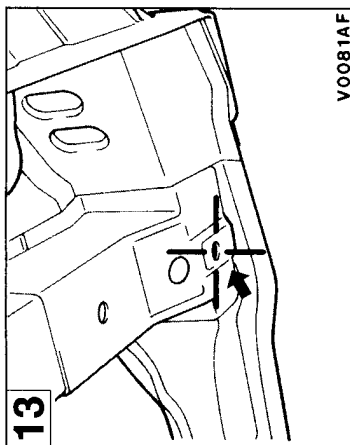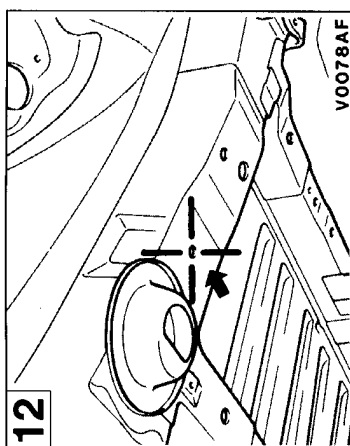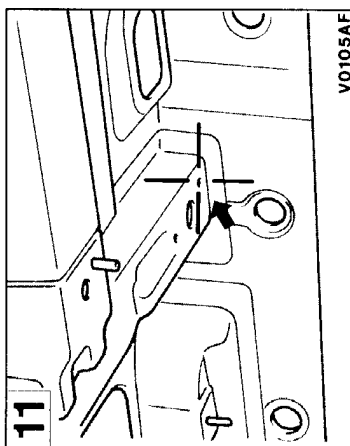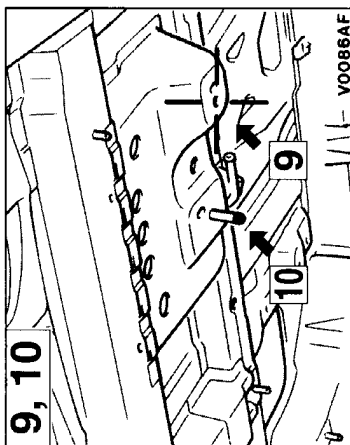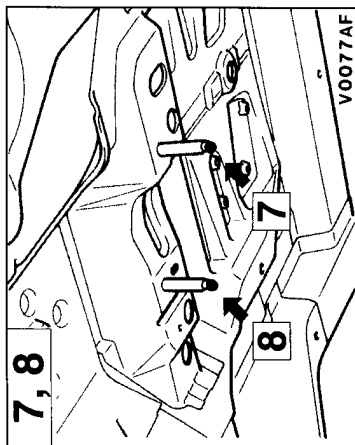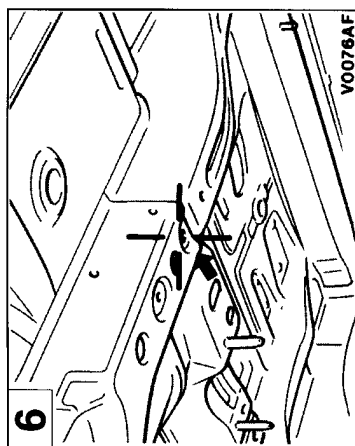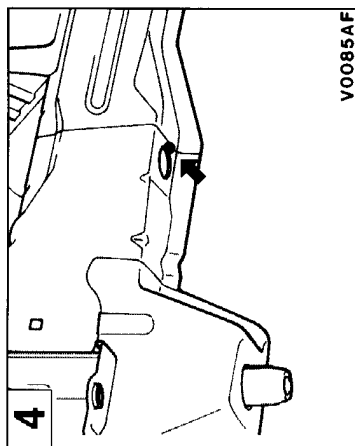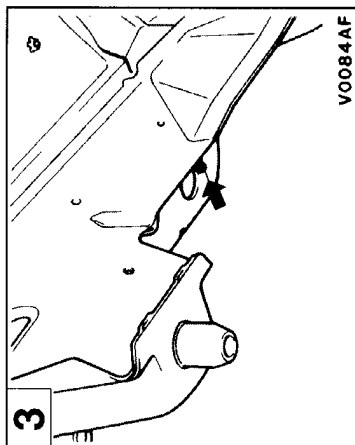


mm

SUSPENSION INSTALLATION DIMENSIONS





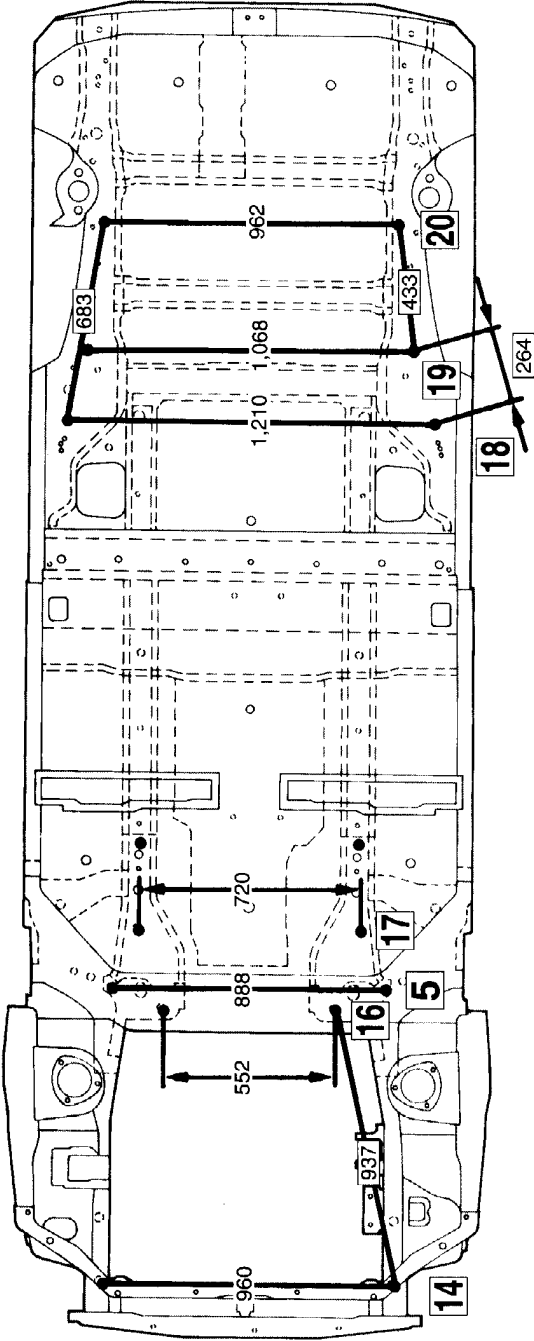


V0046AF

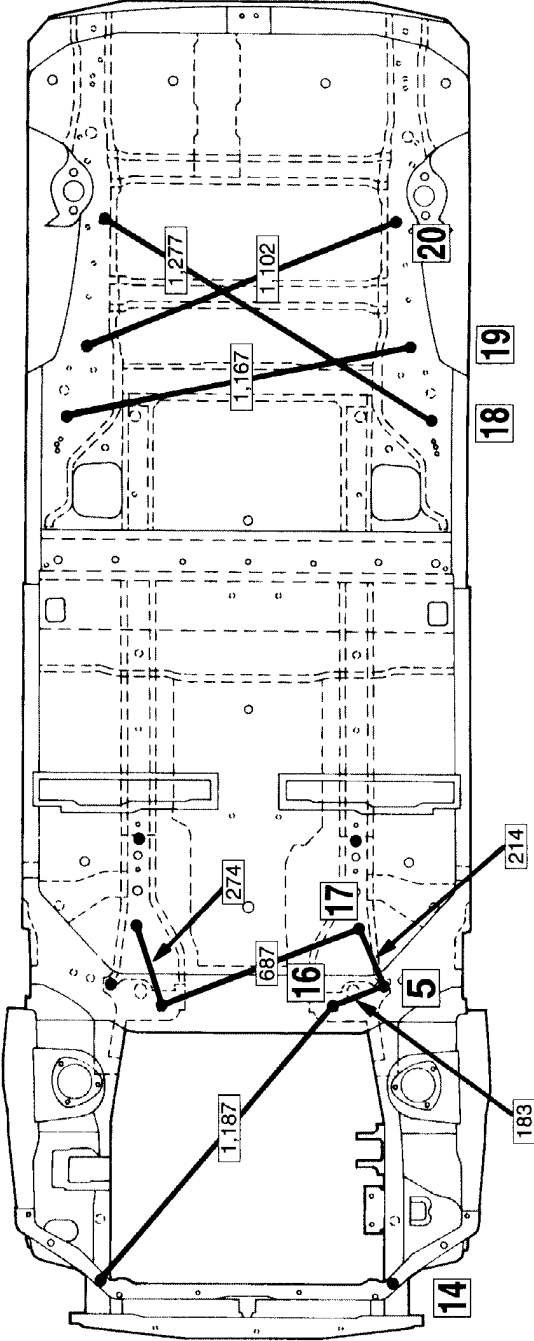


V0047AF

No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm	No.	Standard measurement point	Hole shape	Size mm
5	Centre of front suspension stay mounting hole	○	15	17	Centre of front suspension stay mounting hole	○	15	19	Front edge of suspension crossmember mounting bolt	—	—
14	Centre of frontmember mounting hole	○	15	18	Centre of suspension crossmember mounting hole	○	14	20	Front of rear differential support mounting bolt (4WD)	—	—
16	Centre of front suspension stay mounting hole	○	15								

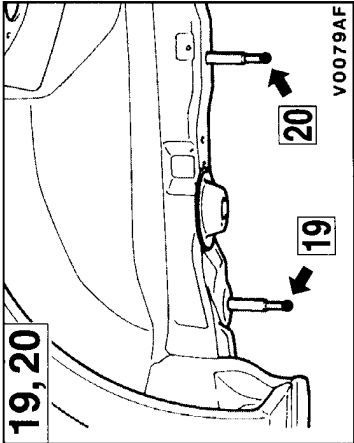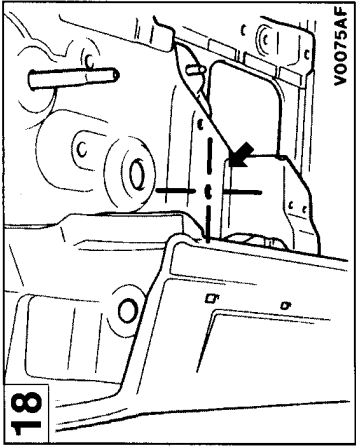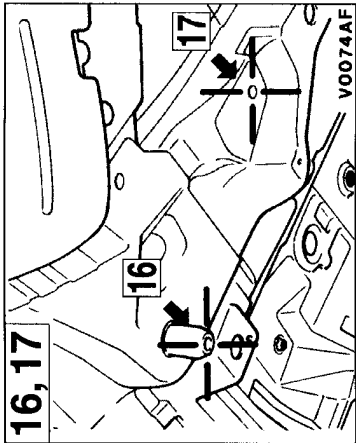
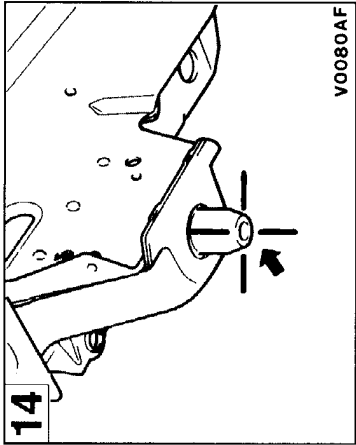
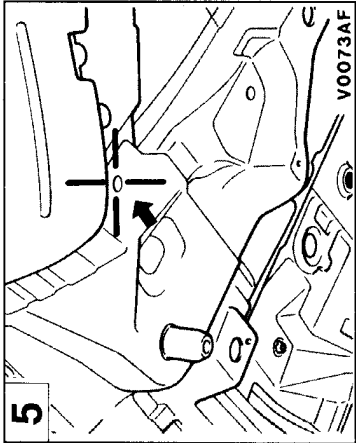


FRONT BODY

mm

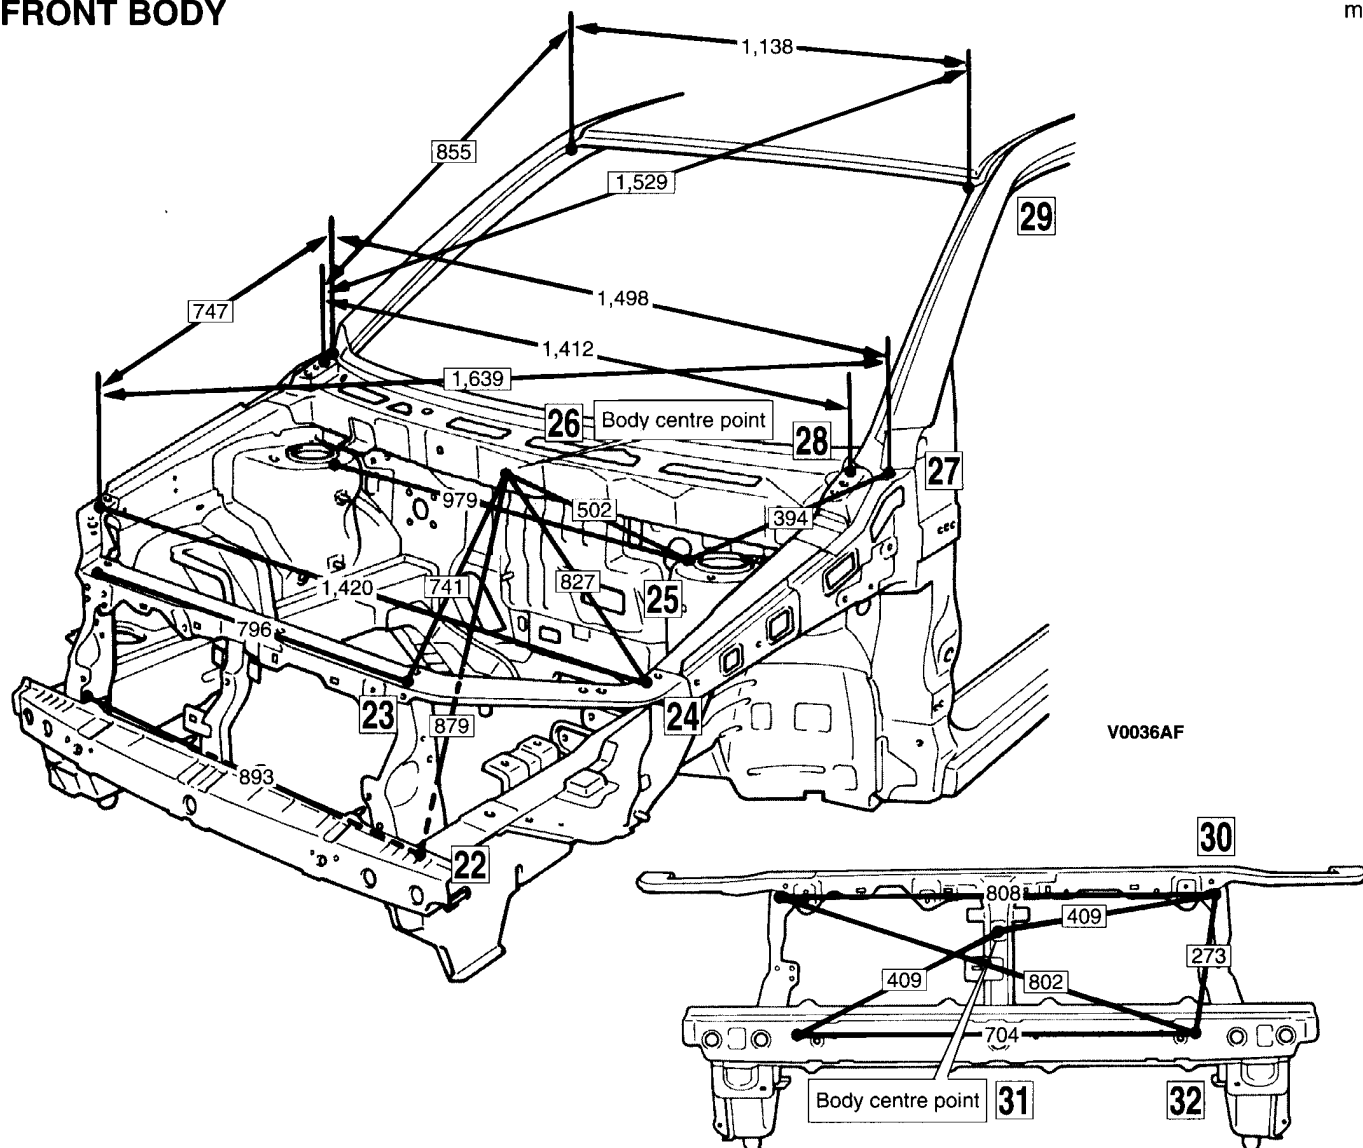


No.	Standard measurement point	Hole shape — Size mm	No.	Standard measurement point	Hole shape — Size mm
22	Centre of dynamic damper mounting hole	○ — 11	28	Centre of hood hinge mounting hole	○ — 9
23	Centre of radiator mounting hole	○ — 9	29	Corner of roof panel	—
24	Centre of front fender mounting hole	○ — 6.6	30	Centre of headlamp mounting hole	○ — 6.6
25	Centre of strut mounting hole	○ — 11.5	31	Centre of hood latch mounting hole	○ — 6.8
26	Body centre point	—	32	Centre of air guide panel mounting hole	○ — 9
27	Centre of front fender mounting hole	○ — 6.6			

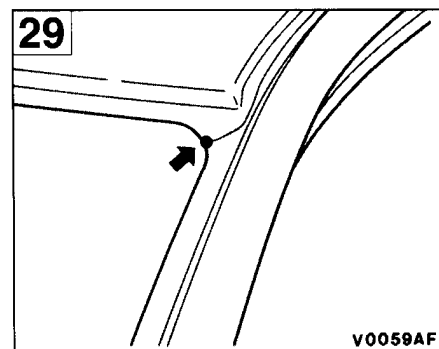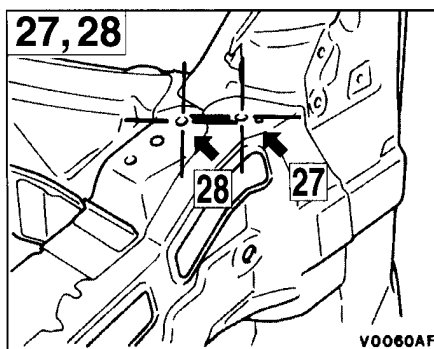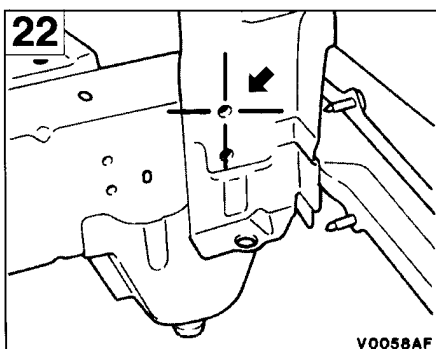


2-26 BODY DIMENSIONS – Type B (Actual-Measurement Dimensions) <SPACE WAGON>

SIDE BODY

mm

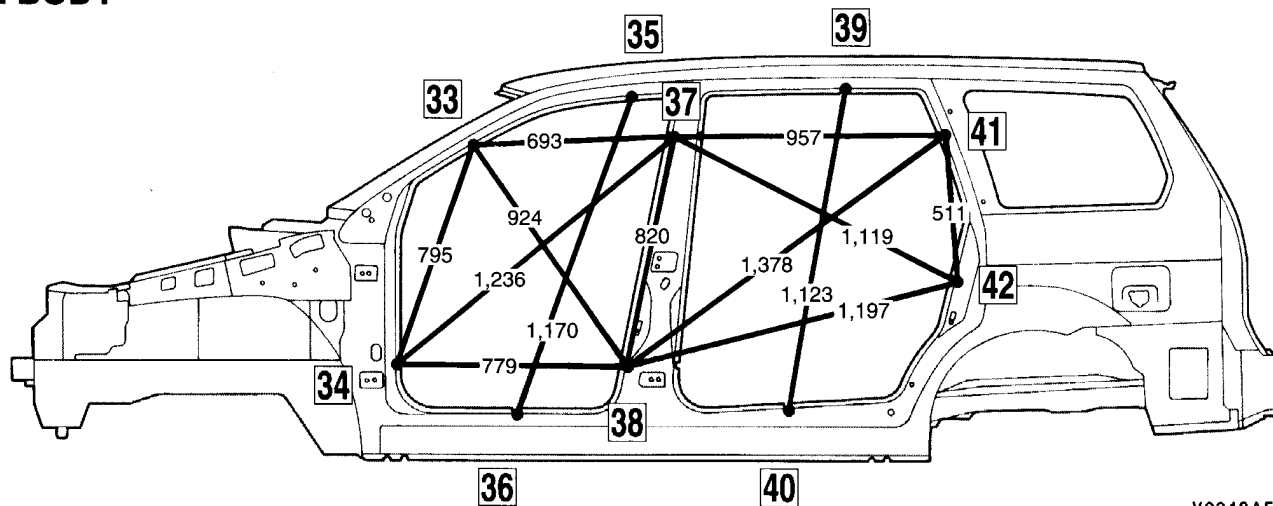


V0048AF

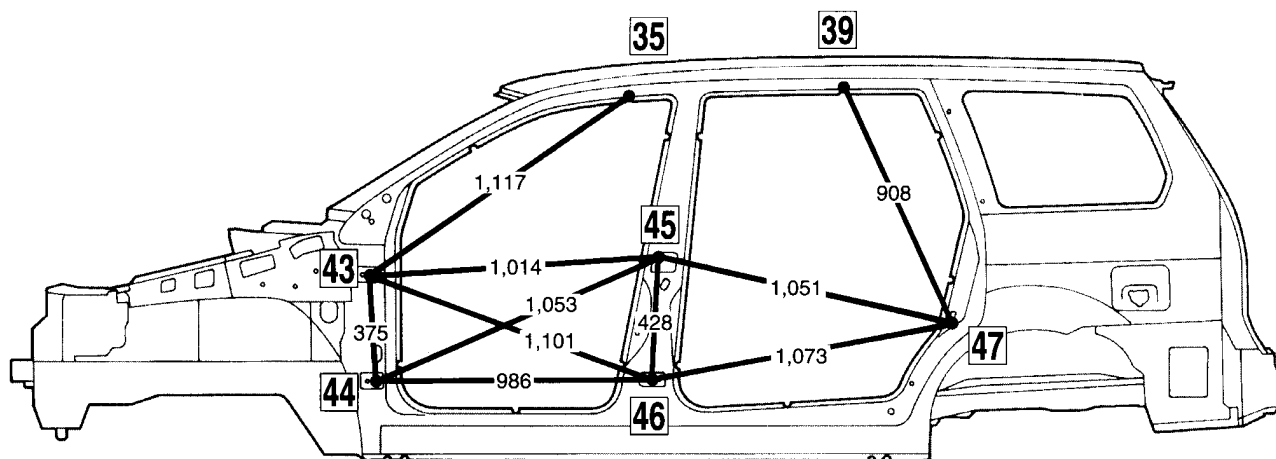


V0049AF


No.	Standard measurement point	Hole shape — Size mm	No.	Standard measurement point	Hole shape — Size mm
33	Front pillar positioning notch (upper)	—	41	Quarter panel positioning notch (upper)	—
34	Front pillar positioning notch (lower)	—	42	Quarter panel positioning notch (lower)	—
35	Side roof rail positioning notch (front)	—	43	Centre of front door hinge mounting hole (upper)	○ — 11
36	Side sill positioning notch (front)	—	44	Centre of front door hinge mounting hole (lower)	○ — 11
37	Center pillar positioning notch (upper)	—	45	Centre of rear door hinge mounting hole (upper)	○ — 10
38	Center pillar positioning notch (lower)	—	46	Centre of rear door hinge mounting hole (lower)	○ — 10
39	Side roof rail positioning notch (rear)	—	47	Centre of rear door switch mounting hole	○ — 5
40	Side sill positioning notch (rear)	—			

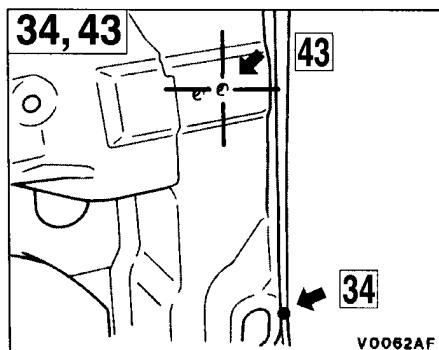

V0062AF

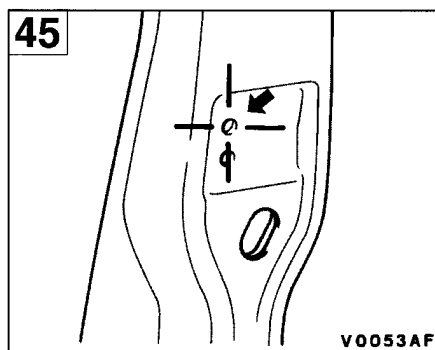


V0053AF

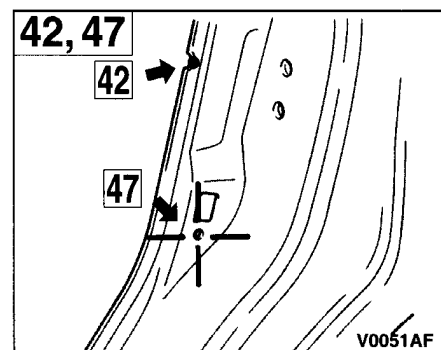





V0051AF

REAR BODY

mm

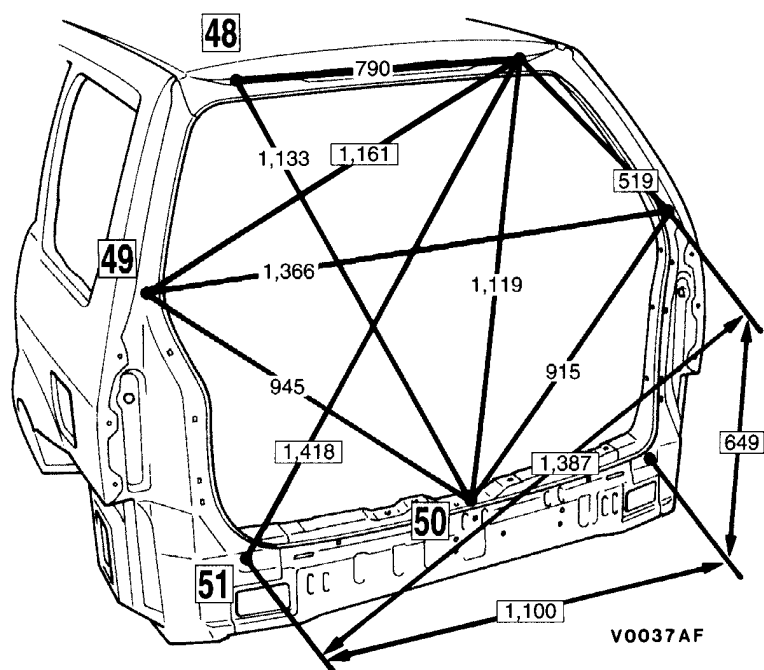


No.	Standard measurement point	Hole shape — Size mm	No.	Standard measurement point	Hole shape — Size mm
48	Centre of tailgate hinge mounting hole	○ — 11	50	Centre of tailgate striker mounting hole	○ — 14 × 11
49	Centre of tailgate gas spring mounting hole	○ — 11	51	Centre of rear bumper mounting hole	□ — 8.5 × 8.5

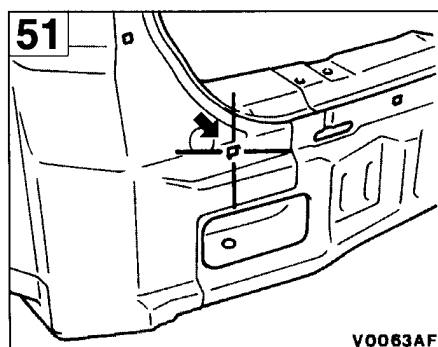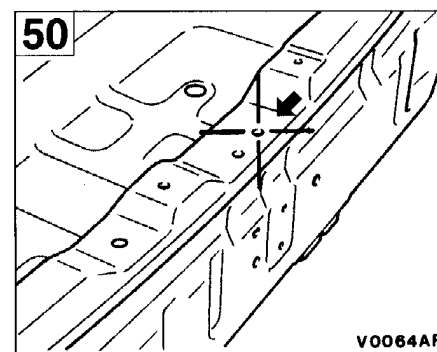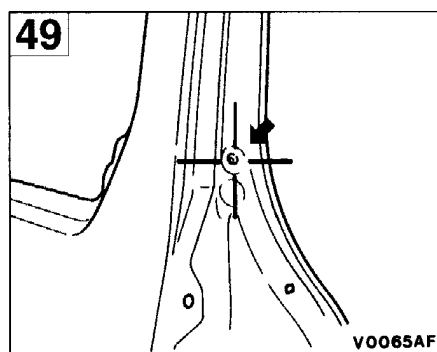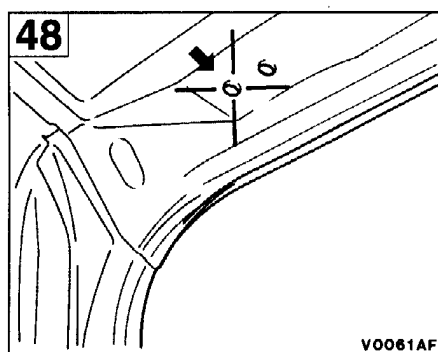

2-28 BODY DIMENSIONS – Type B (Actual-Measurement Dimensions) <SPACE WAGON>

INTERIOR

mm

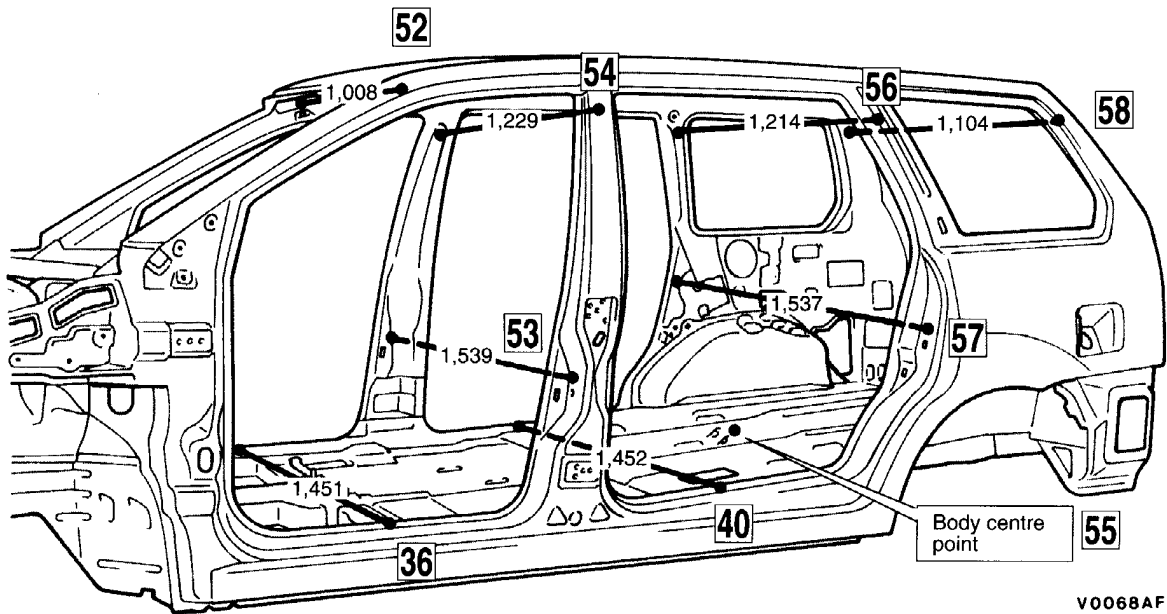

No.	Standard measurement point	Hole shape — Size mm	No.	Standard measurement point	Hole shape — Size mm
36	Side sill positioning notch (front)	—	55	Body centre point	—
40	Side sill positioning notch (rear)	—	56	Centre of second seatbelt anchor mounting hole	○ – 13.5
52	Centre of sun visor mounting hole	○ – 5.5	57	Centre of rear door striker mounting hole	○ – 14
53	Centre of front door striker mounting hole	○ – 14	58	Centre of third seatbelt mounting hole	○ – 12
54	Centre of front seatbelt anchor mounting hole	○ – 14			

