

SECTION 501-02 Front End Body Panels

VEHICLE APPLICATION: 2011.00 Focus

CONTENTS	PAGE
GENERAL PROCEDURES	
Hood Alignment..... (41 213 0)	501-02-2
REMOVAL AND INSTALLATION	
Cowl Panel Grille.....	501-02-4
Fender.....	501-02-6
Air Deflector.....	501-02-7

GENERAL PROCEDURES

Hood Alignment(41 213 0)


Adjustment

1. **NOTE:** Adjust the hood without the hood latch.

Remove the hood latch. For additional information, refer to **Section 501-14 [Handles, Locks, Latches and Entry Systems]**.


2. **NOTE:** It is not possible to adjust the rear of the hood to the height of the fender.

Slacken the screws of the hood hinge approximately half a turn.

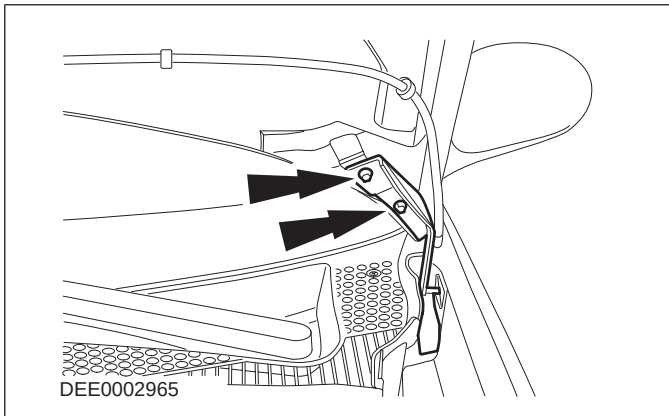

3. **Adjust the hood in the longitudinal direction.**


1. Adjust the hood so that the rear edges of the fender and the edge of the hood line up.
2. Check that the clearances with the left and right-hand fenders run parallel and correct them if necessary.

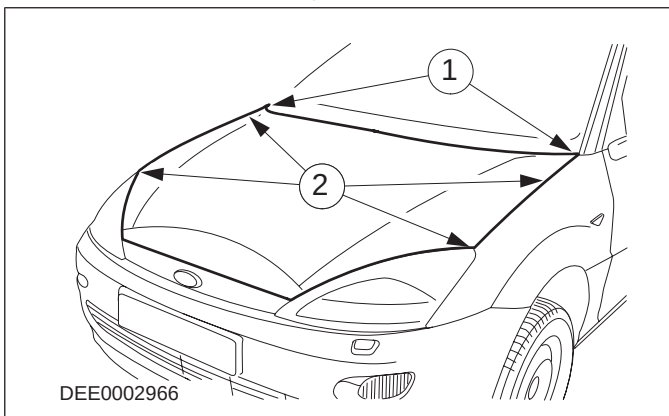


4. **Adjust the clearances with the left and right-hand fenders.**

- The clearances with the fenders must be the same width on the left and right-hand sides. The clearances can be equalized by opening

the hood on the hood support rod and correcting by pressing it to the left or right.

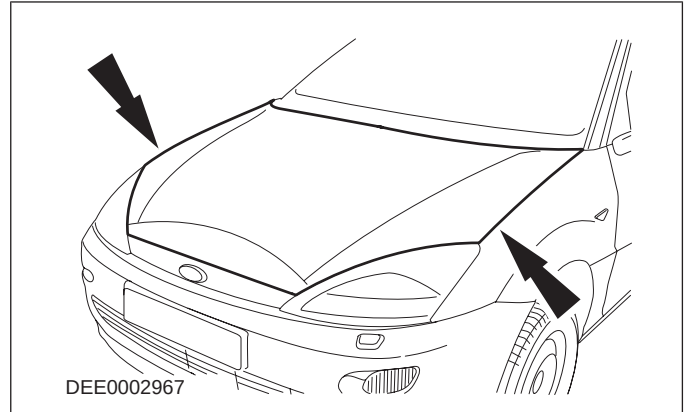


5. **Tighten the screws.**

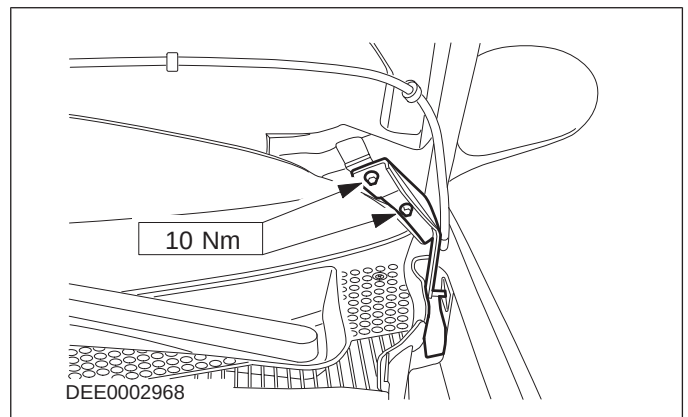

6. **NOTE:** The hood must rest uniformly on both bump stop rubbers.

Adjust the front of the hood to the height of the fenders.

- Adjust the hood to the height of the fenders with the bump stop rubbers.

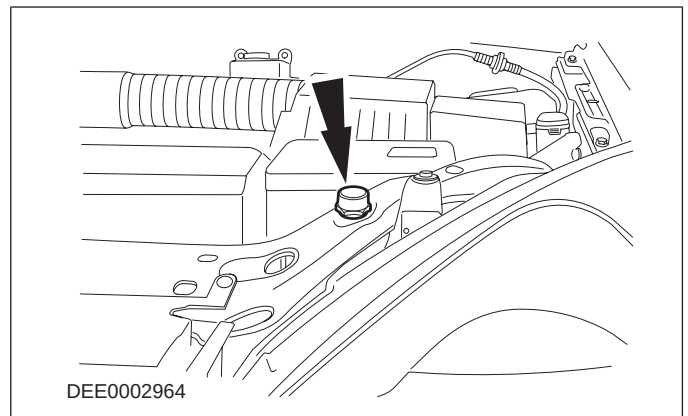

GENERAL PROCEDURES

7. NOTE: The clearances and edge alignment must be correct before the hood latch is installed.

Install the hood latch.


- The hood latch must be installed so that the hood engages without stress and the clearances on the left and right-hand sides are not changed.

REMOVAL AND INSTALLATION

Cowl Panel Grille


1. Remove the brake fluid reservoir from the cowl panel.

2. Remove the components in the order indicated in the following illustration(s) and table(s).

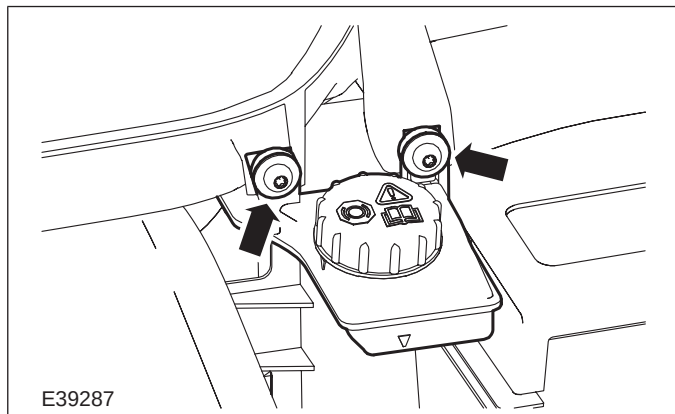

CAUTION: Ensure that the wiper motor is in the park position.

NOTE: Left-hand side shown.

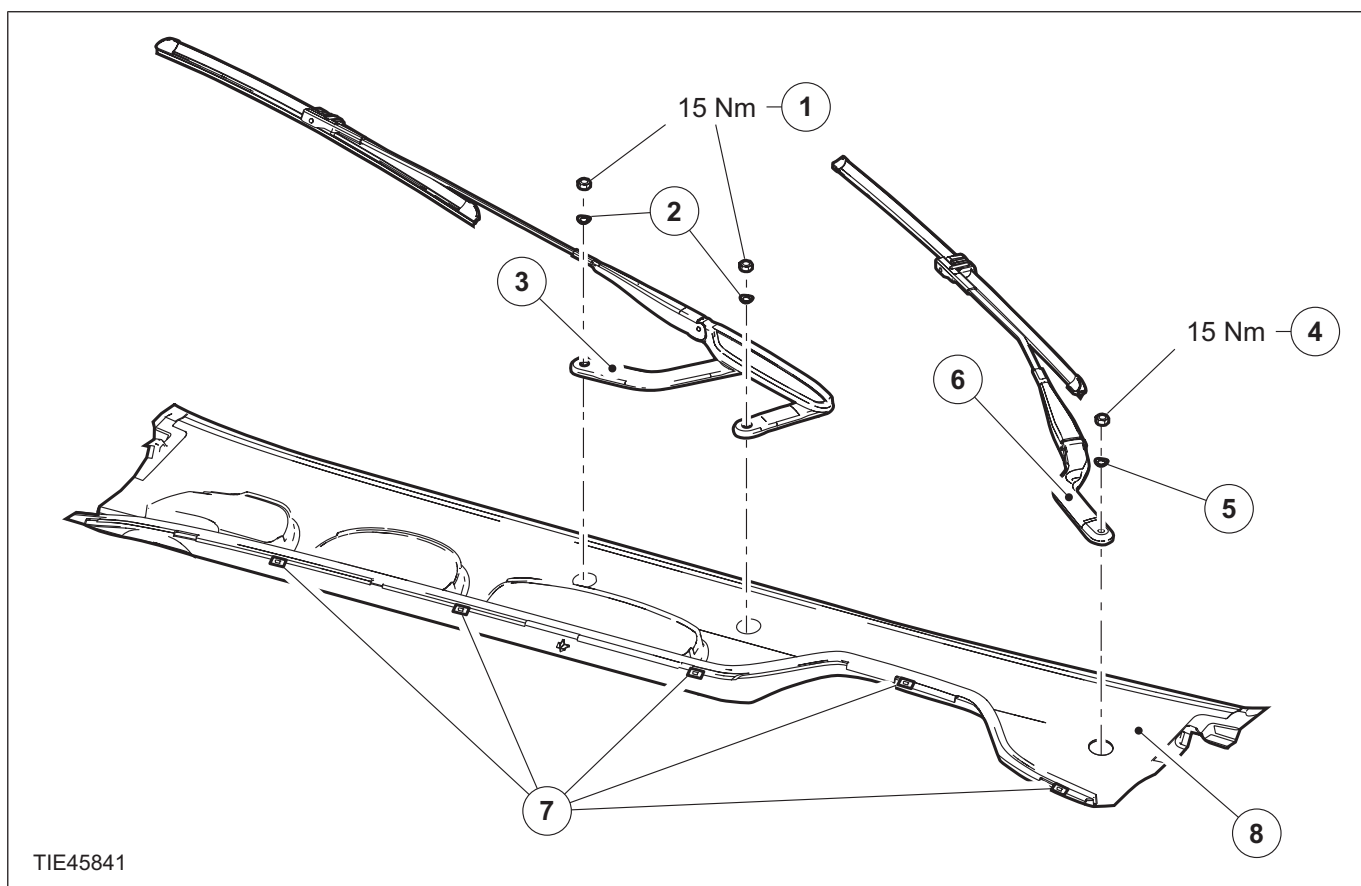

Item	Description
1	Windshield wiper arm bolts (passenger side)
2	Windshield wiper arm washer (passenger side)

Item	Description
3	Windshield wiper arm (passenger side)
4	Windshield wiper arm bolts (driver side)
5	Windshield wiper arm washer (driver side)
6	Windshield wiper arm (driver side)

REMOVAL AND INSTALLATION

Item	Description
7	Cowl panel clips
8	Cowl panel

3. To install, reverse the removal procedure.

REMOVAL AND INSTALLATION

Fender

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Detach the wheel and tire.

Refer to: Wheel and Tire (204-04 Wheels and Tires, Removal and Installation).


2. Detach the front bumper cover.

Refer to: Front Bumper Cover - 2.5L Duratec-ST (VI5) (501-19 Bumpers, Removal and Installation).


3. Remove the cowl panel grille.

Refer to: Cowl Panel Grille (501-02 Front End Body Panels, Removal and Installation).

4. 1. Torque: 5 Nm
2. Torque: 7 Nm

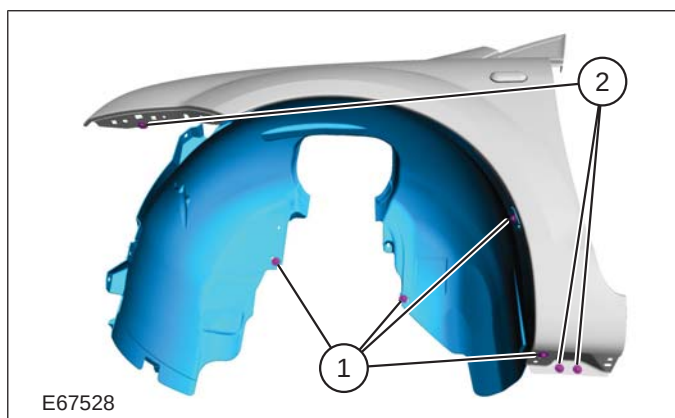


5. Torque: 7 Nm

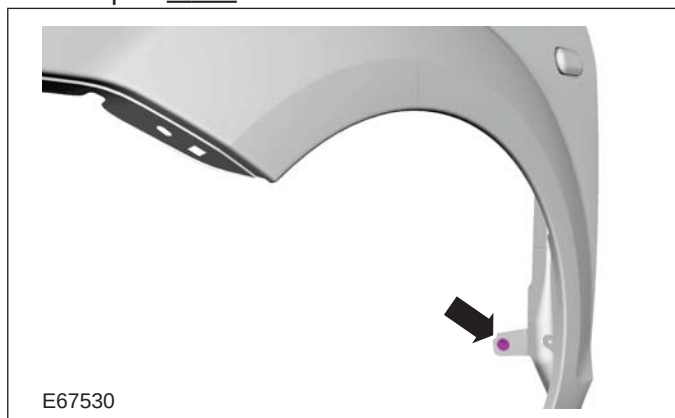

6. Torque: 7 Nm



7. Torque: 7 Nm

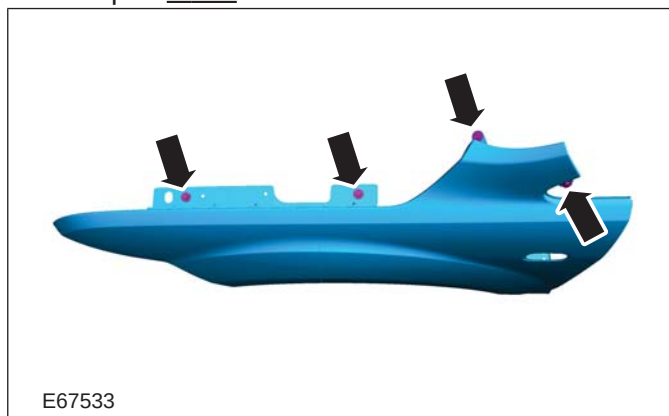


Installation

1. To install, reverse the removal procedure.


REMOVAL AND INSTALLATION**Air Deflector****Removal**

1. **Refer to: Lifting** (100-02 Jacking and Lifting, Description and Operation).


- 2.

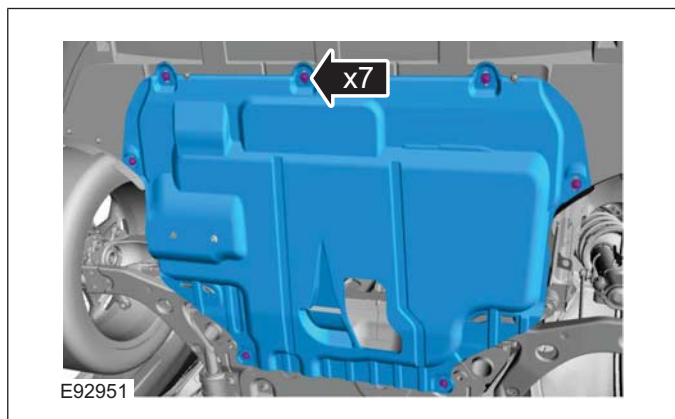

- 3.

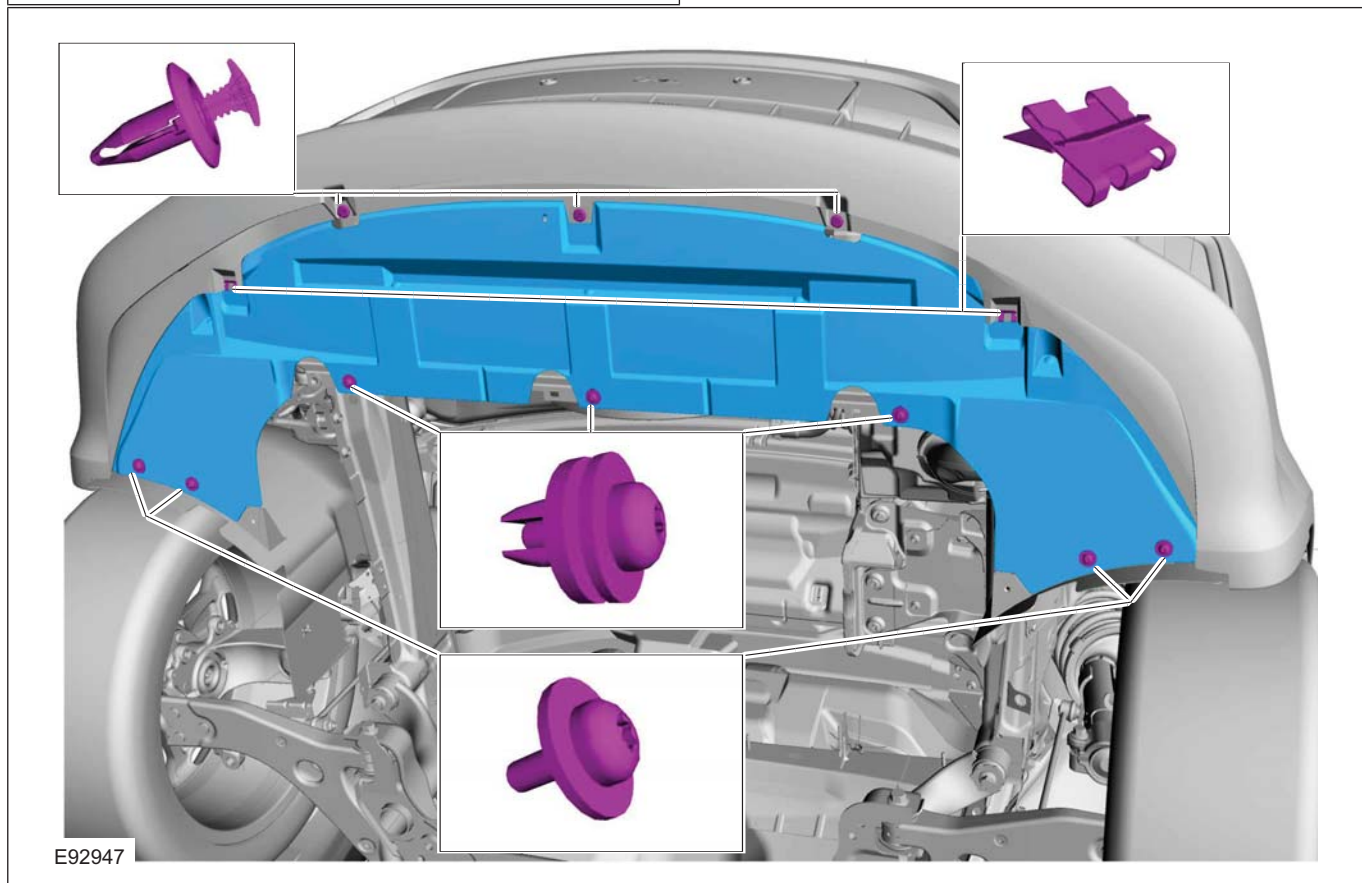

- 4.

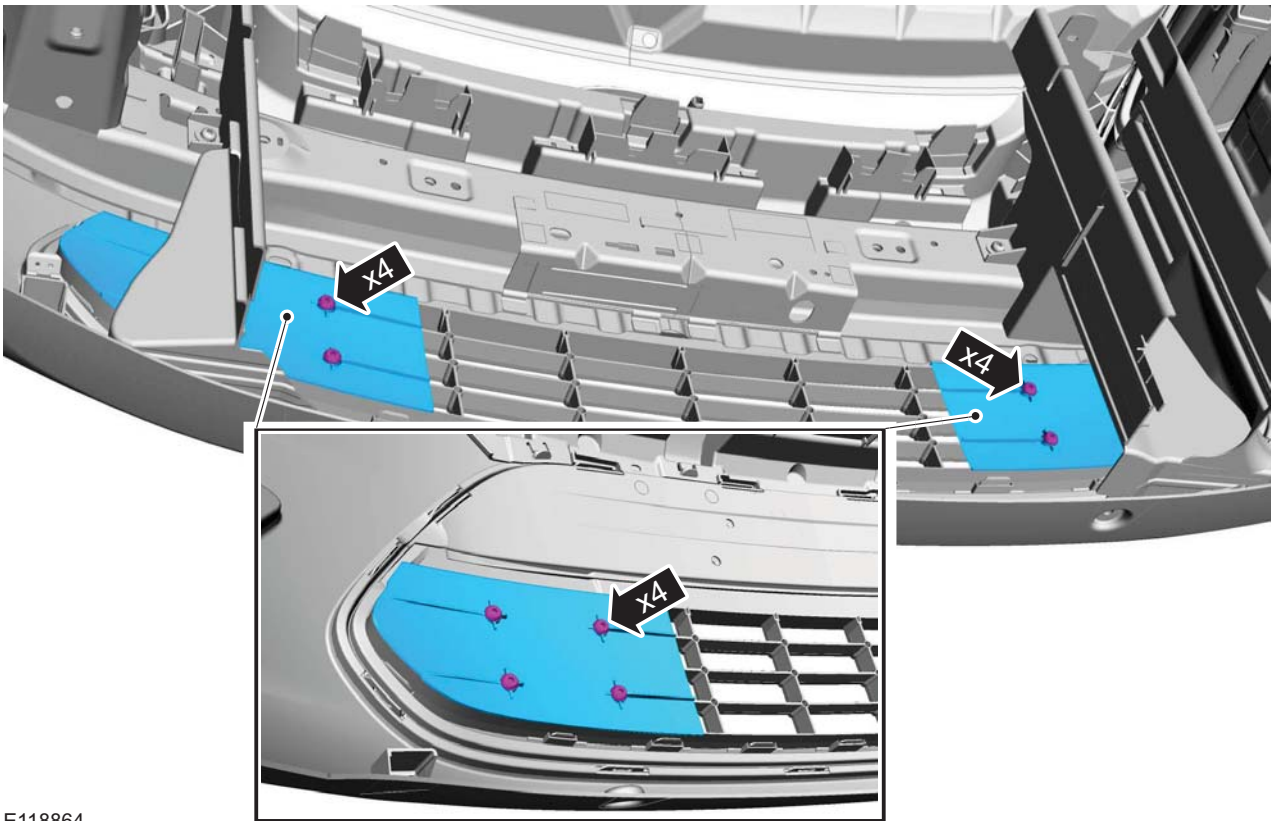REMOVAL AND INSTALLATION**Installation**

1. To install, reverse the removal procedure.