

SECTION 501-05 Interior Trim and Ornamentation

VEHICLE APPLICATION: 2011.00 Focus

CONTENTS	PAGE
SPECIFICATIONS	
Specifications.....	501-05-2
REMOVAL AND INSTALLATION	
A-Pillar Trim Panel.....	501-05-3
B-Pillar Trim Panel — 3-Door.....	501-05-5
B-Pillar Trim Panel — 4-Door/5-Door.....	501-05-7
C-Pillar Trim Panel — 3-Door.....	501-05-11
C-Pillar Trim Panel — 4-Door/5-Door.....	501-05-14
D-Pillar Trim Panel — 5-Door.....	501-05-16
Front Door Trim Panel — 3-Door.....	501-05-19
Front Door Trim Panel — 4-Door/5-Door/Wagon.....	501-05-22
Rear Door Trim Panel — Vehicles With: Manual Windows.....	501-05-25
Rear Door Trim Panel — Vehicles With: Power Windows.....	501-05-29
Front Scuff Plate Trim Panel.....	501-05-34
Rear Scuff Plate Trim Panel.....	501-05-37
Loadspace Trim Panel — 3-Door.....	501-05-38
Loadspace Trim Panel — 5-Door.....	501-05-42
Headliner — 3-Door, Vehicles With: Sliding Roof Opening Panel.....	501-05-46
Headliner — 5-Door, Vehicles With: Sliding Roof Opening Panel.....	501-05-58
Headliner — 3-Door, Vehicles Without: Sliding Roof Opening Panel.....	501-05-68
Headliner — 5-Door, Vehicles Without: Sliding Roof Opening Panel.....	501-05-80
Rear Quarter Trim Panel — 3-Door.....	501-05-90
Rear Quarter Trim Panel — 5-Door/Wagon.....	501-05-94


SPECIFICATIONS**Torque Specifications**

Description	Nm	lb-ft	lb-in
Front seat belt lower anchor retaining bolt	38	28	-
Rear seat belt lower anchor retaining bolt	38	28	-
Front door trim panel retaining bolts	8	-	71
Rear door trim panel retaining bolts	8	-	71

REMOVAL AND INSTALLATION

A-Pillar Trim Panel

1. Remove the components in the order indicated in the following illustration(s) and table(s).

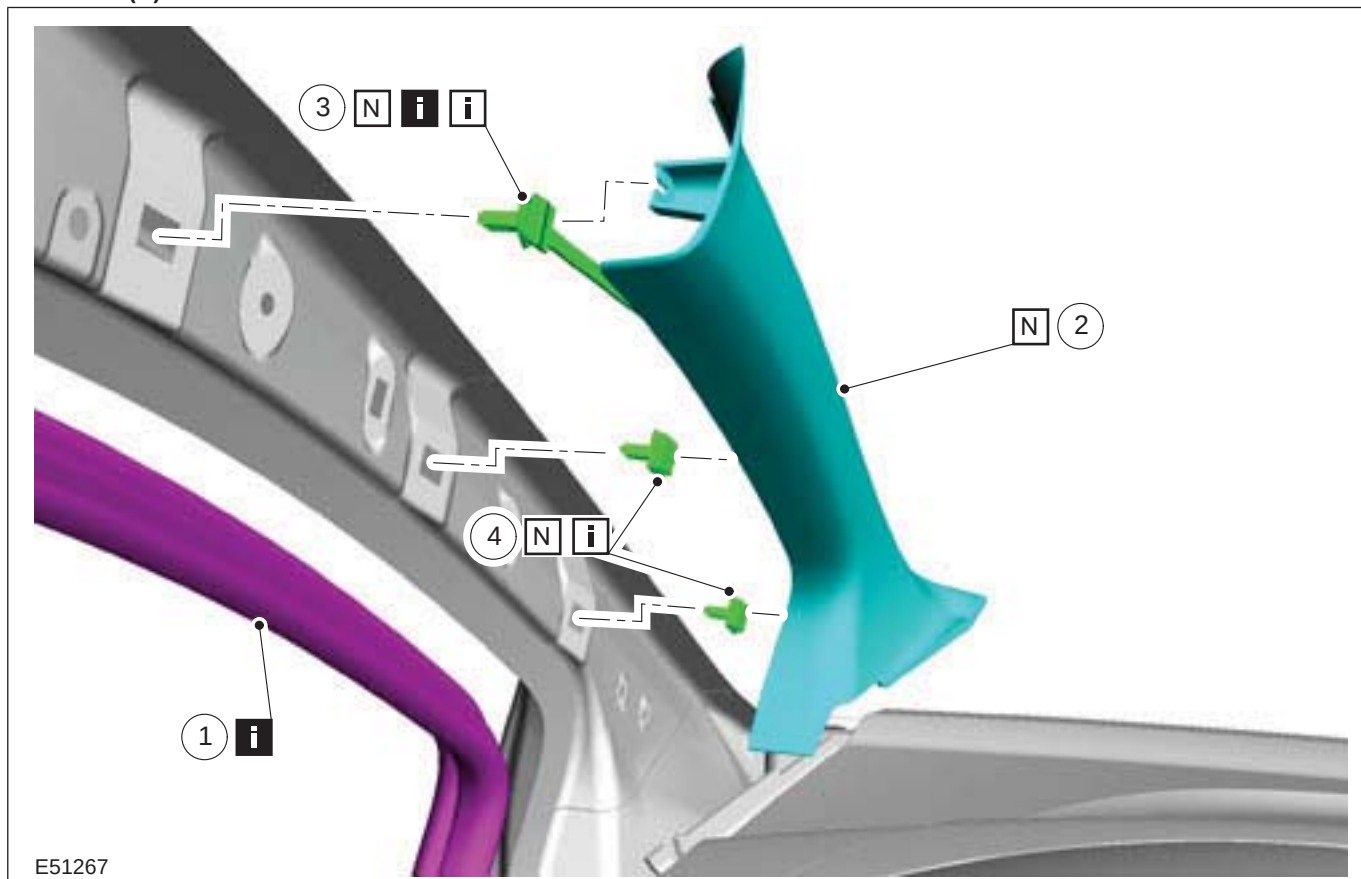

Item	Description
1	Front door opening weatherstrip See Removal Detail
2	A-pillar trim panel

Item	Description
3	A-pillar trim panel security strap See Removal Detail See Installation Detail
4	A-pillar trim panel retaining clips See Installation Detail

2. To install, reverse the removal procedure.


Removal Details

Item 1 Front door opening weatherstrip


1. Detach the front door opening weatherstrip.

REMOVAL AND INSTALLATION**Item 3 A-pillar trim panel security strap**

1. Remove the security strap from the A-pillar.

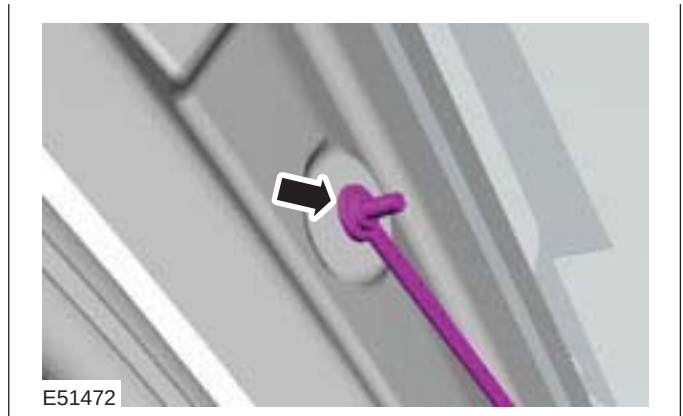**Installation Details****Item 3 A-pillar trim panel security strap**

1. Install the A-pillar trim panel security strap to the A-pillar.

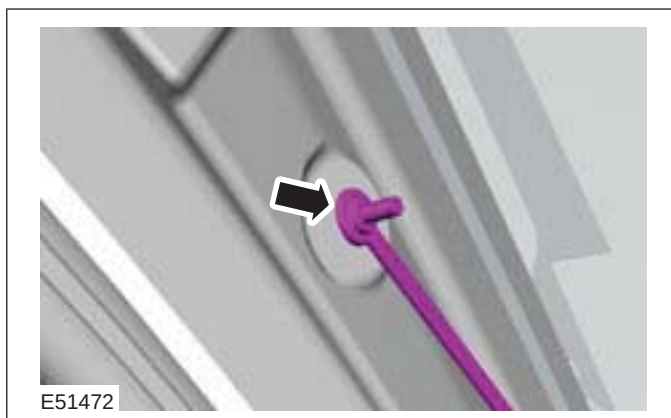**Item 4 A-pillar trim panel retaining clips**

1. Install the A-pillar trim panel retaining clips to the A-pillar trim panel.

REMOVAL AND INSTALLATION


B-Pillar Trim Panel — 3-Door

⚠ CAUTION: The bolt securing the safety belt anchor is held captive by a metal washer. The bolt, spacer and metal washer must remain on the safety belt anchor at all times when the safety belt is detached or removed.


1. Detach the safety belt lower anchor.

- 1. Remove the front safety belt lower anchor retaining bolt.

- 2. Slide the safety belt off the anchor rail.

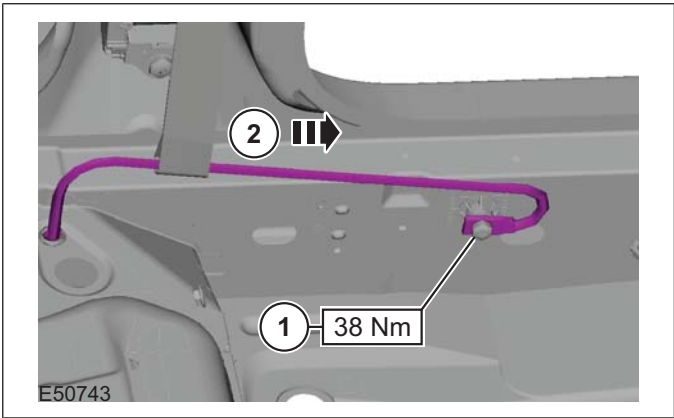

- 2. Remove the components in the order indicated in the following illustration(s) and table(s).

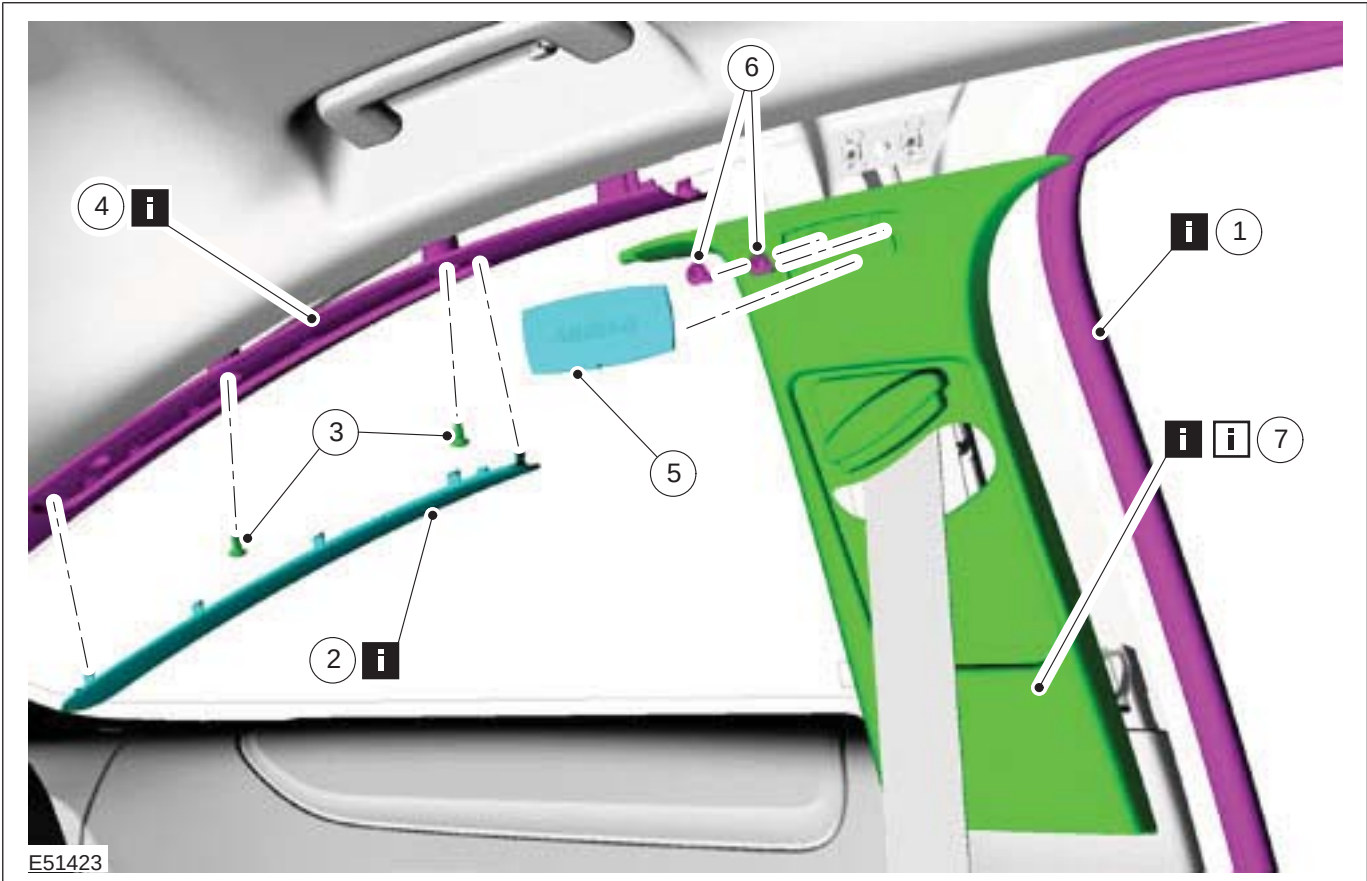

Item	Description
1	Front door opening weatherstrip See Removal Detail
2	Rear quarter glass trim panel retaining screw trim cover See Removal Detail

Item	Description
3	Rear quarter glass trim panel retaining screws
4	Rear quarter glass trim panel See Removal Detail
5	B-pillar trim panel retaining screw cover

REMOVAL AND INSTALLATION

Item	Description
6	B-pillar trim panel retaining screws
7	B-pillar trim panel

Item	Description
	See Removal Detail See Installation Detail

3. To install, reverse the removal procedure.


Removal Details

Item 1 Front door opening weatherstrip

1. Detach the front door opening weatherstrip.

Item 2 Rear quarter glass trim panel retaining screw trim cover

1. Using a suitable flat blade screwdriver, lever out the rear quarter glass trim panel retaining screw trim cover.

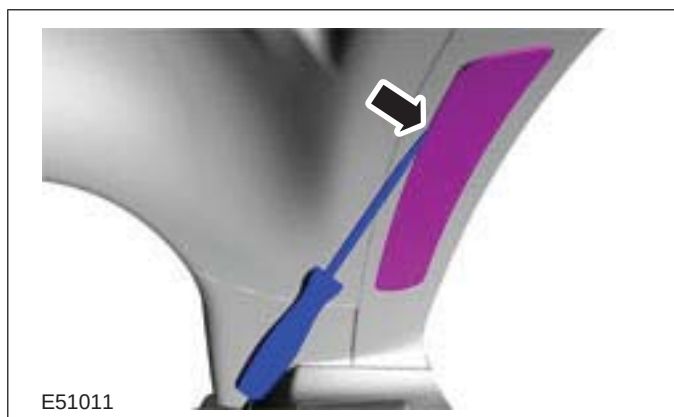
**Item 4** Rear quarter glass trim panel

1. Detach the rear quarter glass trim panel.

Item 7 B-pillar trim panel

1. Detach the B-pillar trim panel.

- Feed the safety belt webbing through the B-pillar upper trim panel.

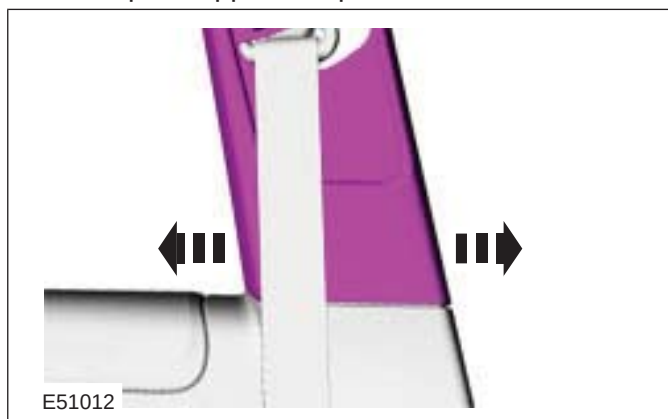


Installation Details

Item 7 B-pillar trim panel

1. Feed the safety belt webbing through the B-pillar upper trim panel before installation.
2. NOTE: Make sure the B-pillar seatbelt height adjustment lever is in alignment with the seatbelt height adjustment mechanism.

Install the B-pillar trim panel.

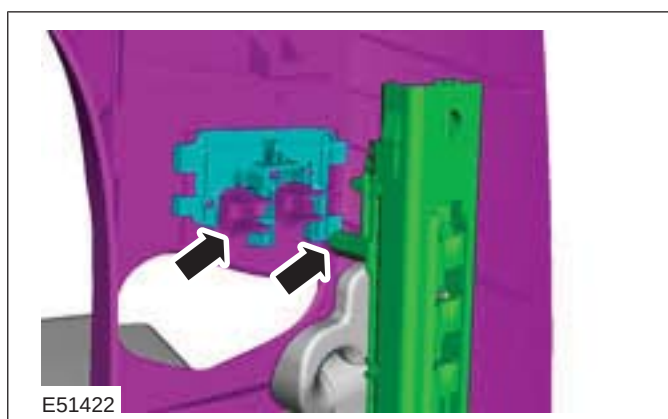

REMOVAL AND INSTALLATION

B-Pillar Trim Panel — 4-Door/5-Door


1. Remove the Rear Scuff Plate Trim Panel.

For additional information, refer to: **Rear Scuff Plate Trim Panel** (501-05 Interior Trim

and Ornamentation, Removal and Installation).

2. Remove the components in the order indicated in the following illustration(s) and table(s).

REMOVAL AND INSTALLATION

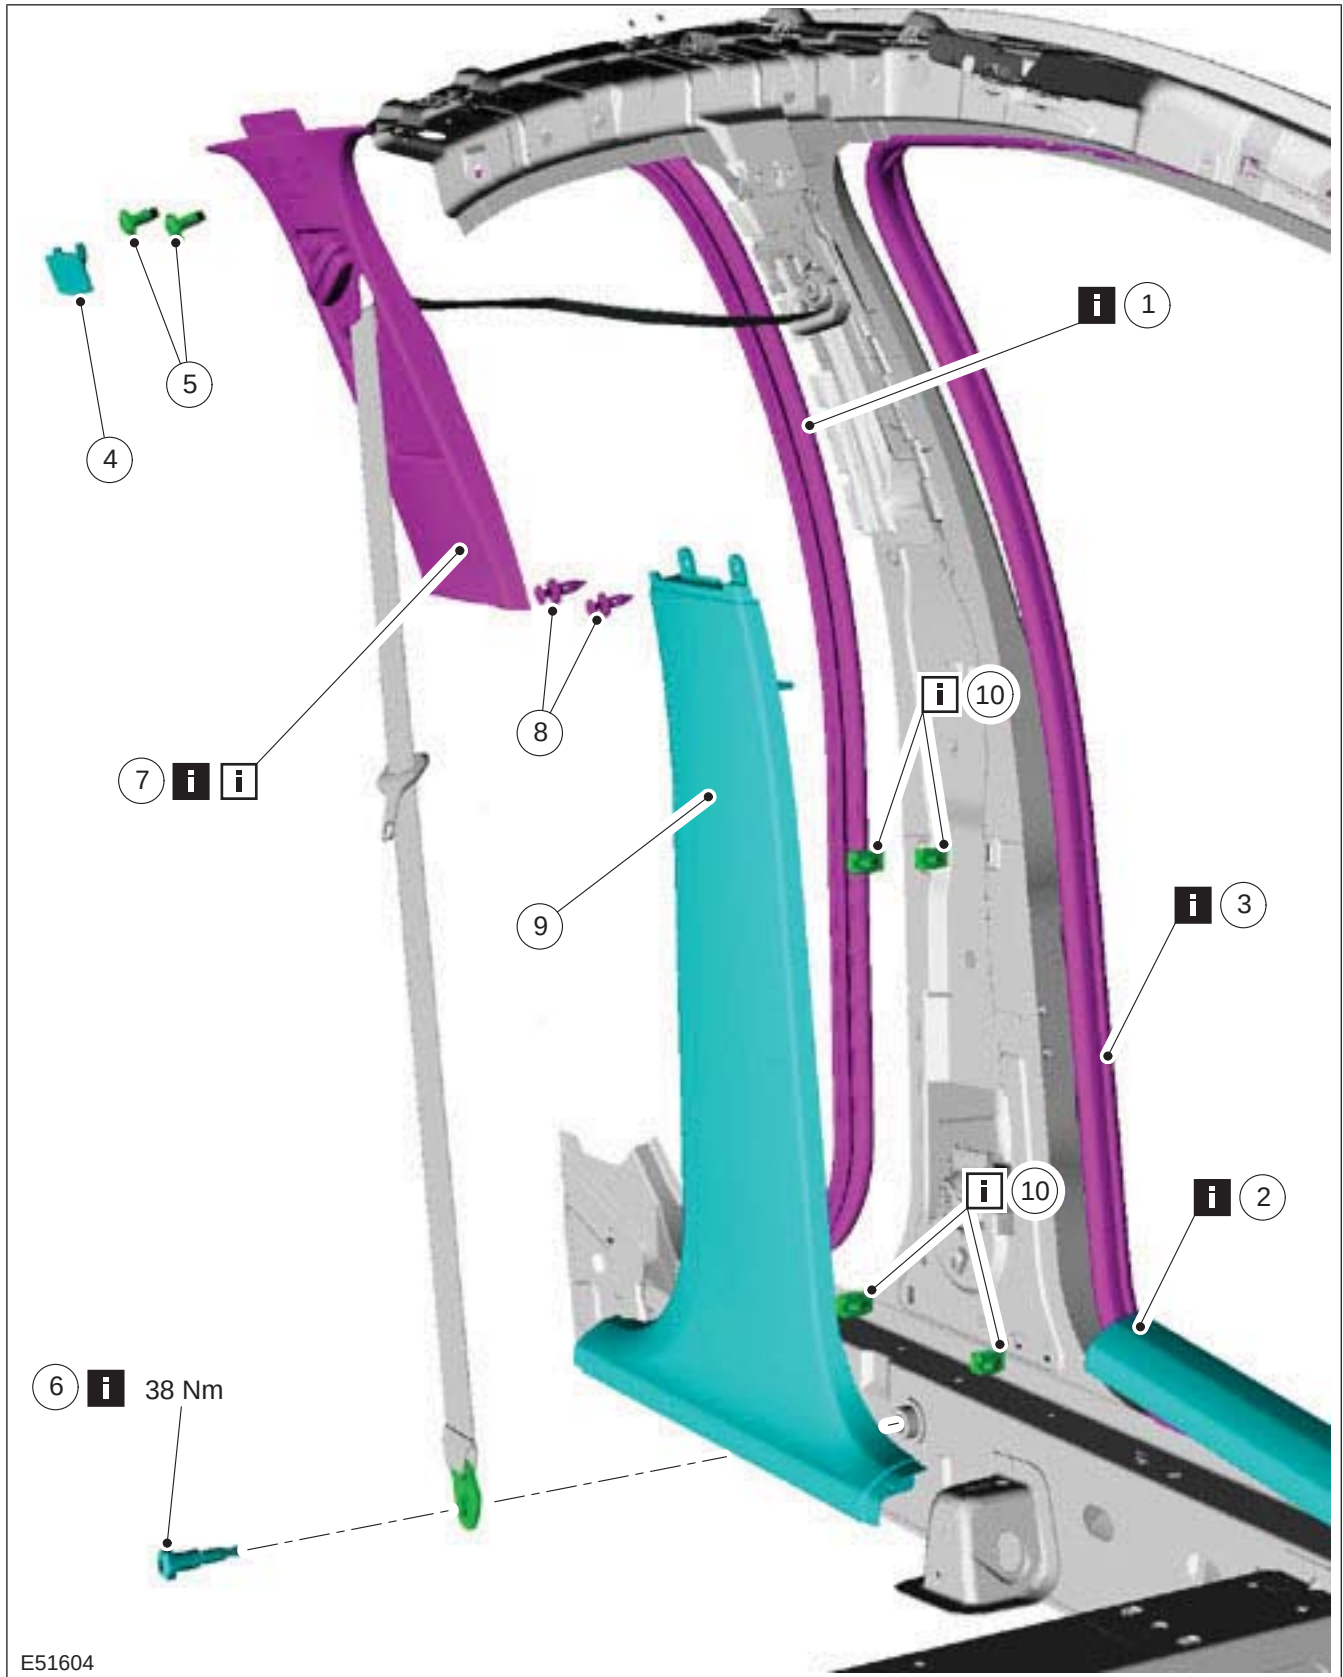

cardiagn.com

REMOVAL AND INSTALLATION

Item	Description
1	Rear door opening weatherstrip See Removal Detail
2	Front Scuff Plate Trim Panel See Removal Detail
3	Front door opening weatherstrip See Removal Detail
4	B-pillar upper trim panel retaining screws cover
5	B-pillar upper trim panel retaining screws

Item	Description
6	Front safety belt lower anchor See Removal Detail See Installation Detail
7	Upper B-pillar trim panel See Removal Detail See Installation Detail
8	Lower B-pillar trim panel retaining clips
9	Lower B-pillar trim panel
10	lower B-pillar trim panel retaining clips See Installation Detail

3. To install, reverse the removal procedure.

Removal Details

Item 1 Rear door opening weatherstrip

1. Detach the rear door opening weatherstrip.

Item 2 Front Scuff Plate Trim Panel

1. Detach the front scuff plate trim panel.

Item 3 Front door opening weatherstrip

1. Detach the front door opening weatherstrip.

Item 6 Front safety belt lower anchor

 **CAUTION:** The bolt securing the safety belt anchor is held captive by a metal washer.

The bolt, spacer and metal washer must remain on the safety belt anchor at all times when the safety belt is detached or removed.

Item 7 Upper B-pillar trim panel

1. Remove the upper B-pillar trim panel.


- Feed the safety belt webbing through the B-pillar upper trim panel.

Installation Details

Item 7 Upper B-pillar trim panel

1. Feed the safety belt webbing through the upper B-pillar trim panel before installation.
2. **NOTE:** Make sure the B-pillar safety belt height adjustment lever is in alignment with the safety belt height adjustment mechanism.

Install the B-pillar trim panel.

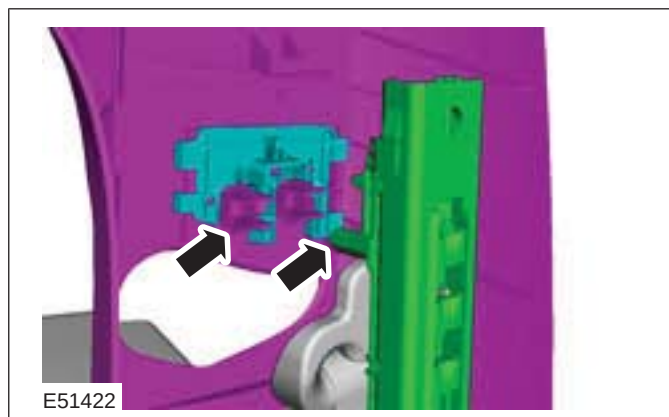


REMOVAL AND INSTALLATION**Item 10** lower B-pillar trim panel retaining clips

1. Install the lower B-pillar trim panel retaining clips to the lower B-pillar trim panel before installation.

REMOVAL AND INSTALLATION

C-Pillar Trim Panel — 3-Door


1. Remove the rear parcel shelf.
2. Tilt the rear seat backrest forward.
3. Remove the components in the order indicated in the following illustration(s) and table(s).

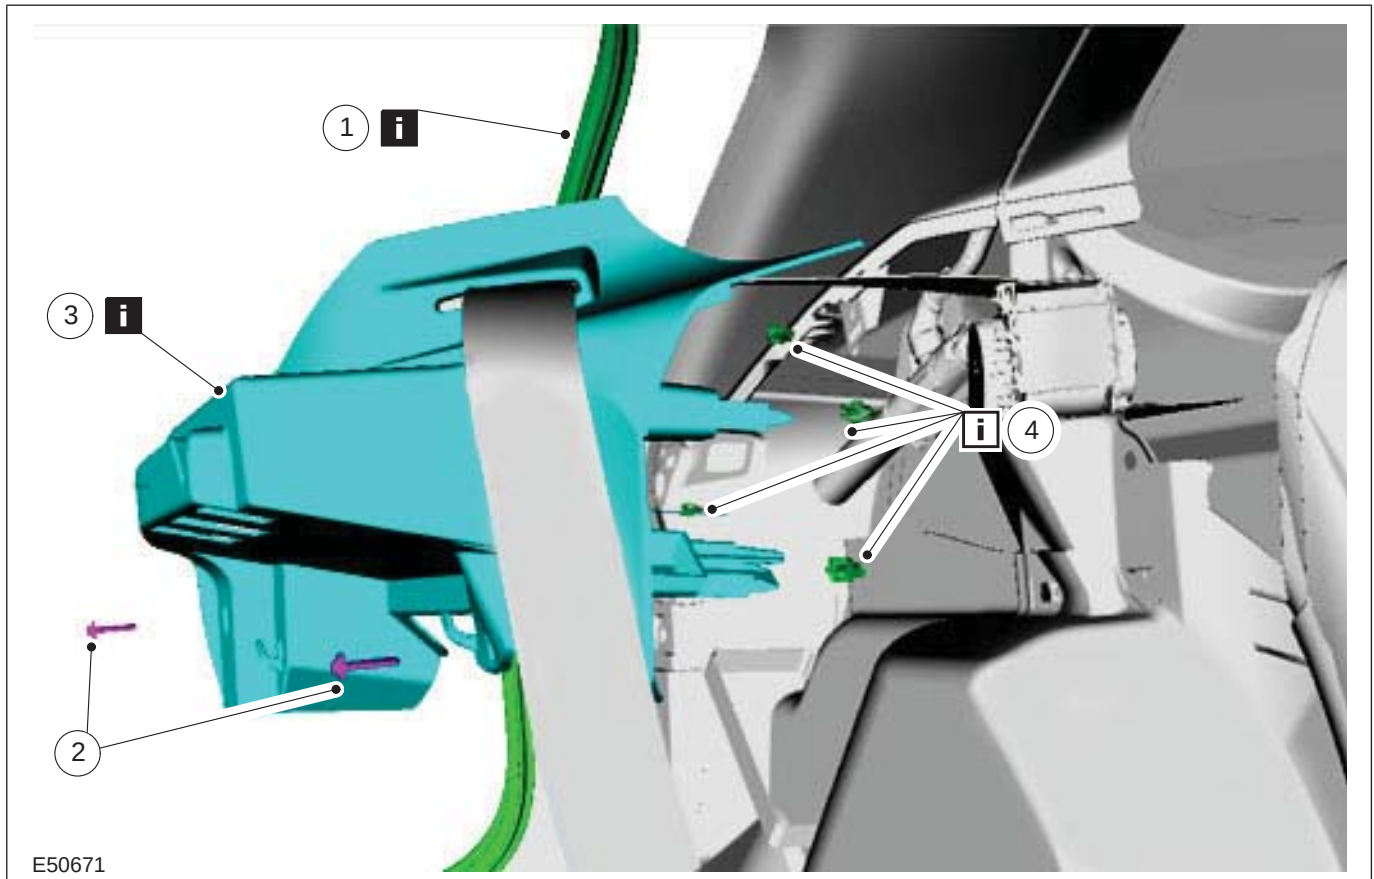

Item	Description
1	Liftgate opening weatherstrip See Removal Detail
2	Rear parcel shelf support trim panel retaining screws

Item	Description
3	Rear parcel shelf support trim panel See Removal Detail
4	Rear parcel shelf support trim panel retaining clips See Installation Detail

REMOVAL AND INSTALLATION

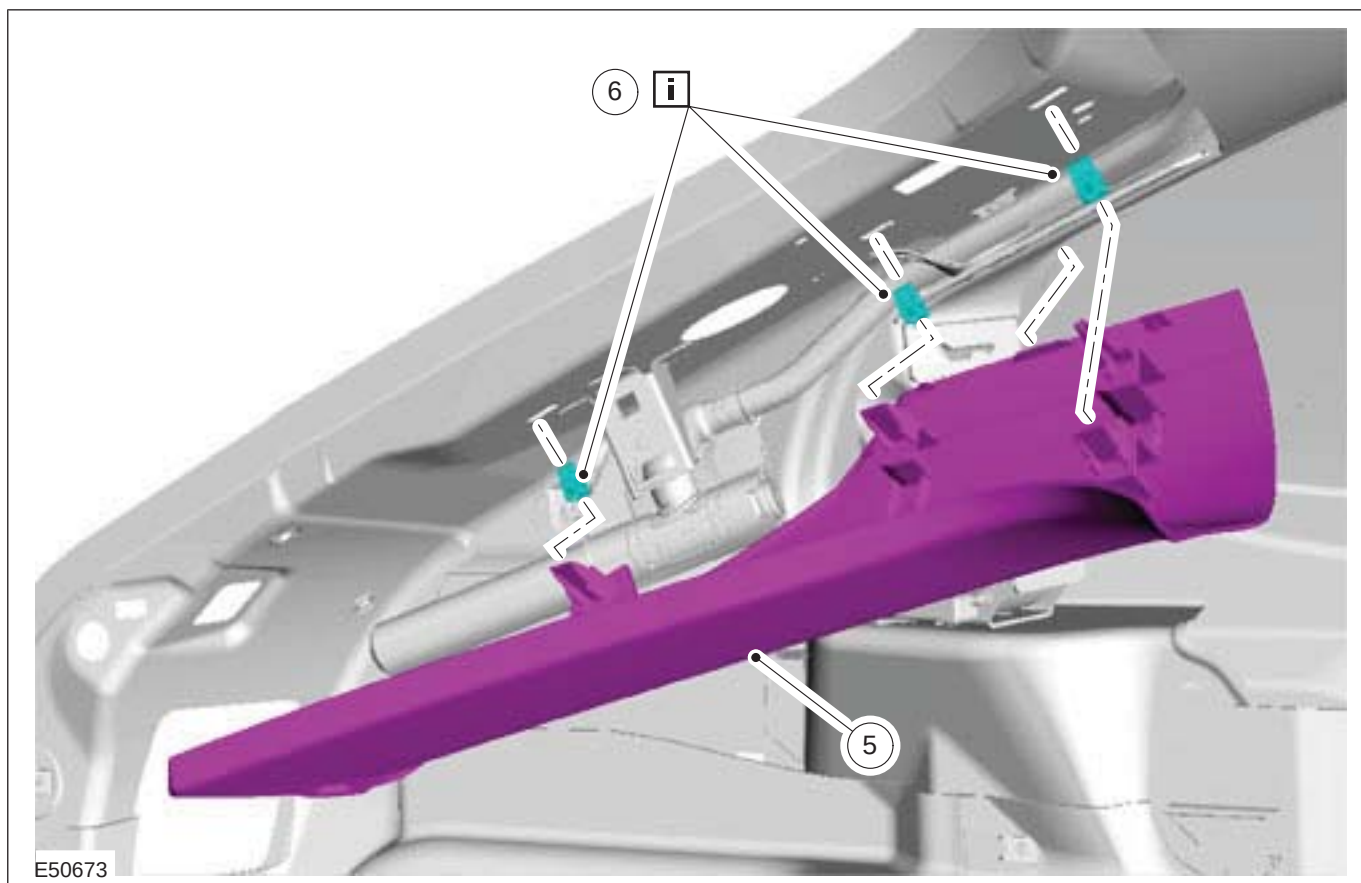

Item	Description
5	C-pillar trim panel
6	C-pillar trim panel retaining clips See Installation Detail

4. To install, reverse the removal procedure.

Removal Details

Item 1 Liftgate opening weatherstrip


1. Detach the liftgate opening weatherstrip.

Item 3 Rear parcel shelf support trim panel

1. Detach the rear parcel shelf support trim panel.

- Pull the rear parcel shelf support trim panel away from the rear quarter body panel to

release the retaining tang from the rear quarter window glass trim panel.

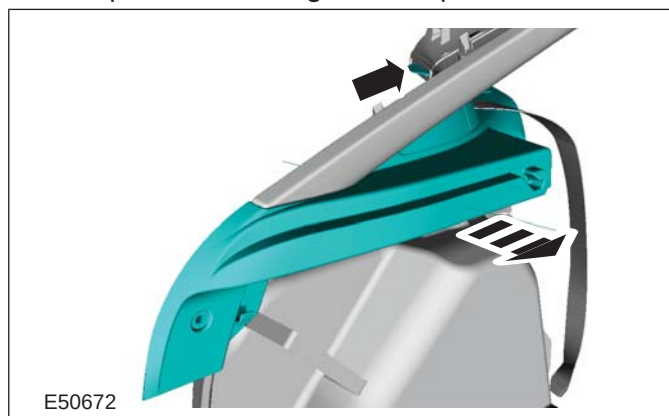

Installation Details

REMOVAL AND INSTALLATION**Item 6 C-pillar trim panel retaining clips**

1. Install the C-pillar trim panel retaining clips to the C-pillar trim panel before the C-pillar trim panel is installed to the vehicle.


Item 4 Rear parcel shelf support trim panel retaining clips

1. Install the rear parcel shelf support trim panel retaining clips to the rear parcel shelf support trim panel before the rear parcel shelf support trim panel is installed to the vehicle.

REMOVAL AND INSTALLATION

C-Pillar Trim Panel — 4-Door/5-Door

1. Remove the components in the order indicated in the following illustration(s) and table(s).

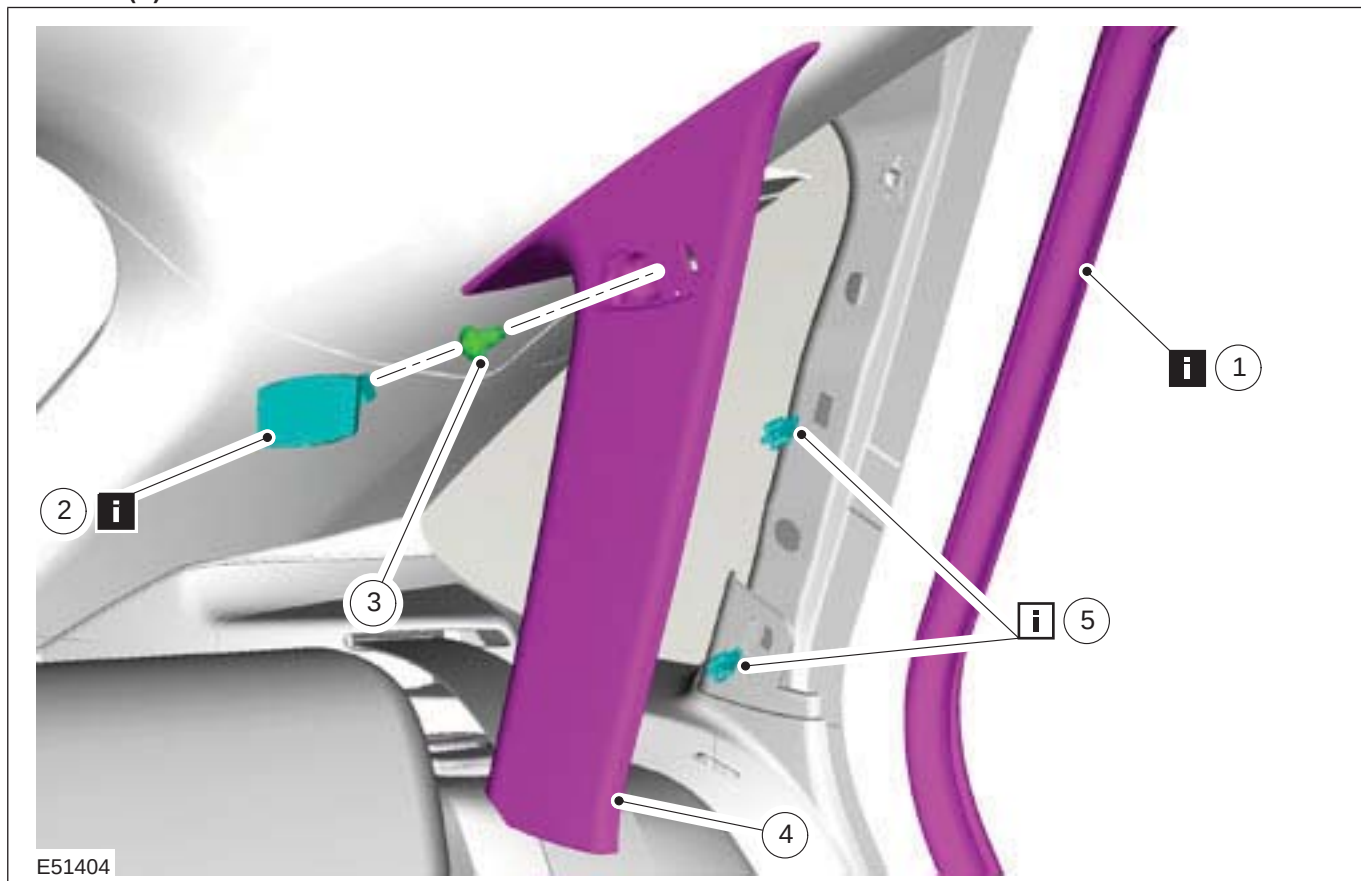

Item	Description
1	Rear door opening weatherstrip See Removal Detail
2	C-pillar trim panel retaining screw cover See Removal Detail
3	C-pillar trim panel retaining screw

Item	Description
4	C-pillar trim panel
5	C-pillar trim panel retaining clips See Installation Detail

2. To install, reverse the removal procedure.


Removal Details

Item 1 Rear door opening weatherstrip

1. Detach the rear door opening weatherstrip.

REMOVAL AND INSTALLATION**Item 2 C-pillar trim panel retaining screw cover**

1. Using a suitable flat blade screwdriver, remove the C-pillar retaining screw cover.

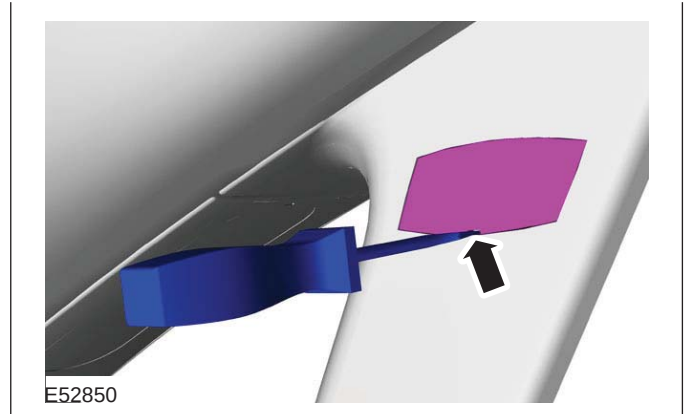**Installation Details****Item 5 C-pillar trim panel retaining clips**

1. Install the C-pillar trim panel retaining clips to the trim panel before installation to the vehicle.


REMOVAL AND INSTALLATION

D-Pillar Trim Panel — 5-Door

1. Remove the Package tray trim panel.

2. Tilt the rear seat backrest forward.


3. Remove the C-pillar trim.
- Trim and Ornamentation, Removal and Installation).
4. Remove the components in the order indicated in the following illustration(s) and table(s).
- For additional information, refer to: **C-Pillar Trim Panel - 4-Door/5-Door** (501-05 Interior

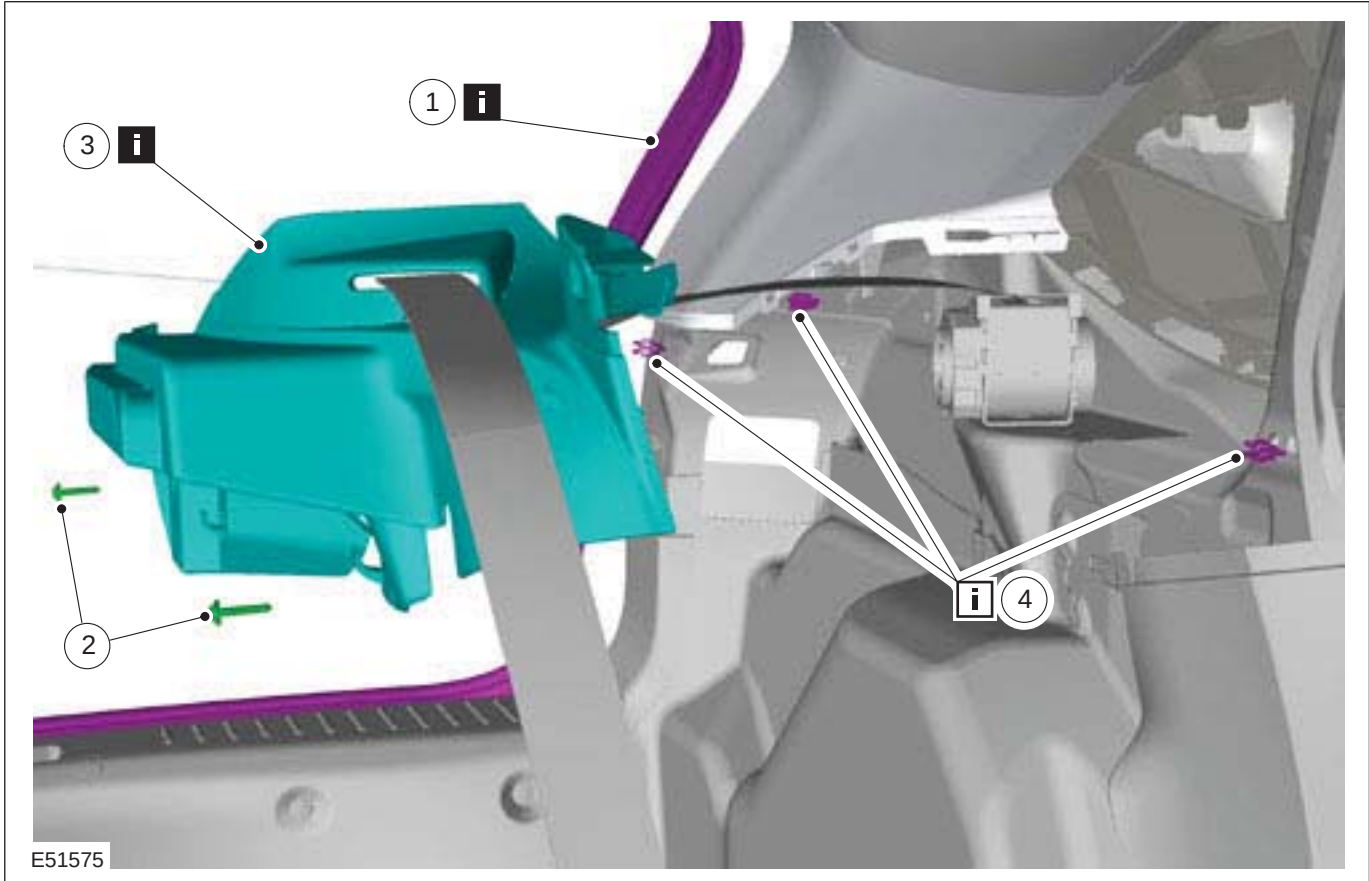

Item	Description
1	Liftgate opening weatherstrip See Removal Detail
2	Package tray support trim panel retaining screws

Item	Description
3	Package tray support trim panel See Removal Detail
4	Package tray support trim panel retaining clips See Installation Detail

REMOVAL AND INSTALLATION

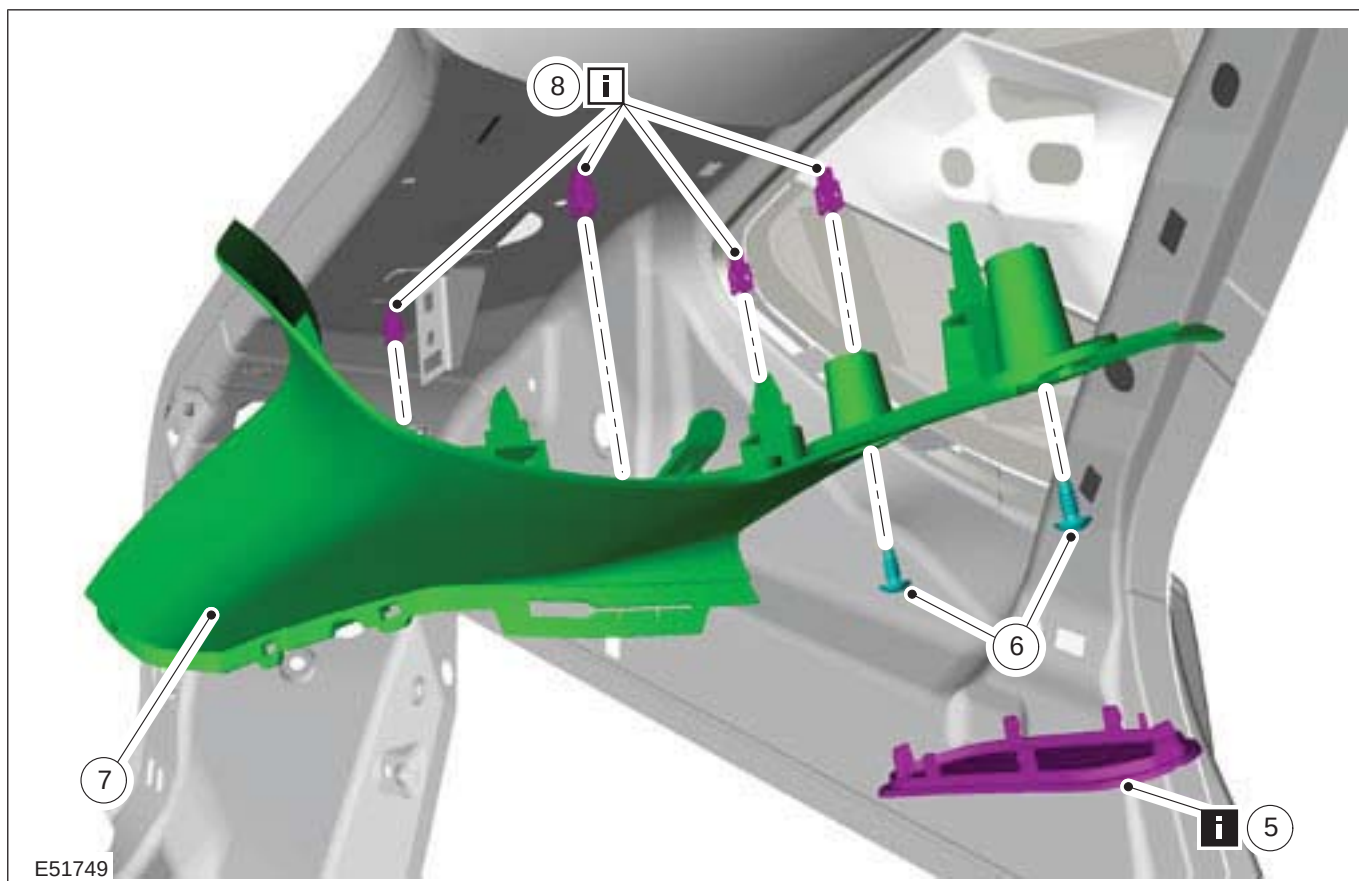

Item	Description
5	D-pillar trim panel retaining screw cover See Removal Detail
6	D-pillar trim panel retaining screws.

Item	Description
7	D-pillar trim panel
8	D-pillar trim panel retaining clips See Installation Detail

5. To install, reverse the removal procedure.

Removal Details

Item 1 Liftgate opening weatherstrip


1. Detach the liftgate opening weatherstrip.

Item 3 Package tray support trim panel

1. Detach the package tray support trim panel.


- Pull the package tray support trim panel away from the rear quarter body panel to release the retaining tang from the D-pillar trim panel.

- Feed the rear seatbelt harness through the package tray support trim panel.

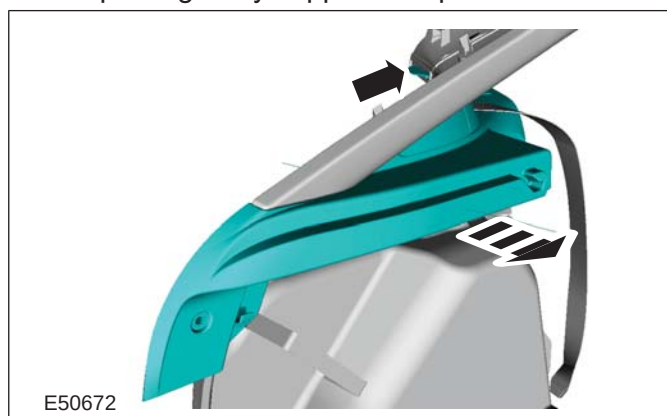

REMOVAL AND INSTALLATION**Item 5 D-pillar trim panel retaining screw cover**

1. Remove the D-pillar trim panel retaining screw cover.

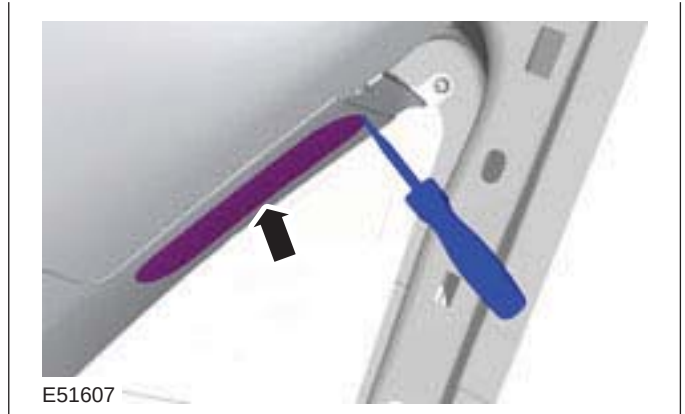**Installation Details****Item 4 Package tray support trim panel retaining clips**

1. Install the package tray support trim panel retaining clips to the trim panel before the trim panel is installed to the vehicle.


Item 8 D-pillar trim panel retaining clips

1. Install the D-pillar trim panel retaining clips trim panel before the trim panel is installed to the vehicle.

REMOVAL AND INSTALLATION

Front Door Trim Panel — 3-Door


1. Disconnect the battery ground cable.
For additional information, refer to: **Battery Disconnect and Connect** (414-01 Battery, Mounting and Cables, General Procedures).
2. Remove the components in the order indicated in the following illustration(s) and table(s).

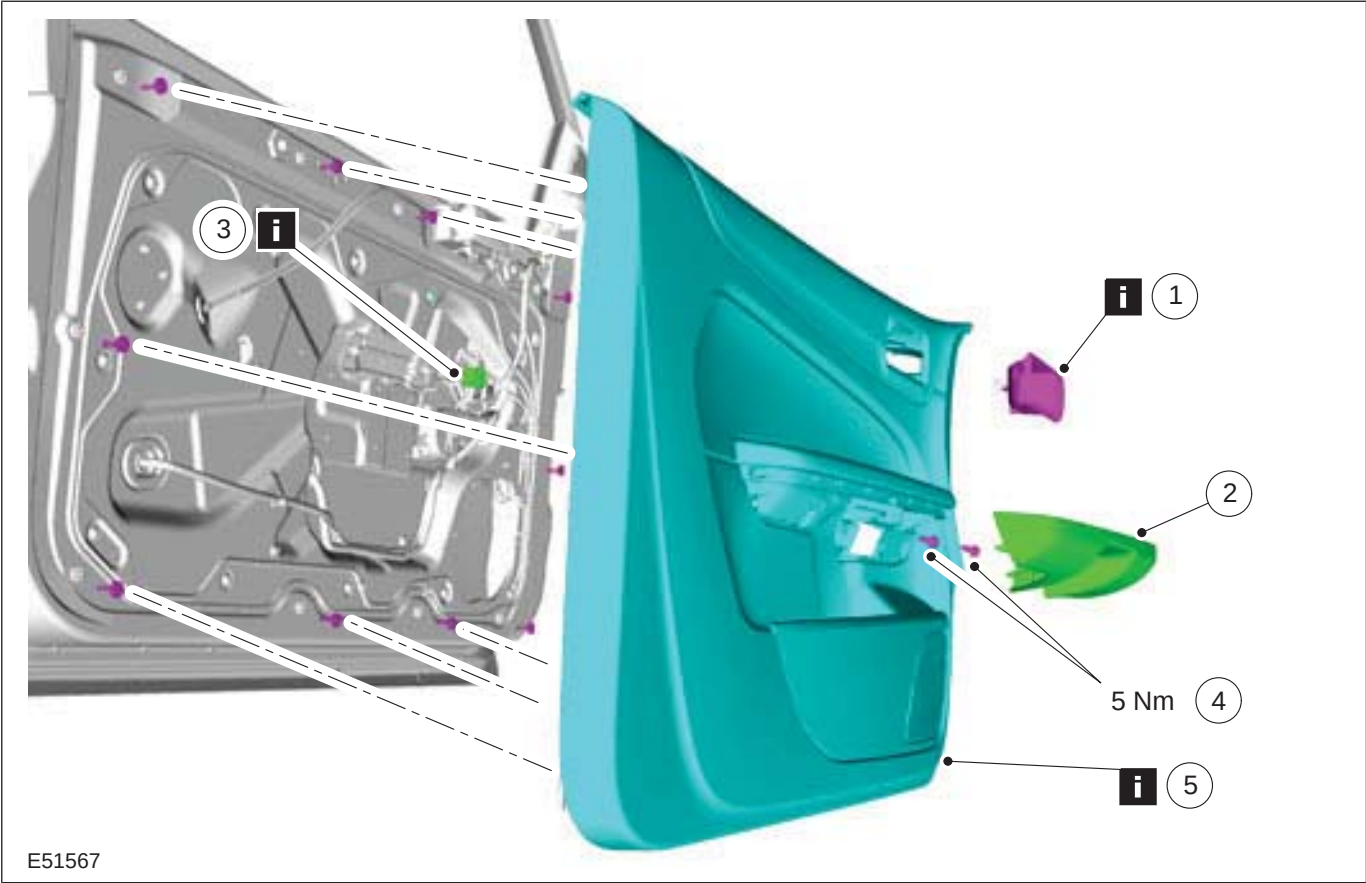

Item	Description
1	Front door latch remote control handle bezel See Removal Detail
2	Front door pull handle cover

Item	Description
3	Front door power window control unit electrical connector See Removal Detail
4	Front door pull handle retaining bolts
5	Front door trim panel See Removal Detail

REMOVAL AND INSTALLATION

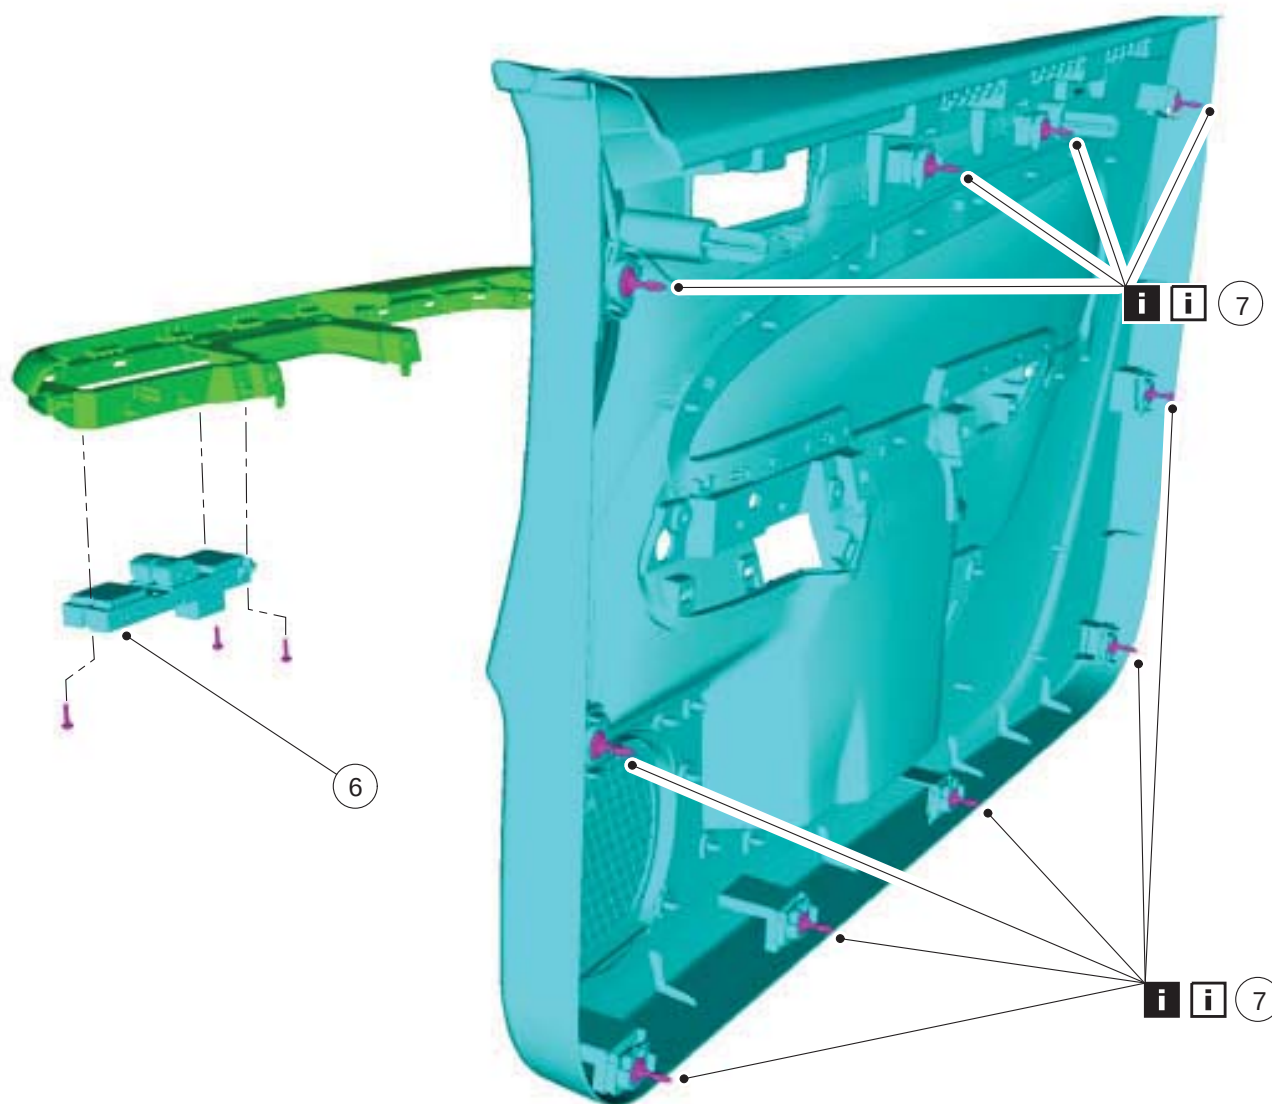

E51424

Item	Description
6	Power window control unit
7	Front door trim panel retaining clips See Removal Detail See Installation Detail

3. To install, reverse the removal procedure.

4. Initialize the door window motors.




For additional information, **refer to: Door Window Motor Initialization** (501-11 Glass, Frames and Mechanisms, General Procedures).

Removal Details


REMOVAL AND INSTALLATION

Item 1 Front door latch remote control handle bezel**1. Remove the front door latch remote control bezel.**

- Disconnect the remote keyless entry door lock button (if equipped).

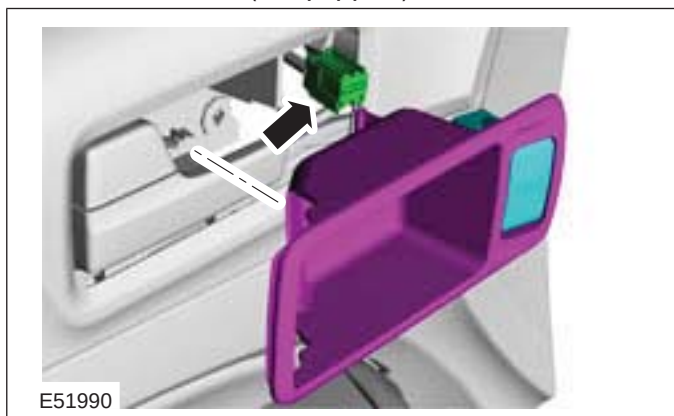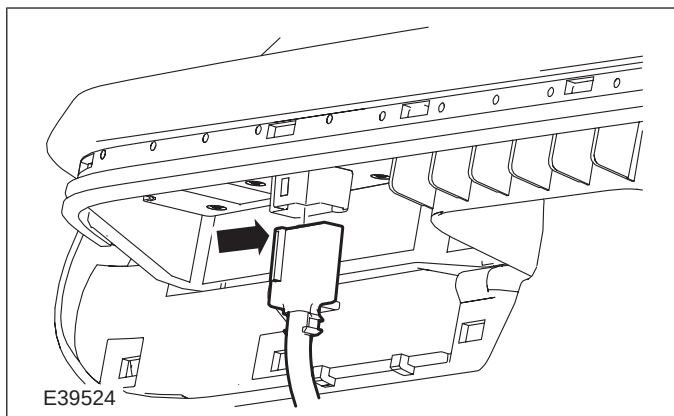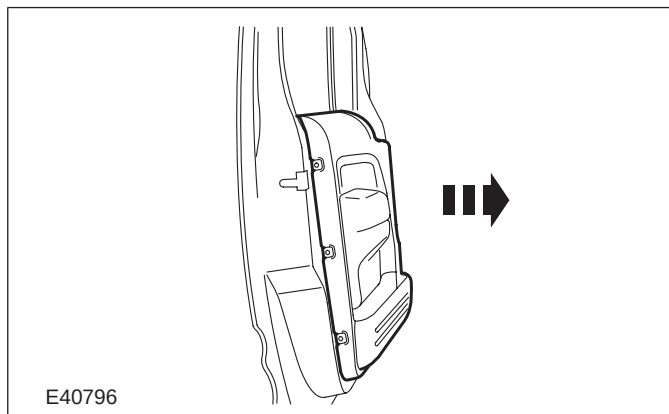**Item 3 Front door power window control unit electrical connector****1. Disconnect the front door power window control unit electrical connector.****Item 5 Front door trim panel****1. Remove the front door trim panel.****Item 7 Front door trim panel retaining clips****1. Remove the front door trim panel retaining clips.**

1. Release the front door trim panel retaining clip locking tang.
2. Remove the front door trim panel retaining clip.

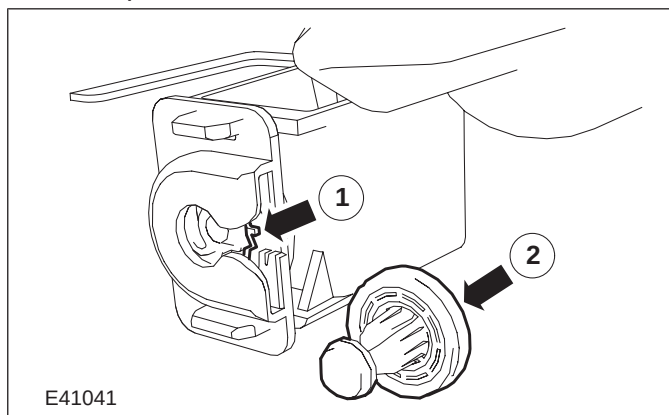


Installation Details

Item 7 Front door trim panel retaining clips**1. Install the front door trim retaining clips to the front door trim panel.**

REMOVAL AND INSTALLATION

Front Door Trim Panel — 4-Door/5-Door/Wagon

1. Disconnect the battery ground cable.
2. Remove the components in the order indicated in the following illustration(s) and table(s).
- For additional information, refer to: **Battery Disconnect and Connect** (414-01 Battery, Mounting and Cables, General Procedures).

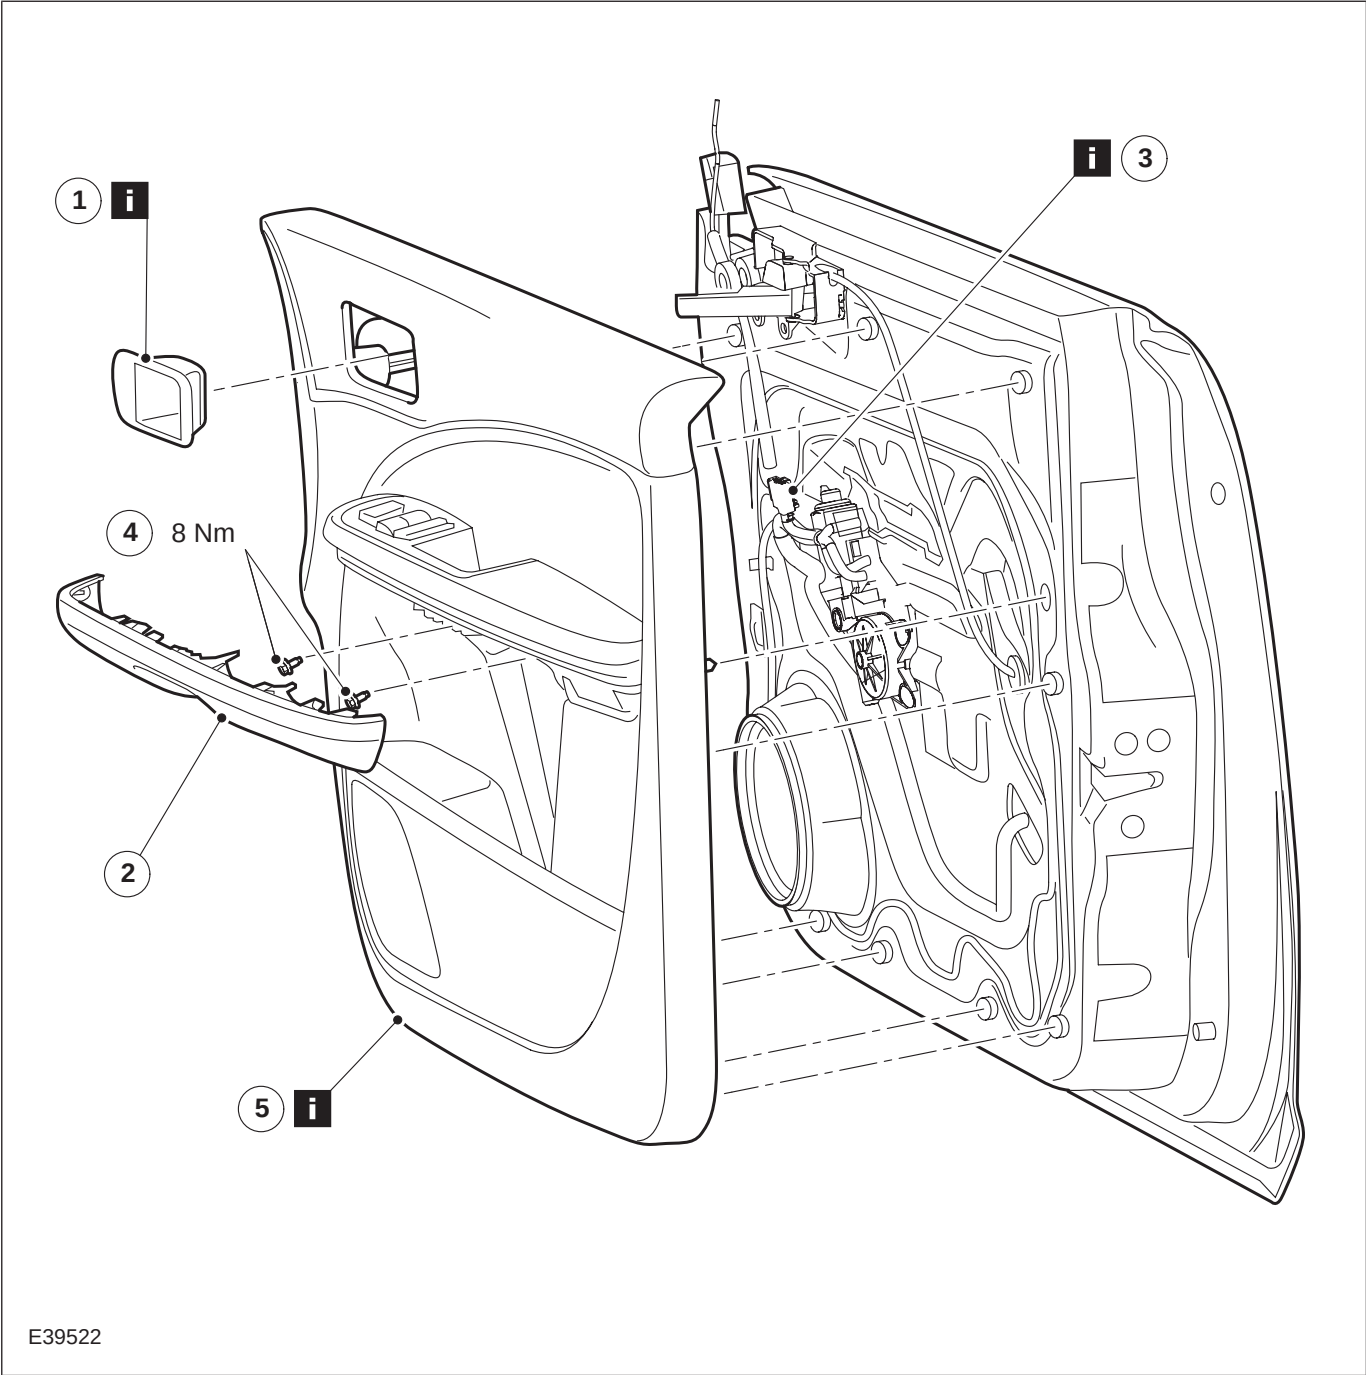

E39522


Item	Description
1	Front door latch remote control handle bezel See Removal Detail
2	Front door pull handle cover

Item	Description
3	Front power window control unit electrical connector See Removal Detail

REMOVAL AND INSTALLATION

Item	Description
4	Front door pull handle retaining bolts

Item	Description
5	Front door trim panel See Removal Detail

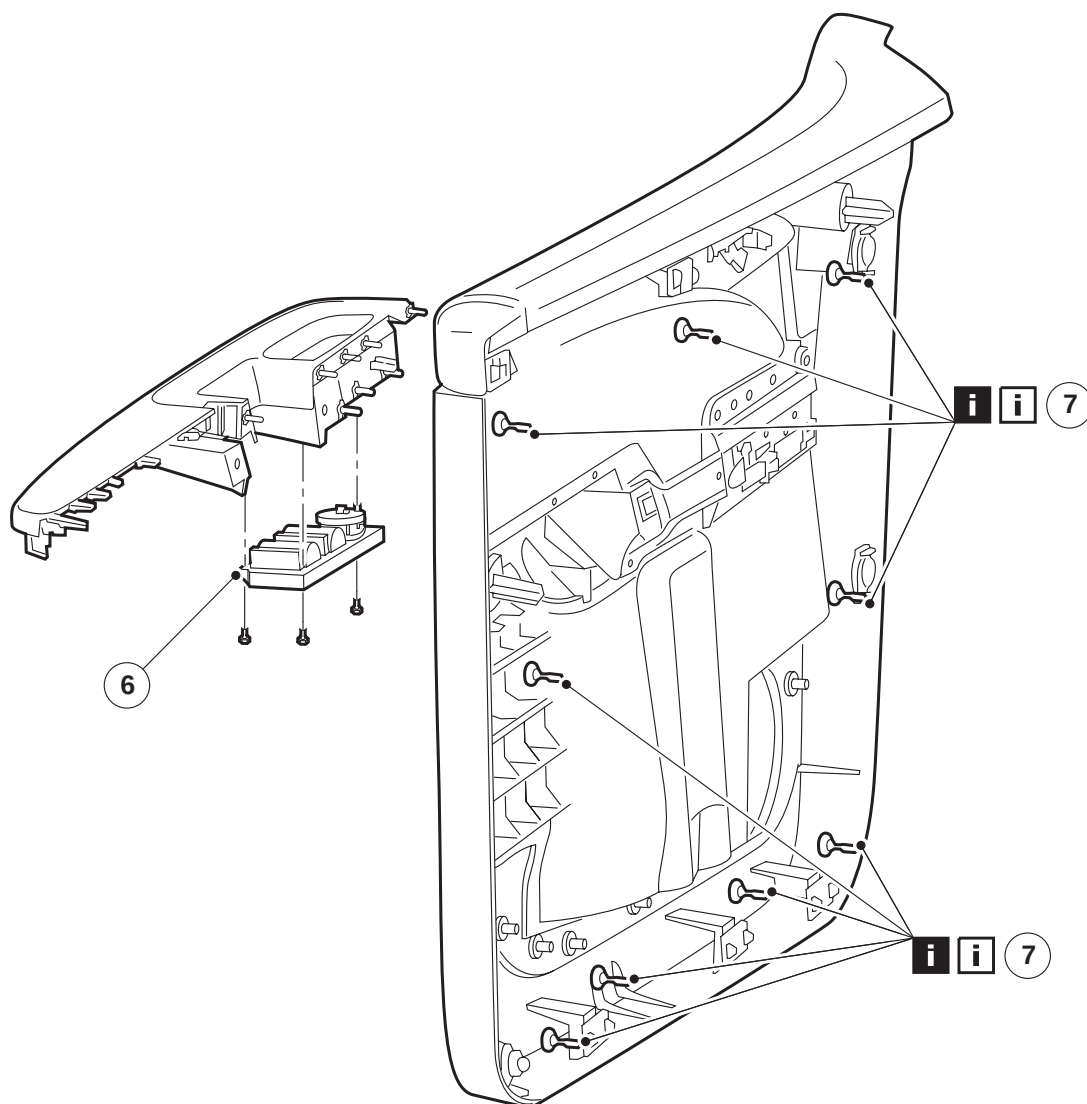

E39523

Item	Description
6	Front door power window control unit bezel (front door trim panel pull handle shown removed for clarity)
7	Front door trim panel retaining clips See Removal Detail See Installation Detail


3. To install, reverse the removal procedure.

4. Initialize the door window motors.



For additional information, [refer to: Door Window Motor Initialization](#) (501-11 Glass, Frames and Mechanisms, General Procedures).

REMOVAL AND INSTALLATION


Removal Details

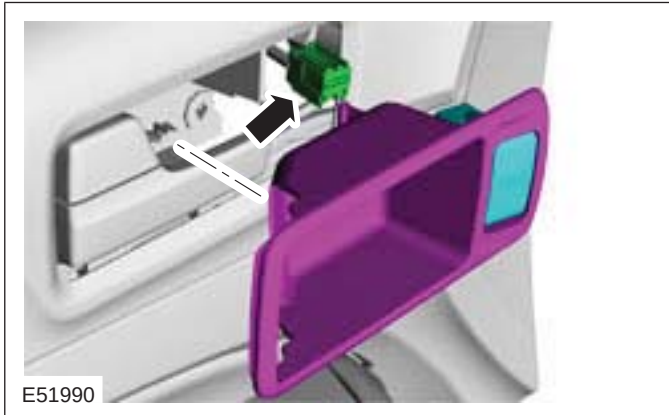Item 1 Front door latch remote control handle bezel**1. Remove the front door latch remote control handle bezel.**

- Disconnect the remote keyless entry door lock button (if equipped).

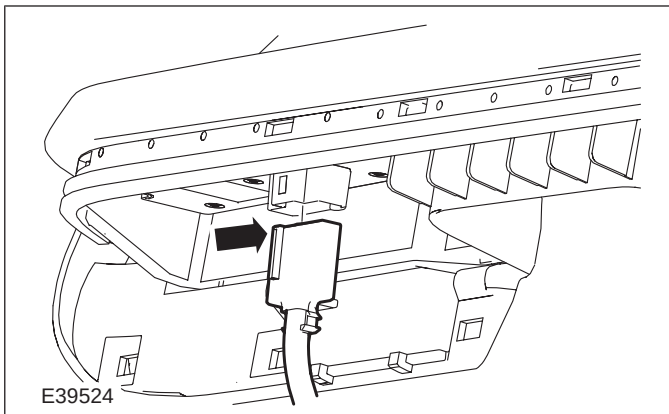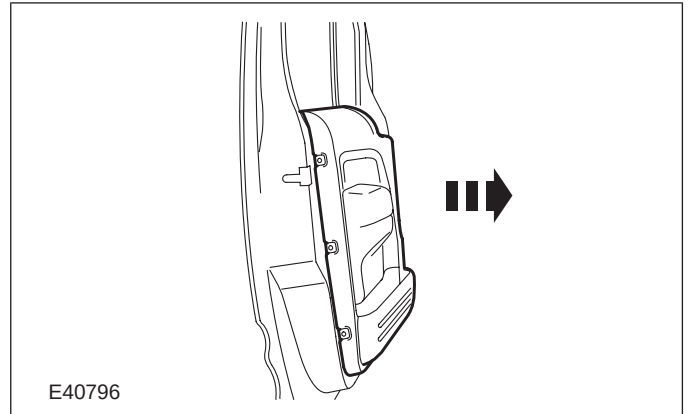Item 3 Front power window control unit electrical connector**1. Disconnect the front door power window control unit electrical connector.****Item 5 Front door trim panel****1. Remove the front door trim panel.****Item 7 Front door trim panel retaining clips****1. Remove the front door trim panel retaining clips.**

1. Release the front door trim panel retaining clip locking tang.
2. Remove the front door trim panel retaining clip.

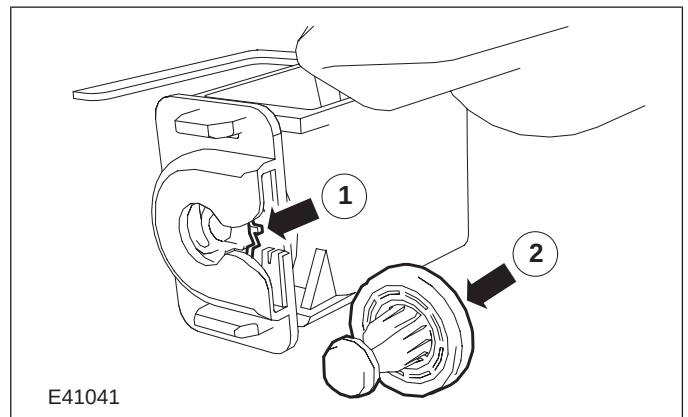


Installation Details

Item 7 Front door trim panel retaining clips**1. Install the front door trim panel retaining clips to the front door trim panel.**

REMOVAL AND INSTALLATION

Rear Door Trim Panel — Vehicles With: Manual Windows

1. Disconnect the battery ground cable.
For additional information, refer to: **Battery Disconnect and Connect** (414-01 Battery, Mounting and Cables, General Procedures).
2. Remove the components in the order indicated in the following illustration(s) and table(s).

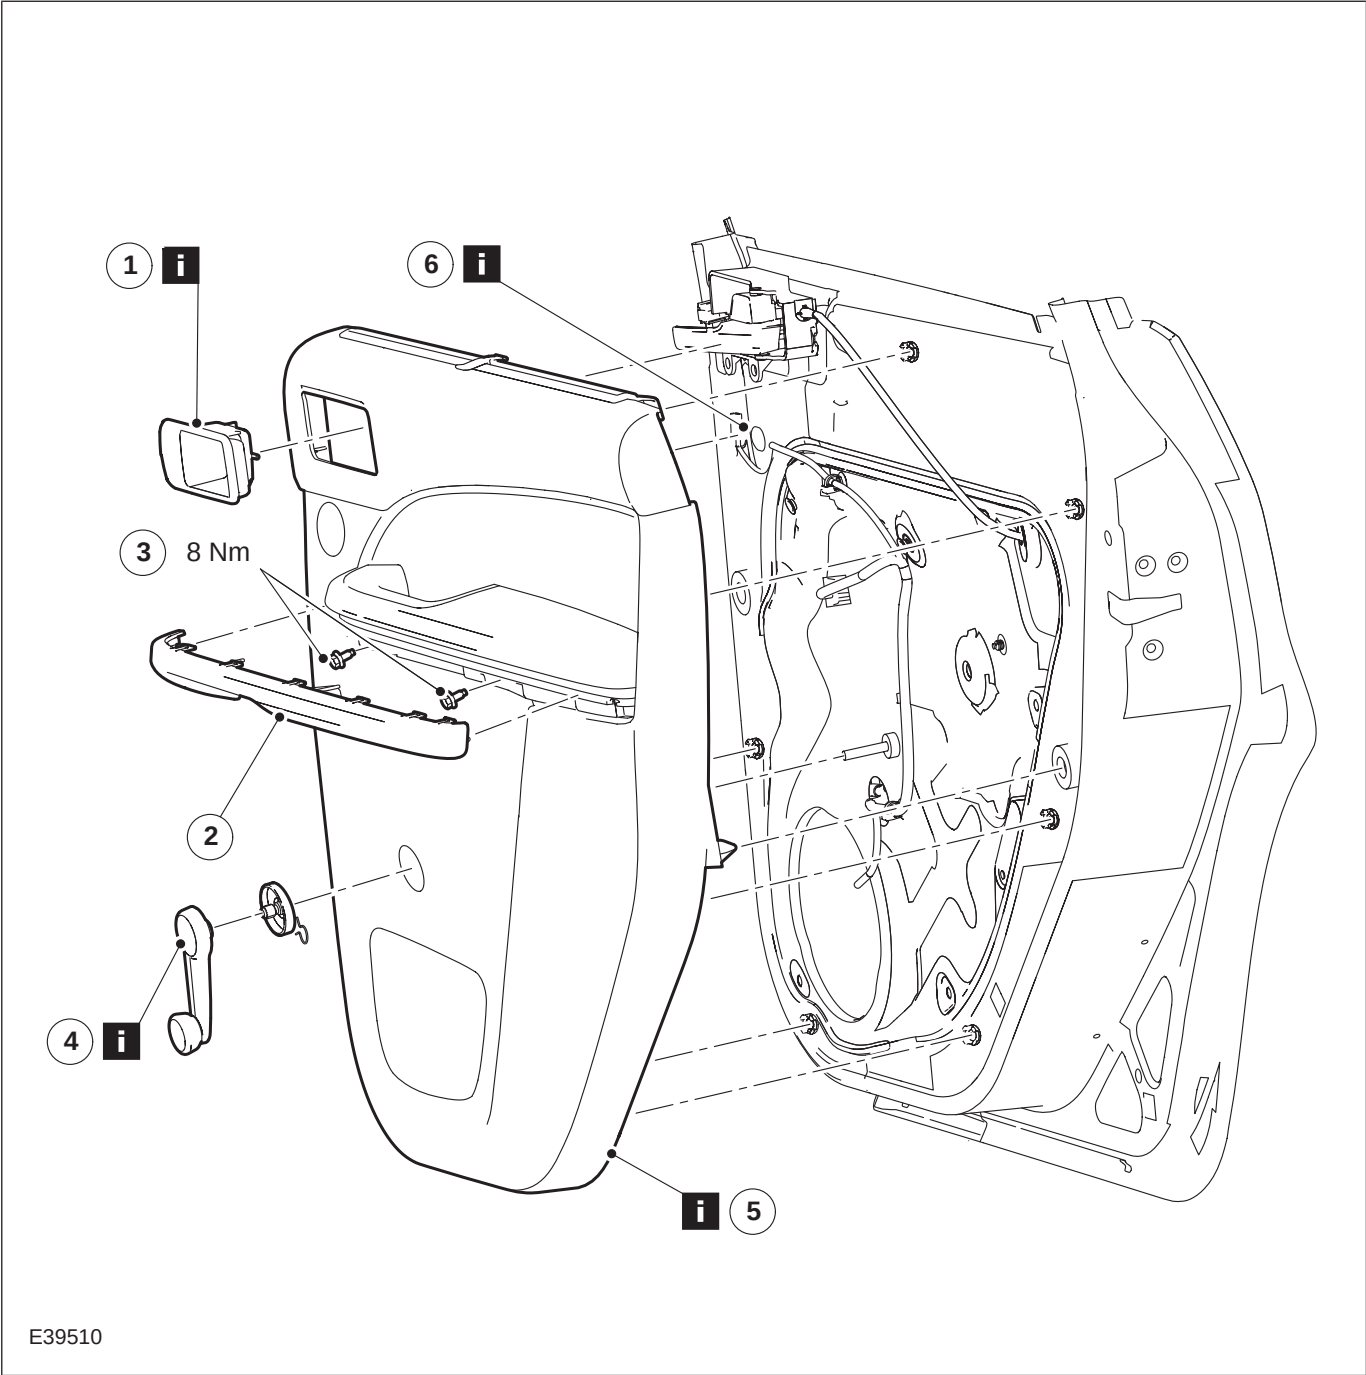

E39510


Item	Description
1	Rear door trim panel latch remote control handle bezel See Removal Detail
2	Rear door trim panel pull handle cover

Item	Description
3	Rear door trim panel pull handle retaining bolts

REMOVAL AND INSTALLATION

Item	Description
4	Rear door trim panel window regulator handle See Removal Detail

Item	Description
5	Rear door trim panel See Removal Detail
6	Rear door trim panel tweeter speaker electrical connector See Removal Detail

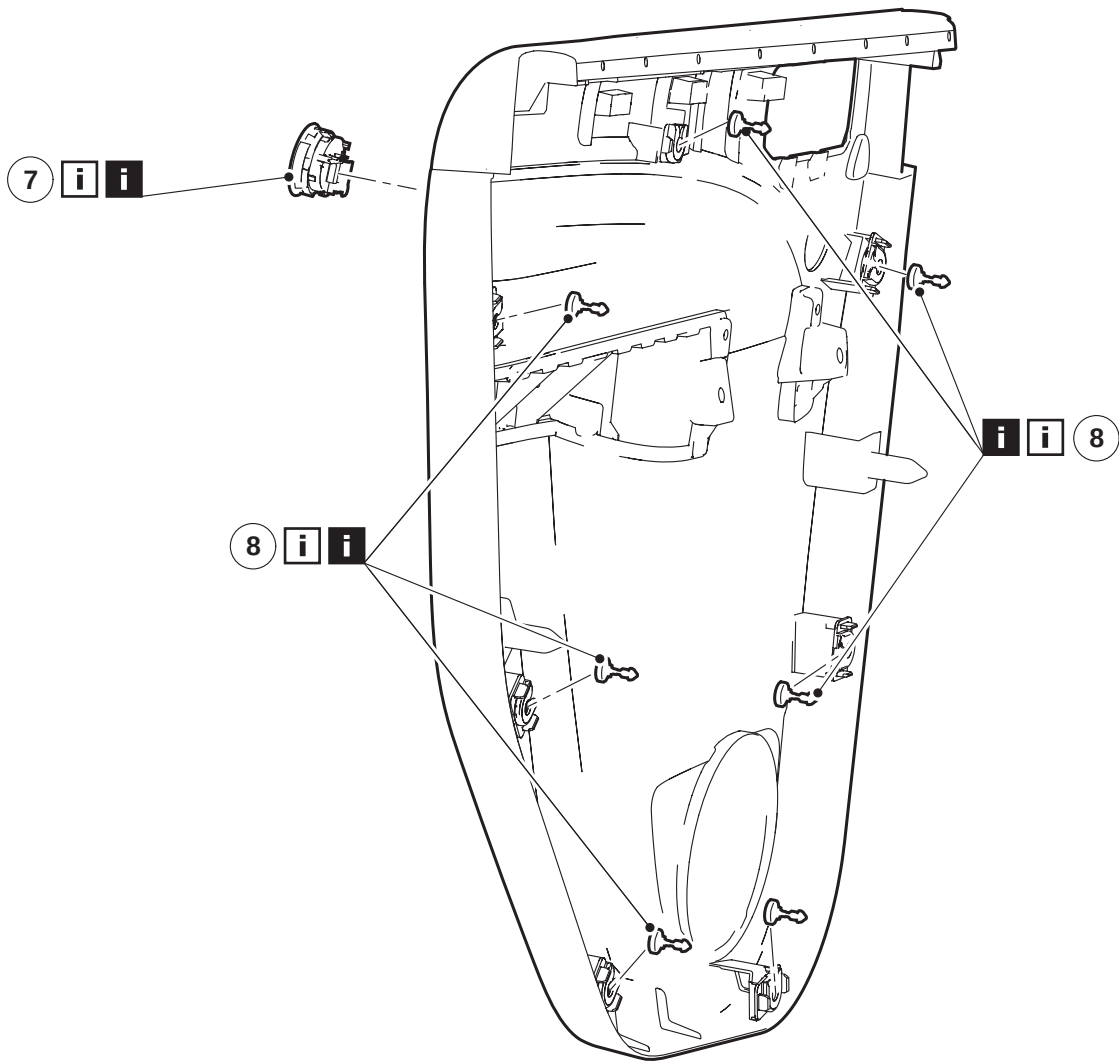

E39511


REMOVAL AND INSTALLATION

Item	Description
7	Rear door trim panel tweeter speaker See Removal Detail See Installation Detail
8	Rear door trim panel retaining clips See Removal Detail See Installation Detail


Removal Details

Item 1 Rear door trim panel latch remote control handle bezel**1. Remove the rear door trim panel latch remote control bezel.**

1. Operate the rear door trim panel latch remote control release handle.
2. Remove the rear door latch remote control bezel from the rear door latch remote control.

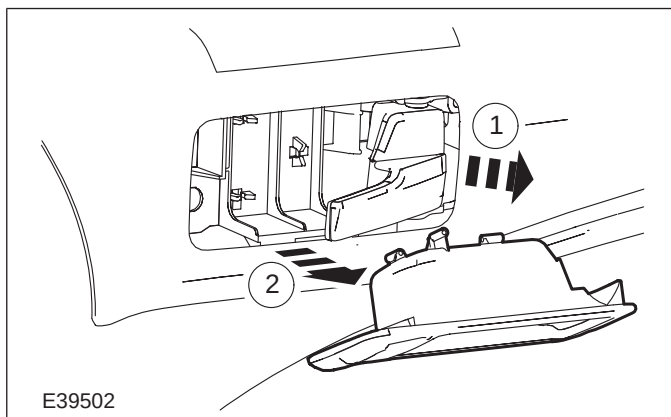**Item 4** Rear door trim panel window regulator handle**1. 1. Fabricate a hook using a suitable piece of wire.**

1. Remove window regulator handle retaining clip.
2. Remove window regulator handle.

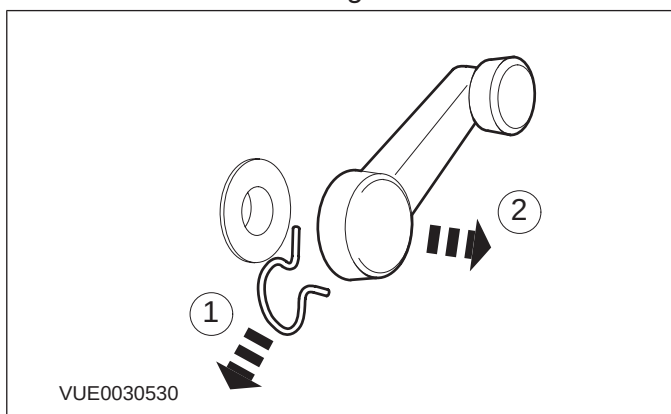

3. To install, reverse the removal procedure.

4. Initialize the door window motors.


For additional information, refer to: **Door Window Motor Initialization** (501-11 Glass, Frames and Mechanisms, General Procedures).

Item 5 Rear door trim panel


1. **NOTE:** Detach the rear door trim panel starting from the top front corner down to the bottom rear corner of the door before the rear door trim panel is completely detached.

NOTE: Do not place excessive strain on the rear door trim panel tweeter speaker wiring harness.

Detach the rear door trim panel.

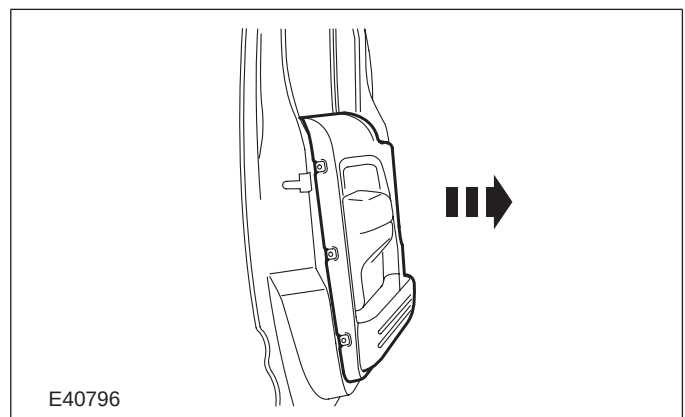**Item 6** Rear door trim panel tweeter speaker electrical connector


1. **Disconnect the rear door trim panel tweeter speaker electrical connector.**

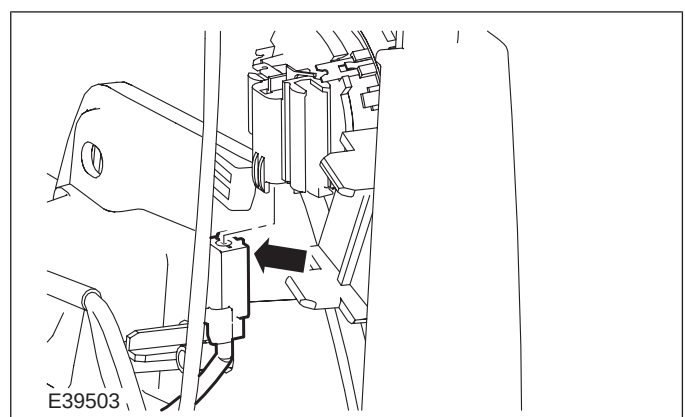

REMOVAL AND INSTALLATION**Item 7 Rear door trim panel tweeter speaker**


1. Remove the rear door trim panel tweeter speaker.

- Release the locking tangs.

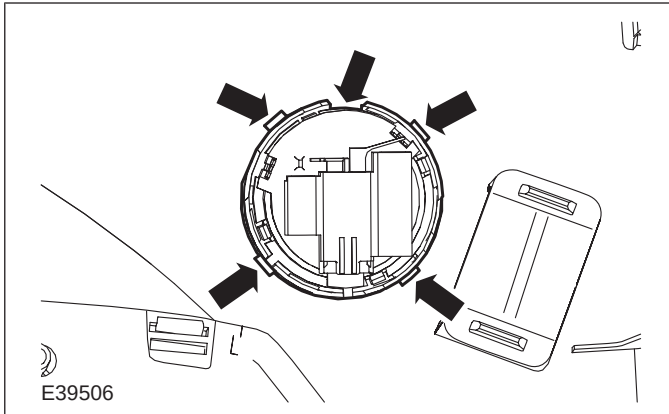**Item 8 Rear door trim panel retaining clips**

1. Remove the rear door trim panel retaining clips.

1. Release the rear door trim panel retaining clip retainer locking tang.
2. Remove the rear door trim panel retaining clip.

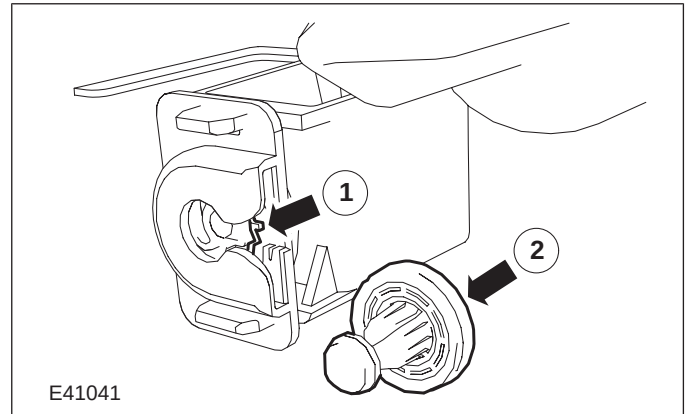**Installation Details****Item 8 Rear door trim panel retaining clips**

1. **NOTE:** Make sure that the rear door trim panel retaining clips are in the closed position.

Install the rear door trim panel retaining clips to the rear door trim panel retaining clip retainer.

Item 7 Rear door trim panel tweeter speaker

1. **CAUTION:** Make sure that the locating tang on the top of the rear door tweeter speaker is correctly aligned with the rear door trim panel groove. Failure to follow this instruction may cause damage to the rear door trim panel.

Install the rear door trim panel tweeter speaker.


REMOVAL AND INSTALLATION

Rear Door Trim Panel — Vehicles With: Power Windows

1. Disconnect the battery ground cable.

For additional information, refer to: **Battery Disconnect and Connect** (414-01 Battery, Mounting and Cables, General Procedures).

2. Remove the components in the order indicated in the following illustration(s) and table(s).

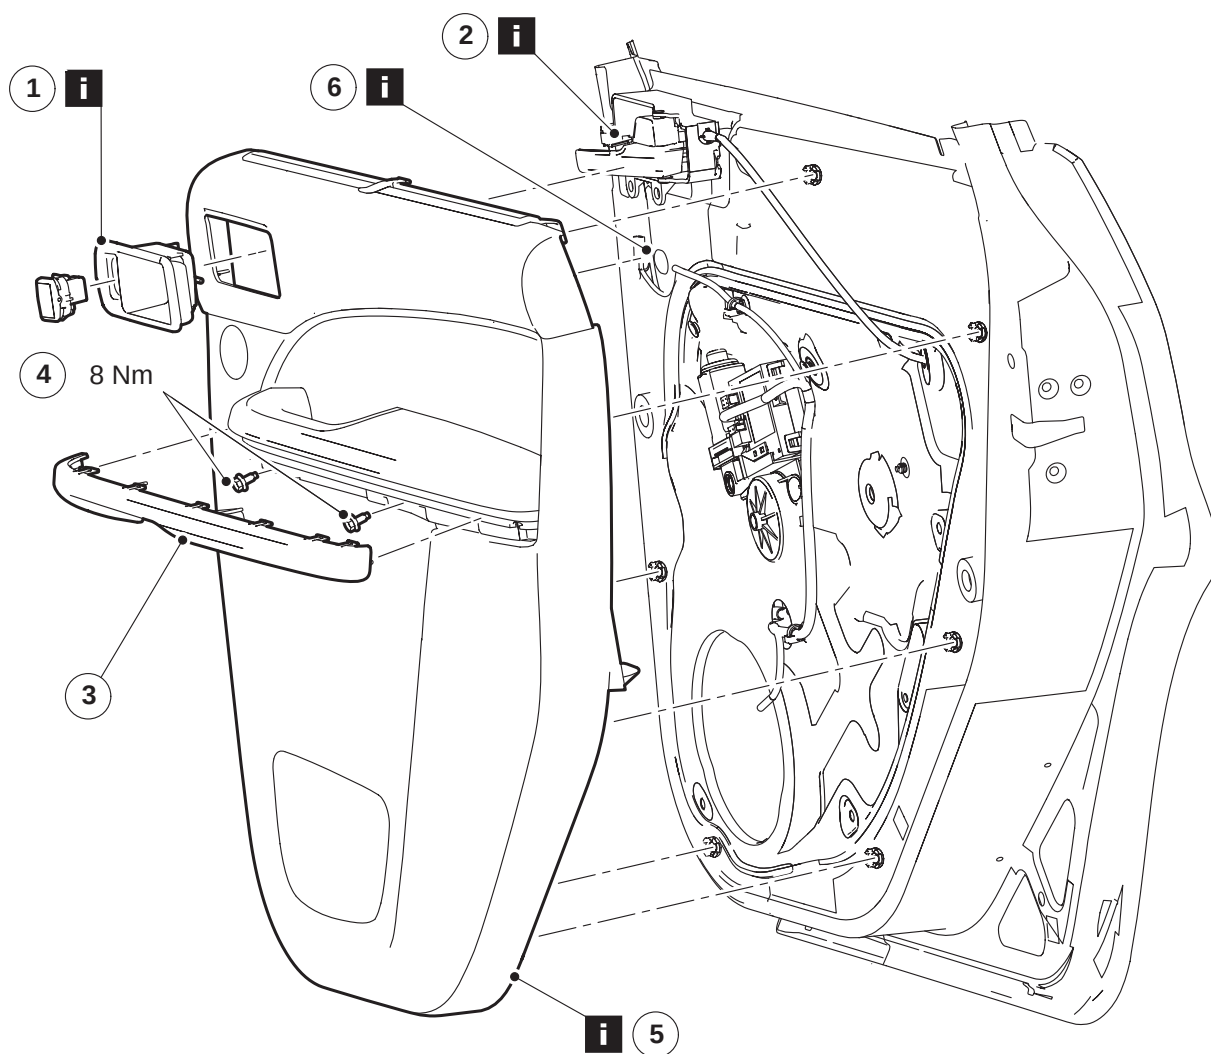


E39500

cardiagn.com

REMOVAL AND INSTALLATION

Item	Description
1	Rear door trim panel latch remote control handle bezel See Removal Detail
2	Rear door trim panel power window switch See Removal Detail
3	Rear door trim panel pull handle cover

Item	Description
4	Rear door trim panel pull handle retaining bolts
5	Rear door trim panel See Removal Detail
6	Rear door trim panel tweeter speaker electrical connector See Removal Detail

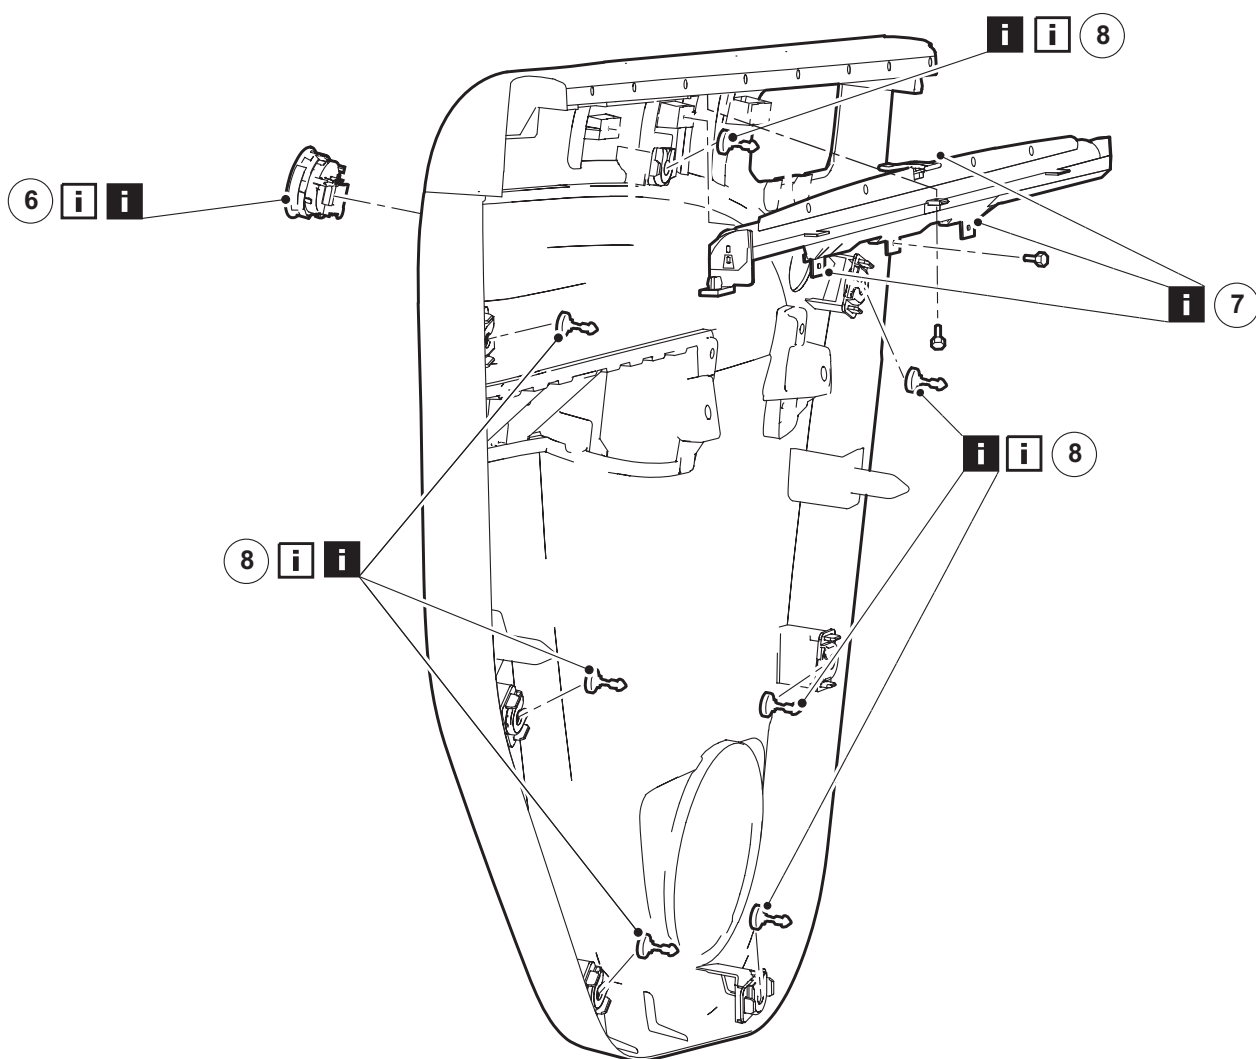

E39504

REMOVAL AND INSTALLATION

Item	Description
6	Rear door trim panel tweeter speaker See Removal Detail See Installation Detail
7	Rear door trim panel blind assembly See Removal Detail
8	Rear door trim panel retaining clips See Removal Detail

Item	Description
	See Installation Detail

3. To install, reverse the removal procedure.

4. Initialize the door window motors.

For additional information, refer to: **Door Window Motor Initialization** (501-11 Glass, Frames and Mechanisms, General Procedures).


Removal Details

Item 1 Rear door trim panel latch remote control handle bezel

1. **NOTE:** Do not place excessive strain on the rear door trim panel power window switch wiring harness).

Detach the rear door trim panel latch release handle bezel (rear door trim panel power window switch shown removed for clarity).

1. Operate the Rear door latch release handle.
2. Detach the rear door latch release handle bezel from the rear door latch release handle.

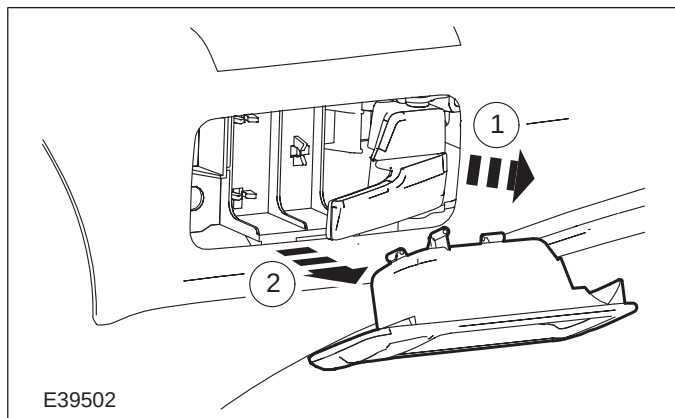


Item 2 Rear door trim panel power window switch

1. Remove the rear door trim panel power window switch.

1. Detach the power window switch from the rear door trim panel latch remote control handle bezel.

2. Disconnect the rear door power window switch electrical connector.

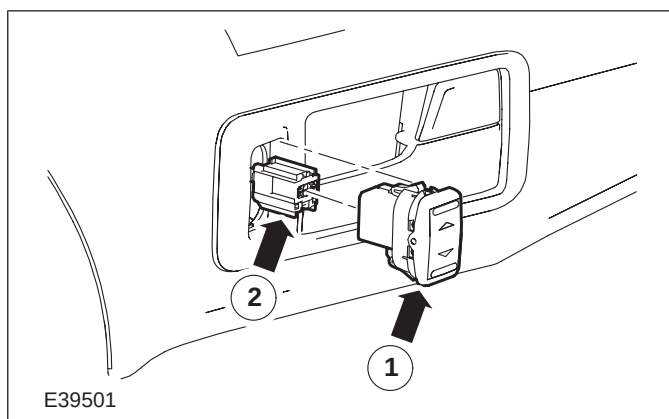


Item 5 Rear door trim panel

1. **NOTE:** Detach the rear door trim panel starting from the top front corner down to the bottom rear corner of the door before the rear door trim panel is completely detached.

NOTE: Do not place excessive strain on the rear door trim panel tweeter speaker wiring harness.


Detach the rear door trim panel.

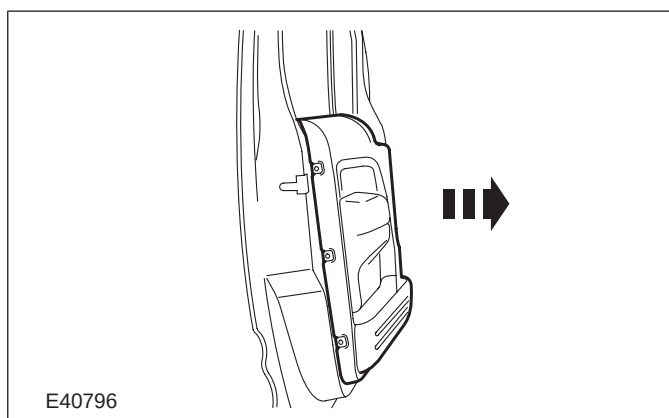

REMOVAL AND INSTALLATION


Item 6 Rear door trim panel tweeter speaker electrical connector

1. Disconnect the rear door trim panel tweeter speaker electrical connector.

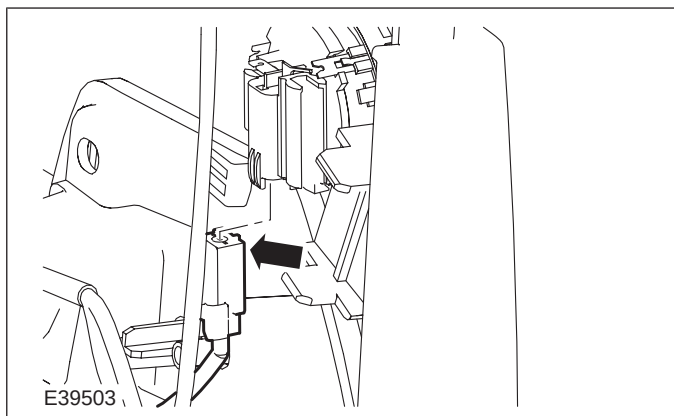**Item 6** Rear door trim panel tweeter speaker


1. Remove the rear door trim panel tweeter speaker.

- Release the locking tangs.

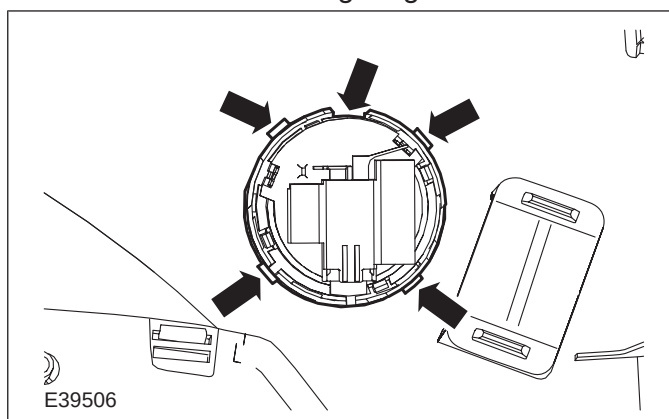**Item 7** Rear door trim panel blind assembly

1. **CAUTION:** Take extra care not to damage the clips.

Detach the rear door trim panel blind assembly from the rear door trim panel.

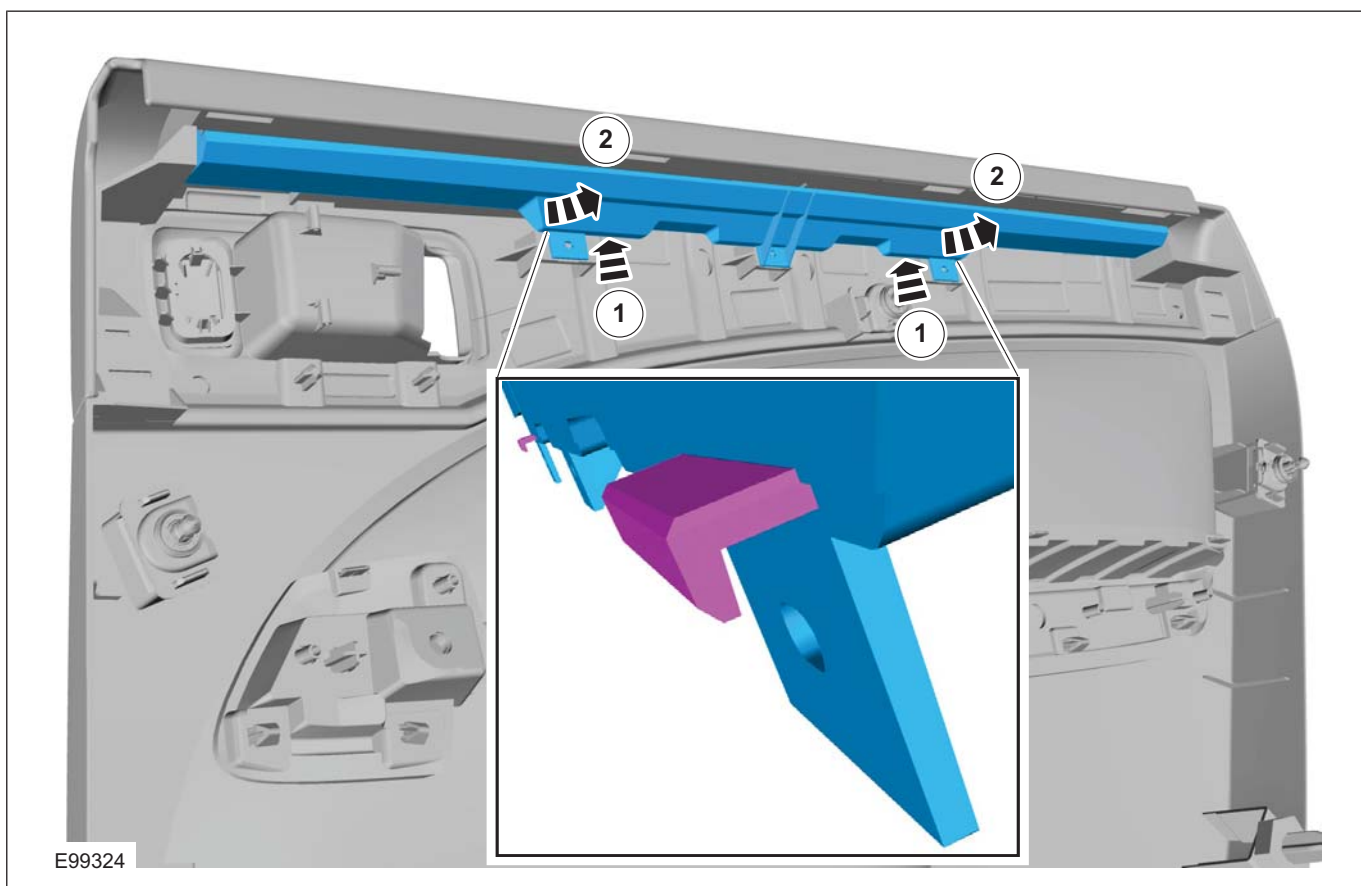


2.

1. Raise the rear door trim panel blind.
2. Move the rear door trim panel blind clip to the vertical position.


REMOVAL AND INSTALLATION

3. Lower the rear door trim panel blind and feed through the rear door trim panel.

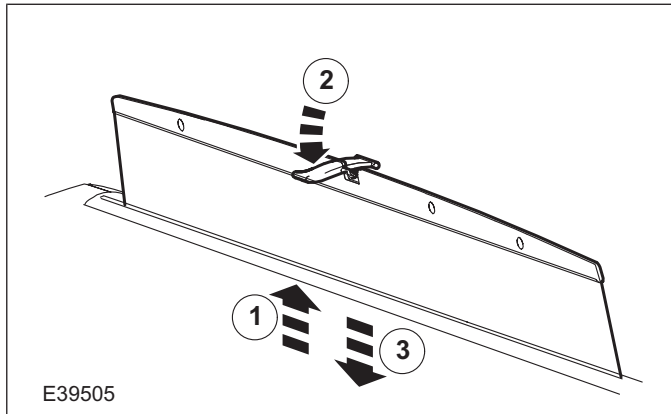**Item 8 Rear door trim panel retaining clips**

1. Remove the rear door trim panel retaining clips.

1. Release the rear door trim panel retaining clip retainer locking tang.
2. Remove the rear door trim panel retaining clip.

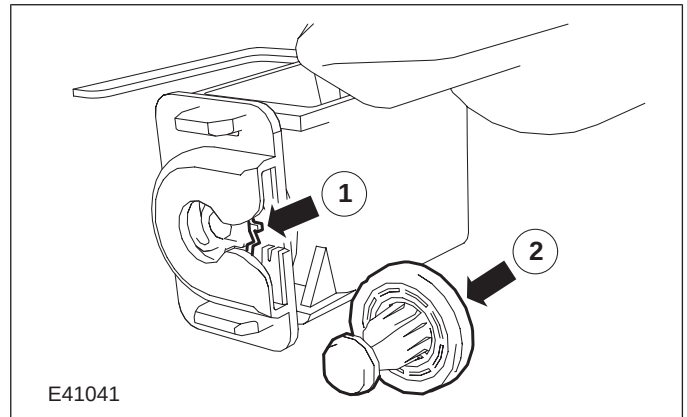**Installation Details****Item 8 Rear door trim panel retaining clips**

1. **NOTE:** Make sure that the rear door trim panel retaining clips are in the closed position.

Install the rear door trim panel retaining clips to the rear door trim panel retaining clip retainer.


Item 6 Rear door trim panel tweeter speaker

1. **CAUTION:** Make sure that the locating tang on the top of the rear door tweeter speaker is correctly aligned with the rear door trim panel groove. Failure to follow this instruction may cause damage to the rear door trim panel.

Install the rear door trim panel tweeter speaker.


REMOVAL AND INSTALLATION**Front Scuff Plate Trim Panel**

1. Remove the components in the order indicated in the following illustration(s) and table(s).

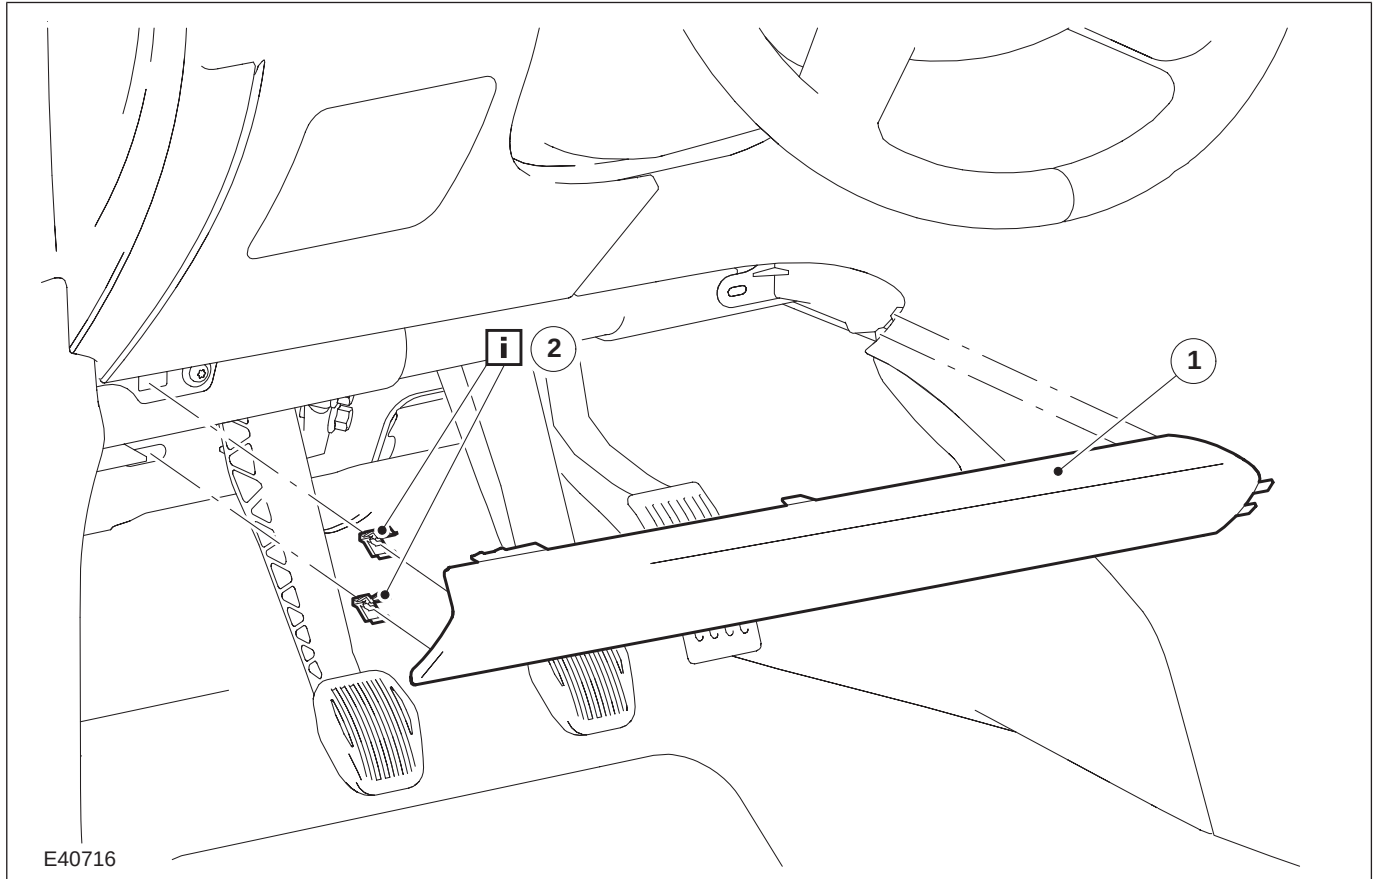

Item	Description
1	Instrument panel lower trim panel
2	Instrument panel lower trim panel retaining clips See Installation Detail

REMOVAL AND INSTALLATION

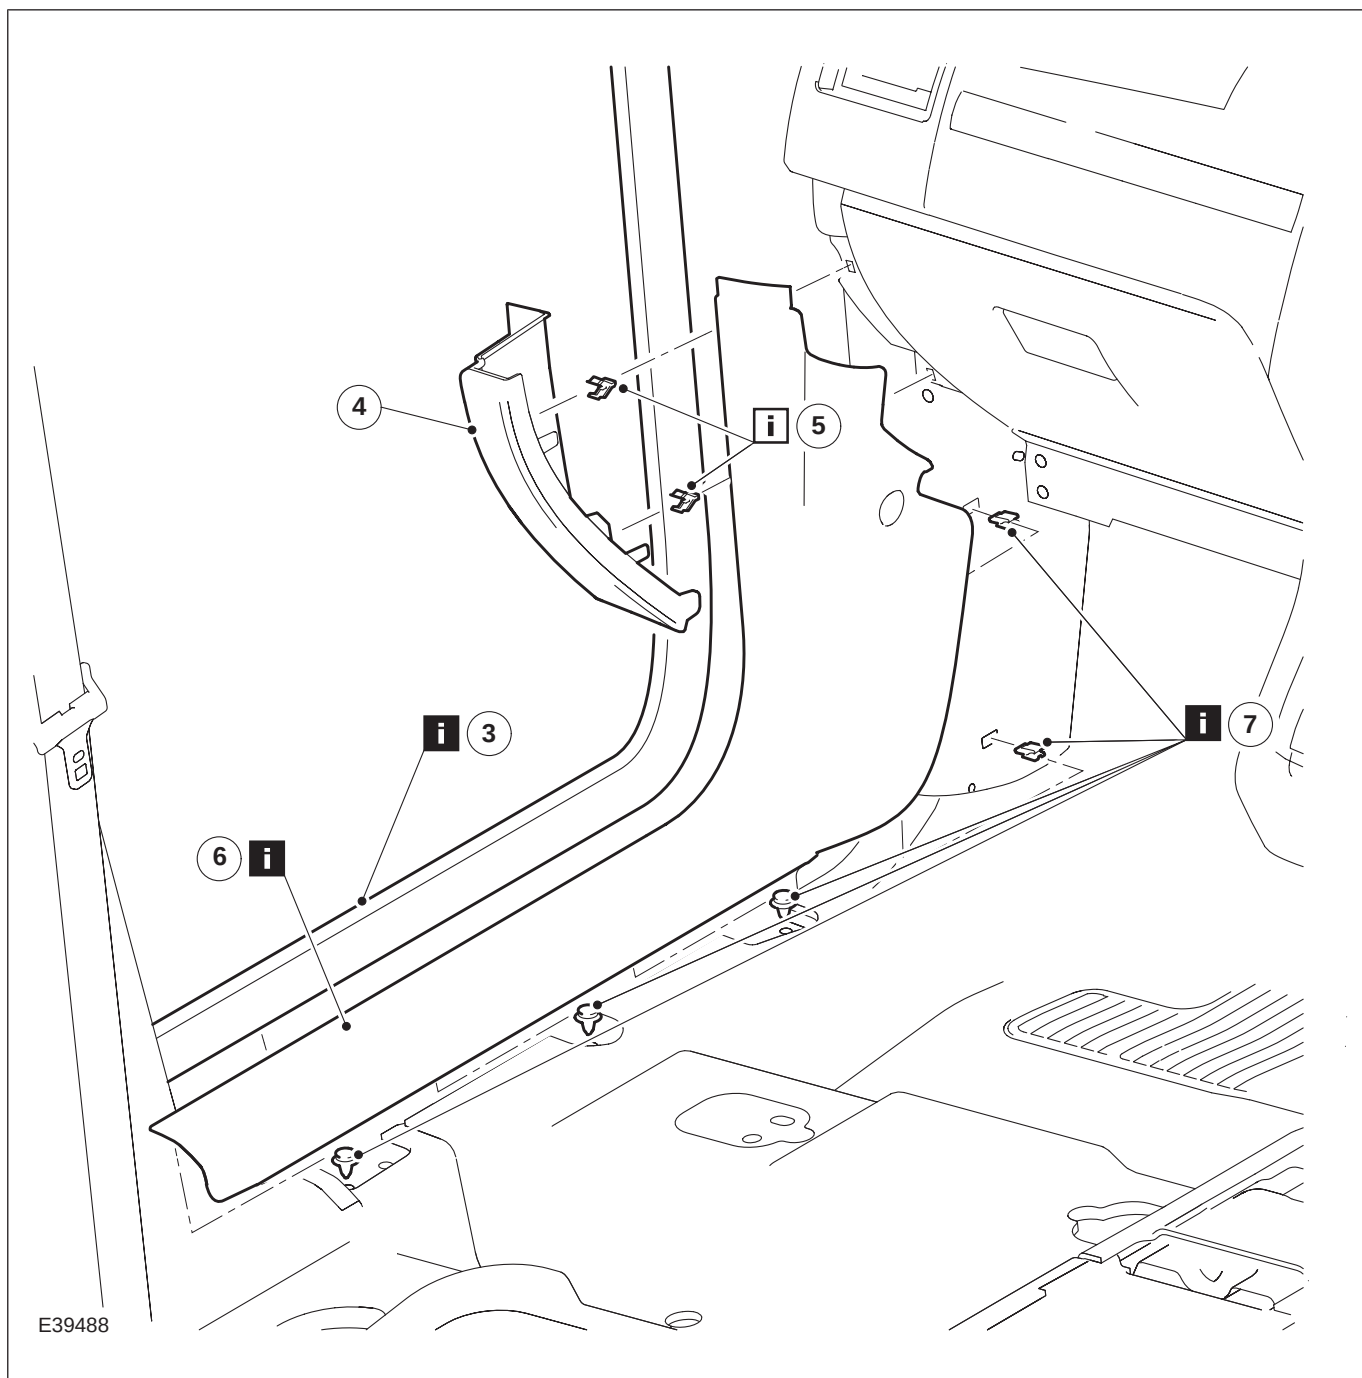

Item	Description
3	Front door opening weatherstrip See Removal Detail
4	Instrument panel side trim panel
5	Instrument panel side trim panel retaining clips See Installation Detail

Item	Description
6	Front scuff plate trim panel See Removal Detail
7	Front scuff plate trim panel retaining clips See Installation Detail

2. To install, reverse the removal procedure.


Removal Details

REMOVAL AND INSTALLATION**Item 3 Front door opening weatherstrip**

1. locally Detach the front door weatherstrip.

Item 6 Front scuff plate trim panel

1. Remove the front scuff plate trim panel.

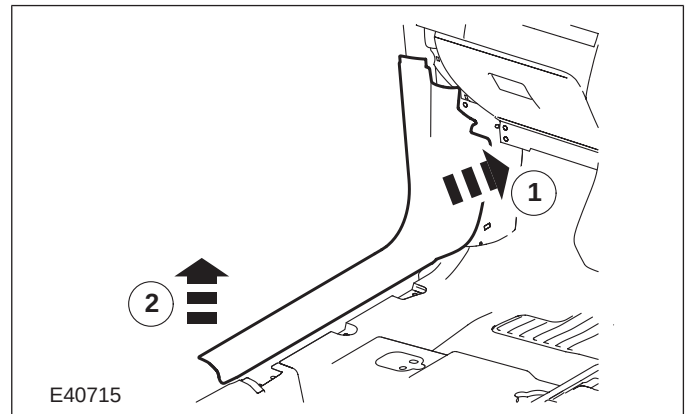**Installation Details****Item 7 Front scuff plate trim panel retaining clips**

1. Install the front scuff plate trim panel retaining clips to the front scuff plate trim panel.


Item 5 Instrument panel side trim panel retaining clips

1. Install the instrument panel side trim panel retaining clips to the instrument panel side trim panel.

REMOVAL AND INSTALLATION

Rear Scuff Plate Trim Panel

1. Remove the rear quarter trim panel,
For additional information, refer to: **Rear Quarter Trim Panel - 5-Door/Wagon** (501-05
- Interior Trim and Ornamentation, Removal and Installation).
2. Remove the components in the order indicated in the following illustration(s) and table(s).

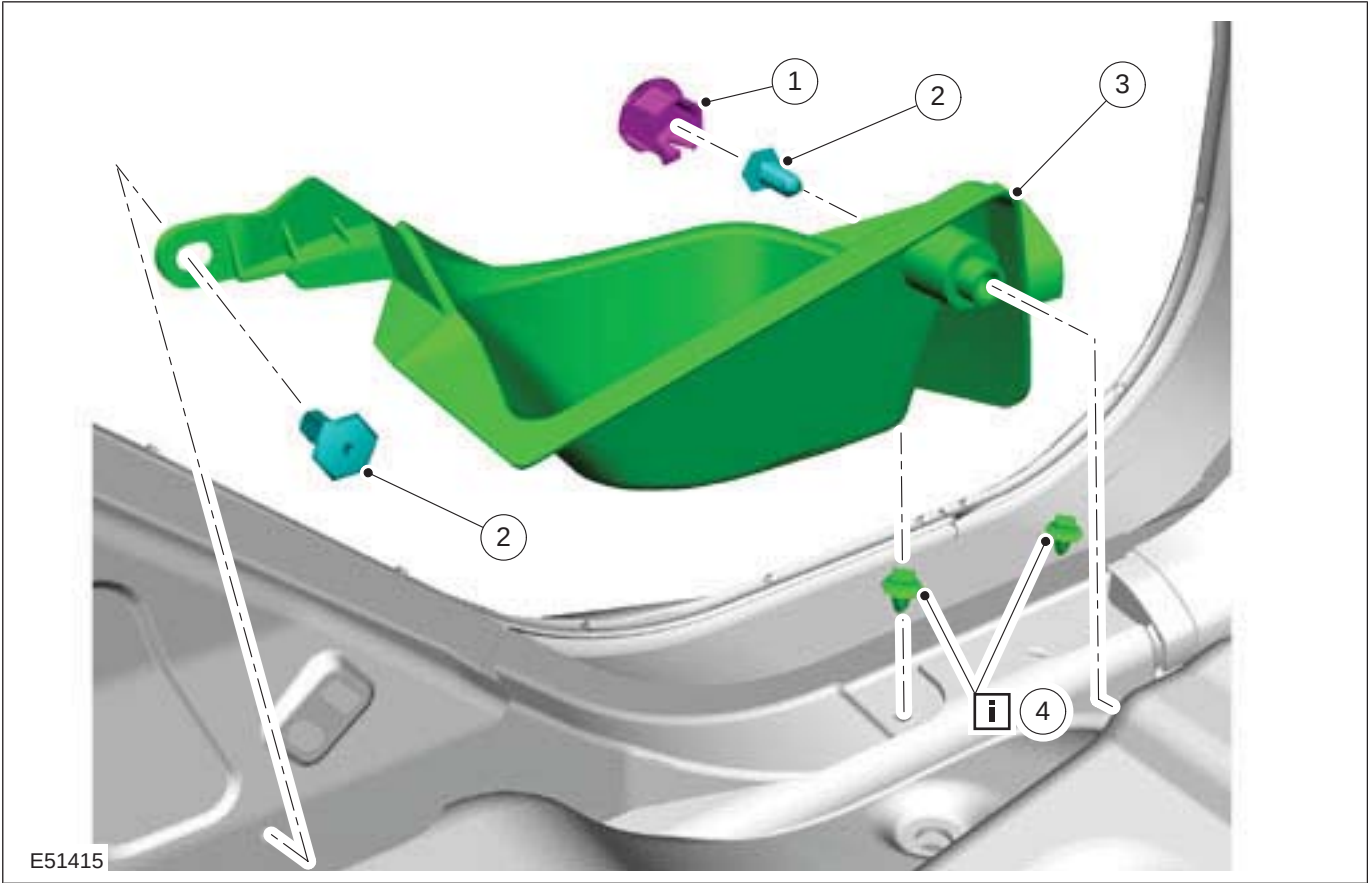

Item	Description
1	Rear scuff plate trim panel retaining clip cover
2	Rear scuff plate trim panel retaining clips

Item	Description
3	Rear scuff plate trim panel
4	Rear scuff plate trim panel retaining clips See Installation Detail

3. To install, reverse the removal procedure.

Installation Details

Item 4 Rear scuff plate trim panel retaining clips

1. Install the rear scuff plate trim panel retaining clips to the rear scuff plate trim panel before the trim panel is installed to the vehicle.

REMOVAL AND INSTALLATION


Loadspace Trim Panel — 3-Door

1. Remove the rear parcel shelf trim panel.

2. Remove the loadspace floor covering.

3. Tilt the rear seat cushion forward.
4. Tilt the rear seat backrest forward.


5. Remove the components in the order indicated in the following illustration(s) and table(s).

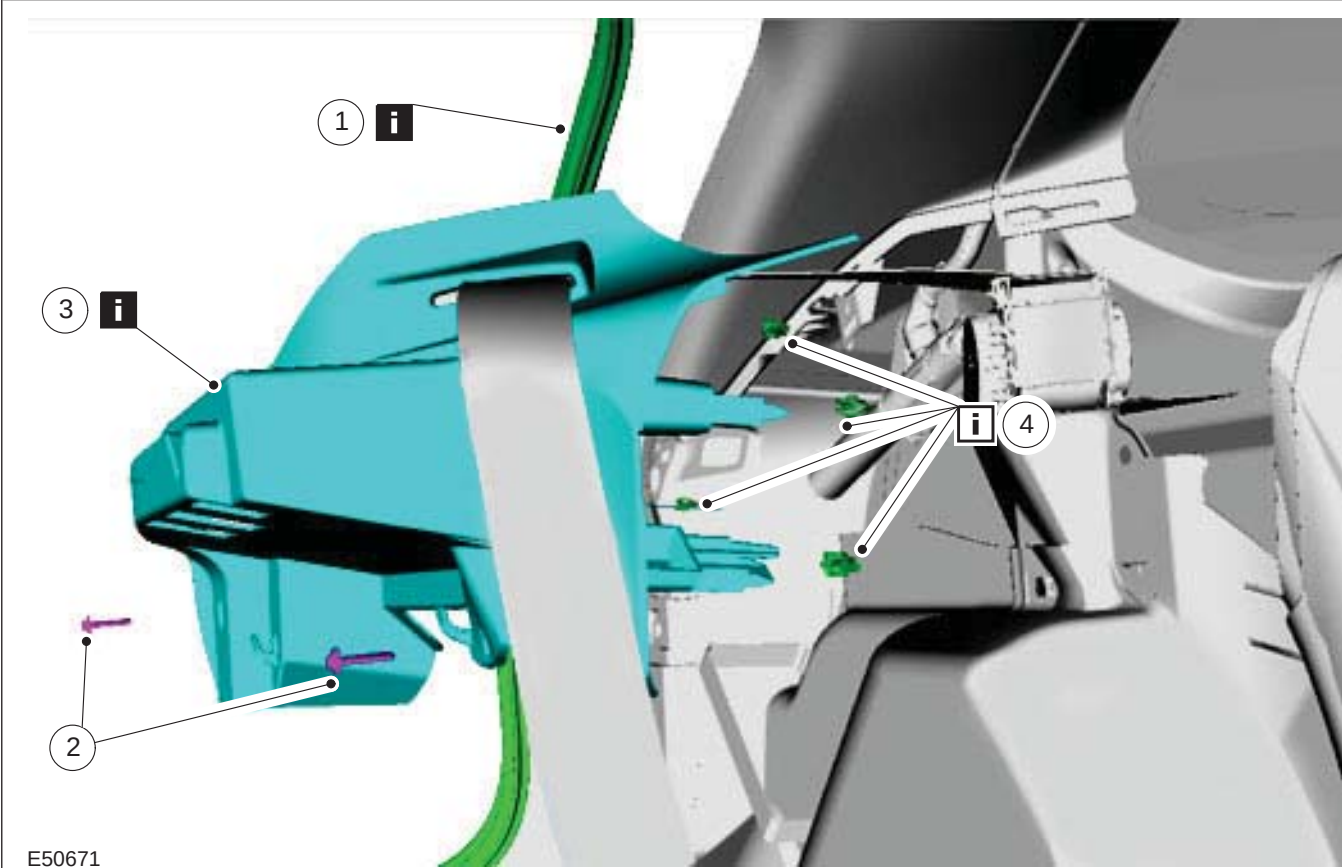

Item	Description
1	Liftgate opening weatherstrip See Removal Detail
2	Rear parcel shelf support trim panel retaining screws

Item	Description
3	Rear parcel shelf support trim panel See Removal Detail
4	Rear parcel shelf support trim panel retaining clips See Installation Detail


REMOVAL AND INSTALLATION

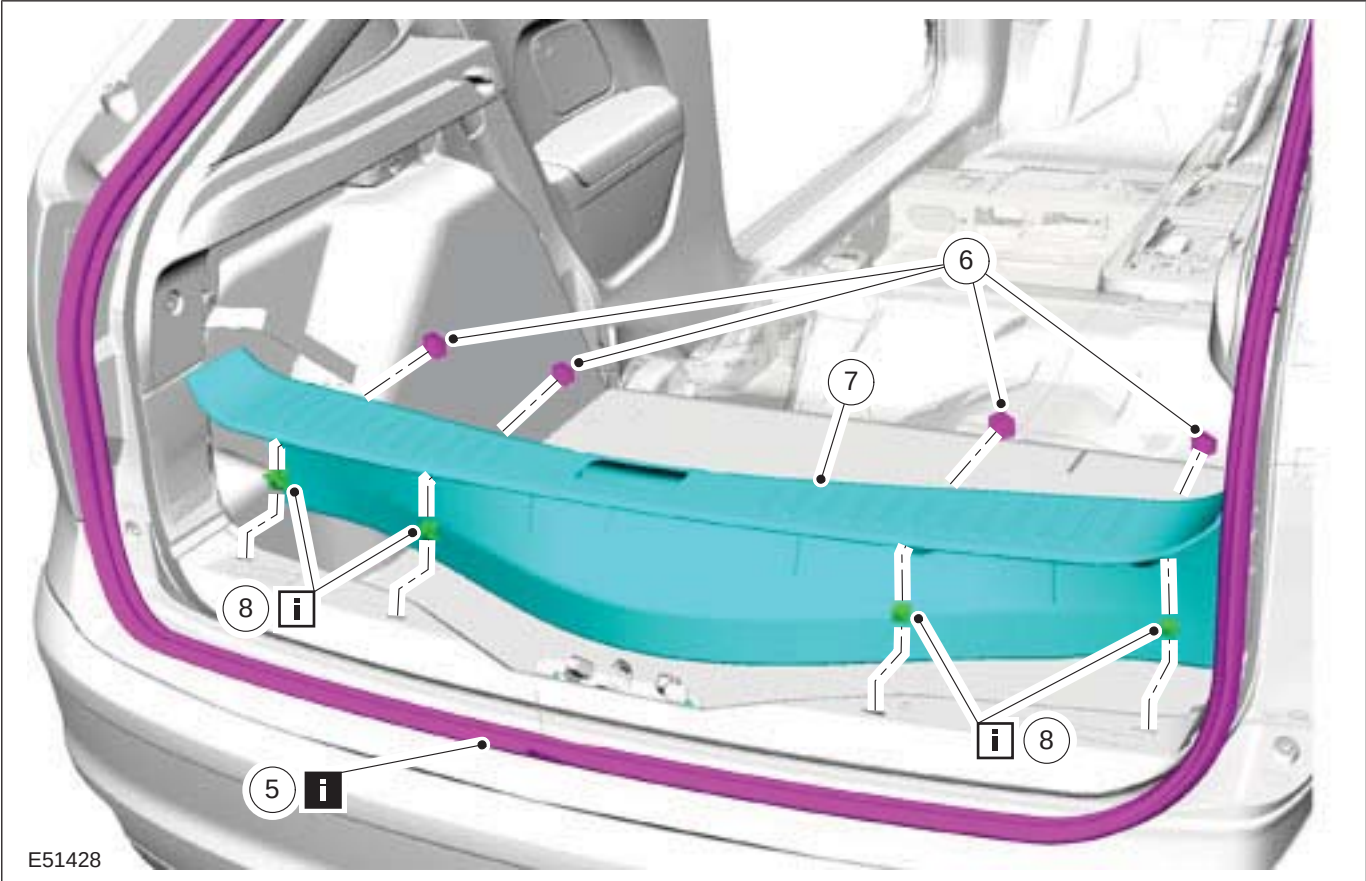

Item	Description
5	Liftgate opening weatherstrip See Removal Detail
6	Loadspace scuff plate trim panel retaining clips

Item	Description
7	Loadspace scuff plate trim panel
8	Loadspace scuff plate trim panel retaining clips See Installation Detail

REMOVAL AND INSTALLATION

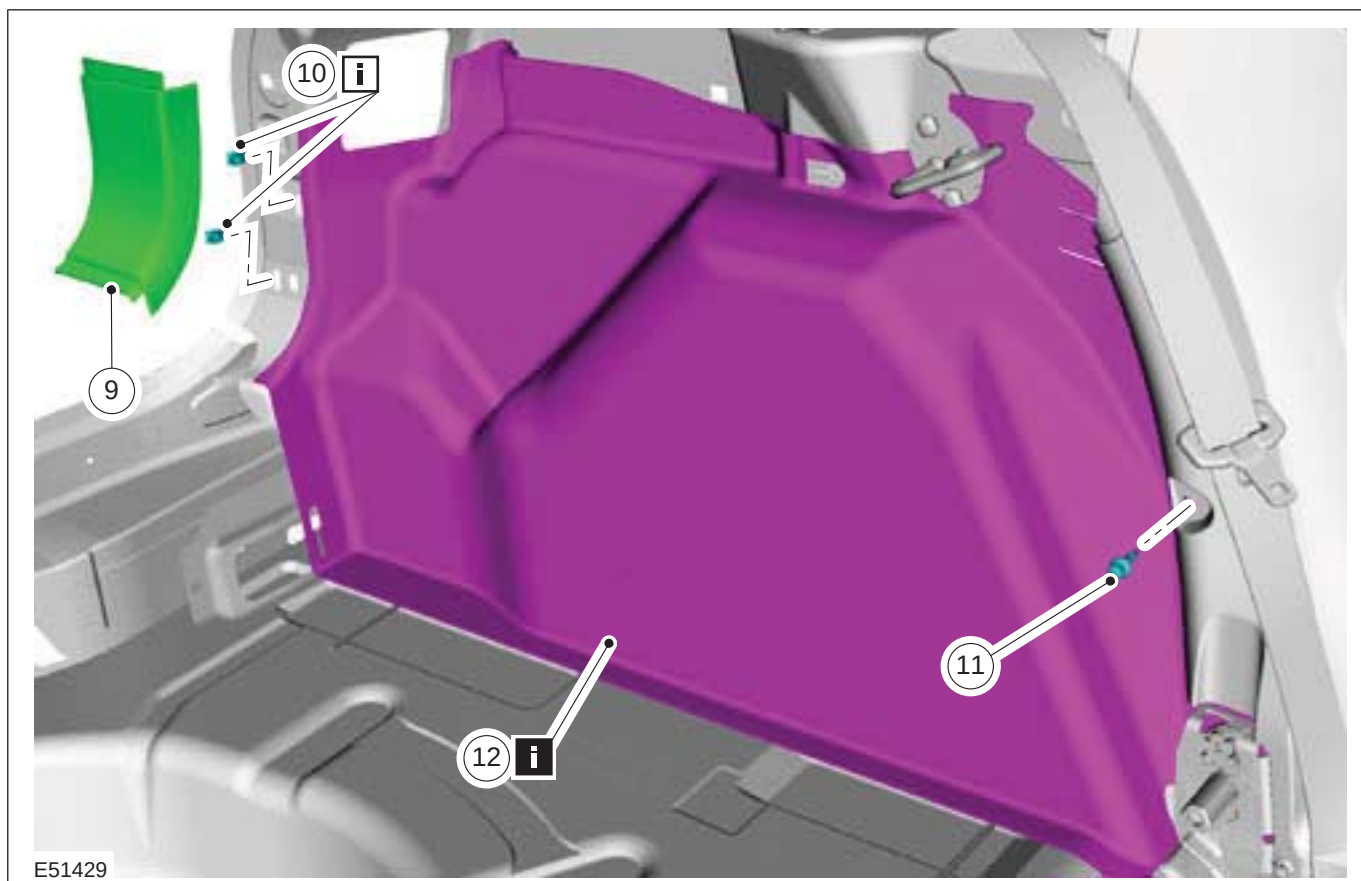

Item	Description
9	Loadspace scuff plate trim panel extension trim panel
10	Loadspace scuff plate trim panel extension trim panel retaining clips See Installation Detail

Item	Description
11	Rear quarter trim panel retaining clip
12	Loadspace trim panel See Removal Detail

6. To install, reverse the removal procedure.

Removal Details

Item 1 Liftgate opening weatherstrip


1. Detach the liftgate opening weatherstrip.

Item 3 Rear parcel shelf support trim panel

1. Detach the rear parcel shelf support trim panel.


- Pull the rear parcel shelf support trim panel away from the rear quarter body panel to

release the retaining tang from the rear quarter window glass trim panel.

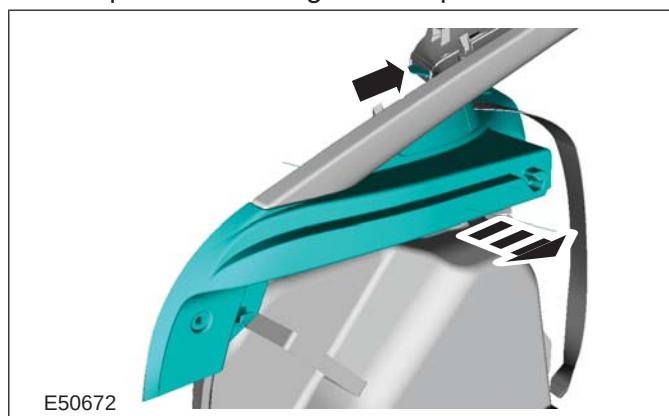

REMOVAL AND INSTALLATION

2. Disconnect the electrical connectors (if equipped).

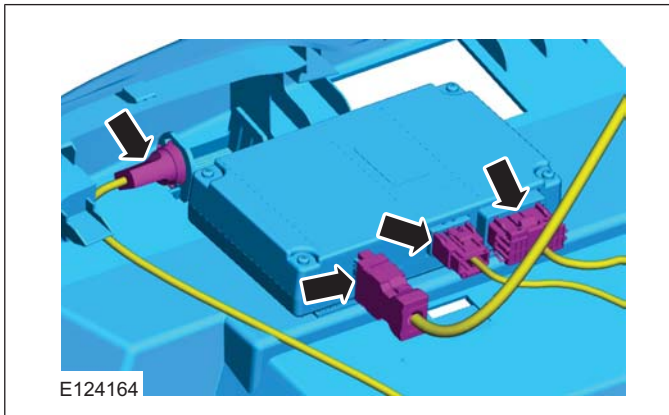**Item 5 Liftgate opening weatherstrip**

1. Locally detach the liftgate opening weatherstrip.

Item 12 Loadspace trim panel

1. Gently Pull the rear quarter trim panel towards the center of the vehicle to allow the loadspace trim panel to be removed.

Installation Details**Item 10 Loadspace scuff plate trim panel extension trim panel retaining clips**

1. Install the loadspace scuff plate trim panel extension trim panel retaining clips to the loadspace scuff plate trim panel extension trim panel before the loadspace scuff plate trim panel extension trim panel is installed to the vehicle.

Item 8 Loadspace scuff plate trim panel retaining clips

1. Install the loadspace scuff plate trim panel retaining clips to the loadspace scuff plate trim panel before the loadspace scuff plate trim panel is installed to the vehicle.

Item 4 Rear parcel shelf support trim panel retaining clips

1. Install the rear parcel shelf support trim panel retaining clips to the rear parcel shelf support trim panel before the rear parcel shelf support trim panel is installed to the vehicle.

REMOVAL AND INSTALLATION

Loadspace Trim Panel — 5-Door

1. Remove the rear parcel shelf.


2. Remove the loadspace floor covering.

3. Tilt the rear seat cushion forward.

4. Tilt the rear seat backrest forward.
5. Remove the C-pillar trim panel.

For additional information, refer to: **C-Pillar Trim Panel - 4-Door/5-Door** (501-05 Interior Trim and Ornamentation, Removal and Installation).


6. Remove the components in the order indicated in the following illustration(s) and table(s).

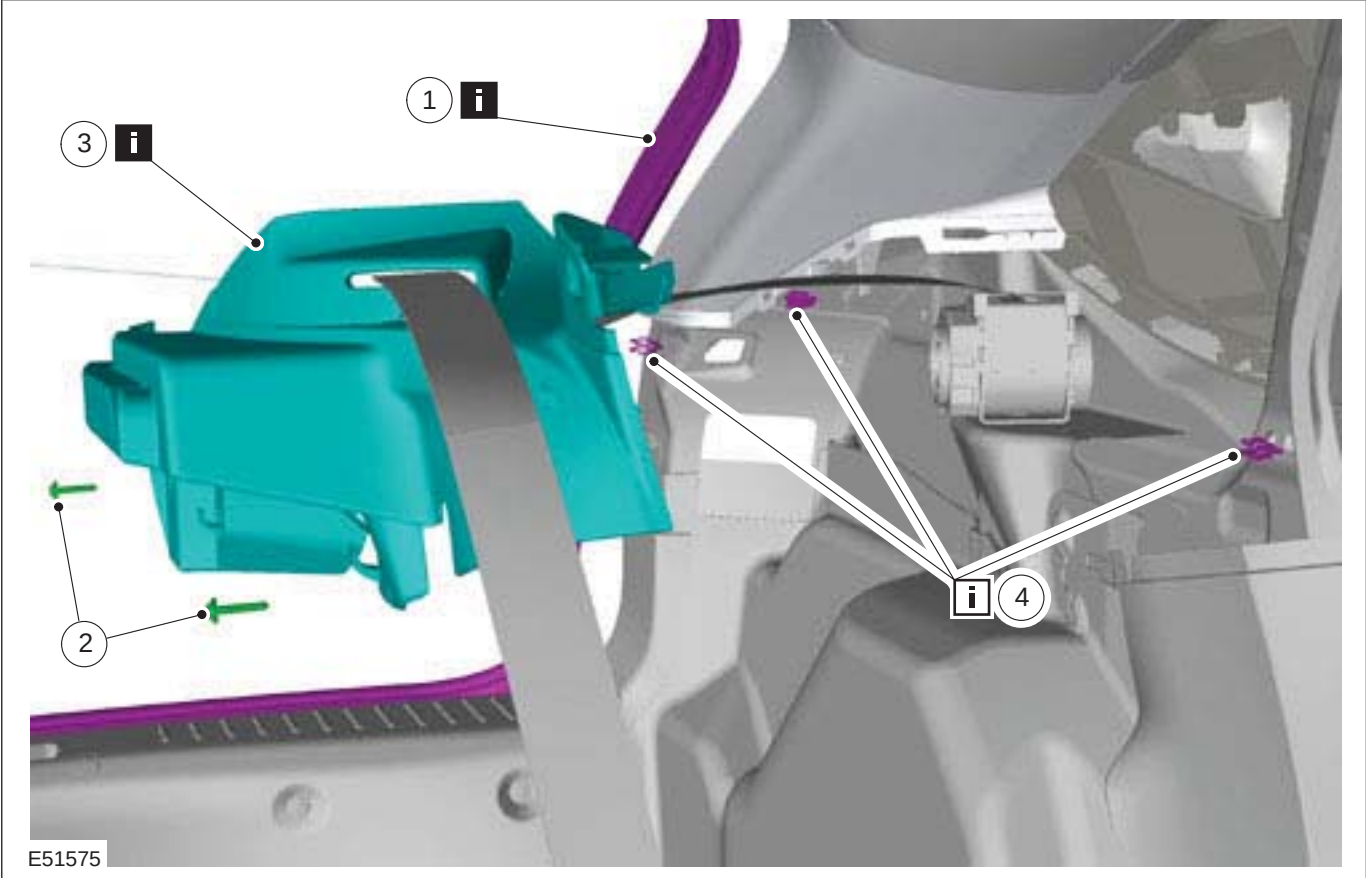

Item	Description
1	Liftgate opening weatherstrip See Removal Detail
2	Rear parcel shelf support trim panel retaining screws

Item	Description
3	Rear parcel shelf support trim panel See Removal Detail
4	Rear parcel shelf support trim panel retaining clips See Installation Detail


REMOVAL AND INSTALLATION

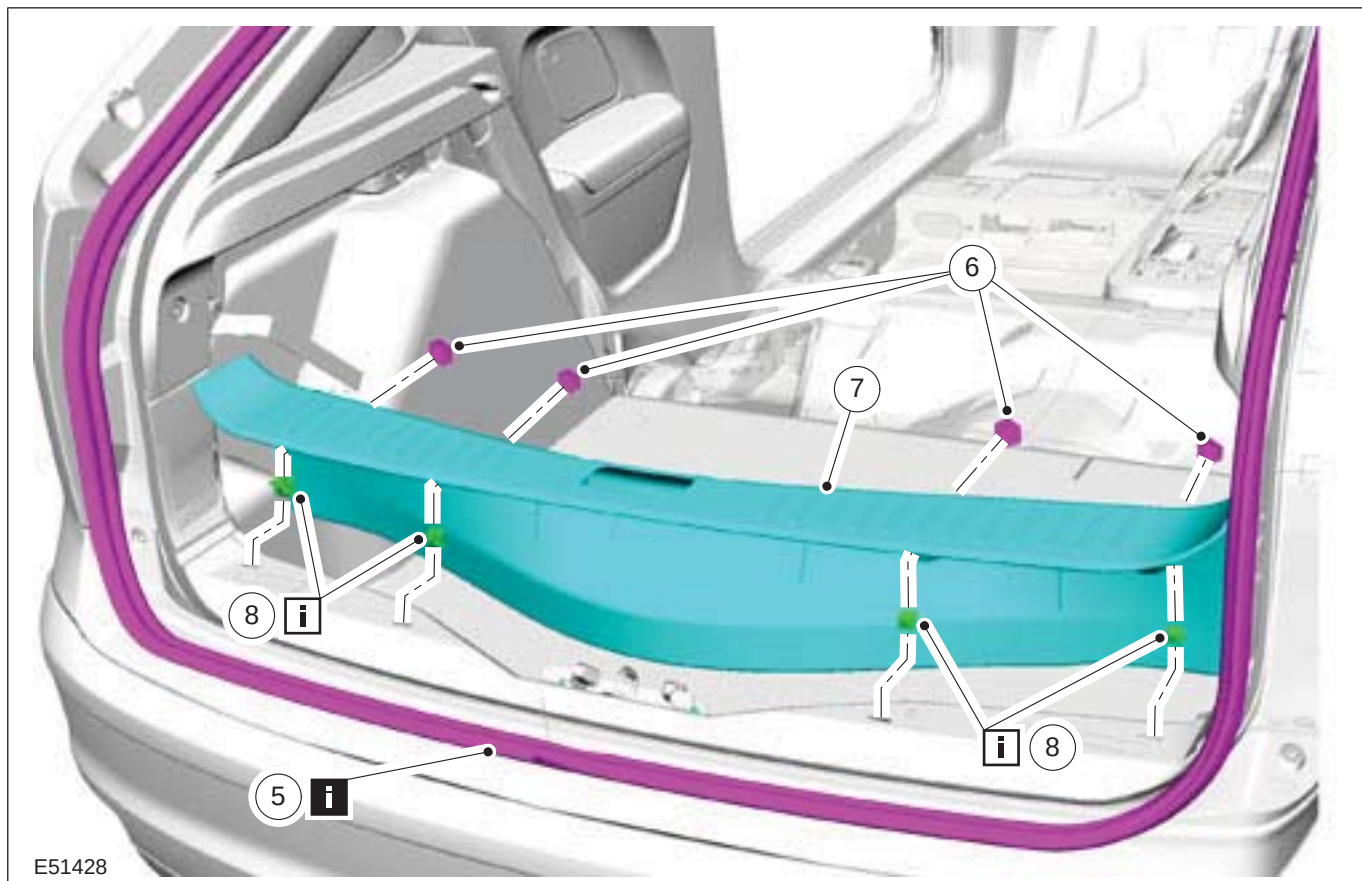

Item	Description
5	Liftgate opening weatherstrip See Removal Detail
6	Loadspace scuff plate trim panel retaining clips

Item	Description
7	Loadspace scuff plate trim panel
8	Loadspace scuff plate trim panel retaining clips See Installation Detail

REMOVAL AND INSTALLATION

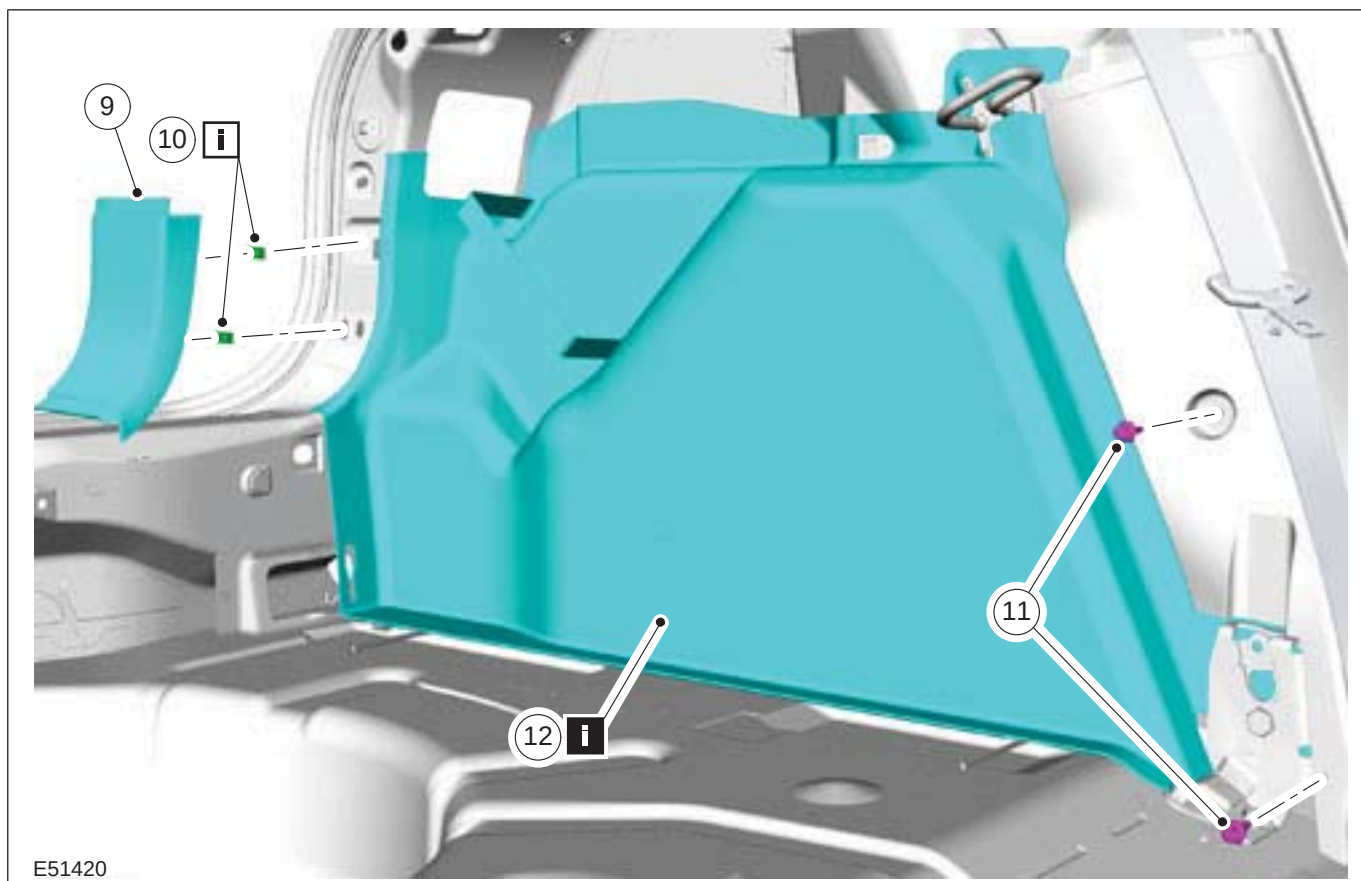

Item	Description
9	Loadspace scuff plate trim panel extension trim panel
10	Loadspace scuff plate trim panel extension trim panel retaining clips See Installation Detail

Item	Description
11	Rear quarter trim panel retaining clips
12	Loadspace trim panel See Removal Detail

7. To install, reverse the removal procedure.

Removal Details

Item 1 Liftgate opening weatherstrip


1. Detach the liftgate opening weatherstrip.

Item 3 Rear parcel shelf support trim panel

1. Detach the rear parcel shelf support trim panel.


- Pull the rear parcel shelf support trim panel away from the rear quarter body panel to

release the retaining tang from the rear quarter window glass trim panel.

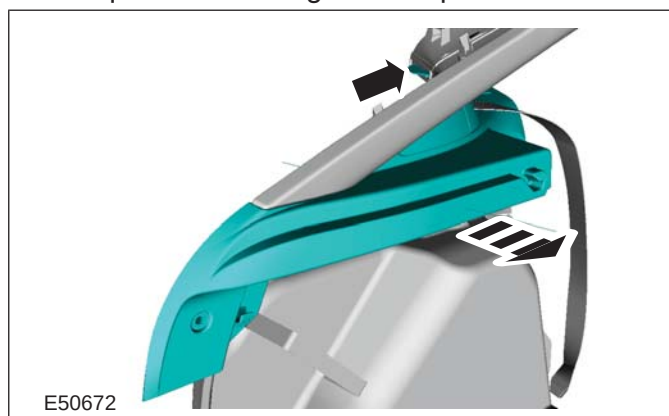

REMOVAL AND INSTALLATION

2. Disconnect the electrical connectors (if equipped).

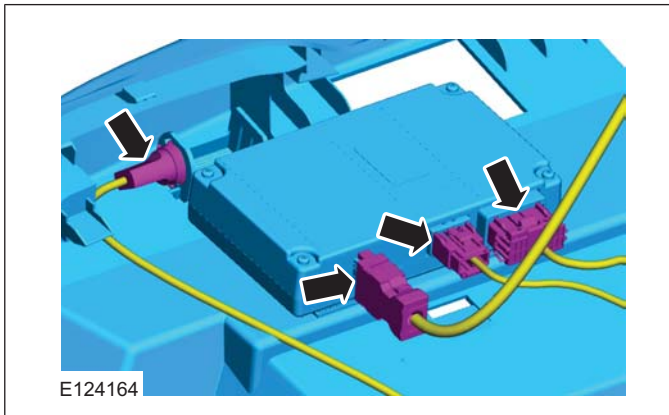**Item 5 Liftgate opening weatherstrip**

1. Detach the liftgate opening weatherstrip.

Item 12 Loadspace trim panel

1. Gently pull the rear quarter trim panel towards the center of the vehicle to allow the loadspace trim panel to be removed.

Installation Details**Item 10 Loadspace scuff plate trim panel extension trim panel retaining clips**

1. Install the loadspace scuff plate trim panel extension trim panel retaining clips to the loadspace scuff plate trim panel extension trim panel before the loadspace scuff plate trim panel extension trim panel is installed.

Item 8 Loadspace scuff plate trim panel retaining clips

1. Install the loadspace scuff plate trim panel retaining clips to the loadspace scuff plate trim panel before the loadspace scuff plate trim panel is installed.

Item 4 Rear parcel shelf support trim panel retaining clips

1. Install the rear parcel shelf support trim panel retaining clips to the rear parcel shelf support trim panel before the rear parcel shelf support trim panel is installed to the vehicle.

REMOVAL AND INSTALLATION

Headliner — 3-Door, Vehicles With: Sliding Roof Opening Panel

General Equipment

Draw cord


1. Disconnect the battery ground cable.

For additional information, refer to: **Battery Disconnect and Connect** (414-01 Battery, Mounting and Cables, General Procedures).

2. Remove the A-pillar trim panels.

For additional information, refer to: **A-Pillar Trim Panel** (501-05 Interior Trim and Ornamentation, Removal and Installation).

3. Disconnect the rear window washer tube.

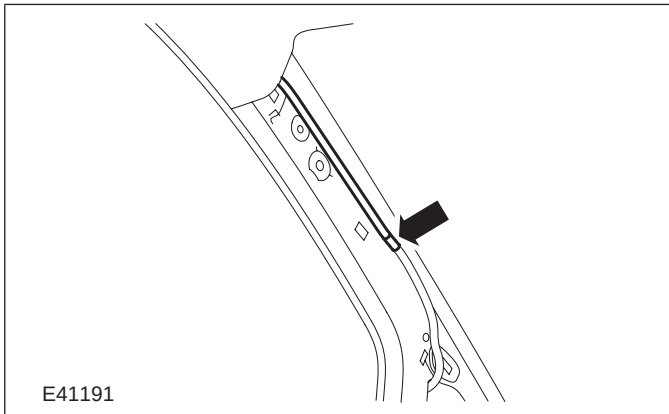


4. Remove the overhead console.

For additional information, refer to: **Overhead Console** (501-12 Instrument Panel and Console, Removal and Installation).


5. Remove the C-pillar trim panels.

For additional information, refer to: **C-Pillar Trim Panel - 3-Door** (501-05 Interior Trim and Ornamentation, Removal and Installation).


6. Disconnect the rear window washer tube.

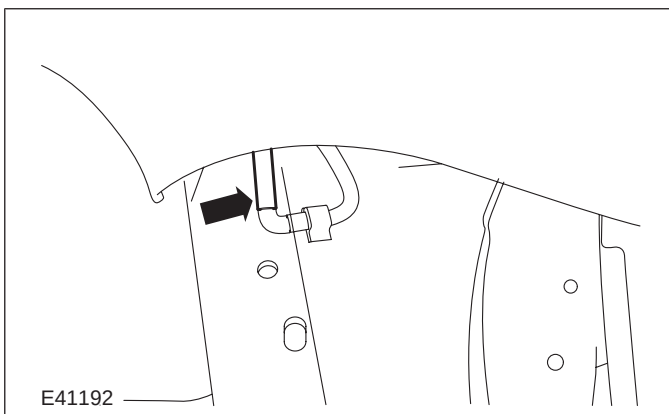

7. Remove the instrument panel passenger side lower trim panel.

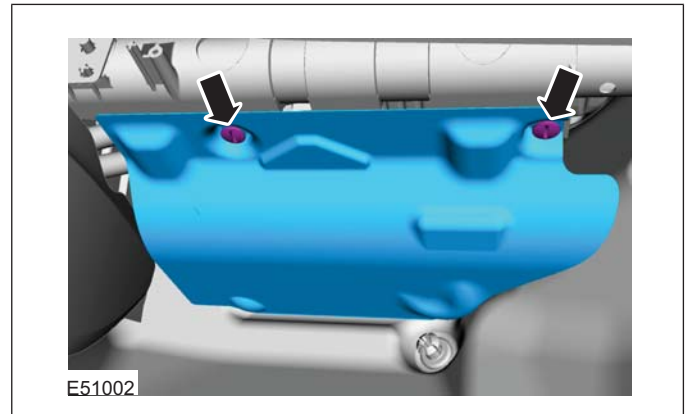


8. Lower the central junction box (CJB).

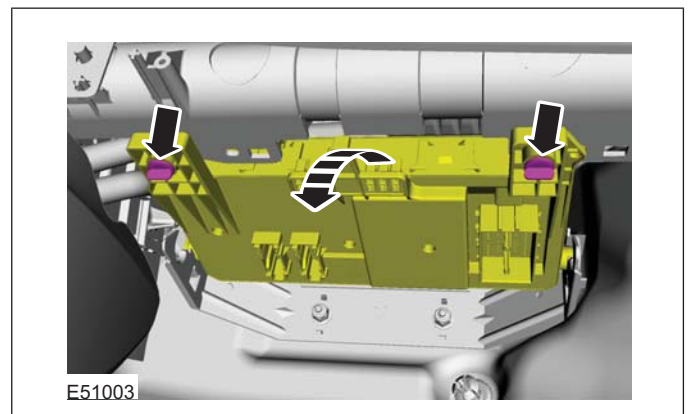


9. Open the glove compartment lid.

10. Remove the navigation system Digital Versatile Disc (DVD) unit access cover (if equipped).

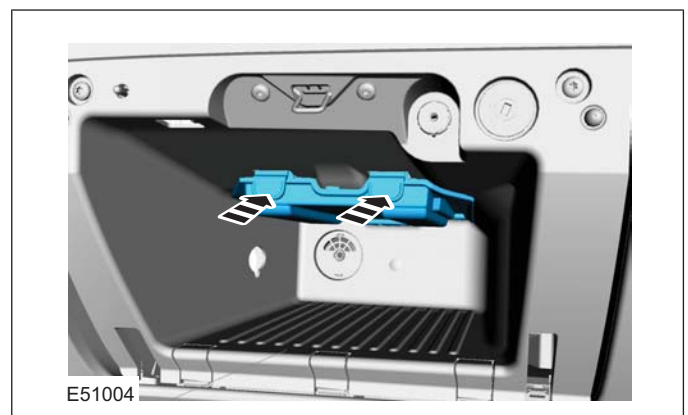

11. Remove the components in the order indicated in the following illustration(s) and table(s).


REMOVAL AND INSTALLATION

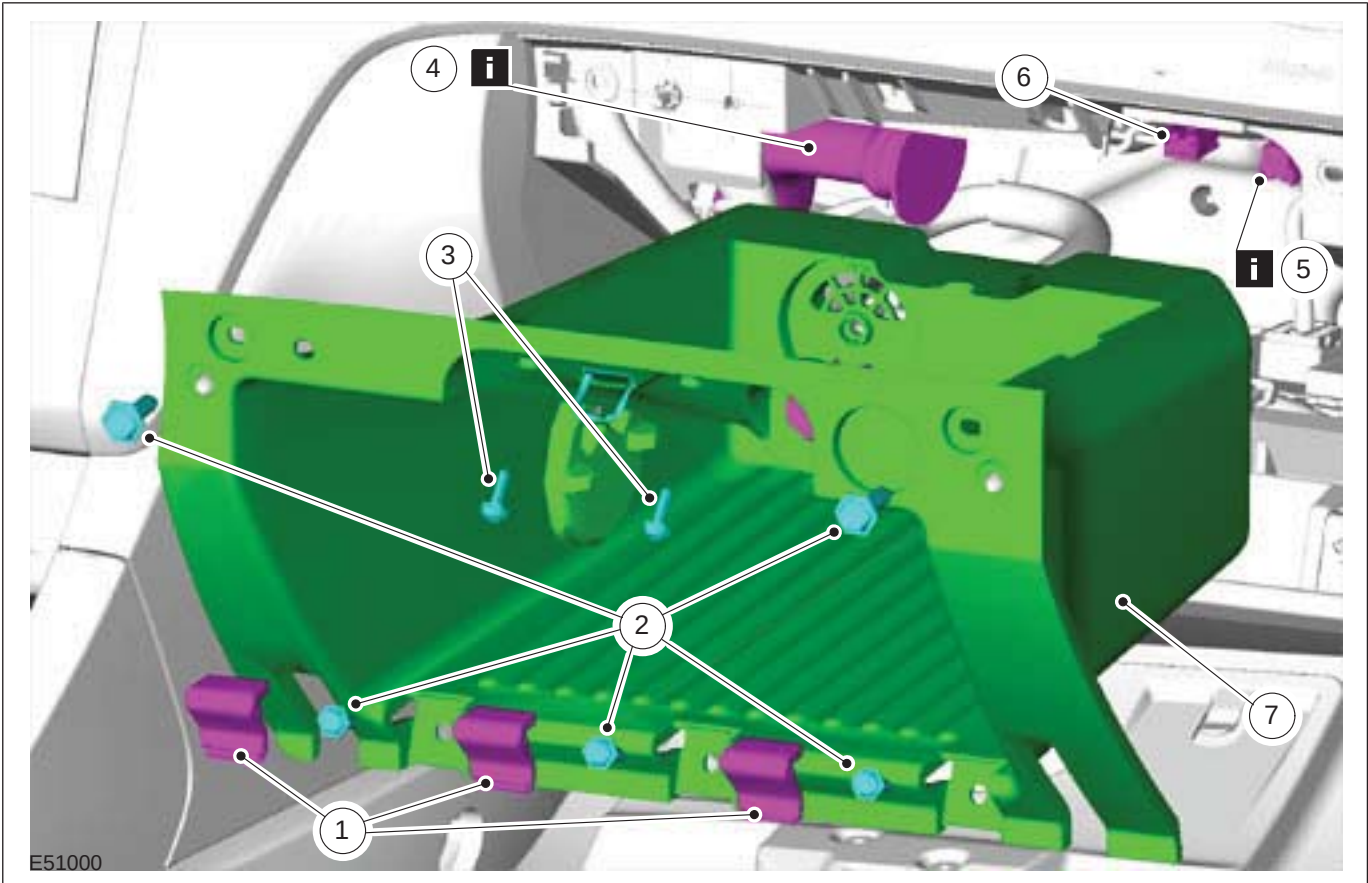

Item	Description
1	Glove compartment retaining screw covers
2	Glove compartment retaining screws
3	Glove compartment lid striker retaining screws
4	Glove compartment cooling hose See Removal Detail

Item	Description
5	Moving pictures experts group audio layer 3 (MP3) auxiliary connector electrical connector. (If equipped) See Removal Detail
6	Passenger airbag deactivation switch electrical connector. (If equipped)
7	Glove compartment housing


REMOVAL AND INSTALLATION

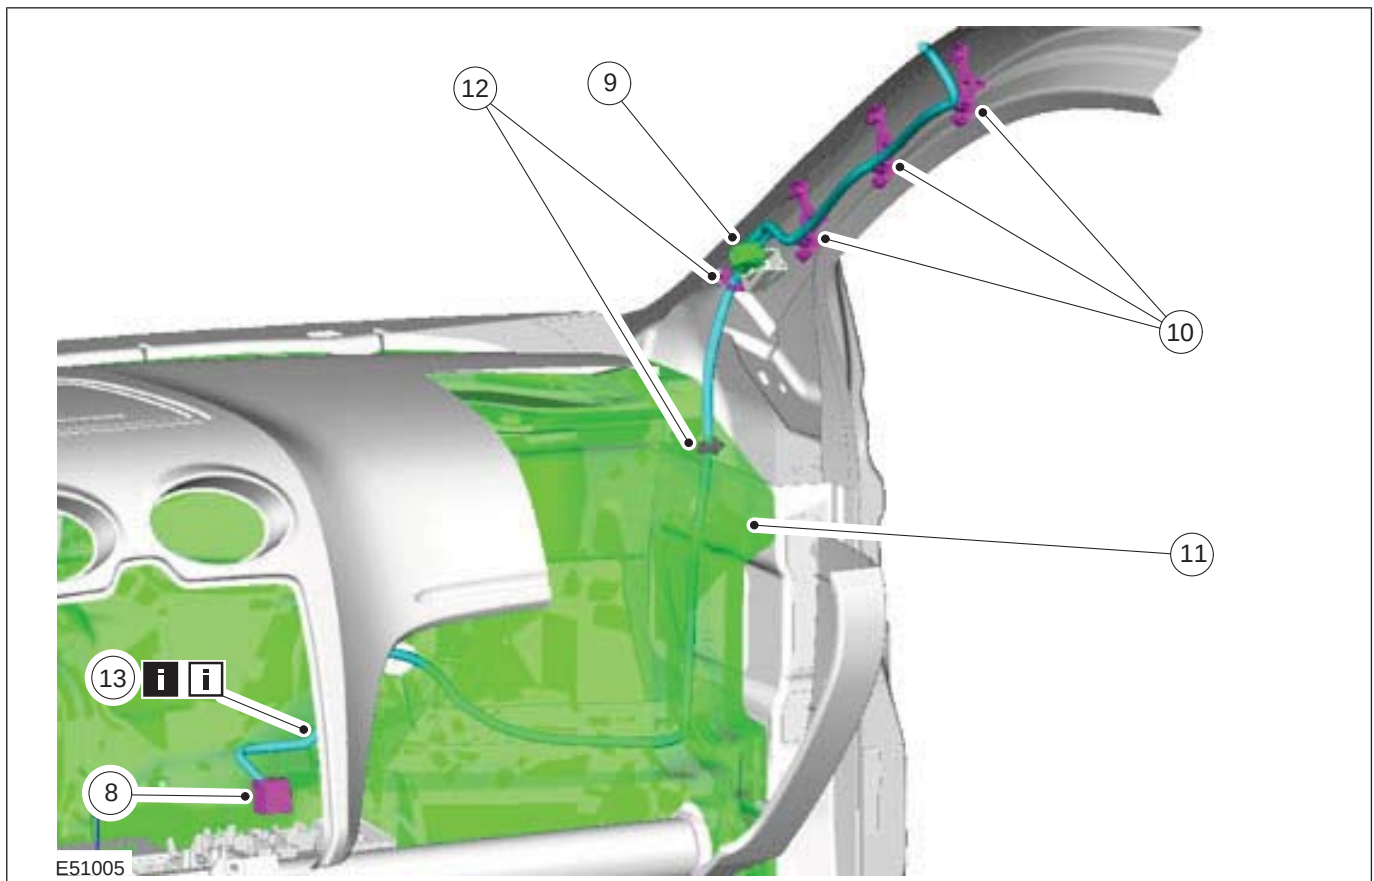

Item	Description
8	Roof wiring harness to CJB electrical connector
9	Roof wiring harness electrical connector
10	Roof wiring harness to A-pillar retaining clips

Item	Description
11	Noise, vibration and harshness (NVH) material See Removal Detail See Installation Detail
12	Roof wiring harness retaining clips
13	Roof wiring harness See Removal Detail See Installation Detail


REMOVAL AND INSTALLATION

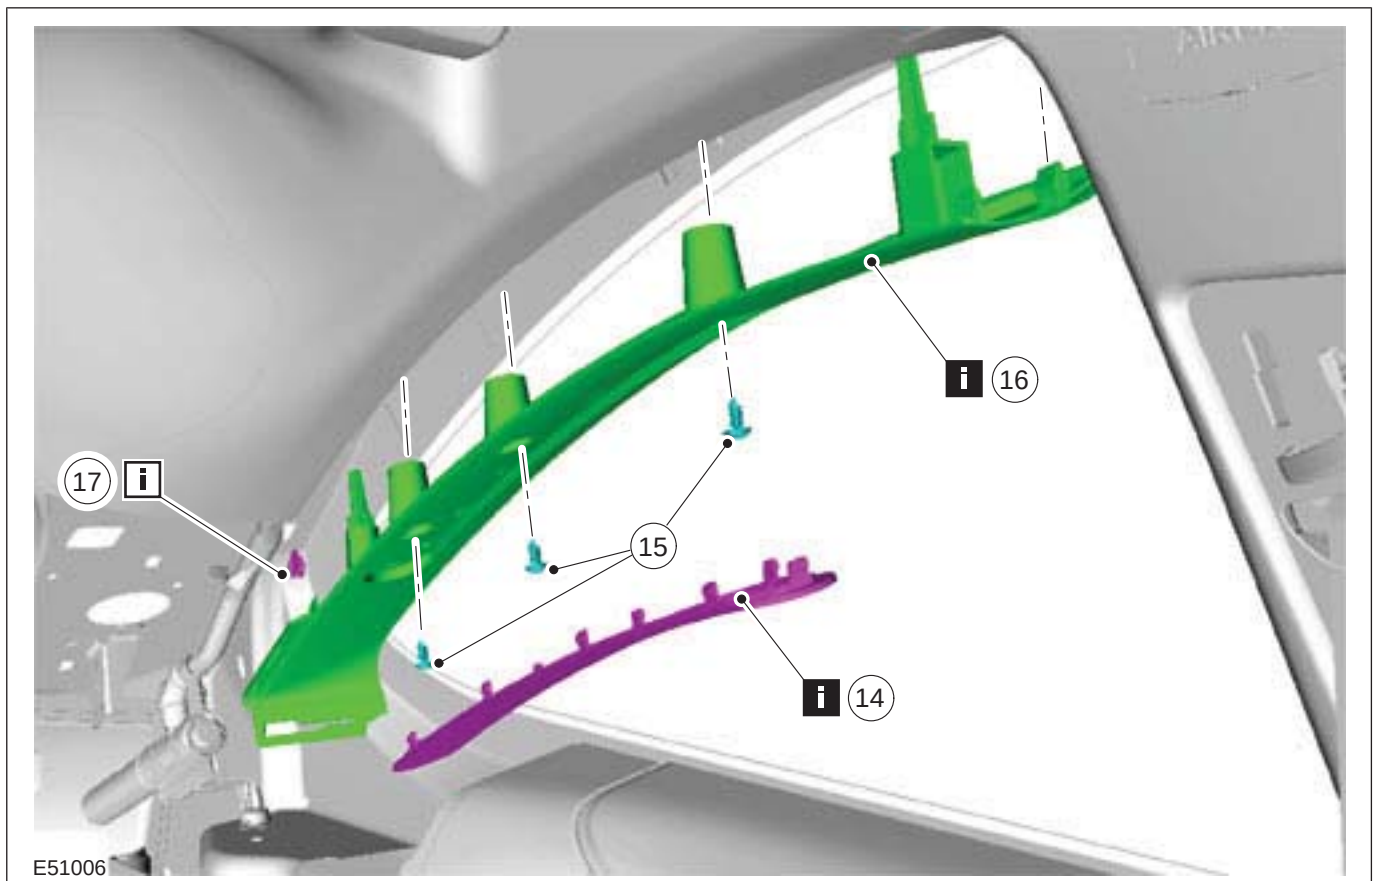

Item	Description
14	Rear quarter window glass trim panel retaining screw trim covers See Removal Detail
15	Rear quarter window glass trim panel retaining screws

Item	Description
16	Rear quarter window glass trim panels See Removal Detail
17	Rear quarter window glass trim panel retaining clips See Installation Detail


REMOVAL AND INSTALLATION

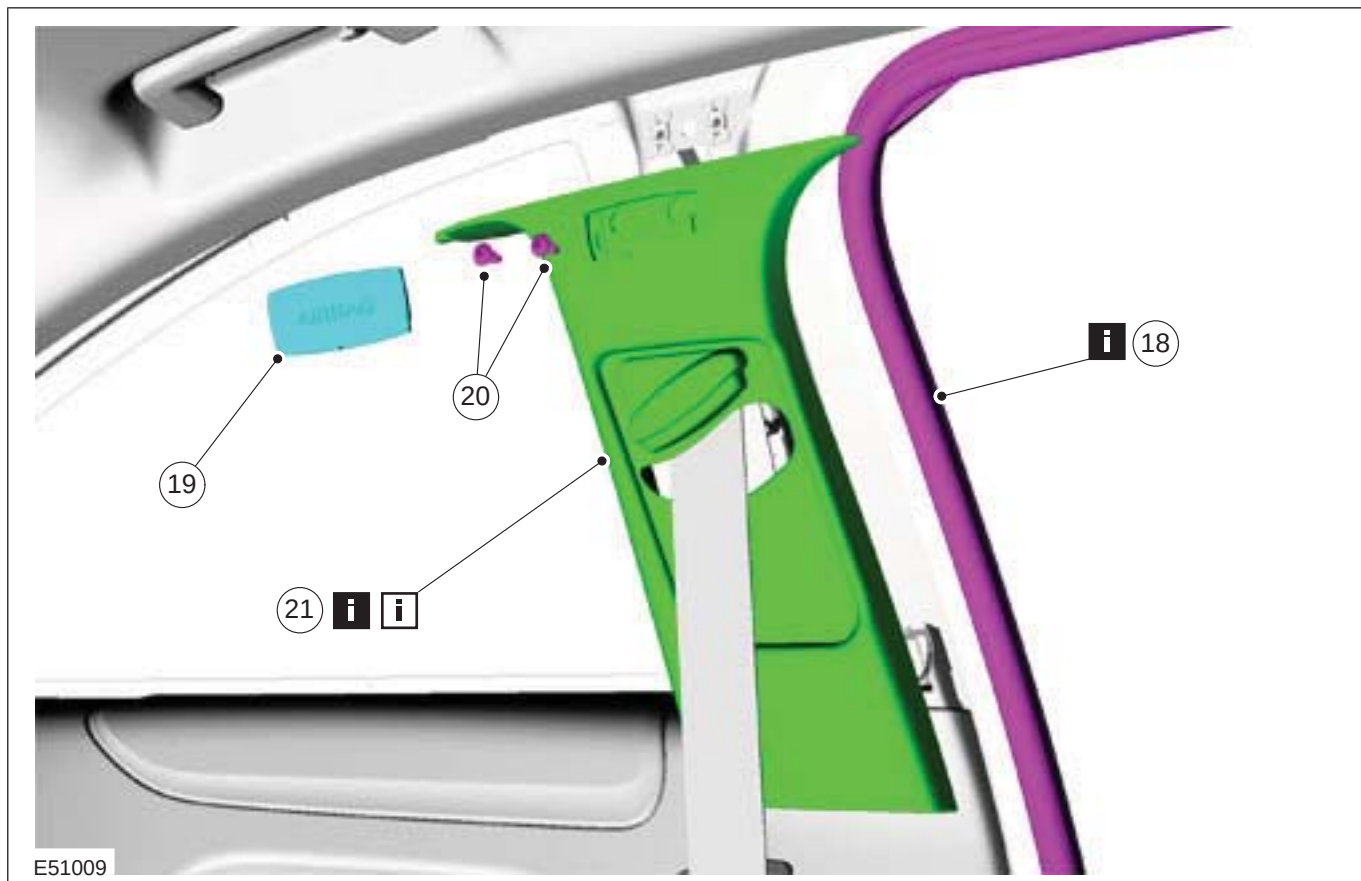

Item	Description
18	Door opening weatherstrips See Removal Detail
19	B-pillar trim panel retaining screw trim covers

Item	Description
20	B-pillar trim panel retaining screws
21	B-pillar trim panels See Removal Detail See Installation Detail

REMOVAL AND INSTALLATION

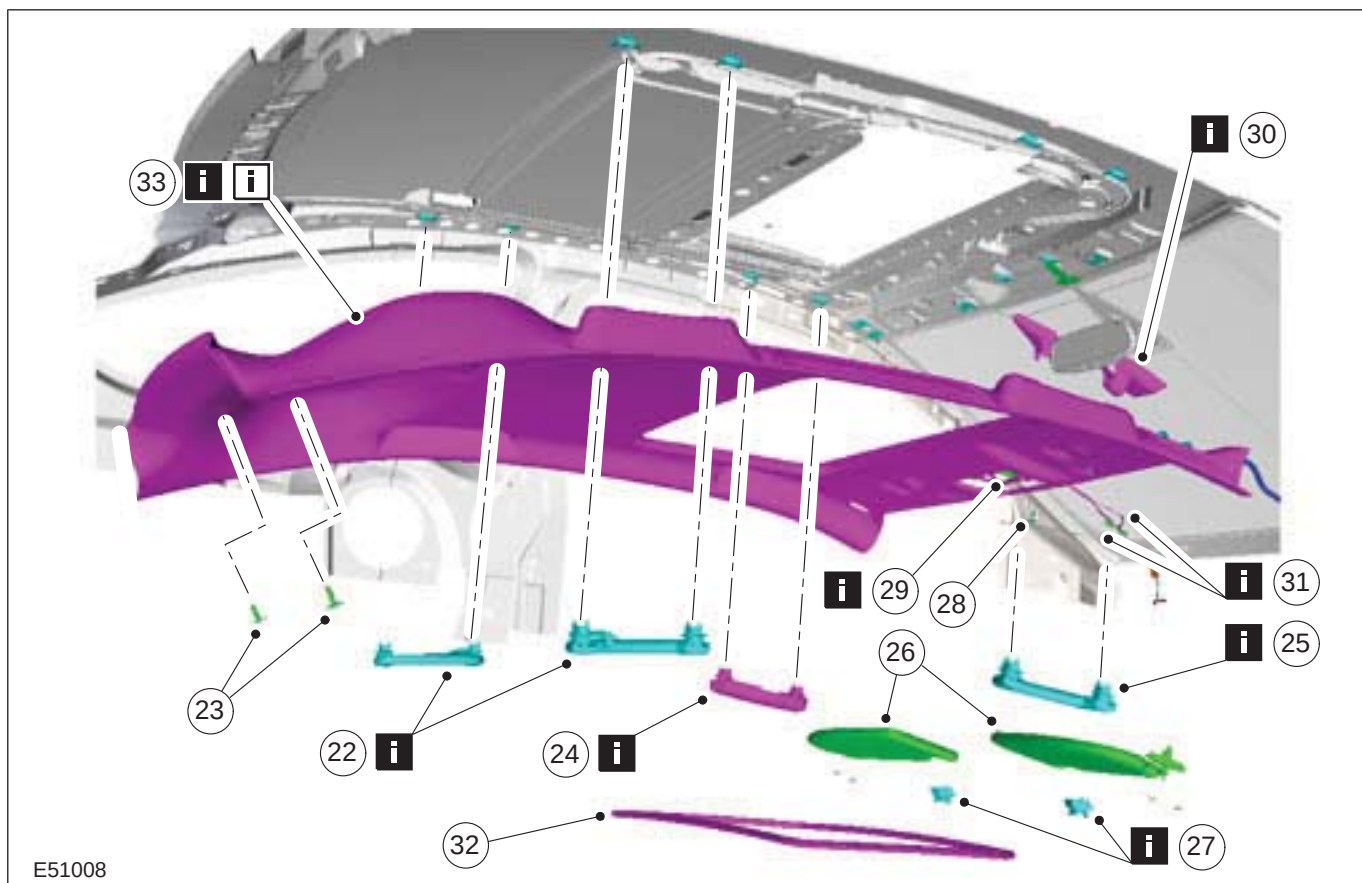


E51008

Item	Description
22	Rear passenger assist handles See Removal Detail
23	Headliner retaining clips
24	Glasses holder See Removal Detail
25	Front passenger assist handle See Removal Detail
26	Sun-visors
27	Sun-visor retaining clips See Removal Detail
28	Roof wiring harness ground connection retaining bolt See Removal Detail

Item	Description
29	Sliding roof opening panel motor electrical connector See Removal Detail
30	Auto-dimming interior mirror trim covers See Removal Detail
31	Auto-dimming interior mirror and rain sensor electrical connectors See Removal Detail
32	Sliding roof opening panel trim
33	Headliner trim panel See Removal Detail See Installation Detail

REMOVAL AND INSTALLATION

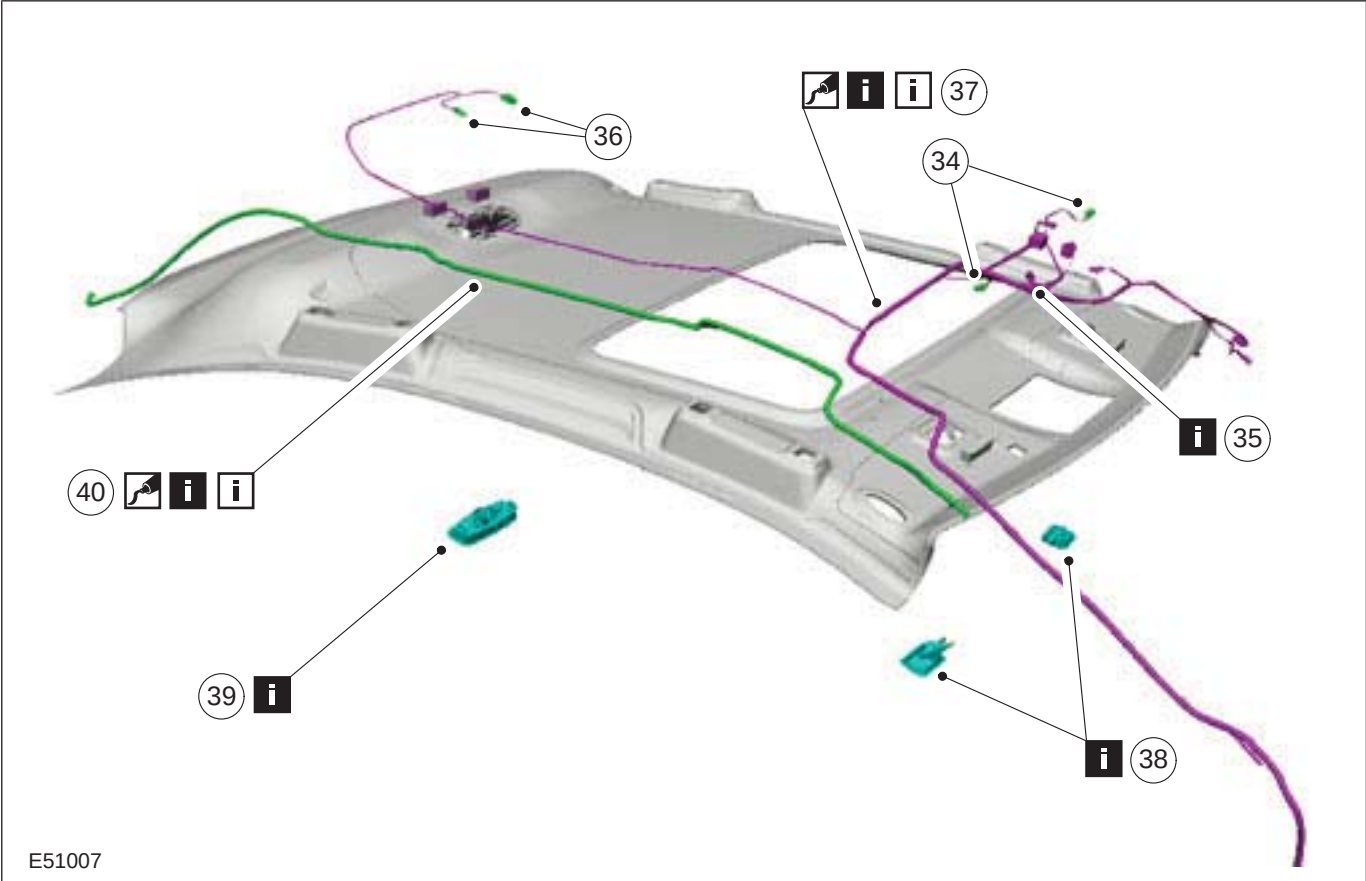

E51007

Item	Description
34	Sun visor illumination lamp electrical connectors
35	Radio frequency (RF) receiver See Removal Detail
36	Rear interior lamp electrical connector
37	Roof wiring harness See Removal Detail See Installation Detail
38	Sun visor illumination lamps See Removal Detail

Item	Description
39	Rear interior lamp See Removal Detail
40	Rear window washer tube See Removal Detail See Installation Detail

12. To install, reverse the removal procedure.

13. Vehicles with global closing, initialize the door window motors.


For additional information, refer to: **Door Window Motor Initialization** (501-11 Glass, Frames and Mechanisms, General Procedures).

Removal Details

REMOVAL AND INSTALLATION

Item 4 Glove compartment cooling hose

1. Detach the glove compartment cooling hose from the glove compartment cooling vent.

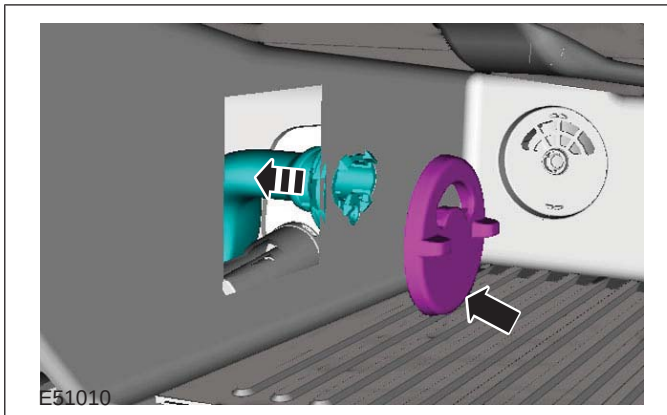**Item 5 Moving pictures experts group audio layer 3 (MP3) auxiliary connector electrical connector. (If equipped)**

CAUTION: Do not place excessive strain on the electrical wiring harness when detaching the glove compartment.

1. Reposition the glove compartment and disconnect the MP3 auxiliary connector electrical connector. If equipped.

Item 11 Noise, vibration and harshness (NVH) material

1. Detach the NVH material from the upper A-pillar area to gain access to the roof wiring harness retaining clip.


Item 13 Roof wiring harness

1. Attach a draw cord to the roof wiring harness and CJB electrical connector. Feed the wiring harness through the NVH material to above the instrument panel A-pillar area.

Item 14 Rear quarter window glass trim panel retaining screw trim covers

CAUTION: Care must be taken not to damage the rear quarter window glass trim panels and retaining screw trim covers.

1. Using a suitable flat blade screwdriver, lever out the rear quarter window glass trim panel retaining screw trim cover.

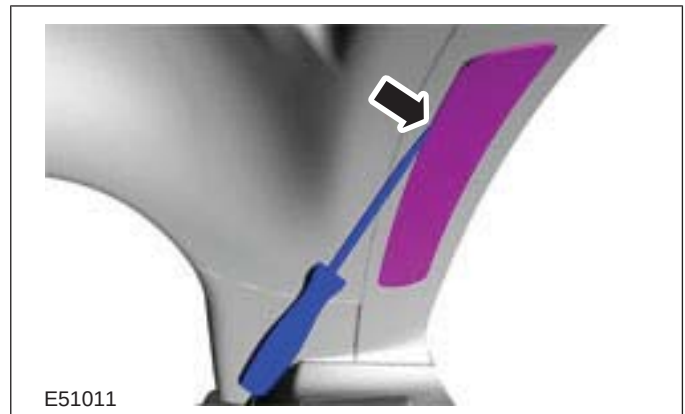**Item 16 Rear quarter window glass trim panels**


1. Detach the rear quarter window glass trim panel to B-pillar trim panel retaining clip.

Item 18 Door opening weatherstrips

1. Detach the door opening weatherstrip from the door opening upper area.


Item 21 B-pillar trim panels

1. Detach the B-pillar trim panel and position to one side.

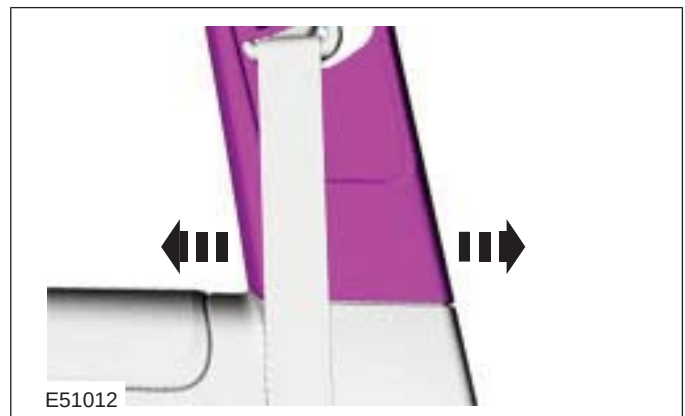

REMOVAL AND INSTALLATION**Item 22 Rear passenger assist handles**


1. Lever open the rear passenger assist handle screw covers.

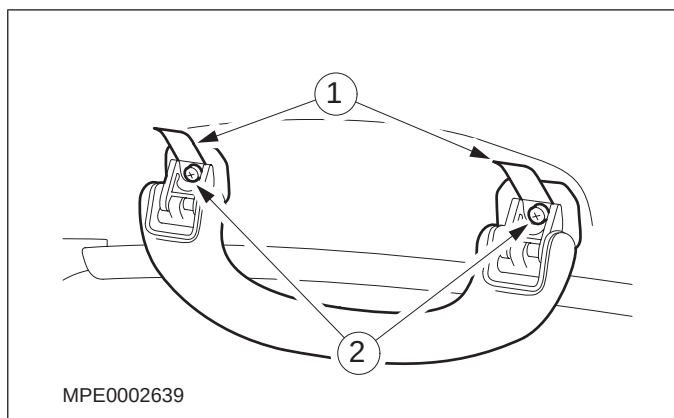

2. Remove the rear passenger assist handle retaining screws.

Item 24 Glasses holder


1. Lever open the glasses holder retaining screw covers.

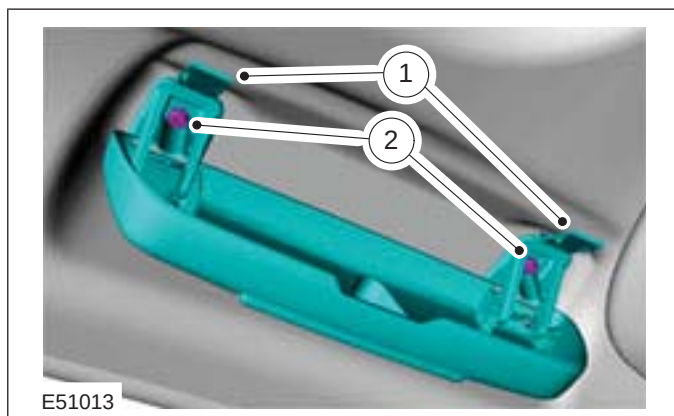

2. Remove the glasses holder retaining screws.

Item 25 Front passenger assist handle


1. Lever open the front passenger assist handle retaining screw covers.

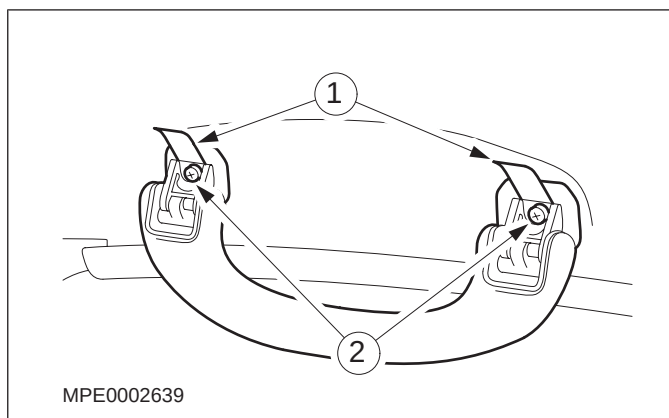

2. Remove the front passenger assist handle retaining screws.

Item 27 Sun-visor retaining clips

1. Lever open the sun visor retaining clips retaining screw cover.

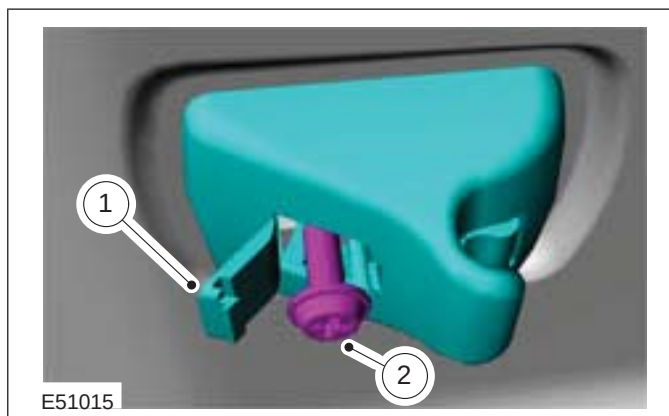

2. Remove the sun visor retaining clips retaining screw.


REMOVAL AND INSTALLATION

Item 28 Roof wiring harness ground connection retaining bolt

1. Detach the roof wiring harness and windscreen ground electrical connectors.

**Item 29** Sliding roof opening panel motor electrical connector

1. Disconnect the sliding roof opening panel motor electrical connector.

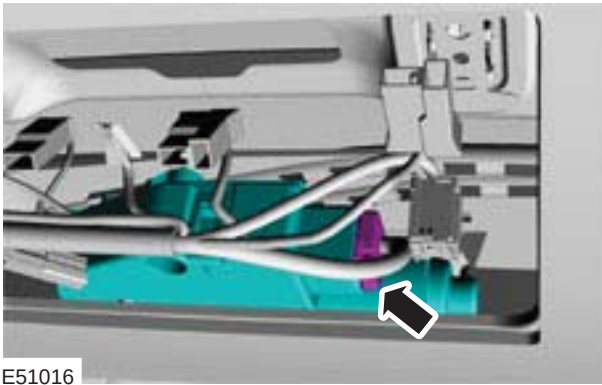**Item 30** Auto-dimming interior mirror trim covers

1. Remove the auto-dimming interior mirror and rain sensor trim covers.
 1. Release the locking clips.

2. Slide the rain sensor trim cover off the auto-dimming interior mirror trim cover.

**Item 31** Auto-dimming interior mirror and rain sensor electrical connectors

1. Disconnect the auto-dimming interior mirror and rain sensor electrical connectors.

**Item 33** Headliner trim panel


1. Tilt the front seats forward.
2. With the aid of another technician, remove the headliner through the liftgate opening.

Item 35 Radio frequency (RF) receiver

NOTE: Make a note of the position of the RF receiver to make sure that it is installed in exactly the same position as when removed.

REMOVAL AND INSTALLATION

1. Using a suitable knife, detach the RF receiver from the headliner.

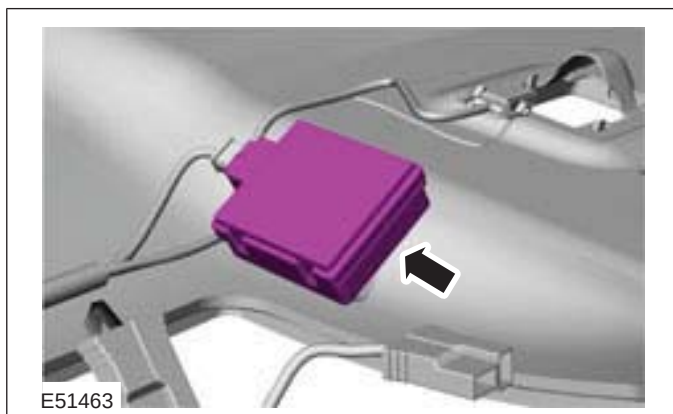

Item 37 Roof wiring harness

CAUTIONS:


- ⚠ Take care not to damage the insulation of the roof wiring harness.
- ⚠ The roof wiring harness must be cut off of the headliner and not pulled or ripped. Failure to follow this instruction could result in the incorrect function of electrical components.

NOTE: Make a note of the position of the roof wiring harness to make sure that it is installed in exactly the same position as when removed.

1. Using a suitable knife, remove the roof wiring harness from the headliner.


Item 38 Sun visor illumination lamps

1. Release the sunvisor illumination lamp retaining clips.

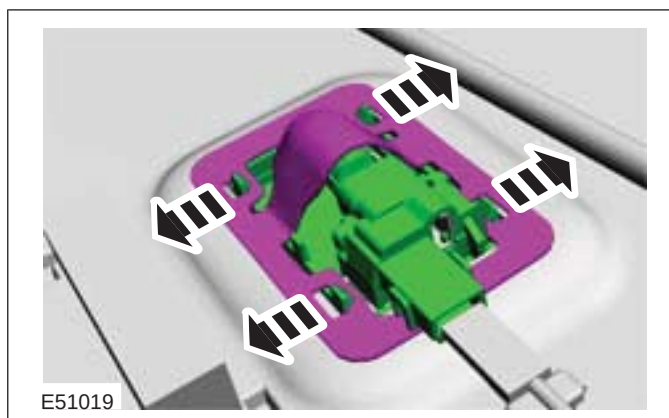

Item 39 Rear interior lamp

1. Lever out the rear interior lamp.

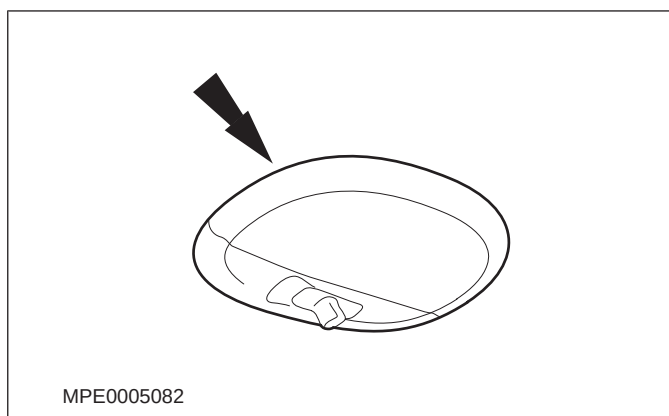

Item 40 Rear window washer tube

- ⚠ **CAUTION:** Take care not to damage the rear window washer tube. Failure to follow this instruction could result in damage to the headliner.

NOTE: Make a note of the position of the rear window washer tube to make sure that it is installed in exactly the same position as when removed.

1. Using a suitable knife, remove the rear window washer tube from the headliner.

Installation Details

Item 40 Rear window washer tube

- ⚠ **CAUTION:** The rear window washer tube must be installed in the same position as when removed.

1. Using a suitable adhesive, bond the rear window washer tube to the headliner.

REMOVAL AND INSTALLATION**Item 37 Roof wiring harness**

 **CAUTION:** The roof wiring harness must be installed in the same position as when removed.


1. Using a suitable adhesive, bond the roof wiring harness to the headliner.

Item 33 Headliner trim panel

1. With the aid of another technician, install the headliner.

Item 21 B-pillar trim panels

NOTE: Make sure the B-pillar safety belt height adjustment lever is aligned with the safety belt height adjustment mechanism.

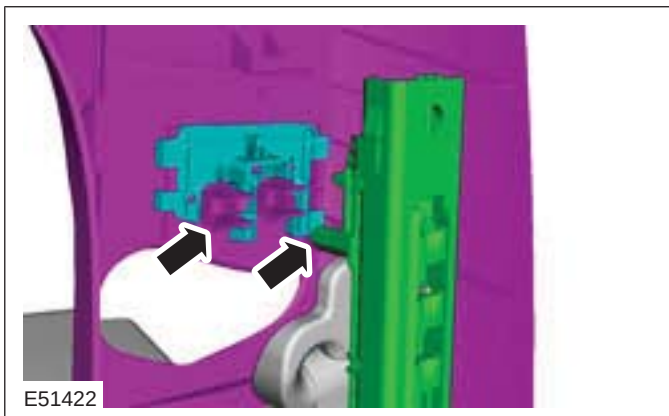**Item 17 Rear quarter window glass trim panel retaining clips**

1. Install the rear quarter window glass trim panel retaining clips to the rear quarter window glass trim panel.

Item 13 Roof wiring harness

1. Using the draw cord, feed the roof wiring harness through the NVH material.

Item 11 Noise, vibration and harshness (NVH) material

1. Reposition the NVH material.

REMOVAL AND INSTALLATION

Headliner — 5-Door, Vehicles With: Sliding Roof Opening Panel

General Equipment

Draw cord


1. Disconnect the battery ground cable.

For additional information, **refer to: Battery Disconnect and Connect** (414-01 Battery, Mounting and Cables, General Procedures).


2. Remove the A-pillar trim panels.

For additional information, **refer to: A-Pillar Trim Panel** (501-05 Interior Trim and Ornamentation, Removal and Installation).


3. Disconnect the rear window washer tube.

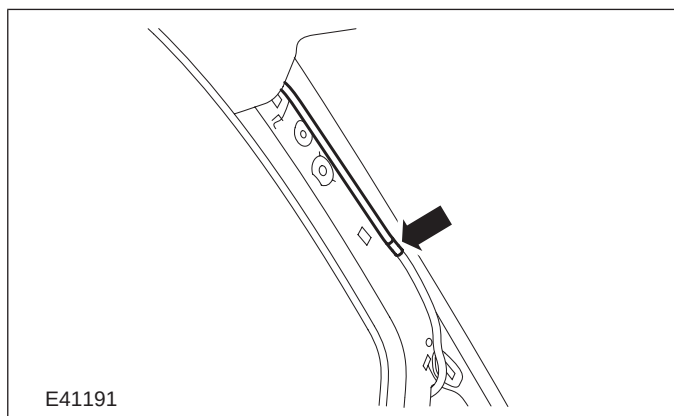

7. Disconnect the rear window washer tube.

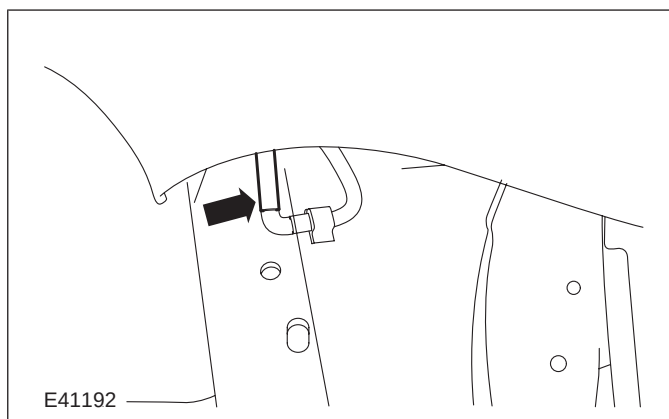

8. Remove the instrument panel passenger side lower trim panel.

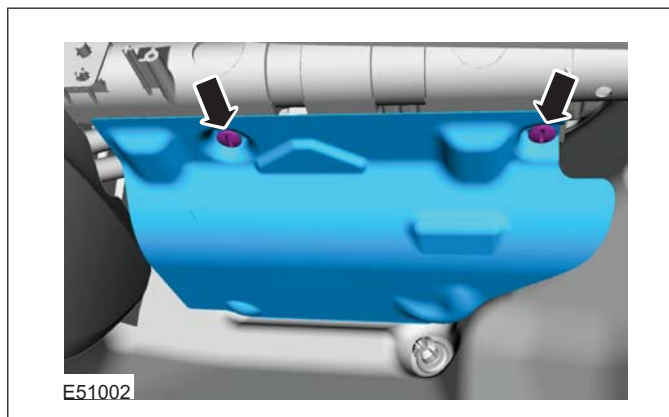

4. Remove the overhead console.

For additional information, **refer to: Overhead Console** (501-12 Instrument Panel and Console, Removal and Installation).


5. Remove the C-pillar trim panels.

For additional information, **refer to: C-Pillar Trim Panel - 4-Door/5-Door** (501-05 Interior Trim and Ornamentation, Removal and Installation).

6. Remove the D-pillar trim panels.

For additional information, **refer to: D-Pillar Trim Panel - 5-Door** (501-05 Interior Trim and Ornamentation, Removal and Installation).

9. Lower the central junction box (CJB).


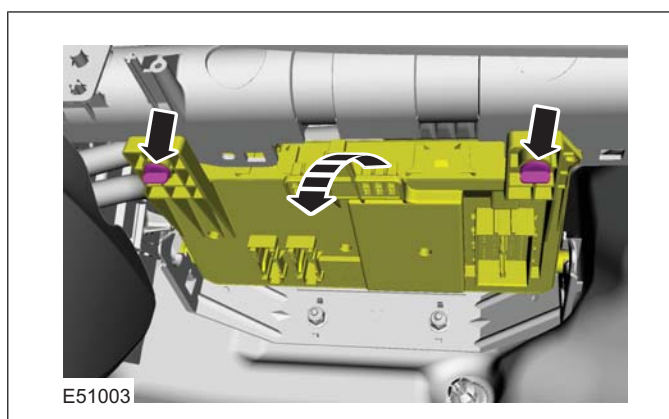


10. Open the glove compartment lid.

REMOVAL AND INSTALLATION

11. Remove the navigation system digital versatile disc (DVD) unit access cover (if equipped).


12. Remove the components in the order indicated in the following illustration(s) and table(s).

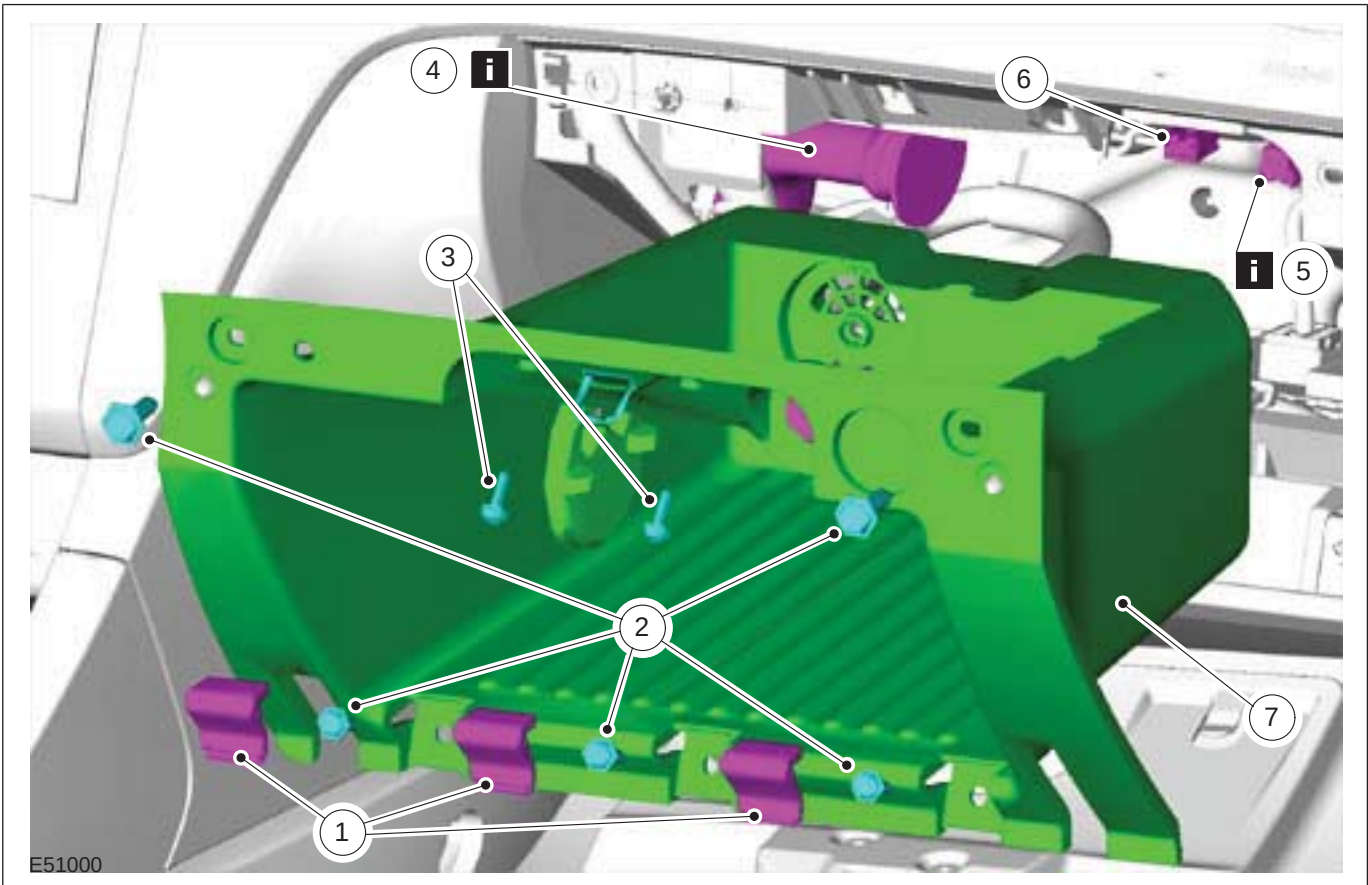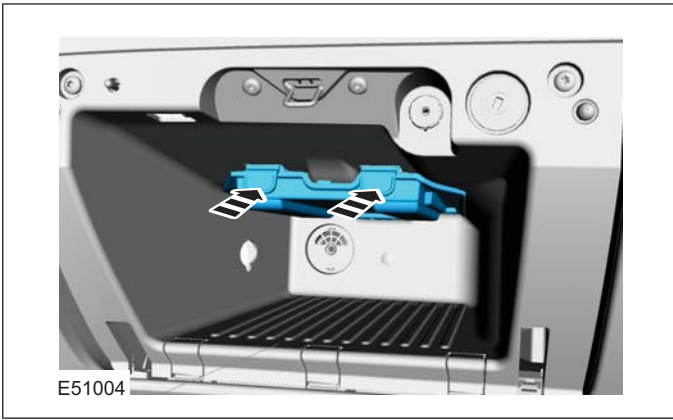

Item	Description
1	Glove compartment retaining screw covers
2	Glove compartment retaining screws
3	Glove compartment lid striker retaining screws
4	Glove compartment cooling hose See Removal Detail

Item	Description
5	Moving pictures experts group audio layer 3 (MP3) auxiliary connector electrical connector See Removal Detail
6	Passenger airbag deactivation switch electrical connector
7	Glove compartment housing


REMOVAL AND INSTALLATION

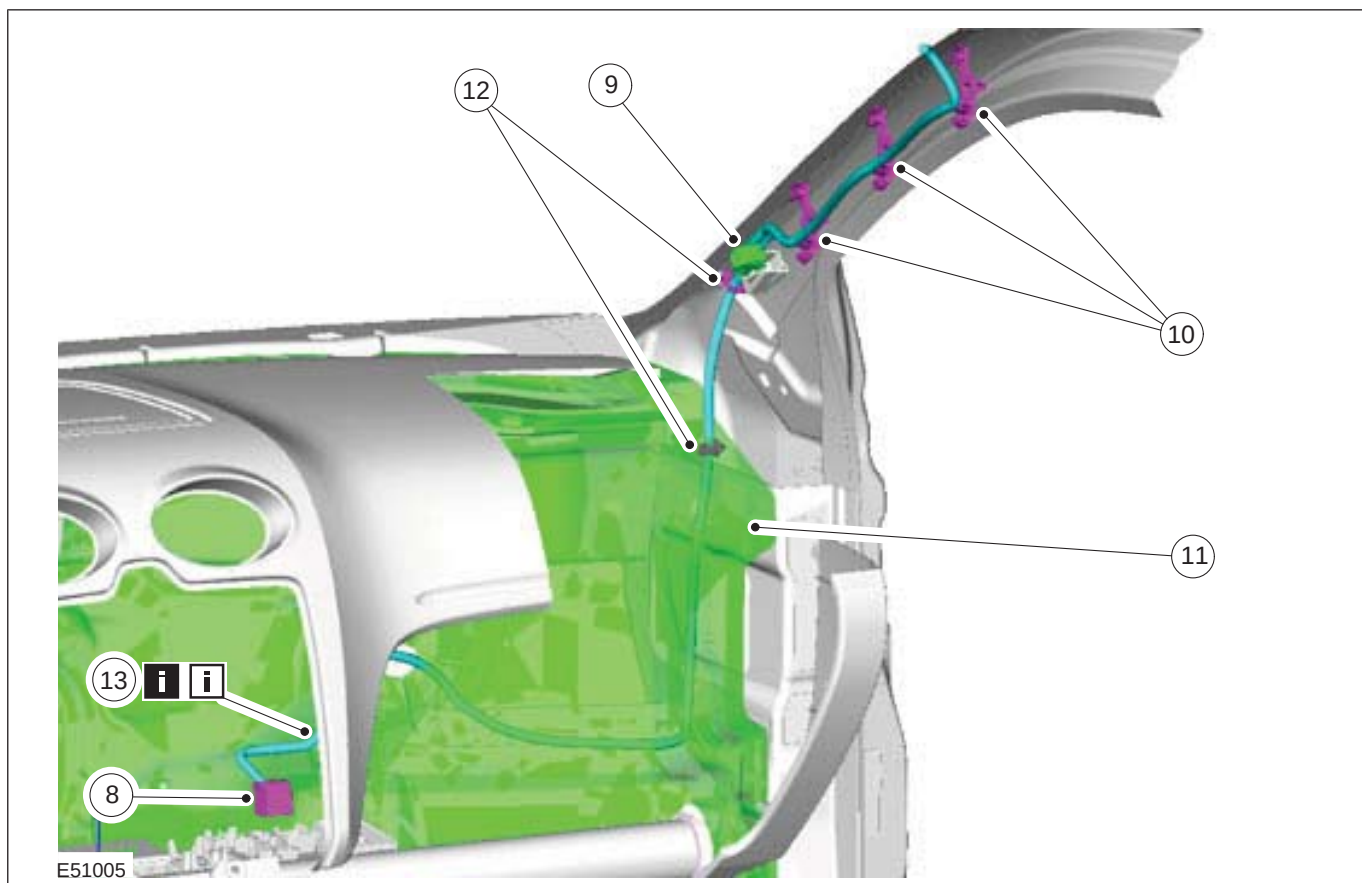

Item	Description
8	Roof wiring harness to CJB electrical connector
9	Roof wiring harness electrical connector
10	Roof wiring harness to A-pillar retaining clips

Item	Description
11	Noise, vibration and harshness (NVH) material See Removal Detail See Installation Detail
12	Roof wiring harness retaining clips
13	Roof wiring harness See Removal Detail See Installation Detail

REMOVAL AND INSTALLATION

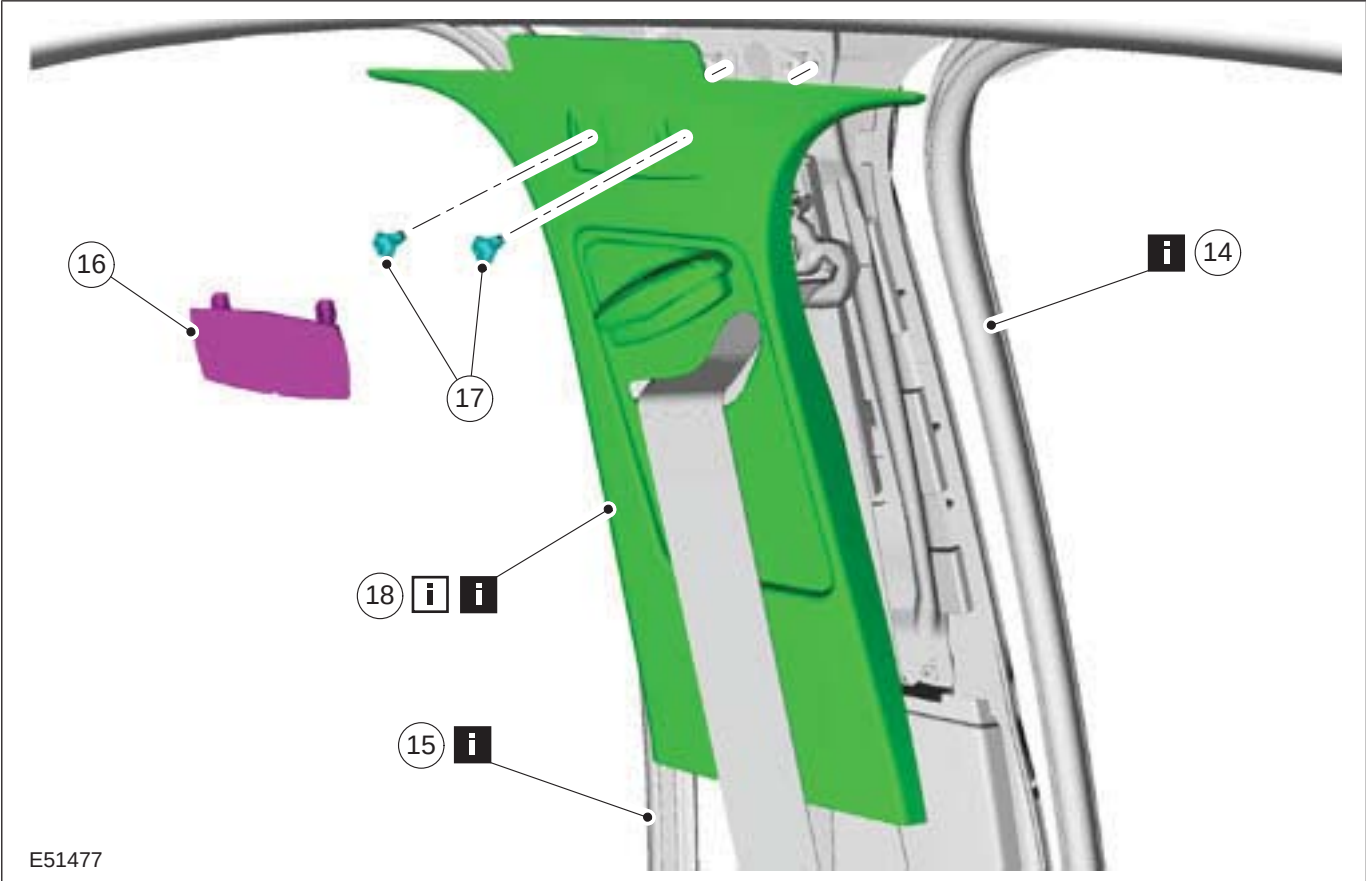


E51477

Item	Description
14	Front door opening weatherstrips See Removal Detail
15	Rear door opening weatherstrips See Removal Detail

Item	Description
16	B-pillar trim panel retaining screw trim covers
17	B-pillar trim panel retaining screws
18	B-pillar trim panels See Removal Detail See Installation Detail

REMOVAL AND INSTALLATION

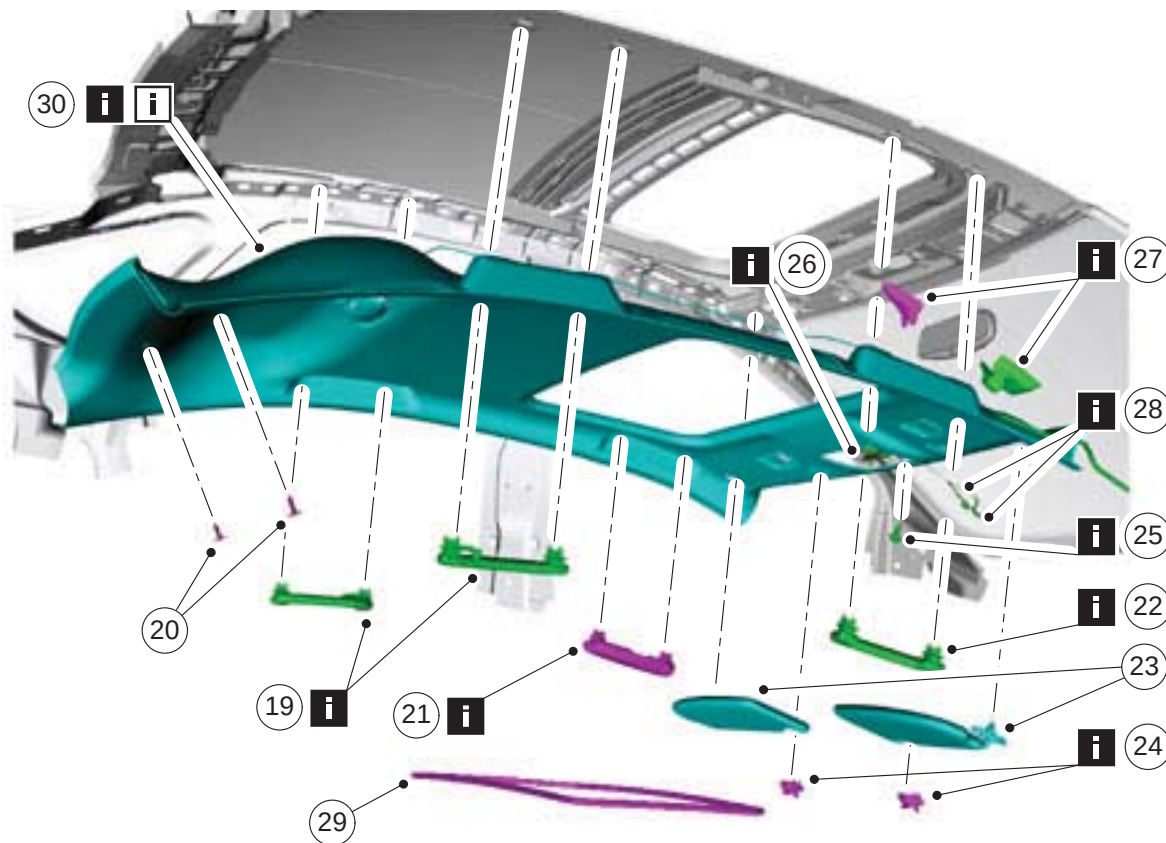


E51479

Item	Description
19	Rear passenger assist handles See Removal Detail
20	Headliner retaining clips
21	Glasses holder See Removal Detail
22	Front passenger assist handle See Removal Detail
23	Sun visors
24	Sun visor retaining clips See Removal Detail
25	Roof wiring harness ground connection retaining bolt See Removal Detail

Item	Description
26	Sliding roof opening panel motor electrical connector See Removal Detail
27	Auto-dimming interior mirror trim covers See Removal Detail
28	Auto-dimming interior mirror and rain sensor electrical connectors See Removal Detail
29	Sliding roof opening panel trim See Installation Detail
30	Headliner trim panel See Removal Detail

REMOVAL AND INSTALLATION

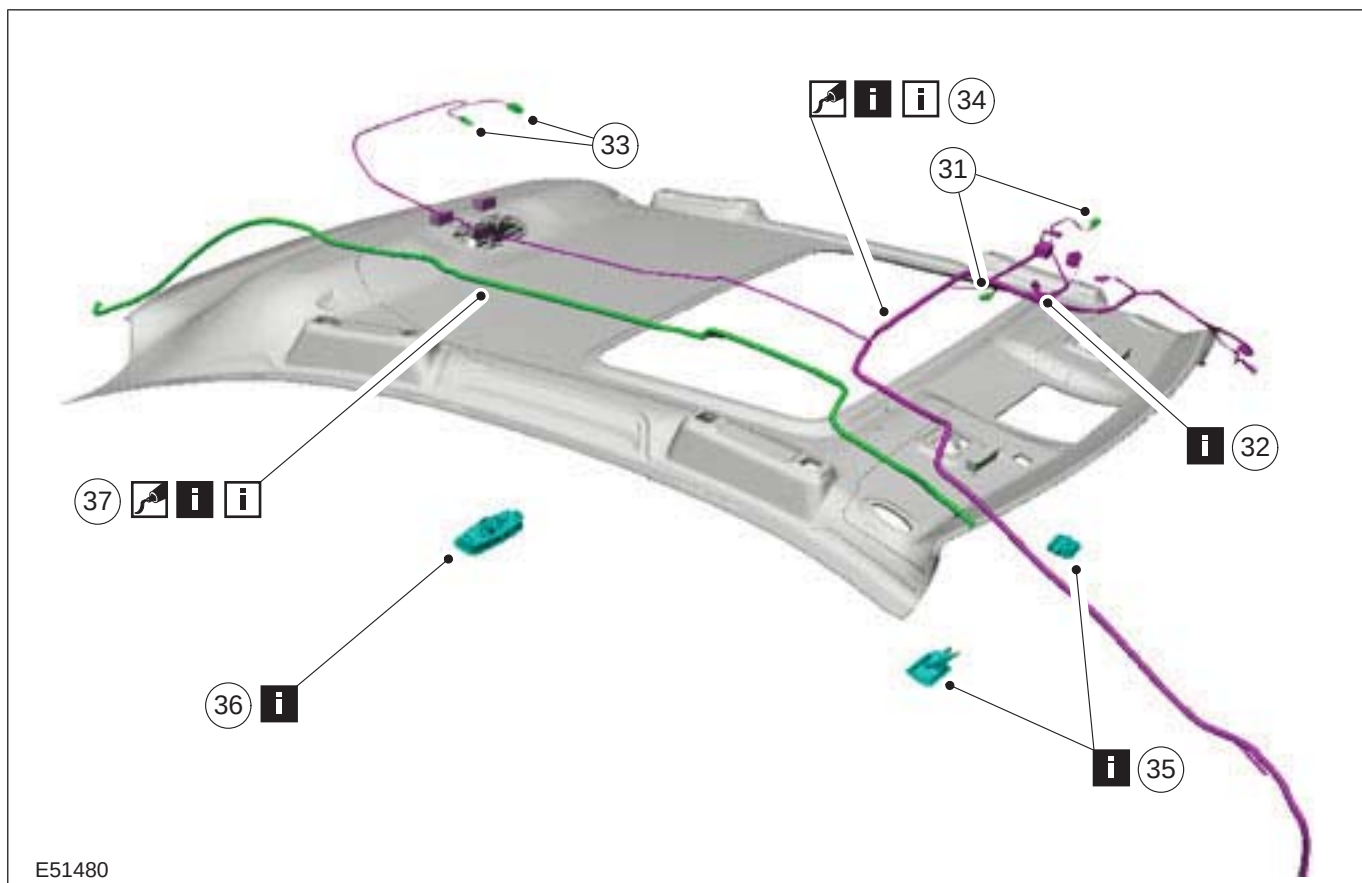

E51480

Item	Description
31	Sunvisor illumination lamp electrical connectors
32	Radio frequency (RF) receiver See Removal Detail
33	Rear interior lamp electrical connector
34	Roof wiring harness See Removal Detail See Installation Detail
35	Sunvisor illumination lamps See Removal Detail

Item	Description
36	Rear interior lamp See Removal Detail
37	Rear window washer tube See Removal Detail See Installation Detail

13. To install, reverse the removal procedure.

14. Vehicles with global closing, initialize the door window motors.


For additional information, **refer to: Door Window Motor Initialization** (501-11 Glass, Frames and Mechanisms, General Procedures).

Removal Details


REMOVAL AND INSTALLATION

Item 4 Glove compartment cooling hose

1. Detach the glove compartment cooling hose from the glove compartment cooling vent.

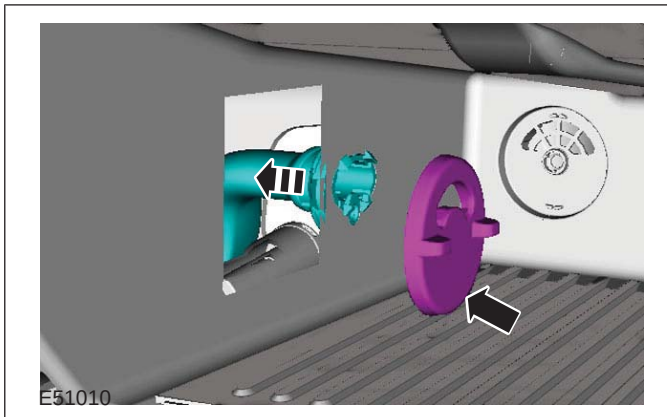**Item 18** B-pillar trim panels

1. Detach the B-pillar trim panels and position them to one side.

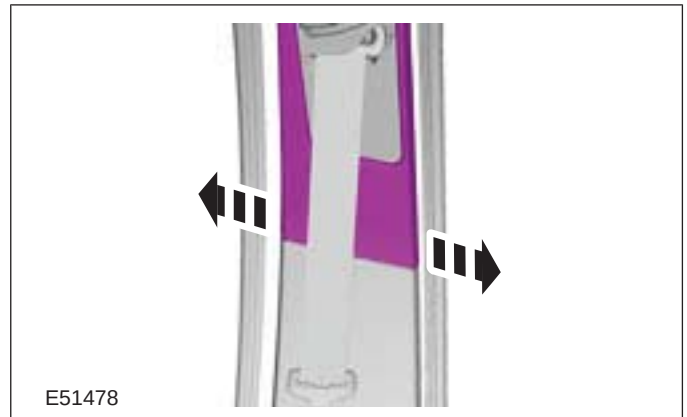**Item 5** Moving pictures experts group audio layer 3 (MP3) auxiliary connector electrical connector

CAUTION: Do not place excessive strain on the electrical wiring harness when detaching the glove compartment.

1. Reposition the glove compartment and disconnect the MP3 auxiliary connector electrical connector.

Item 11 Noise, vibration and harshness (NVH) material

1. Detach the NVH material from the upper A-pillar area to gain access to the roof wiring harness retaining clip.

Item 13 Roof wiring harness

1. Attach a draw cord to the roof wiring harness and CJB electrical connector. Feed the wiring harness through the NVH material to above the instrument panel A-pillar area.

Item 14 Front door opening weatherstrips


1. Detach the front door opening weatherstrip from the front door upper opening area.

Item 15 Rear door opening weatherstrips

1. Detach the rear door opening weatherstrip from the rear door upper opening area.

Item 19 Rear passenger assist handles


1. Lever open the rear passenger assist handle screw covers.

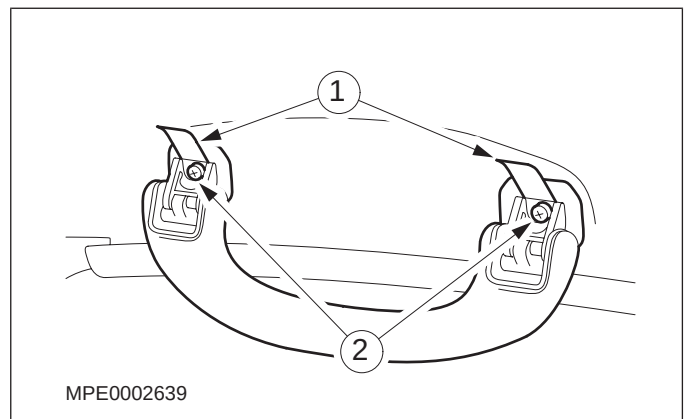

2. Remove the rear passenger assist handle retaining screws.

Item 21 Glasses holder

1. Lever open the glasses holder retaining screw covers.

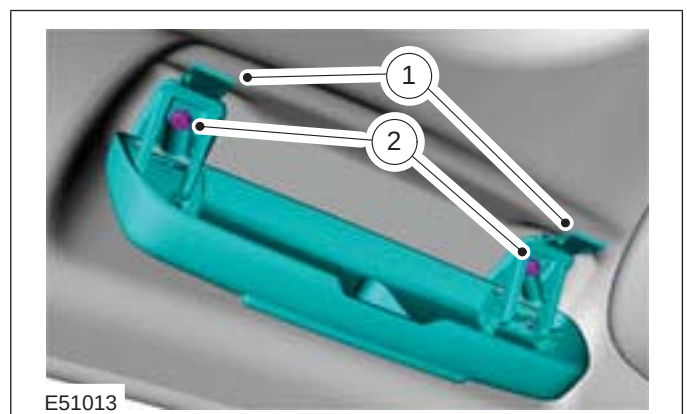


REMOVAL AND INSTALLATION

2. Remove the glasses holder retaining screws.

Item 22 Front passenger assist handle


1. Lever open the front passenger assist handle retaining screw covers.

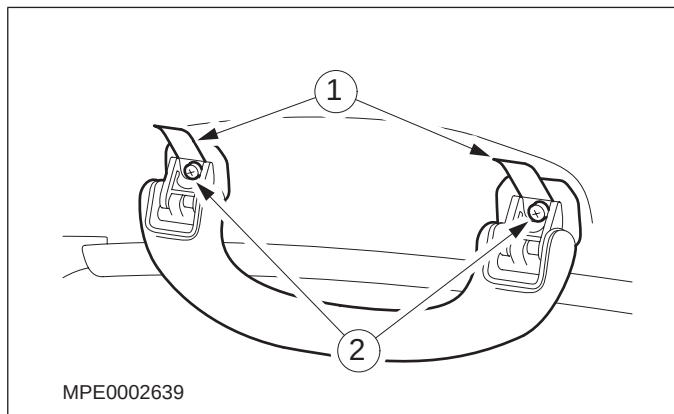

2. Remove the front passenger assist handle retaining screws.

Item 24 Sun visor retaining clips


1. Lever open the sun visor retaining clips retaining screw cover.

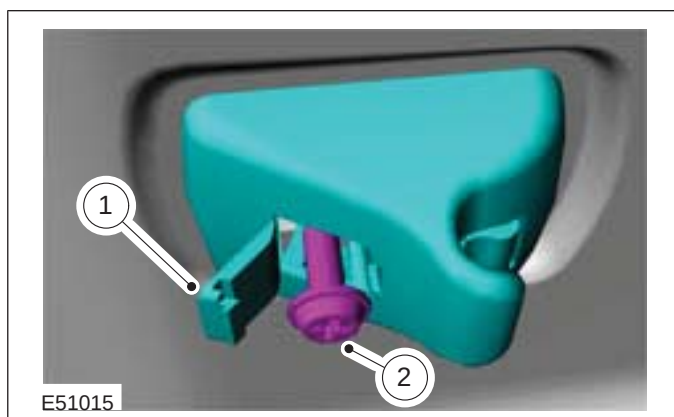


2. Remove the sun visor retaining clips retaining screw.

Item 25 Roof wiring harness ground connection retaining bolt

1. Detach the roof wiring harness and windscreen ground electrical connectors.

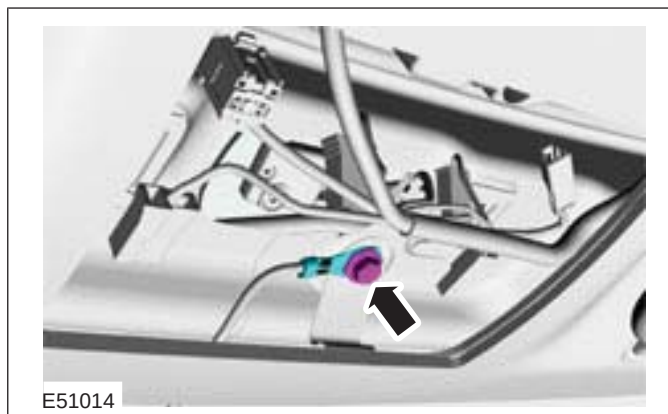**Item 26 Sliding roof opening panel motor electrical connector**

1. Disconnect the sliding roof opening panel motor electrical connector.

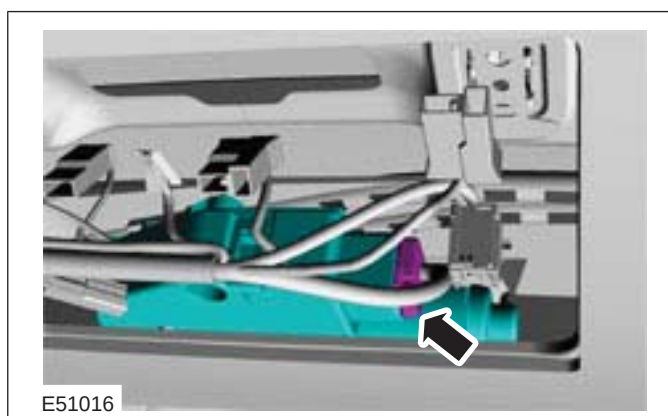**Item 27 Auto-dimming interior mirror trim covers**

1. Remove the auto-dimming interior mirror and rain sensor trim covers.
 1. Release the locking clips.


REMOVAL AND INSTALLATION

2. Slide the rain sensor trim cover off the auto-dimming interior mirror trim cover.



Item 28 Auto-dimming interior mirror and rain sensor electrical connectors

1. Disconnect the auto-dimming interior mirror and rain sensor electrical connectors.

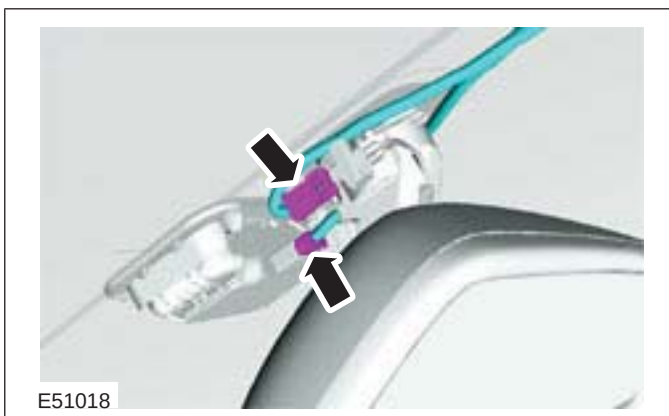


Item 30 Headliner trim panel

1. Tilt the front seats forward.
2. With the aid of another technician, remove the headliner through the liftgate opening.

Item 32 Radio frequency (RF) receiver

NOTE: Make a note of the position of the RF receiver to make sure that it is installed in exactly the same position as when removed.

1. Using a suitable knife, detach the RF receiver from the headliner.

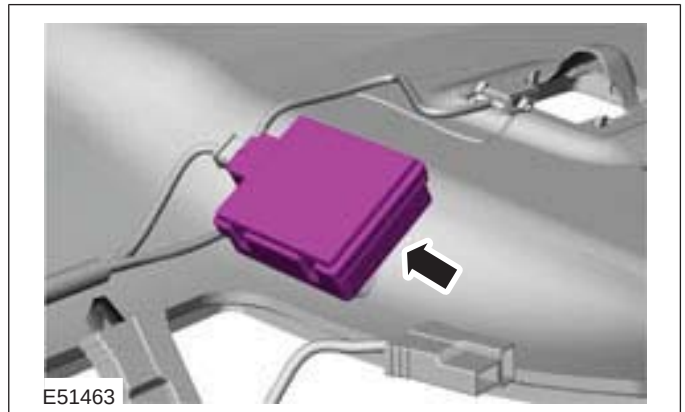

Item 34 Roof wiring harness

CAUTIONS:


- ⚠ Take care not to damage the insulation of the roof wiring harness.
- ⚠ The roof wiring harness must be cut off of the headliner and not pulled or ripped. Failure to follow this instruction could result in the incorrect function of electrical components.

NOTE: Make a note of the position of the roof wiring harness to make sure that it is installed in exactly the same position as when removed.

1. Using a suitable knife, remove the roof wiring harness from the headliner.

Item 35 Sunvisor illumination lamps


1. Release the sunvisor illumination lamp retaining clips.

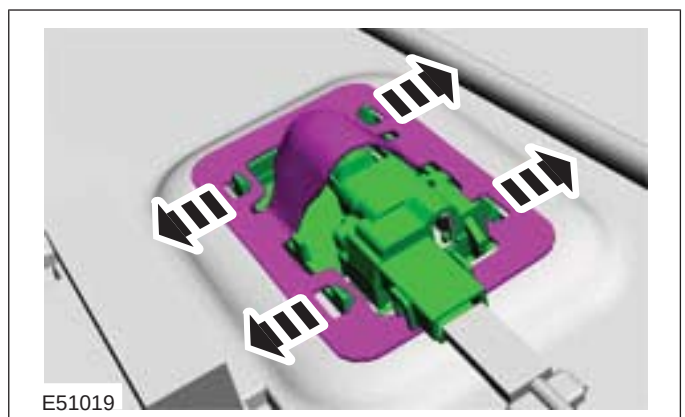

REMOVAL AND INSTALLATION

Item 36 Rear interior lamp

1. Lever out the rear interior lamp.

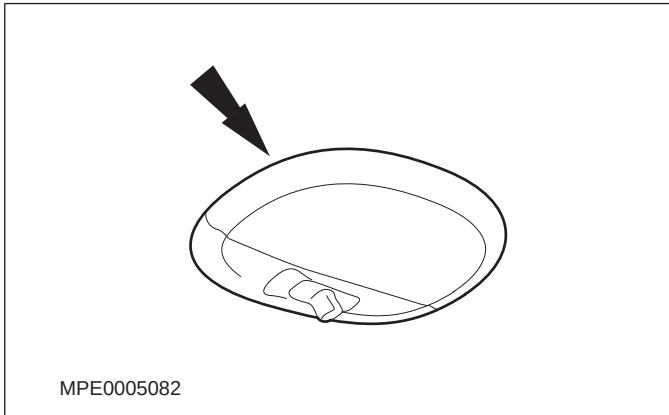

Item 37 Rear window washer tube

CAUTION: Take care not to damage the rear window washer tube. Failure to follow this instruction could result in damage to the headliner.

NOTE: Make a note of the position of the rear window washer tube to make sure that it is installed in exactly the same position as when removed.

1. Using a suitable knife, remove the rear window washer tube from the headliner.

Installation Details

Item 37 Rear window washer tube

CAUTION: The rear window washer tube must be installed in the same position as when removed.

1. Using a suitable adhesive, bond the rear window washer tube to the headliner.

Item 34 Roof wiring harness

CAUTION: The roof wiring harness must be installed in the same position as when removed.


1. Using a suitable adhesive, bond the roof wiring harness to the headliner.

Item 29 Sliding roof opening panel trim

1. With the aid of another technician, install the headliner.

Item 18 B-pillar trim panels

NOTE: Make sure the B-pillar safety belt height adjustment lever is aligned with the safety belt height adjustment mechanism.

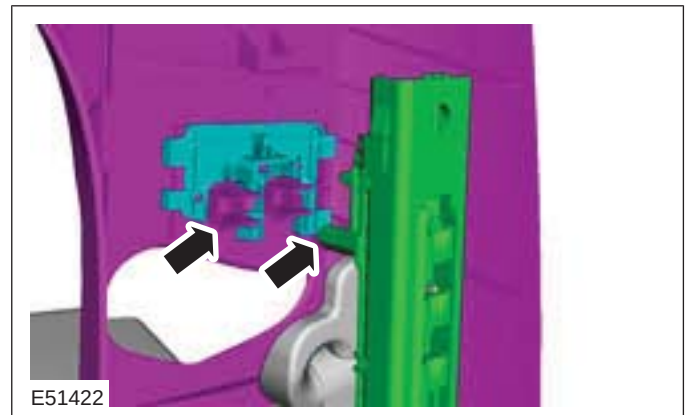

Item 13 Roof wiring harness

1. Using the draw cord, feed the roof wiring harness through the NVH material.

Item 11 Noise, vibration and harshness (NVH) material

1. Reposition the NVH material.

REMOVAL AND INSTALLATION

Headliner — 3-Door, Vehicles Without: Sliding Roof Opening Panel

General Equipment

Draw cord


1. Disconnect the battery ground cable.

For additional information, **refer to: Battery Disconnect and Connect** (414-01 Battery, Mounting and Cables, General Procedures).

2. Remove the A-pillar trim panels.

For additional information, **refer to: A-Pillar Trim Panel** (501-05 Interior Trim and Ornamentation, Removal and Installation).


3. Disconnect the rear window washer tube.

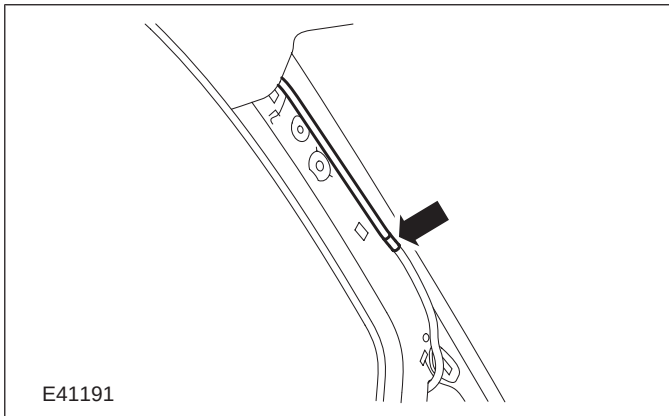


4. Remove the overhead console.

For additional information, **refer to: Overhead Console** (501-12 Instrument Panel and Console, Removal and Installation).


5. Disconnect the rear window washer tube.

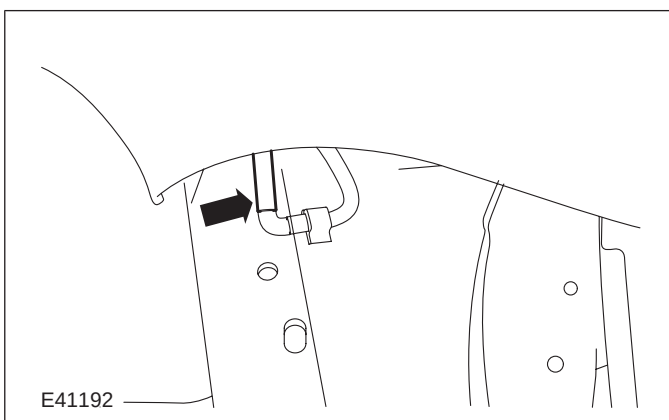

6. Remove the instrument panel passenger side lower trim panel.

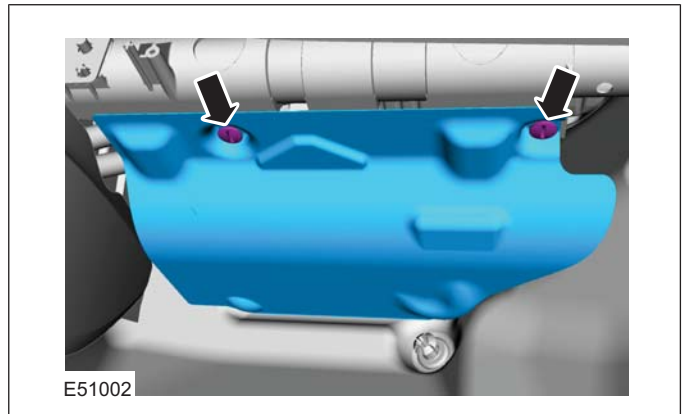


7. Lower the central junction box (CJB).

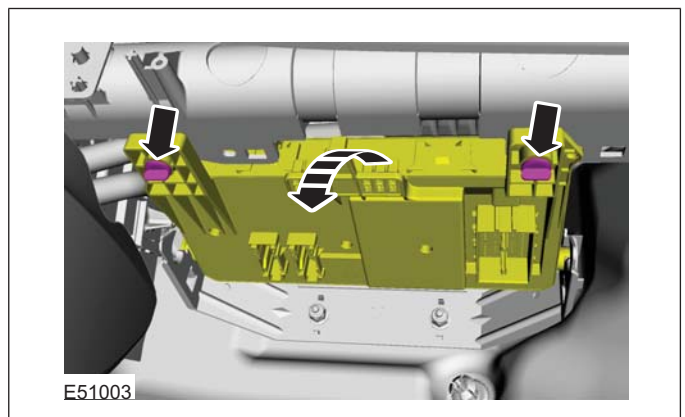


8. Open the glove compartment lid.

9. Remove the navigation system digital versatile disc (DVD) unit access cover (if equipped).

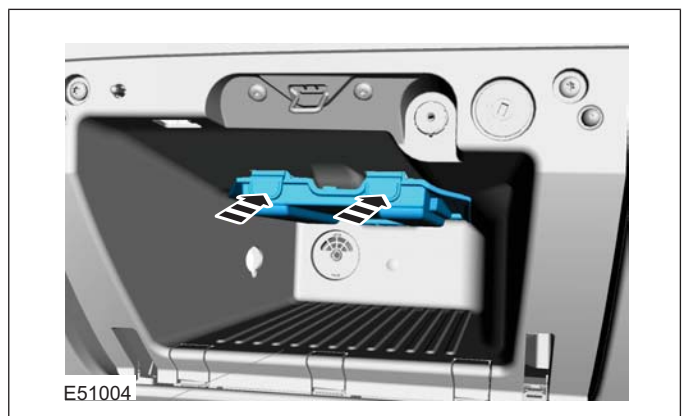

REMOVAL AND INSTALLATION

10. Remove the components in the order indicated in the following illustration(s) and table(s).

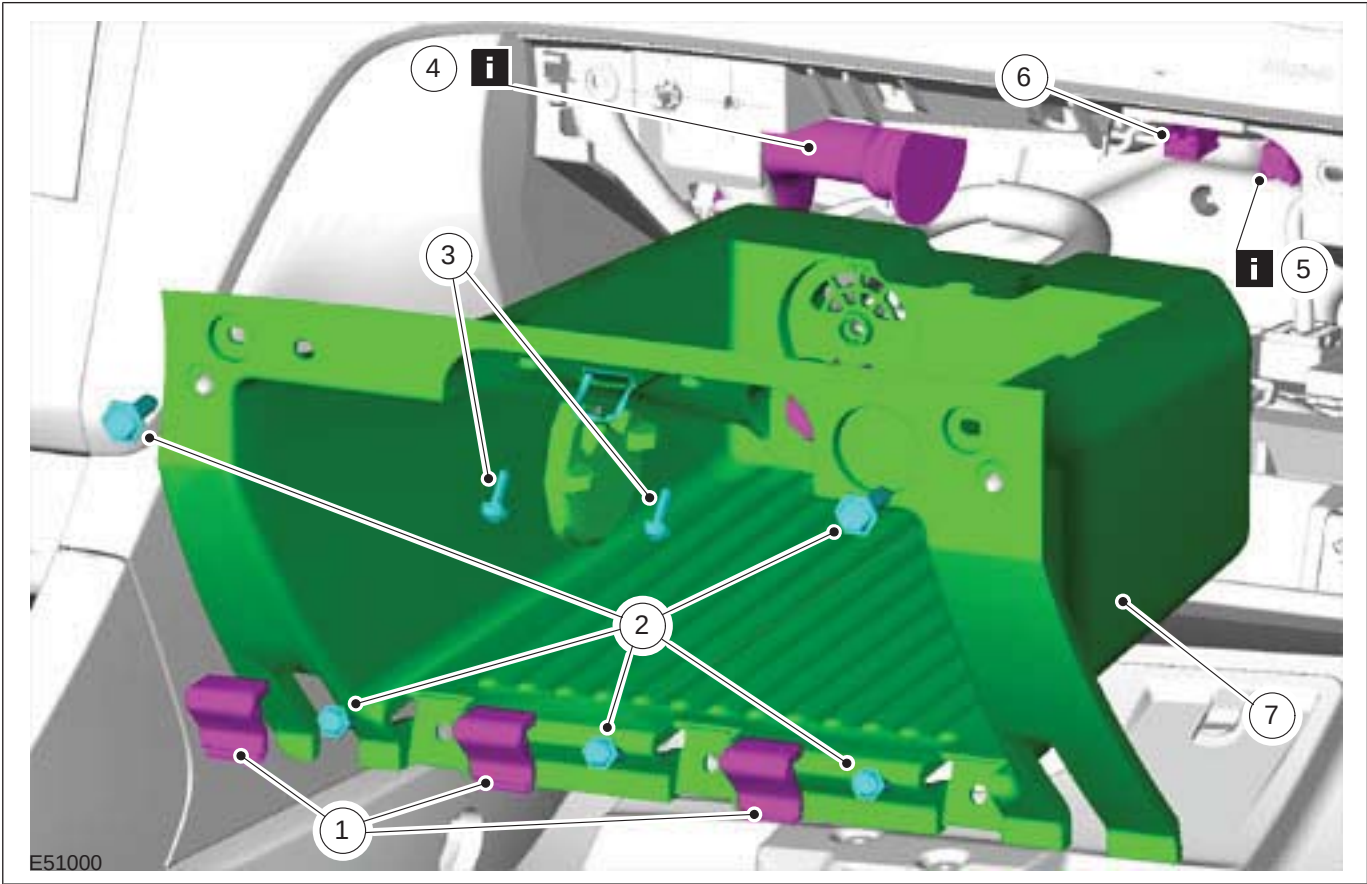


Item	Description
1	Glove compartment retaining screw covers
2	Glove compartment retaining screws
3	Glove compartment lid striker retaining screws
4	Glove compartment cooling hose See Removal Detail

Item	Description
5	Moving pictures experts group audio layer 3 (MP3) auxiliary connector electrical connector See Removal Detail
6	Passenger airbag deactivation switch electrical connector
7	Glove compartment housing

cardiagn.com


REMOVAL AND INSTALLATION

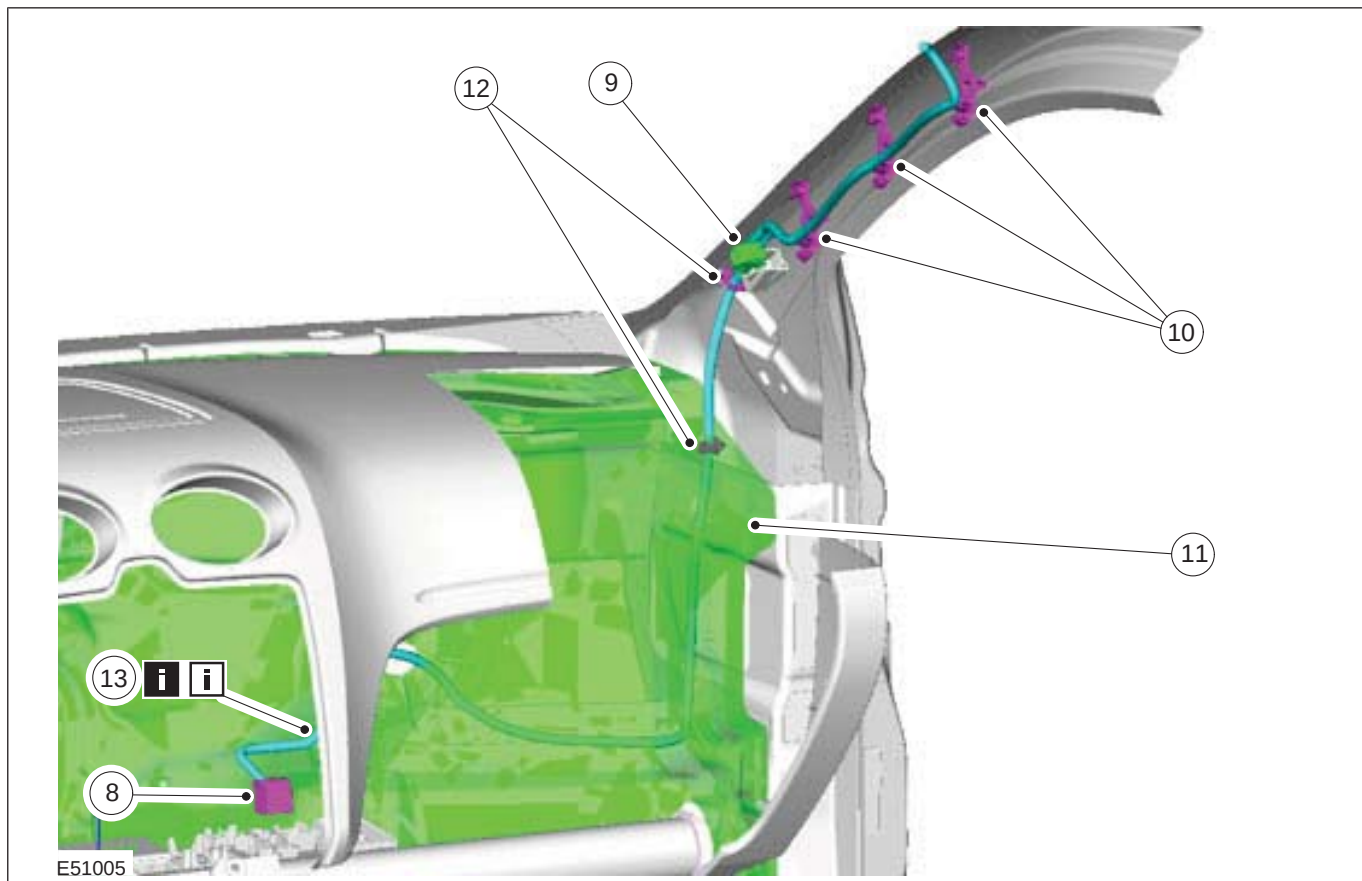

Item	Description
8	Roof wiring harness to CJB electrical connector
9	Roof wiring harness electrical connector
10	Roof wiring harness to A-pillar retaining clips

Item	Description
11	Noise, vibration and harshness (NVH) material See Removal Detail See Installation Detail
12	Roof wiring harness retaining clips
13	Roof wiring harness See Removal Detail See Installation Detail


REMOVAL AND INSTALLATION

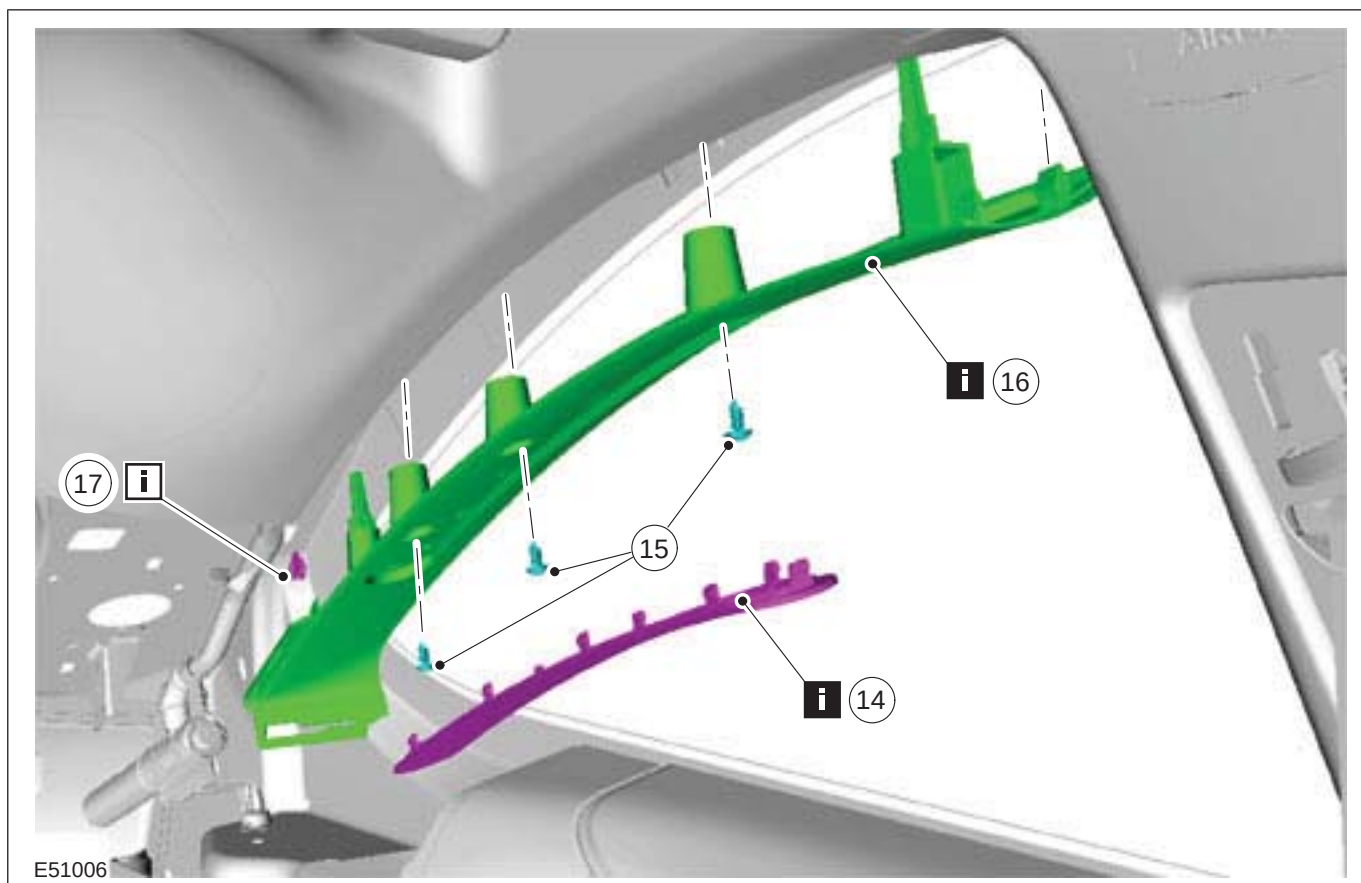

Item	Description
14	Rear quarter window glass trim panel retaining screw trim covers See Removal Detail
15	Rear quarter window glass trim panel retaining screws

Item	Description
16	Rear quarter window glass trim panels See Removal Detail
17	Rear quarter window glass trim panel retaining clips See Installation Detail


REMOVAL AND INSTALLATION

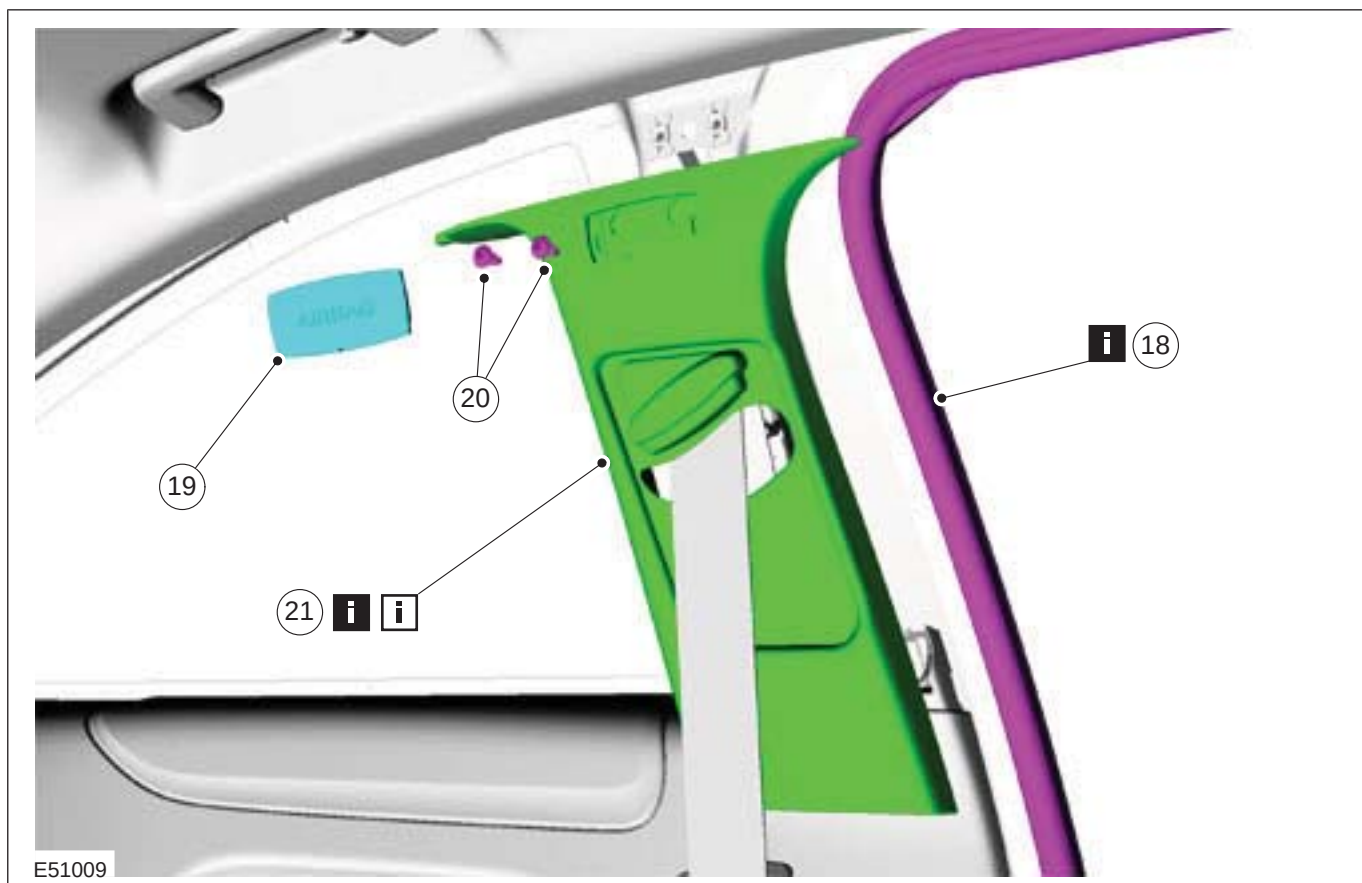

Item	Description
18	Door opening weatherstrips See Removal Detail
19	B-pillar trim panel retaining screw trim covers

Item	Description
20	B-pillar trim panel retaining screws
21	B-pillar trim panels See Removal Detail See Installation Detail

REMOVAL AND INSTALLATION

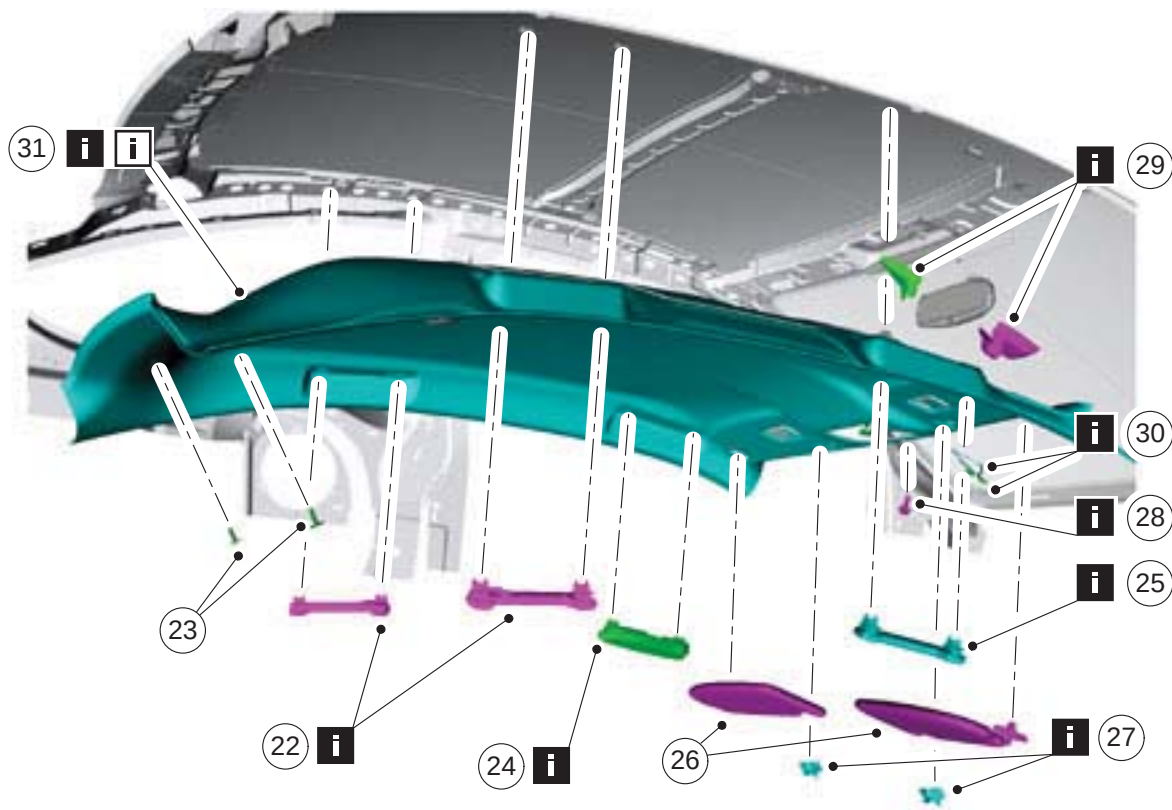


E51464

Item	Description
22	Rear passenger assist handles See Removal Detail
23	Headliner retaining clips
24	Glasses holder See Removal Detail
25	Front passenger assist handle See Removal Detail
26	Sun visors
27	Sun visor retaining clips See Removal Detail

Item	Description
28	Roof wiring harness ground connection retaining bolt See Removal Detail
29	Auto-dimming interior mirror trim covers See Removal Detail
30	Auto-dimming interior mirror and rain sensor electrical connectors
31	Headliner trim panel See Removal Detail See Installation Detail

REMOVAL AND INSTALLATION

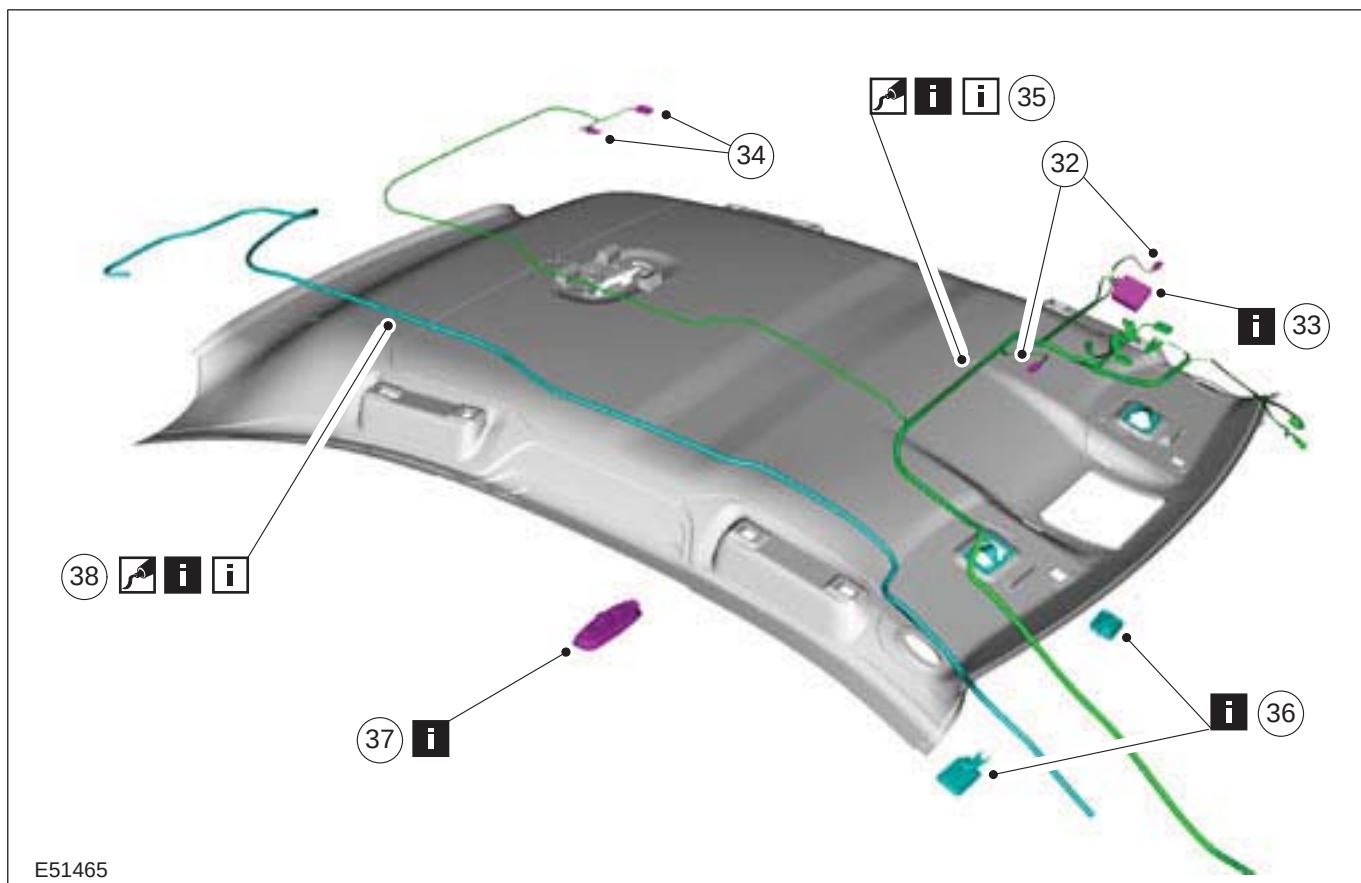

E51465

Item	Description
32	Sunvisor illumination lamp electrical connectors See Installation Detail
33	Radio frequency (RF) receiver See Removal Detail
34	Rear interior lamp electrical connectors
35	Roof wiring harness See Removal Detail See Installation Detail
36	Sunvisor illumination lamps See Removal Detail

Item	Description
37	Rear interior lamp See Removal Detail
38	Rear window washer tube See Removal Detail See Installation Detail

11. To install, reverse the removal procedure.

12. Vehicles with global closing, initialize the door window motors.


For additional information, **refer to: Door Window Motor Initialization** (501-11 Glass, Frames and Mechanisms, General Procedures).

Removal Details

REMOVAL AND INSTALLATION

Item 4 Glove compartment cooling hose

1. Detach the glove compartment cooling hose from the glove compartment cooling vent.

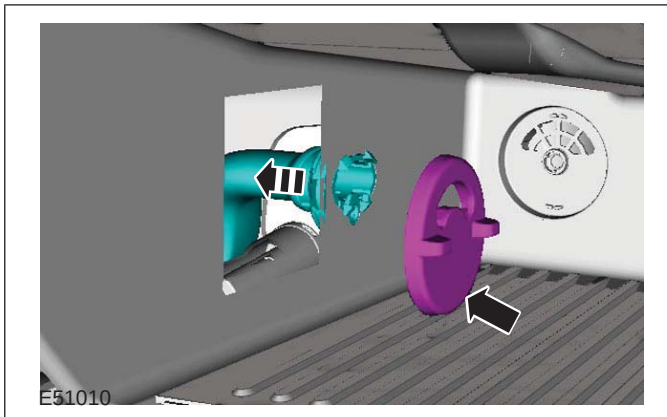**Item 5 Moving pictures experts group audio layer 3 (MP3) auxiliary connector electrical connector**

CAUTION: Do not place excessive strain on the electrical wiring harness when detaching the glove compartment.

1. Reposition the glove compartment and disconnect the MP3 auxiliary connector electrical connector.

Item 11 Noise, vibration and harshness (NVH) material

1. Detach the NVH material from the upper A-pillar area to gain access to the roof wiring harness retaining clip.


Item 13 Roof wiring harness

1. Attach a draw cord to the roof wiring harness and CJB electrical connector. Feed the wiring harness through the NVH material to above the instrument panel A-pillar area.

Item 14 Rear quarter window glass trim panel retaining screw trim covers

CAUTION: Care must be taken not to damage the rear quarter window glass trim panels and retaining screw trim covers.

1. Using a suitable flat blade screwdriver, lever out the rear quarter window glass trim panel retaining screw trim covers.

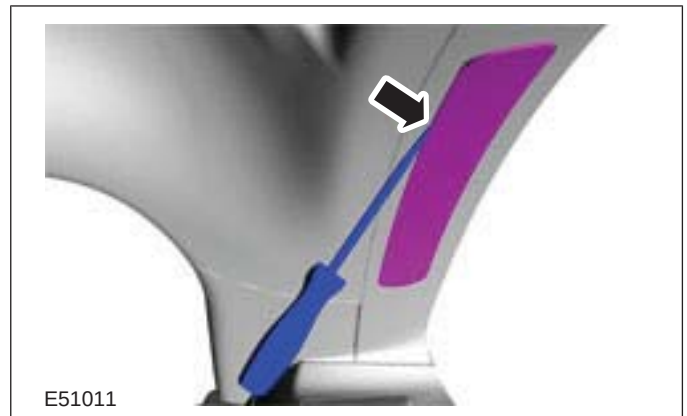**Item 16 Rear quarter window glass trim panels**


1. Detach the rear quarter window glass trim panel to B-pillar trim panel retaining clip.

Item 18 Door opening weatherstrips

1. Detach the door opening weatherstrips from the door opening upper area.


Item 21 B-pillar trim panels

1. Detach the B-pillar trim panels and position them to one side.

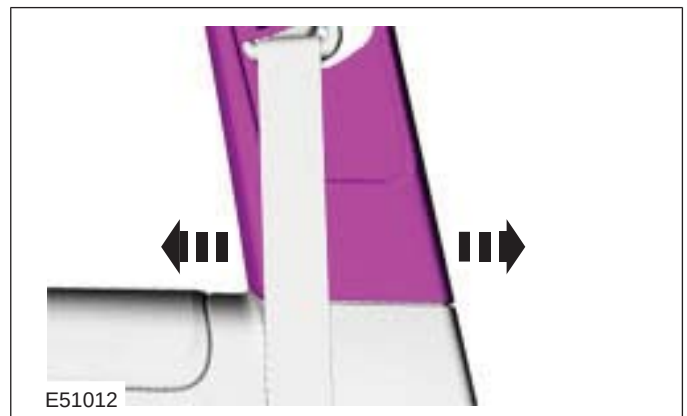

REMOVAL AND INSTALLATION**Item 22 Rear passenger assist handles**


1. Lever open the rear passenger assist handle screw covers.

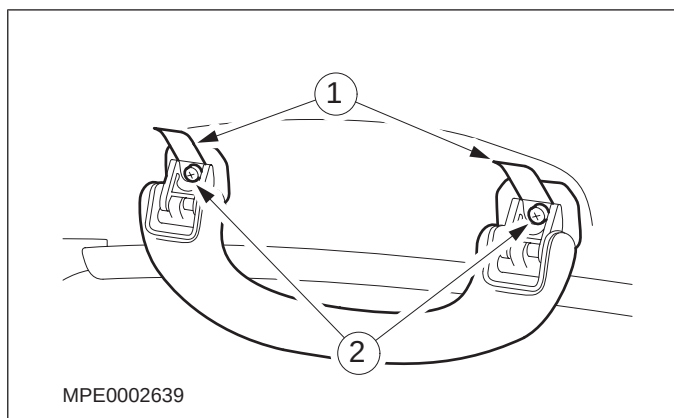

2. Remove the rear passenger assist handle retaining screws.

Item 24 Glasses holder


1. Lever open the glasses holder retaining screw covers.

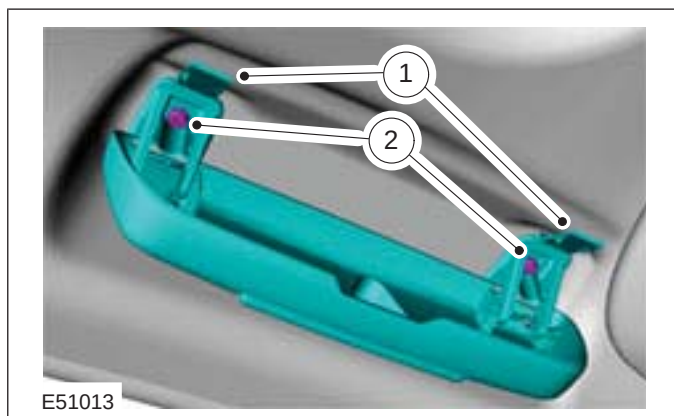

2. Remove the glasses holder retaining screws.

Item 25 Front passenger assist handle


1. Lever open the front passenger assist handle retaining screw covers.

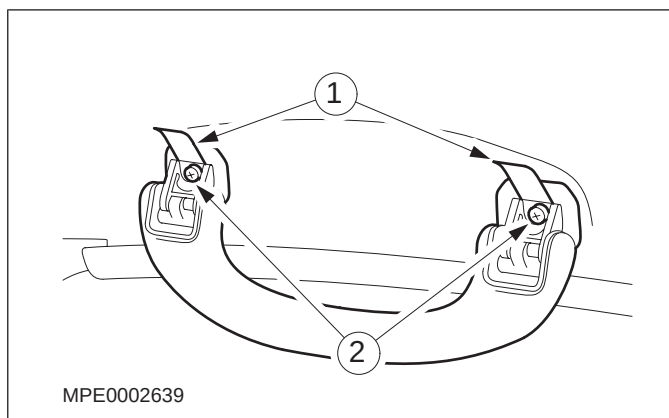

2. Remove the front passenger assist handle retaining screws.

Item 27 Sun visor retaining clips


1. Lever open the sun visor retaining clip retaining screw cover.

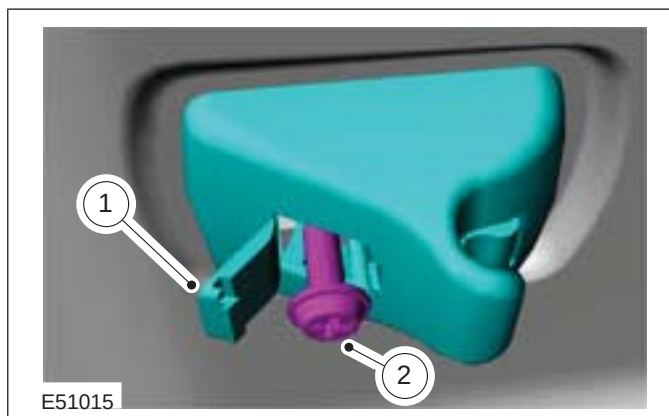

2. Remove the sun visor retaining clip retaining screw.

REMOVAL AND INSTALLATION**Item 28** Roof wiring harness ground connection retaining bolt

1. Detach the roof wiring harness and windscreen ground electrical connectors.

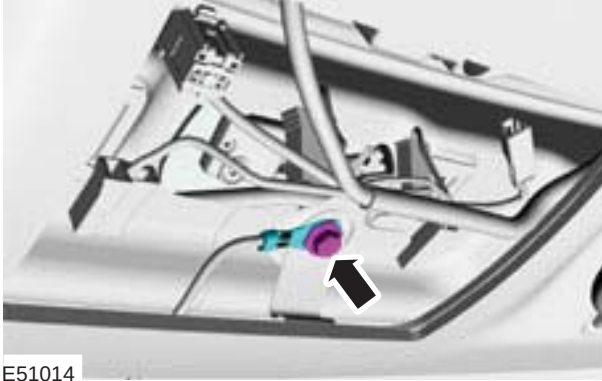**Item 30** Auto-dimming interior mirror and rain sensor electrical connectors

1. Disconnect the auto-dimming interior mirror and rain sensor electrical connectors.

**Item 29** Auto-dimming interior mirror trim covers

1. Remove the auto-dimming interior mirror and rain sensor trim covers.
 1. Release the locking clips.
 2. Slide the rain sensor trim cover off the auto-dimming interior mirror trim cover.


**Item 31** Headliner trim panel

1. Tilt the front seats forward.
2. With the aid of another technician, remove the headliner through the liftgate opening.

Item 33 Radio frequency (RF) receiver

NOTE: Make a note of the position of the RF receiver to make sure that it is installed in exactly the same position as when removed.

1. Using a suitable knife, detach the RF receiver from the headliner.

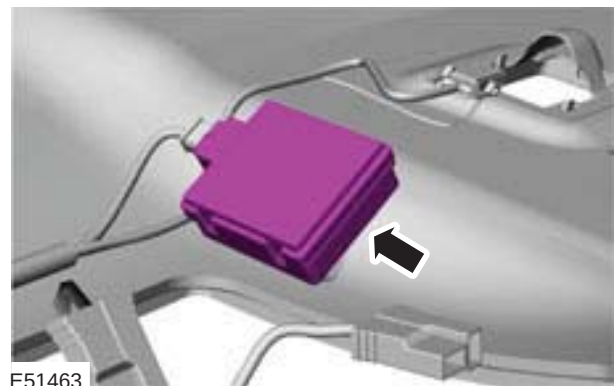**Item 35** Roof wiring harness**CAUTIONS:**

-  Take care not to damage the insulation of the roof wiring harness.
-  The roof wiring harness must be cut off the headliner and not pulled or ripped. Failure to follow this instruction could

REMOVAL AND INSTALLATION


result in the incorrect function of electrical components.

NOTE: Make a note of the position of the roof wiring harness to make sure that it is installed in exactly the same position as when removed.

1. Using a suitable knife, remove the roof wiring harness from the headliner.


Item 36 Sunvisor illumination lamps

1. Release the sun visor illumination lamp retaining clips.

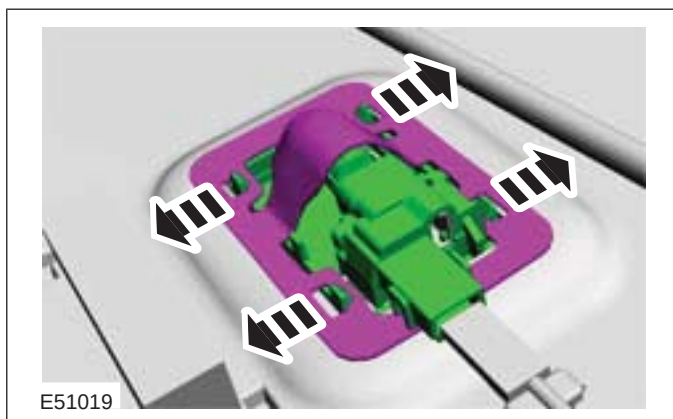

Item 37 Rear interior lamp

1. Lever out the rear interior lamp.

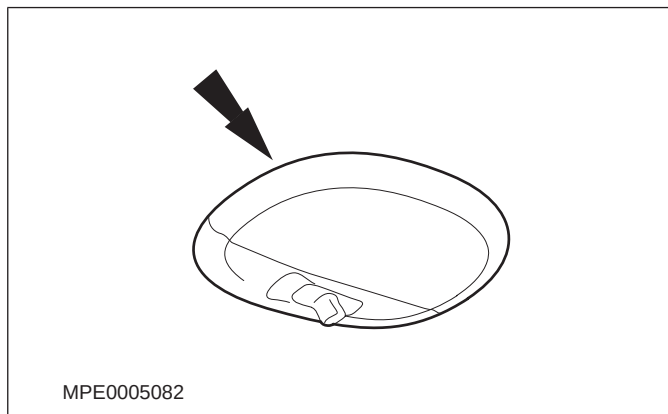

Item 38 Rear window washer tube

CAUTION: Take care not to damage the rear window washer tube. Failure to follow this instruction could result in damage to the headliner.

NOTE: Make a note of the position of the rear window washer tube to make sure that it is installed in exactly the same position as when removed.

1. Using a suitable knife, remove the rear window washer tube from the headliner.

Installation Details

Item 38 Rear window washer tube

CAUTION: The rear window washer tube must be installed in the same position as when removed.

1. Using a suitable adhesive, bond the rear window washer tube to the headliner.

Item 35 Roof wiring harness

CAUTION: The roof wiring harness must be installed in the same position as when removed.


1. Using a suitable adhesive, bond the roof wiring harness to the headliner.

Item 31 Headliner trim panel

1. With the aid of another technician, install the headliner.

Item 21 B-pillar trim panels

NOTE: Make sure the B-pillar safety belt height adjustment lever is aligned with the safety belt height adjustment mechanism.

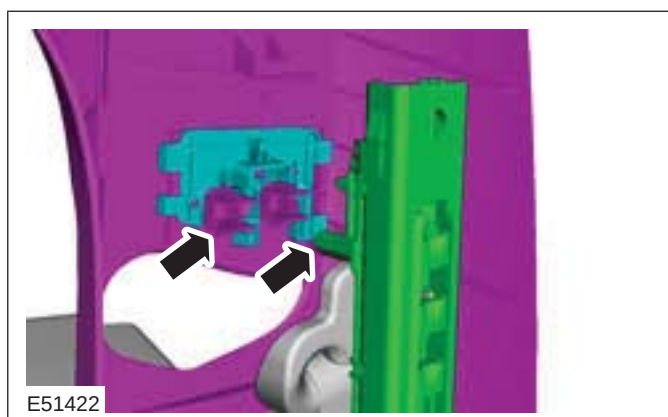

REMOVAL AND INSTALLATION

Item 17 Rear quarter window glass trim panel retaining clips

1. Install the rear quarter window glass trim panel retaining clips to the rear quarter window glass trim panel.

Item 13 Roof wiring harness

1. Using the draw cord, feed the roof wiring harness through the NVH material.

Item 11 Noise, vibration and harshness (NVH) material

1. Reposition the NVH material.

REMOVAL AND INSTALLATION

Headliner — 5-Door, Vehicles Without: Sliding Roof Opening Panel

General Equipment

Draw cord


1. Disconnect the battery ground cable.

For additional information, **refer to: Battery Disconnect and Connect** (414-01 Battery, Mounting and Cables, General Procedures).

2. Remove the A-pillar trim panels.

For additional information, **refer to: A-Pillar Trim Panel** (501-05 Interior Trim and Ornamentation, Removal and Installation).

3. Disconnect the rear window washer tube.

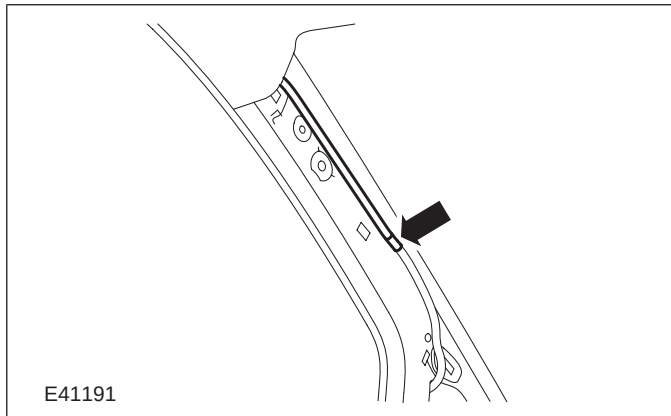

4. Remove the overhead console.

For additional information, **refer to: Overhead Console** (501-12 Instrument Panel and Console, Removal and Installation).


5. Remove the C-pillar trim panels.

For additional information, **refer to: C-Pillar Trim Panel - 4-Door/5-Door** (501-05 Interior Trim and Ornamentation, Removal and Installation).


6. Remove the D-pillar trim panels.

For additional information, **refer to: D-Pillar Trim Panel - 5-Door** (501-05 Interior Trim and Ornamentation, Removal and Installation).


7. Disconnect the rear window washer tube.

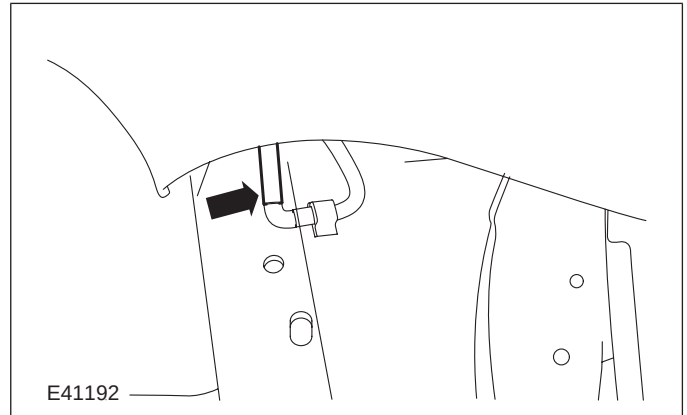

8. Remove the instrument panel passenger side lower trim panel.

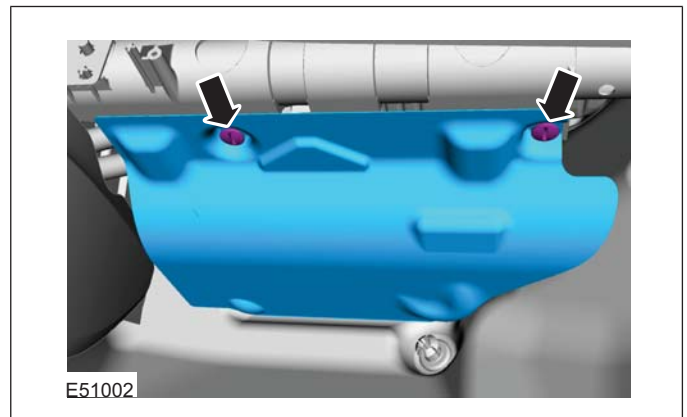

9. Lower the central junction box (CJB).


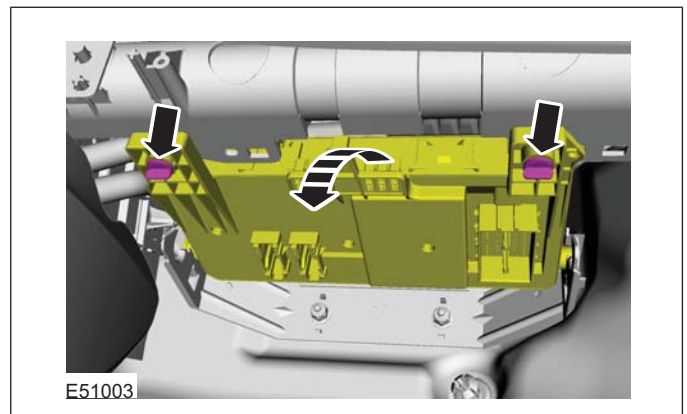


10. Open the glove compartment lid.

REMOVAL AND INSTALLATION

11. Remove the navigation system digital versatile disc (DVD) unit access cover (if equipped).


12. Remove the components in the order indicated in the following illustration(s) and table(s).

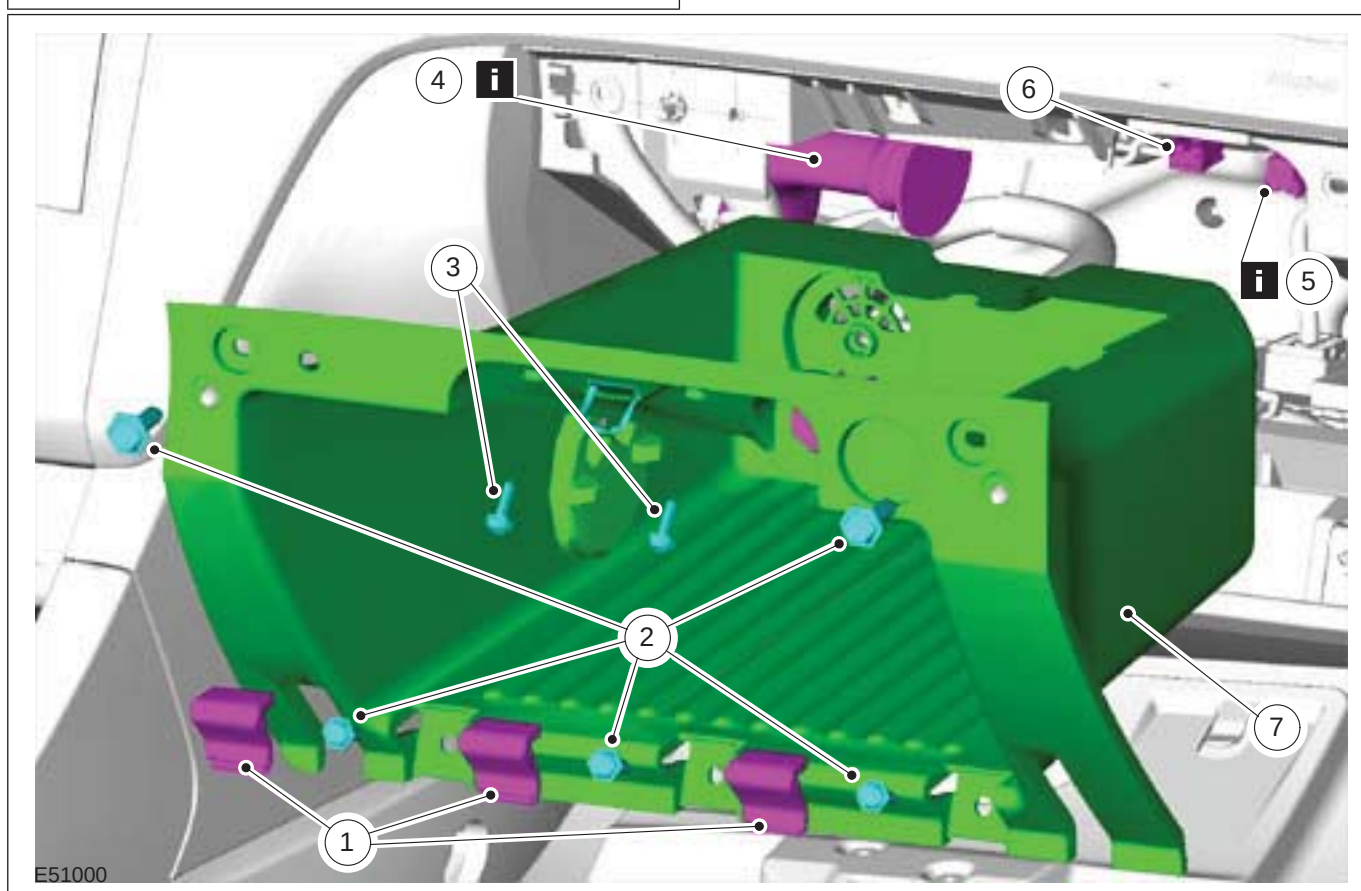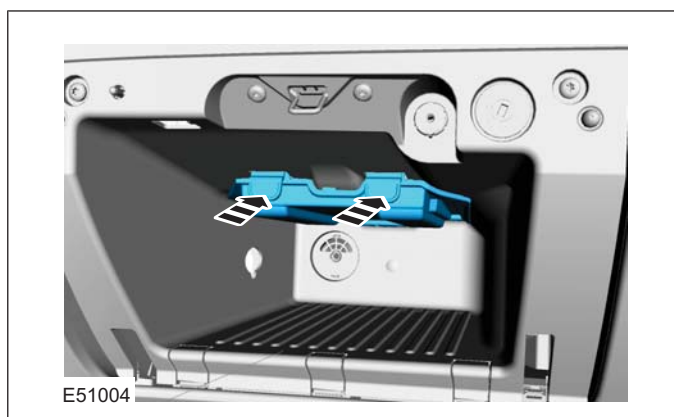

Item	Description
1	Glove compartment retaining screw covers
2	Glove compartment retaining screws
3	Glove compartment lid striker retaining screws
4	Glove compartment cooling hose See Removal Detail

Item	Description
5	Moving pictures experts group audio layer 3 (MP3) auxiliary connector electrical connector See Removal Detail
6	Passenger airbag deactivation switch electrical connector
7	Glove compartment housing


REMOVAL AND INSTALLATION

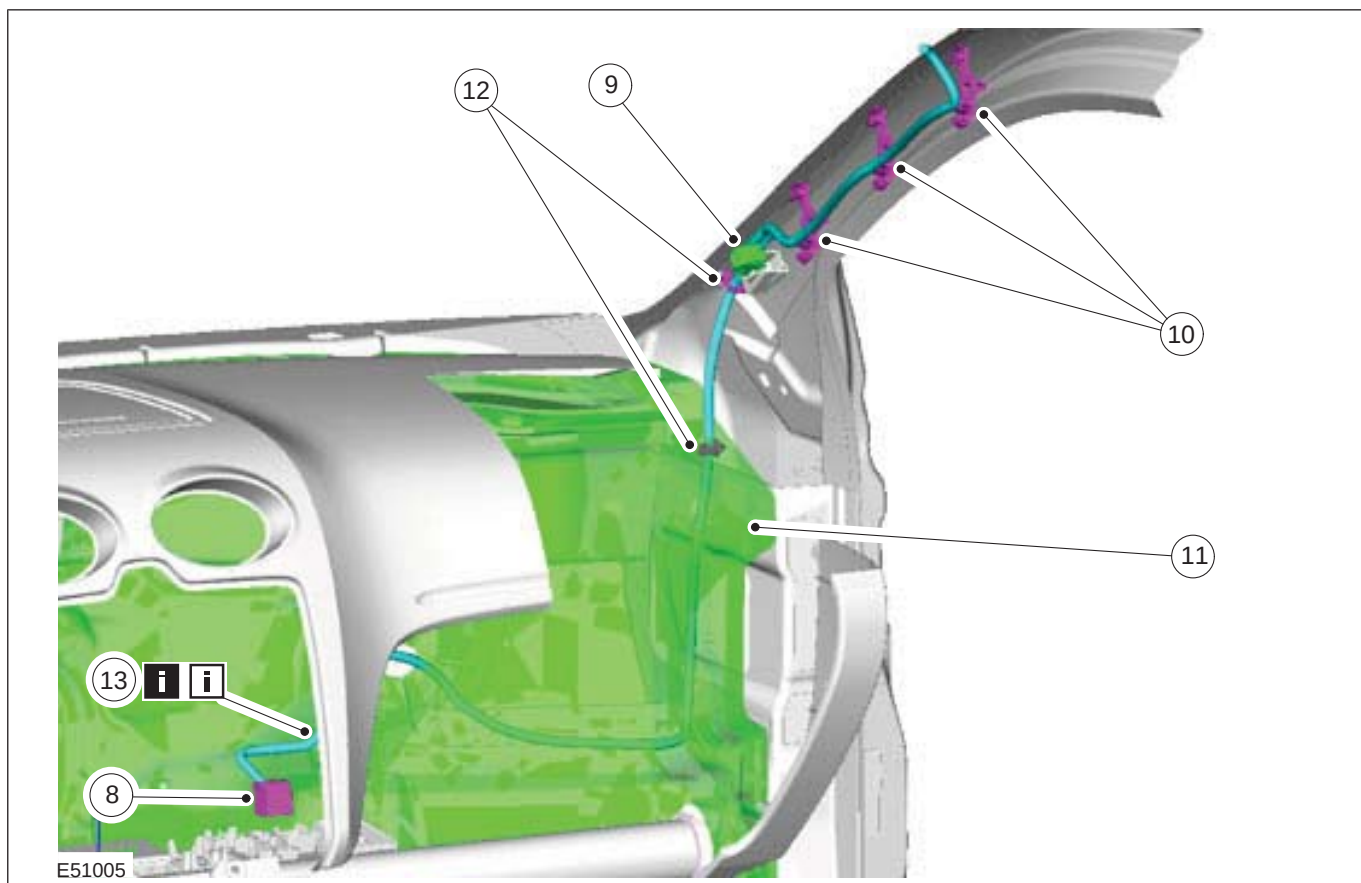

Item	Description
8	Roof wiring harness to CJB electrical connector
9	Roof wiring harness electrical connector
10	Roof wiring harness to A-pillar retaining clips

Item	Description
11	Noise, vibration and harshness (NVH) material See Removal Detail See Installation Detail
12	Roof wiring harness retaining clips
13	Roof wiring harness See Removal Detail See Installation Detail

REMOVAL AND INSTALLATION

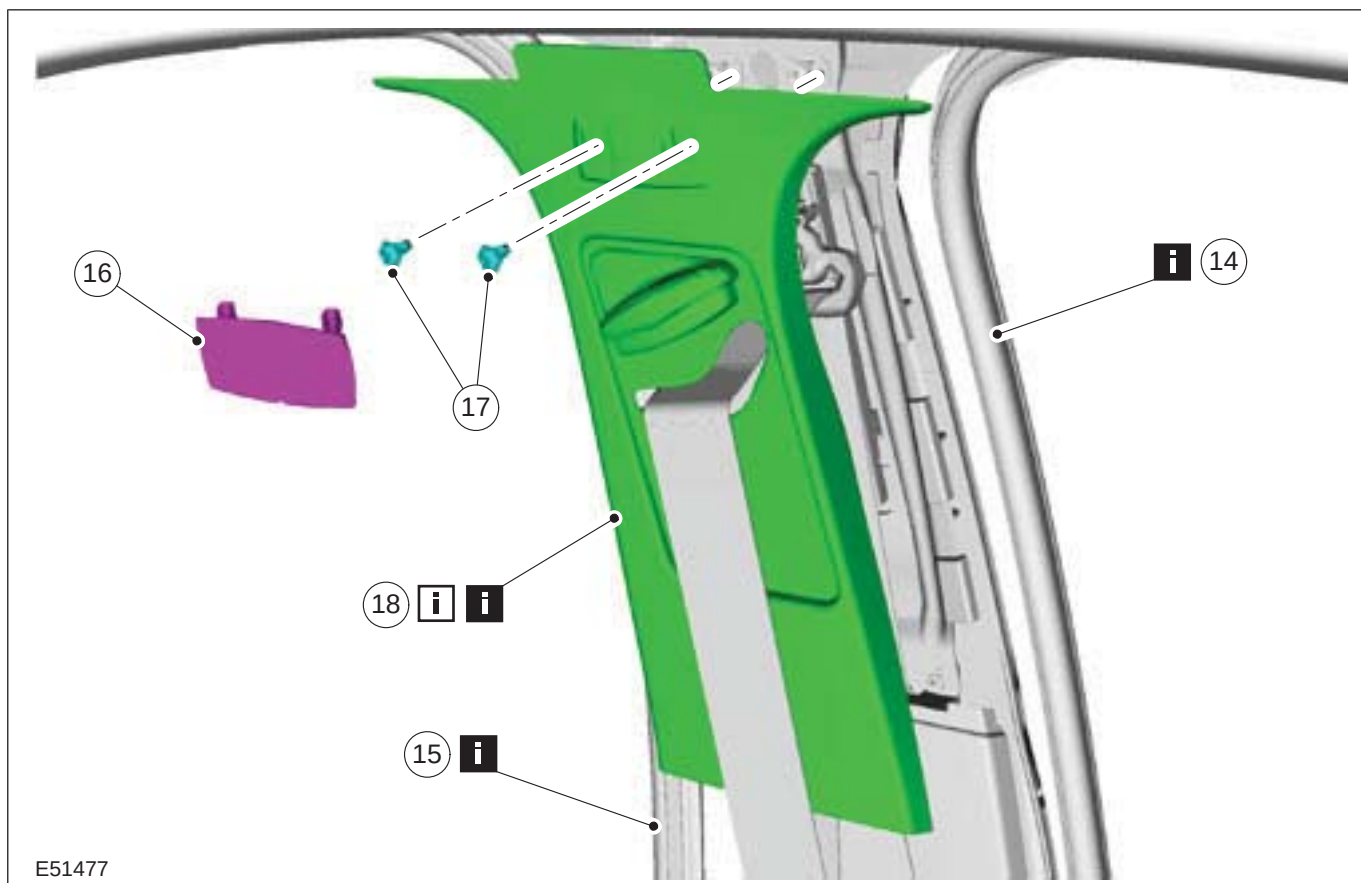


E51477

Item	Description
14	Front door opening weatherstrips See Removal Detail
15	Rear door opening weatherstrips See Removal Detail

Item	Description
16	B-pillar trim panel retaining screw trim covers
17	B-pillar trim panel retaining screws
18	B-pillar trim panels See Removal Detail See Installation Detail

REMOVAL AND INSTALLATION

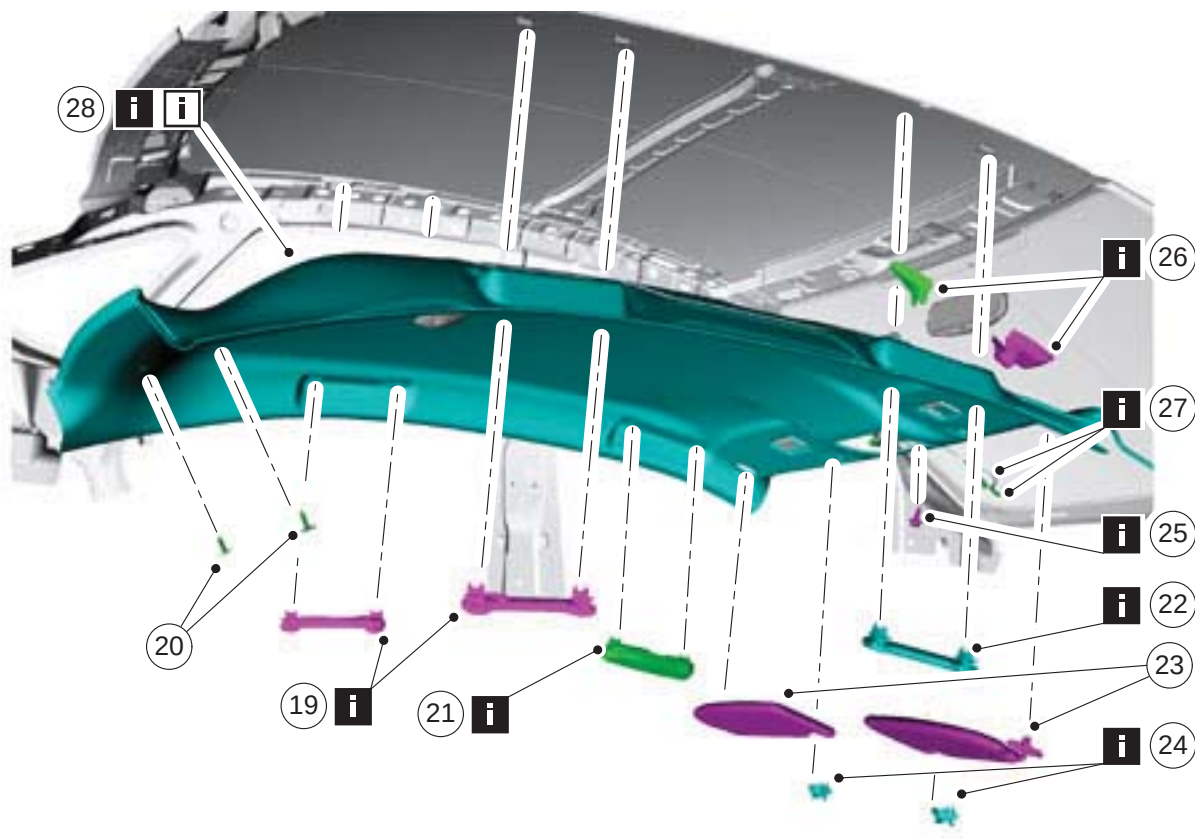


E51504

Item	Description
19	Rear passenger assist handles See Removal Detail
20	Headliner trim panel retaining clips
21	Glasses holder See Removal Detail
22	Front passenger assist handle See Removal Detail
23	Sun visors
24	Sun visor retaining clips See Removal Detail

Item	Description
25	Roof wiring harness ground connection retaining bolt See Removal Detail
26	Auto-dimming interior mirror trim covers See Removal Detail
27	Auto-dimming interior mirror and rain sensor electrical connectors See Removal Detail
28	Headliner trim panel See Removal Detail See Installation Detail

REMOVAL AND INSTALLATION

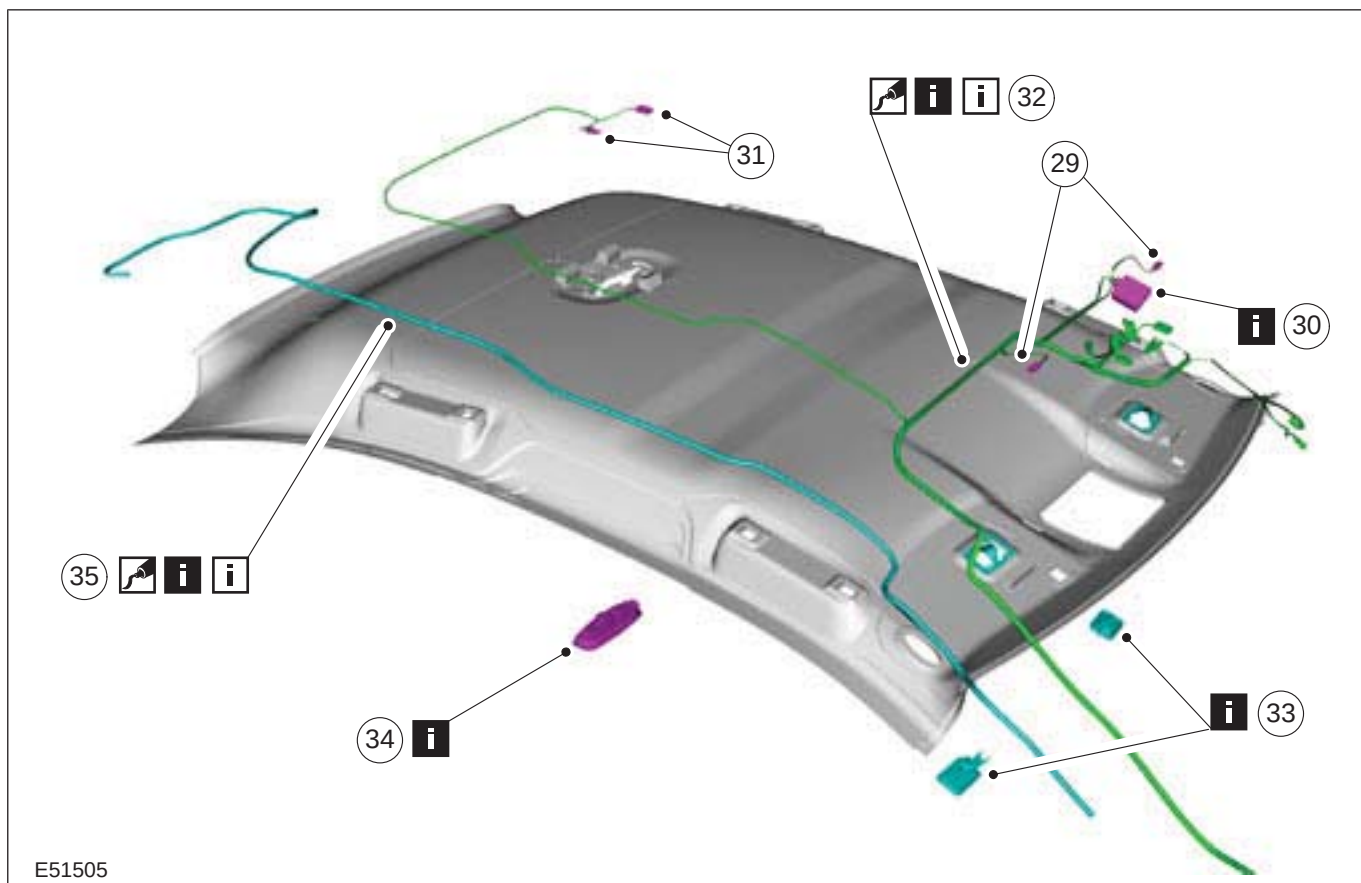

E51505

Item	Description
29	Sun-visor illumination lamp electrical connectors
30	Radio frequency (RF) receiver See Removal Detail
31	Rear interior lamp electrical connectors
32	Roof wiring harness See Removal Detail See Installation Detail
33	Sun-visor illumination lamps See Removal Detail

Item	Description
34	Rear interior lamp See Removal Detail
35	Rear window washer tube See Removal Detail See Installation Detail

13. To install, reverse the removal procedure.

14. Vehicles with global closing, initialize the door window motors.


For additional information, **refer to: Door Window Motor Initialization** (501-11 Glass, Frames and Mechanisms, General Procedures).

Removal Details


REMOVAL AND INSTALLATION

Item 4 Glove compartment cooling hose

1. Detach the glove compartment cooling hose from the glove compartment cooling vent.

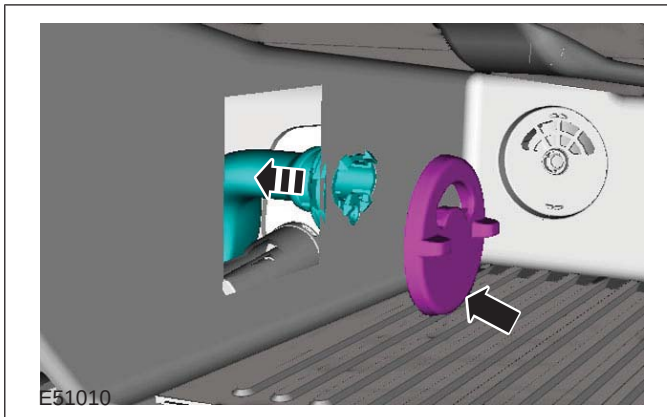**Item 18** B-pillar trim panels

1. Detach the B-pillar trim panels and position them to one side.

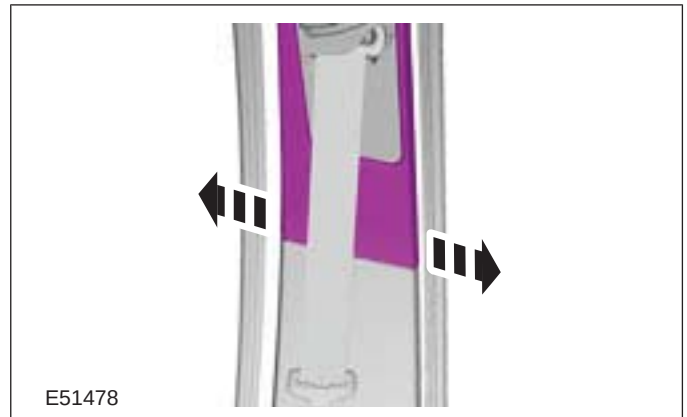**Item 5** Moving pictures experts group audio layer 3 (MP3) auxiliary connector electrical connector

CAUTION: Do not place excessive strain on the electrical wiring harness when detaching the glove compartment.

1. Reposition the glove compartment and disconnect the MP3 auxiliary connector electrical connector.

Item 11 Noise, vibration and harshness (NVH) material

1. Detach the NVH material from the upper A-pillar area to gain access to the roof wiring harness retaining clip.

Item 13 Roof wiring harness

1. Attach a draw cord to the roof wiring harness and CJB electrical connector. Feed the wiring harness through the NVH material to above the instrument panel A-pillar area.

Item 14 Front door opening weatherstrips


1. Detach the front door opening weatherstrips from the front door upper opening area.

Item 15 Rear door opening weatherstrips

1. Detach the rear door opening weatherstrips from the rear door upper opening area.

Item 19 Rear passenger assist handles


1. Lever open the rear passenger assist handle screw covers.

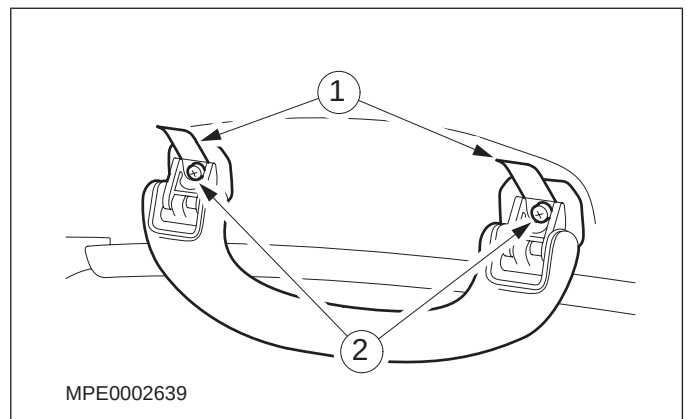

2. Remove the rear passenger assist handle retaining screws.

Item 21 Glasses holder

1. Lever open the glasses holder retaining screw covers.

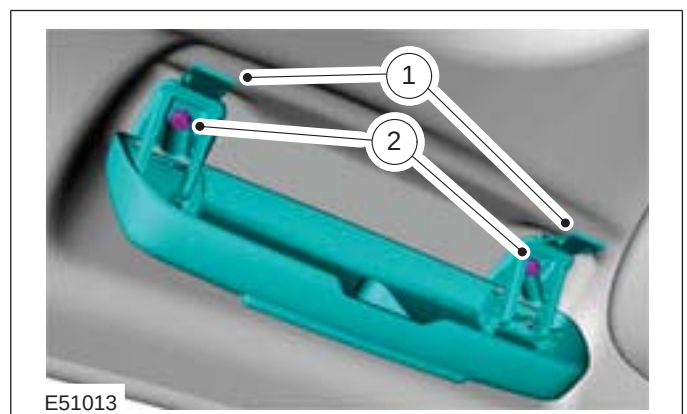


REMOVAL AND INSTALLATION

2. Remove the glasses holder retaining screws.

Item 22 Front passenger assist handle


1. Lever open the front passenger assist handle retaining screw covers.

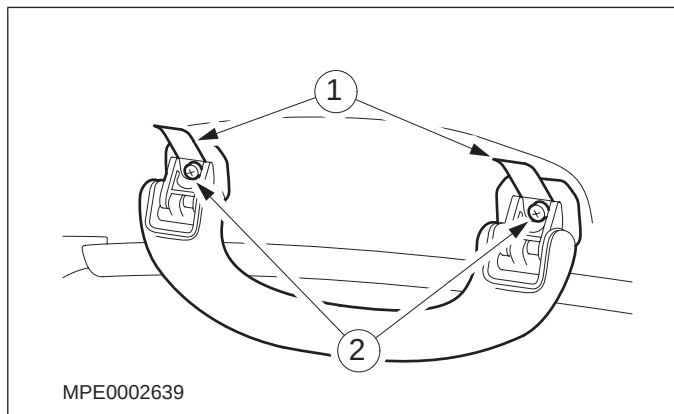

2. Remove the front passenger assist handle retaining screws.

Item 24 Sun visor retaining clips


1. Lever open the sun-visor retaining clips retaining screw cover.

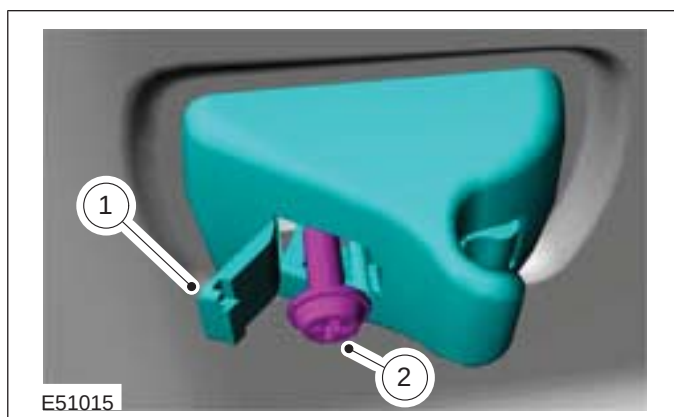

2. Remove the sun-visor retaining clips retaining screw.


Item 25 Roof wiring harness ground connection retaining bolt

1. Detach the roof wiring harness and windscreen ground electrical connectors.

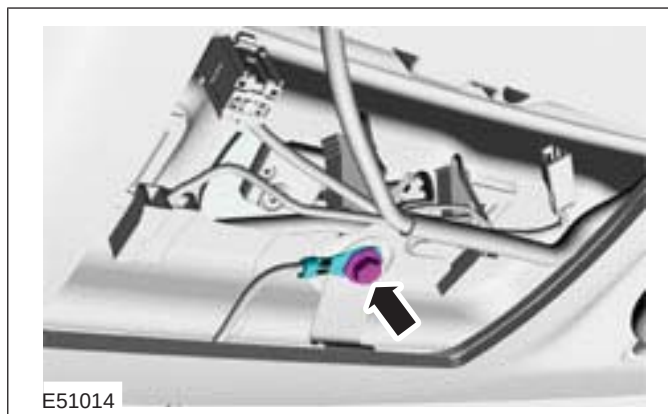**Item 26 Auto-dimming interior mirror trim covers**

1. Remove the auto-dimming interior mirror and rain sensor trim covers.

1. Release the locking clips.
2. Slide the rain sensor trim cover off the auto-dimming interior mirror trim cover.

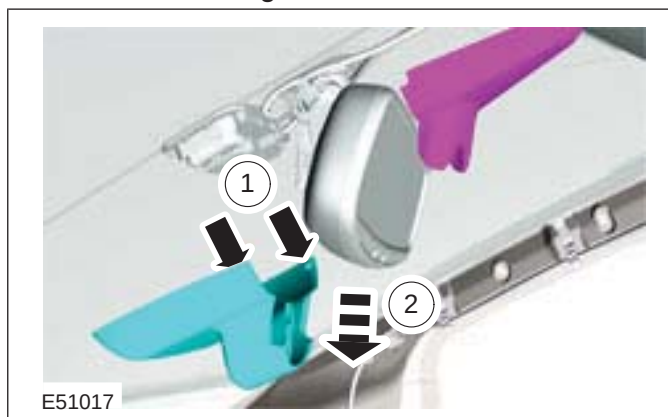

REMOVAL AND INSTALLATION

Item 27 Auto-dimming interior mirror and rain sensor electrical connectors

1. Disconnect the auto-dimming interior mirror and rain sensor electrical connectors.




Item 28 Headliner trim panel

1. Tilt the front seats forward.
2. With the aid of another technician, remove the headliner through the liftgate opening.

Item 30 Radio frequency (RF) receiver

NOTE: Make a note of the position of the RF receiver to make sure that it is installed in exactly the same position as removed.

1. Using a suitable knife, detach the RF receiver from the headliner.

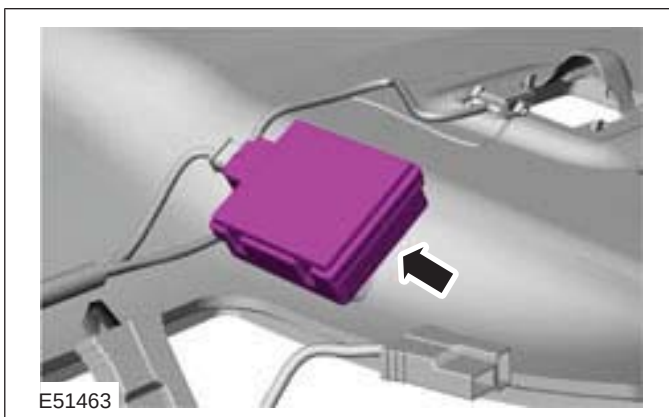

Item 32 Roof wiring harness

CAUTIONS:

- ⚠ Take care not to damage the insulation of the roof wiring harness.
- ⚠ The roof wiring harness must be cut off the headliner and not pulled or ripped. Failure to follow this instruction could


result in the incorrect function of electrical components.

NOTE: Make a note of the position of the roof wiring harness to make sure that it is installed in exactly the same position as removed.

1. Using a suitable knife, remove the roof wiring harness from the headliner.


Item 33 Sun-visor illumination lamps

1. Release the sunvisor illumination lamp retaining clips.

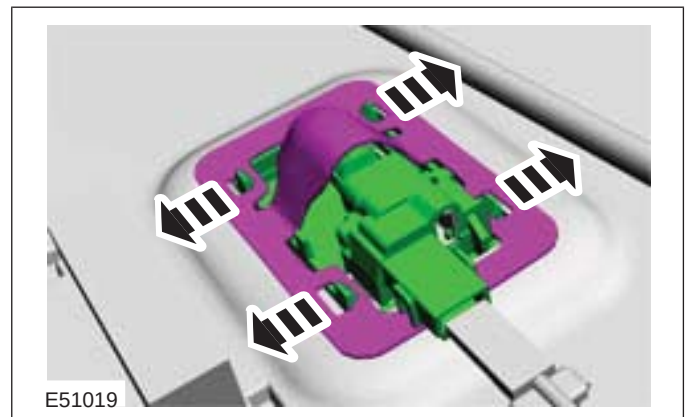

Item 34 Rear interior lamp

1. Lever out the rear interior lamp.

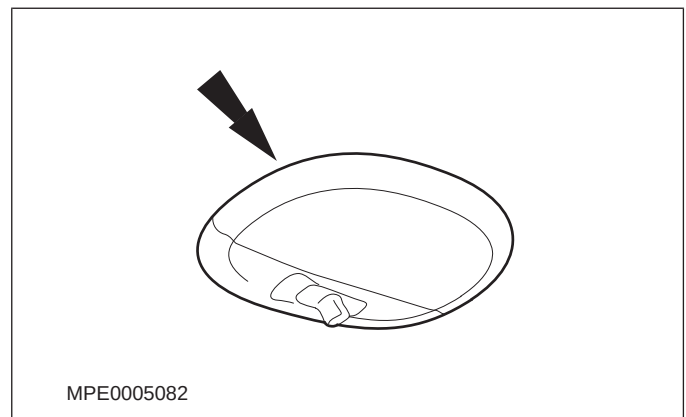

Item 35 Rear window washer tube

CAUTION: Take care not to damage the rear window washer tube. Failure to follow this instruction could result in damage to the headliner.

NOTE: Make a note of the position of the rear window washer tube to make sure that it is installed in exactly the same position as removed.

1. Using a suitable knife, remove the rear window washer tube from the headliner.

REMOVAL AND INSTALLATION

Installation Details

Item 35 Rear window washer tube

 **CAUTION:** The rear window washer tube must be installed in the same position as removed.

1. Using a suitable adhesive, bond the rear window washer tube to the headliner.

Item 32 Roof wiring harness

 **CAUTION:** The roof wiring harness must be installed in the same position as removed.


1. Using a suitable adhesive, bond the roof wiring harness to the headliner.

Item 28 Headliner trim panel

1. With the aid of another technician, install the headliner.

Item 18 B-pillar trim panels

NOTE: Make sure the B-pillar safety belt height adjustment lever is aligned with the safety belt height adjustment mechanism.

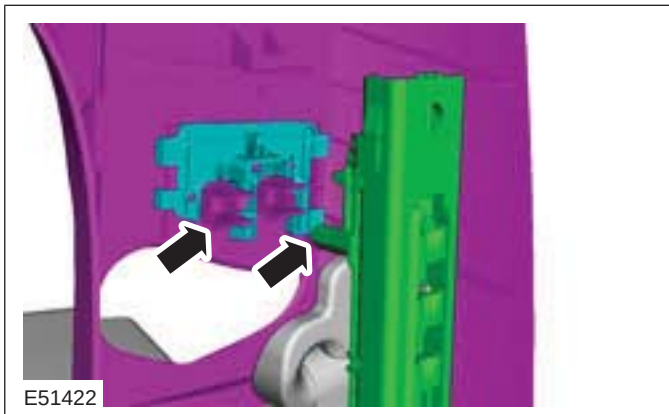

Item 13 Roof wiring harness

1. Using the Draw cord, feed the roof wiring harness through the NVH material.


Item 11 Noise, vibration and harshness (NVH) material

1. Reposition the NVH material.

REMOVAL AND INSTALLATION

Rear Quarter Trim Panel — 3-Door


1. Remove the parcel shelf trim panel.
2. Tilt the rear seat cushion forward.
3. Tilt the rear seat backrest forward.
4. Release the rear seat backrest outer pivot retaining lock.
 1. Using a suitable pair of long nose pliers, press in the retaining clips.
 2. Using a suitable flat blade screwdriver, release the outer locking clip.
 3. Using a suitable flat blade screwdriver, rotate the outer mounting bracket pivot locking latch.

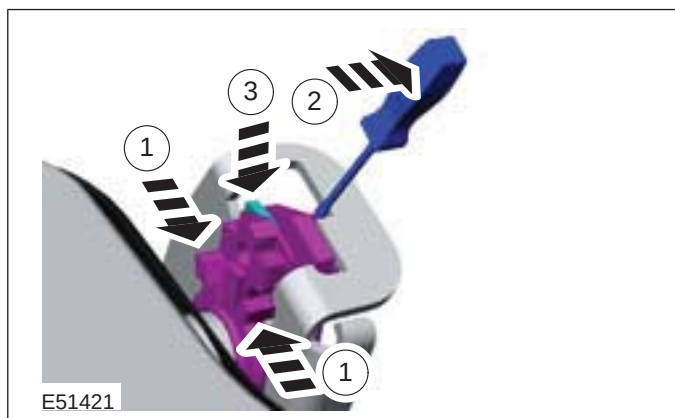

5. **CAUTION:** The rear seat backrest inner pivot pin has radial grooves. Take care not to damage the backrest inner pivot bush.

Remove the rear seat backrest.

1. Detach the rear seat backrest outer pivot pin from the outer mounting bracket.
2. Slide the backrest from the center mounting bracket.

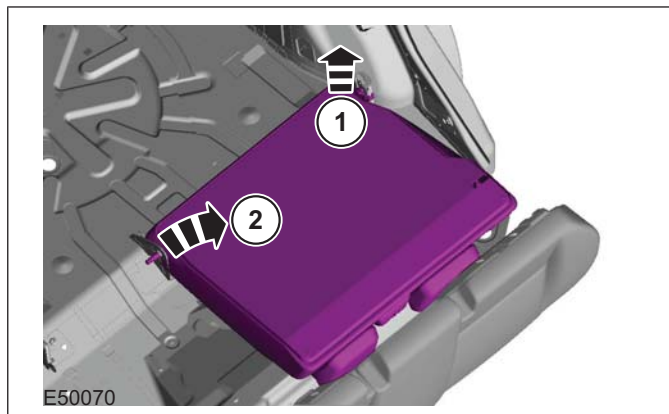


6. Remove the B-pillar trim panel.

For additional information, refer to: **B-Pillar Trim Panel - 3-Door** (501-05 Interior Trim and Ornamentation, Removal and Installation).

7. Remove the components in the order indicated in the following illustration(s) and table(s).


REMOVAL AND INSTALLATION

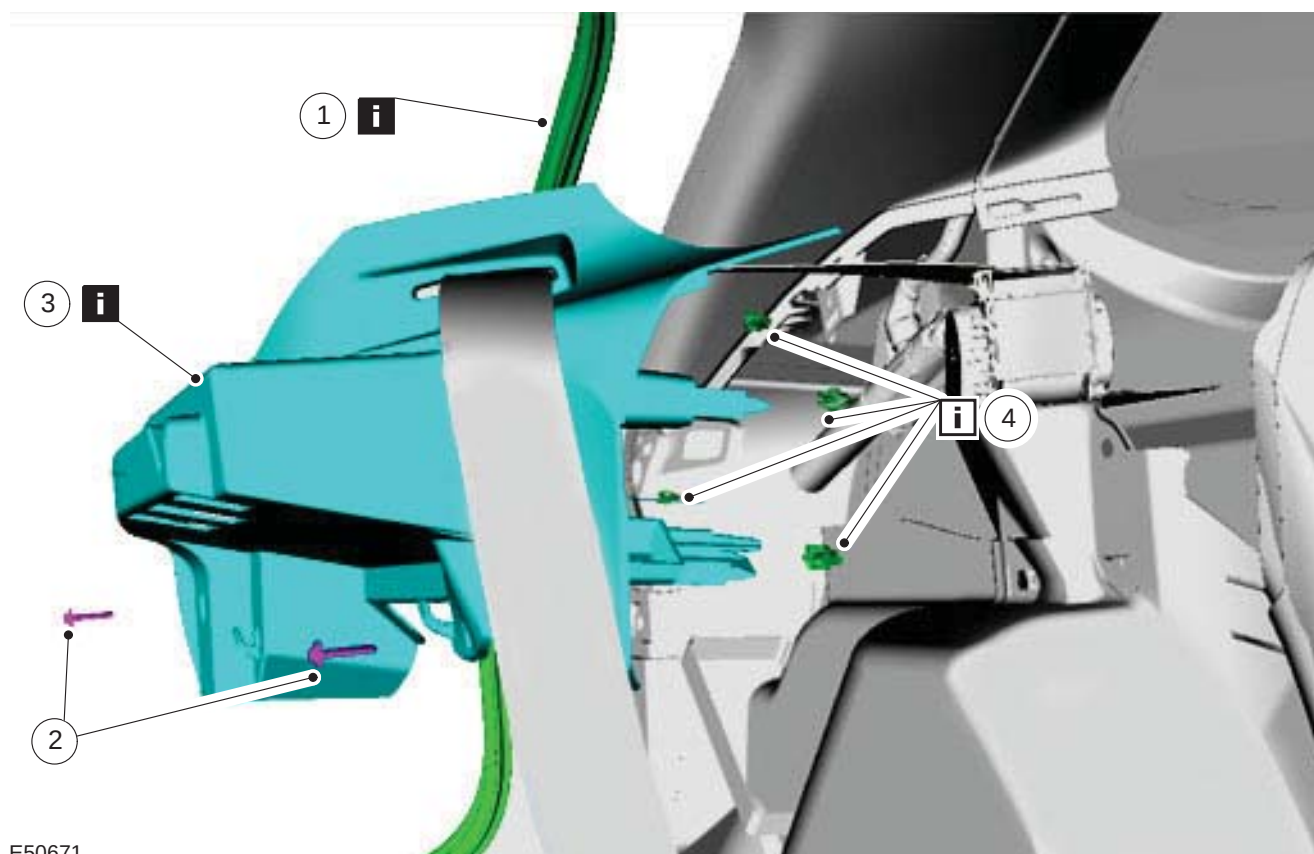

Item	Description
1	Liftgate opening weatherstrip See Removal Detail
2	Parcel shelf support trim panel retaining screws

Item	Description
3	Parcel shelf tray support trim panel See Removal Detail
4	Parcel shelf support trim panel retaining clips See Installation Detail

REMOVAL AND INSTALLATION

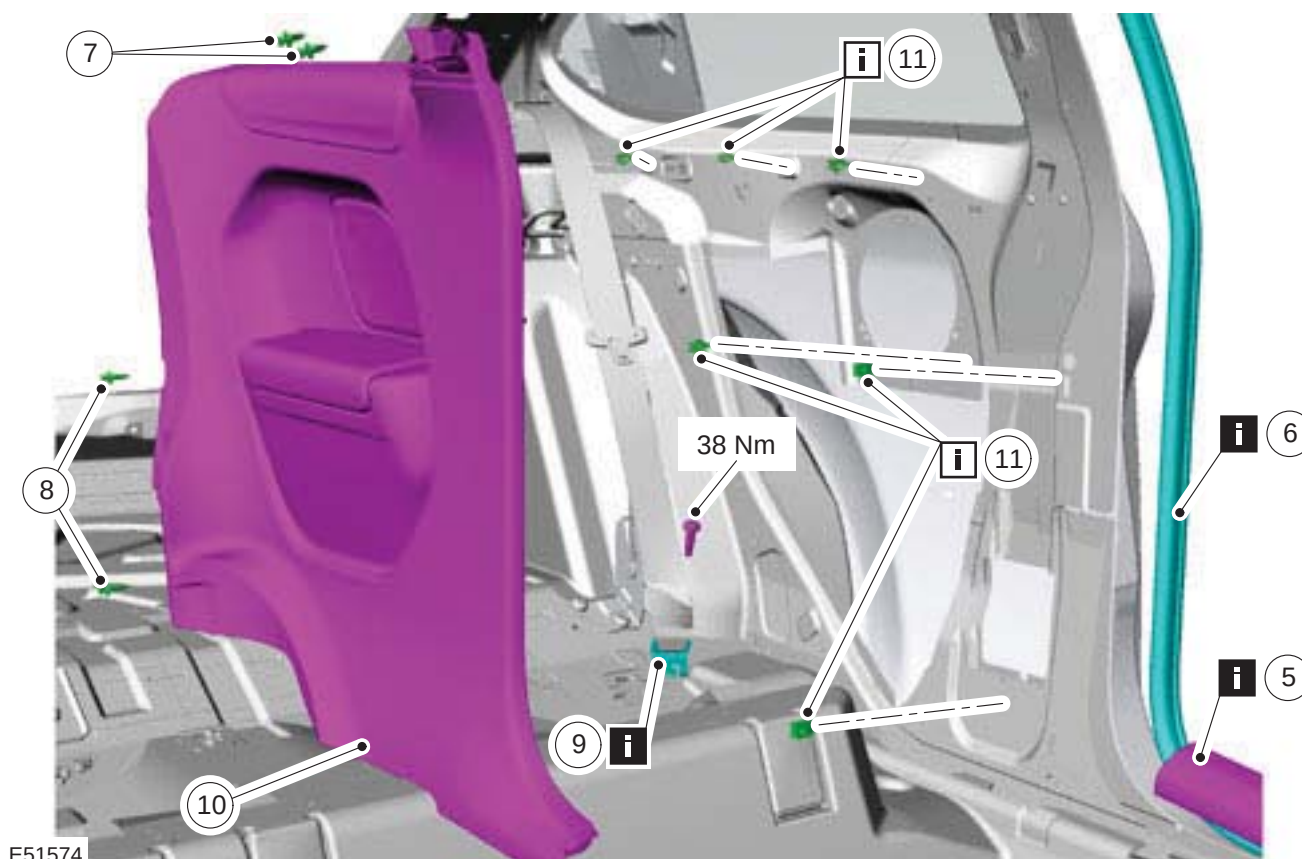

E51574

Item	Description
5	Front scuff plate See Removal Detail
6	Front door opening weatherstrip See Removal Detail
7	Rear quarter trim panel upper retaining clips
8	Rear quarter trim panel lower retaining clips

Item	Description
9	Rear safety belt lower anchor See Removal Detail
10	Rear quarter trim panel
11	Rear quarter trim panel retaining clips See Installation Detail


8. To install, reverse the removal procedure.

REMOVAL AND INSTALLATION**Removal Details****Item 1** Liftgate opening weatherstrip

1. Detach the liftgate opening weatherstrip.

Item 3 Parcel shelf tray support trim panel

1. Detach the parcel shelf support trim panel.
 - Pull the parcel shelf support trim panel away from the rear quarter body panel to release the retaining tang from the rear quarter glass trim panel.
 - Feed the rear safety belt harness through the parcel shelf support trim panel.

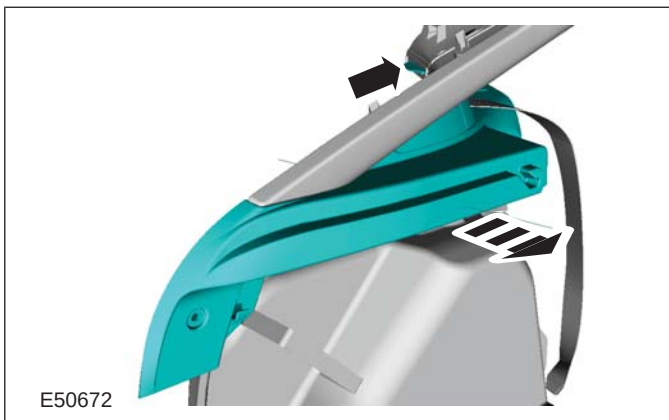**Item 5** Front scuff plate

1. Detach the front scuff plate.

Item 6 Front door opening weatherstrip

1. Detach the front door opening weatherstrip.

Item 9 Rear safety belt lower anchor

1. Detach the rear safety belt lower anchor.

Installation Details**Item 11** Rear quarter trim panel retaining clips

1. Install the rear quarter trim panel retaining clips to the trim panel before the trim panel is installed to the vehicle.


Item 4 Parcel shelf support trim panel retaining clips

1. Install the parcel shelf support trim panel retaining clips to the trim panel before the trim panel is installed to the vehicle.

REMOVAL AND INSTALLATION

Rear Quarter Trim Panel — 5-Door/Wagon


1. Tilt the rear seat cushion forward.
2. Tilt the rear seat backrest forward.
3. Release the rear seat backrest outer pivot retaining lock.
 1. Using a suitable pair of long nose pliers, press in the retaining clips.
 2. Using a suitable flat blade screwdriver, release the outer locking clip.
 3. Using a suitable flat blade screwdriver, rotate the outer mounting bracket pivot locking latch.

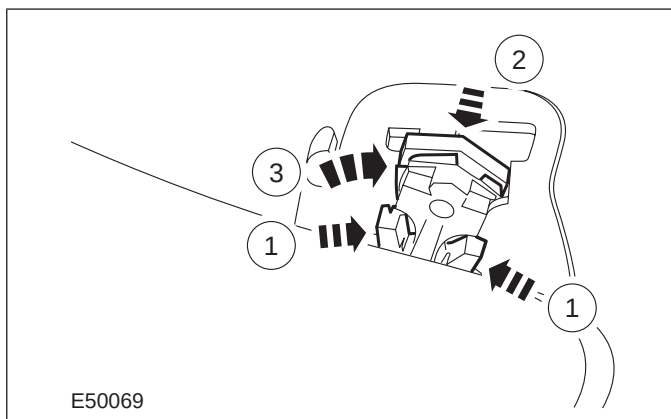


4. **⚠ CAUTION:** The left-hand rear seat backrest inner pivot pin has radial grooves. Take care not to damage the backrest inner pivot bushing.

Remove the rear seat backrest.

1. Detach the rear seat backrest outer pivot pin from the outer mounting bracket.
2. Slide the backrest from the center mounting bracket.

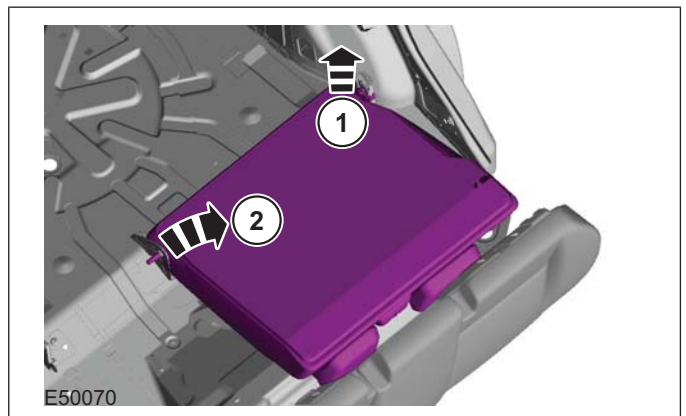

5. Remove the components in the order indicated in the following illustration(s) and table(s).

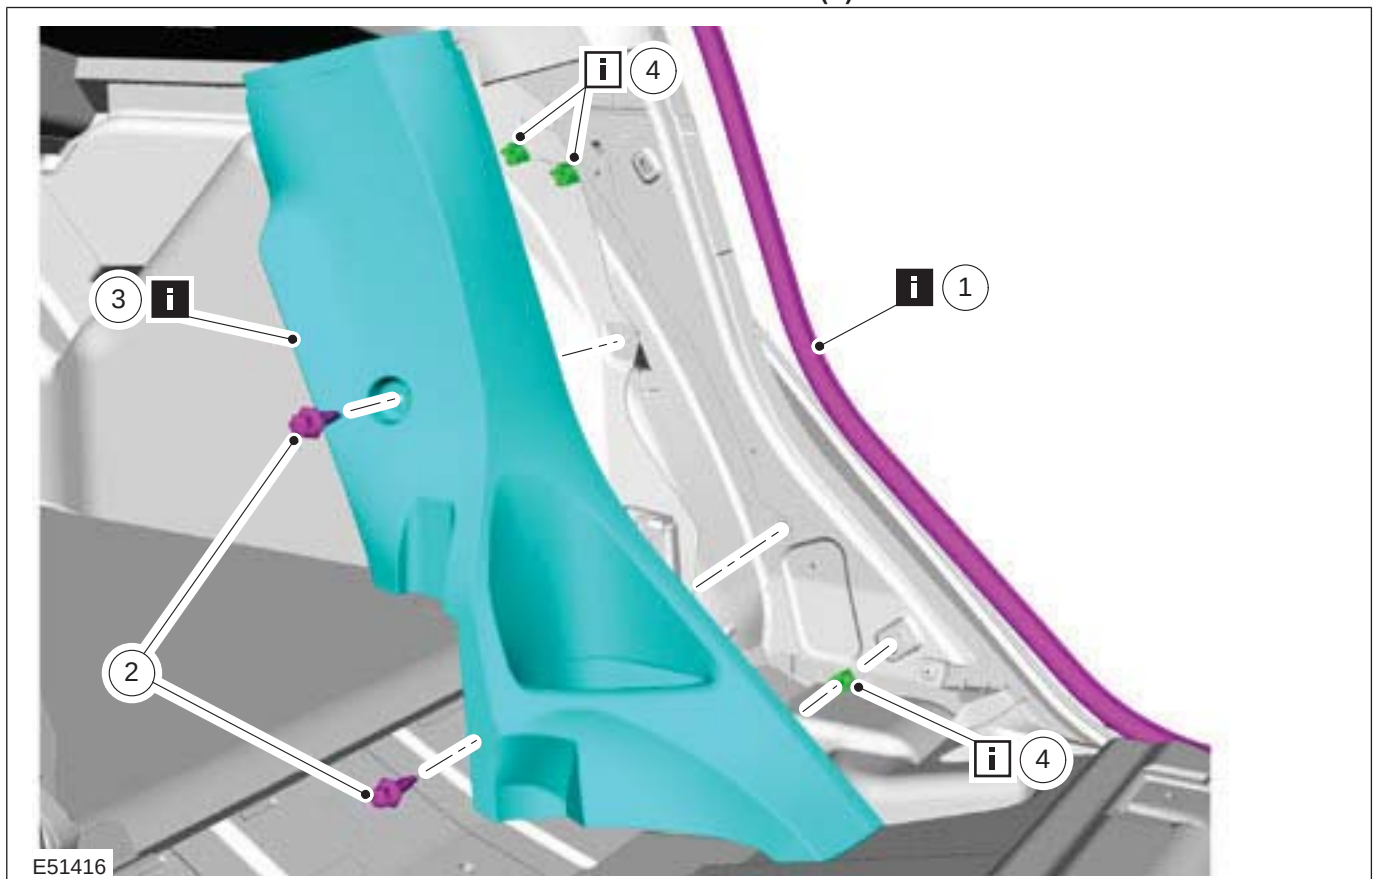

REMOVAL AND INSTALLATION

Item	Description
1	Rear door opening weatherstrip See Removal Detail
2	Rear quarter trim panel retaining clips

Item	Description
3	Rear quarter trim panel See Removal Detail
4	Rear quarter trim panel retaining clips See Installation Detail

6. To install, reverse the removal procedure.

Removal Details

Item 1 Rear door opening weatherstrip

1. Detach the rear door opening weatherstrip.

Item 3 Rear quarter trim panel

 **CAUTION:** When removing the rear quarter trim panel from under the rear parcel shelf

support trim panel, do not place excessive strain on the rear quarter trim panel retaining clip mouldings.

Installation Details

Item 4 Rear quarter trim panel retaining clips

1. Install the rear quarter trim panel retaining clips to the rear quarter trim panel before the rear quarter trim panel is installed to the vehicle.