

GROUP 54A

CHASSIS ELECTRICAL

GENERAL

OUTLINE OF CHANGE


- Due to the introduction of 5-door models, the rear speaker service procedure has been changed.

SPEAKER

REMOVAL AND INSTALLATION

<Rear speaker>

5-door models

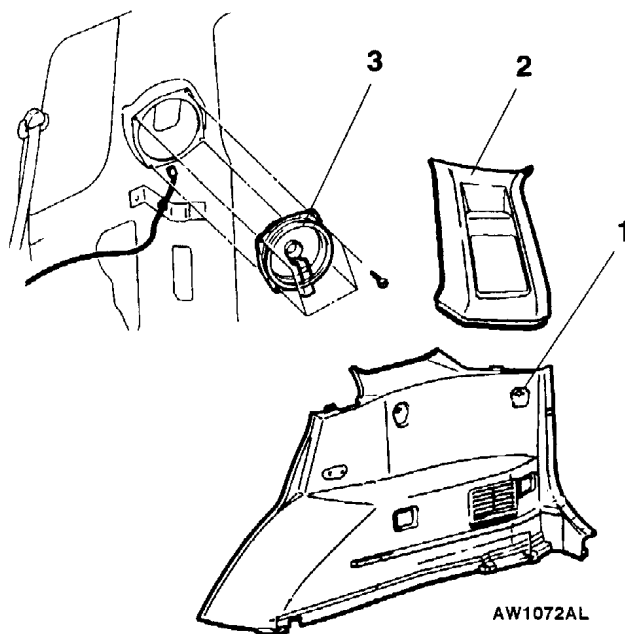

Rear speaker removal steps

1. Quarter trim, lower (Refer to GROUP 52A.)
2. Rear pillar trim (Refer to GROUP 52A.)
3. Speaker

GROUP 54B

SMART WIRING SYSTEM(SWS)

GENERAL

OUTLINE OF CHANGES

- Due to the introduction of 5-door models, the troubleshooting for the rear power windows have been added.

TROUBLESHOOTING

TROUBLE SYMPTOM CHART

Trouble symptom		Inspection procedure	Reference page
Power window	Rear power window sub-switches can not operate rear door windows. (However, power window main switch can operate rear door windows.)	D-9	54B-2

Inspection Procedure D-9

Power windows: Rear power window sub-switches can not operate rear door windows. (However, power window main switch can operate rear door windows.)	Probable cause
Power supply circuit or earth circuit of the rear power window motor, rear power window motor or rear power window sub-switches may be defective.	• Malfunction of rear power window sub-switches • Malfunction of rear power window motors • Malfunction of wiring harness or connector

