


F-2

HORN, STOP LIGHT

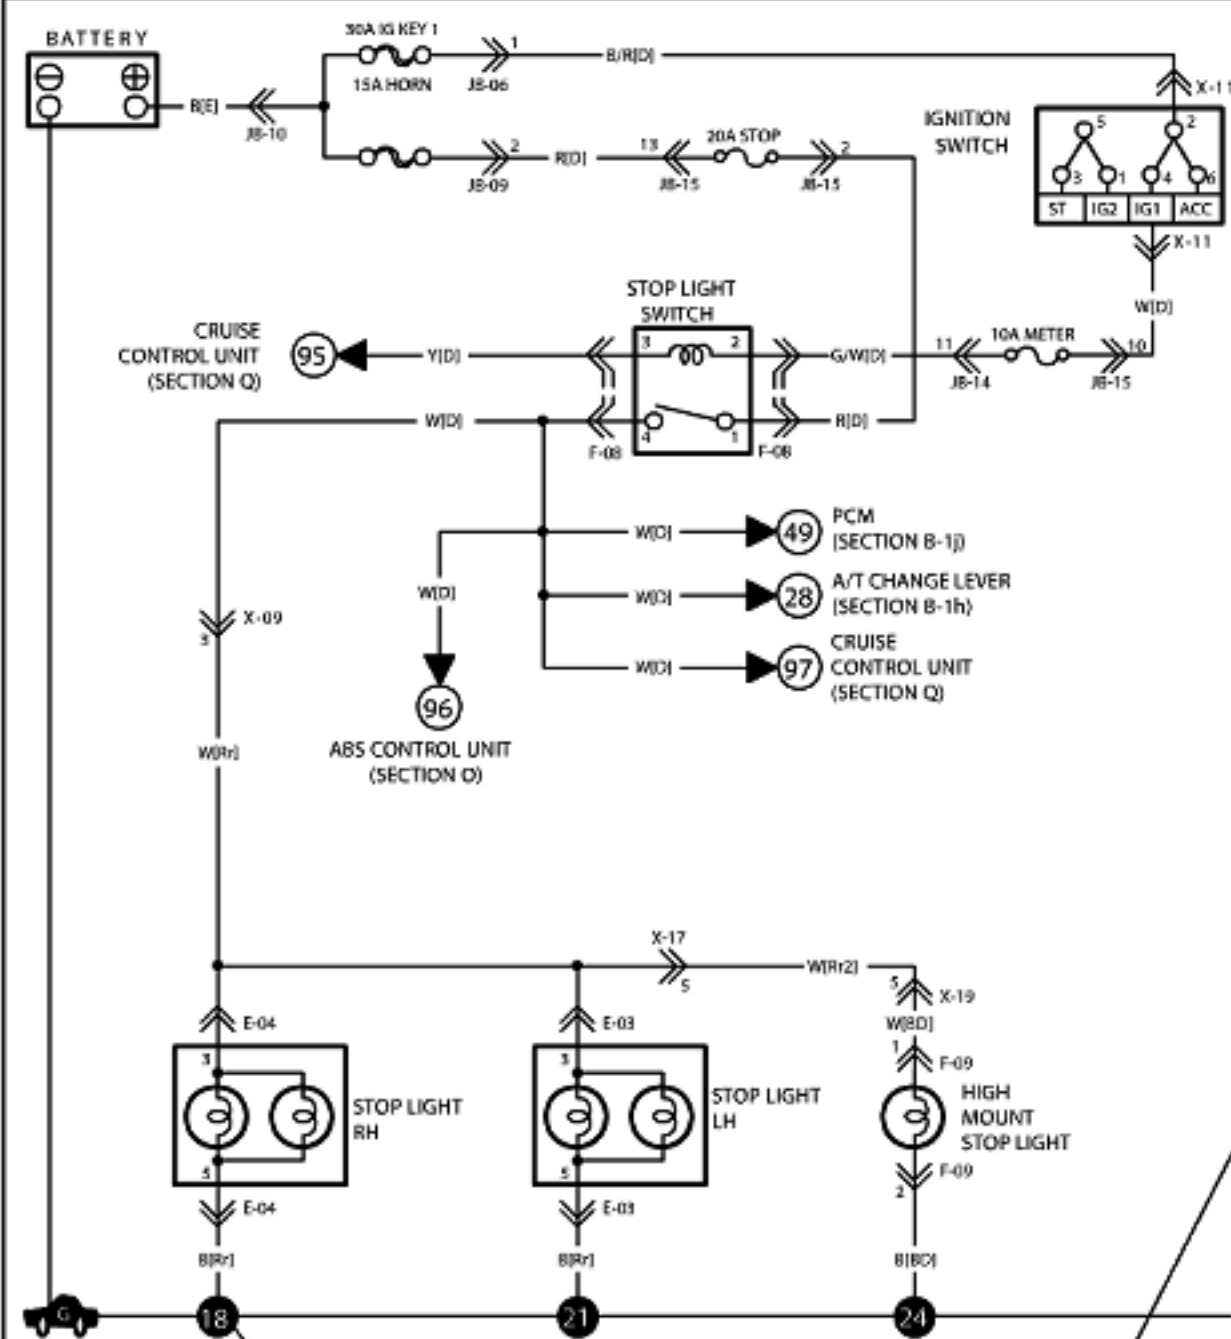

 
F-08 STOP LIGHT SWITCH [D]




F-09 HIGH MOUNT STOP LIGHT [BD] B



E-03 REAR COMBINATION LAMP LH [Rr]




E-04 REAR COMBINATION LAMP RH [Rr]

 


Y

GROUND POINT

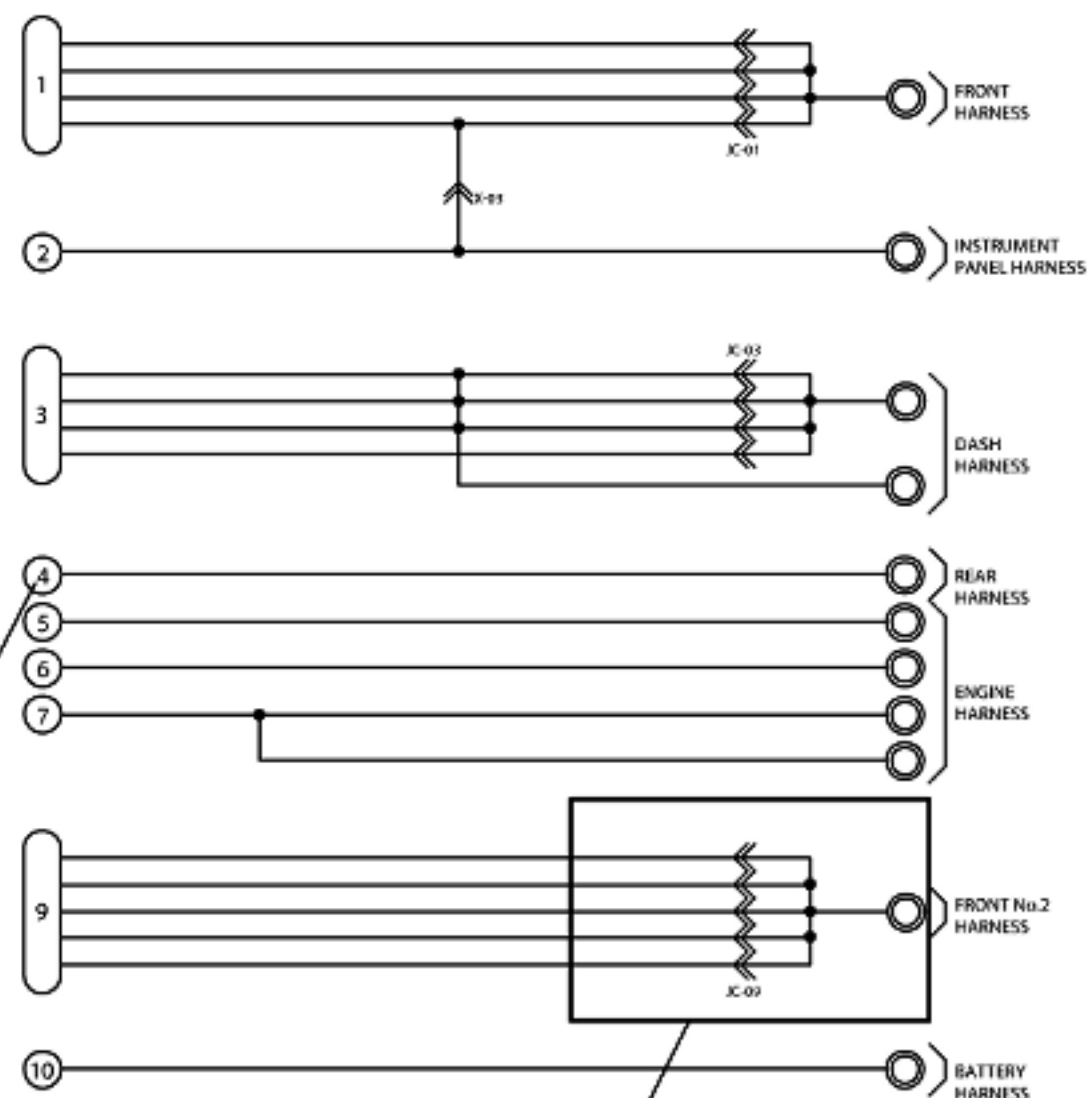


JC-01 JOINT CONNECTOR [F]

 

JC-03 JOINT CONNECTOR [D]



 
JC-09 JOINT CONNECTOR [F2]







On circuit diagrams and ground points

This ground connection numbers in system circuit diagrams correspond to those in the ground point diagram.

Ground indication

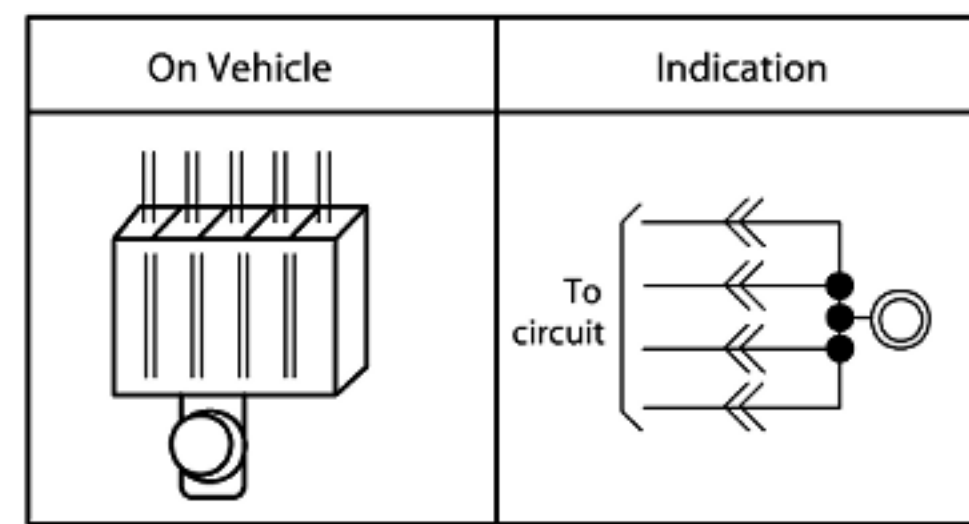

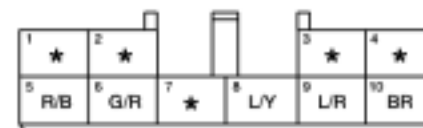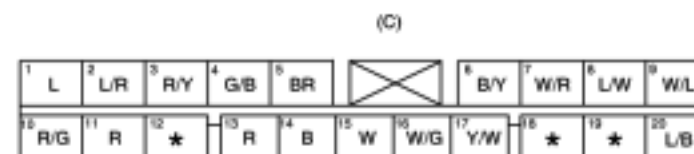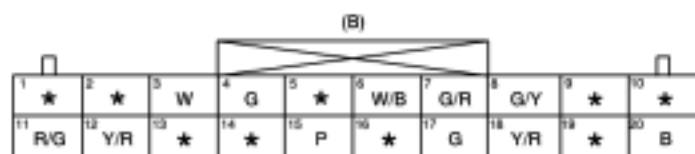


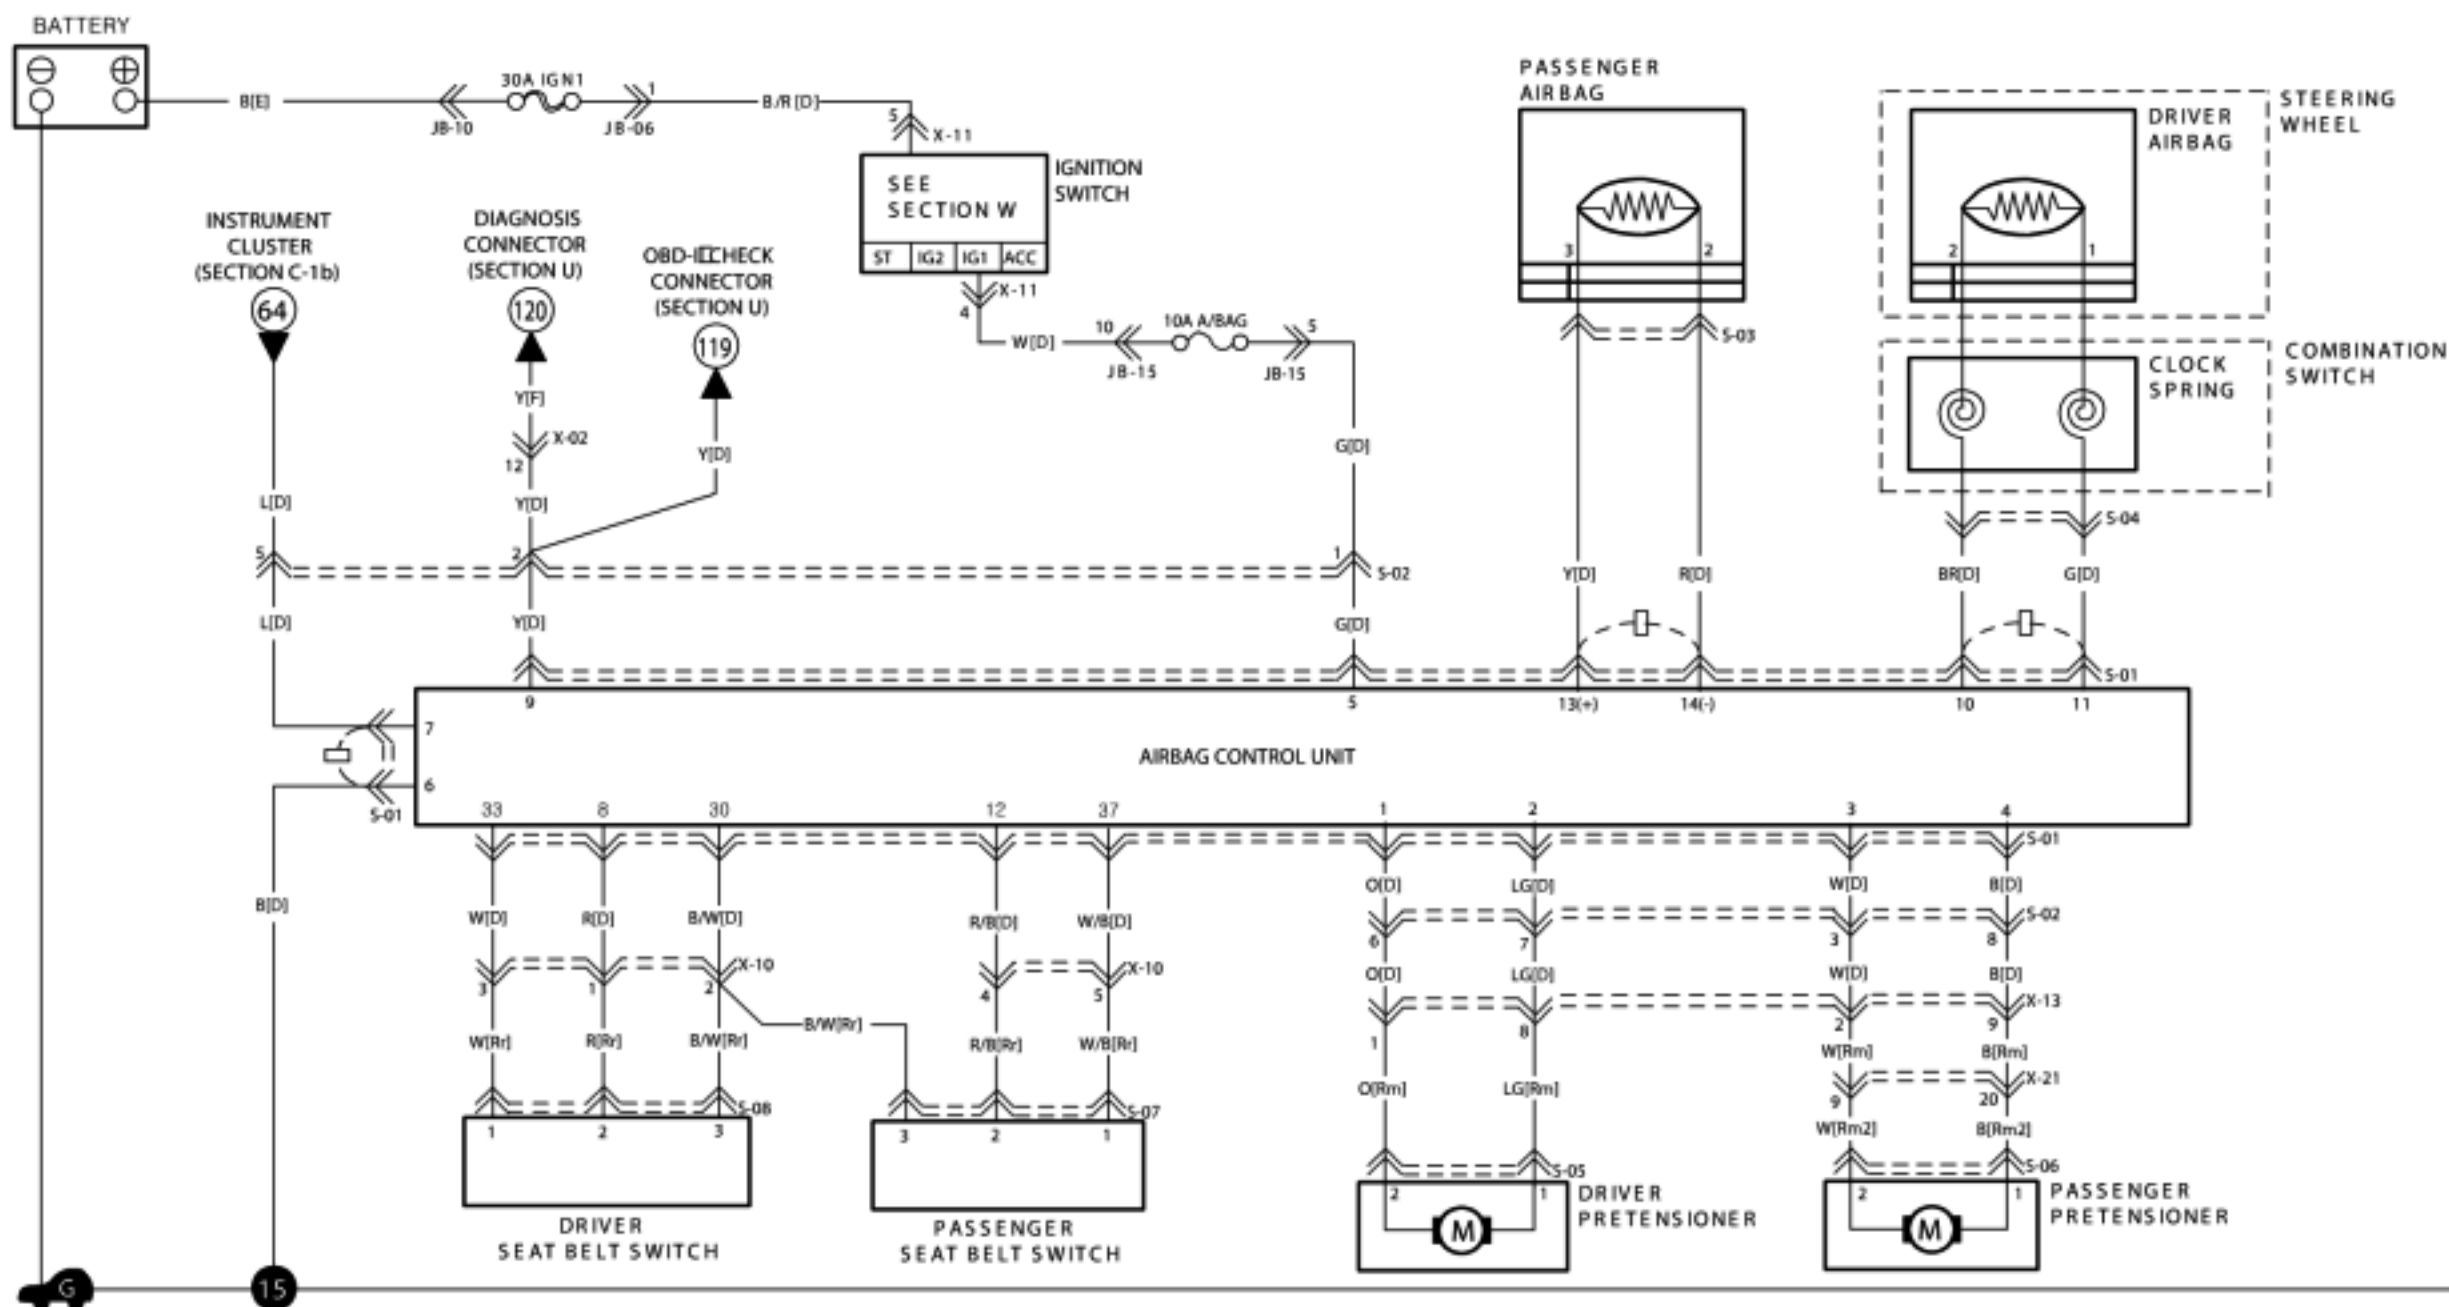


S-01 AIRBAG CONTROL UNIT [D]

1 LG	2 O	3 W	4 B	5 G	6 B	7 L	8 R	9 Y	10 BR	11 G	12 R/B	13 Y	14 R	15 *	16 *	17 *	18 *	19 *	20 *	21 *	22 *	23 *	24 *	25 *


S-02 SHORT CONNECTOR [D]

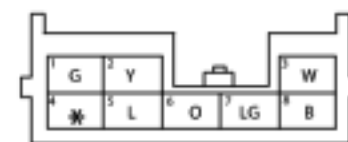


S-03 PASSENGER AIRBAG [D] L

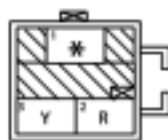


S-04 DRIVER AIRBAG [D] L

 


S-05 DRIVER PRETENSIONER [Rm]

 


S-06 PASSENGER PRETENSIONER [Rm2]

 



S-07 PASSENGER SEAT BELT SWITCH [Rr]

 


S-08 DRIVER SEAT BELT SWITCH [Rr]

 


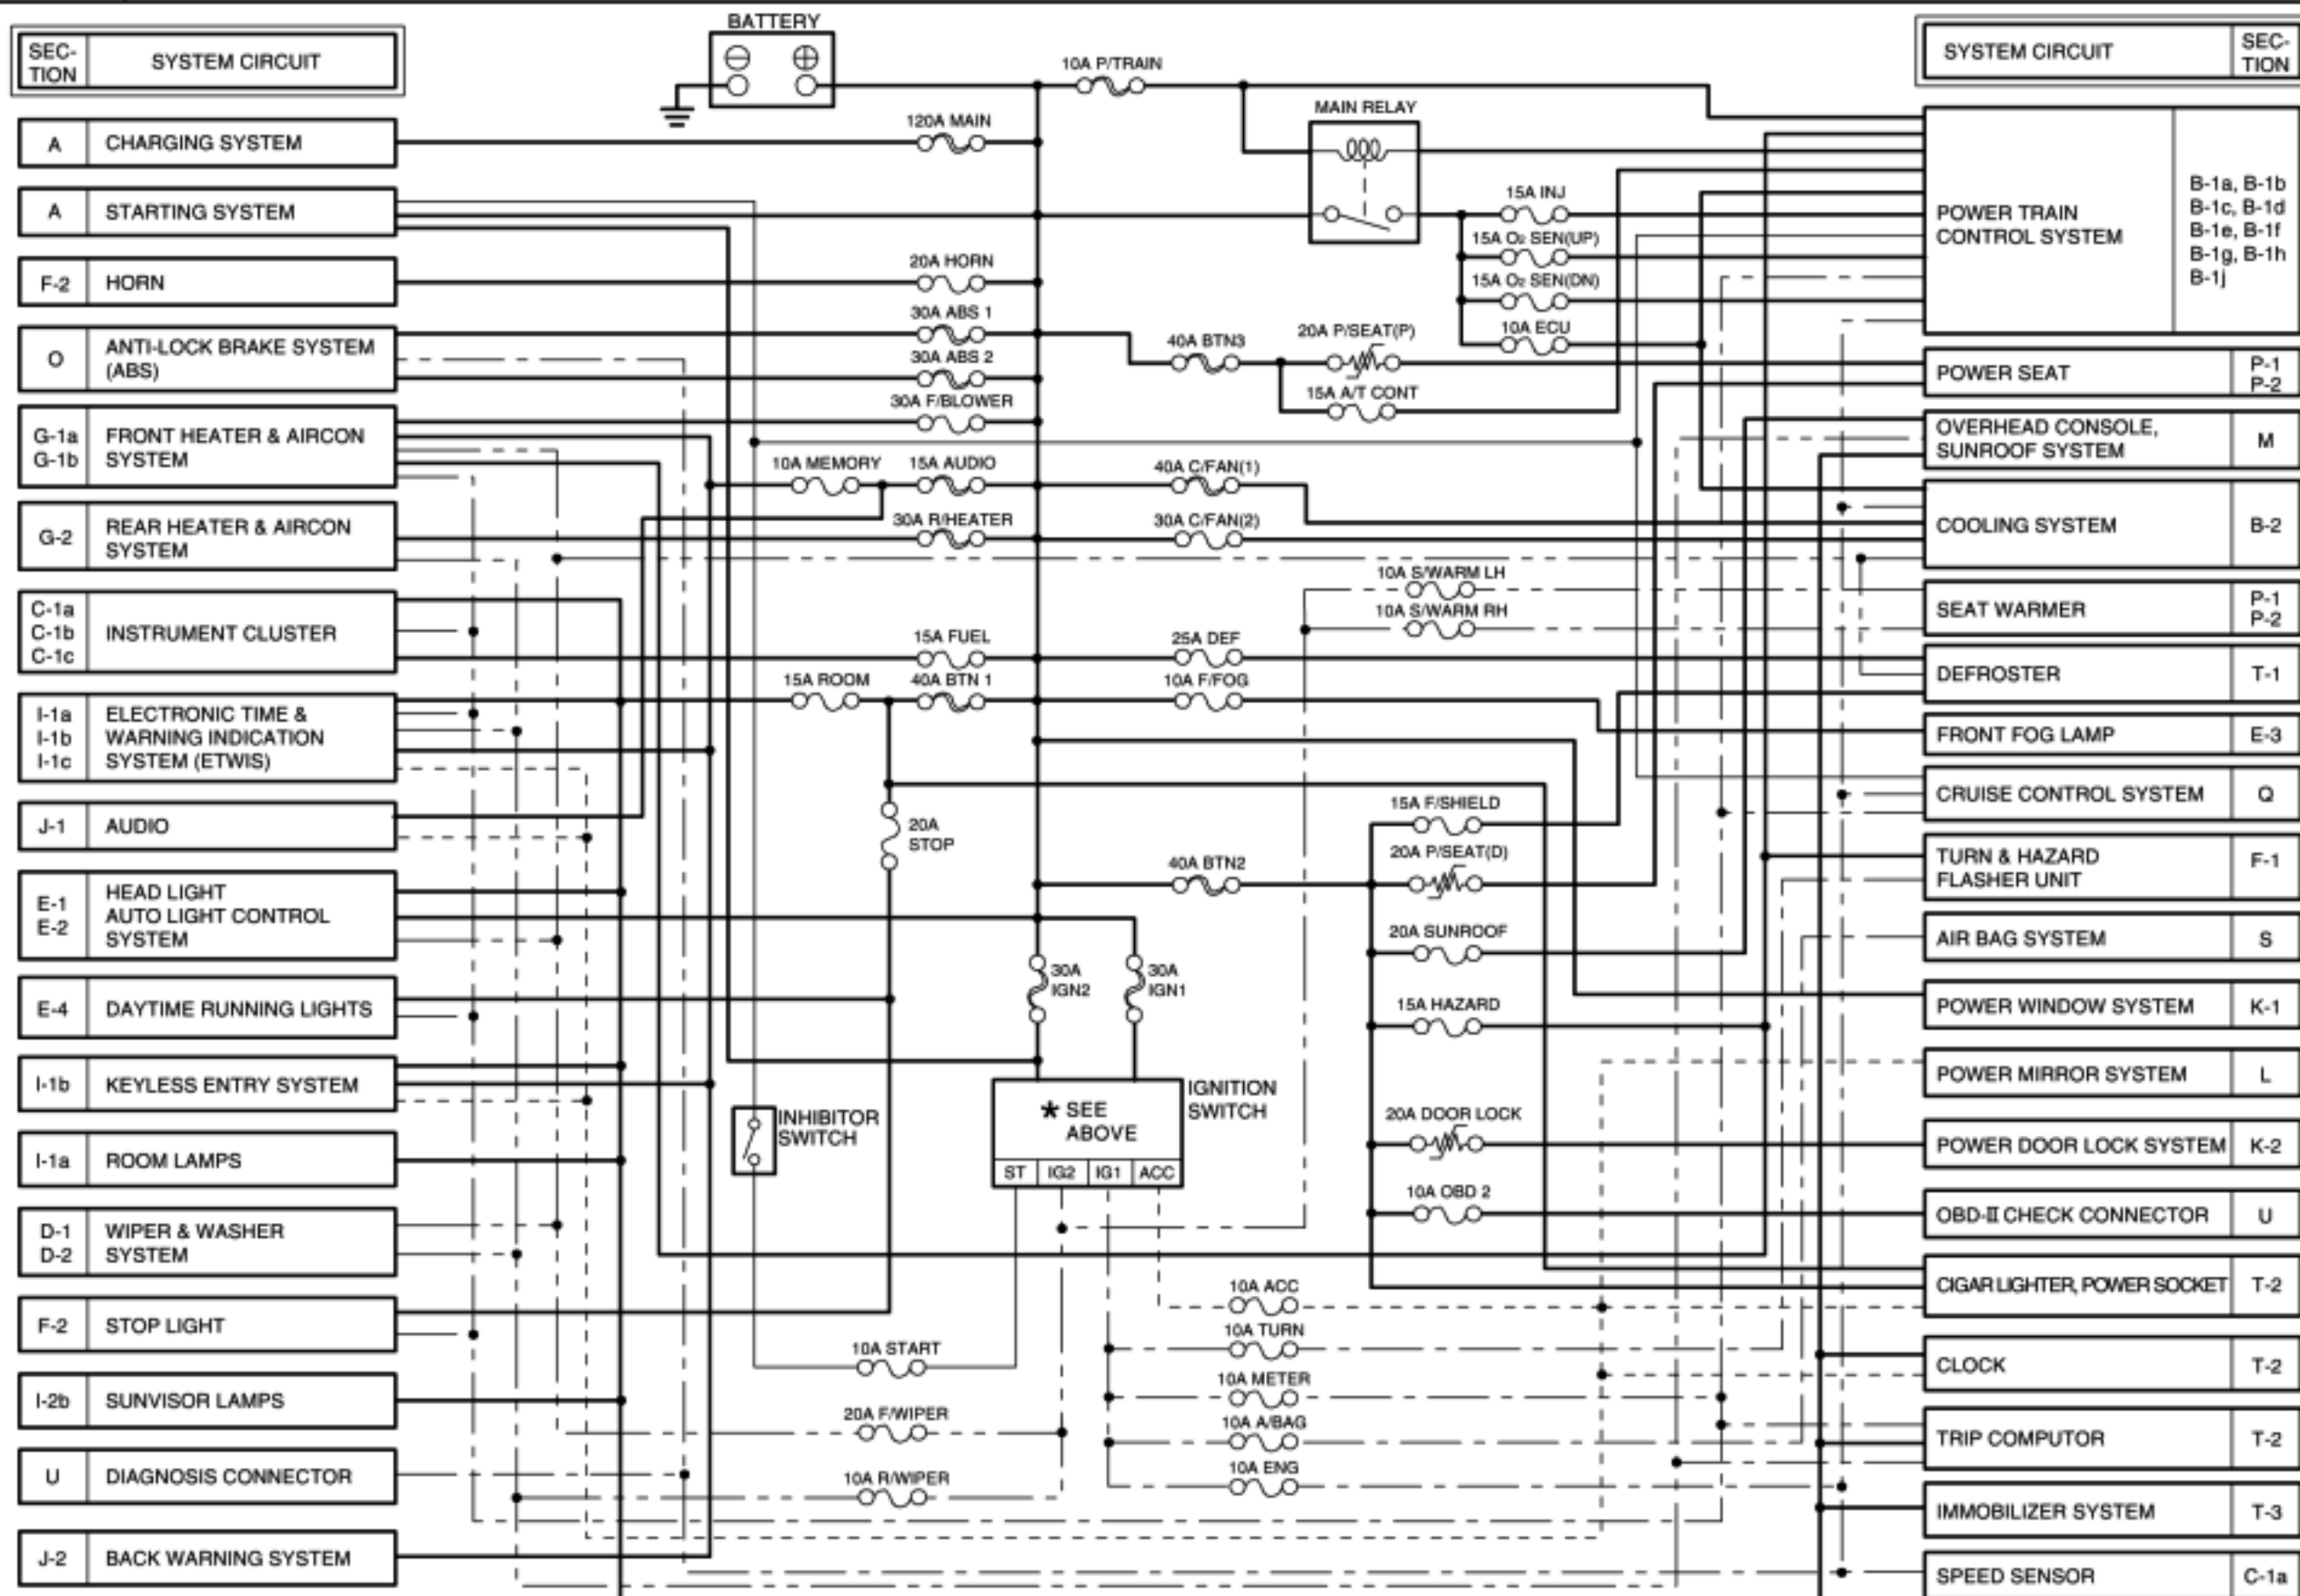

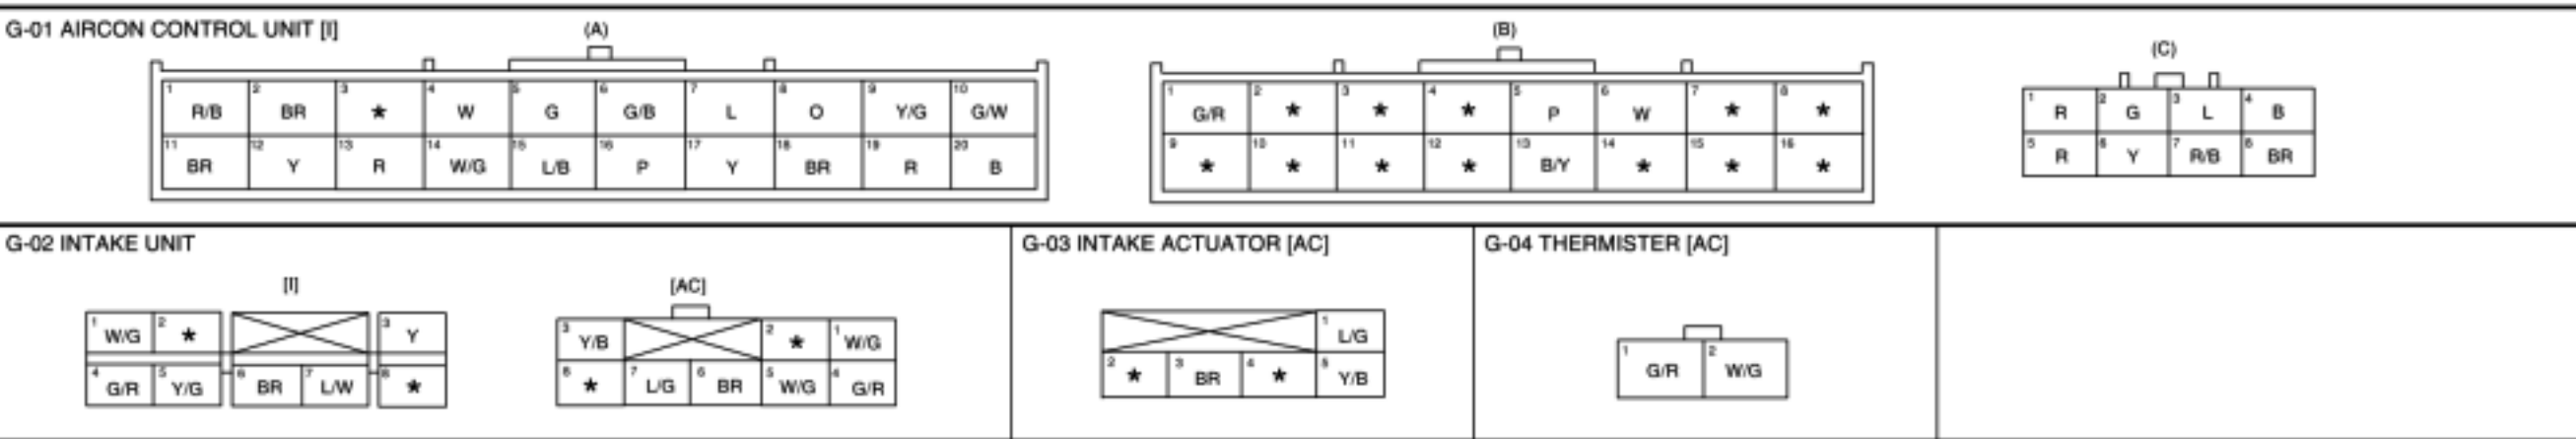


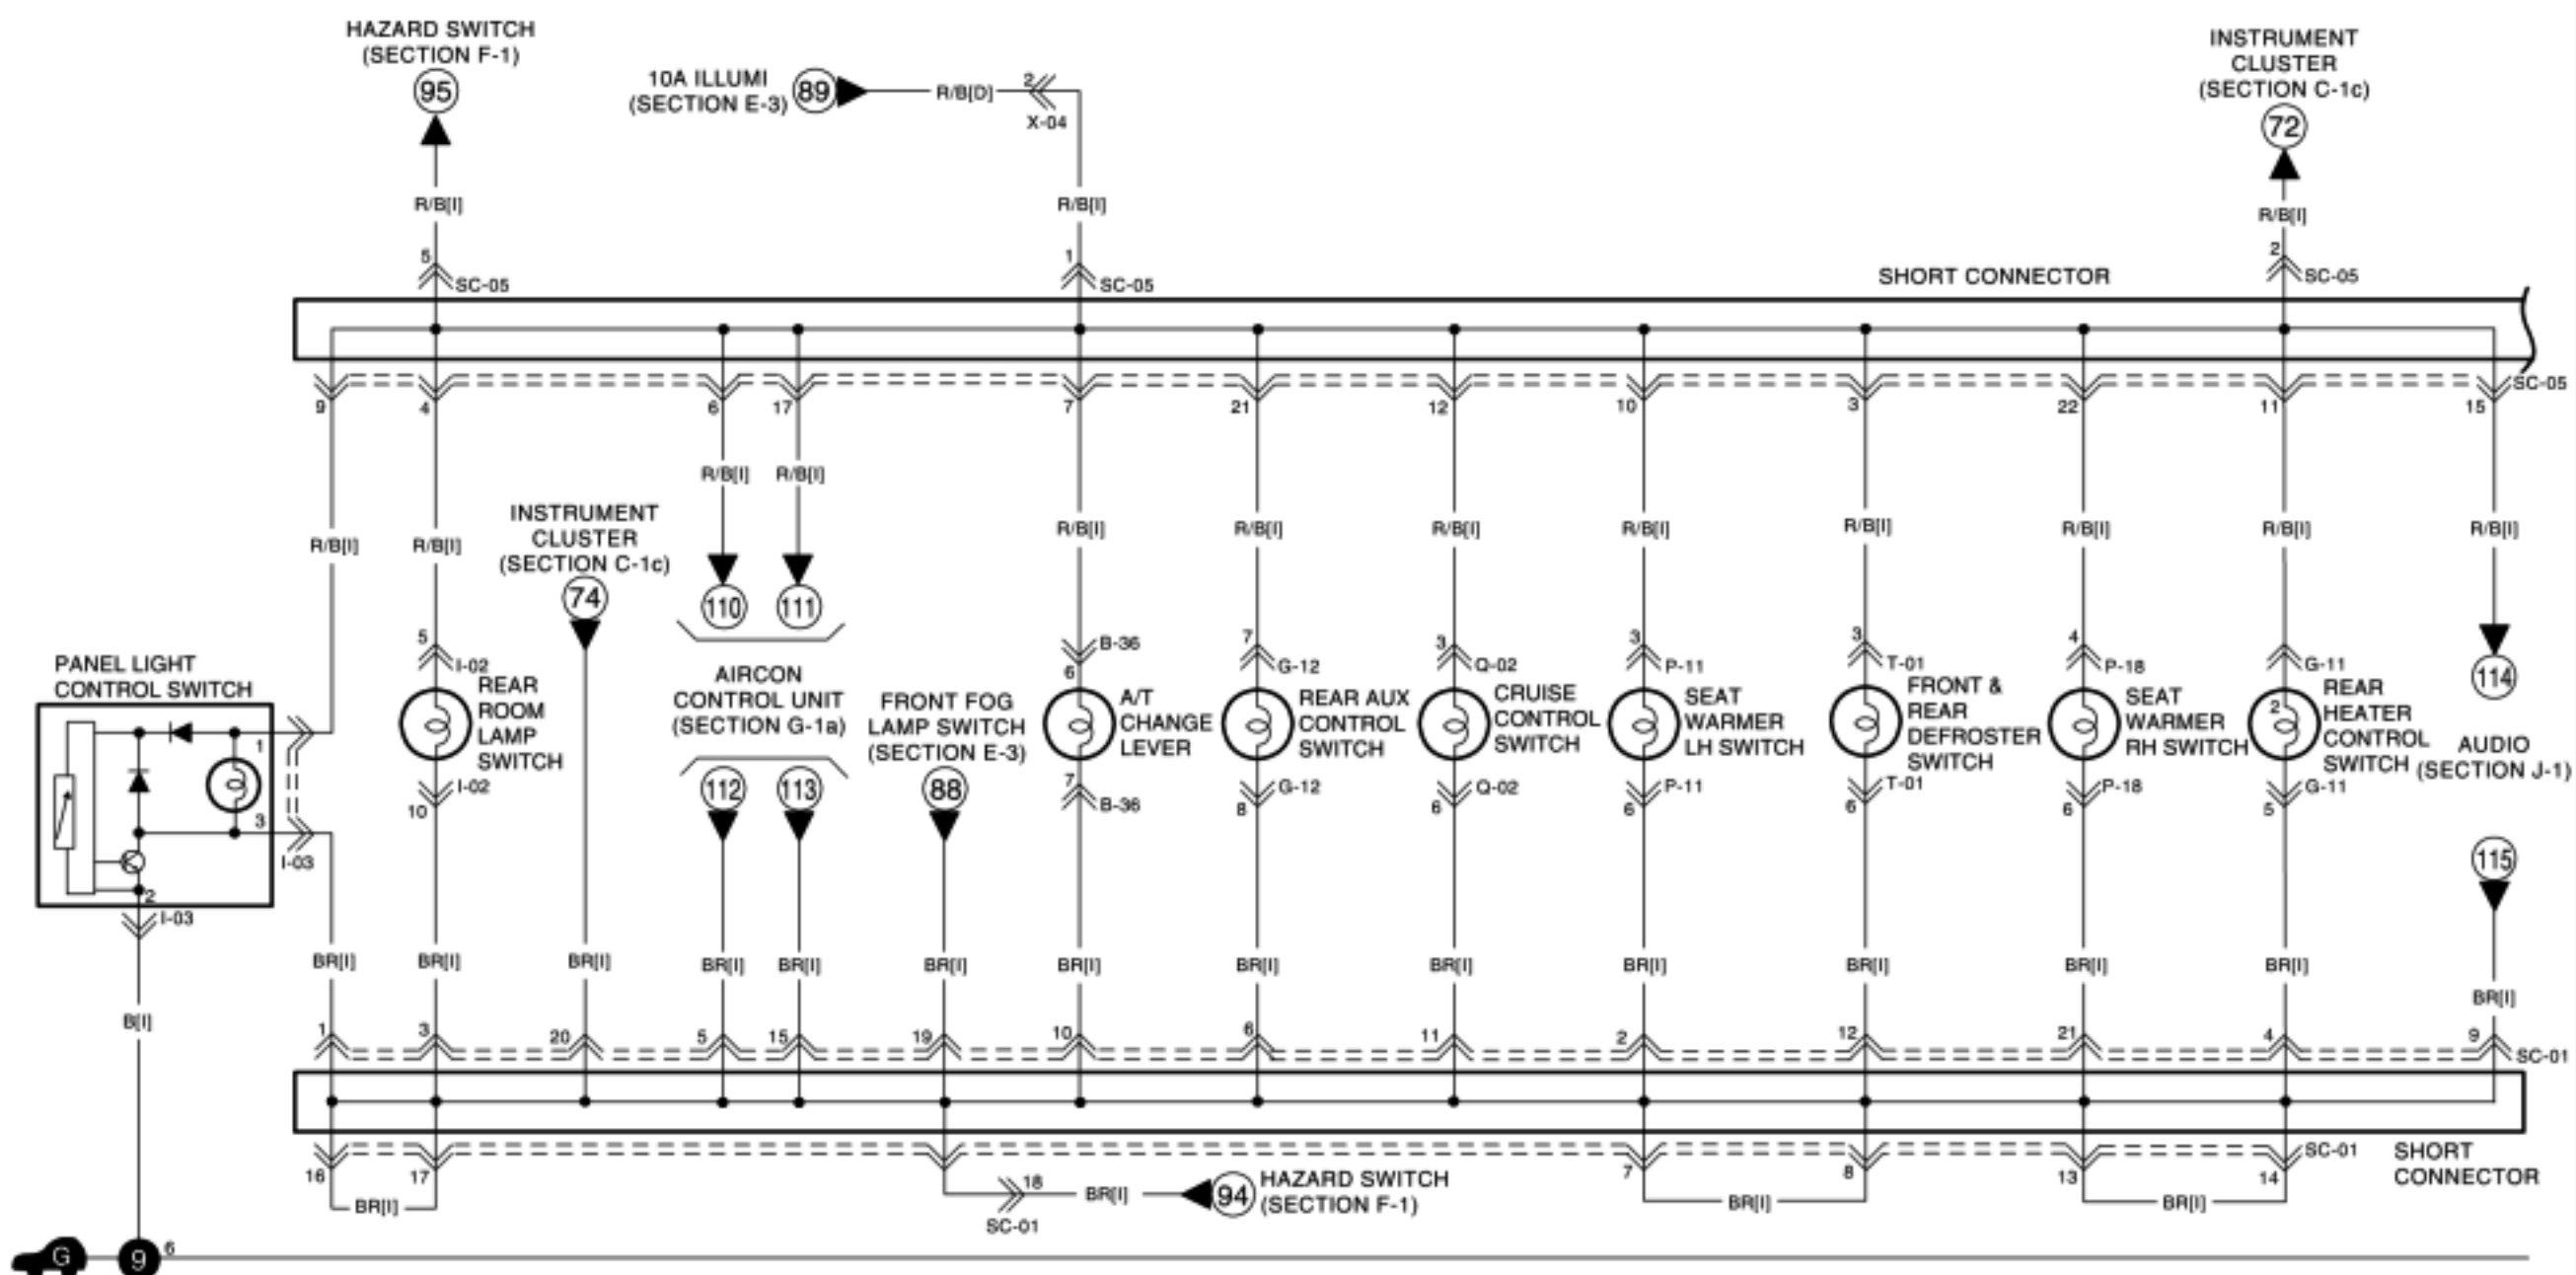


I-02 REAR ROOM LAMP SWITCH [I] G

 


I-03 PANEL LIGHT CONTROL SWITCH [I]

 


B-36 A/T CHANGE LEVER [I]

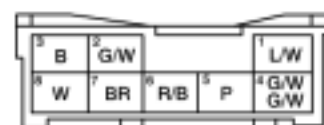


P-11 SEAT WARMER LH SWITCH [I] W

 


P-18 SEAT WARMER RH SWITCH [I] B

 


Q-02 CRUISE CONTROL SWITCH [D] G

 

 T-01 FRONT & REAR DEFROSTER SWITCH [I] B



G-11 REAR HEATER CONTROL SWITCH [I] L

 




(B)

1	G/R	2	Y/B	3	G/B	4	G/Y				5	G	6	★	7	O	8	W/B				
9	G	10	★	11	★	12	★	13	★	<O>	14	G/Y	15	★	16	★	17	W	18	G/W	19	R/G


(C)										
1	2							3	4	
BR	R/B							Y/R	G/B	
5	6	7	8	9	10	11				
W/L	L	R	G	G/R	P	Y/W				

 C-03 FUEL TANK [Rr] B




C-05 SPEED SENSOR [E] B




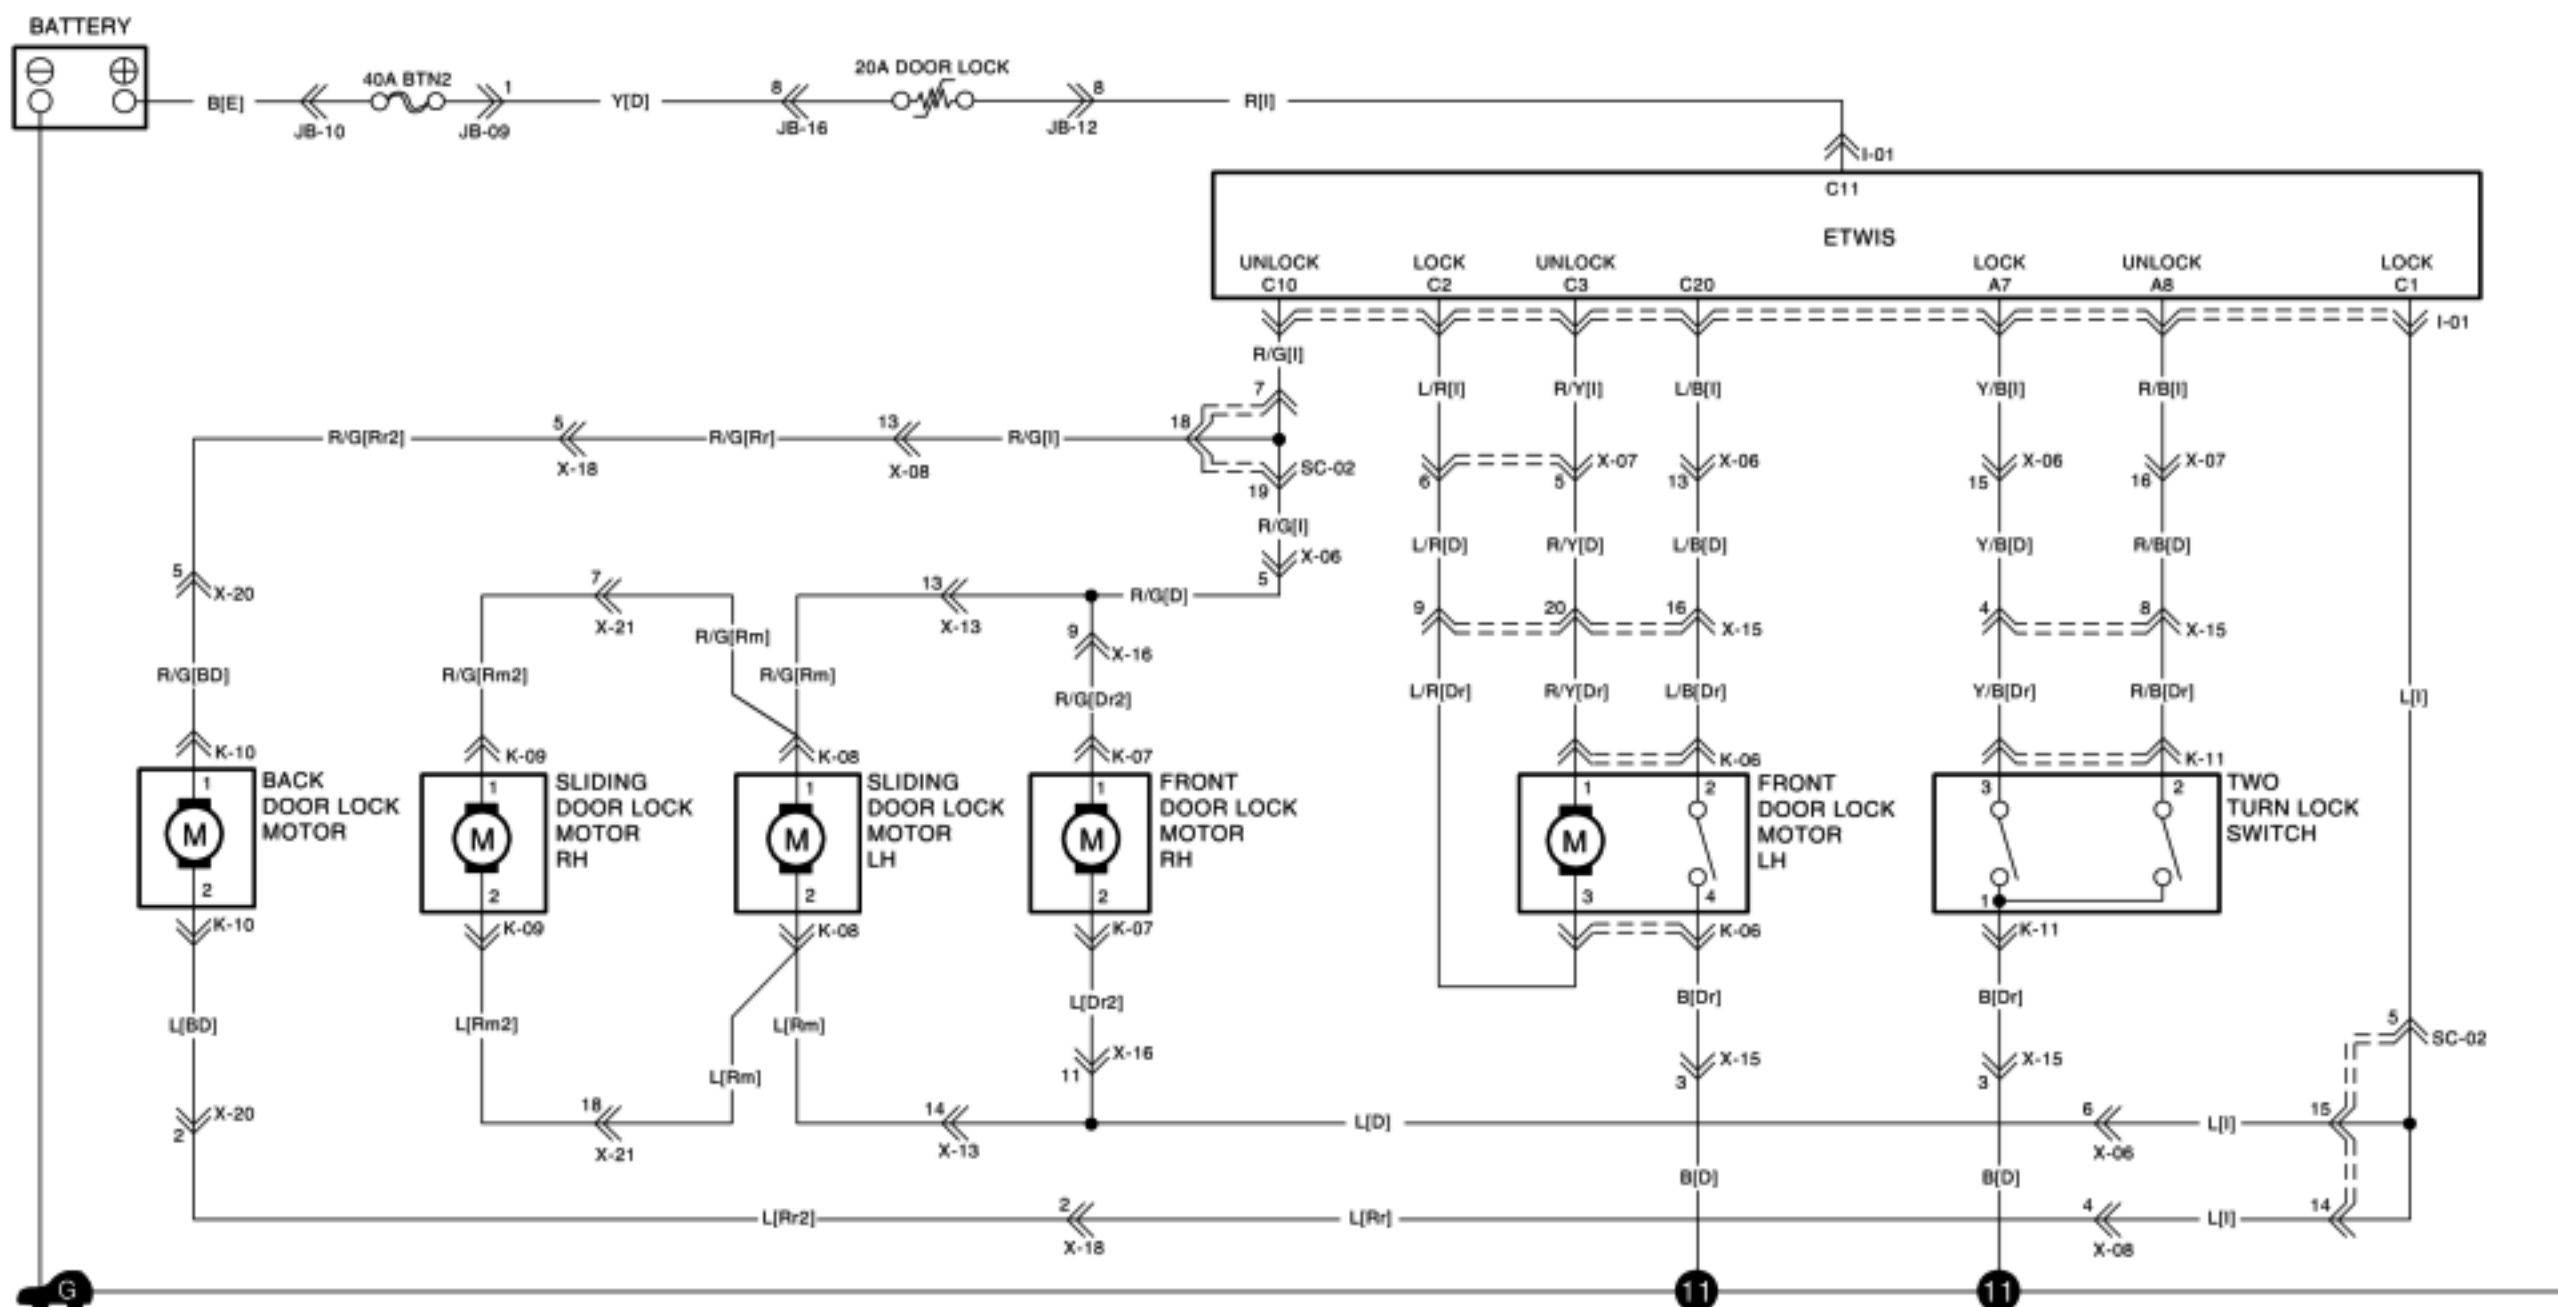

K-06 FRONT DOOR LOCK MOTOR LH [Dr] B

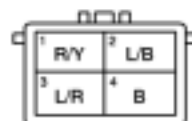


K-07 FRONT DOOR LOCK MOTOR RH [Dr2] B

 


K-08 SLIDING DOOR LOCK MOTOR LH [Rm]



 
K-09 SLIDING DOOR LOCK MOTOR RH [Rm2]





K-10 BACK DOOR LOCK MOTOR RH [BD]

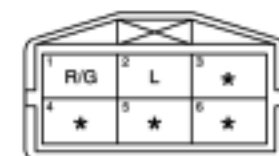


K-11 TWO TURN LOCK SWITCH [Dr]

 


I-01 ETWIS [I]

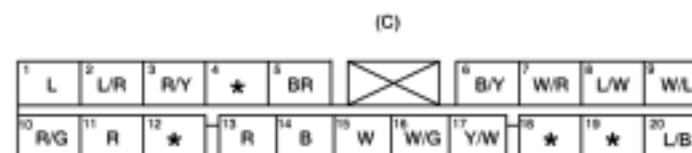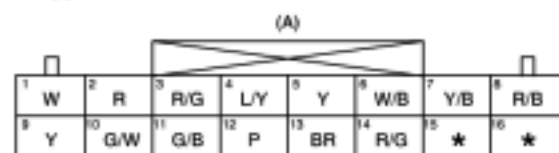


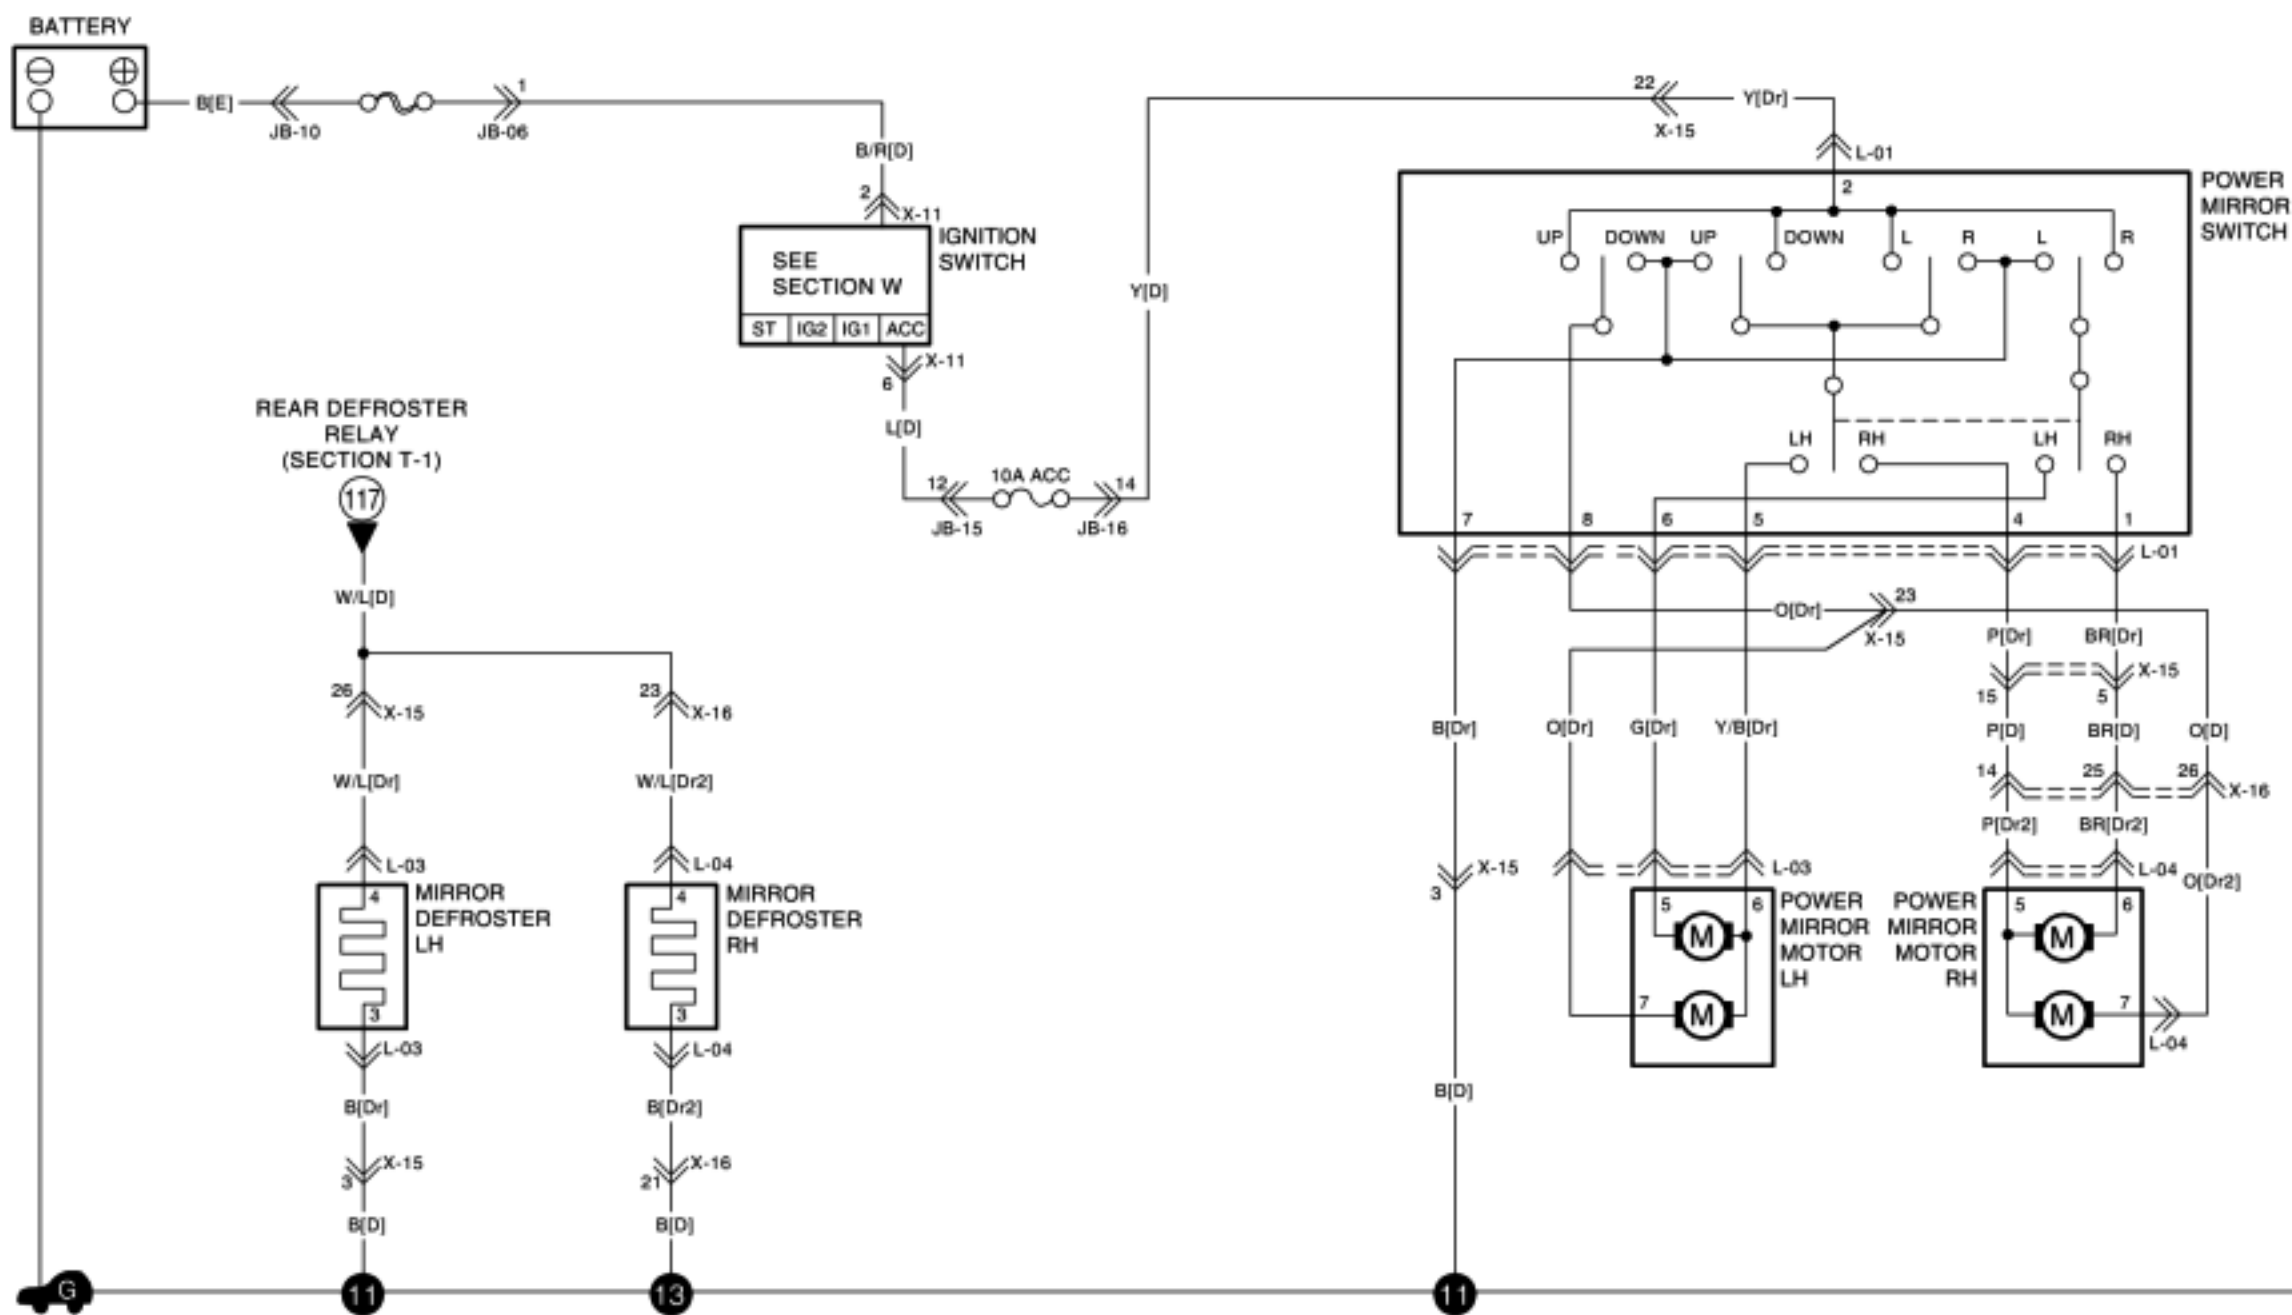


L-01 POWER MIRROR SWITCH [Dr] B

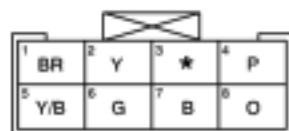


L-03 POWER MIRROR MOTOR & DEFROSTER LH [Dr]

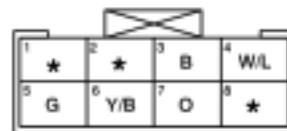


L-04 POWER MIRROR MOTOR & DEFROSTER RH [Dr2]

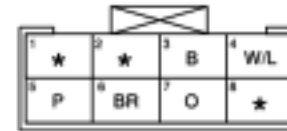


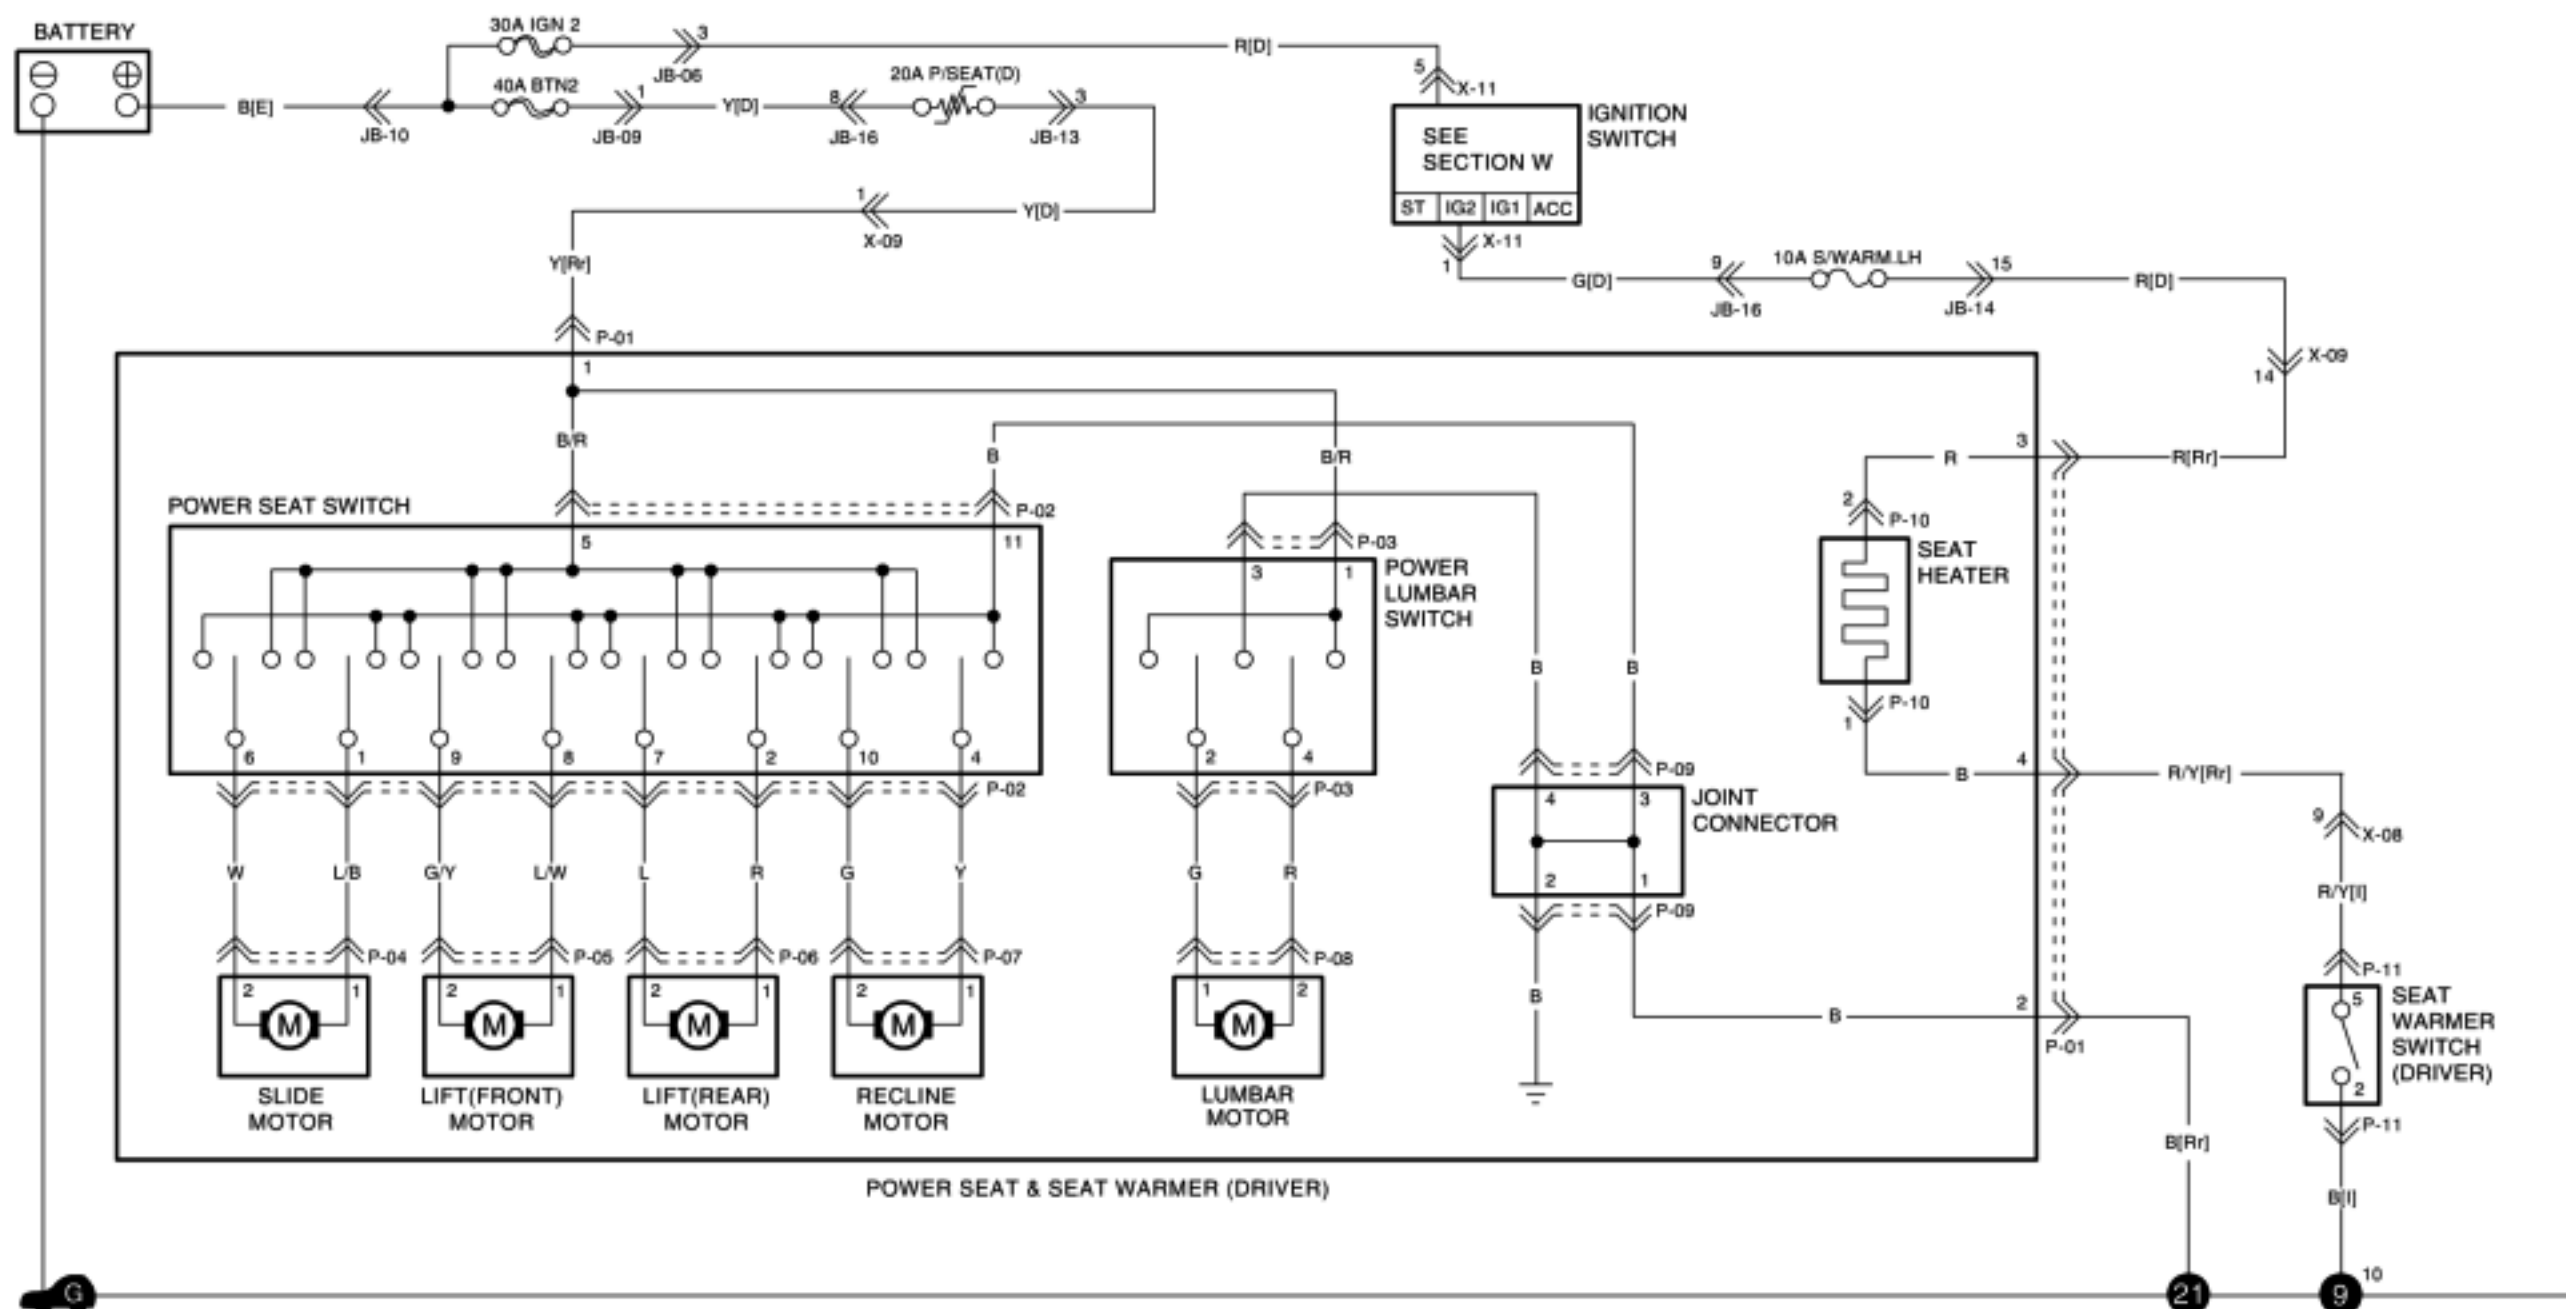

P-01 POWER SEAT& SEAT WARMER (DRIVER)

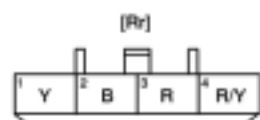

P-02 POWER SEAT SWITCH

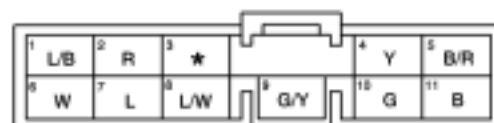

P-03 POWER LUMBAR SWITCH



P-04 SLIDE MOTOR



P-05 LIFT MOTOR(FRONT)



P-06 LIFT MOTOR(REAR)



 
P-07 RECLINE MOTOR



P-08 LUMBAR MOTOR




P-09 JOINT CONNECTOR



P-10 SEAT HEATER



 P-11 SEAT WARMER SWITCH (DRIVER) [I] W








(A)


25	P	7	★	8	★	9	★					4	3	G/W	2	W	1	R										
23	O	G/R	21	[G/B] <G>	20	(G) <G>	19	W	18	Y	17	Y/W	16	★	15	B/W	14	L/R	13	W	12	G	11	Y	10	Y	9	G
25	W	G/R	24		23	G	22	R	21	★	20	★	19		18	G	17	W/R	16	W	15	G/Y	14		13	O	12	L

[illegible][illegible]


() : WITHOUT DRILL
 < > : WITH DRILL

   B-07 INJECTOR #6 [E]




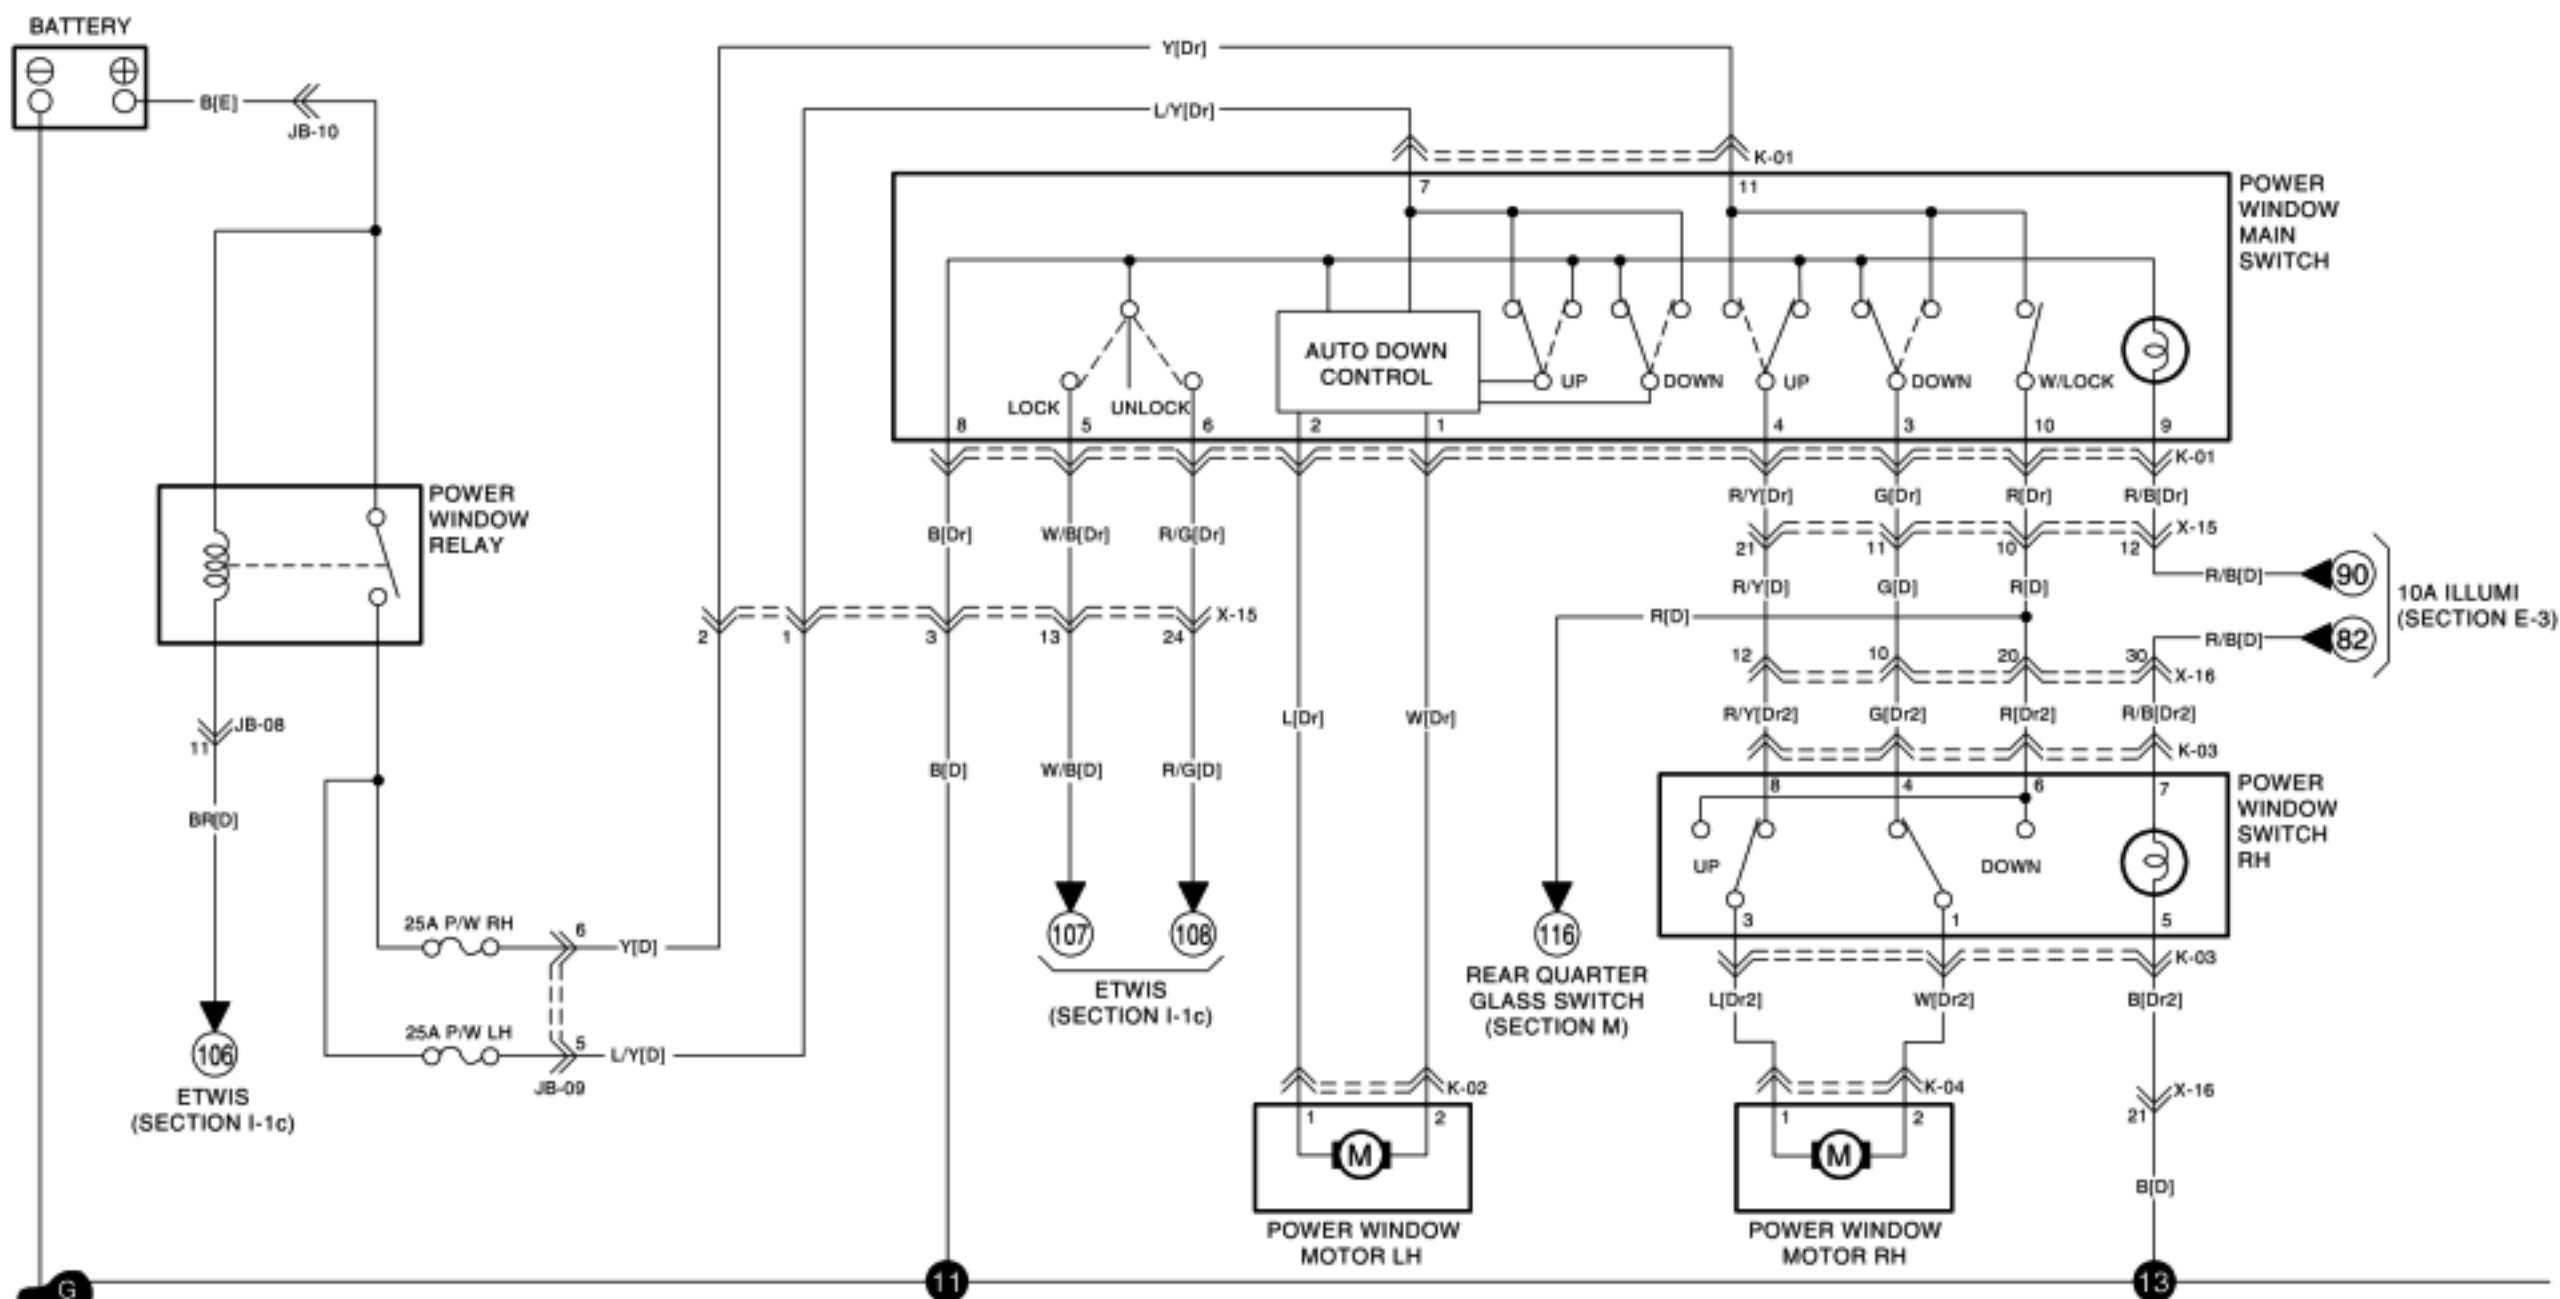


K-01 POWER WINDOW MAIN SWITCH [Dr]

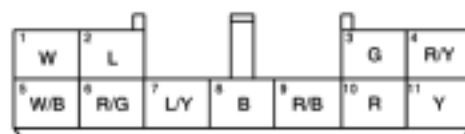


K-02 POWER WINDOW MOTOR LH [Dr] B

 

K-03 POWER WINDOW SWITCH RH [Dr2]

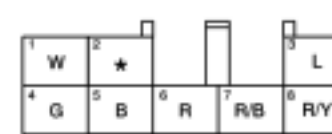


K-04 POWER WINDOW MOTOR RH [Dr2] B

 


SC

SHORT CONNECTOR

SC-01 SHORT CONNECTOR [I] L

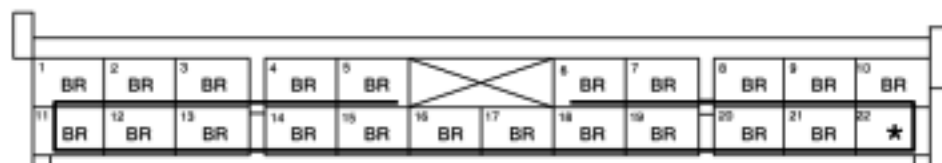


SC-02 SHORT CONNECTOR [I] O

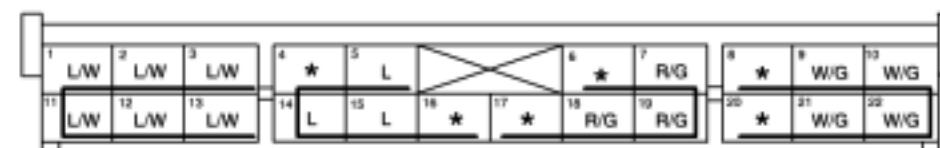


SC-03 SHORT CONNECTOR [I] GY


[] : DRL

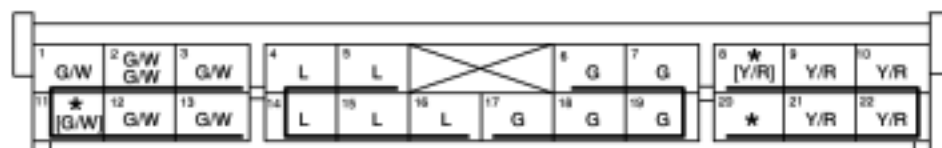


SC-04 SHORT CONNECTOR [I] BR

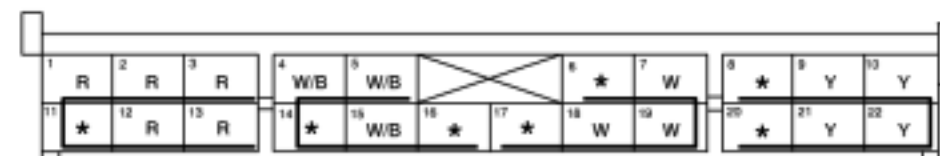

SC-05 SHORT CONNECTOR [I] W

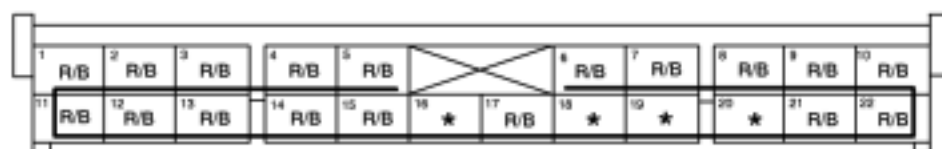

SC-06 SHORT CONNECTOR [D]

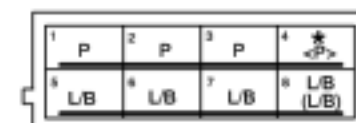() : RAIN SENSOR
< > : DRL

SC-07 SHORT CONNECTOR [D]

< > : DRL

