

1 Fitting locations: rear part of vehicle

- ◆ ⇒ ["1.1 Rear lid", page 3](#)
- ◆ ⇒ ["1.2 Rear bumper", page 5](#)
- ◆ ⇒ ["1.3 Rear side, view from left", page 6](#)
- ◆ ⇒ ["1.4 Rear side, view from right", page 8](#)
- ◆ ⇒ ["1.5 Rear side, view of centre", page 10](#)

Component	Chapter	Comment
Battery -A-	⇒ "1.5.1 Rear side, view of centre, models with 2.5l petrol engine", page 11	For models with 2.5l petrol engine
	⇒ - Fitting locations: front part of vehicle	For models with battery in engine compartment
Battery 48 V -A6-	⇒ "1.5.2 Rear side, view of centre, models with 48-volt hybrid system, 0K4", page 12	for vehicles with 48 volt hybrid system
Voltage converter, 48 V/12 V -A7-	⇒ "1.5.2 Rear side, view of centre, models with 48-volt hybrid system, 0K4", page 12	for vehicles with 48 volt hybrid system
Rear lid handle release button -E234-	⇒ "1.1 Rear lid", page 3	
Electric hinged tow coupling attachment button -E474-	⇒ "1.4 Rear side, view from right", page 8	
Operating unit for rear lid control -EX58-	⇒ "1.1 Rear lid", page 3	
Rear left parking aid sender -G203-	⇒ "1.2 Rear bumper", page 5	
Rear centre left parking aid sender -G204-	⇒ "1.2 Rear bumper", page 5	
Rear centre right parking aid sender -G205-	⇒ "1.2 Rear bumper", page 5	
Rear right parking aid sender -G206-	⇒ "1.2 Rear bumper", page 5	
Rear body acceleration sender -G343-	⇒ "1.4 Rear side, view from right", page 8	
Rear left park assist steering sender -G716-	⇒ "1.2 Rear bumper", page 5	
Rear right park assist steering sender -G717-	⇒ "1.2 Rear bumper", page 5	
Rear lid power opening sender -G750-	⇒ "1.2 Rear bumper", page 5	
Rear lid power opening sender 2 -G760-	⇒ "1.2 Rear bumper", page 5	
Rear parking aid warning buzzer -H15-	⇒ "1.4 Rear side, view from right", page 8	
Rear lid warning buzzer -H32-	⇒ "1.3 Rear side, view from left", page 6	
Electronically controlled damping control unit -J250-	⇒ "1.3 Rear side, view from left", page 6	
Trailer detector control unit -J345-	⇒ "1.3 Rear side, view from left", page 6	
Battery monitor control unit -J367-	⇒ "1.5.1 Rear side, view of centre, models with 2.5l petrol engine", page 11	For models with 2.5l petrol engine
	⇒ - Fitting locations: front part of vehicle	For models with battery in engine compartment

Component	Chapter	Comment
Tyre Pressure Monitoring System control unit -J502-	⇒ "1.2 Rear bumper", page 5	According to equipment
Garage door operation control unit -J530-	⇒ "1.2 Rear bumper", page 5	
Rear lid control unit -J605-	⇒ "1.3 Rear side, view from left", page 6	
Lane change assist control unit -J769-	⇒ "1.2 Rear bumper", page 5	
Lane change assist control unit 2 -J770-	⇒ "1.2 Rear bumper", page 5	
Rear lid power opening control unit -J938-	⇒ "1.2 Rear bumper", page 5	
High-level brake light bulb -M25-	⇒ "1.1 Rear lid", page 3	
Left tail light -MX3-	⇒ "1.3 Rear side, view from left", page 6	
Right tail light -MX4-	⇒ "1.3 Rear side, view from left", page 6	
Left tail light 2 -MX5-	⇒ "1.1 Rear lid", page 3	
Right tail light 2 -MX6-	⇒ "1.1 Rear lid", page 3	
Aerial amplifier -R24-	⇒ "1.1 Rear lid", page 3	
Remote control receiver for auxiliary heater -R64-	⇒ "1.4 Rear side, view from right", page 8	
Aerial amplifier 2 for TV -R83-	⇒ "1.1 Rear lid", page 3	
Aerial amplifier for mobile telephone -R86-	⇒ "1.4 Rear side, view from right", page 8	
Aerial amplifier 2 -R111-	⇒ "1.1 Rear lid", page 3	
Rear bumper aerial for entry and start system -R136-	⇒ "1.2 Rear bumper", page 5	
Luggage compartment aerial for entry and start system -R137-	⇒ "1.3 Rear side, view from left", page 6	
Left effect loudspeaker -R209-	⇒ "1.3 Rear side, view from left", page 6	
Right effect loudspeaker -R210-	⇒ "1.4 Rear side, view from right", page 8	
Subwoofer -R211-	⇒ "1.3 Rear side, view from left", page 6	For models without 2.5l petrol engine and without 48-volt hybrid system
	⇒ "1.5.1 Rear side, view of centre, models with 2.5l petrol engine", page 11	For models with 2.5l petrol engine
	⇒ "1.5.2 Rear side, view of centre, models with 48-volt hybrid system, 0K4", page 12	for vehicles with 48 volt hybrid system
Rear overhead view camera -R246-	⇒ "1.1 Rear lid", page 3	
Programming aerial for garage door opener -R278-	⇒ "1.2 Rear bumper", page 5	
LTE aerial 1 -R297-	⇒ "1.2 Rear bumper", page 5	
	⇒ "1.1 Rear lid", page 3	
LTE aerial 2 -R306-	⇒ "1.2 Rear bumper", page 5	
Emergency call module aerial 2 -R322-	⇒ "1.2 Rear bumper", page 5	
LTE aerial 3 -R330-	⇒ "1.1 Rear lid", page 3	

Component	Chapter	Comment
12 V socket 2 -U18-	⇒ "1.3 Rear side, view from left", page 6	
Rear window wiper motor -V12-	⇒ "1.1 Rear lid", page 3	
Tank filler flap locking motor -V155-	⇒ "1.3 Rear side, view from left", page 6	
Battery fan 1 -V457-	⇒ "1.5.2 Rear side, view of centre, models with 48-volt hybrid system, 0K4", page 12	for vehicles with 48 volt hybrid system
Trailer towing coupling -VX15-	⇒ "1.2 Rear bumper", page 5	
Power latching for rear lid -VX16-	⇒ "1.1 Rear lid", page 3	
Rear lid lock unit -VX25-	⇒ "1.1 Rear lid", page 3	
Rear lid drive unit -VX69-	⇒ "1.1 Rear lid", page 3	
Rear lid drive unit 2 -VX77-	⇒ "1.1 Rear lid", page 3	
Luggage compartment light -W3-	⇒ "1.4 Rear side, view from right", page 8	
Surround lighting 1 in rear lid -W61-	⇒ "1.1 Rear lid", page 3	
Surround lighting 2 in rear lid -W62-	⇒ "1.1 Rear lid", page 3	
Left number plate light -X4-	⇒ "1.1 Rear lid", page 3	
Right number plate light -X5-	⇒ "1.1 Rear lid", page 3	

1.1 Rear lid




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- 1 - Aerial amplifier -R24-
- 1 - LTE aerial 3 -R330-
 - For models with emergency call module
- 1 - LTE aerial 1 -R297-
 - According to equipment
- 2 - High-level brake light bulb -M25-
- 3 - Aerial amplifier 2 -R111-
- 4 - Right tail light 2 -MX6-
- 5 - Surround lighting 1 in rear lid -W61-
- 6 - Right number plate light -X5-
- 7 - Operating unit for rear lid control -EX58-
- 8 - Rear window wiper motor -V12-
- 9 - Rear overhead view camera -R246-
- 10 - Rear lid lock unit -VX25-
- 11 - Rear lid handle release button -E234-
- 12 - Power latching for rear lid -VX16-
- 13 - Left number plate light -X4-
- 14 - Aerial amplifier 2 for TV -R83-
- 15 - Surround lighting 2 in rear lid -W62-
- 16 - Left tail light 2 -MX5-
- 17 - Rear lid drive unit -VX69-
- 18 - Rear lid drive unit 2 -VX77-



Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. We assume no liability with respect to the correctness of information.

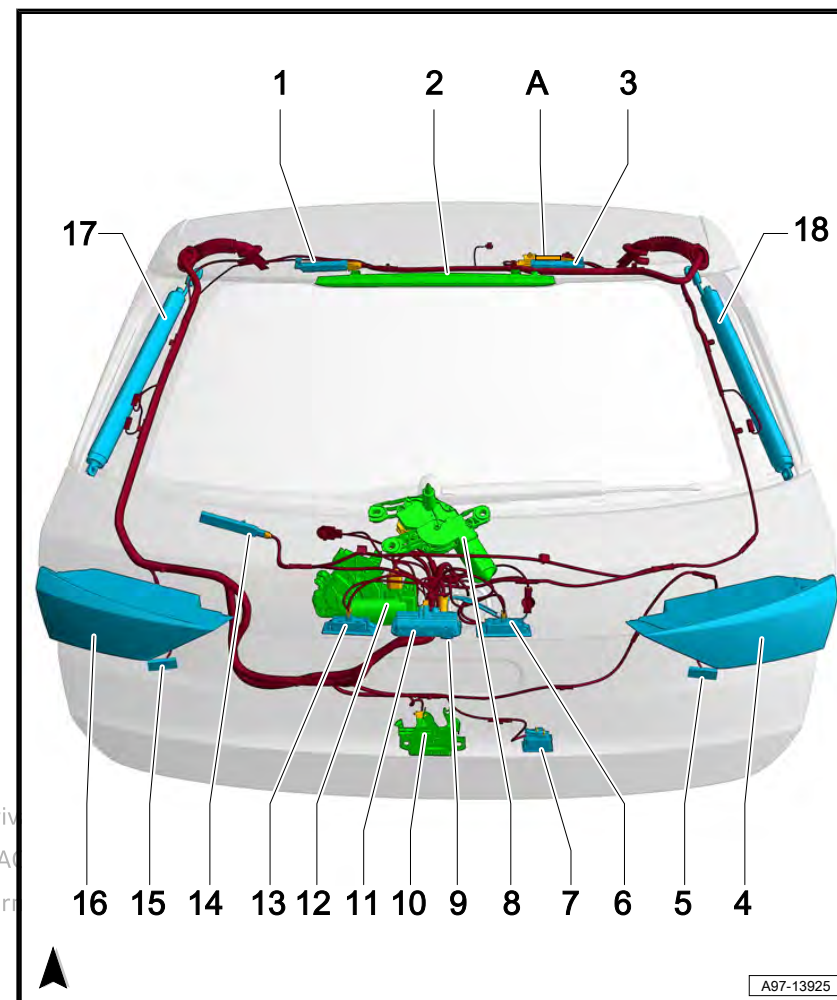

Back to overview ⇒ [page 1](#)

1.2 Rear bumper

A - 10-pin connector -T10f-, brown/
10-pin connector -T10fx-, black

B - 10-pin connector -T10g-, black/
10-pin connector -T10gx-, black

❑ For models with parking aid

1 - Rear left park assist steering sender -G716-

2 - Lane change assist control unit 2 -J770-

3 - Rear left parking aid sender -G203-

4 - LTE aerial 2 -R306-

❑ see also ⇒ Fitting locations: middle part of vehicle

4 - LTE aerial 1 -R297-

❑ from July 2019: for models with emergency call +NZ2/NZ4 and mobile telephone +9ZE

5 - Rear centre left parking aid sender -G204-

6 - Rear bumper aerial for entry and start system -R136-

7 - Rear centre right parking aid sender -G205-

8 - LTE aerial 1 -R297-

8 - Emergency call module aerial 2 -R322-

9 - Rear right parking aid sender -G206-

10 - Lane change assist control unit -J769-

11 - Rear right park assist steering sender -G717-

12 - Garage door operation control unit -J530-

❑ with programming aerial for garage door opener -R278-

13 - Tyre Pressure Monitoring System control unit -J502-


❑ According to equipment

14 - Rear lid power opening sender -G750-

❑ Only models with sensor-controlled rear lid opener

15 - Rear lid power opening sender 2 -G760-

❑ Only models with sensor-controlled rear lid opener

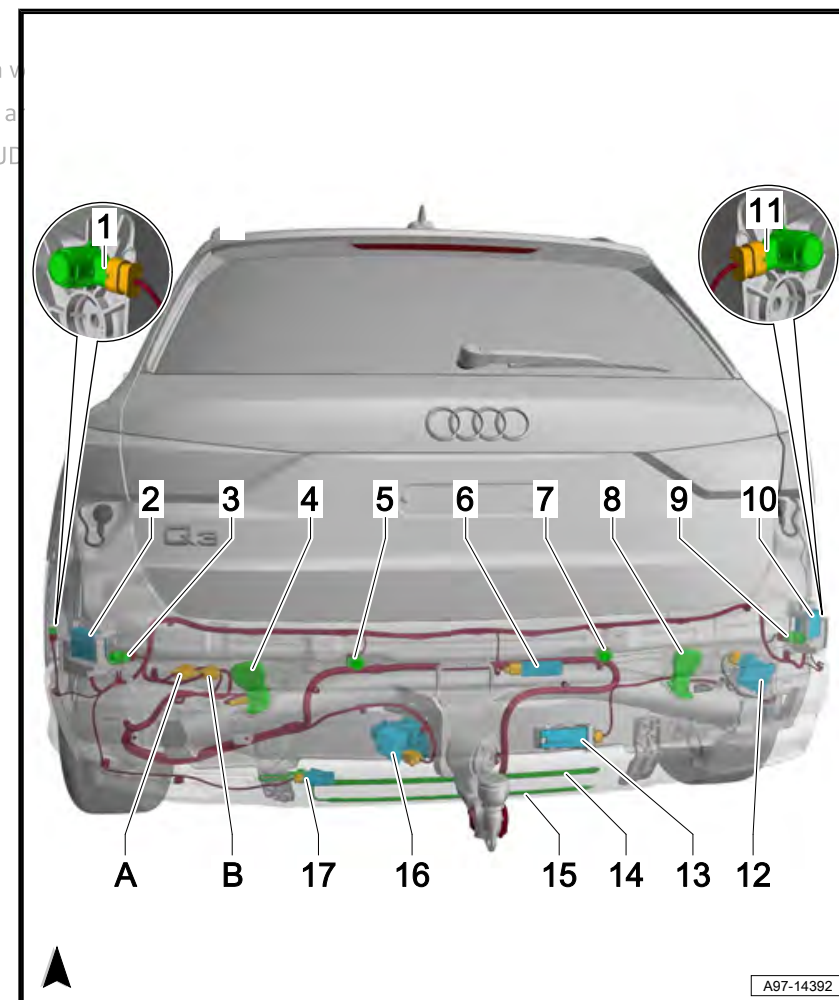

16 - Trailer towing coupling -VX15-

- ☐ Only for vehicles with tow bar

17 - Rear lid power opening control unit -J938-

- ☐ Only models with sensor-controlled rear lid opener

Back to overview ⇒ [page 1](#)

1.3 Rear side, view from left

- ◆ ⇒ [“1.3.1 Rear side, view from left, Q3, K4H”, page 7](#)
- ◆ ⇒ [“1.3.2 Rear side, view from left, Q3 Sportback, K5A”, page 8](#)




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1.3.1 Rear side, view from left, Q3, K4H

- 1 - Tank filler flap locking motor -V155-
- 2 - Right tail light -MX4-
- 3 - Subwoofer -R211-
- 4 - Trailer detector control unit -J345-
- 5 - Left tail light -MX3-
- 6 - Electronically controlled damping control unit -J250-
- 7 - 12 V socket 2 -U18-
- 8 - Rear body acceleration sender -G343-
- 9 - Rear lid control unit -J605-
- 10 - Luggage compartment aerial for entry and start system -R137-
- 11 - Rear lid warning buzzer -H32-
- 12 - Left effect loudspeaker -R209-

Protected by copyright. C
permitted unless authori
with respect to the corre

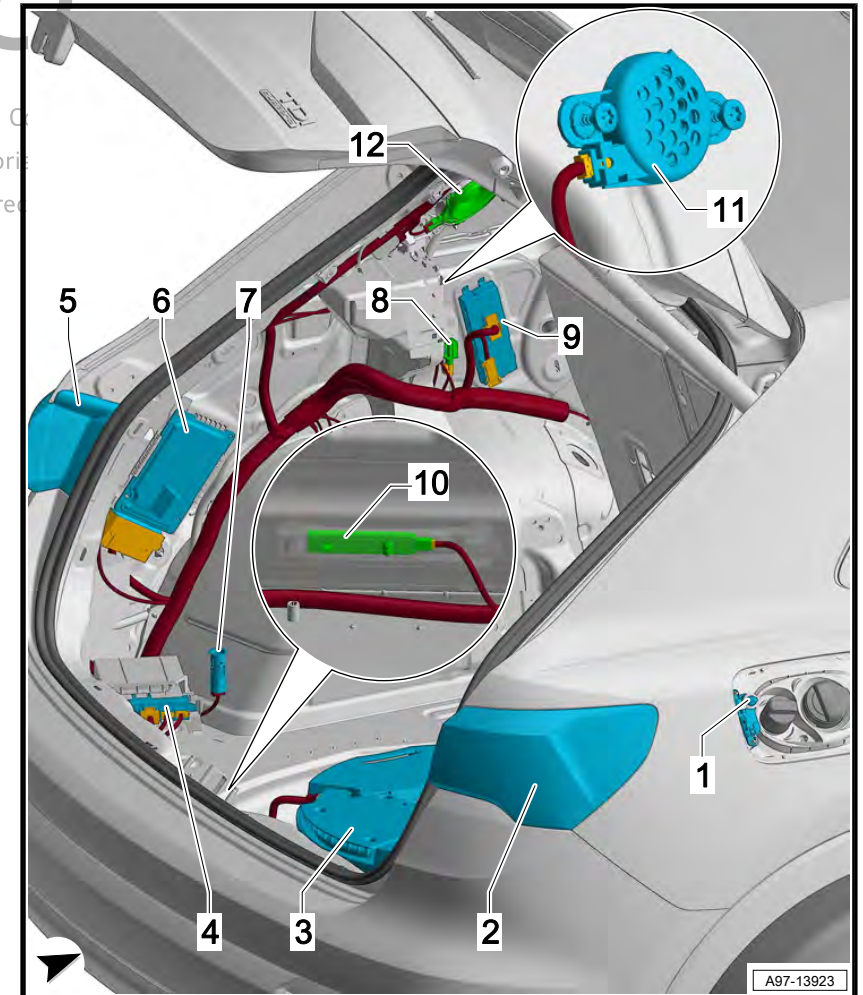

[Back to overview ⇒ page 1](#)

1.3.2 Rear side, view from left, Q3 Sportback, K5A

A - Single-pin connector -T1fh- , black/
single-pin connector -T1fhx- , black

1 - Tank filler flap locking motor -V155-

2 - Right tail light -MX4-

3 - Subwoofer -R211-

4 - Trailer detector control unit -J345-

5 - 12 V socket 2 -U18-

6 - Left tail light -MX3-

7 - Electronically controlled damping control unit -J250-


8 - Left effect loudspeaker -R209-

9 - Rear body acceleration sender -G343-

10 - Rear lid control unit -J605-

11 - Rear lid warning buzzer -H32-

12 - Luggage compartment aerial for entry and start system -R137-

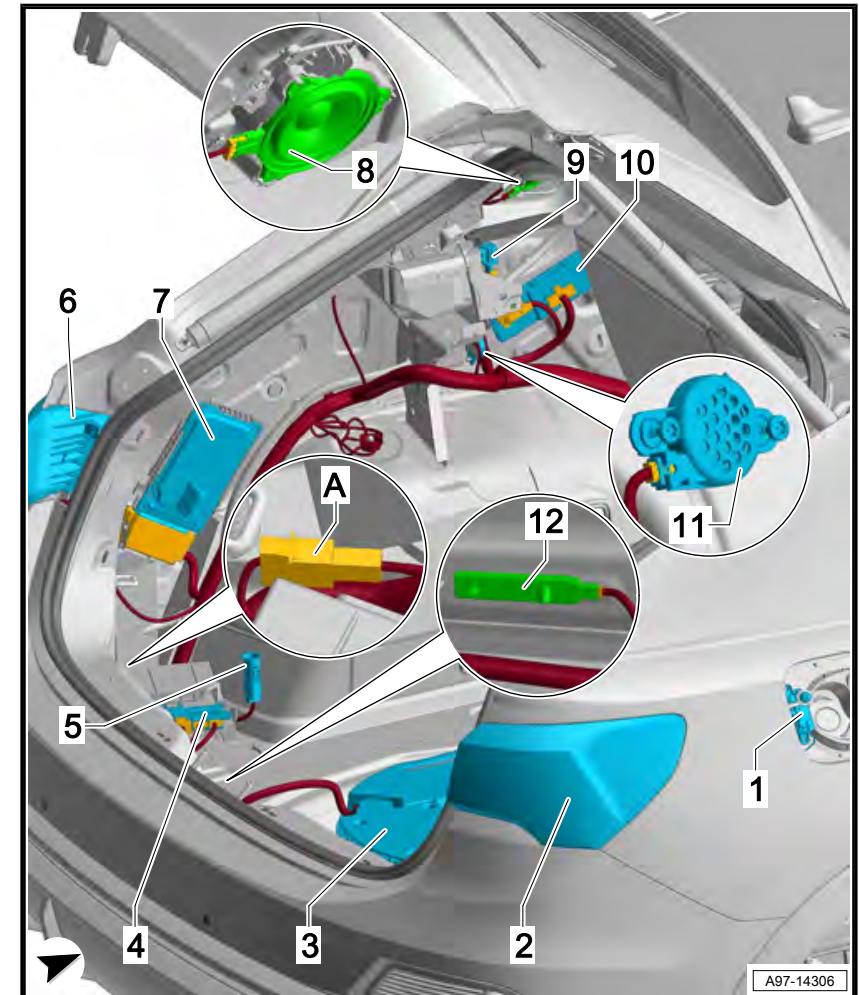

[Back to overview ⇒ page 1](#)

1.4 Rear side, view from right

♦ [⇒ "1.4.1 Rear side, view from right, Q3, K4H", page 9](#)


♦ ⇒ ["1.4.2 Rear side, view from right, Q3 Sportback, K5A", page 10](#)

1.4.1 Rear side, view from right, Q3, K4H

- 1 - Electric hinged tow coupling attachment button -E474-
- 2 - Luggage compartment light -W3-
- 3 - Rear parking aid warning buzzer -H15-
- 4 - Aerial amplifier for mobile telephone -R86-
- 5 - Remote control receiver for auxiliary heater -R64-
- 6 - Right effect loudspeaker -R210-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

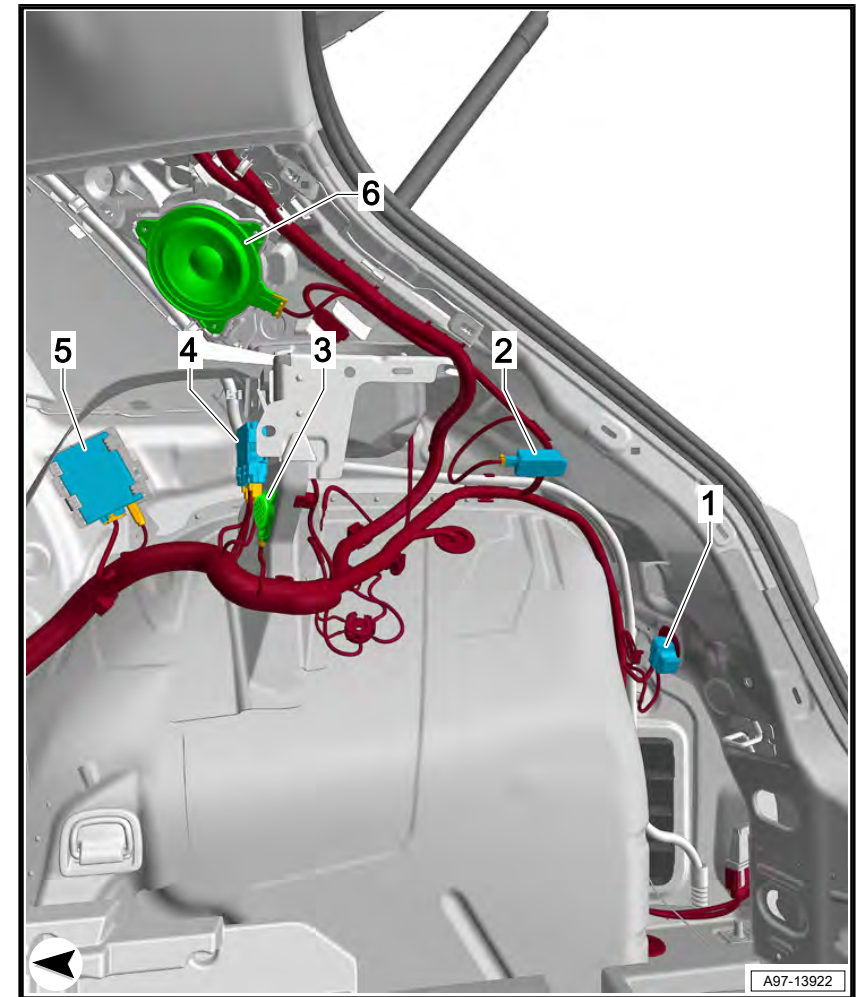


[Back to overview ⇒ page 1](#)

1.4.2 Rear side, view from right, Q3 Sportback, K5A

- 1 - Electric hinged tow coupling attachment button -E474-
- 2 - Luggage compartment light -W3-
- 3 - Rear parking aid warning buzzer -H15-
- 4 - Aerial amplifier for mobile telephone -R86-
- 5 - Remote control receiver for auxiliary heater -R64-
- 6 - Right effect loudspeaker -R210-



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

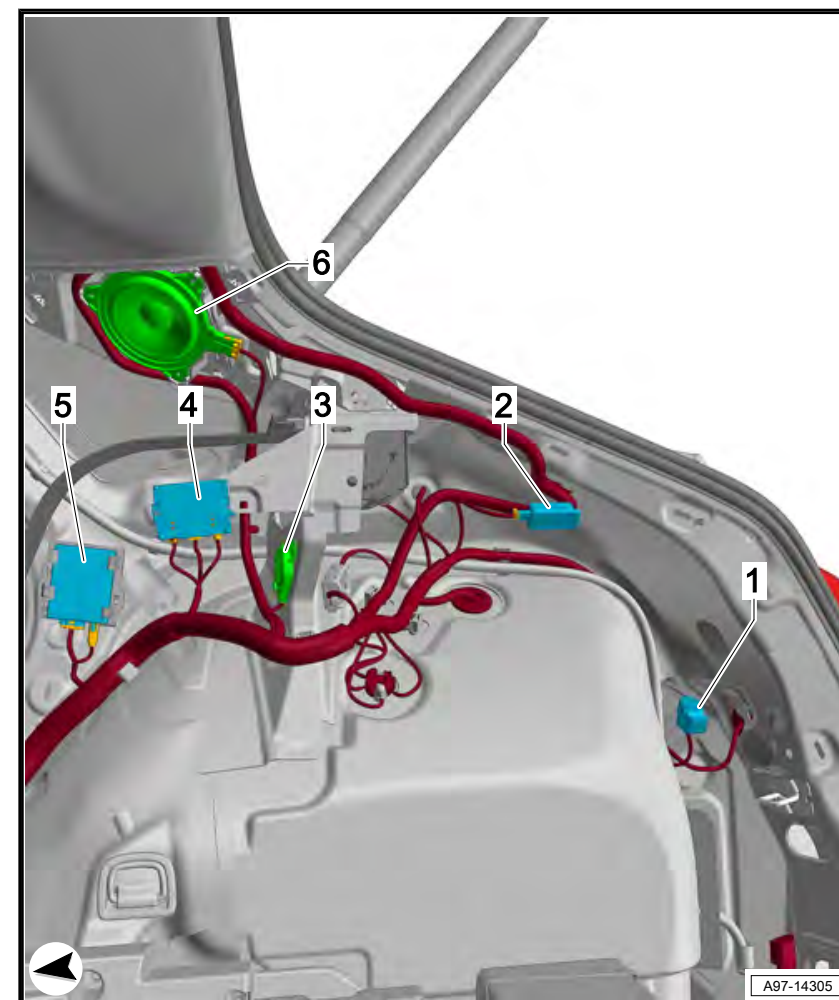

[Back to overview ⇒ page 1](#)

1.5 Rear side, view of centre

- ♦ [⇒ "1.5.1 Rear side, view of centre, models with 2.5l petrol engine", page 11](#)

♦ ⇒ ["1.5.2 Rear side, view of centre, models with 48-volt hybrid system, 0K4", page 12](#)


1.5.1 Rear side, view of centre, models with 2.5l petrol engine

1 - Subwoofer -R211-

- ❑ Fitting location for models with 48-volt hybrid system ⇒ [item 4 \(page 12\)](#)
- ❑ Fitting location for models without 2.5l petrol engine and without 48-volt hybrid system ⇒ ["1.3 Rear side, view from left", page 6](#)

2 - Battery -A-

3 - Battery monitor control unit -J367-

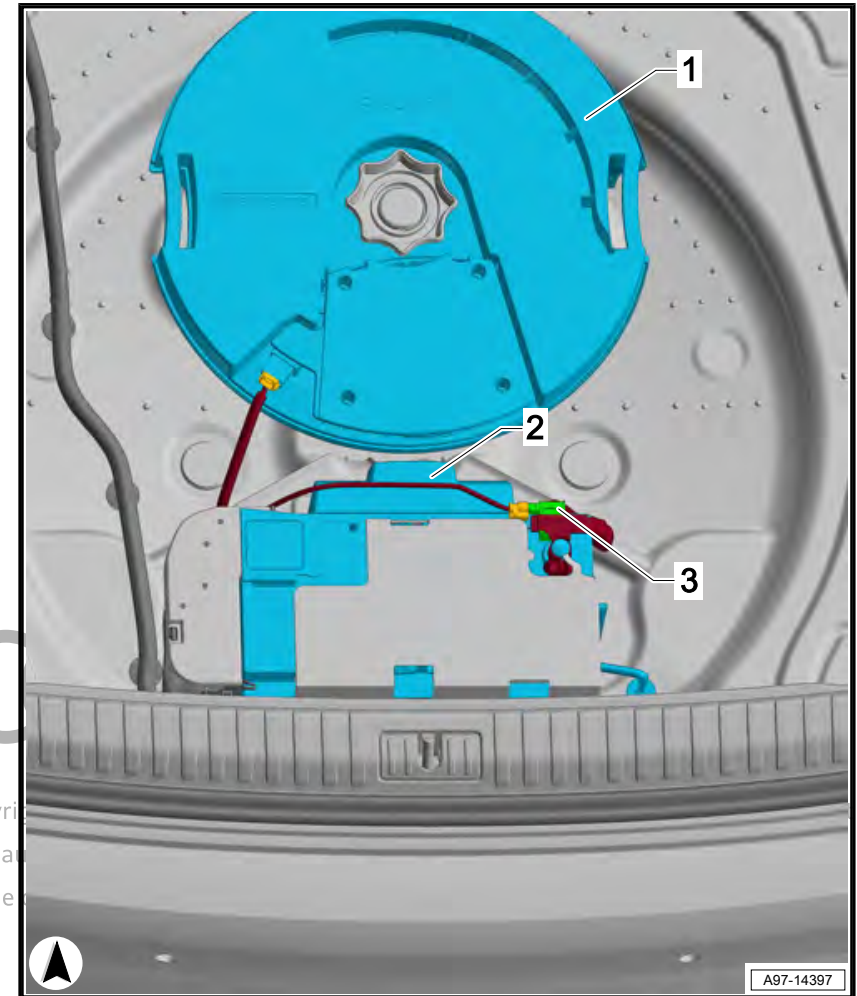

[Back to overview ⇒ page 1](#)

1.5.2 Rear side, view of centre, models with 48-volt hybrid system, 0K4


1 - Voltage converter, 48 V/12 V -A7-

2 - Battery fan 1 -V457-

3 - Battery 48 V -A6-

4 - Subwoofer -R211-

- ☐ Fitting location for models with 2.5l petrol engine ⇒ [Item 1 \(page 11\)](#)
- ☐ Fitting location for models without 2.5l petrol engine and without 48-volt hybrid system ⇒ [“1.3 Rear side, view from left”, page 6](#)

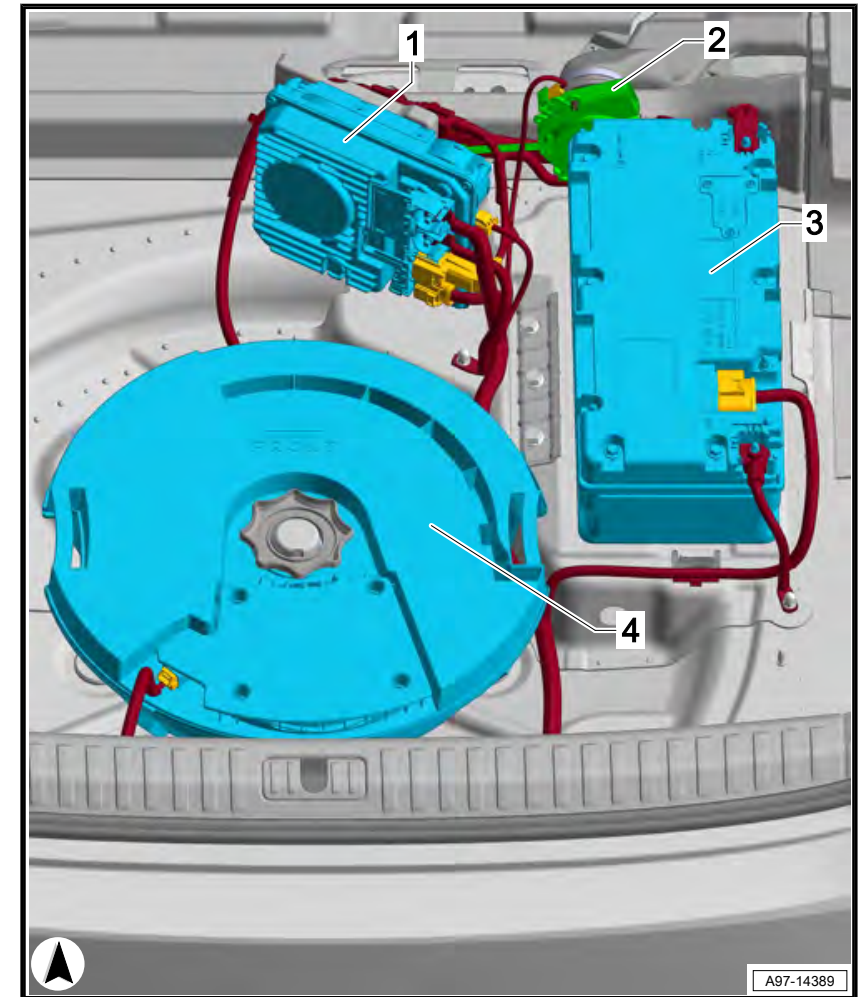

[Back to overview ⇒ page 1](#)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.