
WIRING HARNESS CONFIGURATION DIAGRAMS

CONTENTS

ENGINE COMPARTMENT

Petrol <L.H. drive vehicles>	2-2
Petrol <R.H. drive vehicles>	2-6

FLOOR AND ROOF



L.H. drive vehicles	2-18
R.H. drive vehicles	2-20

DASH PANEL

L.H. drive vehicles	2-10
R.H. drive vehicles	2-14


ENGINE COMPARTMENT

Petrol <L.H. drive vehicles>

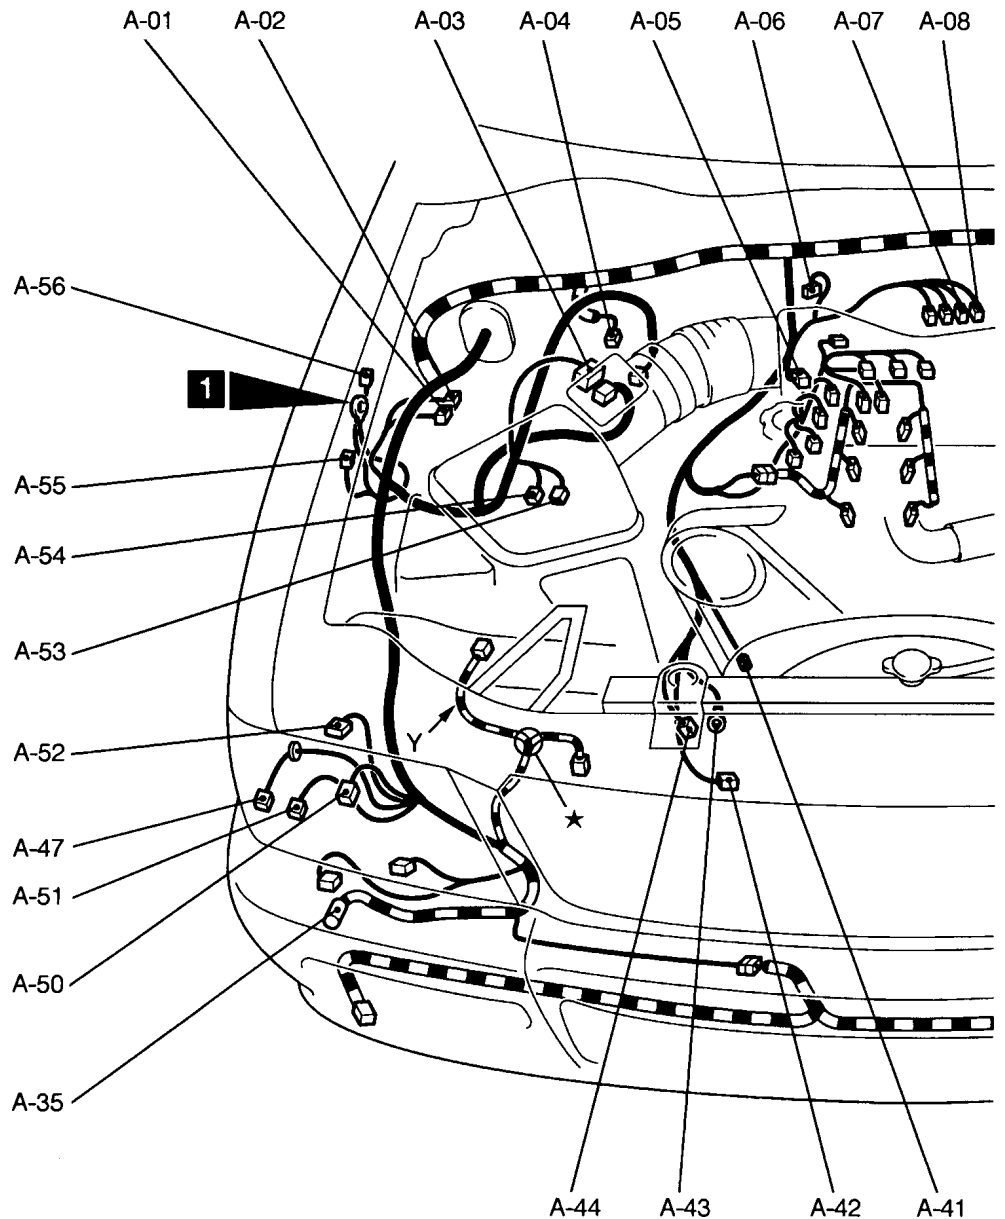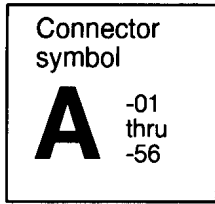


A-01 (26-B)	ABS-ECU
A-02 (4-GR)	ABS-ECU
A-03 (7-B)	Air flow sensor
A-04 (4-B)	Auto-cruise vacuum pump
A-05 (6-B)	Idle speed control servo
A-06 (4-B)	Throttle position sensor
A-07 (2-B)	Purge control solenoid valve
A-08 (2-BR)	EGR solenoid valve
A-14 (2-B)	Brake fluid level switch
A-15 (4-B)	Windshield wiper motor
A-16 (2-B)	Wiper deicer
A-17 (1-L)	Engine speed detection connector
A-20X (4)	Alternator relay

A-21X (5)	Starter relay <A/T>
A-23X (5)	Headlamp relay
A-24X (5)	Blower relay
A-25X (5)	Storage connector
A-26X (4)	A/C compressor relay <A/C>
A-27X (4)	Condenser fan relay <A/C>
A-30 (10-B)	DRL wiring harness and front wiring harness combination
A-31 (3)	Headlamp leveling unit (LH)
A-32 (10-B)	DRL wiring harness and front wiring harness combination
A-33 (2)	Position lamp (LH)

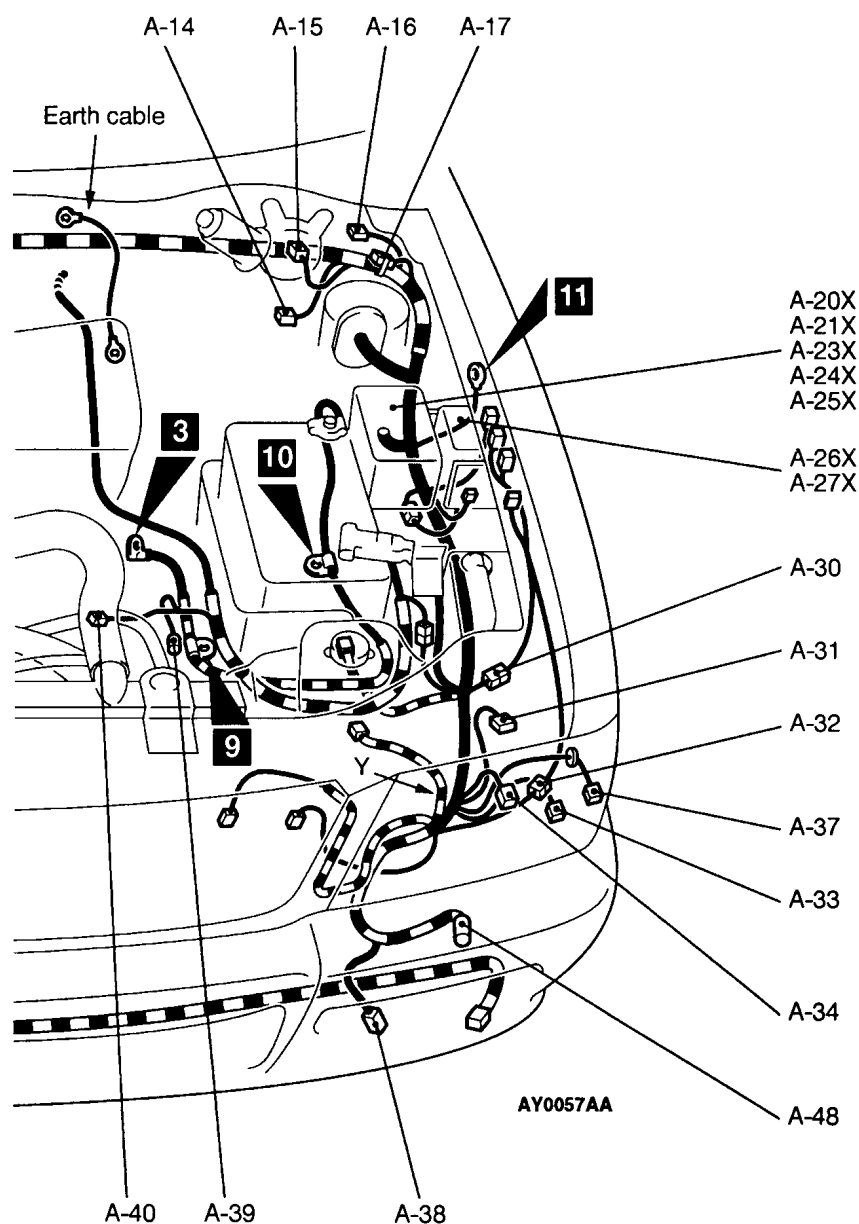



<Vehicles without DRL>

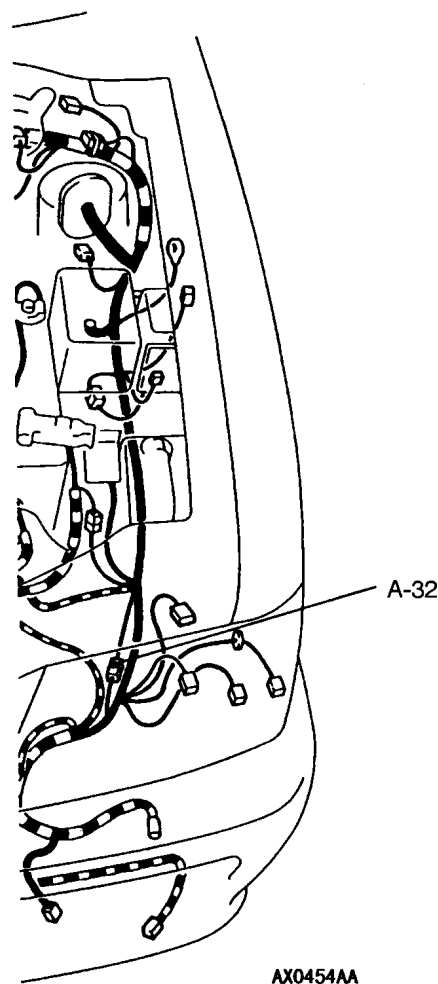


A-34 (3-B)	Headlamp (LH)
A-35 (1-B)	Horn (LO)
A-37 (2-B)	Front turn-signal lamp (LH)
A-38 (2-BR)	Outside thermo sensor <Multi-meter>
A-39 (3-B)	Magnetic clutch and refrigerant temperature switch
A-40 (1-B)	Oil pressure gauge unit
A-41 (1)	Power steering oil pressure switch
A-42 (2-B)	Engine oil level sensor
A-43 (1)	Alternator

A-44 (2-B)	Alternator
A-47 (2-B)	Front turn-signal lamp (RH)
A-48 (1-B)	Horn (HI)
A-50 (3-B)	Headlamp (RH)
A-51 (2)	Position lamp (RH)
A-52 (3)	Headlamp leveling unit (RH)
A-53 (2-B)	Solenoid valve A <4WD>
A-54 (2-B)	Solenoid valve B <4WD>
A-55 (4-B)	ABS relay
A-56 (4-B)	Horn relay

Petrol <L.H. drive vehicles>

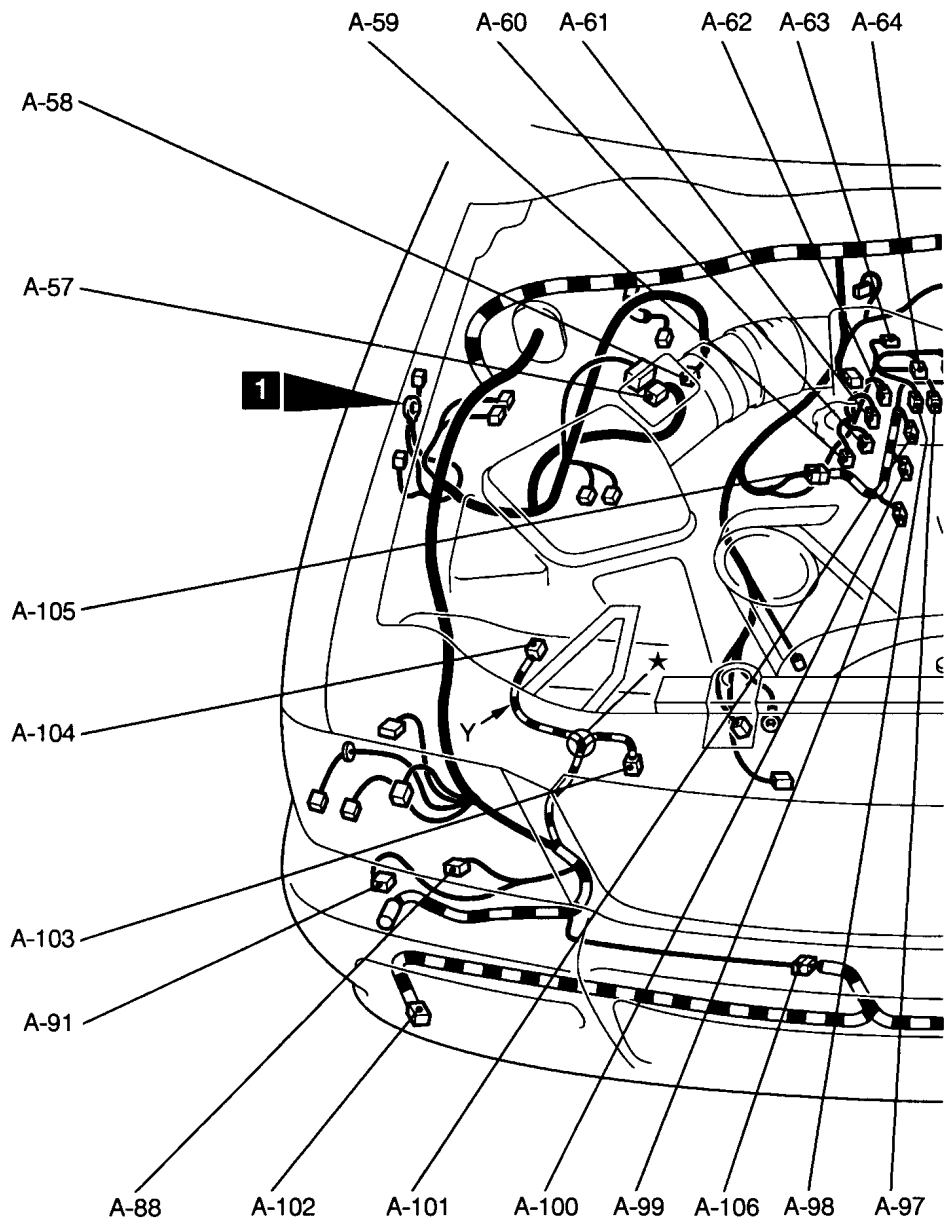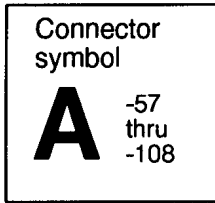

A-57 (2-GR)	Free-wheeling hub engage switch <Vehicles with auto-cruise control system>	A-65 (2-B)	Ignition coil (1)
A-58 (2-GR)	Free-wheeling hub engage switch <Vehicles without auto-cruise control system>	A-66 (2-B)	Ignition coil (3)
A-59 (2-B)	Engine coolant temperature sensor	A-67 (2-GR)	Injector No.6
A-60 (1-B)	Engine coolant temperature gauge unit	A-68 (2-GR)	Injector No.4
A-61 (6-B)	Power transistor	A-69 (2-GR)	Injector No.2
A-62 (3-B)	Power transistor	A-80 (4-B)	DRL relay 1
A-63 (1-B)	Capacitor	A-81 (4-B)	DRL relay 2
A-64 (2-B)	Ignition coil (2)	A-82 (4)	Tail lamp relay
		A-83 (12-B)	DRL-ECU
		A-84 (6-B)	Headlamp washer relay
		A-85 (10-B)	Front wiring harness and A/C wiring harness combination

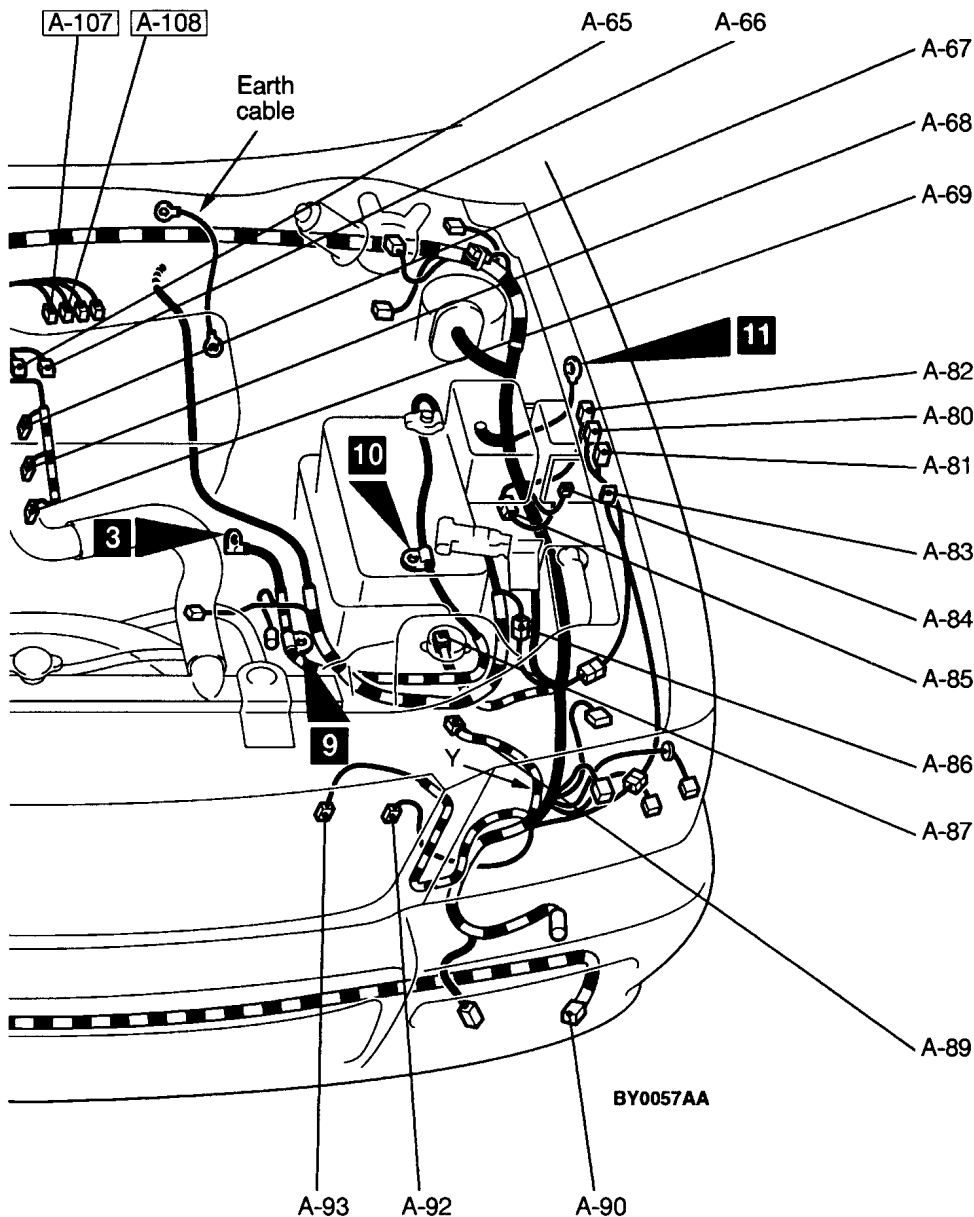

Connector colour code
 B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white

A-86 (6-B) Battery cable wiring harness and front wiring harness combination
 A-87 (2-B) Wheel speed sensor (front: LH) <ABS>
 A-88 (2-B) Headlamp washer motor
 A-89 (2-Y) Front impact sensor (LH)
 A-90 (2-BR) Front fog lamp (LH)
 A-91 (2-B) Windshield washer motor
 A-92 (2-BR) Dual pressure switch <A/C>
 A-93 (2-B) Condenser fan motor <A/C>
 A-97 (3-B) Crank angle sensor
 A-98 (3-GR) Camshaft position sensor
 A-99 (2-GR) Injector No.1
 A-100 (2-GR) Injector No.3
 A-101 (2-GR) Injector No.5



A-102 (2-BR) Front fog lamp (RH)
 A-103 (2-B) Wheel speed sensor (front: RH) <ABS>
 A-104 (2-Y) Front impact sensor (RH)
 A-105 (8-B) Injection wiring harness and front wiring harness combination
 A-106 (2-BR) Front wiring harness and fog lamp wiring harness combination
 A-107 (4-B) Right bank oxygen sensor (front)
 A-108 (4-GR) Left bank oxygen sensor (front)

NOTE

Connector numbers enclosed by a frame are newly added.


ENGINE COMPARTMENT

Petrol <R.H. drive vehicles>

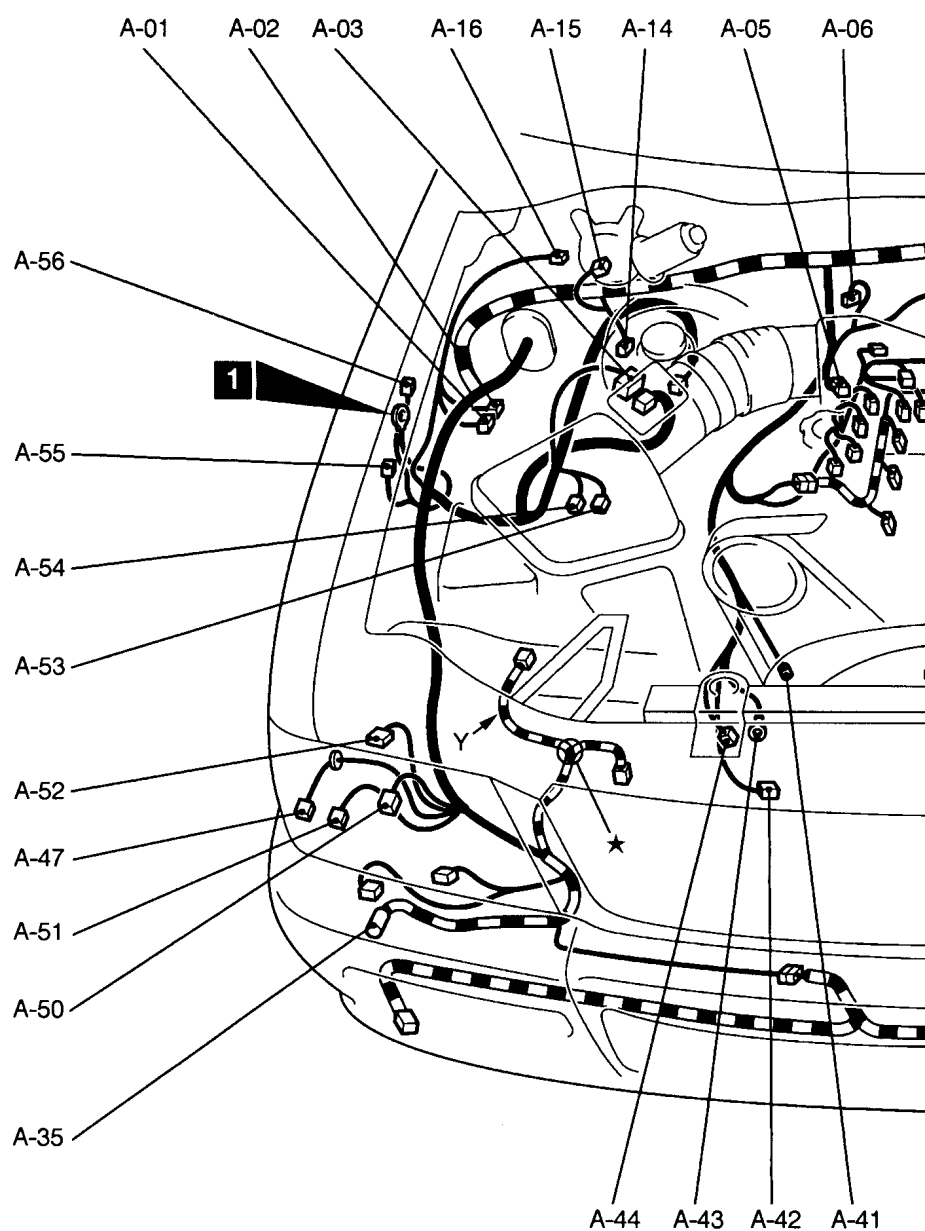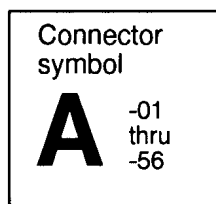

A-01 (26-B)	ABS-ECU
A-02 (4-GR)	ABS-ECU
A-03 (7-B)	Air flow sensor
A-04 (4-B)	Auto-cruise vacuum pump
A-05 (6-B)	Idle speed control servo
A-06 (4-B)	Throttle position sensor
A-07 (2-B)	Purge control solenoid valve
A-08 (2-BR)	EGR solenoid valve
A-14 (2-B)	Brake fluid level switch
A-15 (4-B)	Windshield wiper motor
A-16 (2-B)	Wiper deicer
A-17 (1-L)	Engine speed detection connector



A-20X (4)	Alternator relay
A-21X (5)	Starter relay <A/T>
A-23X (5)	Headlamp relay
A-24X (5)	Blower relay
A-25X (5)	Storage connector
A-26X (4)	A/C compressor relay <A/C>
A-27X (4)	Condenser fan relay <A/C>
A-31 (3)	Headlamp leveling unit (LH)
A-33 (2)	Position lamp (LH)
A-34 (3-B)	Headlamp (LH)
A-35 (1-B)	Horn (LO)

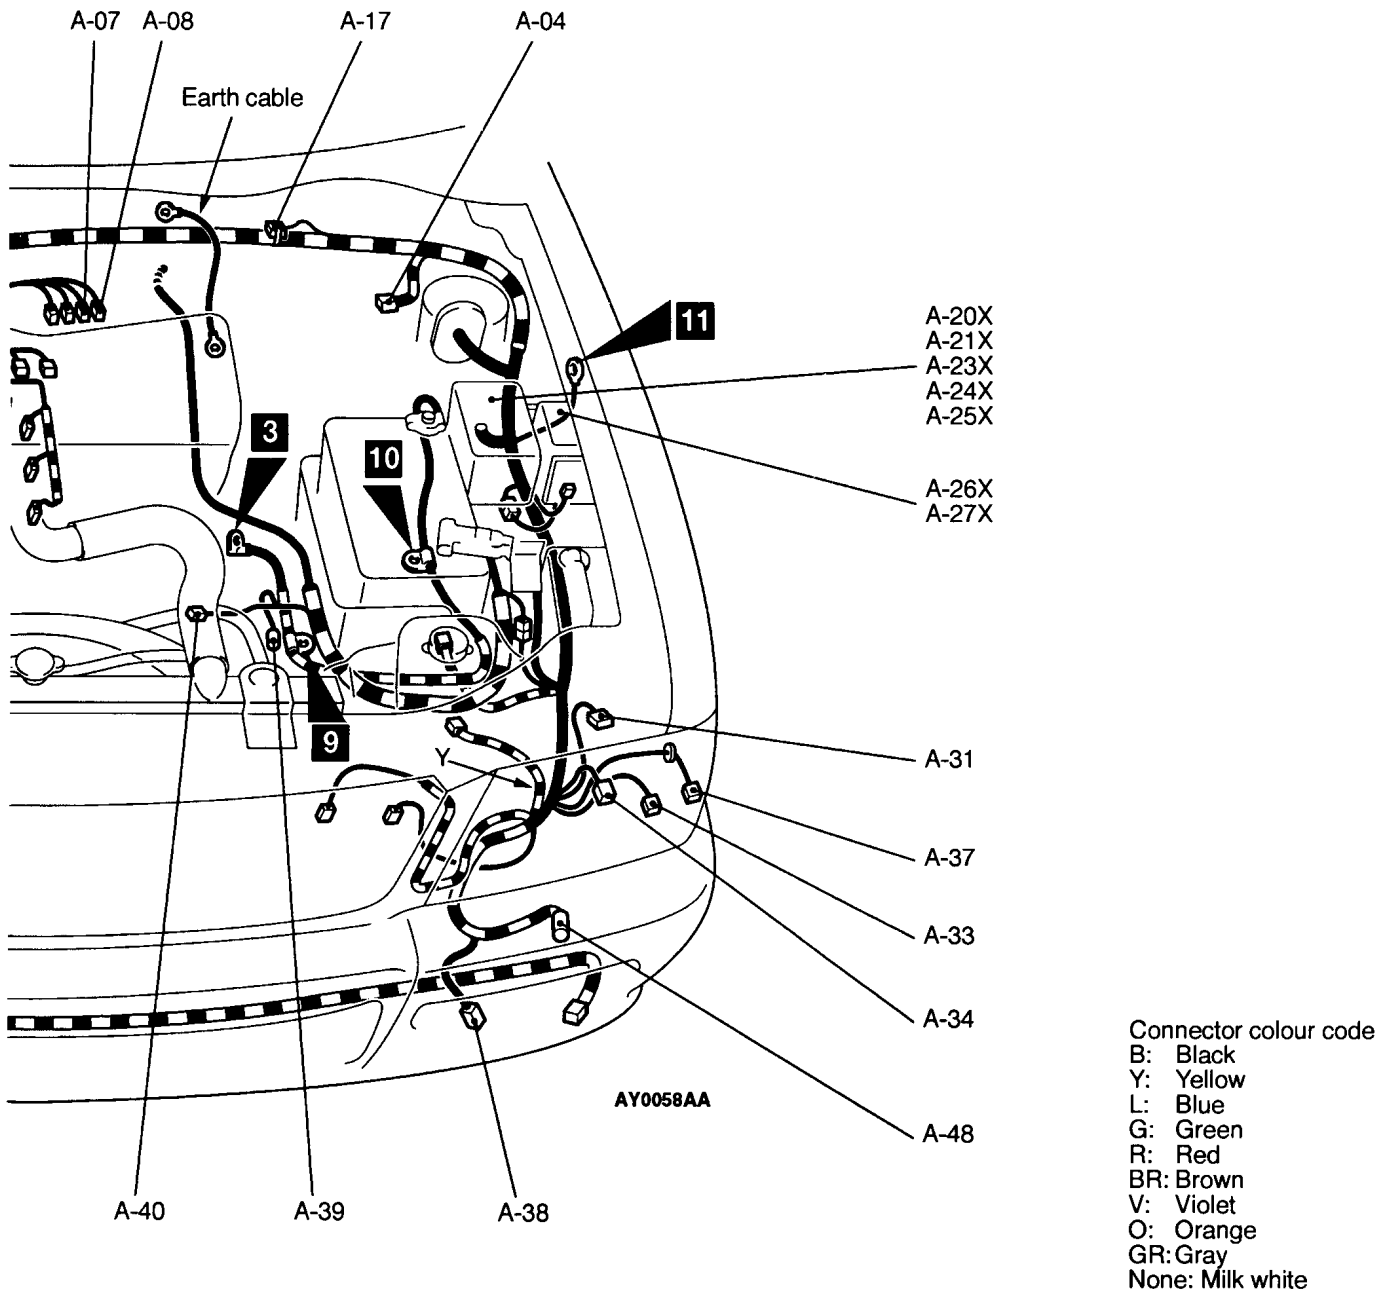


A-37 (2-B) Front turn-signal lamp (LH)
 A-38 (2-BR) Outside thermo sensor <Multi-meter>
 A-39 (3-B) Magnetic clutch and refrigerant temperature switch
 A-40 (1-B) Oil pressure gauge unit
 A-41 (1) Power steering oil pressure switch
 A-42 (2-B) Engine oil level sensor
 A-43 (1) Alternator
 A-44 (2-B) Alternator

A-47 (2-B) Front turn-signal lamp (RH)
 A-48 (1-B) Horn (HI)
 A-50 (3-B) Headlamp (RH)
 A-51 (2) Position lamp (RH)
 A-52 (3) Headlamp leveling unit (RH)
 A-53 (2-B) Solenoid valve A <4WD>
 A-54 (2-B) Solenoid valve B <4WD>
 A-55 (4-B) ABS relay
 A-56 (4-B) Horn relay

Petrol <R.H. drive vehicles>

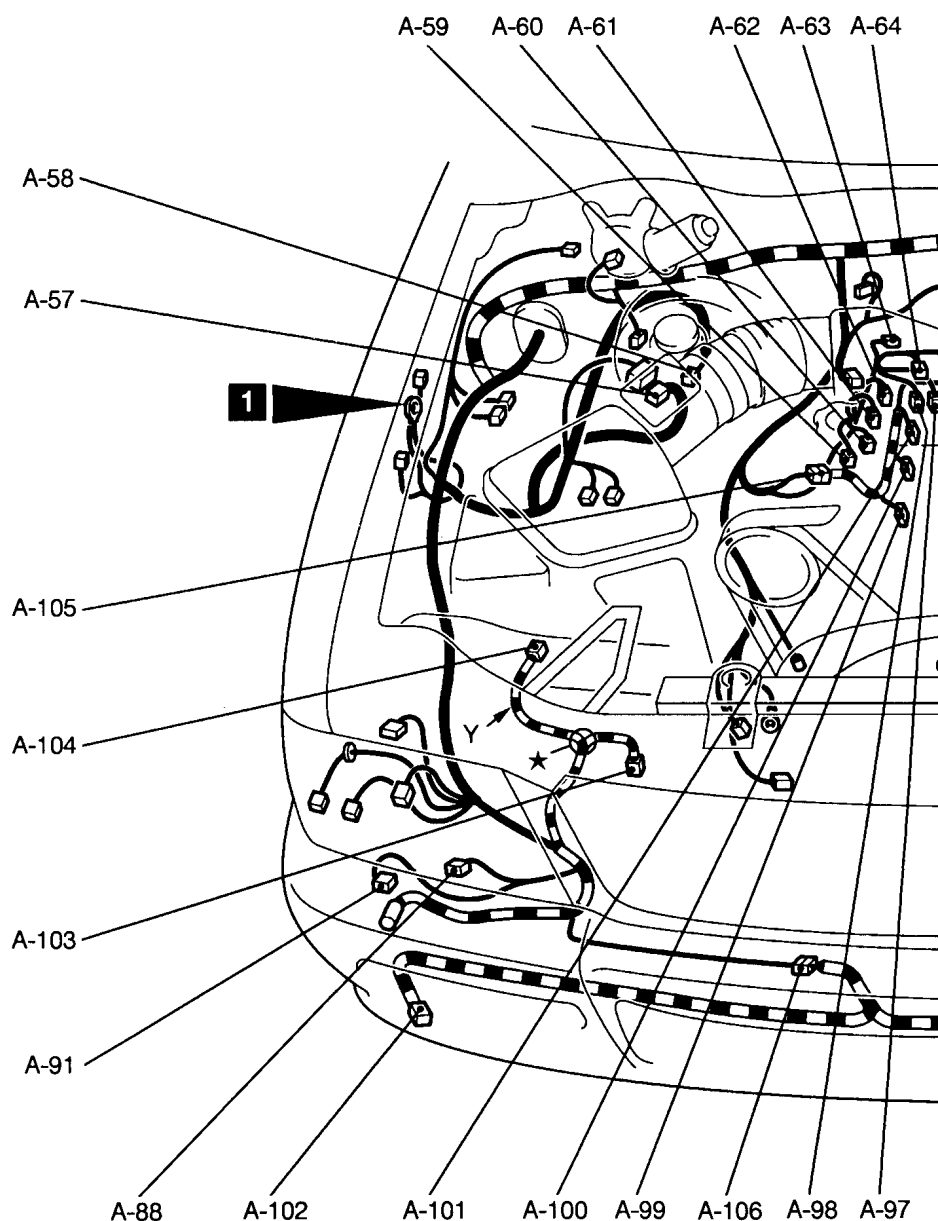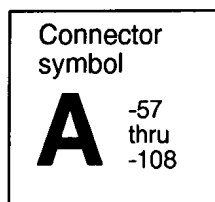

A-57 (2-GR)	Free-wheeling hub engage switch <Vehicles with auto-cruise control system>	A-64 (2-B)	Ignition coil (2)
A-58 (2-GR)	Free-wheeling hub engage switch <Vehicles without auto-cruise control system>	A-65 (2-B)	Ignition coil (1)
A-59 (2-B)	Engine coolant temperature sensor	A-66 (2-B)	Ignition coil (3)
A-60 (1-B)	Engine coolant temperature gauge unit	A-67 (2-GR)	Injector No.6
A-61 (6-B)	Power transistor	A-68 (2-GR)	Injector No.4
A-62 (3-B)	Power transistor	A-69 (2-GR)	Injector No.2
A-63 (1-B)	Capacitor	A-84 (6-B)	Headlamp washer relay
		A-85 (10-B)	Front wiring harness and A/C wiring harness combination
		A-86 (6-B)	Battery cable wiring harness and front wiring harness combination

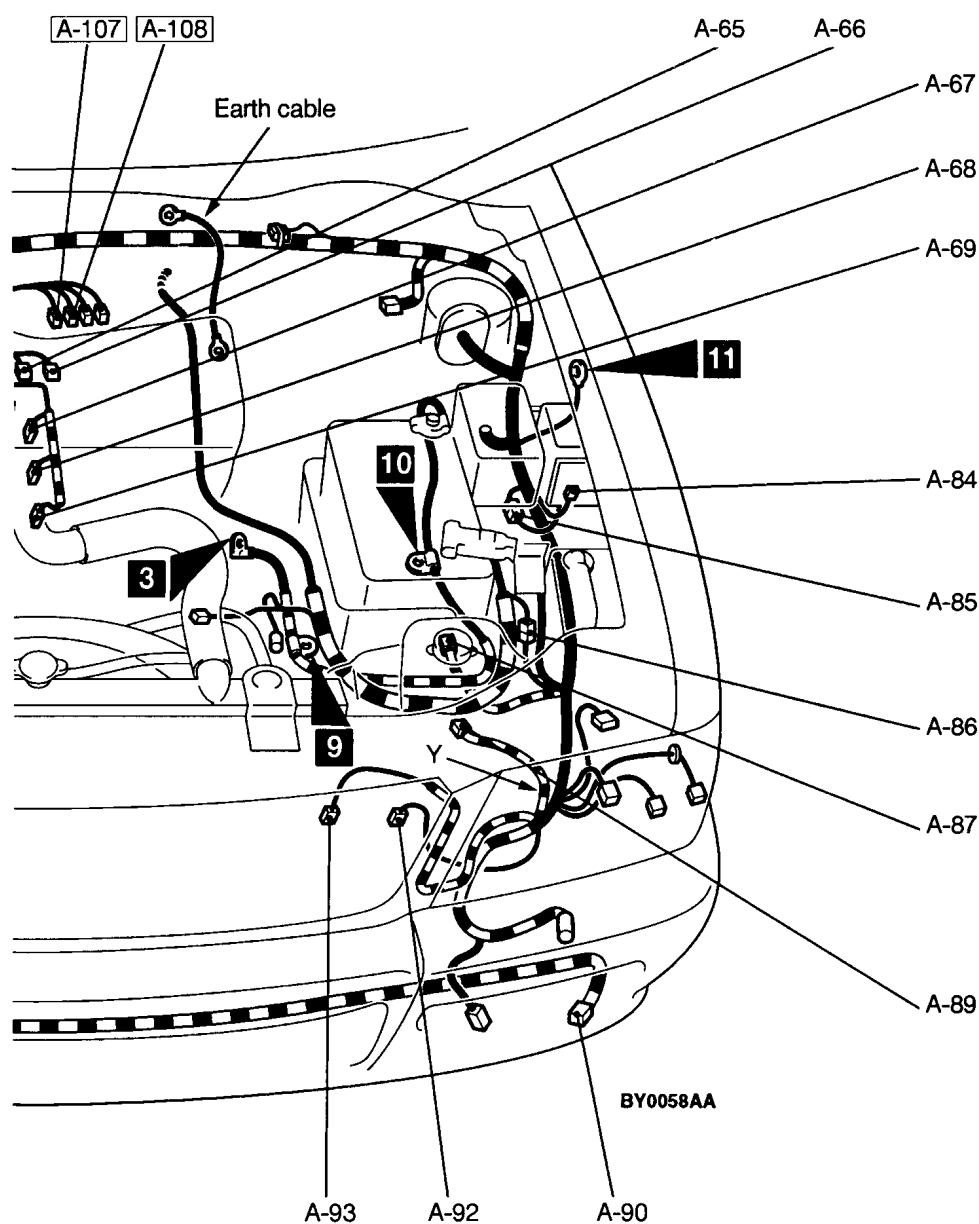

Connector colour code
 B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white



A-87 (2-B) Wheel speed sensor (front: LH) <ABS>
 A-88 (2-B) Headlamp washer motor
 A-89 (2-R) Front impact sensor (LH)
 A-90 (2-BR) Front fog lamp (LH)
 A-91 (2-B) Windshield washer motor
 A-92 (2-BR) Dual pressure switch <A/C>
 A-93 (2-B) Condenser fan motor <A/C>
 A-97 (3-B) Crank angle sensor
 A-98 (3-GR) Camshaft position sensor
 A-99 (2-GR) Injector No.1
 A-100 (2-GR) Injector No.3
 A-101 (2-GR) Injector No.5
 A-102 (2-BR) Front fog lamp (RH)

A-103 (2-B) Wheel speed sensor (front: RH) <ABS>
 A-104 (2-R) Front impact sensor (RH)
 A-105 (8-B) Injection wiring harness and front wiring harness combination
 A-106 (2-BR) Front wiring harness and fog lamp wiring harness combination
 A-107 (4-B) Right bank oxygen sensor (front)
 A-108 (4-GR) Left bank oxygen sensor (front)


NOTE
 Connector numbers enclosed by a frame are newly added.

DASH PANEL

L.H. drive vehicles

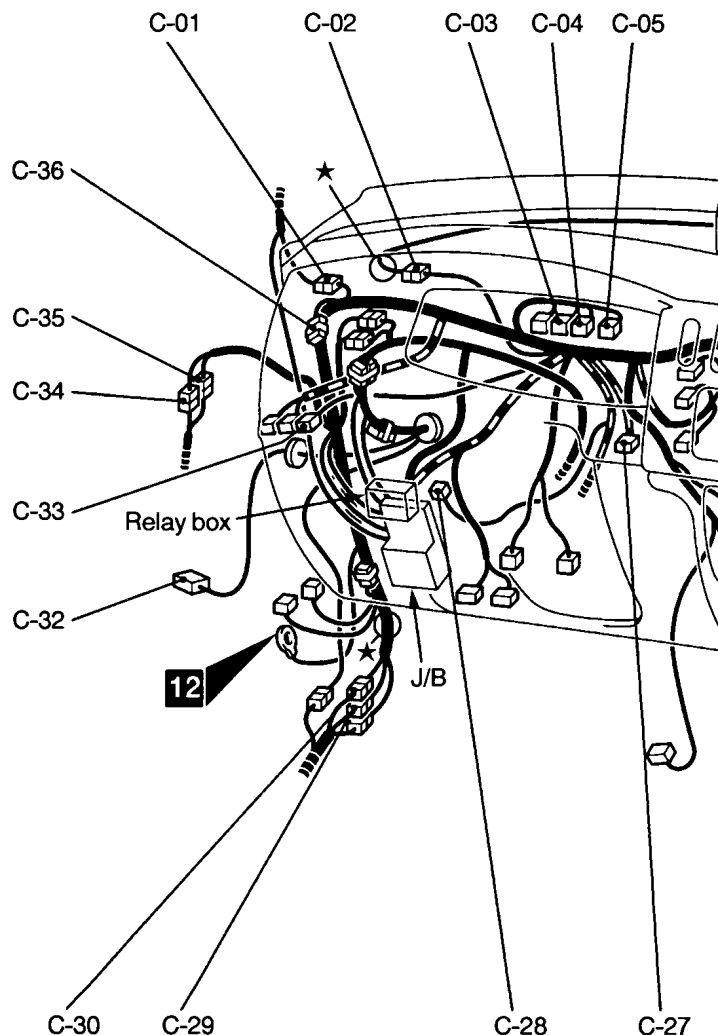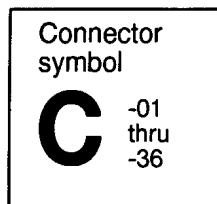

C-01 (20)	Body wiring harness and roof wiring harness combination	C-11 (19)	J/C (1)
C-02 (11)	Body wiring harness and instrument panel wiring harness combination	C-12 (19)	J/C (2)
C-03 (12-B)	Combination meter	C-13 (19)	Body wiring harness and front door wiring harness (passenger's side) combination
C-04 (12)	Combination meter	C-14 (6)	Body wiring harness and front door wiring harness (passenger's side) combination
C-05 (12)	Combination meter	C-15 (12)	Body wiring harness and front wiring harness combination
C-06 (6)	A/C switch	C-16 (1)	Body wiring harness and front wiring harness combination
C-07 (8)	Blower switch	C-17 (22)	Body wiring harness and front wiring harness combination
C-08 (2)	Heater control panel illumination lamp		
C-09 (4)	Automatic compressor-controller <Petrol>		
C-10 (3)	Automatic compressor-controller <Diesel>		


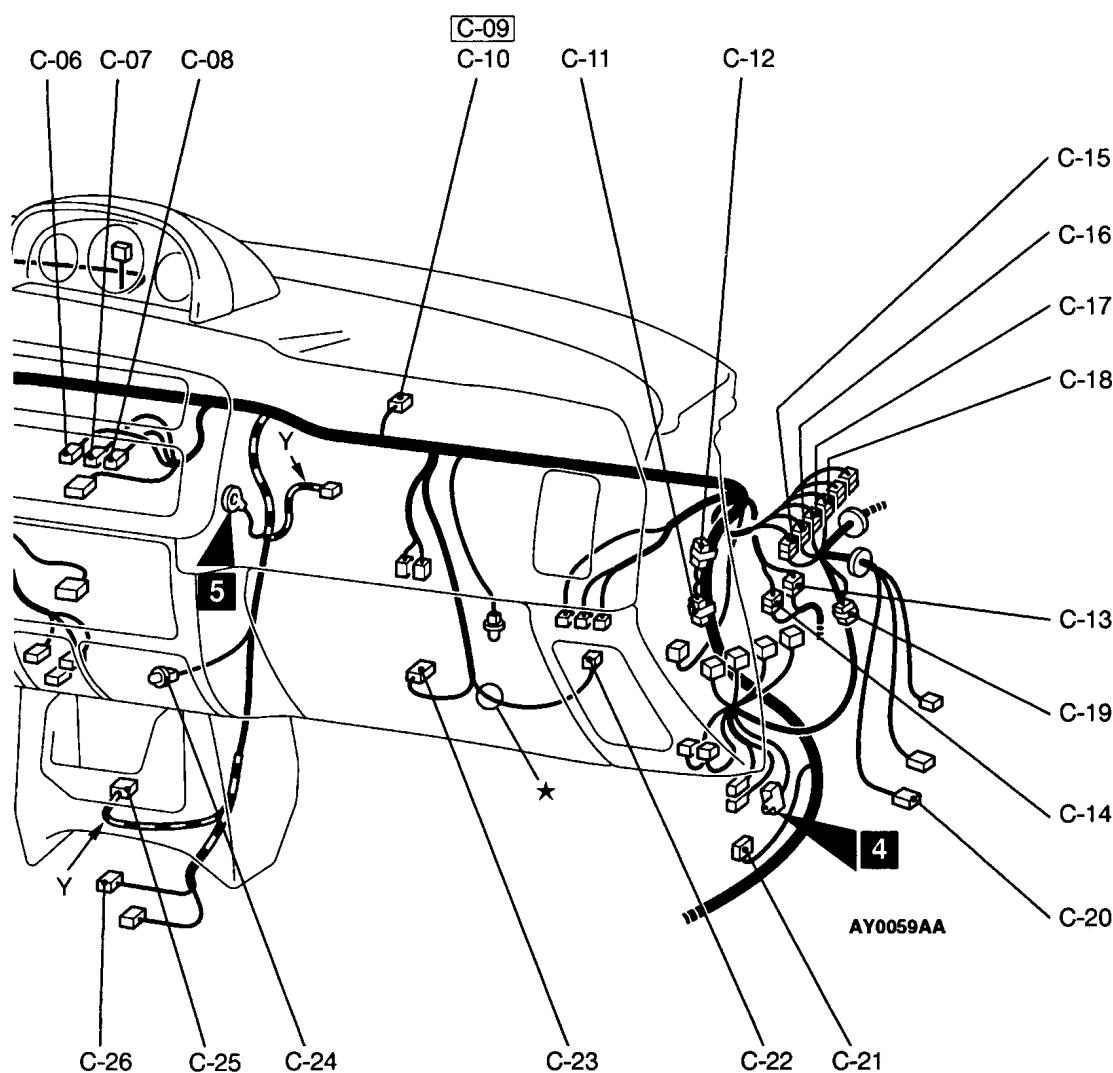


C-18 (17)	Body wiring harness and front wiring harness combination
C-19 (33)	J/C (5)
C-20 (2-GR)	Side turn signal lamp (RH)
C-21 (10)	4WD indicator-ECU
C-22 (2)	Blower motor
C-23 (4)	Blower resistor
C-24 (2)	Ashtray illumination lamp
C-25 (20-Y)	SRS-ECU
C-26 (3-B)	G sensor <ABS>
C-27 (4)	Headlamp leveling switch
C-28 (12)	Immobilizer-ECU
C-29 (2)	Body wiring harness and transmission wiring harness combination


C-30 (9)	Body wiring harness and transmission wiring harness combination
C-32 (2-GR)	Side turn signal lamp (LH)
C-33 (4)	Rheostat
C-34 (19)	Body wiring harness and front door wiring harness (driver's side) combination
C-35 (10)	Body wiring harness and front door wiring harness (driver's side) combination
C-36 (3-B)	Diode (for rear fog lamp circuit)

NOTE
Connector numbers enclosed by a frame are changed.

L.H. drive vehicles

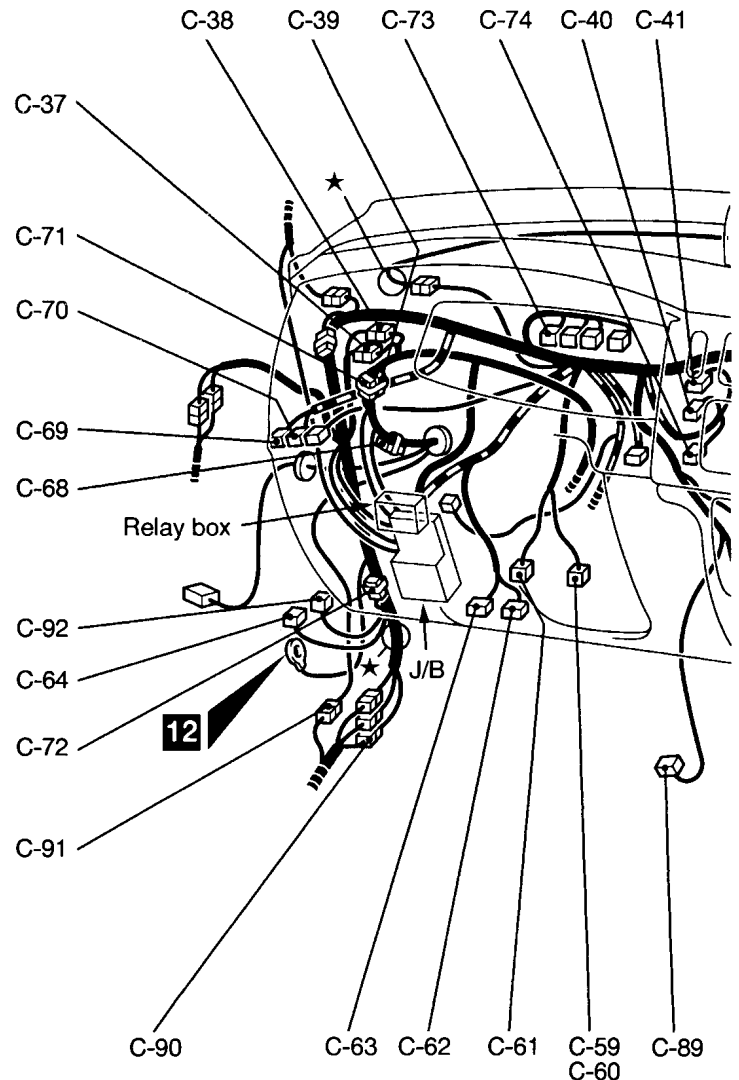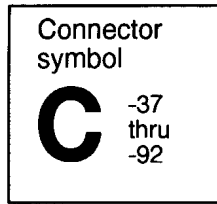

C-37 (22)	Body wiring harness and front wiring harness combination	C-53 (4)	Fuel pump relay <Petrol>
C-38 (6)	Body wiring harness and front wiring harness combination	C-54 (4)	Engine control relay <Petrol>
C-39 (2-B)	Diode (for headlamp circuit)	C-55 (14)	Radio and tape player
C-40 (6)	Defogger switch	C-56 (1-B)	Cigarette lighter
C-41 (10)	Hazard warning switch	C-57 (2)	Cigarette lighter illumination lamp
C-42 (4)	Rear heater indicator	C-58 (1)	Cigarette lighter
C-43 (14)	Multi-meter	C-59 (2-B)	Stop lamp switch <Vehicles without auto-cruise control system>
C-44 (4)	Rear fog lamp relay	C-60 (4-B)	Stop lamp switch <Vehicles with auto-cruise control system>
C-45 (2-R)	Air bag module (squib) (passenger's side)	C-61 (2)	Clutch pedal position switch <Vehicles with auto-cruise control system>
<u>C-47</u> (35-GR)	Engine-ECU <Petrol-M/T>	C-62 (12)	Diagnosis connector (2)
C-48 (26-Y)	Glow-ECU <Diesel>	C-63 (16-B)	Diagnosis connector (1)
<u>C-49</u> (28-GR)	Engine-ECU <Petrol-M/T>	C-64 (16-B)	Auto-cruise control-ECU
<u>C-50</u> (30-GR)	Engine-ECU <Petrol-M/T>	C-65 (4-L)	Defogger relay
C-52 (4)	Intercooler fan-ECU <Diesel>	C-66 (4)	Engine oil level relay <Petrol>

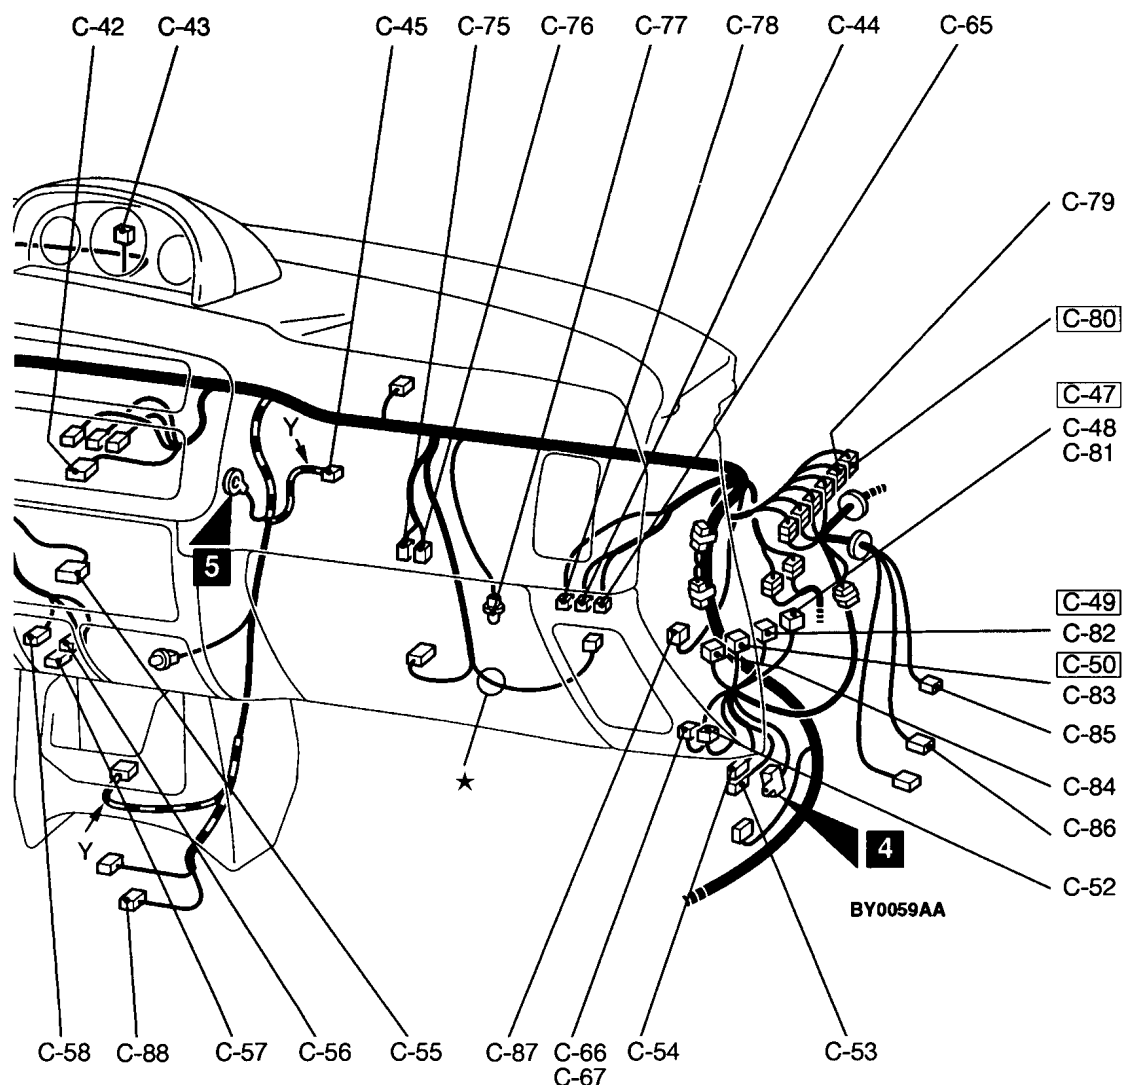



Connector colour code
 B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white

C-67 (4) Engine oil level relay <Diesel>
 C-68 (19) J/C (3)
 C-69 (6) Front fog lamp switch
 C-70 (6-B) Rear fog lamp switch
 C-71 (19) J/C (4)
 C-72 (4-B) Diode (for sunroof circuit)
 C-73 (10) Combination meter
 C-74 (6) Hold switch <A/T>
 C-75 (1) Glove box lamp switch
 C-76 (1) Glove box lamp switch
 C-77 (1) Glove box lamp
 C-78 (8) Hazard warning relay
 C-79 (9) Body wiring harness and front wiring harness combination
 C-80 (20) Body wiring harness and front wiring harness combination
 C-81 (35-GR) Engine-A/T-ECU <Petrol-A/T>
 C-82 (26-GR) Engine-A/T-ECU <Petrol-A/T>


C-83 (28-GR) Engine-A/T-ECU <Petrol-A/T>
 C-84 (30-GR) Engine-A/T-ECU <Petrol-A/T>
 C-85 (2) Motor antenna
 C-86 (3-B) Antenna length sensor
 C-87 (4) A/T control relay
 C-88 (2) A/T selector lever position illumination lamp
 C-89 (2-B) Wide-open throttle switch
 C-90 (20-B) Body wiring harness and transmission wiring harness combination
 C-91 (22) Front wiring harness and transmission wiring harness combination
 C-92 (14) Motor antenna-ECU

NOTE
 Connector numbers enclosed by a frame C-80 are changed.

R.H. drive vehicles

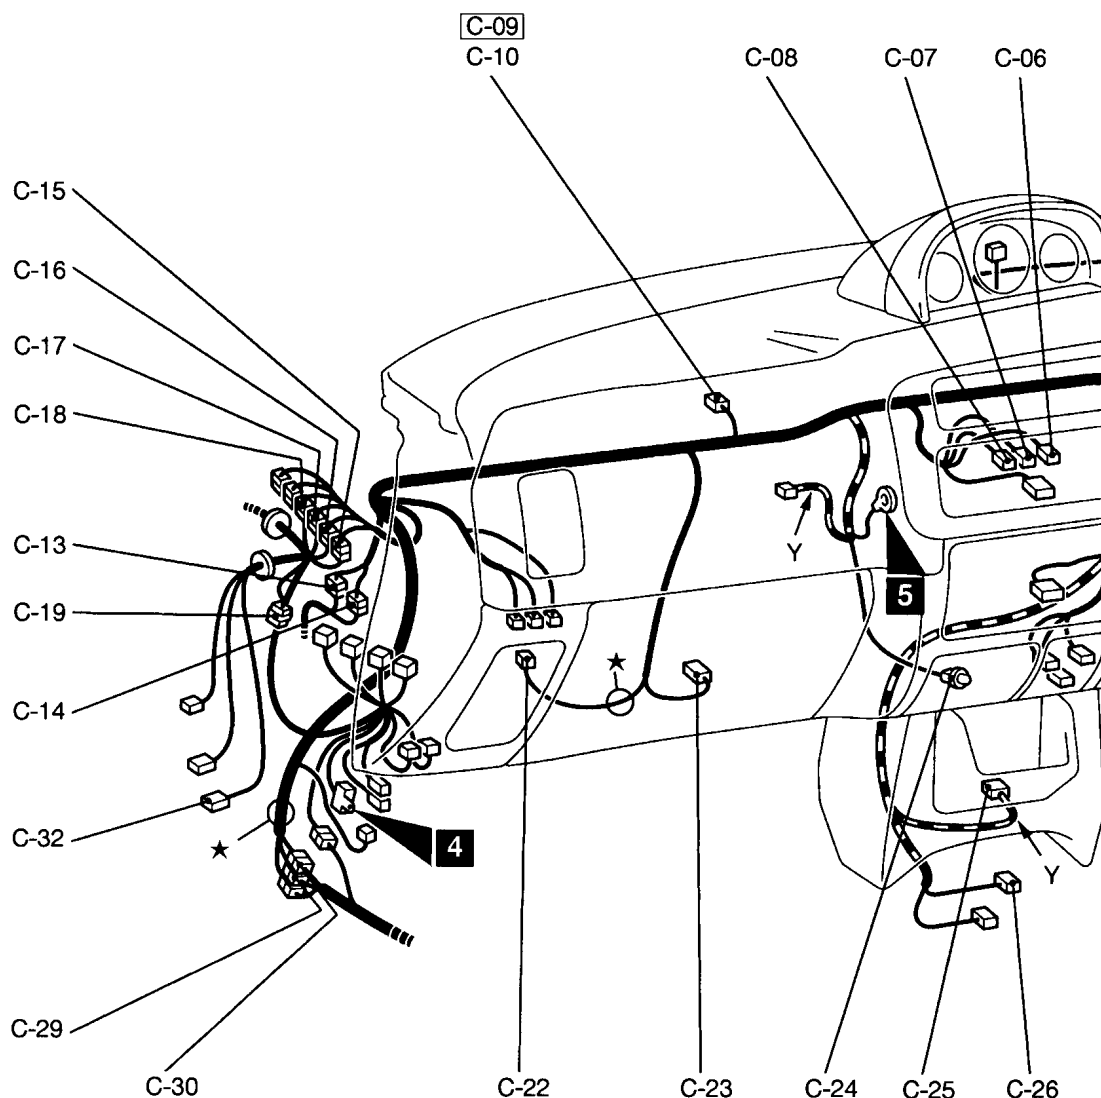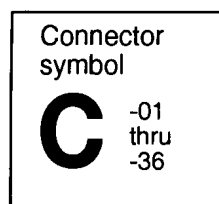

C-01 (20)	Body wiring harness and roof wiring harness combination	C-11 (19)	J/C (1)
C-02 (11)	Body wiring harness and instrument panel wiring harness combination	C-12 (19)	J/C (2)
C-03 (12-B)	Combination meter	C-13 (15)	Body wiring harness and front door wiring harness (passenger's side) combination
C-04 (12)	Combination meter	C-14 (6)	Body wiring harness and front door wiring harness (passenger's side) combination
C-05 (12)	Combination meter	C-15 (12)	Body wiring harness and front wiring harness combination
C-06 (6)	A/C switch	C-16 (1)	Body wiring harness and front wiring harness combination
C-07 (8)	Blower switch	C-17 (22)	Body wiring harness and front wiring harness combination
C-08 (2)	Heater control panel illumination lamp		
C-09 (4)	Automatic compressor-controller <Petrol>		
C-10 (3)	Automatic compressor-controller <Diesel>		

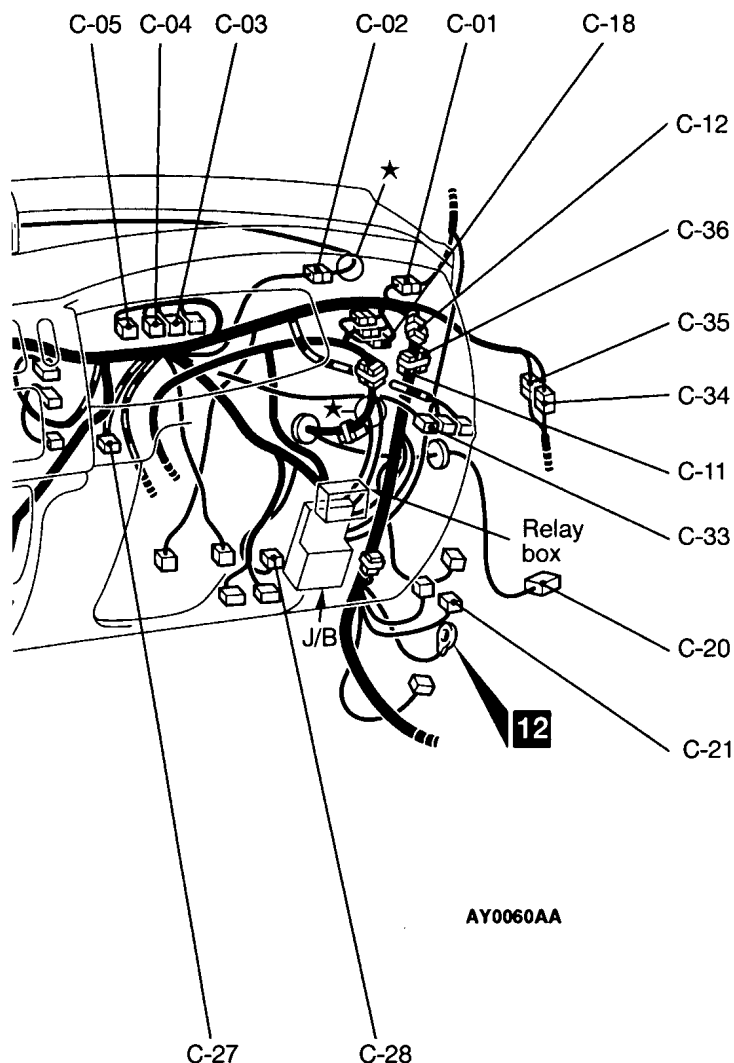

AY0060AA



Connector colour code
 B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white

C-18 (17) Body wiring harness and front wiring harness combination
 C-19 (33) J/C (5)
 C-20 (2-GR) Side turn signal lamp (RH)
 C-21 (10) 4WD indicator-ECU
 C-22 (2) Blower motor
 C-23 (4) Blower resistor
 C-24 (2) Ashtray illumination lamp
 C-25 (20-Y) SRS-ECU
 C-26 (3-B) G sensor <ABS>
 C-27 (4) Headlamp leveling switch
 C-28 (12) Immobilizer-ECU
 C-29 (2) Body wiring harness and transmission wiring harness combination


C-30 (9) Body wiring harness and transmission wiring harness combination
 C-32 (2-GR) Side turn signal lamp (LH)
 C-33 (4) Rheostat
 C-34 (19) Body wiring harness and front door wiring harness (driver's side) combination
 C-35 (10) Body wiring harness and front door wiring harness (driver's side) combination
 C-36 (3-B) Diode (for rear fog lamp circuit)

NOTE
 Connector numbers enclosed by a frame are changed.

R.H. drive vehicles

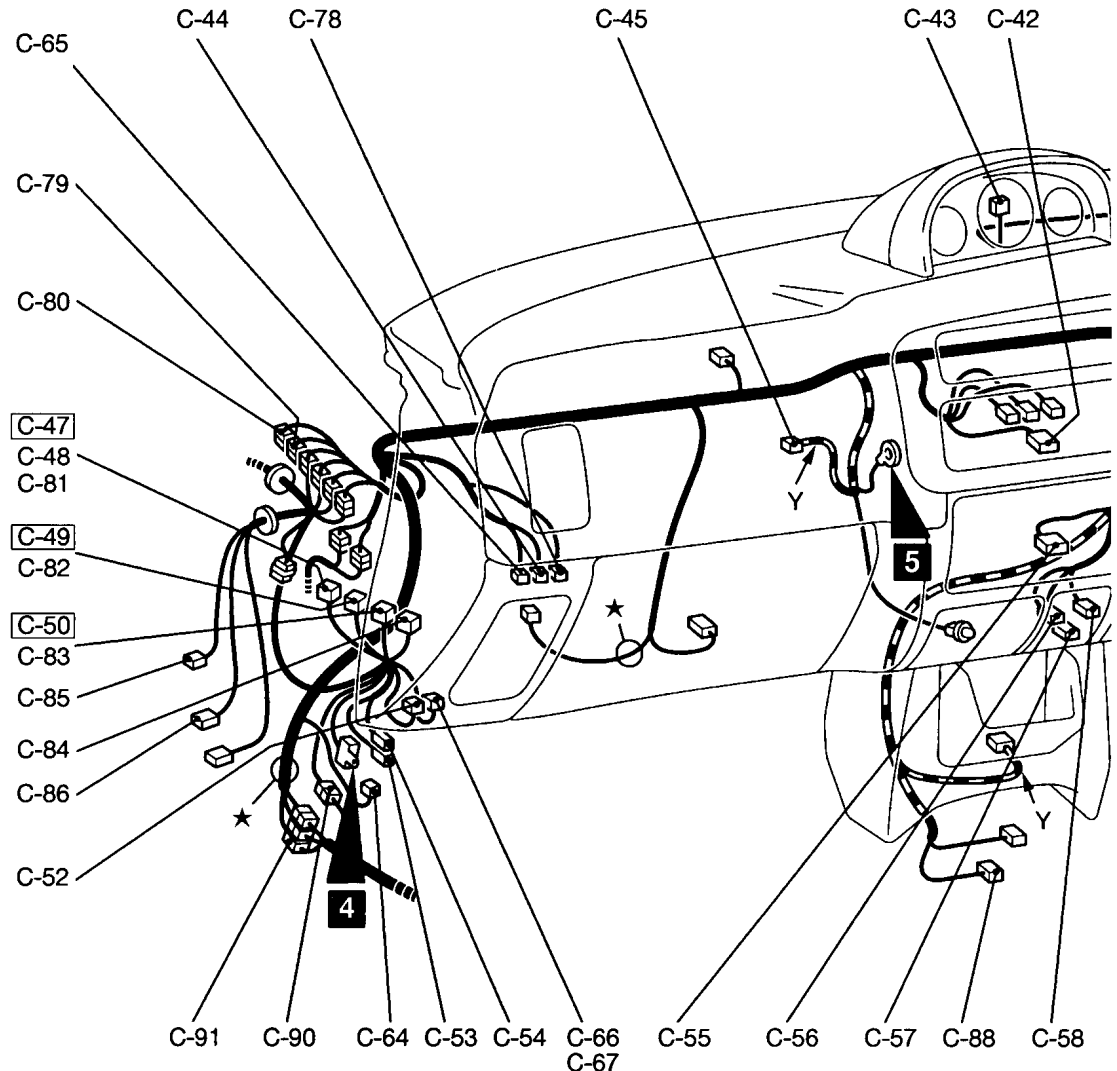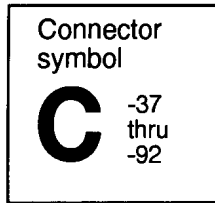

C-37 (22)	Body wiring harness and front wiring harness combination	C-53 (4)	Fuel pump relay <Petrol>
C-38 (6)	Body wiring harness and front wiring harness combination	C-54 (4)	Engine control relay <Petrol>
C-40 (6)	Defogger switch	C-55 (14)	Radio and tape player
C-41 (10)	Hazard warning switch	C-56 (1-B)	Cigarette lighter
C-42 (4)	Rear heater indicator	C-57 (2)	Cigarette lighter illumination lamp
C-43 (14)	Multi-meter	C-58 (1)	Cigarette lighter
C-44 (4)	Rear fog lamp relay	C-59 (2-B)	Stop lamp switch <Vehicles without auto-cruise control system>
C-45 (2-R)	Air bag module (squib) (passenger's side)	C-60 (4-B)	Stop lamp switch <Vehicles with auto-cruise control system>
<u>C-47</u> (35-GR)	Engine-ECU <Petrol-M/T>	C-61 (2)	Clutch pedal position switch <Vehicles with auto-cruise control system>
C-48 (26-Y)	Glow-ECU <Diesel>	C-62 (12)	Diagnosis connector (2)
<u>C-49</u> (28-GR)	Engine-ECU <Petrol-M/T>	C-63 (16-B)	Diagnosis connector (1)
<u>C-50</u> (30-GR)	Engine-ECU <Petrol-M/T>	C-64 (16-B)	Auto-cruise control-ECU
C-52 (4)	Intercooler fan-ECU <Diesel>	C-65 (4-L)	Defogger relay

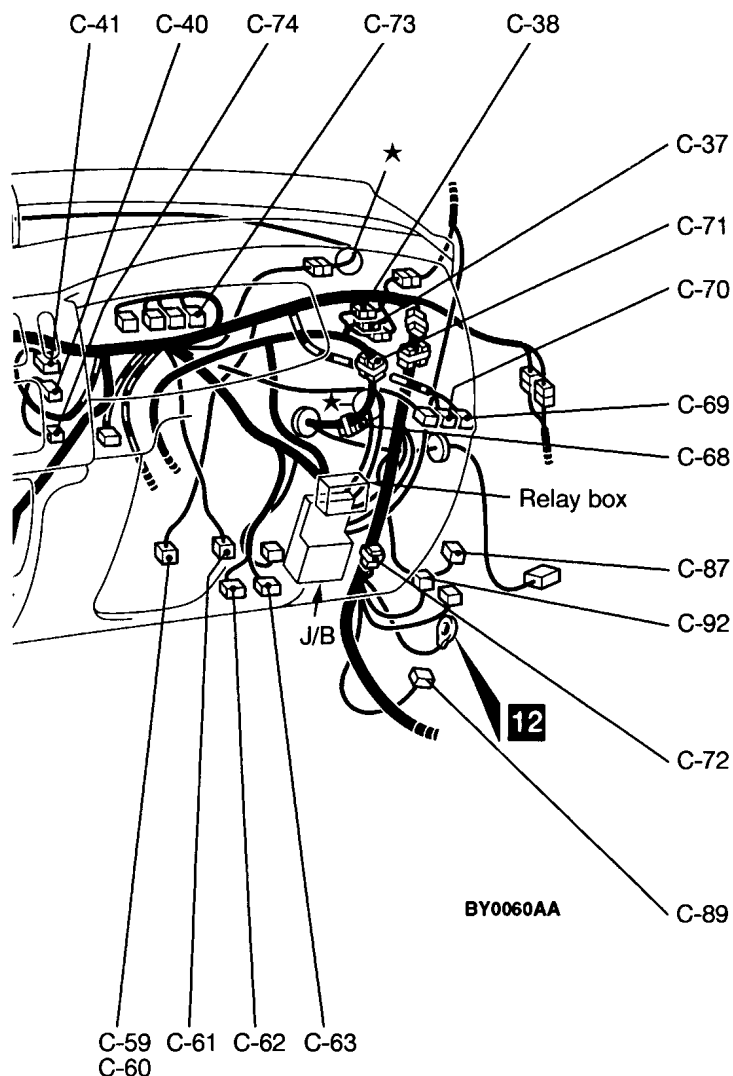

Connector colour code

B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white

C-66 (4)	Engine oil level relay <Petrol>
C-67 (4)	Engine oil level relay <Diesel>
C-68 (19)	J/C (3)
C-69 (6)	Front fog lamp switch
C-70 (6-B)	Rear fog lamp switch
C-71 (19)	J/C (4)
C-72 (4-B)	Diode (for sunroof circuit)
C-73 (10)	Combination meter
C-74 (6)	Hold switch <A/T>
C-78 (8)	Hazard warning relay
C-79 (9)	Body wiring harness and front wiring harness combination
C-80 (20)	Body wiring harness and front wiring harness combination
C-81 (35-GR)	Engine-A/T-ECU <Petrol-A/T>
C-82 (26-GR)	Engine-A/T-ECU <Petrol-A/T>
C-83 (28-GR)	Engine-A/T-ECU <Petrol-A/T>



C-84 (30-GR)	Engine-A/T-ECU <Petrol-A/T>
C-85 (2)	Motor antenna
C-86 (3-B)	Antenna length sensor
C-87 (4)	A/T control relay
C-88 (2)	A/T selector lever position illumination lamp
C-89 (2-B)	Wide-open throttle switch
C-90 (20-B)	Body wiring harness and transmission wiring harness combination
C-91 (22)	Front wiring harness and transmission wiring harness combination
C-92 (14)	Motor antenna-ECU

NOTE


Connector numbers enclosed by a frame are changed.

FLOOR AND ROOF

L.H. drive vehicles

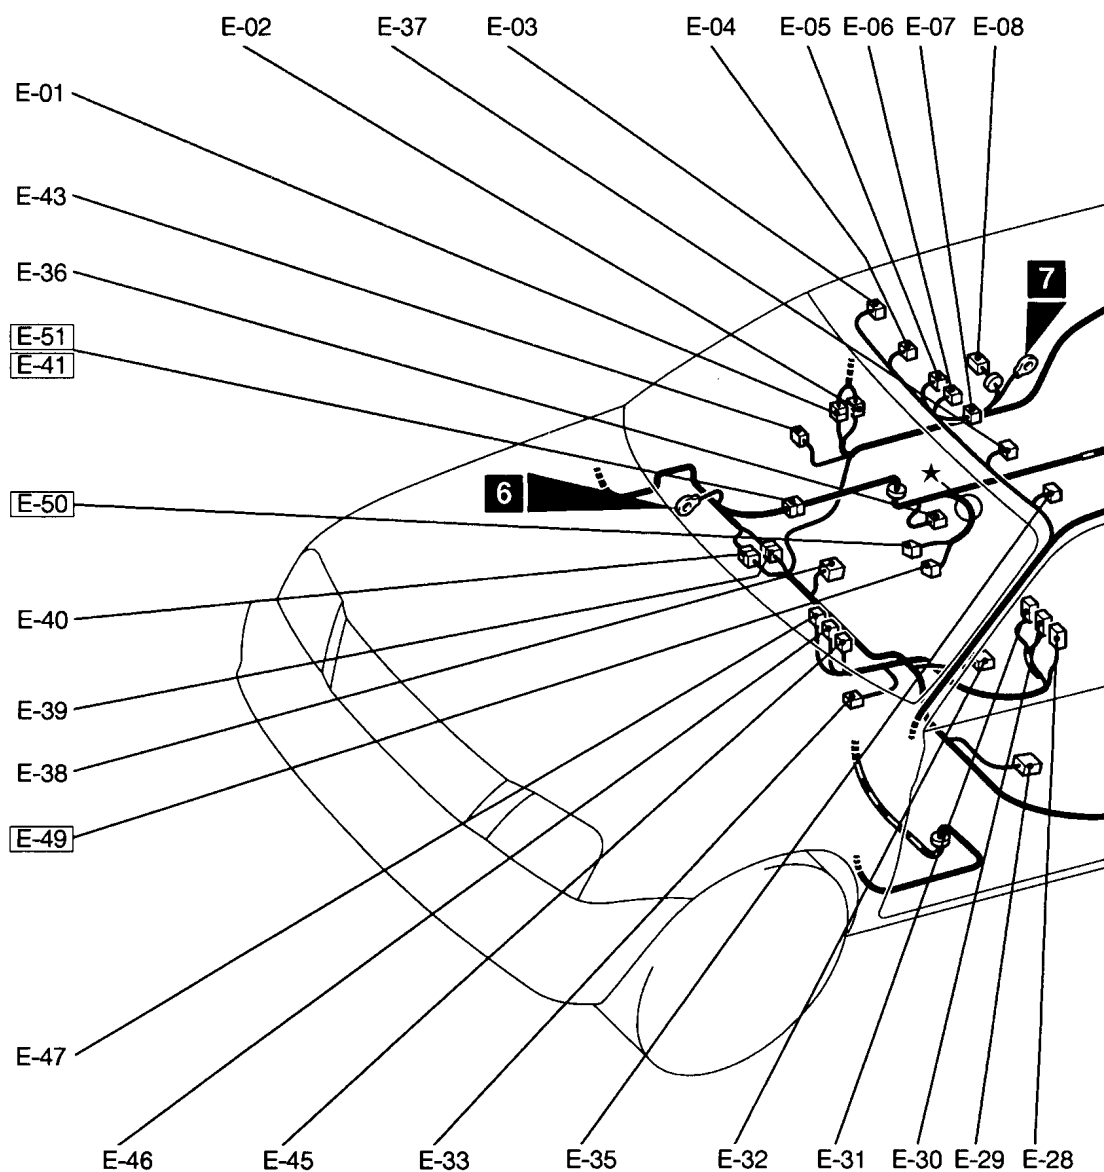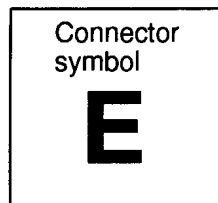

E-01 (5)	Floor wiring harness and rear door wiring harness (RH) combination	E-14 (6-B)	Rear combination lamp (RH)
E-02 (6)	Floor wiring harness and rear door wiring harness (RH) combination	E-15 (2)	Luggage compartment lamp
E-03 (2)	No connection	E-16 (9)	Roof wiring harness and tailgate wiring harness combination
E-04 (10)	Sunroof-ECU	E-17 (1)	Roof wiring harness and tailgate wiring harness combination
E-05 (6)	Sunroof switch	E-18 (2-BR)	Rear fog lamp (RH)
E-06 (4)	Clock	E-19 (2-BR)	Rear fog lamp (LH)
E-07 (2)	Map lamp <Vehicles without sunroof>	E-20 (6-B)	Rear combination lamp (LH)
E-08 (1-B)	Rear door switch (RH)	E-21 (1-B)	Rear door switch (LH)
E-09 (2-GR)	Room lamp <Vehicles without sunroof>	E-22 (2)	Fuel pump
E-10 (1)	Accessory socket (1)	E-23 (2-B)	Wheel speed sensor (rear: LH) <ABS>
E-11 (1-B)	Accessory socket (1)	E-24 (3)	Fuel gauge unit
E-12 (2-GR)	Room lamp <Vehicles with sunroof>	E-25 (5)	Floor wiring harness and rear door wiring harness (LH) combination
E-13 (2)	Rear washer motor		

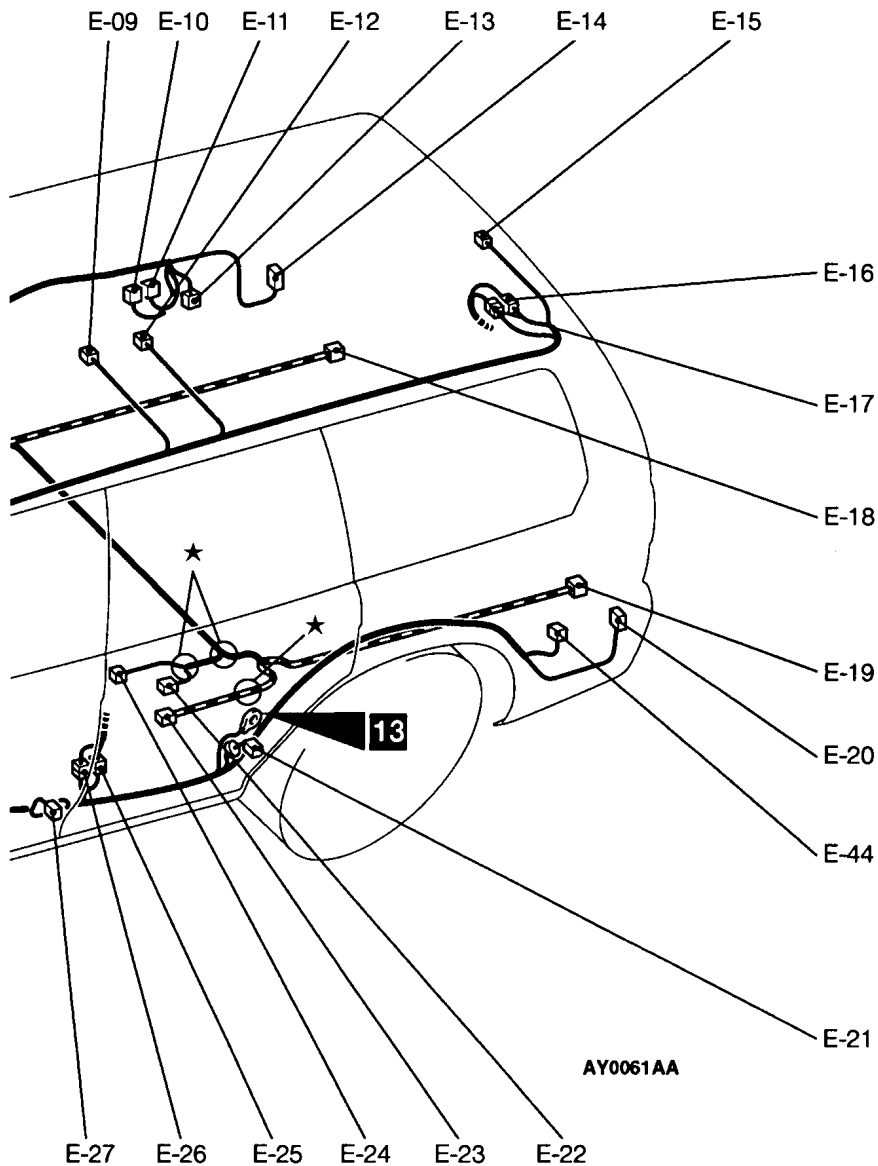

Connector colour code
 B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white

- E-26 (6) Floor wiring harness and rear door wiring harness (LH) combination
- E-27 (2) Front door switch (LH)
- E-28 (4) Rear fan motor assembly and resistor
- E-29 (3-B) Front seat assembly (LH)
- E-30 (6) Rear heater switch
- E-31 (2) Rear heater control panel illumination lamp
- E-32 (1-B) Parking brake switch
- E-33 (9) Heated seat switch
- E-35 (2) No connection
- E-36 (2-B) Wheel speed sensor (rear: RH) <ABS>
- E-37 (2) Sunroof motor
- E-38 (3-B) Front seat assembly (RH)
- E-39 (22) Body wiring harness and floor wiring harness combination



- E-40 (19) Body wiring harness and floor wiring harness combination
- E-41 (20) Body wiring harness and frame wiring harness combination <Petrol>
- E-43 (2) Front door switch (RH)
- E-44 (6-B) Keyless entry receiver-ECU
- E-45 (1) Accessory socket (2)
- E-46 (1) Accessory socket (2)
- E-47 (6-B) Motor antenna switch
- E-49 (4-B) Left bank oxygen sensor (rear)
- E-50 (4-GR) Right bank oxygen sensor (rear)
- E-51 (16) Body wiring harness and frame wiring harness combination <Diesel>

NOTE


Connector numbers enclosed by a frame are newly added or changed.

FLOOR AND ROOF

R.H. drive vehicles

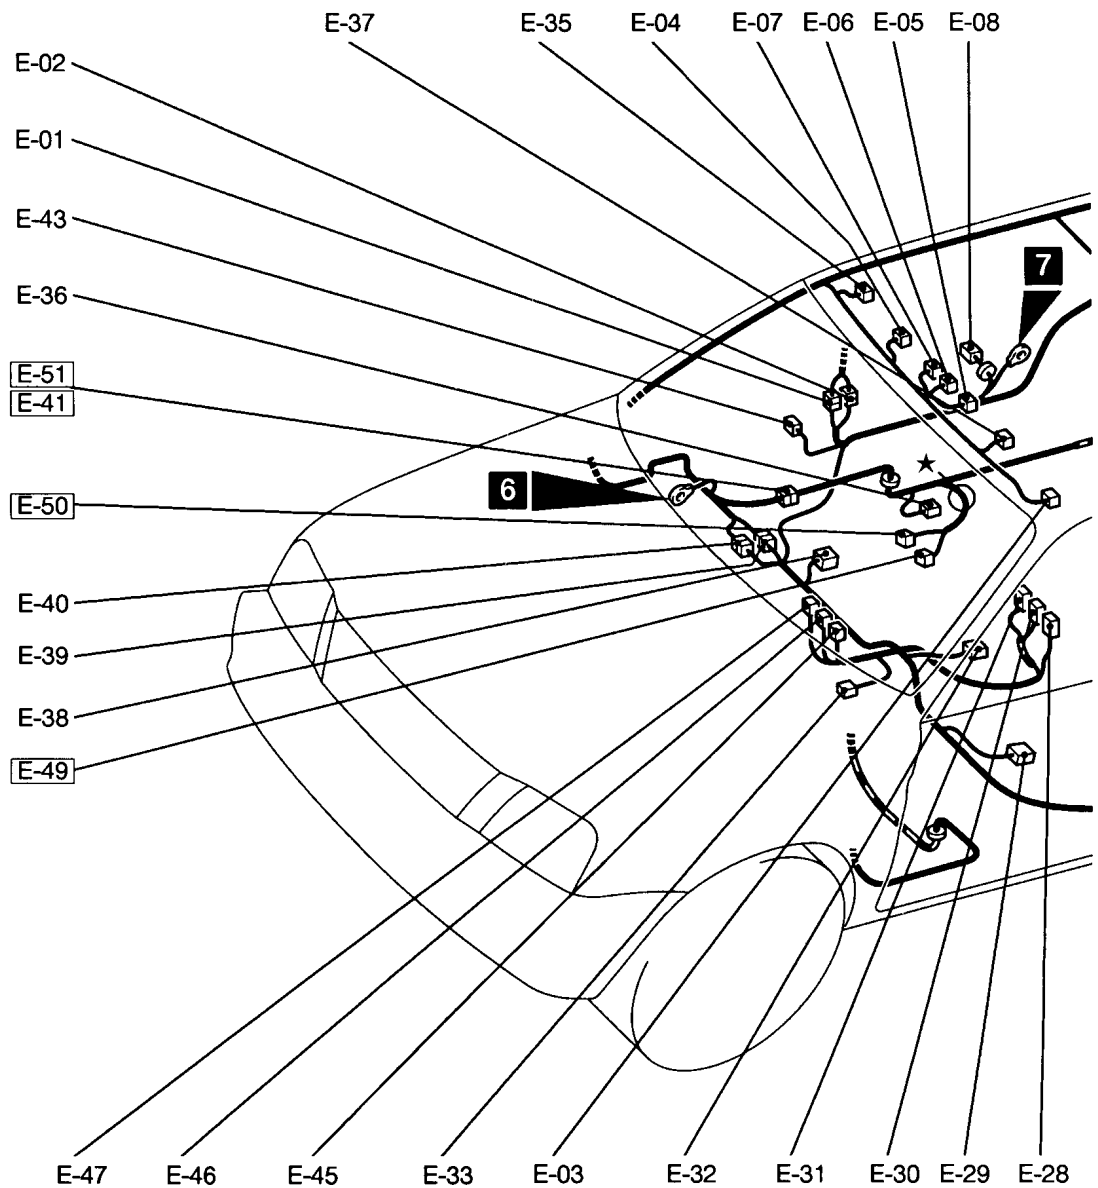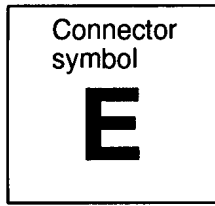

E-01 (5)	Floor wiring harness and rear door wiring harness (RH) combination	E-14 (6-B)	Rear combination lamp (RH)
E-02 (6)	Floor wiring harness and rear door wiring harness (RH) combination	E-15 (2)	Luggage compartment lamp
E-03 (2)	No connection	E-16 (9)	Roof wiring harness and tailgate wiring harness combination
E-04 (10)	Sunroof-ECU	E-17 (1)	Roof wiring harness and tailgate wiring harness combination
E-05 (6)	Sunroof switch	E-18 (2-BR)	Rear fog lamp (RH)
E-06 (4)	Clock	E-19 (2-BR)	Rear fog lamp (LH)
E-07 (2)	Map lamp <Vehicles without sunroof>	E-20 (6-B)	Rear combination lamp (LH)
E-08 (1-B)	Rear door switch (RH)	E-21 (1-B)	Rear door switch (LH)
E-09 (2-GR)	Room lamp <Vehicles without sunroof>	E-22 (2)	Fuel pump
E-10 (1)	Accessory socket (1)	E-23 (2-B)	Wheel speed sensor (rear: LH) <ABS>
E-11 (1-B)	Accessory socket (1)	E-24 (3)	Fuel gauge unit
E-12 (2-GR)	Room lamp <Vehicles with sunroof>	E-25 (5)	Floor wiring harness and rear door wiring harness (LH) combination
E-13 (2)	Rear washer motor		

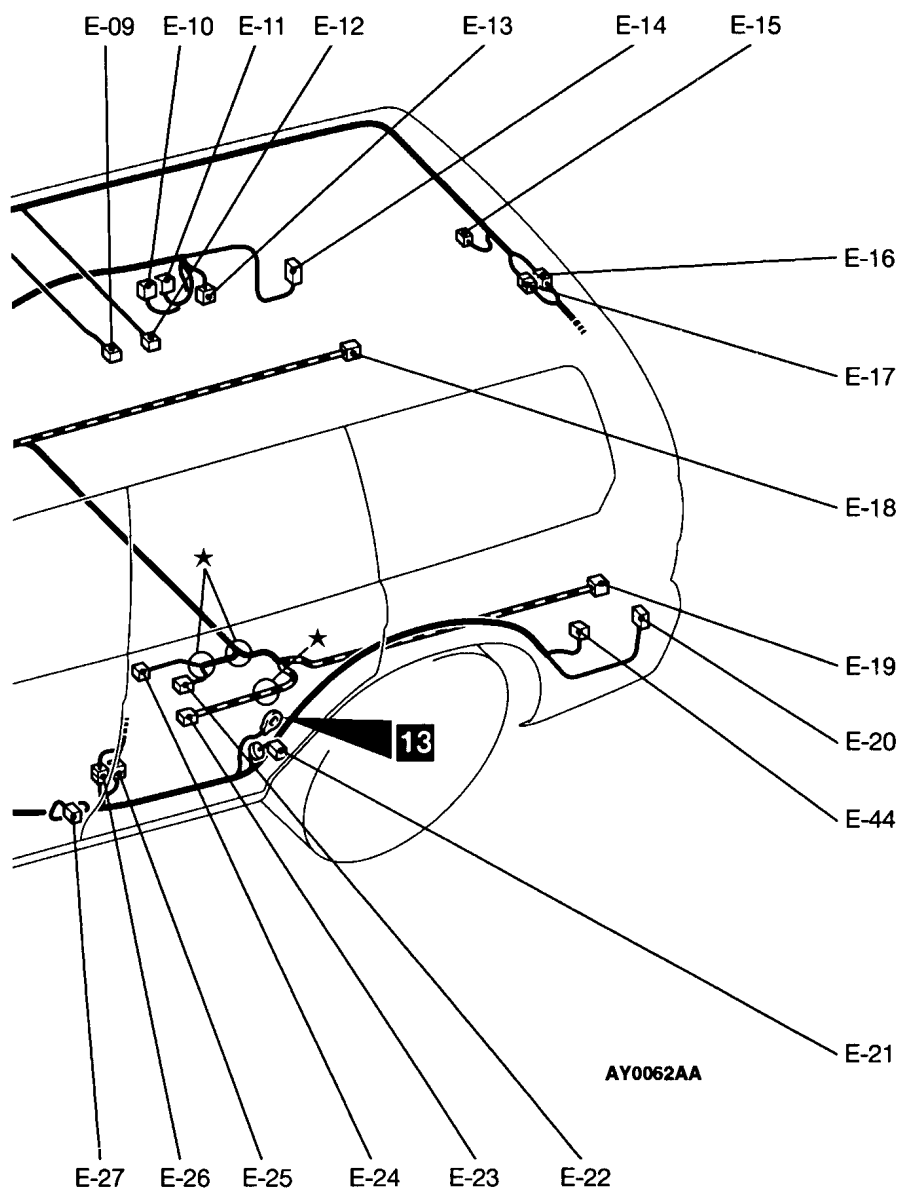

Connector colour code
 B: Black
 Y: Yellow
 L: Blue
 G: Green
 R: Red
 BR: Brown
 V: Violet
 O: Orange
 GR: Gray
 None: Milk white

E-26 (6) Floor wiring harness and rear door wiring harness (LH) combination
 E-27 (2) Front door switch (LH)
 E-28 (4) Rear fan motor assembly and resistor
 E-29 (3-B) Front seat assembly (LH)
 E-30 (6) Rear heater switch
 E-31 (2) Rear heater control panel illumination lamp
 E-32 (1-B) Parking brake switch
 E-33 (9) Heated seat switch
 E-35 (2) No connection
 E-36 (2-B) Wheel speed sensor (rear: RH) <ABS>
 E-37 (2) Sunroof motor
 E-38 (3-B) Front seat assembly (RH)
 E-39 (22) Body wiring harness and floor wiring harness combination

E-40 (19) Body wiring harness and floor wiring harness combination
 E-41 (20) Body wiring harness and frame wiring harness combination <Petrol>
 E-43 (2) Front door switch (RH)
 E-44 (6-B) Keyless entry receiver-ECU
 E-45 (1) Accessory socket (2)
 E-46 (1) Accessory socket (2)
 E-47 (6-B) Motor antenna switch
 E-49 (4-B) Left bank oxygen sensor (rear)
 E-50 (4-GR) Right bank oxygen sensor (rear)
 E-51 (16) Body wiring harness and frame wiring harness combination <Diesel>

NOTE

Connector numbers enclosed by a frame E-41 are newly added or changed.