


Airbag systems for LHD vehicles , (L0L)

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

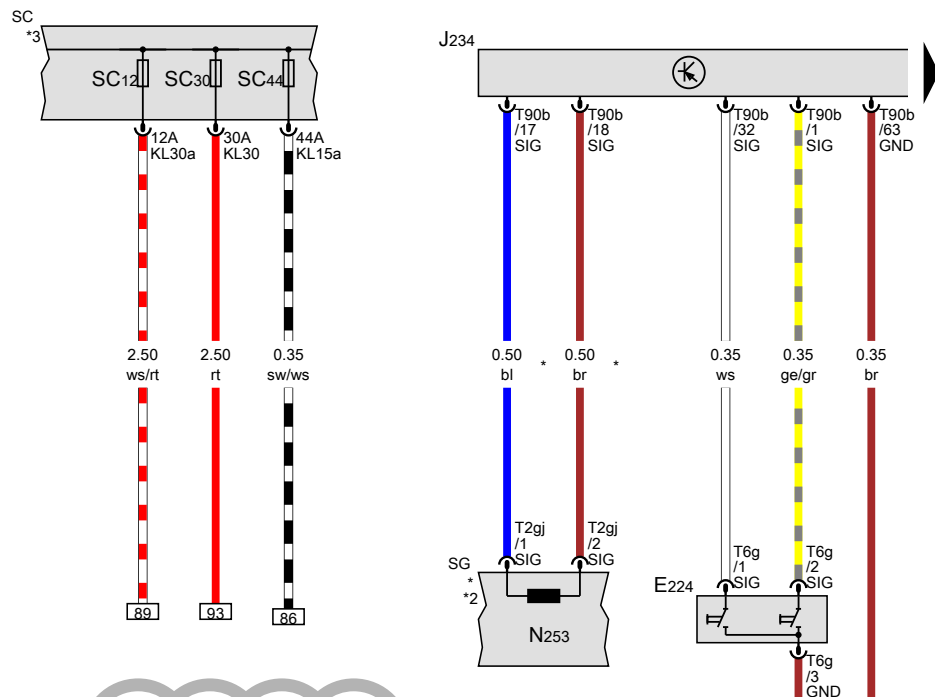

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Key operated switch to deactivate airbag on front passenger side, Airbag control unit, Fuse holder C, Fuse holder G

- E224 Key operated switch to deactivate airbag on front passenger side
- J234 Airbag control unit
- N253 Battery isolation igniter
- SC Fuse holder C
- SC12 Fuse 12 on fuse holder C
- SC30 Fuse 30 on fuse holder C
- SC44 Fuse 44 on fuse holder C
- SG Fuse holder G
- T2gj 2-pin connector, yellow
- T6g 6-pin connector, yellow
- T90b 90-pin connector, yellow

312 Earth connection 2, in airbag wiring harness

- * For models with battery in luggage compartment
- *2 see applicable current flow diagram for fuses in luggage compartment
- *3 see applicable current flow diagram for fuses in interior

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

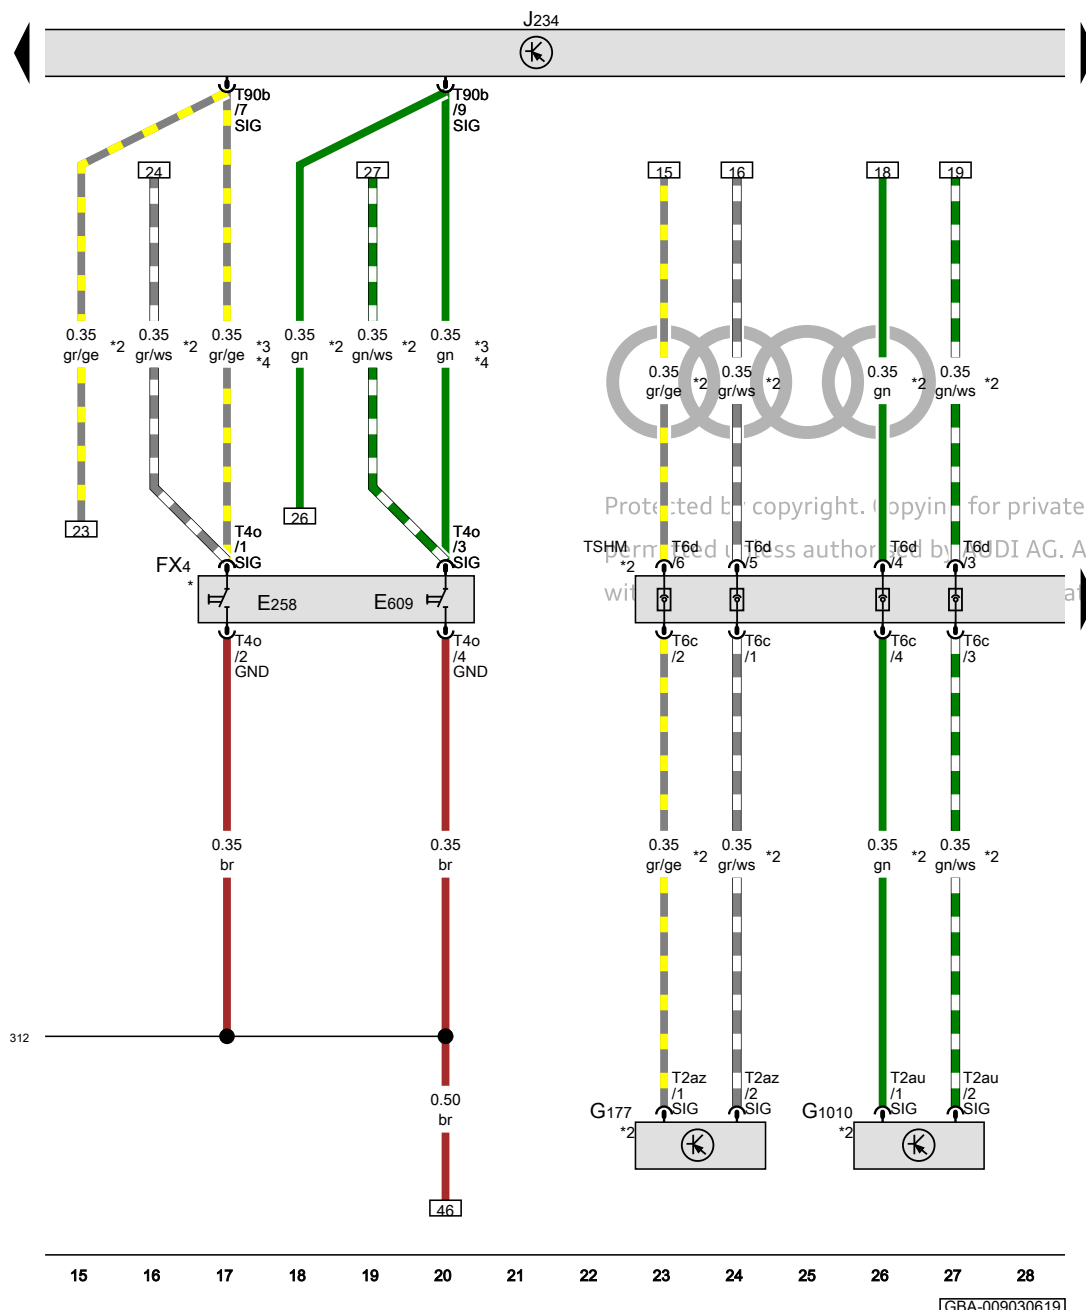


Twin belt buckle, Rear seat occupied sensor on driver side,
Rear seat occupied sensor, centre, Airbag control unit

- E258 Rear belt switch, driver side
- E609 Rear centre belt switch
- FX4 Twin belt buckle
- G177 Rear seat occupied sensor on driver side
- G1010 Rear seat occupied sensor, centre
- J234 Airbag control unit
- T2au 2-pin connector, black
- T2az 2-pin connector, black
- T4o 4-pin connector, black
- T6c 6-pin connector, black
- T6d 6-pin connector, black
- T90b 90-pin connector, yellow
- TSHM Coupling point for centre rear seat

312 Earth connection 2, in airbag wiring harness

- * Pre-wired component
- *2 For models with seat occupied recognition
- *3 According to equipment
- *4 Up to July 2019

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorized by AUDI AG. AUDI AG does not guarantee or accept any liability with regard to the content of this document. Copyright by AUDI AG.

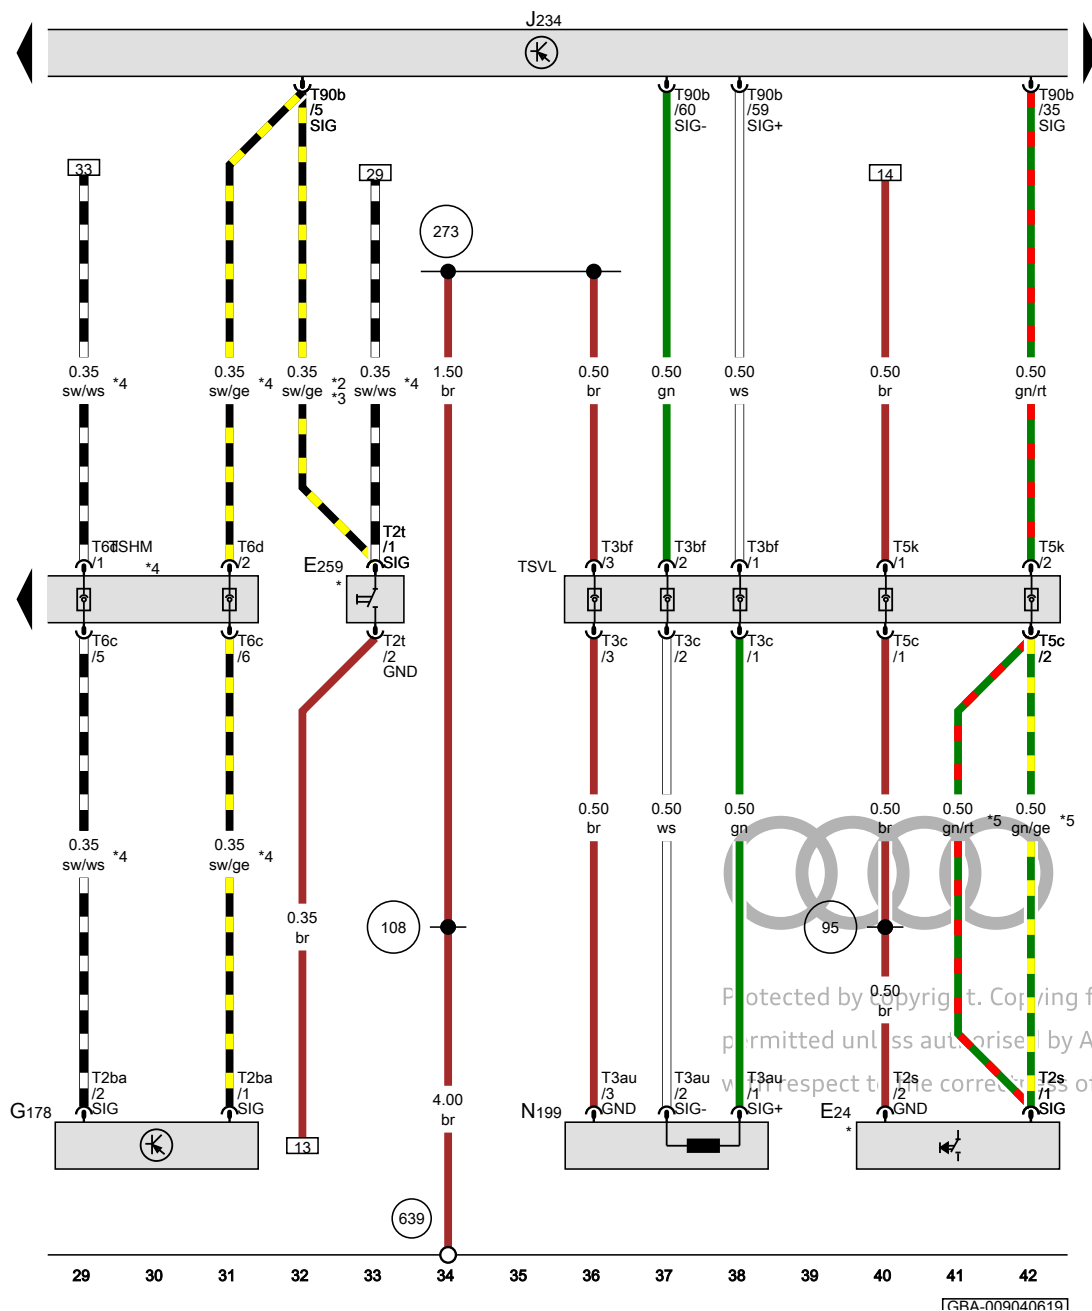

Driver side belt switch, Rear belt switch, passenger side, Rear seat occupied sensor on passenger side, Airbag control unit, Side airbag igniter on driver side


- E24 Driver side belt switch
- E259 Rear belt switch, passenger side
- G178 Rear seat occupied sensor on passenger side
- J234 Airbag control unit
- N199 Side airbag igniter on driver side
- T2ba 2-pin connector, black
- T2s 2-pin connector, black
- T2t 2-pin connector, black
- T3au 3-pin connector, yellow
- T3bf 3-pin connector, yellow
- T3c 3-pin connector, yellow
- T5c 5-pin connector, black
- T5k 5-pin connector, black
- T6c 6-pin connector, black
- T6d 6-pin connector, black
- T90b 90-pin connector, yellow
- TSHM Coupling point for centre rear seat
- TSVL Coupling point for front left seat

- 95 Earth connection 1, in seat adjustment wiring harness
- 108 Earth connection 2, in front left wiring harness
- 273 Earth connection 5, in front wiring harness
- 639 Earth point, left A-pillar
- * Pre-wired component
- *2 According to equipment
- *3 Up to July 2019
- *4 For models with seat occupied recognition
- *5 Wiring colour depends on equipment

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Protected by Copyright. Copying for private commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

TSBA-0090406191

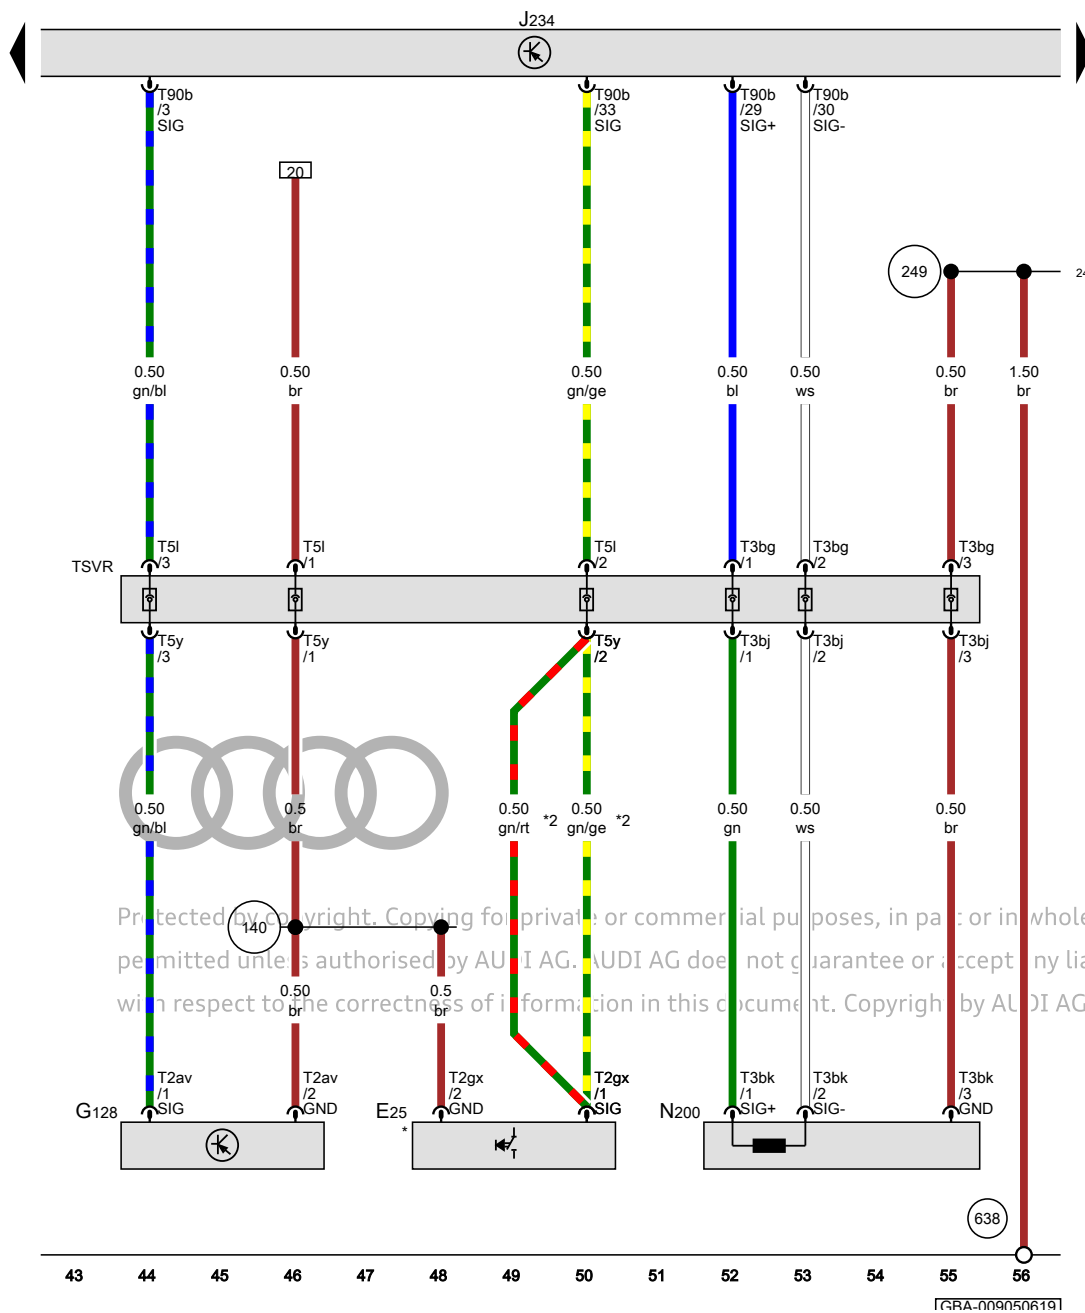

Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit, Side airbag igniter on front passenger side

- E25 Front passenger side belt switch
- G128 Seat occupied sensor on front passenger side
- J234 Airbag control unit
- N200 Side airbag igniter on front passenger side
- T2av 2-pin connector, white
- T2gx 2-pin connector, black
- T3bg 3-pin connector, yellow
- T3bj 3-pin connector, yellow
- T3bk 3-pin connector, yellow
- T5l 5-pin connector, black
- T5y 5-pin connector, black
- T90b 90-pin connector, yellow
- TSVR Coupling point for front right seat


- 140 Earth connection 2, in seat adjustment wiring harness
- 249 Earth connection 2, in interior wiring harness
- 638 Earth point, on right A-pillar

- * Pre-wired component
- *2 Wiring colour depends on equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

TSBA-0090506191

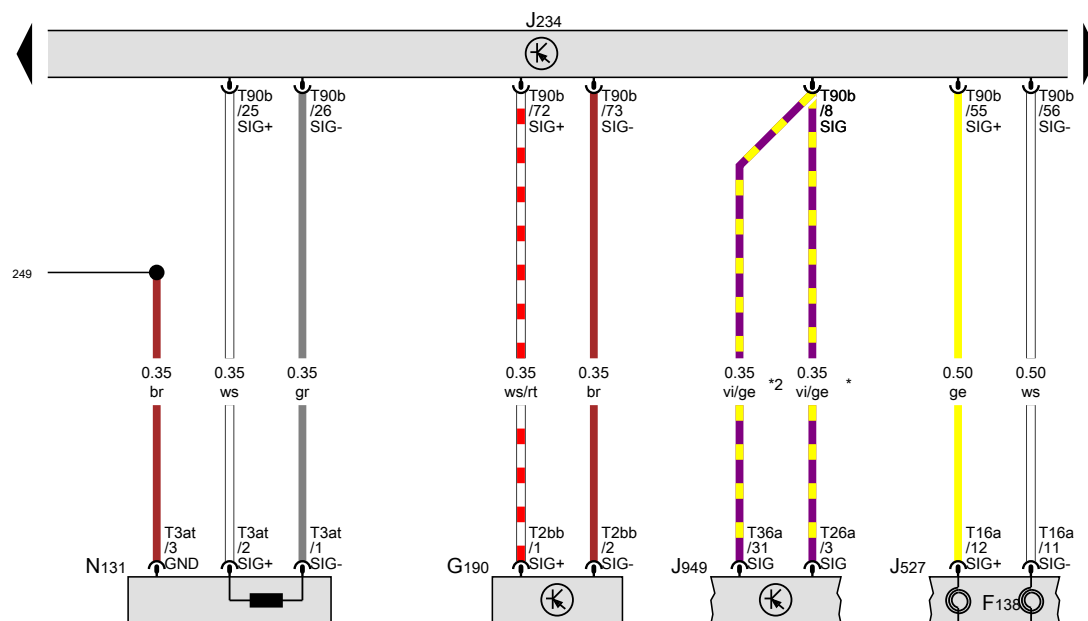

Crash sensor for front airbag, Airbag control unit, Steering column electronics control unit, Emergency call module control unit and communication unit, Airbag igniter 1 on front passenger side


- F138 Airbag coil connector and return ring with slip ring
- G190 Crash sensor for front airbag
- J234 Airbag control unit
- J527 Steering column electronics control unit
- J949 Emergency call module control unit and communication unit
- N95 Airbag igniter on driver side
- N131 Airbag igniter 1 on front passenger side
- T2bb 2-pin connector, yellow
- T2gy 2-pin connector, black
- T3at 3-pin connector, yellow
- T12e 12-pin connector, white
- T16a 16-pin connector, black
- T26a 26-pin connector, black
- T36a 36-pin connector, black
- T90b 90-pin connector, yellow

249 Earth connection 2, in interior wiring harness


- * Up to July 2019
- *2 From July 2019



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

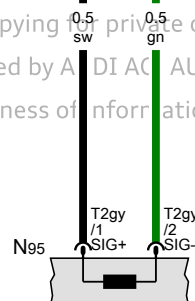

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

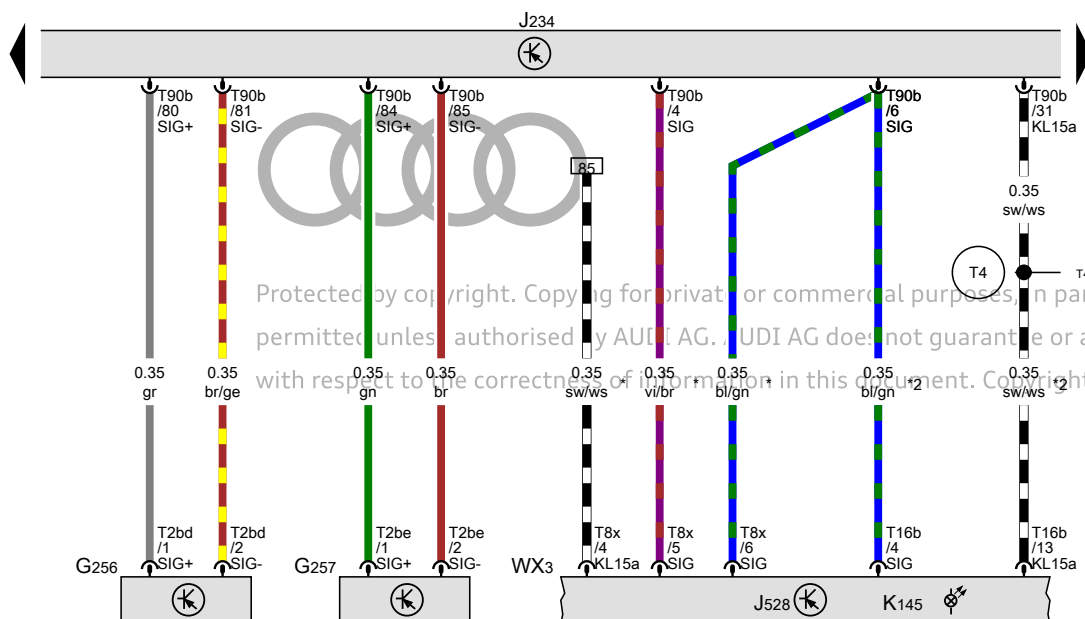


Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Front roof module

- G256 Rear side airbag crash sensor on driver side
- G257 Rear side airbag crash sensor on passenger side
- J234 Airbag control unit
- J528 Roof electronics control unit
- K145 Warning lamp for airbag deactivated on front passenger side
- T2bd 2-pin connector, yellow
- T2be 2-pin connector, yellow
- T8x 8-pin connector, black
- T16b 16-pin connector, brown
- T90b 90-pin connector, yellow
- WX3 Front roof module

T4 Connection (15), in airbag wiring harness

- * For models with no background lighting
- *2 For models with background lighting

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

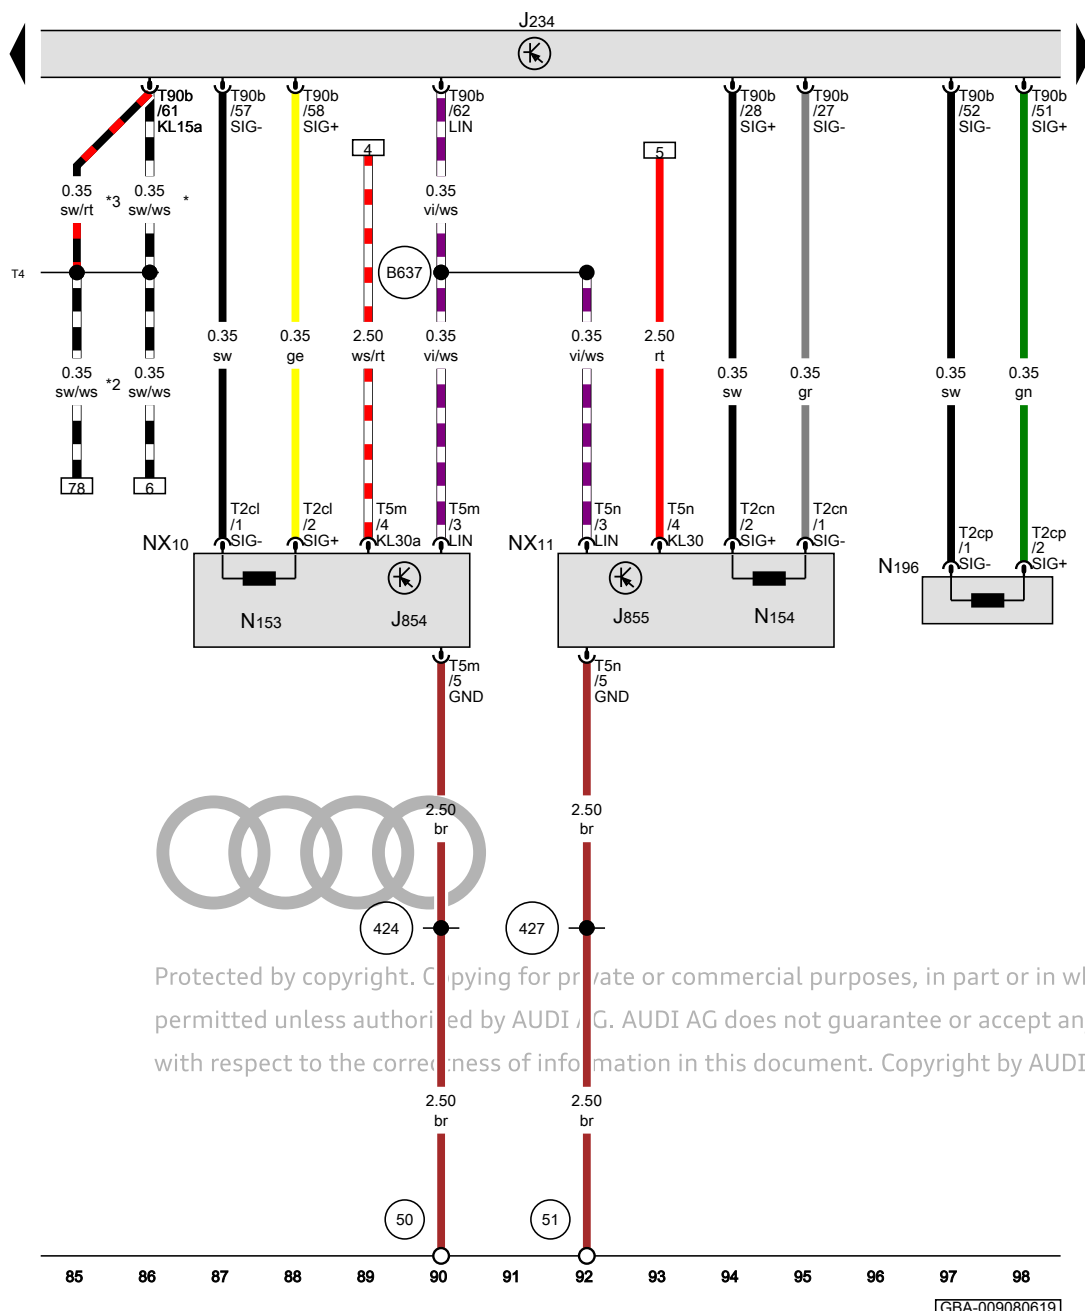


Airbag control unit, Front left seat belt, Front right seat belt, Rear belt tensioner igniter on driver side

- J234 Airbag control unit
- J854 Control unit for front left belt tensioner
- J855 Control unit for front right belt tensioner
- NX10 Front left seat belt
- NX11 Front right seat belt
- N153 Driver seat belt tensioner igniter 1
- N154 Front passenger seat belt tensioner igniter 1
- N196 Rear belt tensioner igniter on driver side
- T2cl 2-pin connector, yellow
- T2cn 2-pin connector, yellow
- T2cp 2-pin connector, yellow
- T5m 5-pin connector, colourless
- T5n 5-pin connector, colourless
- T90b 90-pin connector, yellow

- 50 Earth point, on left in luggage compartment
- 51 Earth point, on right in luggage compartment
- 424 Earth connection 2, in left rear end wiring harness
- 427 Earth connection 3, in right rear end wiring harness
- B637 Connection 1 (airbag), in main wiring harness
- T4 Connection (15), in airbag wiring harness

- * Up to July 2019
- *2 For models with no background lighting
- *3 From July 2019

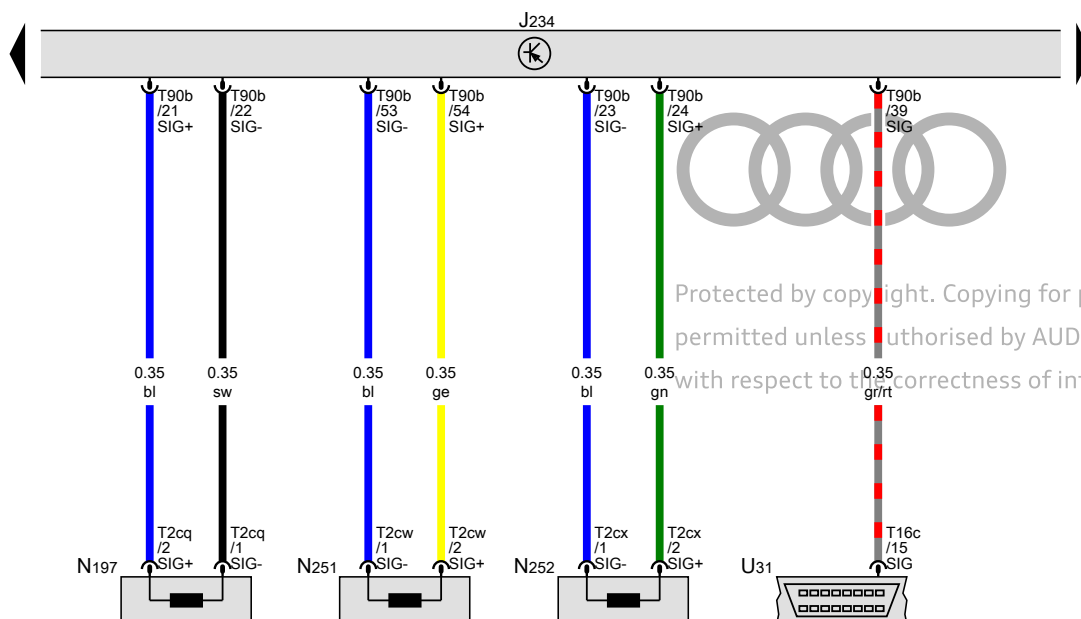


Airbag control unit, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Diagnostic connection

- J234 Airbag control unit
- N197 Rear belt tensioner igniter on passenger side
- N251 Driver side curtain airbag igniter
- N252 Front passenger side curtain airbag igniter
- T2cq 2-pin connector, yellow
- T2cw 2-pin connector, yellow
- T2cx 2-pin connector, yellow
- T16c 16-pin connector, black
- T90b 90-pin connector, yellow
- U31 Diagnostic connection

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

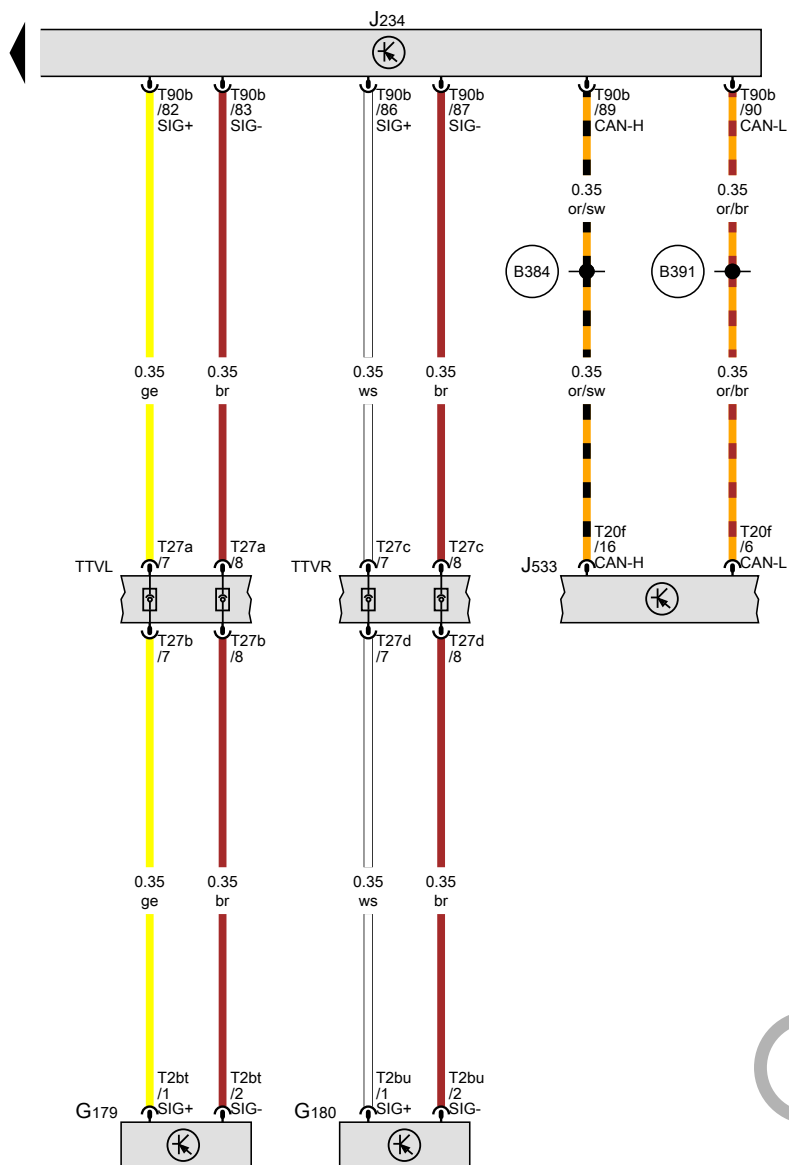

Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit, Data bus diagnostic interface

- G179 Side airbag crash sensor on driver side
- G180 Side airbag crash sensor on front passenger side
- J234 Airbag control unit
- J533 Data bus diagnostic interface
- T2bt 2-pin connector, yellow
- T2bu 2-pin connector, yellow
- T20f 20-pin connector, red
- T27a 27-pin connector, black
- T27b 27-pin connector, black
- T27c 27-pin connector, black
- T27d 27-pin connector, black
- T90b 90-pin connector, yellow
- TTVL Coupling point for front left door
- TTVR Coupling point for front right door
- B384 Connection 2 (powertrain CAN bus, high), in main wiring harness
- B391 Connection 2 (powertrain CAN bus, low), in main wiring harness



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness or completeness of the information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink