

ELECTRICAL

**Wiring Systems and Power Management - Component Locator - Luggage Compartment/Rear of Vehicle Component Views -
Escalade, Suburban, Tahoe, Yukon**

LUGGAGE COMPARTMENT/REAR OF VEHICLE COMPONENT VIEWS

REAR OF VEHICLE COMPONENTS (CADILLAC)

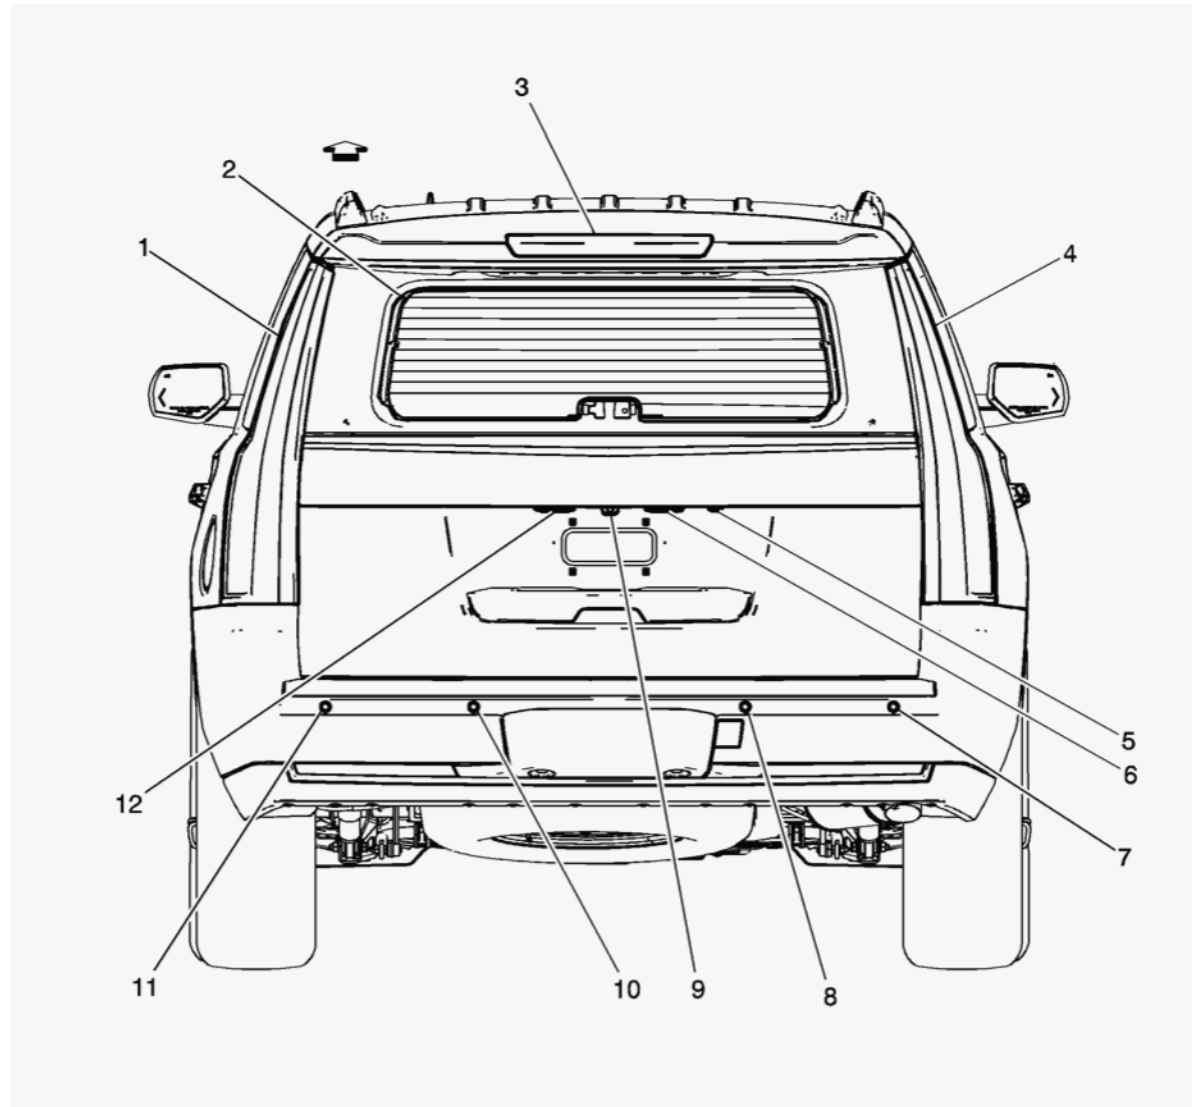


Fig. 1: Rear of Vehicle Components (Cadillac)

Courtesy of GENERAL MOTORS COMPANY

Items

- 1: E42L Tail Lamp Assembly - Left **E42L Tail Lamp Assembly - Left (Z88)**
- 2: E18 Rear Defogger Grid **E18 Rear Defogger Grid X1**
- 3: E6 Center High Mounted Stop Lamp **E6 Center High Mounted Stop Lamp**

cardiagn.com

Items

- 4: E42R Tail Lamp Assembly - Right [E42R Tail Lamp Assembly - Right \(Z88\)](#)
- 5: S141 Liftgate Window Unlatch Switch [S141 Liftgate Window Unlatch Switch](#)
- 6: E7R License Plate Lamp - Right [E7R License Plate Lamp - Right](#)
- 7: B78H Rear Object Sensor - Right Outer (UD5 or UD7) [B78H Rear Object Sensor - Right Outer \(UD5/UD7\)](#)
- 8: B78F Rear Object Sensor - Right Middle (UD5 or UD7) [B78F Rear Object Sensor - Right Middle \(UD5/UD7\)](#)
- 9: B87 Rearview Camera (UVC or UVH) [B87 Rearview Camera](#)
- 10: B78E Rear Object Sensor - Left Middle (UD5 or UD7) [B78E Rear Object Sensor - Left Middle \(UD5/UD7\)](#)
- 11: B78G Rear Object Sensor - Left Outer (UD5 or UD7) [B78G Rear Object Sensor - Left Outer \(UD5/UD7\)](#)
- 12: E7L License Plate Lamp - Left [E7L License Plate Lamp - Left](#)

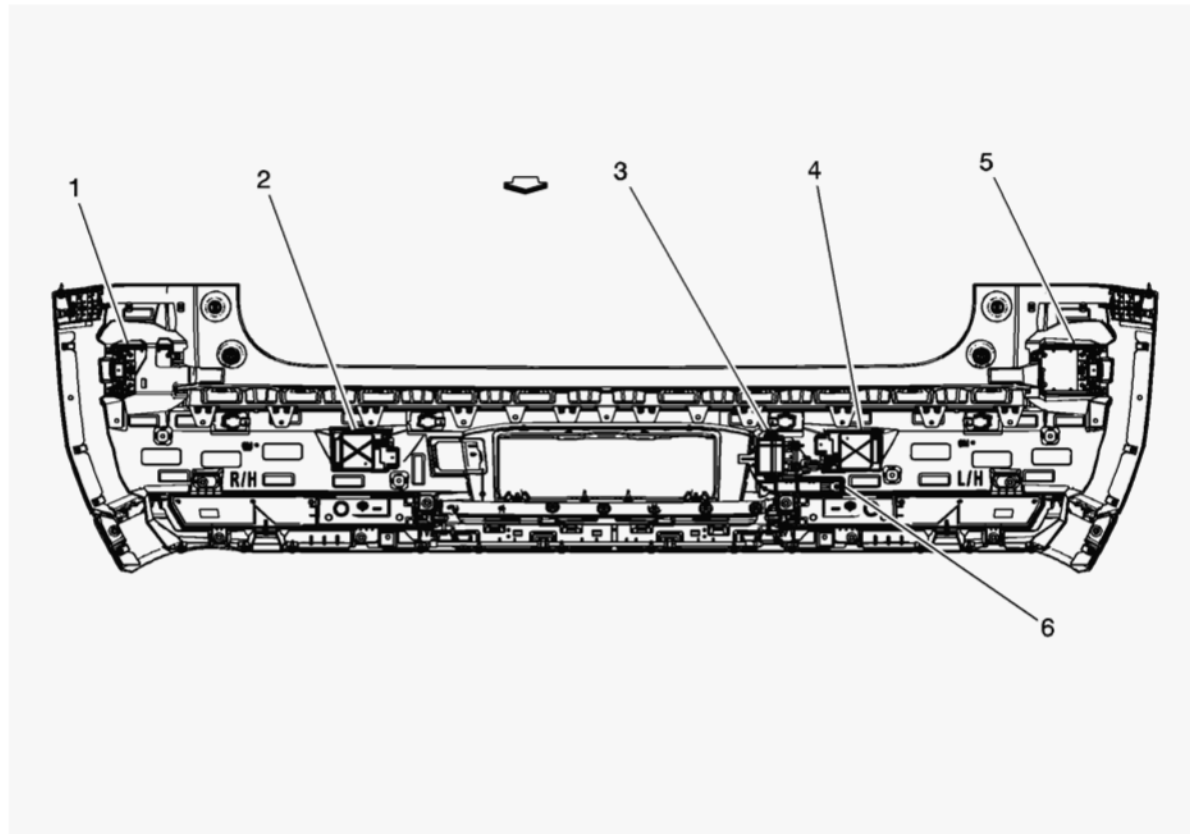
BEHIND REAR FASCIA COMPONENTS

Fig. 2: Behind Rear Fascia Components

Courtesy of GENERAL MOTORS COMPANY

Items

- 1: B218R Side Object Sensor Module - Right (UKC) **B218R Side Object Sensor Module - Right (UKC)**
- 2: B233RR Radar Sensor Module - Short Range Right Rear (UVZ) **B233RR Radar Sensor Module - Short Range Right Rear (UVZ)**
- 3: K171 Hands-Free Liftgate Sensor Control Module (TC2) **K171 Hands-Free Liftgate Sensor Control Module X2 (TC2)** **K171 Hands-Free Liftgate Sensor Control Module X3 (TC2)**
- 4: B233LR Radar Sensor Module - Short Range Left Rear (UVZ) **B233LR Radar Sensor Module - Short Range Left Rear (UVZ)**
- 5: B218L Side Object Sensor Module - Left (UKC) **B218L Side Object Sensor Module - Left (UKC)**
- 6: T10G Keyless Entry Antenna - Rear Fascia (ATH or BTM) **T10G Keyless Entry Antenna - Rear Fascia (ATH+BTM)**

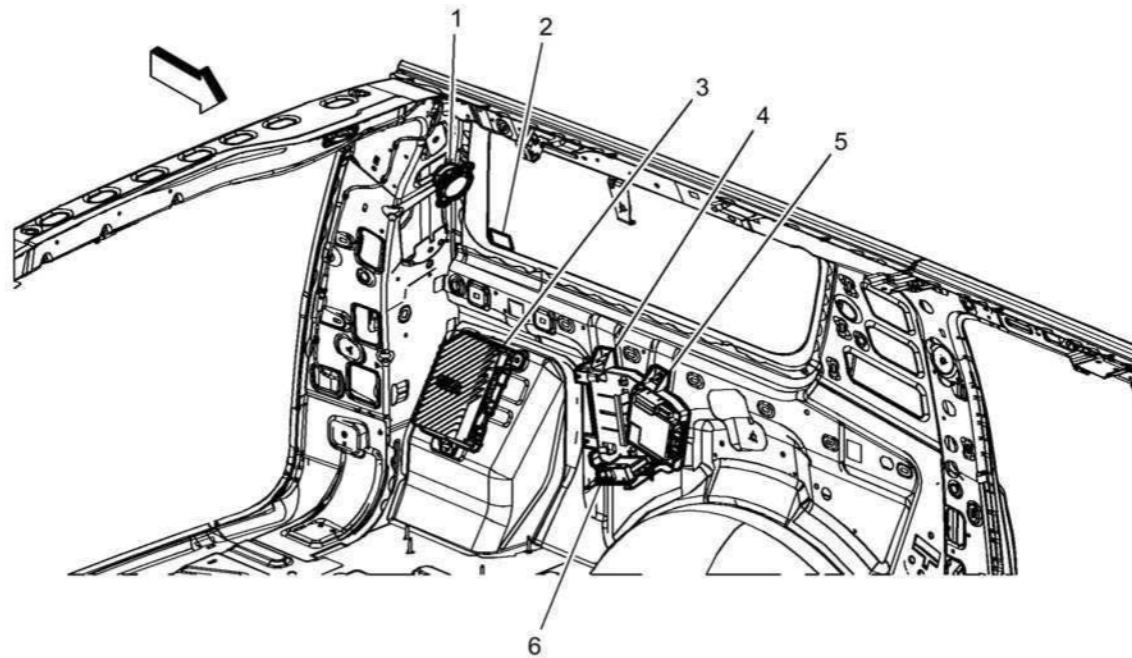
LEFT REAR CARGO AREA COMPONENTS

Fig. 3: Left Rear Cargo Area Components

Courtesy of GENERAL MOTORS COMPANY

Items

- 1: P19AN Speaker - Left Rear Trim Panel (UQA, UQH or UQS) **P19AN Speaker - Left Rear Trim Panel (UQA/UQH/UQS)**
- 2: B159L Glass Breakage Sensor - Left (UTT) **B159L Glass Breakage Sensor - Left (UTT)**
- 3: T3 Audio Amplifier (UQA, UQH or UQS) **T3 Audio Amplifier X1 (UQA/UQH/UQS)** **T3 Audio Amplifier X2 (UQA/UQH/UQS)** **T3 Audio Amplifier X3 (UQA/UQH/UQS)** **T3 Audio Amplifier X4 (UQA/UQH/UQS)**
- 4: K124 Active Safety Control Module (UGN with Z75) **K124 Active Safety Control Module X1 (UGN+Z75)** **K124 Active Safety Control Module X2 (UGN+Z75)**
- 5: K84 Keyless Entry Control Module (ATH or BTM) **K84 Keyless Entry Control Module X1 (ATH/BTM)** **K84 Keyless Entry Control Module X2 (ATH/BTM)**
- 6: K182 (UD5 or UD7)

RIGHT REAR CARGO AREA COMPONENTS

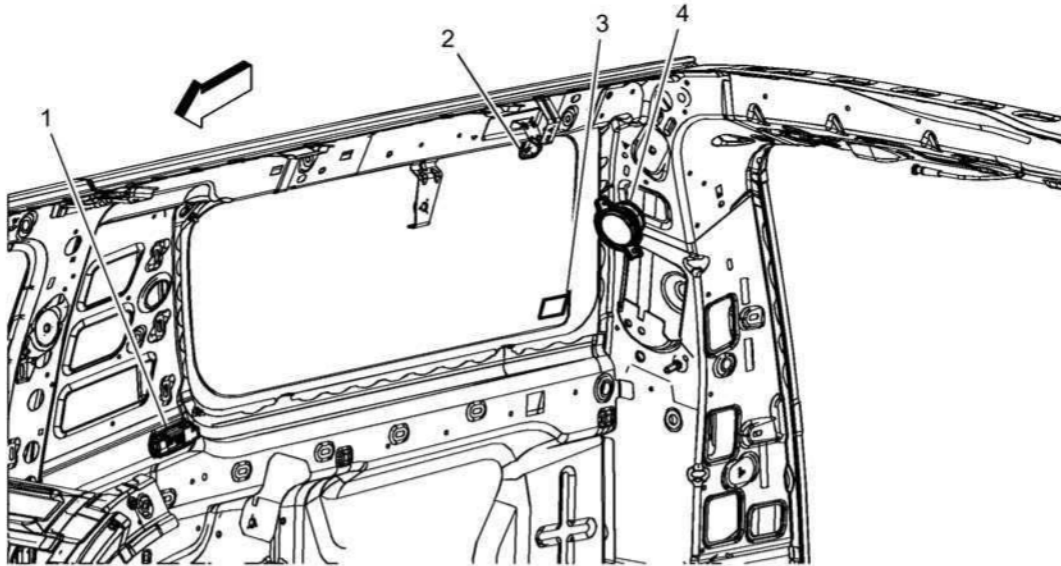


Fig. 4: Right Rear Cargo Area Components

Courtesy of GENERAL MOTORS COMPANY

Items

- 1: K84 Keyless Entry Control Module (ATH or BTM) [K84 Keyless Entry Control Module X1 \(ATH/BTM\)](#) [K84 Keyless Entry Control Module X2 \(ATH/BTM\)](#)
- 2: B159R Glass Breakage Sensor - Right (UTT) [B159R Glass Breakage Sensor - Right \(UTT\)](#)
- 3: P19AP Speaker - Right Rear Trim Panel (UQA, UQH or UQS) [P19AP Speaker - Right Rear Trim Panel \(UQA/UQH/UQS\)](#)

REAR OF VEHICLE COMPONENTS (X88)

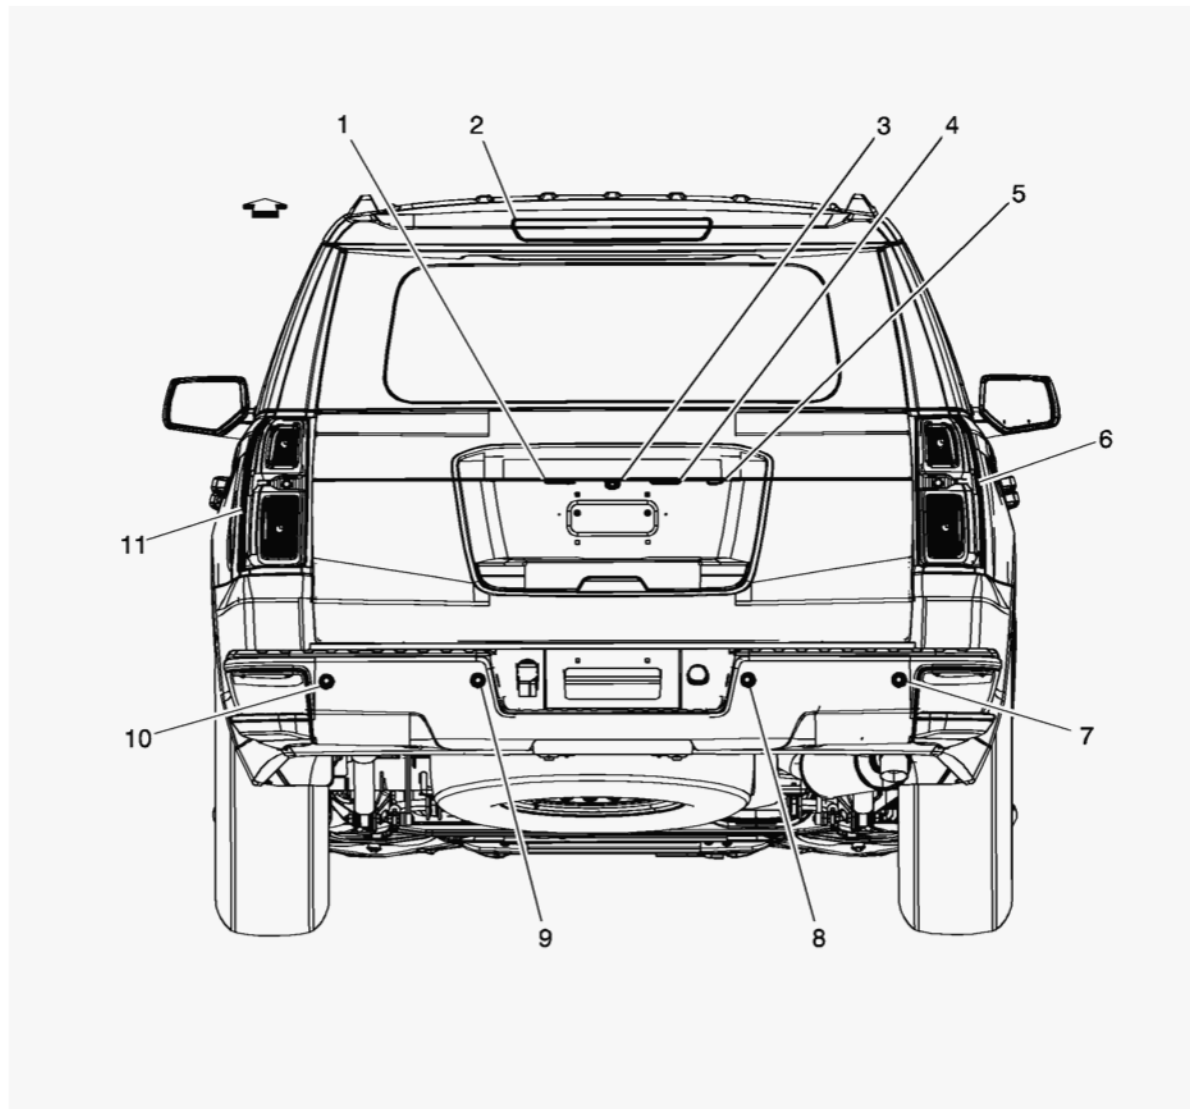


Fig. 5: Rear of Vehicle Components (X88)

Courtesy of GENERAL MOTORS COMPANY

Items

- 1: E7L License Plate Lamp - Left **E7L License Plate Lamp - Left**
- 2: E6 Center High Mounted Stop Lamp **E6 Center High Mounted Stop Lamp**
- 3: B87 Rearview Camera (UVC or UVH) **B87 Rearview Camera**

Items

- 4: E7R License Plate Lamp - Right **E7R License Plate Lamp - Right**
- 5: S46B Liftgate Unlatch Switch (TB4) **S46B Liftgate Unlatch Switch (TB4)**
- 6: E42R Tail Lamp Assembly - Right **E42R Tail Lamp Assembly - Right (Z88)**
- 7: B78H Rear Object Sensor - Right Outer (UD5 or UD7) **B78H Rear Object Sensor - Right Outer (UD5/UD7)**
- 8: B78F Rear Object Sensor - Right Middle (UD5 or UD7) **B78F Rear Object Sensor - Right Middle (UD5/UD7)**
- 9: B78E Rear Object Sensor - Left Middle (UD5 or UD7) **B78E Rear Object Sensor - Left Middle (UD5/UD7)**
- 10: B78G Rear Object Sensor - Left Outer (UD5 or UD7) **B78G Rear Object Sensor - Left Outer (UD5/UD7)**
- 11: E42L Tail Lamp Assembly - Left **E42L Tail Lamp Assembly - Left (Z88)**

REAR OF VEHICLE COMPONENTS (Z88)

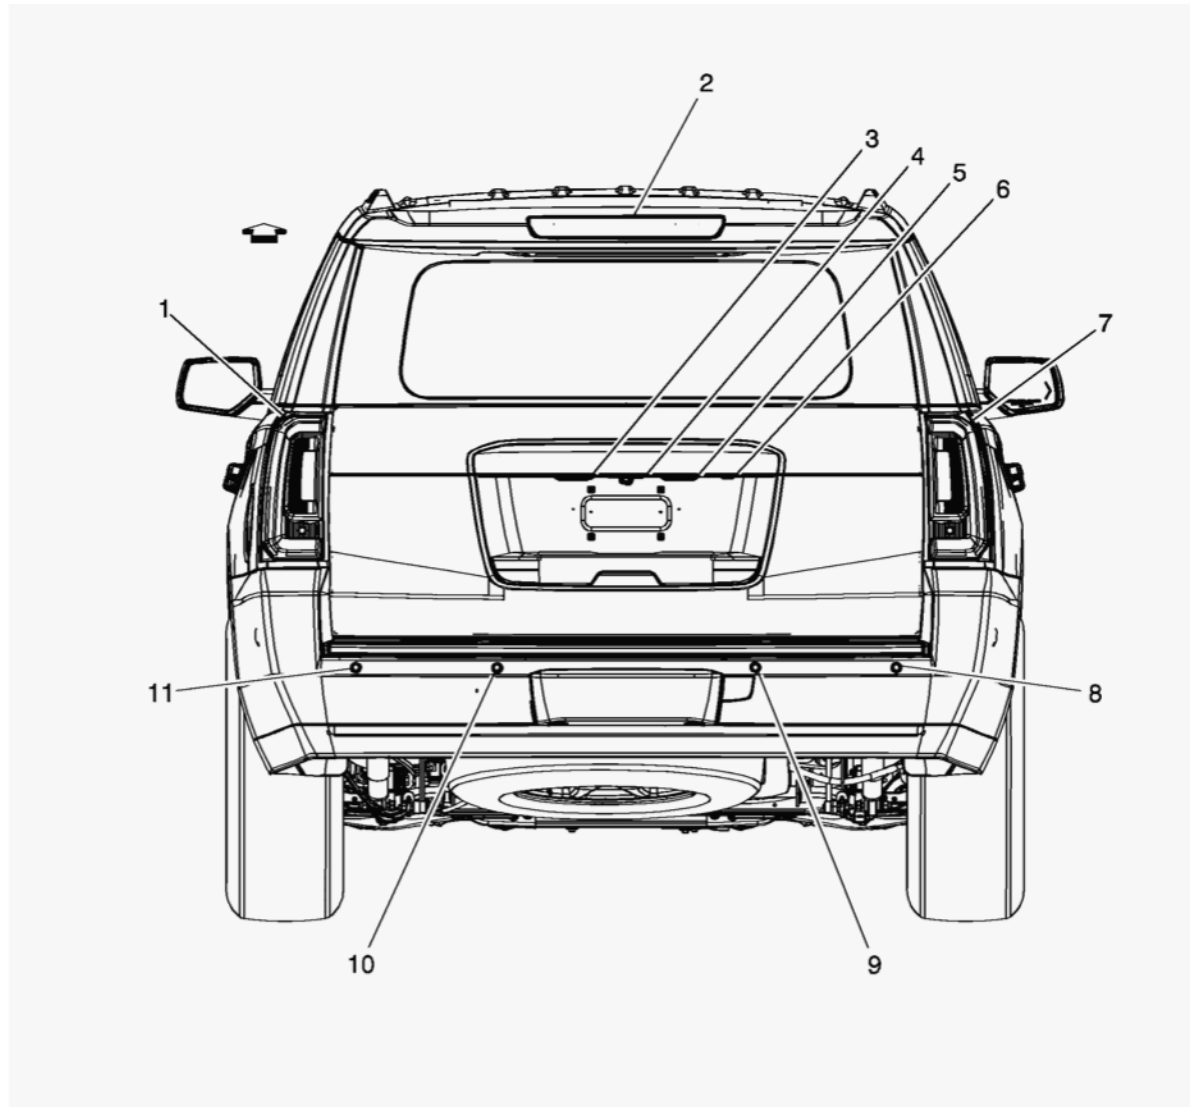


Fig. 6: Rear of Vehicle Components (Z88)

Courtesy of GENERAL MOTORS COMPANY

Items

- 1: E42L Tail Lamp Assembly - Left **E42L Tail Lamp Assembly - Left (Z88)**
- 2: E6 Center High Mounted Stop Lamp **E6 Center High Mounted Stop Lamp**
- 3: E7L License Plate Lamp - Left **E7L License Plate Lamp - Left**

Items

- 4: B87 Rearview Camera (UVC or UVH) **B87 Rearview Camera**
- 5: E7R License Plate Lamp - Right **E7R License Plate Lamp - Right**
- 6: S46B Liftgate Unlatch Switch (TB4) **S46B Liftgate Unlatch Switch (TB4)**
- 7: E42R Tail Lamp Assembly - Right **E42R Tail Lamp Assembly - Right (Z88)**
- 8: B78H Rear Object Sensor - Right Outer (UD5 or UD7) **B78H Rear Object Sensor - Right Outer (UD5/UD7)**
- 9: B78F Rear Object Sensor - Right Middle (UD5 or UD7) **B78F Rear Object Sensor - Right Middle (UD5/UD7)**
- 10: B78E Rear Object Sensor - Left Middle (UD5 or UD7) **B78E Rear Object Sensor - Left Middle (UD5/UD7)**
- 11: B78G Rear Object Sensor - Left Outer (UD5 or UD7) **B78G Rear Object Sensor - Left Outer (UD5/UD7)**

TAIL LAMP COMPONENTS (X88)

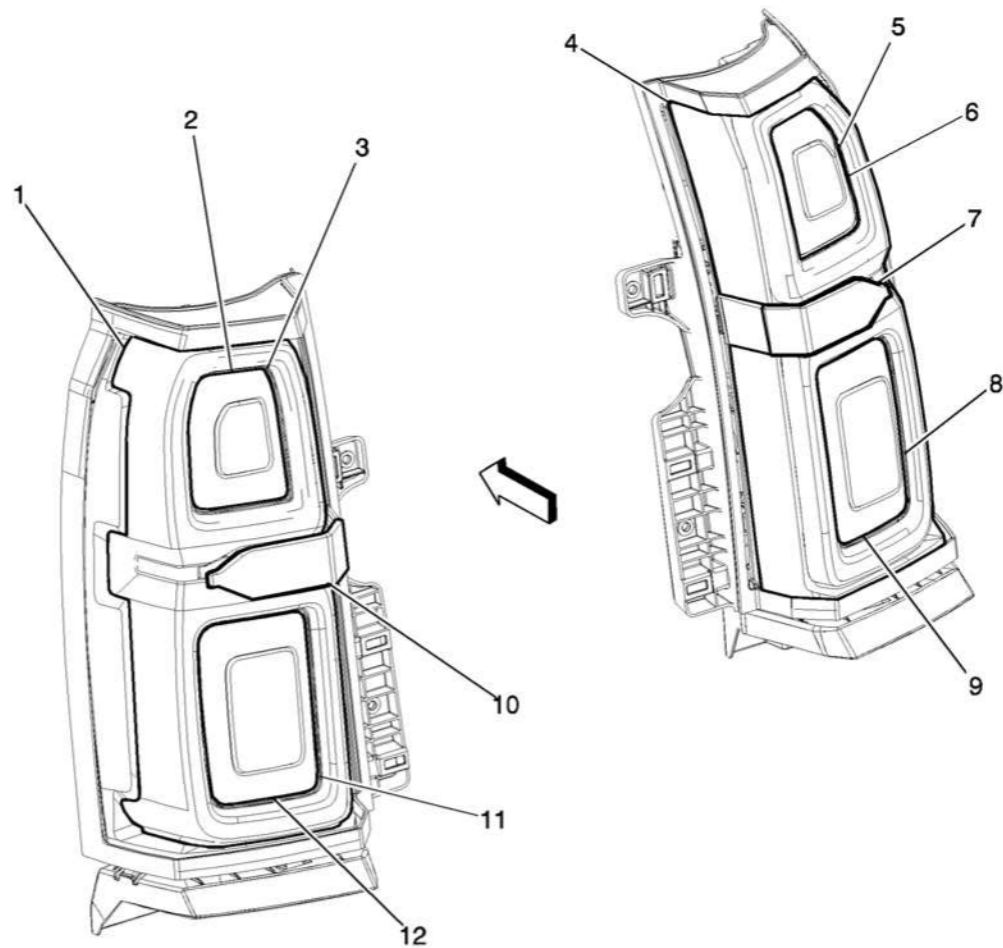


Fig. 7: Tail Lamp Components (X88)

Courtesy of GENERAL MOTORS COMPANY

Items

- 1: E5E Tail Lamp - Left
- 2: E5AS Stop/Turn Signal Lamp - Left Upper (X88 without T89)
- 3: E5L Stop Lamp - Left (Z88, Z75, or X88 with T89)

Items

- 4: E5F Tail Lamp - Right
- 5: E5AU Stop/Turn Signal Lamp - Right Upper (X88 without T89)
- 6: E5R Stop Lamp - Right (Z88, Z75, or X88 with T89)
- 7: E5B Backup Lamp - Right **E5B Backup Lamp - Right (X88 or Z88)**
- 8: E5AV Stop/Turn Signal Lamp - Right Lower (X88 without T89)
- 9: E4RR Turn Signal Lamp - Right Rear (Z88, Z75, or X88 with T89)
- 10: E5A Backup Lamp - Left **E5A Backup Lamp - Left (X88 or Z88)**
- 11: E4LR Turn Signal Lamp - Left Rear (Z88, Z75, or X88 with T89)
- 12: E5AT Stop/Turn Signal Lamp - Left Lower (X88 without T89)

TAIL LAMP COMPONENTS (Z88)

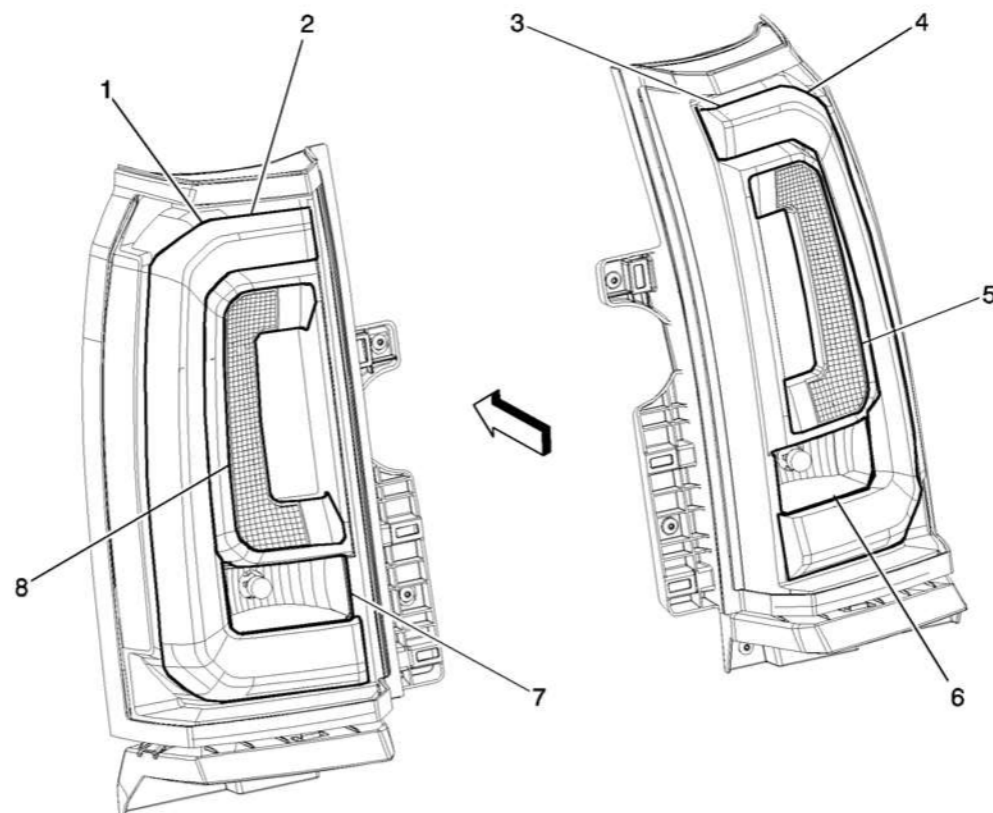


Fig. 8: Tail Lamp Components (Z88)

Courtesy of GENERAL MOTORS COMPANY

Items

- 1: E5L Stop Lamp - Left (Z88, Z75, or X88 with T89)
- 2: E5E Tail Lamp - Left
- 3: E5R Stop Lamp - Right (Z88, Z75, or X88 with T89)

Items

- 4: E5F Tail Lamp - Right
- 5: E4RR Turn Signal Lamp - Right Rear (Z88, Z75, or X88 with T89)
- 6: E5B Backup Lamp - Right **E5B Backup Lamp - Right (X88 or Z88)**
- 7: E5A Backup Lamp - Left **E5A Backup Lamp - Left (X88 or Z88)**
- 8: E4LR Turn Signal Lamp - Left Rear (Z88, Z75, or X88 with T89)

TAIL LAMP COMPONENTS (Z75)

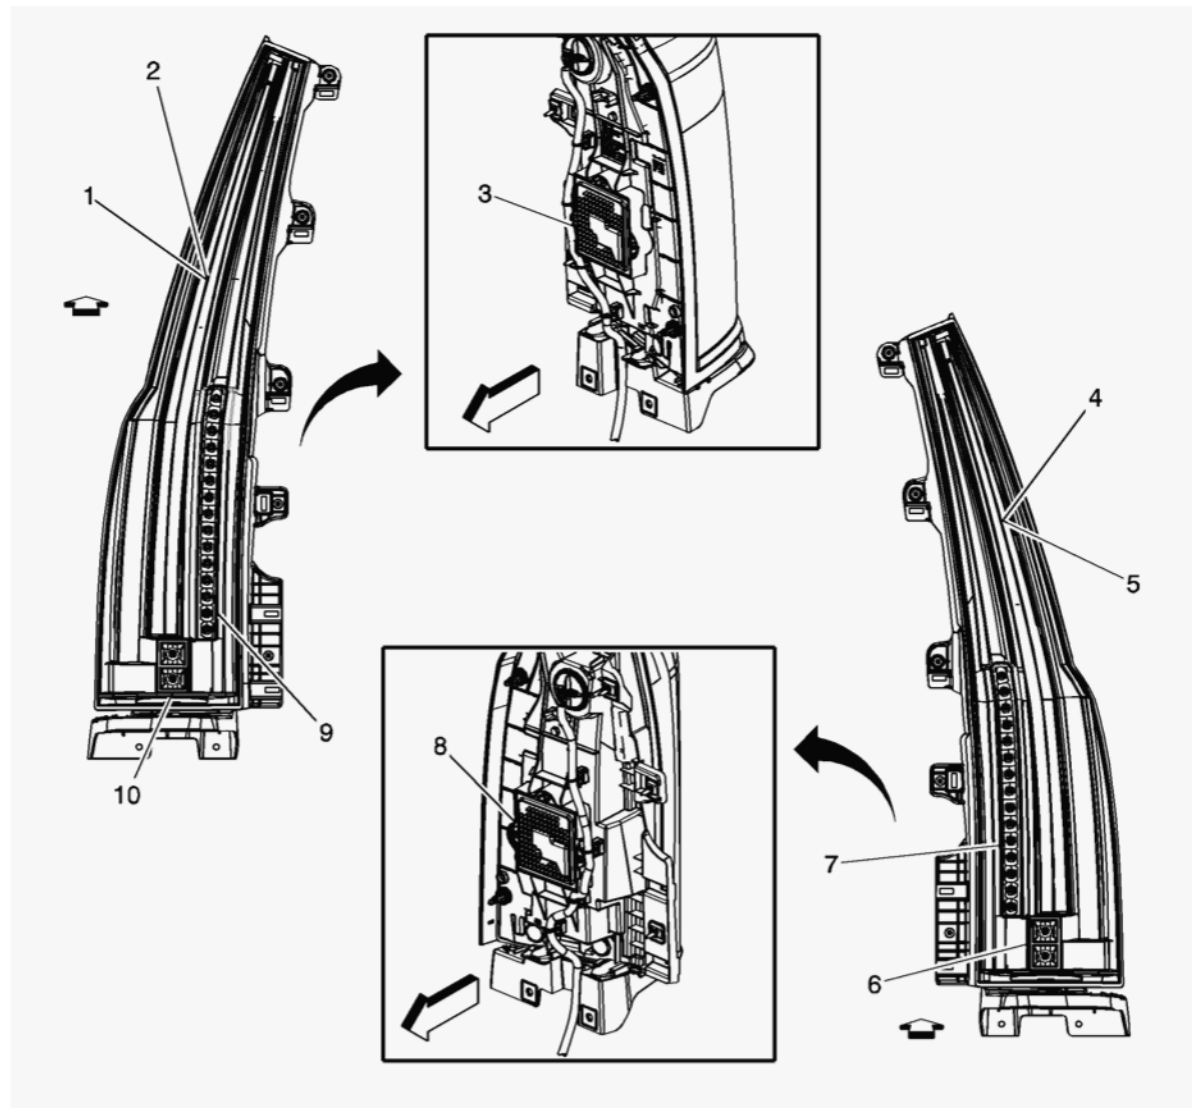


Fig. 9: Tail Lamp Components (Z75)

Courtesy of GENERAL MOTORS COMPANY

Items

- 1: E5L Stop Lamp - Left (Z88, Z75, or X88 with T89)
- 2: E5E Tail Lamp - Left
- 3: K174L Multifunction LED Control Module - Left Tail Lamp (Z75 or Z88)

Items

- 4: E5F Tail Lamp - Right
 - 5: E5R Stop Lamp - Right (Z88, Z75, or X88 with T89)
 - 6: E5B Backup Lamp - Right
 - 7: E4RR Turn Signal Lamp - Right Rear (Z88, Z75, or X88 with T89)
 - 8: K174L Multifunction LED Control Module - Left Tail Lamp (Z75 or Z88)
 - 9: E4LR Turn Signal Lamp - Left Rear (Z88, Z75, or X88 with T89)
 - 10: E5A Backup Lamp - Left
-