

2017 ELECTRICAL

Wiring Systems and Power Management - Component Locator - Luggage Compartment/Rear of Vehicle Component Views - CT6

LUGGAGE COMPARTMENT/REAR OF VEHICLE COMPONENT VIEWS

REAR OF VEHICLE COMPONENTS

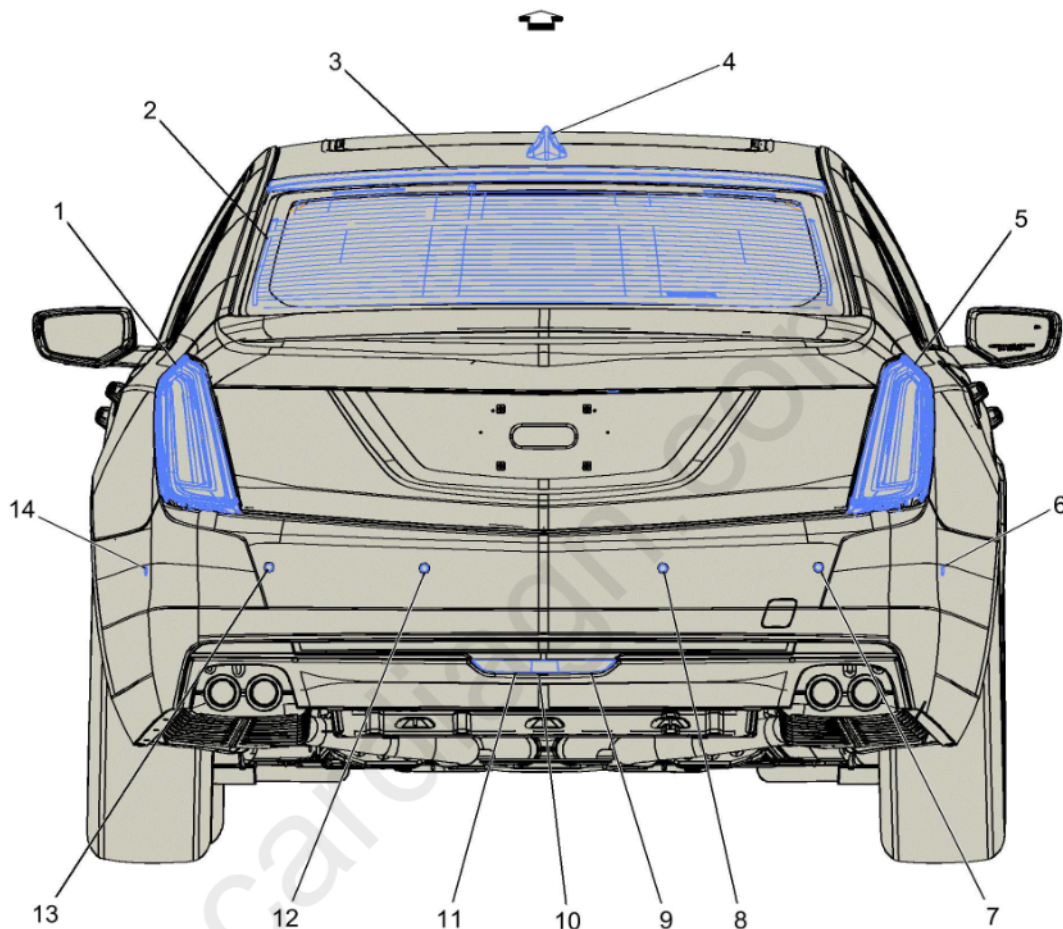


Fig. 1: Rear of Vehicle Components

Courtesy of GENERAL MOTORS COMPANY

Items

1. E42L Tail Lamp Assembly - Left **E42L Tail Lamp Assembly - Left (-TVN) E42L Tail Lamp Assembly - Left (TVN)**
2. E18 Rear Defogger Grid **E18 Rear Defogger Grid X1 E18 Rear Defogger Grid X2**
3. E6 Center High Mounted Stop Lamp **E6 Center High Mounted Stop Lamp**
4. T2RR Antenna - Roof Rear **T2RR Antenna - Roof Rear X1 (IO6-UE1) T2RR Antenna - Roof Rear X2 (C4E/CZ3) T2RR Antenna - Roof Rear X2 (EF7/Z49)**
5. E42R Tail Lamp Assembly - Right **E42R Tail Lamp Assembly - Right (-TVN) E42R Tail Lamp Assembly - Right (TVN)**
6. B218R Side Object Sensor Module - Right (UFG/UKC) **B218R Side Object Sensor Module - Right (UKC)**
7. B306H Parking Assist Sensor - Rear Right Outer **B78H Rear Object Sensor - Right Outer**
8. B306G Parking Assist Sensor - Rear Right Middle **B78F Rear Object Sensor - Right Middle**

Items

9. E5B Backup Lamp - Right **E5B Backup Lamp - Right (-T79)**
10. E29R Fog Lamp - Rear (T79) **E29R Fog Lamp - Rear (T79)**
11. E5A Backup Lamp - Left **E4A Cornering Lamp - Left (T87)**
12. B306F Parking Assist Sensor - Rear Left Middle **B78E Rear Object Sensor - Left Middle**
13. B306E Parking Assist Sensor - Rear Left Outer **B78G Rear Object Sensor - Left Outer**
14. B218L Side Object Sensor Module - Left (UFG/UKC) **B218L Side Object Sensor Module - Left (UKC)**

REAR COMPARTMENT LID COMPONENTS

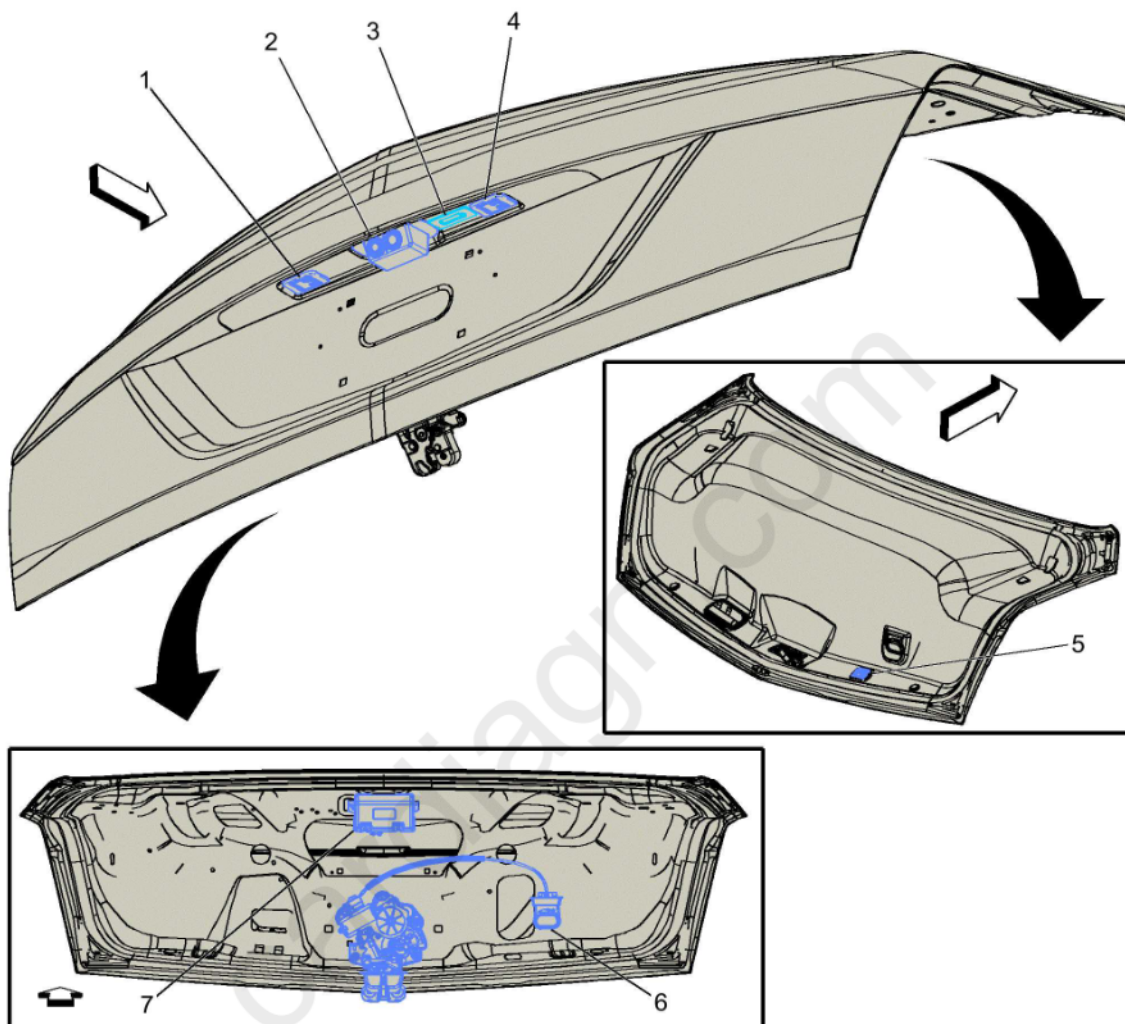


Fig. 2: Rear Compartment Lid Components

Courtesy of GENERAL MOTORS COMPANY

Items

1. E7L License Plate Lamp - Left **E7L License Plate Lamp - Left (HP9)**
2. B87 Rearview Camera (UVC/UVH) **B87 Rearview Camera X1 (UVC)** **B87 Rearview Camera X1 (UVH)** **B87 Rearview Camera X2 (DRZ)**
3. S58A Rear Compartment Lid Unlatch Switch - Exterior (-TC2) **S58A Rear Compartment Lid Unlatch Switch - Exterior (KL9-(TC2/TL9))** **S58A Rear Compartment Lid Unlatch Switch - Exterior (HP9-(TC2/TL9))**
4. E7R License Plate Lamp - Right **E7R License Plate Lamp - Right (HP9)**
5. B70 Liftgate Close Switch (TC2) **B70 Liftgate Close Switch (TC2/TL9)**
6. M40 Rear Compartment Lid Latch (-TC2) **M40 Rear Compartment Lid Latch (-TC2/TL9)**
7. K39 Liftgate Control Module (TC2) **K39 Liftgate Control Module X1 (HP9+(TC2/TL9))** **K39 Liftgate Control Module X2 (HP9+(TC2/TL9))** **K39 Liftgate Control Module X3 (HP9+(TC2/TL9))**

BEHIND REAR FASCIA COMPONENTS

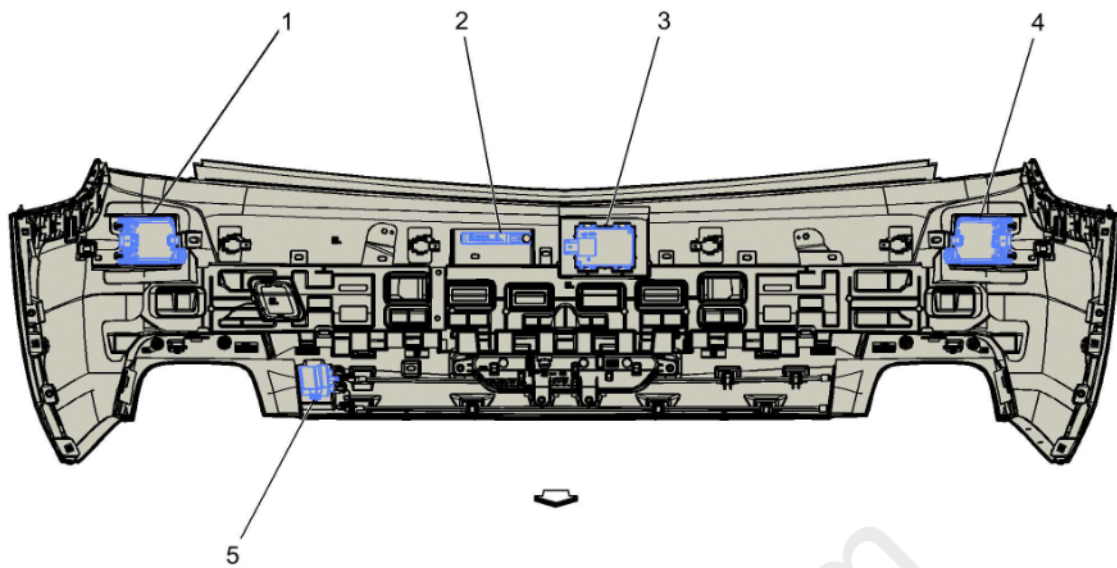


Fig. 3: Behind Rear Fascia Components

Courtesy of GENERAL MOTORS COMPANY

Items

1. B166RR Advanced Parking Assist Side Object Sensor - Right Rear (UFQ) [B166RR Advanced Parking Assist Side Object Sensor - Right Rear \(UKG\)](#)
2. T10G Keyless Entry Antenna - Rear Fascia [T10G Keyless Entry Antenna - Rear Fascia](#)
3. B233R Radar Sensor Module - Short Range Rear (UGN/UVZ) [B233R Radar Sensor Module - Short Range Rear](#)
4. B166LR Advanced Parking Assist Side Object Sensor - Left Rear (UFQ) [B166LR Advanced Parking Assist Side Object Sensor - Left Rear \(UKG\)](#)
5. K171 Hands-Free Liftgate Sensor Control Module (TC2) [K171 Hands-Free Liftgate Sensor Control Module X1 \(TC2\)](#) [K171 Hands-Free Liftgate Sensor Control Module X2 \(TC2\)](#) [K171 Hands-Free Liftgate Sensor Control Module X3 \(TC2\)](#)

TAIL LAMP COMPONENTS

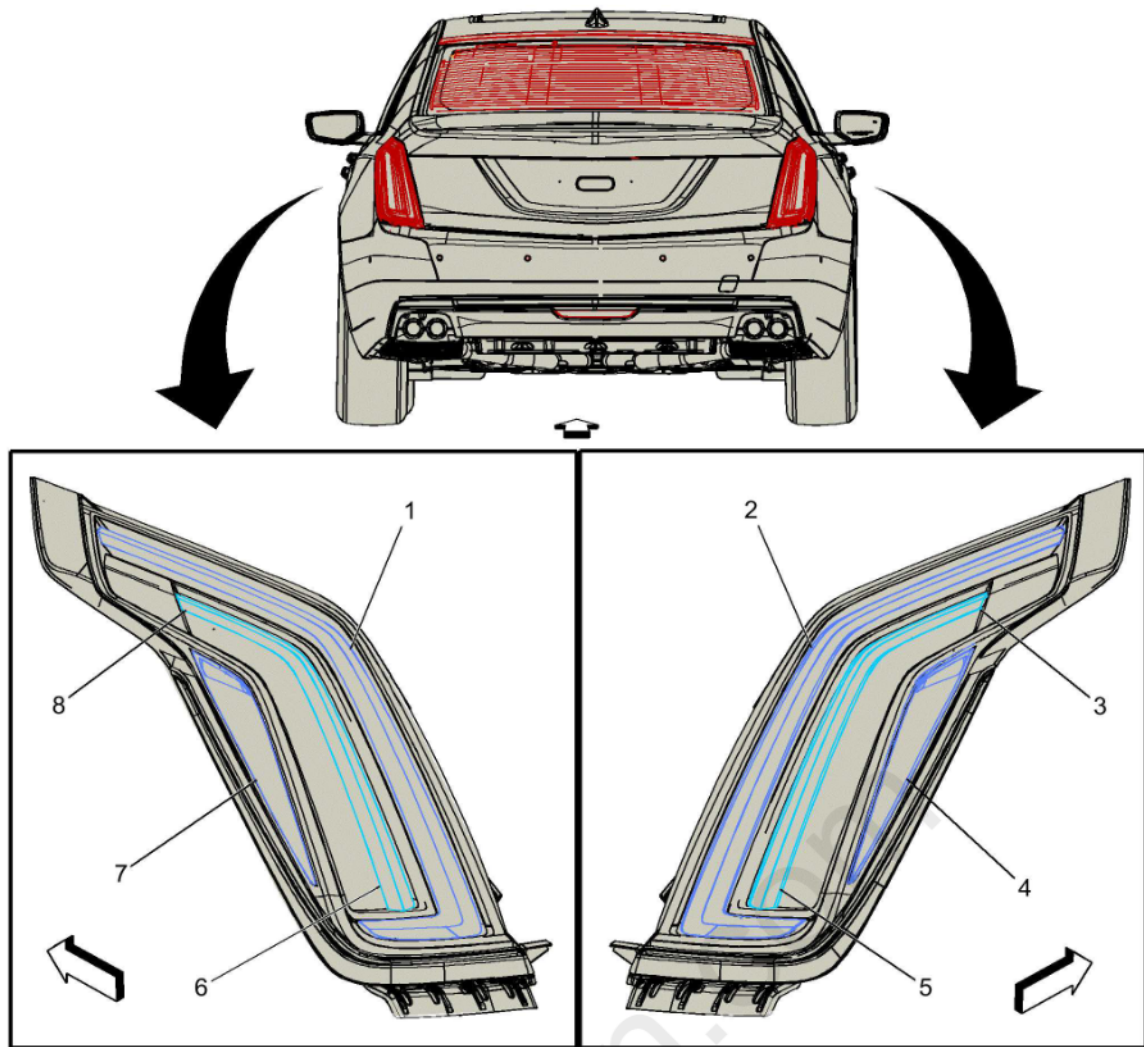


Fig. 4: Tail Lamp Components

Courtesy of GENERAL MOTORS COMPANY

Items
1. E5AA Tail/Stop Lamp - Left
2. E5AB Tail/Stop Lamp - Right
3. E5AN Stop/Turn Signal Lamp - Right (-TVN)
4. E2RR Side Marker Lamp - Right Rear (E47/Z49)
5. E4RR Turn Signal Lamp - Right Rear (TVN)
6. E4LR Turn Signal Lamp - Left Rear (TVN)
7. E2LR Side Marker Lamp - Left Rear (E47/Z49)
8. E5AM Stop/Turn Signal Lamp - Left (-TVN)

LUGGAGE COMPARTMENT COMPONENTS - CENTER (KL9)

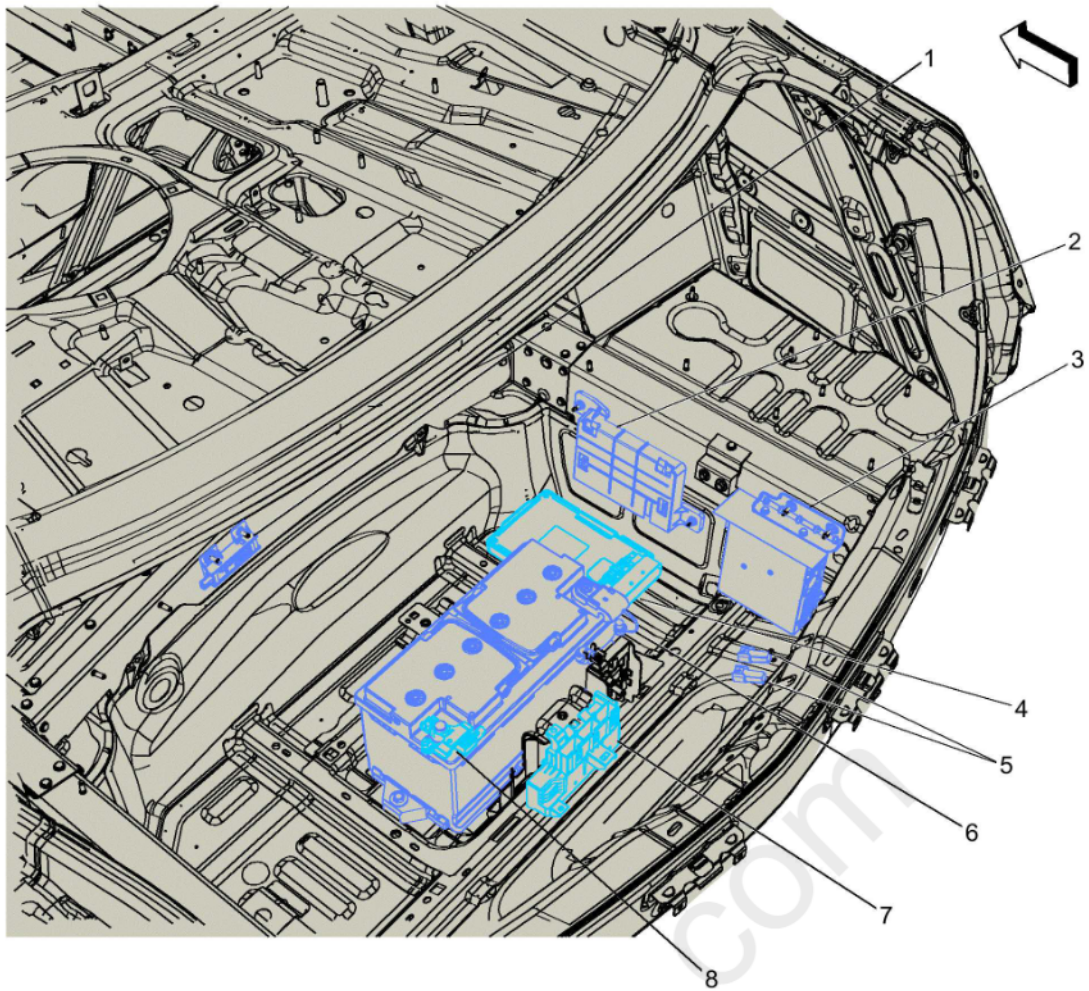


Fig. 5: Luggage Compartment Components - Center (KL9)

Courtesy of GENERAL MOTORS COMPANY

Items
1. T10E Keyless Entry Antenna - Rear Compartment <u>T10E Keyless Entry Antenna - Rear Compartment ()</u>
2. K124 Active Safety Control Module (UGN/UVZ) <u>K124 Active Safety Control Module X1 (HP9)</u> <u>K124 Active Safety Control Module X2 (HP9)</u>
3. T1 Accessory DC/AC Power Inverter Module (KI6/KI7) <u>T1 Accessory DC/AC Power Inverter Module X1 (KI6/KI7)</u> <u>T1 Accessory DC/AC Power Inverter Module X2 (KI6)</u>
4. K19 Suspension Control Module (F55) <u>K19 Suspension Control Module (F55)</u>
5. R6A Terminating Resistor - High Speed Bus <u>R6A Terminating Resistor - Mid Speed Bus</u>
6. C1 Battery <u>C1 Battery_(+)</u>
7. X50D Fuse Block - Battery <u>X50D Fuse Block - Battery X1</u> <u>X50D Fuse Block - Battery X2</u> <u>X50D Fuse Block - Battery X3</u>
8. B110 Battery Sensor Module <u>B110 Battery Sensor Module X1</u>

LUGGAGE COMPARTMENT COMPONENTS - CENTER (HP9)

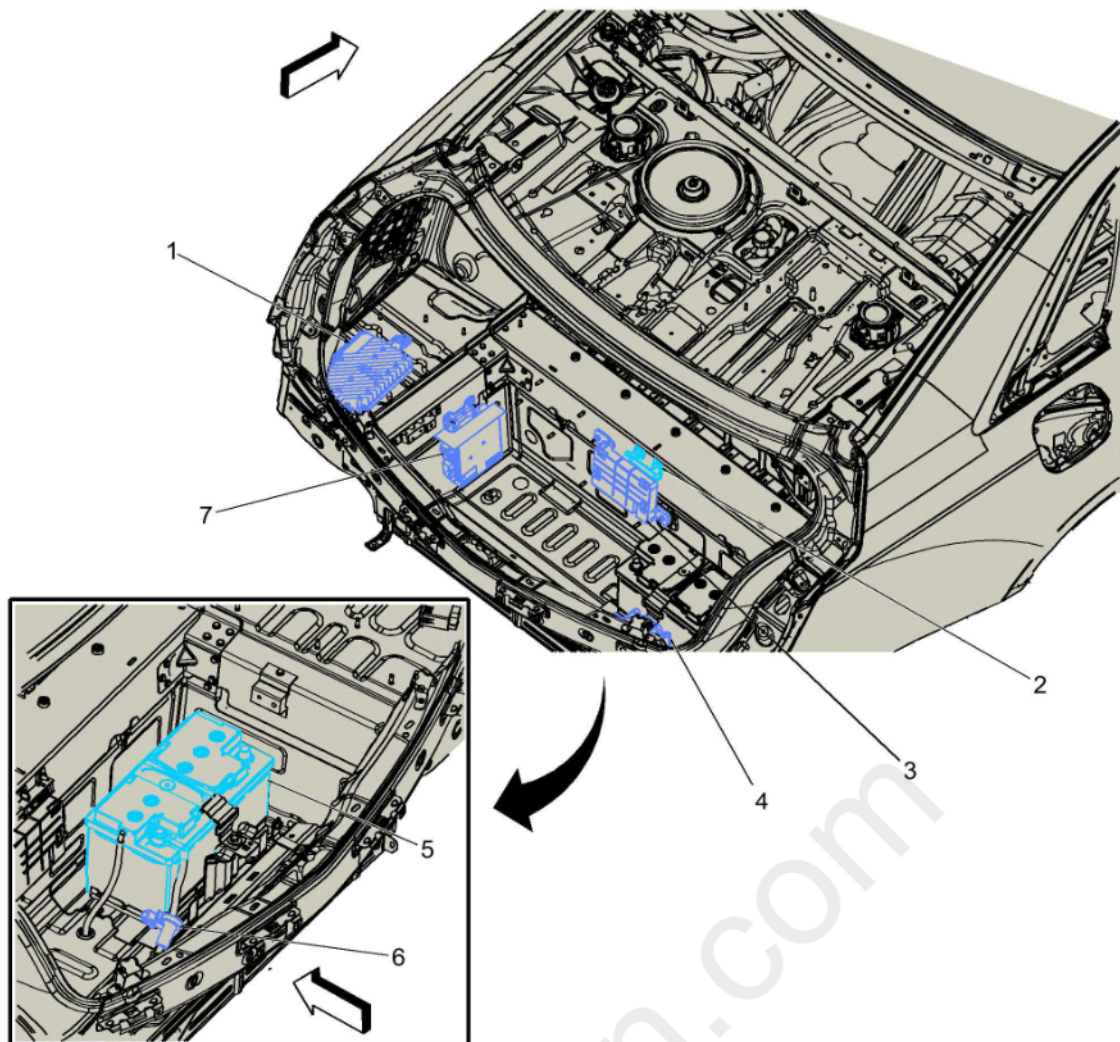


Fig. 6: Luggage Compartment Components - Center (HP9)

Courtesy of GENERAL MOTORS COMPANY

Items

1. T3 Audio Amplifier **T3 Audio Amplifier X1 (UQA+HP9) T3 Audio Amplifier X1 (UQH) T3 Audio Amplifier X1 (UQS) T3 Audio Amplifier X2 (UQA) T3 Audio Amplifier X2 (UQH) T3 Audio Amplifier X2 (UQS) T3 Audio Amplifier X3 (UQA) T3 Audio Amplifier X3 (UQH) T3 Audio Amplifier X3 (UQS) T3 Audio Amplifier X4 (UQA) T3 Audio Amplifier X4 (UQH) T3 Audio Amplifier X4 (UQS) T3 Audio Amplifier X5 (UQH)**
2. T10E Keyless Entry Antenna - Rear Compartment **T10E Keyless Entry Antenna - Rear Compartment ()**
3. K124 Active Safety Control Module (UGN/UVZ) **K124 Active Safety Control Module X1 (HP9) K124 Active Safety Control Module X2 (HP9)**
4. X50D Fuse Block - Battery **X50D Fuse Block - Battery X1 X50D Fuse Block - Battery X2 X50D Fuse Block - Battery X3**
5. C1 Battery **C1 Battery_(+)**
6. B197 Charge Port Door Position Switch (HP9) **B197 Charge Port Door Position Switch**
7. T1 Accessory DC/AC Power Inverter Module (KI6/KI7) **T1 Accessory DC/AC Power Inverter Module X1 (KI6/KI7) T1 Accessory DC/AC Power Inverter Module X2 (KI6)**

LUGGAGE COMPARTMENT COMPONENTS - LEFT

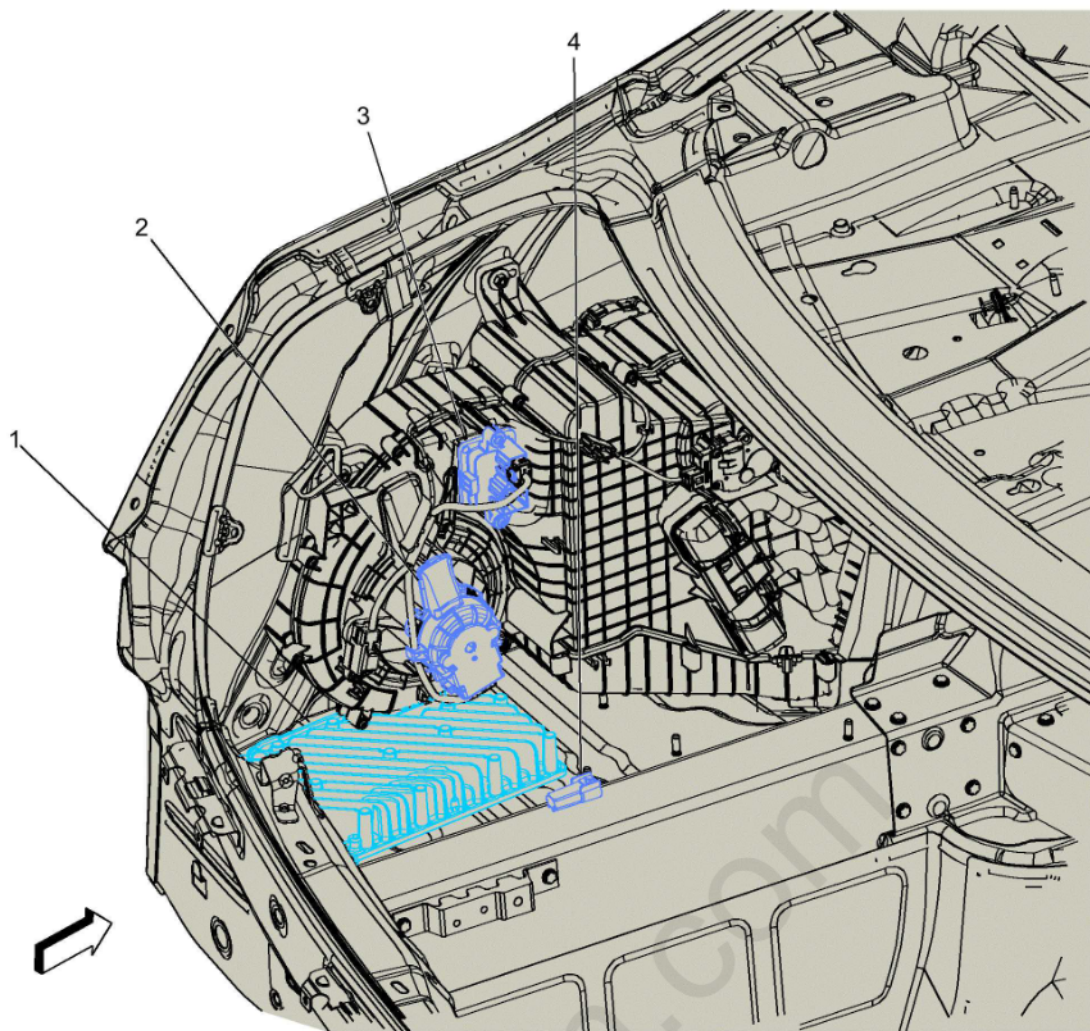


Fig. 7: Luggage Compartment Components - Left
Courtesy of GENERAL MOTORS COMPANY

Items

1. T3 Audio Amplifier **T3 Audio Amplifier X1 (UQA+HP9)**
2. M8B Blower Motor - Auxiliary (C24) **M8B Blower Motor - Auxiliary (C24)**
3. K8A Blower Motor Control Module - Auxiliary (C24) **K8A Blower Motor Control Module - Auxiliary X1 (C24) K8A Blower Motor Control Module - Auxiliary X2 (C24)**
4. R6A Terminating Resistor - High Speed Bus **R6A Terminating Resistor - Mid Speed Bus**

LUGGAGE COMPARTMENT COMPONENTS - RIGHT

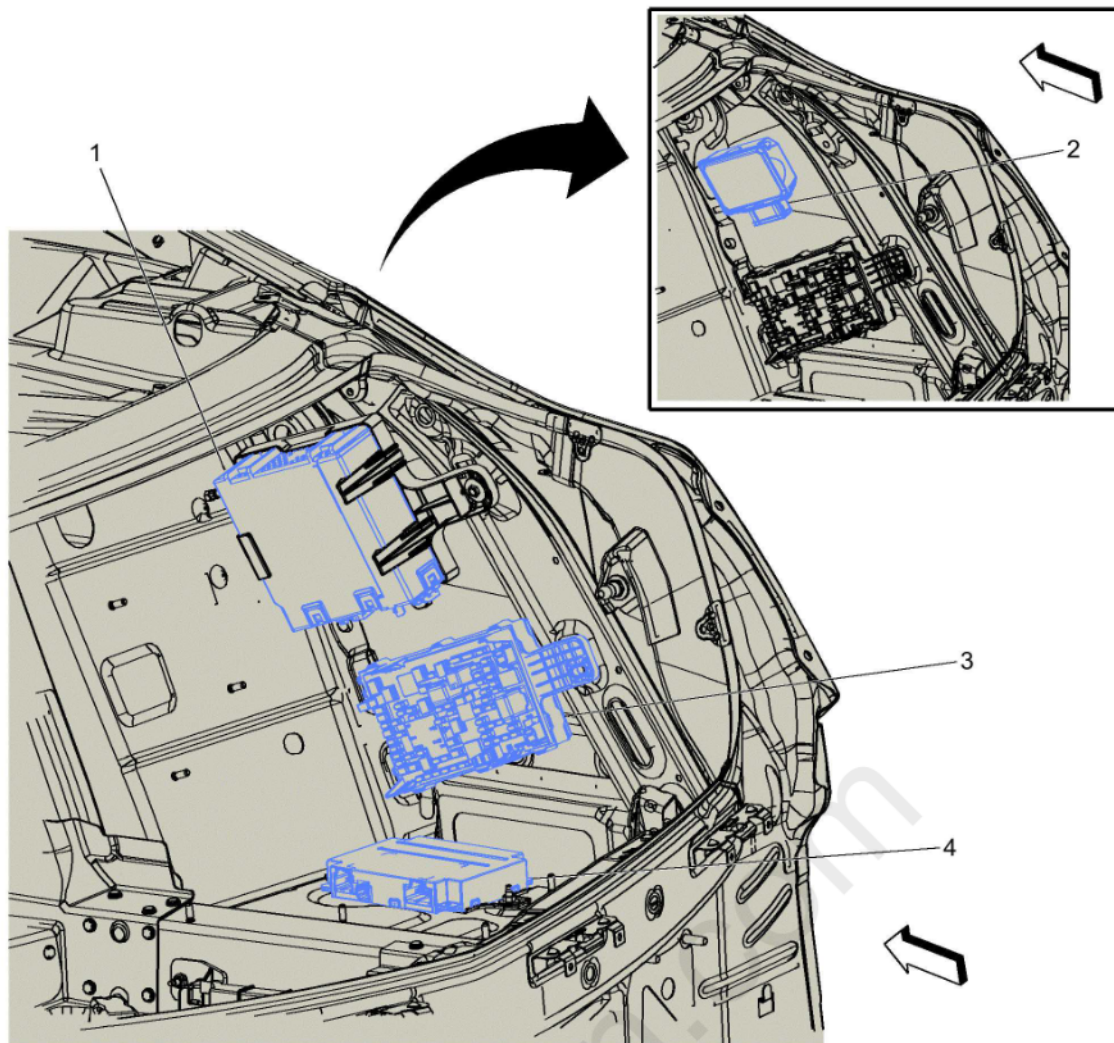


Fig. 8: Luggage Compartment Components - Right
 Courtesy of GENERAL MOTORS COMPANY

Items

1. A11 Radio A11 Radio X1 (HP9) A11 Radio X1 (KL9) A11 Radio X2 A11 Radio X4 A11 Radio X5 A11 Radio X6 (U2M) A11 Radio X9 (U2Q)
2. T19 Power Supply Transformer T19 Power Supply Transformer (KL9)
3. X53A Fuse Block - Rear Body X53A Fuse Block - Rear Body X1 X53A Fuse Block - Rear Body X2 X53A Fuse Block - Rear Body X3 X53A Fuse Block - Rear Body X4 X53A Fuse Block - Rear Body X5
4. K157 Video Processing Control Module (UVH) K157 Video Processing Control Module X1 (UVH) K157 Video Processing Control Module X2 (UVH) K157 Video Processing Control Module X5 (XVR)

LUGGAGE COMPARTMENT COMPONENTS - REAR

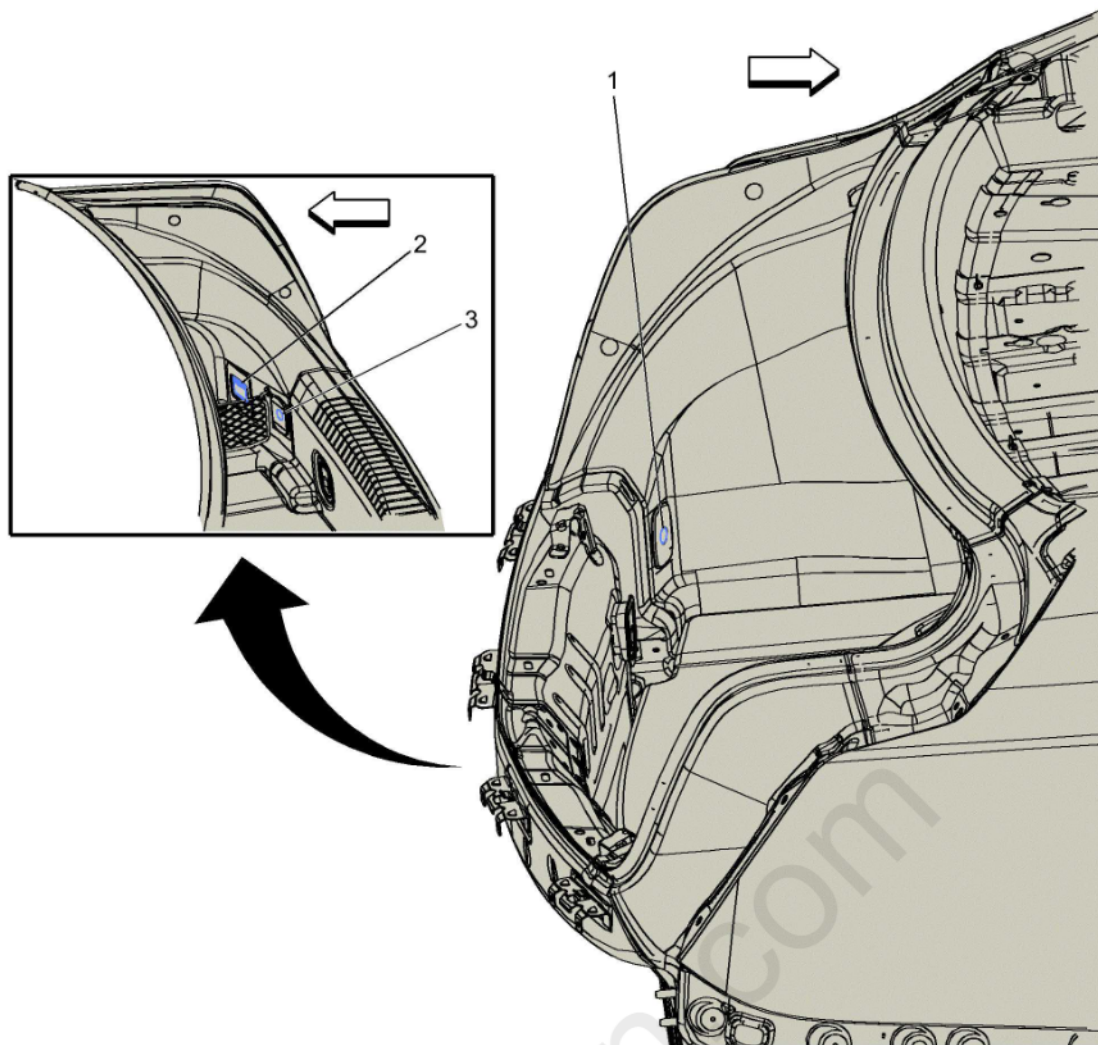


Fig. 9: Luggage Compartment Components - Rear
 Courtesy of GENERAL MOTORS COMPANY

Items

1. E8E Rear Compartment Courtesy Lamp - Left [E8E Rear Compartment Courtesy Lamp - Left](#)
2. X20 Memory Card Receptacle (XVR) [X20 Memory Card Receptacle X1 \(XVR\) X20 Memory Card Receptacle X2 \(XVR\)](#)
3. E8F Rear Compartment Courtesy Lamp - Right [E8F Rear Compartment Courtesy Lamp - Right](#)