



Fastener Tightening Specifications

Application	Specification	
	Metric	English
Antenna Bracket Fastener	10 N·m	89 lb in
Antenna Mast	10 N·m	89 lb in
Communication Interface Module Bolt	3 N·m	27 lb in
Front Speaker Screw	2.5 N·m	22 lb in
Radio Screw	2.5 N·m	22 lb in
Rear Speaker Screw	2.5 N·m	22 lb in


Radio

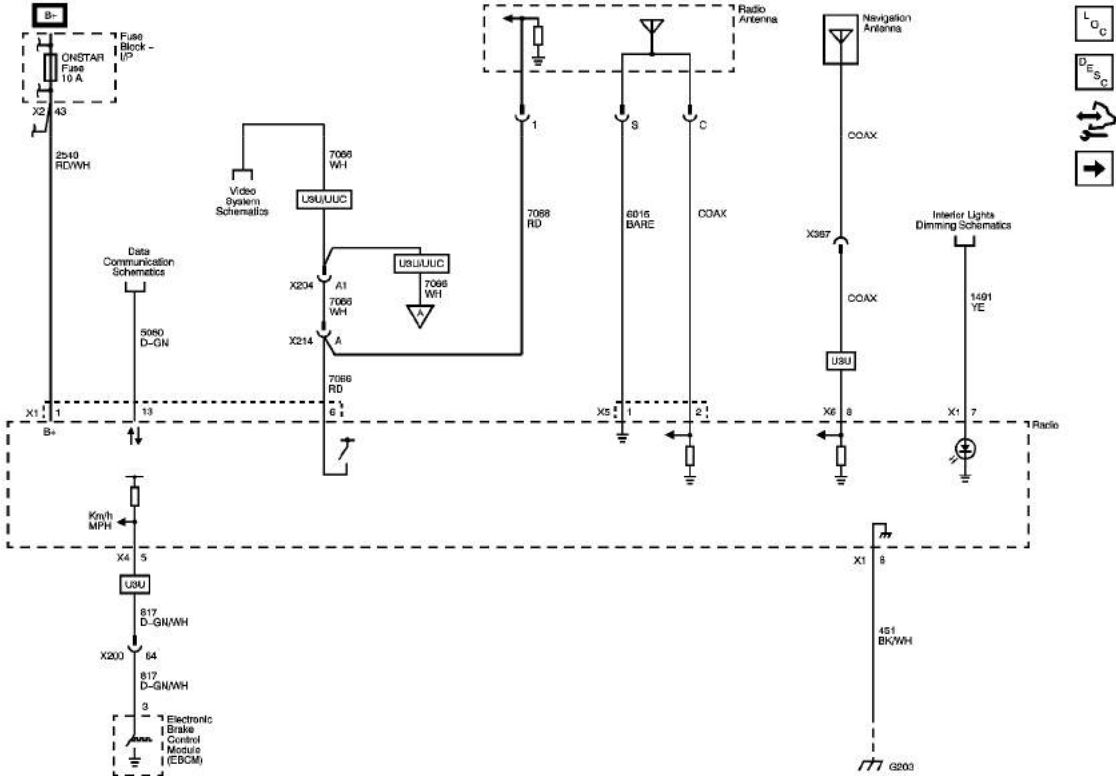


Speakers (UW6)

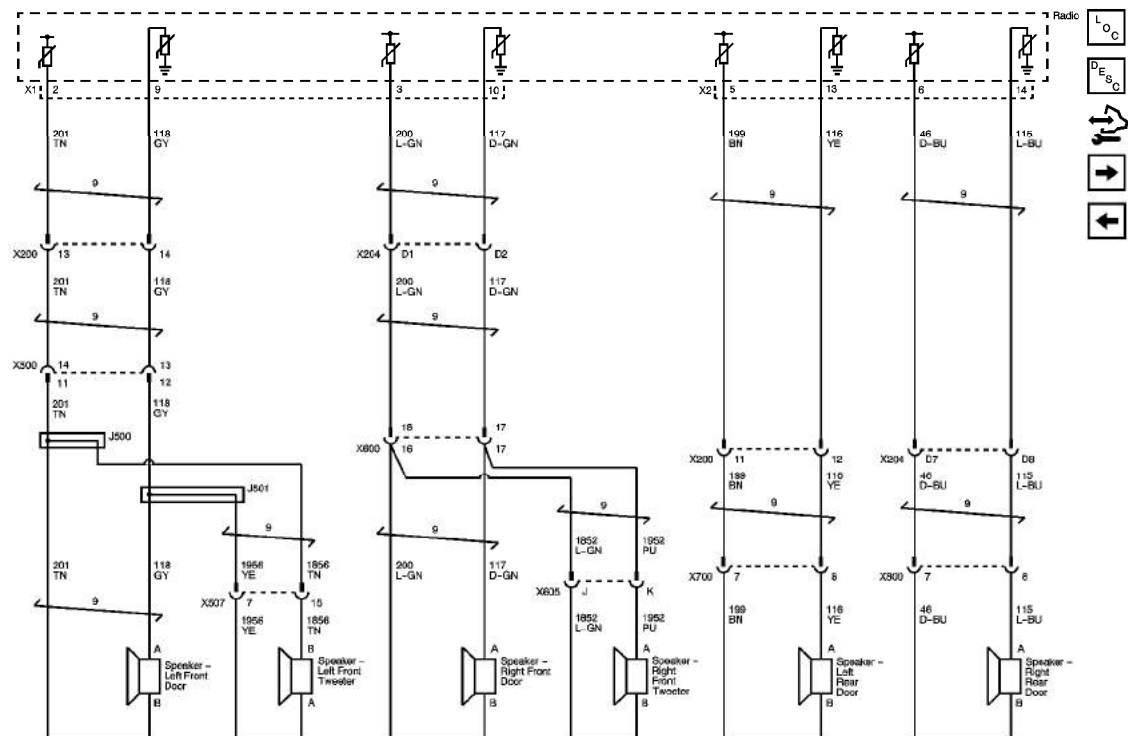


Audio Amplifier

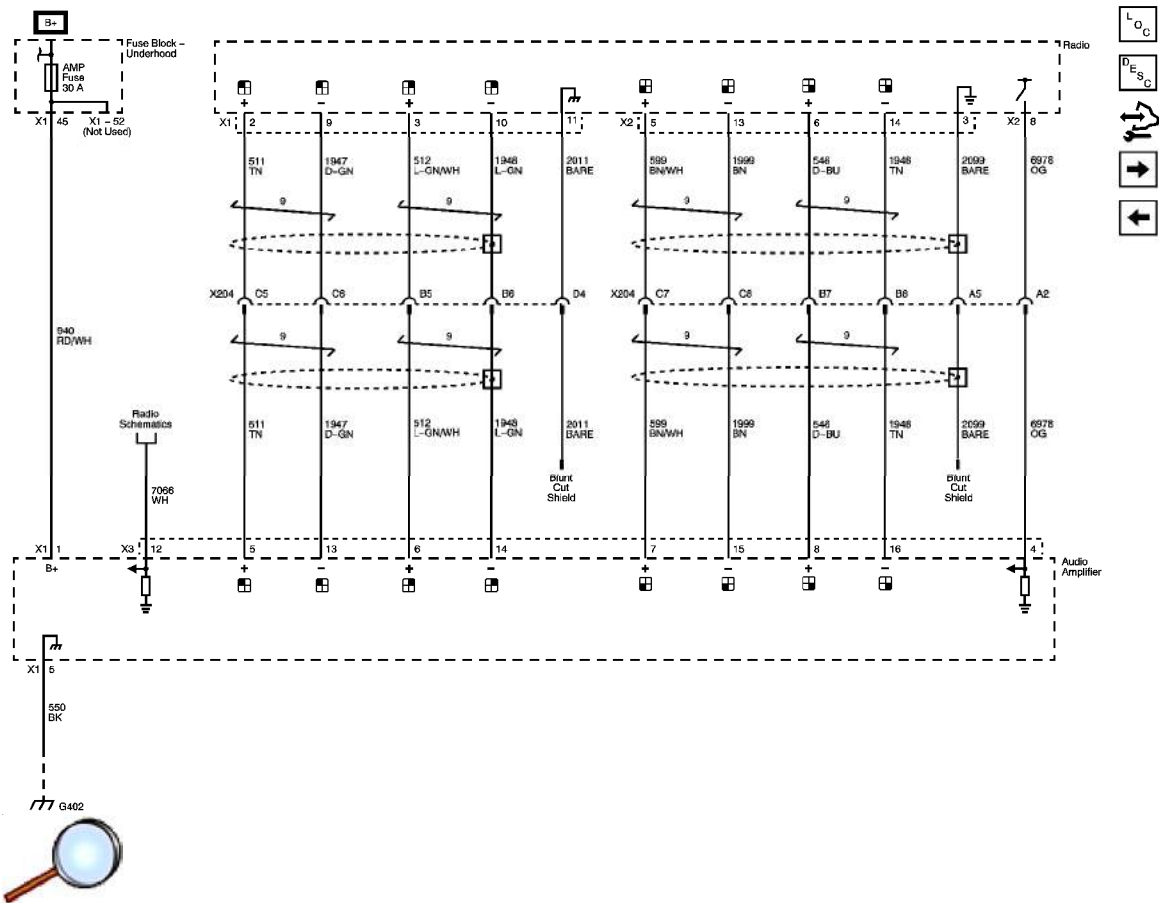


Speakers (U61) 1 of 2

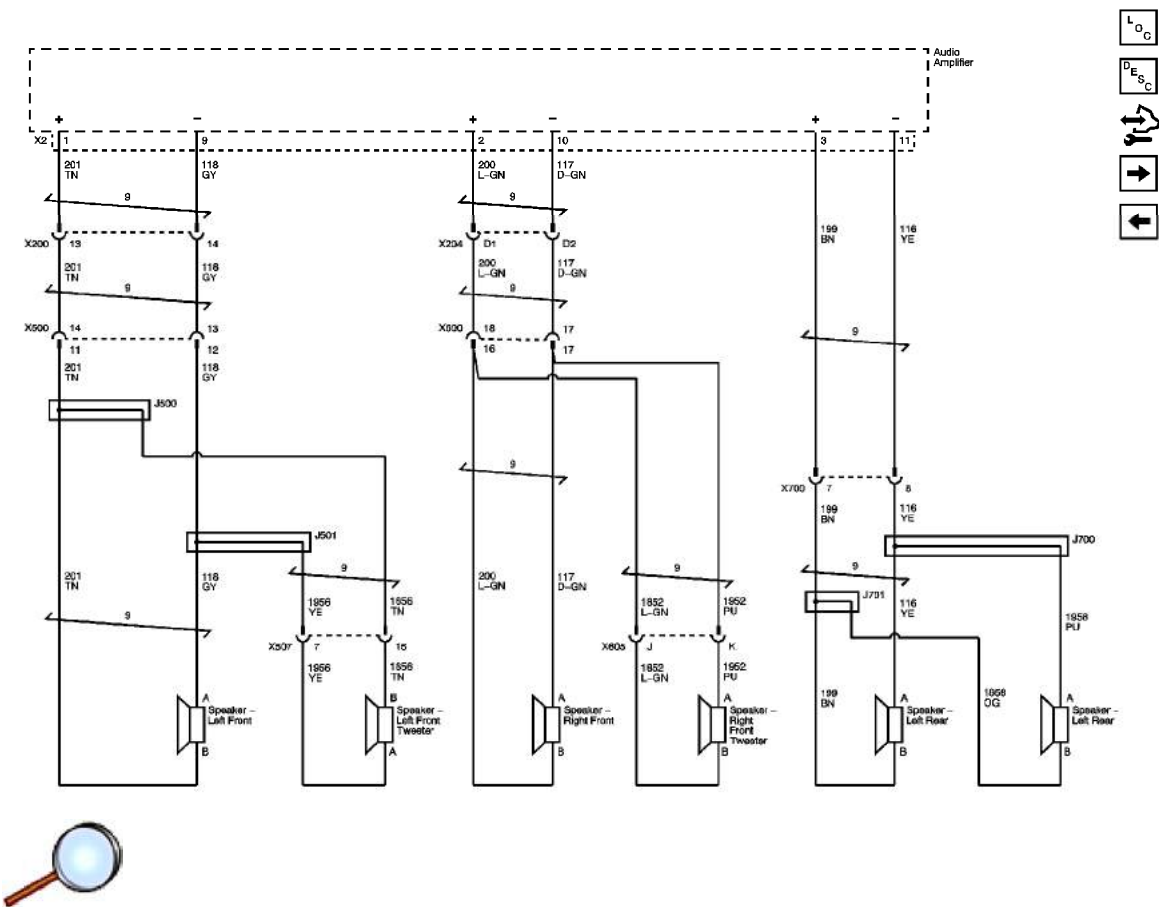


Speakers (U61) 2 of 2

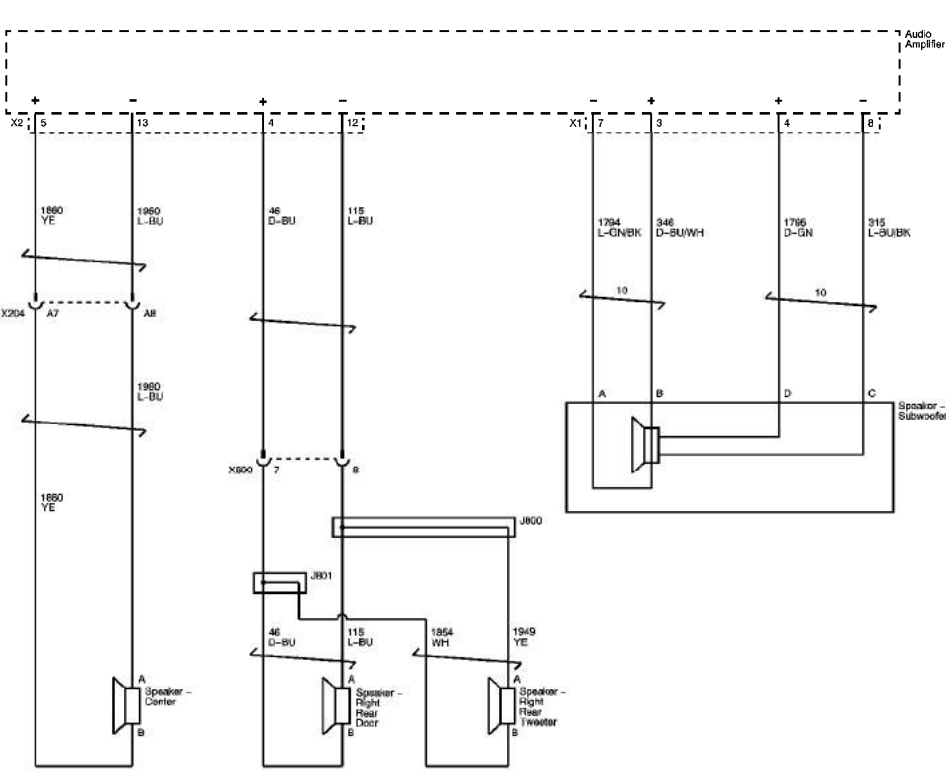

Digital Radio

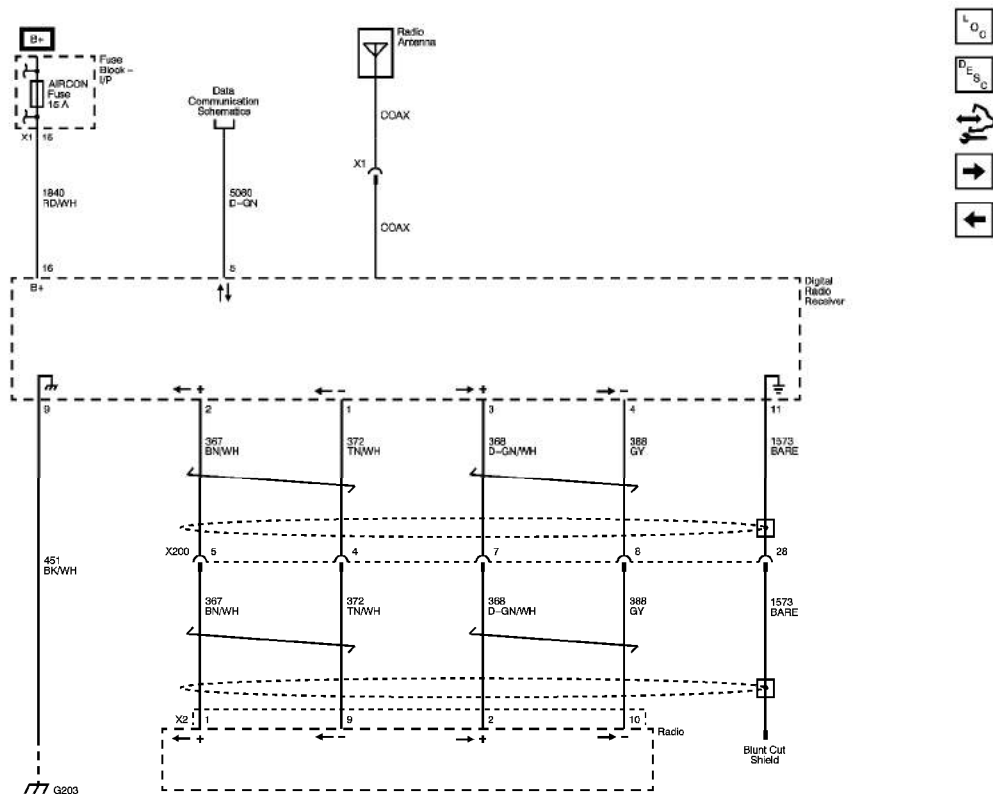


Steering Wheel Controls

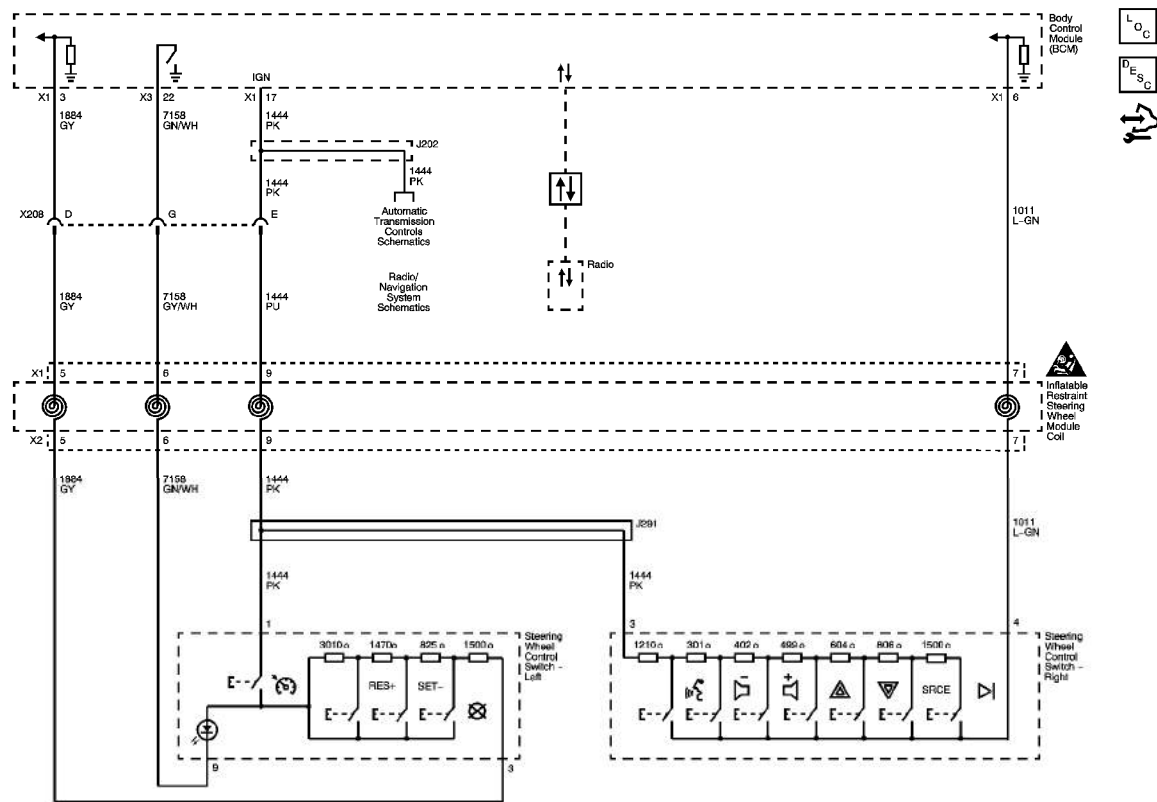


OnStar Schematics

OnStar

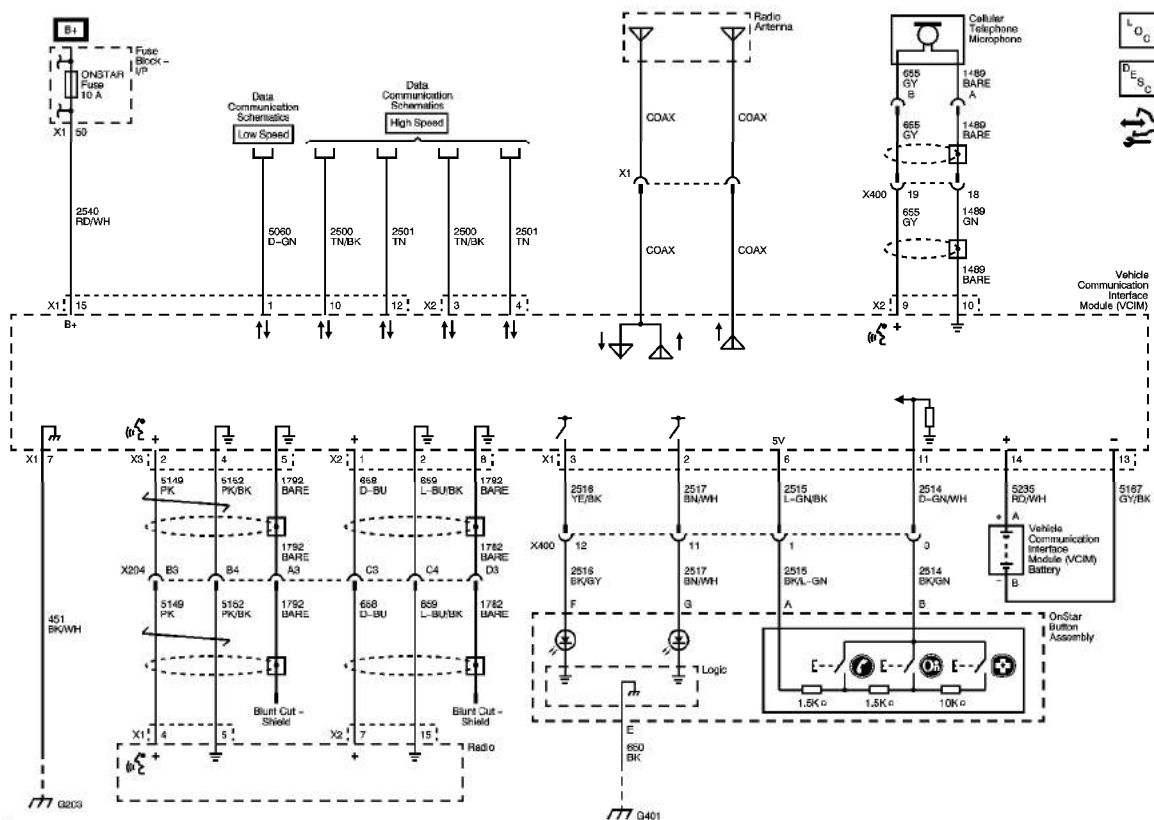


OnStar Button Assembly Replacement

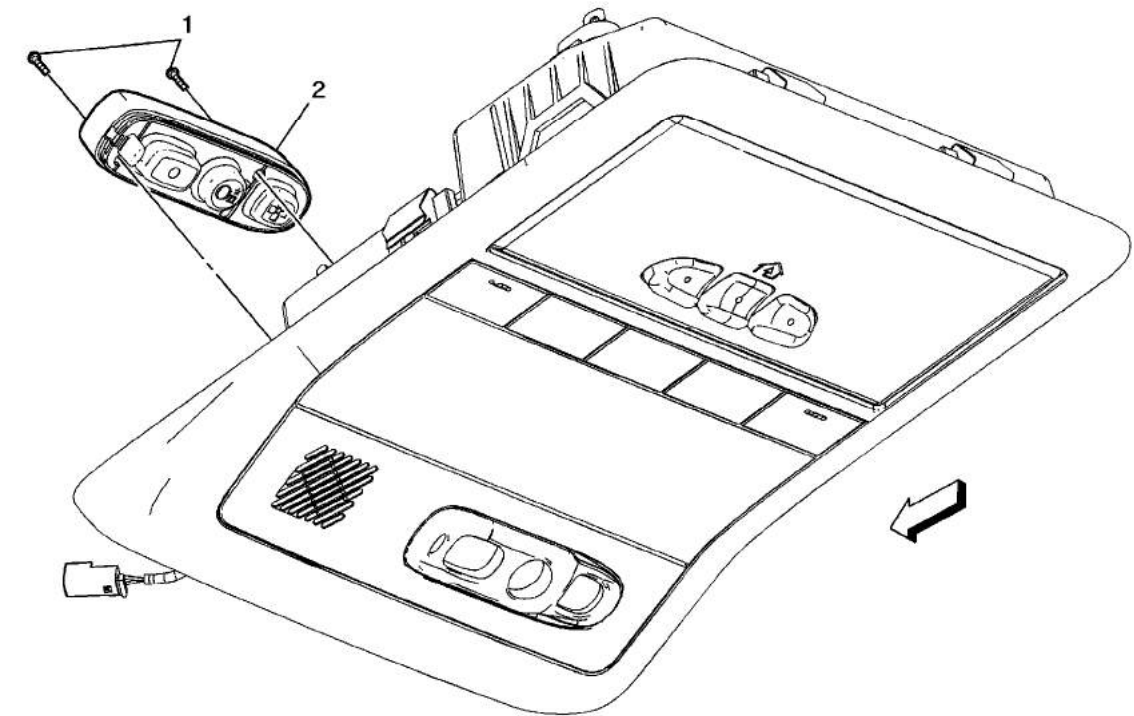



Callout	Component Name
Preliminary Procedure	
Remove the roof console assembly. Refer to Roof Console Replacement .	
1	Communication Center Call Switch Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Communication Center Call Switch Assembly Procedure 1. Disconnect the electrical connection. 2. Reconfigure the OnStar System. Refer to Control Module References.

Mobile Telephone Microphone Replacement

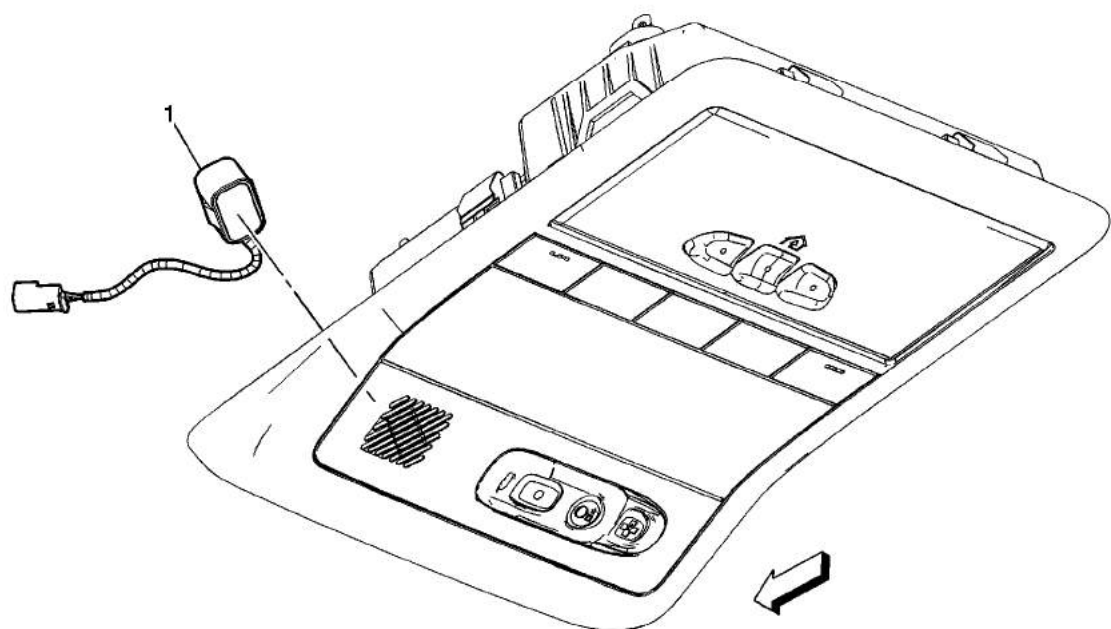

Callout	Component Name
Preliminary Procedure	
Remove the roof console assembly. Refer to Roof Console Replacement .	
1	Communication Interface Mobile Microphone Assembly Procedure Disconnect the electrical connection.

Communication Interface Module Replacement

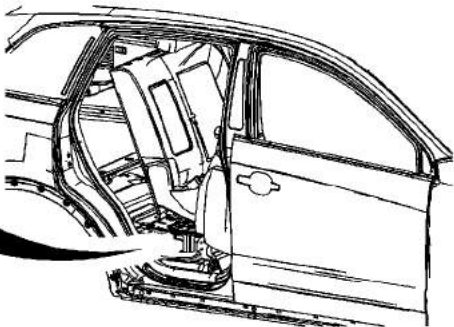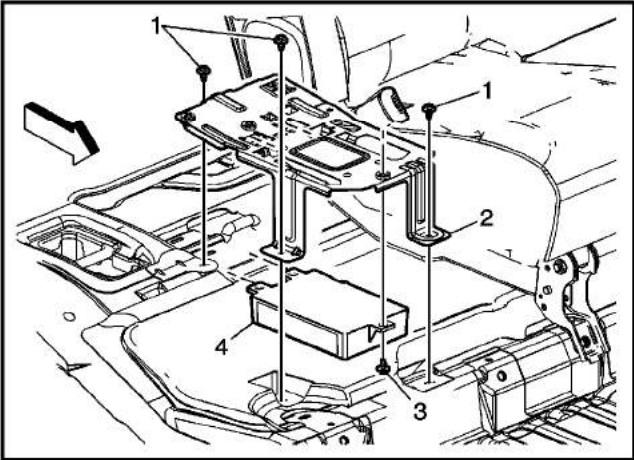

Callout	Component Name
Preliminary Procedure	
Remove the right rear seat. Refer to Rear Seat Replacement .	
1	Communication Interface Module Bracket Bolt (Qty: 3) Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in)
2	Communication Interface Module Bracket
3	Communication Interface Module Bolt Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in)
	Communication Interface Module



1. Disconnect the electrical connectors.
2. Reprogram the communication interface module if replaced. Refer to [Control Module References](#).
3. When replacing the VCIM, record the 11-digit electronic serial number (ESN) and the 10-digit station identification (STID) number from the label on the new VCIM.

Tip

4

- The vehicle communication interface module (VCIM) has a specific set of unique numbers that tie the module to each vehicle. These numbers, the 10-digit station identification and the 11-digit electronic serial number, are used by the National Cellular Network and OnStar® to identify the specific vehicle. Because these numbers are tied to the vehicle identification number of the vehicle, you must never exchange these parts with those of another vehicle.
- After replacing the vehicle communication interface module, you must reconfigure the OnStar® system. Failure to reconfigure the system will result in an additional customer visit for repair. In addition, pressing and holding the white dot button on the keypad will NOT reset this version of the OnStar® system. This action will cause a DTC to set.
- When replacing the vehicle communication module be sure to transfer Bluetooth Antenna, if equipped.


Communication Interface Module Battery Replacement

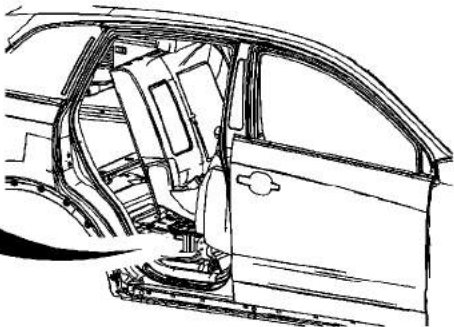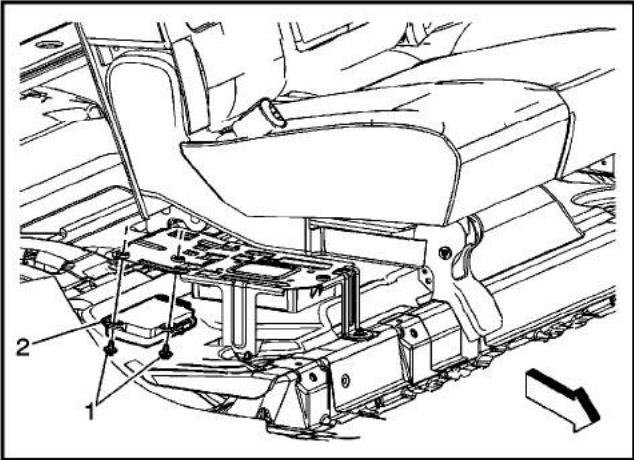

Callout	Component Name
Preliminary Procedure	
Remove the right rear seat. Refer to Rear Seat Replacement .	
1	Communication Interface Module Battery Bolt (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in)
	Communication Interface Module Battery Assembly Procedure Disconnect the electrical connectors. Tip The vehicle communication interface module (VCIM) has a specific set of unique numbers that tie the module to each vehicle. These numbers, the 10-

2	by the National Criminal Network and OnStar® to identify the specific vehicle. Because these numbers are tied to the vehicle identification number of the vehicle, you must never exchange these parts with those of another vehicle. • Replacement of the back-up battery (BUB) does not require reconfiguration of the VCIM. If a trouble code is indicated before the battery is replaced, the DTC must be cleared following the installation of the new battery. The OnStar® system does not need to be reconfigured unless the VCIM is replaced. • When the VCIM is replaced, the OnStar® system must be reconfigured. Failure to reconfigure the system will result in an additional customer visit for repair. In addition, pressing and holding the white dot button on the keypad will NOT reset this version of the OnStar® system. This action will cause a DTC to set.
---	---

Wireless Communication Interface Antenna Replacement

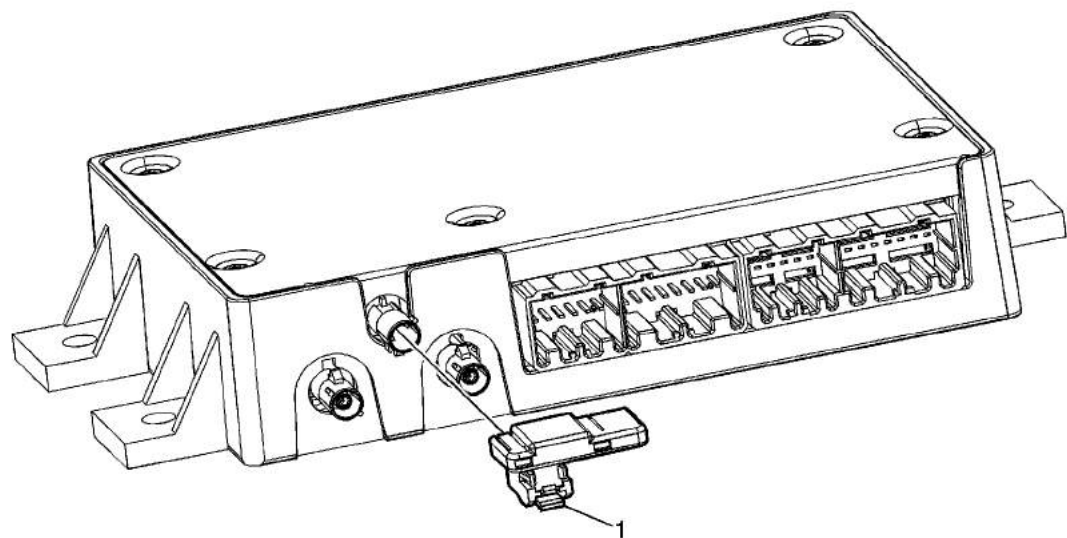

Callout	Component Name
Preliminary Procedure	
Remove the communication interface module. Refer to Communication Interface Module Replacement	
1	Wireless Communication Interface Antenna Bluetooth Module Procedure Unsnap the Antenna from Communication Module.

Compact Disc Care and Cleaning

Care of CDs

Handle CDs carefully. Store them in their original cases or other protective cases and away from direct sunlight and dust. The CD player scans the bottom surface of the disc. If the surface of a CD is damaged, such as cracked, broken, scratched, or wrinkled labeling, the CD will not play properly or not at all. If the surface of a CD is soiled, take a soft, lint free cloth or dampen a clean, soft cloth in a mild, neutral detergent solution mixed with water, and clean it. Make sure the wiping process starts from the center to the edge. Do not touch the bottom side of a CD while handling it. This could damage the surface. Pick up CDs by grasping the outer edges or the edge of the hole and the outer edge.

Care of the CD Player

The use of CD lens cleaners for CD players is not advised, due to the risk of contaminating the internal lens of the CD optics with lubricants.


Stuck CDs

Interrupting the battery power by pulling the fuse will sometimes release a stuck CD. If a CD is stuck, and removed, inspect it for warps, cracks, etc. If the CD is damaged, do not replace the radio.

Labeling CDs


Paper labels can eventually warp and wrinkle, and this will cause the disc to jam inside the CD player. Try labeling the top of the discs with a soft magic marker instead.

Radio Replacement

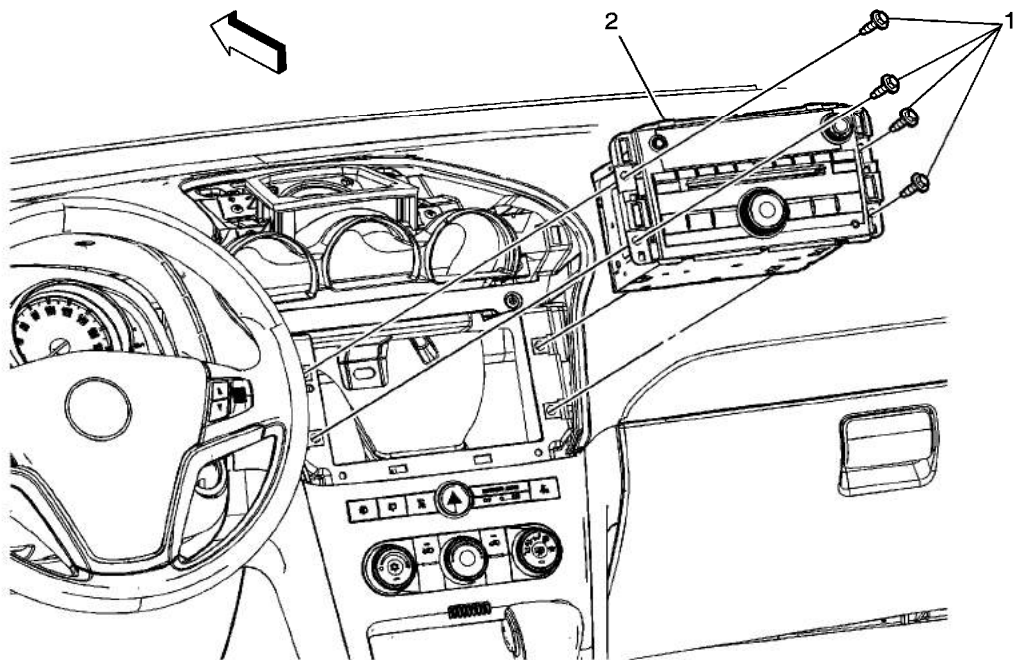



Callout	Component Name
Preliminary Procedure	
Remove the instrument panel accessory bezel. Refer to Instrument Panel Accessory Bezel Replacement .	
1	Radio Screw (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 2.5 N·m (22 lb in)
2	Radio Assembly Procedure 1. Disconnect the electrical connector. 2. Disconnect the antenna cable. 3. Reprogram the radio after replacement. Refer to Control Module References. Tip

Digital Radio Receiver Replacement

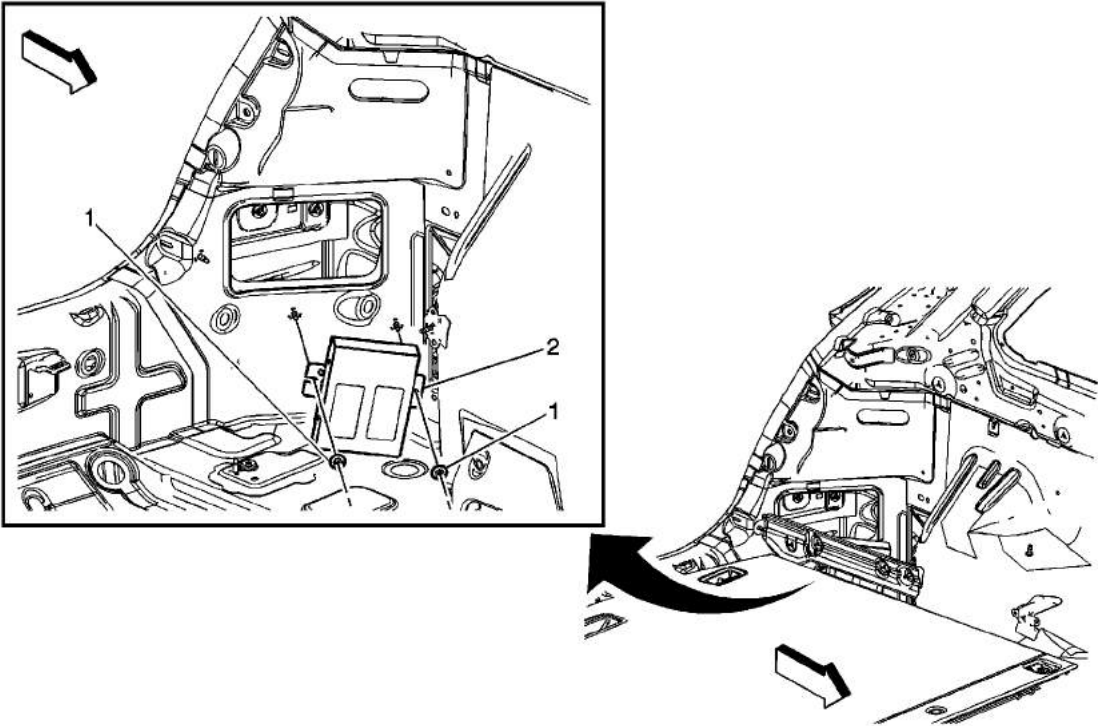

Callout	Component Name
Preliminary Procedure	
Remove the left rear quarter lower trim panel. Refer to Quarter Lower Rear Trim Panel Replacement .	
1	Digital Radio Receiver Bracket Nut (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in)
2	Digital Radio Receiver Bracket Assembly Procedure Disconnect the electrical connection.


Radio Speaker Amplifier Replacement

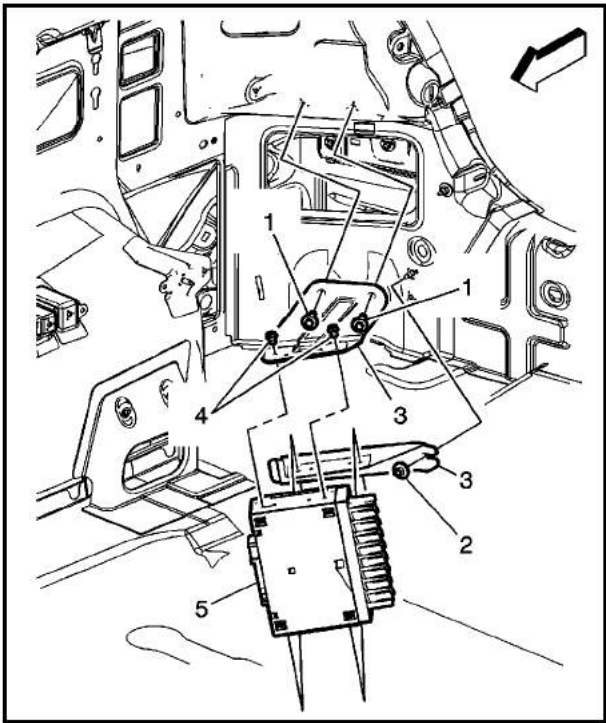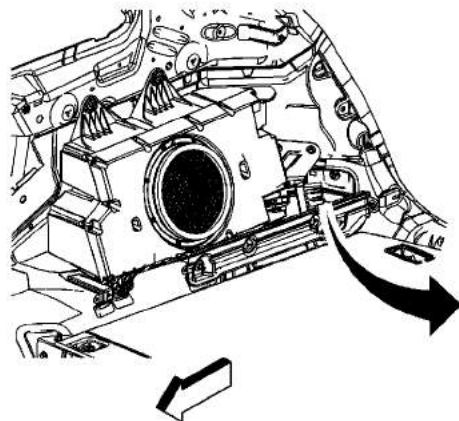

Callout	Component Name
Preliminary Procedure	
Remove the rear quarter trim panel. Refer to Quarter Lower Rear Trim Panel Replacement .	
1	Radio Speaker Amplifier Bolt (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in)
2	Radio Speaker Amplifier Nut Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in)
3	Radio Speaker Amplifier Bracket Assembly Tip Amplifier bracket is a two piece assembly.


4	Caution: Refer to Fastener Caution in the Preface section. Tighten 3 N·m (27 lb in)
5	Radio Speaker Amplifier Assembly Procedure Disconnect the electrical connectors.

Radio Antenna Base Replacement

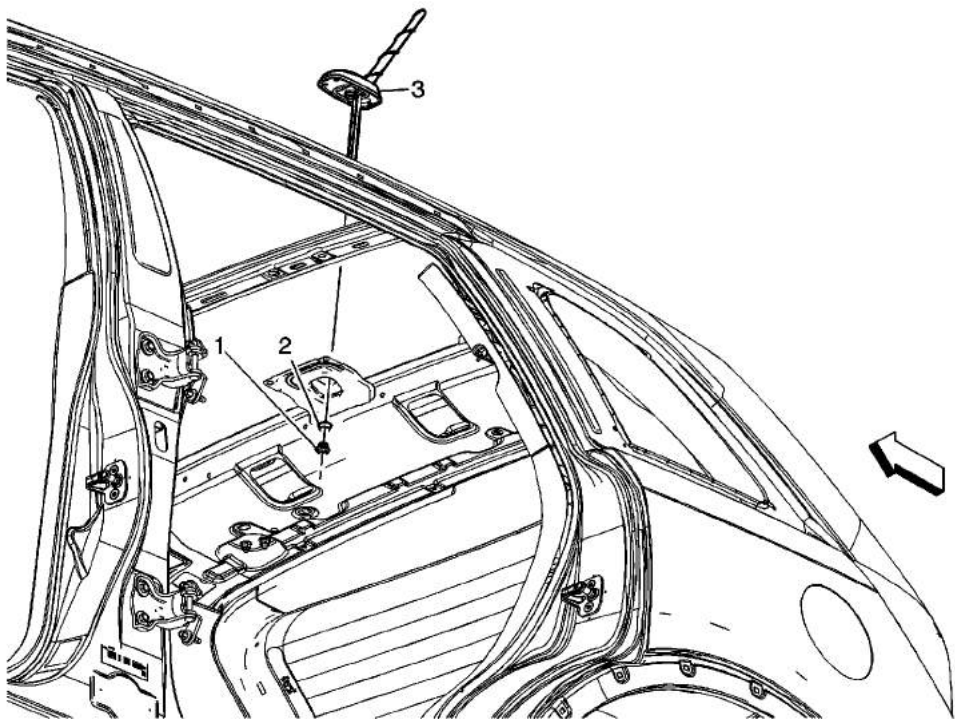


Callout	Component Name
Preliminary Procedure	
Lower the rear of the headliner. Refer to Headlining Trim Panel Replacement .	
1	Radio Antenna Base Nut Caution: Refer to Fastener Caution in the Preface section. Tighten 9 N·m (80 lb in)
2	Radio Antenna Base Washer
3	Radio Antenna Base Assembly Procedure Disconnect the electrical connections.

Digital Radio Antenna Replacement

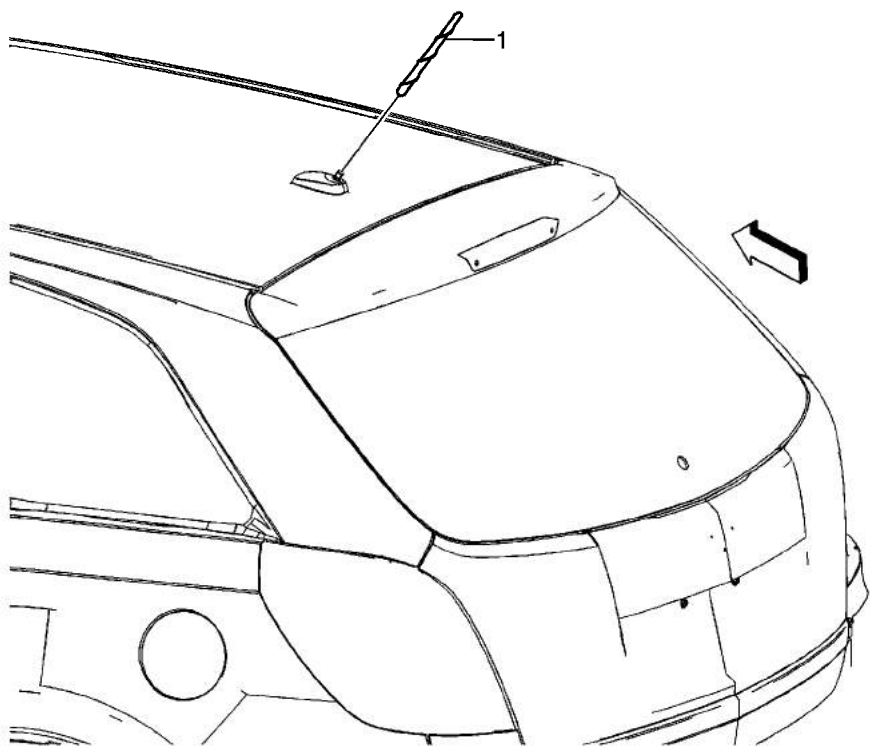




Callout	Component Name
1	Radio Antenna
	Procedure
	Screw the radio antenna into the radio antenna base assembly.

Electronic Navigation Antenna Replacement

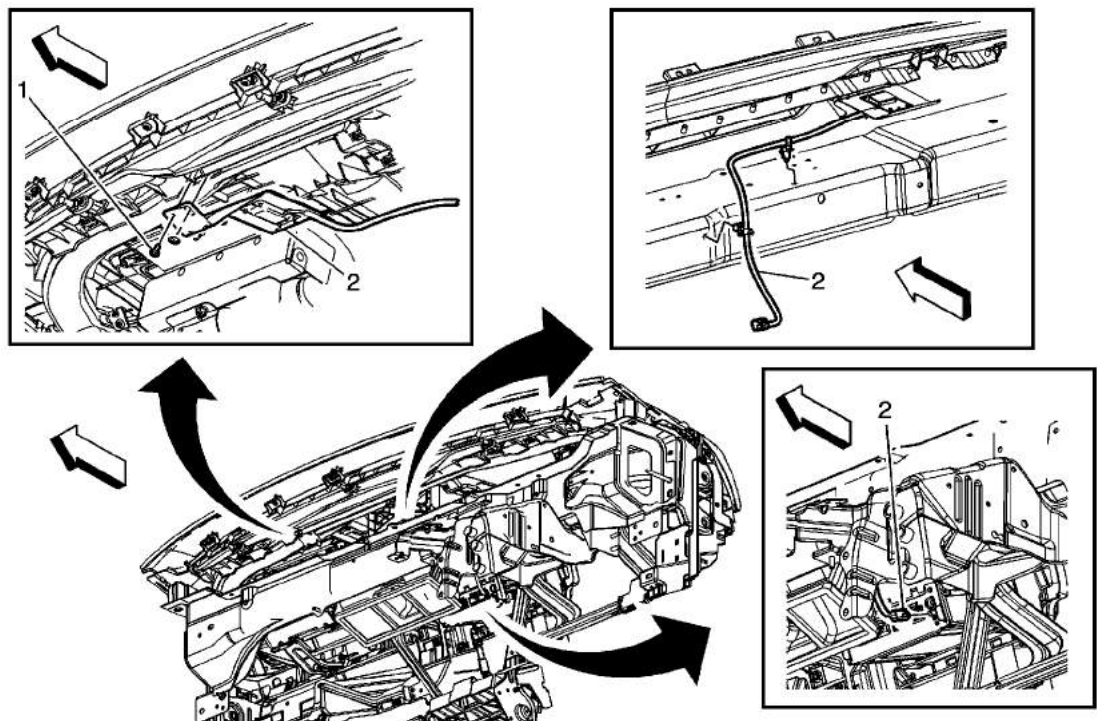


Callout	Component Name
Preliminary Procedure	
Remove the instrument panel trim panel. Refer to Instrument Panel Trim Panel Replacement .	
1	Navigation Antenna Mount Plate Screw Caution: Refer to Fastener Caution in the Preface section. Tighten 2.5 N·m (22 lb in)
2	Navigation Antenna Assembly

Digital Radio Antenna Cable Replacement

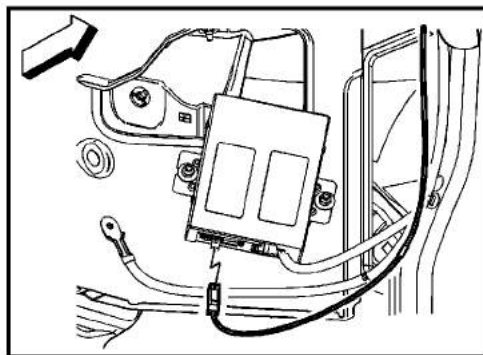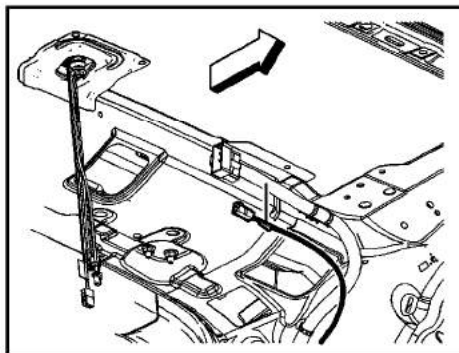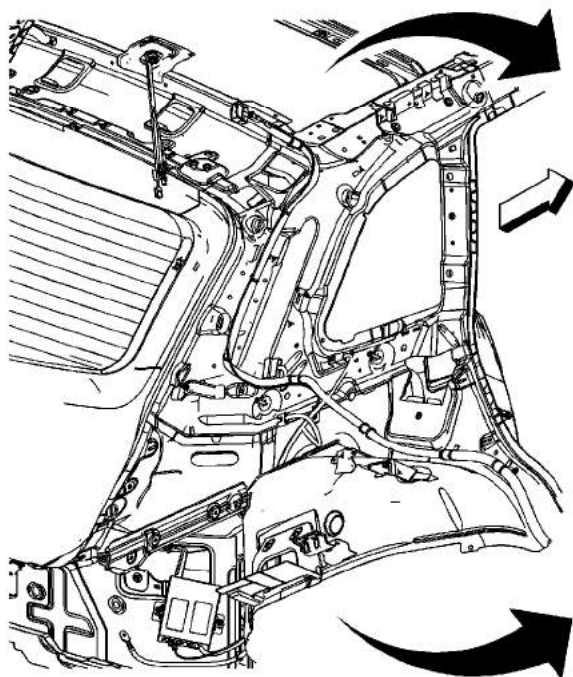


Callout	Component Name
Preliminary Procedures 1. Remove the left rear quarter upper trim panel. Refer to Quarter Upper Trim Panel Replacement. 2. Remove the left rear quarter lower trim panel. Refer to Quarter Lower Rear Trim Panel Replacement. 3. Lower the rear of the headliner as needed. Refer to Headlining Trim Panel Replacement.	
1	Digital Radio Antenna Cable Assembly Procedure 1. Disconnect the electrical connectors at each end of the cable. 2. If the cable is taped into the wiring harness then cut the ends off the old cable and route the new cable close to the old one as possible using tie straps to secure the new cable.

Mobile Telephone Antenna Coaxial Cable Replacement

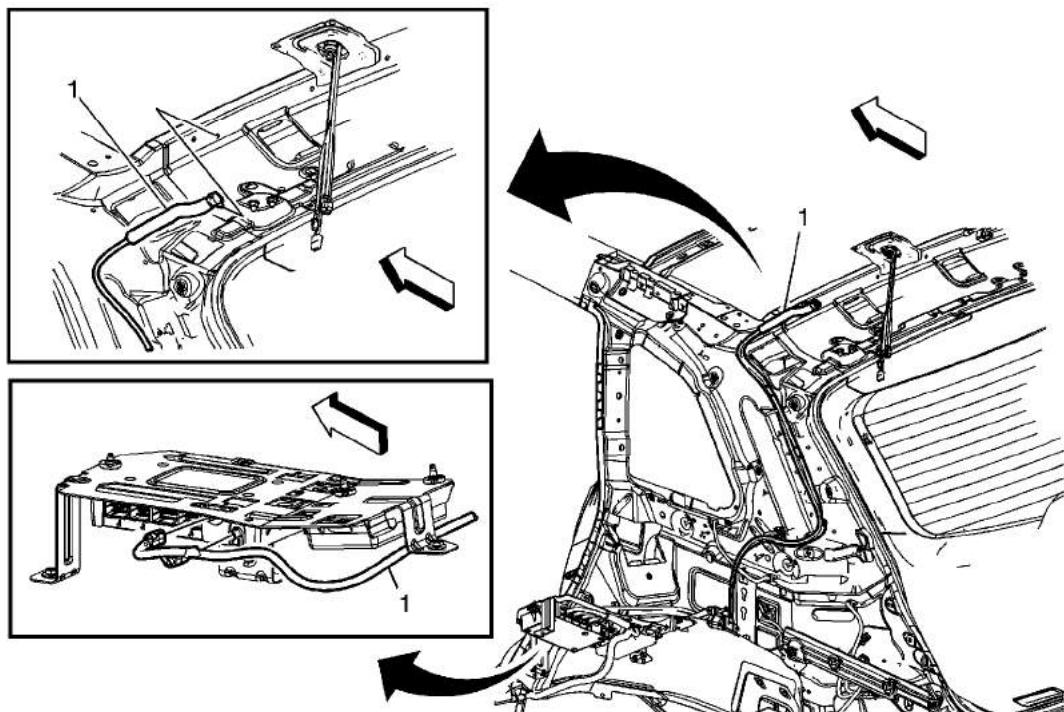


Callout	Component Name
Preliminary Procedures 1. Remove the right rear quarter upper trim panel. Refer to Quarter Upper Trim Panel Replacement. 2. Remove the right rear quarter lower trim panel. Refer to Quarter Lower Rear Trim Panel Replacement. 3. Remove the right rear front floor panel carpet as needed. Refer to Front Floor Panel Carpet Replacement. 4. Lower the rear of the headliner as needed. Refer to Headlining Trim Panel Replacement.	
1	Mobile Telephone Control Module Cable Assembly Procedure 1. Disconnect the electrical connectors at each end of the cable. 2. If the mobile telephone (m/tel) cable is taped into the wiring harness then cut the ends off the old cable and route the new m/tel cable close to the old one as possible using tie straps to secure the new cable.

Antenna Cable Replacement

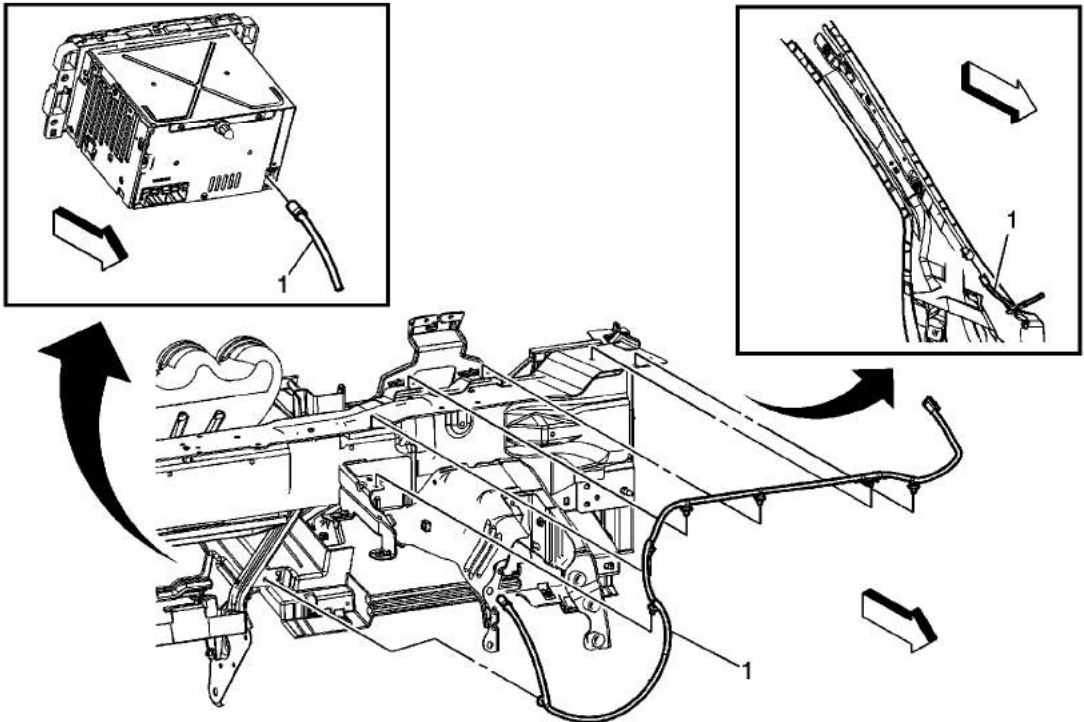



Callout	Component Name
Preliminary Procedures 1. Remove the left windshield pillar garnish molding. Refer to Windshield Pillar Garnish Molding Replacement. 2. Remove the instrument panel trim panel. Refer to Instrument Panel Trim Panel Replacement.	
1	Radio Antenna Cable Assembly Procedure Disconnect the electrical connectors at each end of the cable.

Radio Antenna Cable Extension Cable Replacement

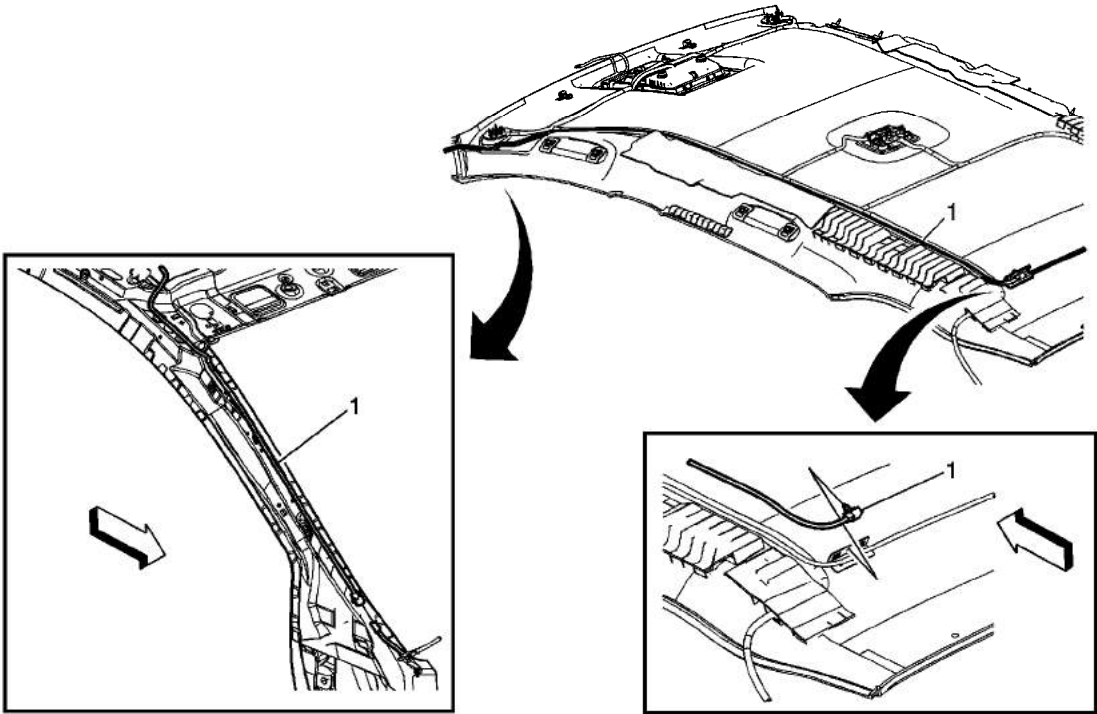


Callout	Component Name
Preliminary Procedures 1. Remove the left windshield pillar garnish molding. Refer to Windshield Pillar Garnish Molding Replacement . 2. Lower the left side of the headliner as needed. Refer to Headlining Trim Panel Replacement .	
1	Radio Antenna Cable Extension Cable Assembly Procedure Disconnect the electrical connectors at each end of the cable.

Audio System Transceiver Module Replacement

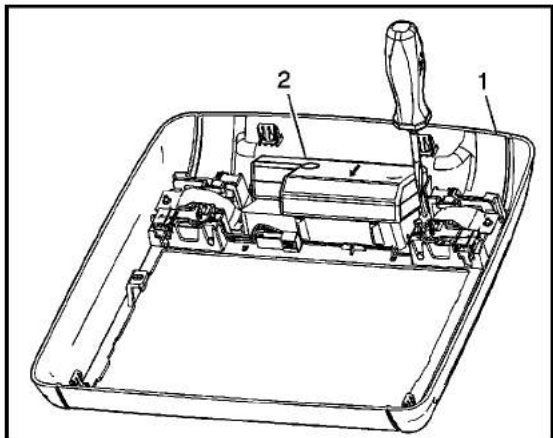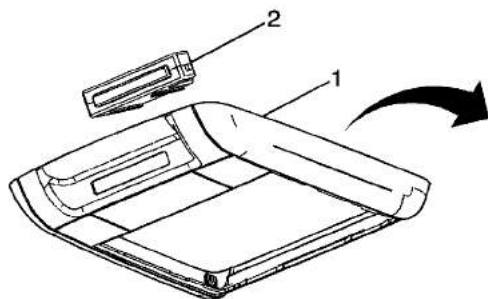


Callout	Component Name
Preliminary Procedure	
Remove the video display assembly. Refer to Video Display Replacement .	
1	Roof Console Assembly Refer to Roof Rear Console Replacement .
2	Video Disc Player Remote Control and Headphone Transceiver Assembly Procedure 1. Disconnect the electrical connector. 2. Use a flat bladed tool to release the tabs that secure the module to the roof console on each side of the module. 3. Slide forward and up to release from the roof console.

Video Display Replacement

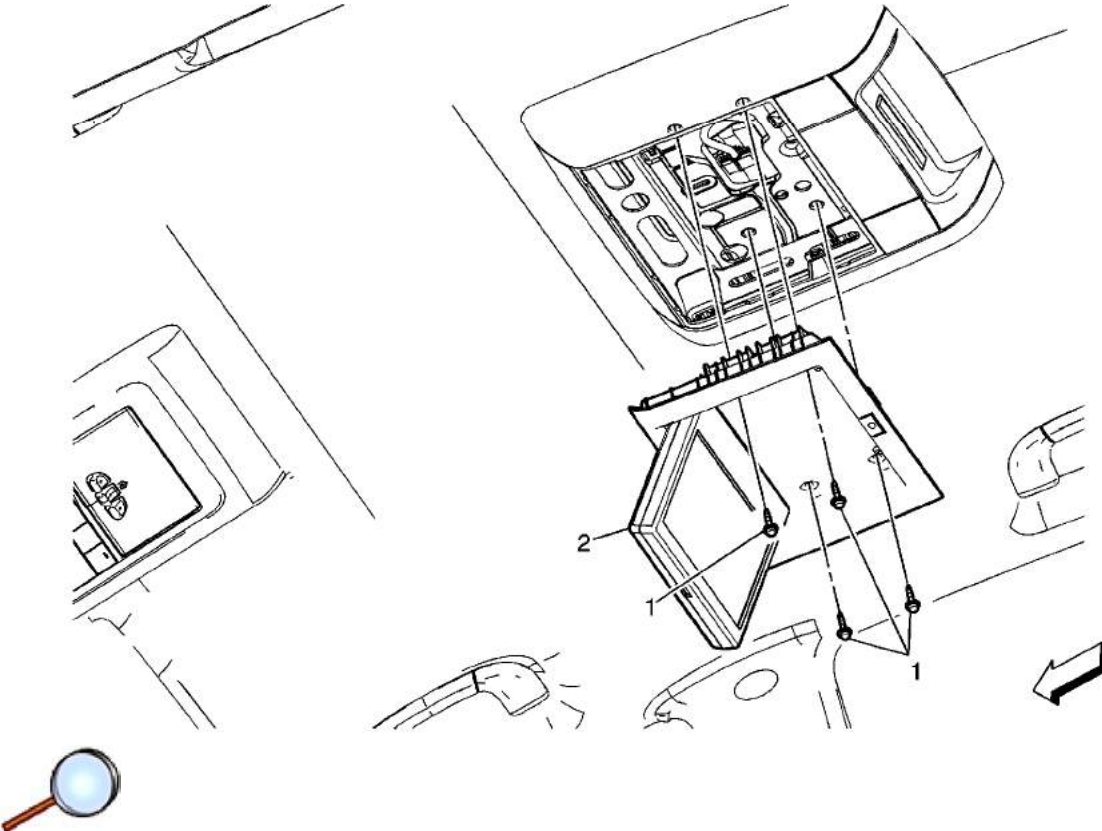


Callout	Component Name
1	Video Display Assembly Screws (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 2.5 N·m (22 lb in) Procedure Make sure that all 4 washers on the 4 mounting screws are accounted for. If any washers are off the screw and loose, discard to prevent a rattle. The washers were required only for assembly plant installation, and can be used if still on the screw or they can be discarded.
2	Video Display Assembly Procedure 1. Pull down to disengage the retainer clip and remove from the vehicle. 2. Disconnect the electrical connector.

Rear Seat Audio Control Replacement

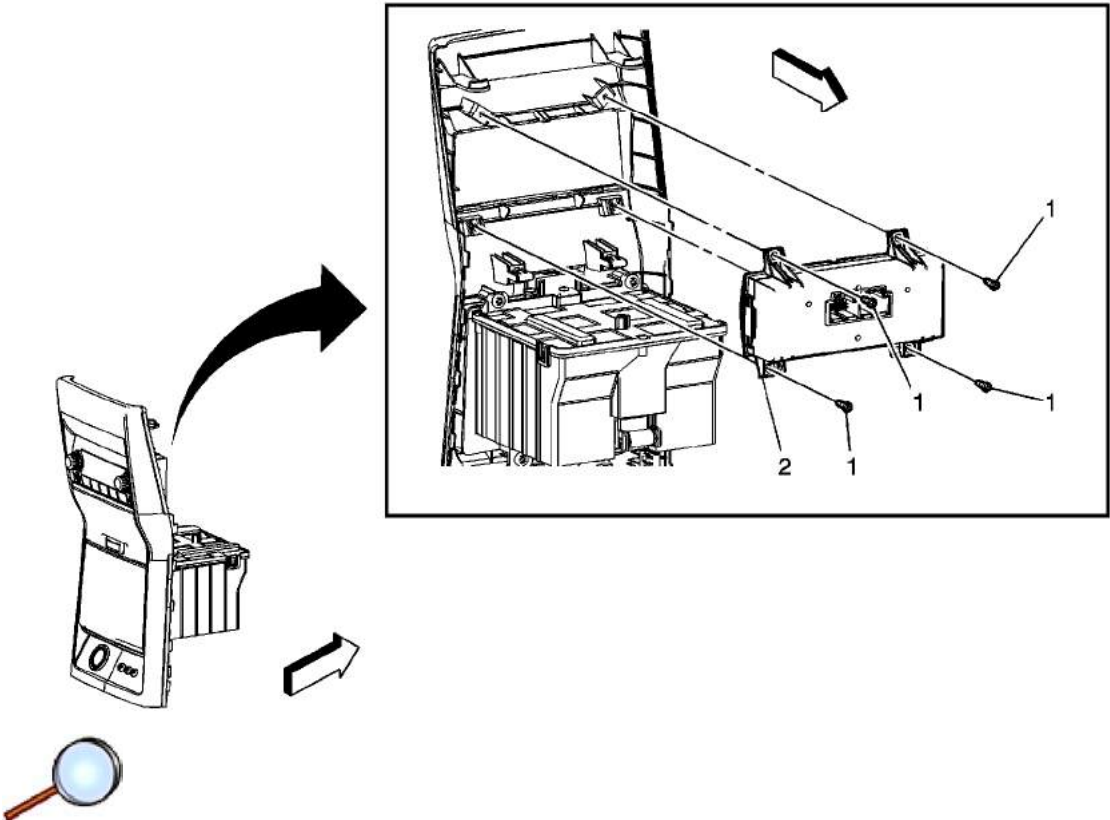


Callout	Component Name
Preliminary Procedure	
Remove the front floor console rear cover. Refer to Front Floor Console Rear Cover Replacement .	
1	AM/FM Stereo and Clock and Compact Disc Player Radio Control Assembly Screw (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 2.5 N·m (22 lb in)
2	AM/FM Stereo and Clock and Compact Disc Player Radio Control Assembly

Audio / Video Disc Player Adapter Replacement

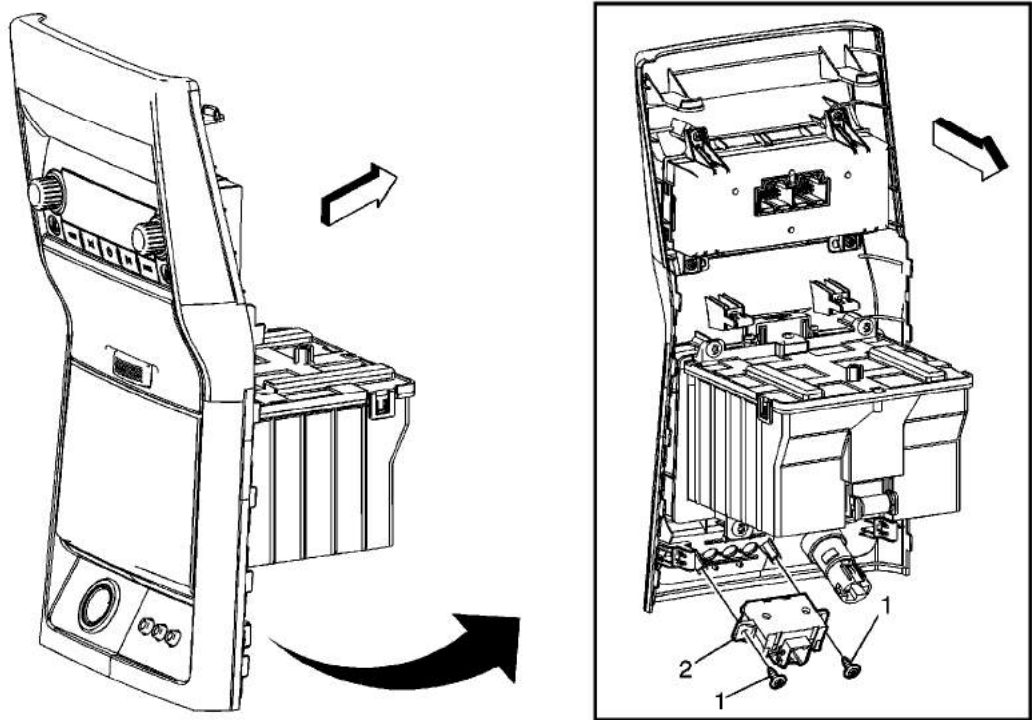


Callout	Component Name
Preliminary Procedure	
Remove the front floor console rear cover. Refer to Front Floor Console Rear Cover Replacement .	
1	Audio/Video Disc Player Adapter Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Audio/Video Disc Player Adapter Assembly

Radio Front Speaker Grille Replacement

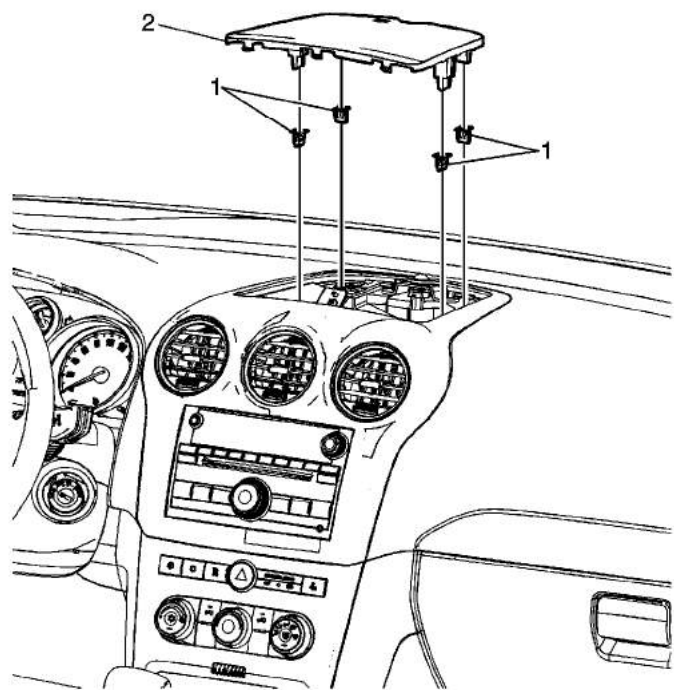


Callout	Component Name
1	Radio Front Speaker Grille Retainer (Qty: 4)
2	Radio Front Speaker Grille Assembly
	Procedure
	Use a plastic flat bladed tool to remove the grille assembly.

Radio Front Speaker Replacement

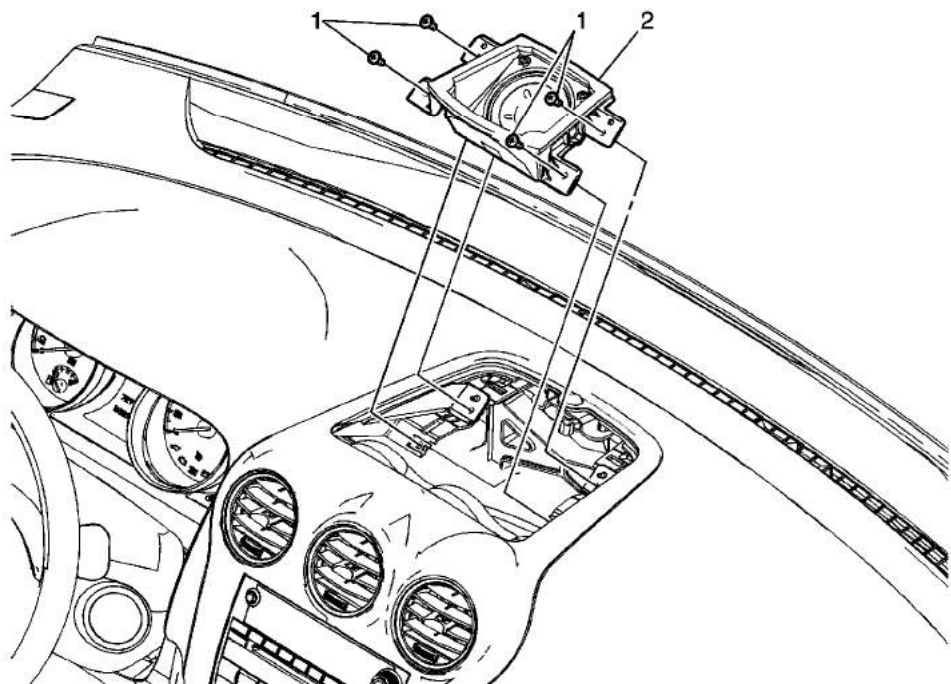


Callout	Component Name
Preliminary Procedure	
Remove the radio front speaker grille. Refer to Radio Front Speaker Grille Replacement .	
1	Radio Front Speaker Screw (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 3 N·m (27 lb in)
2	Radio Front Speaker Assembly Procedure Disconnect the electrical connector.

Radio Front Side Door Upper Speaker Replacement

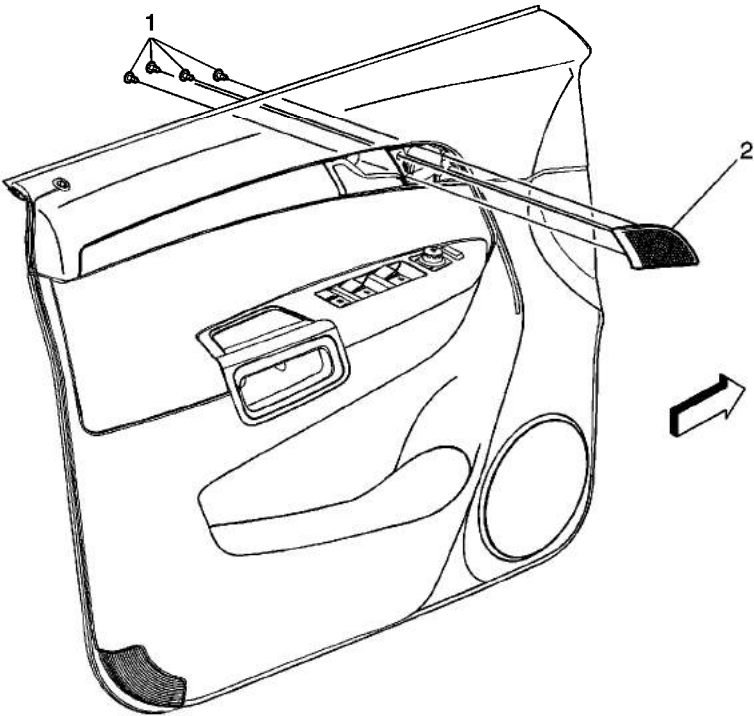


Callout	Component Name
Preliminary Procedure	
Remove the front side door trim panel. Refer to Front Side Door Trim Panel Replacement .	
1	Radio Front Side Door Upper Speaker Screw (Qty 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 2.5 N·m (22 lb in)
2	Radio Front Side Door Upper Speaker Assembly Procedure Disconnect the electrical connectors.

Radio Front Side Door Lower Speaker Replacement

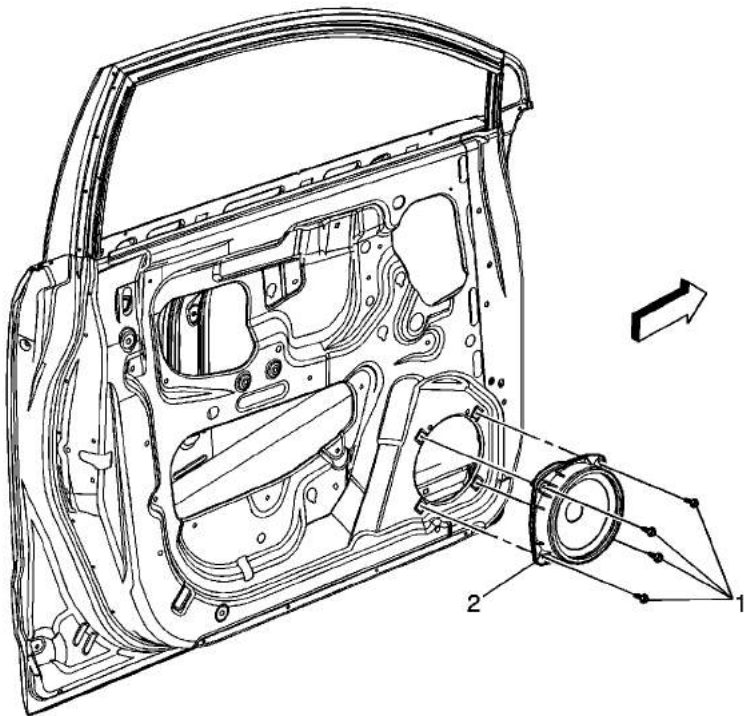


Callout	Component Name
Preliminary Procedure	
Remove the front side door trim panel. Refer to Front Side Door Trim Panel Replacement .	
1	Radio Front Side Door Lower Speaker Screw (Qty 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 2.5 N·m (22 lb in)
2	Radio Front Side Door Lower Speaker Assembly Procedure Disconnect the electrical connectors.

Radio Rear Side Door Lower Speaker Replacement

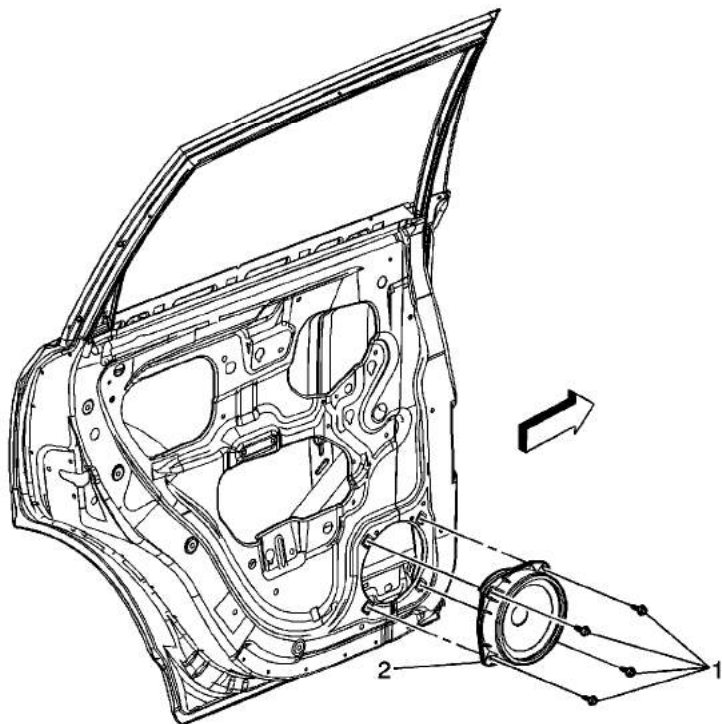


Callout	Component Name
Preliminary Procedure	
Remove the rear side door trim panel. Refer to Rear Side Door Trim Panel Replacement .	
1	Radio Rear Side Door Lower Speaker Screw (Qty 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 2.5 N·m (22 lb in)
2	Radio Rear Side Door Lower Speaker Assembly Procedure Disconnect the electrical connectors.

Radio Rear Side Door Upper Speaker Replacement

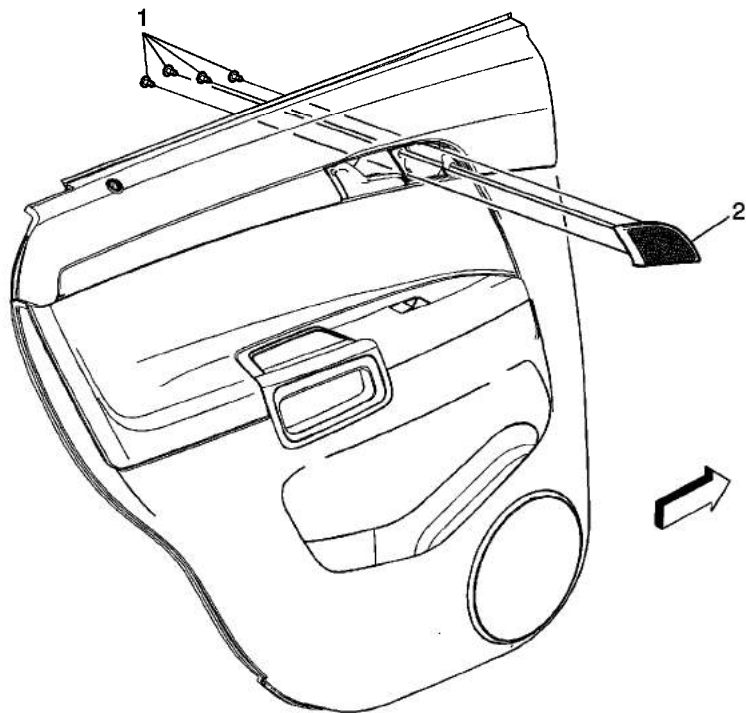

Callout	Component Name
Preliminary Procedure	
Remove the rear side door trim panel. Refer to Rear Side Door Trim Panel Replacement .	
1	Radio Rear Side Door Upper Speaker Screw (Qty 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 2.5 N·m (22 lb in)
2	Radio Rear Side Door Upper Speaker Assembly Procedure Disconnect the electrical connectors.

Radio Rear Compartment Speaker Replacement

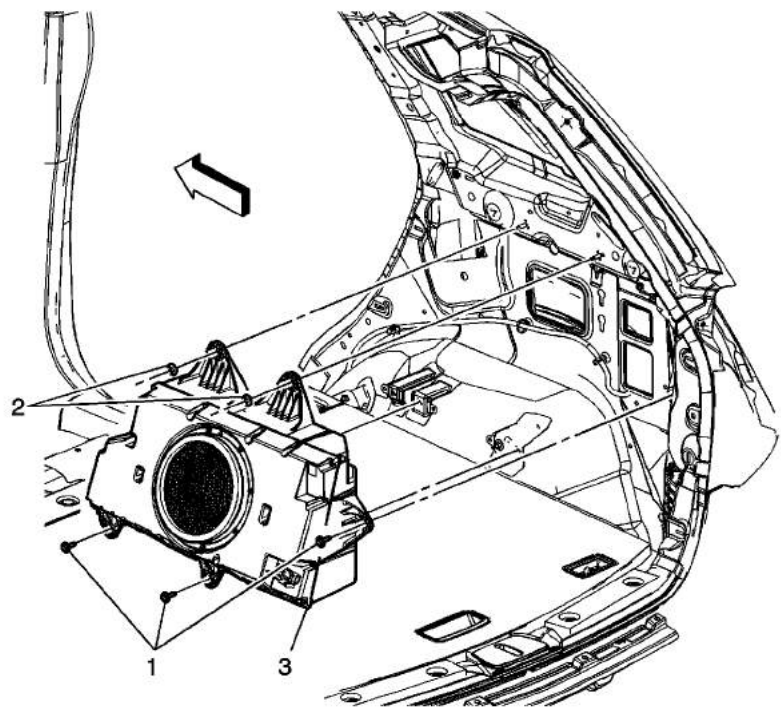

Callout	Component Name
Preliminary Procedure	
Remove the rear wheelhouse trim panel. Refer to Quarter Lower Rear Trim Panel Replacement .	
1	Radio Rear Compartment Speaker Bolt (Qty: 3) Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in)
2	Radio Rear Compartment Speaker Nut (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in)
3	Radio Rear Compartment Speaker Assembly

Disconnect the electrical connection.