

# FUEL

## CONTENTS

13109000195

MULTIPOINT FUEL INJECTION (MPI) ..... 13A

ELECTRONIC CONTROL TYPE CARBURETTOR ..... 13B

CONVENTIONAL TYPE CARBURETTOR ..... 13C

VARIABLE VENTURI TYPE CARBURETTOR ..... 13D

DIESEL FUEL ..... 13E

FUEL SUPPLY ..... 13F

TRACTION CONTROL SYSTEM (TCS) ..... 13H

### NOTE

THE GROUPS MARKED BY ■ ARE NOT IN THIS MANUAL

# MULTIPOINT FUEL INJECTION (MPI)

## CONTENTS

13109000201

### MULTIPOINT FUEL INJECTION <4G1>

|                                                                           |    |
|---------------------------------------------------------------------------|----|
| <b>GENERAL INFORMATION</b> .....                                          | 4  |
| <b>SERVICE SPECIFICATIONS</b> .....                                       | 7  |
| <b>SEALANT</b> .....                                                      | 7  |
| <b>SPECIAL TOOLS</b> .....                                                | 8  |
| <b>TROUBLESHOOTING</b> .....                                              | 8  |
| <b>ON-VEHICLE SERVICE</b> .....                                           | 75 |
| Throttle Body (Throttle Valve Area) Cleaning .....                        | 75 |
| Idle Position Switch and Throttle Position Sensor Adjustment .....        | 75 |
| Fixed SAS Adjustment .....                                                | 76 |
| Basic Idle Speed Adjustment .....                                         | 76 |
| Fuel Pressure Test .....                                                  | 78 |
| Fuel Pump Connector Disconnection (How to Reduce the Fuel Pressure) ..... | 81 |
| Fuel Pump Operation Check .....                                           | 81 |
| Component Location .....                                                  | 82 |
| Control Relay and Fuel Pump Relay Continuity Check .....                  | 83 |
| Intake Air Temperature Sensor Check .....                                 | 83 |
| Engine Coolant Temperature Sensor Check .....                             | 83 |
| Throttle Position Sensor Check .....                                      | 84 |
| Idle Position Switch Check .....                                          | 84 |
| Oxygen Sensor Check .....                                                 | 85 |
| Injector Check .....                                                      | 86 |

|                                                            |    |
|------------------------------------------------------------|----|
| Idle Speed Control (ISC) Servo (Stepper Motor) Check ..... | 88 |
| Purge Control Solenoid Valve Check .....                   | 89 |
| EGR Control Solenoid Valve Check .....                     | 89 |

|                       |    |
|-----------------------|----|
| <b>INJECTOR</b> ..... | 90 |
|-----------------------|----|

|                            |    |
|----------------------------|----|
| <b>THROTTLE BODY</b> ..... | 92 |
|----------------------------|----|

### MULTIPOINT FUEL INJECTION <4G9>

|                                     |     |
|-------------------------------------|-----|
| <b>GENERAL INFORMATION</b> .....    | 95  |
| <b>SERVICE SPECIFICATIONS</b> ..... | 100 |
| <b>SEALANT</b> .....                | 100 |
| <b>SPECIAL TOOLS</b> .....          | 101 |
| <b>TROUBLESHOOTING</b> .....        | 102 |
| <b>ON-VEHICLE SERVICE</b> .....     | 171 |

|                                                                           |     |
|---------------------------------------------------------------------------|-----|
| Throttle Body (Throttle Valve Area) Cleaning .....                        | 171 |
| Idle Position Switch and Throttle Position Sensor Adjustment .....        | 171 |
| Fixed SAS Adjustment .....                                                | 171 |
| Basic Idle Speed Adjustment .....                                         | 171 |
| Fuel Pressure Test .....                                                  | 172 |
| Fuel Pump Connector Disconnection (How to Reduce the Fuel Pressure) ..... | 172 |
| Fuel Pump Operation Check .....                                           | 172 |
| Component Location .....                                                  | 173 |

CONTINUED ON NEXT PAGE

|                                                          |     |
|----------------------------------------------------------|-----|
| Control Relay and Fuel Pump Relay Continuity Check ..... | 174 |
| Intake Air Temperature Sensor Check ....                 | 174 |
| Engine Coolant Temperature Sensor Check .....            | 174 |
| Throttle Position Sensor Check .....                     | 174 |
| Idle Position Switch Check .....                         | 174 |
| Oxygen Sensor Check .....                                | 175 |
| Injector Check .....                                     | 175 |

|                                                            |     |
|------------------------------------------------------------|-----|
| Idle Speed Control (ISC) Servo (Stepper Motor) Check ..... | 175 |
| Purge Control Solenoid Valve Check .....                   | 176 |
| EGR Control Solenoid Valve Check .....                     | 176 |
| Air By-pass Control Solenoid Valve Check <MVV> .....       | 176 |
| Air By-pass Valve Check <MVV> .....                        | 177 |

|                       |            |
|-----------------------|------------|
| <b>INJECTOR .....</b> | <b>178</b> |
|-----------------------|------------|

|                            |            |
|----------------------------|------------|
| <b>THROTTLE BODY .....</b> | <b>180</b> |
|----------------------------|------------|

# MULTIPOINT FUEL INJECTION (MPI) <4G1>

13100010142

## GENERAL INFORMATION

The Multipoint Fuel Injection System consists of sensors which detect the engine conditions, the engine-ECU which controls the system based on signals from these sensors, and actuators which operate under the control of the engine-ECU. The engine-ECU carries out

activities such as fuel injection control, idle speed control and ignition timing control. In addition, the engine-ECU is equipped with several diagnosis modes which simplify troubleshooting when a problem develops.

## FUEL INJECTION CONTROL

The injector drive times and injector timing are controlled so that the optimum air/fuel mixture is supplied to the engine to correspond to the continually-changing engine operation conditions.

A single injector is mounted at the intake port of each cylinder. Fuel is sent under pressure from the fuel tank by the fuel pump, with the pressure being regulated by the fuel pressure regulator. The fuel thus regulated is distributed to each of the injectors.

Fuel injection is normally carried out once for each cylinder for every two rotations of the crankshaft. The firing order is 1-3-4-2. This is

called sequential fuel injection. The engine-ECU provides a richer air/fuel mixture by carrying out "open-loop" control when the engine is cold or operating under high load conditions in order to maintain engine performance. In addition, when the engine is warm or operating under normal conditions, the engine-ECU controls the air/fuel mixture by using the oxygen sensor signal to carry out "closed-loop" control in order to obtain the theoretical air/fuel mixture ratio that provides the maximum cleaning performance from the three way catalyst.

## IDLE AIR CONTROL

The idle speed is kept at the optimum speed by controlling the amount of air that bypasses the throttle valve in accordance with changes in idling conditions and engine load during idling. The engine-ECU drives the idle speed control (ISC) motor to keep the engine running at the pre-set idle target speed in accordance with the engine coolant temperature and air

conditioner load. In addition, when the air conditioner switch is turned off and on while the engine is idling, the ISC motor operates to adjust the throttle valve bypass air amount in accordance with the engine load conditions in order to avoid fluctuations in the engine speed.

## IGNITION TIMING CONTROL

The power transistor located in the ignition primary circuit turns ON and OFF to control the primary current flow to the ignition coil. This controls the ignition timing in order to provide the optimum ignition timing with respect to the

engine operating conditions. The ignition timing is determined by the engine-ECU from the engine speed, intake air volume, engine coolant temperature and atmospheric pressure.

## SELF-DIAGNOSIS FUNCTION

- When an abnormality is detected in one of the sensors or actuators related to emission control, the engine warning lamp (check engine lamp) illuminates as a warning to the driver.
- When an abnormality is detected in one of the sensors or actuators, a diagnosis

code corresponding to the abnormality is output.

- The RAM data inside the ENGINE-ECU that is related to the sensors and actuators can be read by means of the MUT-II. In addition, the actuators can be force-driven under certain circumstances.



**OTHER CONTROL FUNCTIONS**

1. Fuel Pump Control  
Turns the fuel pump relay ON so that current is supplied to the fuel pump while the engine is cranking or running.
2. A/C Relay Control  
Turns the compressor clutch of the A/C ON and OFF.
3. Fan Relay Control  
The revolutions of the radiator fan and condenser fan are controlled in response to the engine coolant temperature and vehicle speed.
4. Purge Control Solenoid Valve Control  
Refer to GROUP 17.
5. EGR Control Solenoid Valve Control  
Refer to GROUP 17.

**GENERAL SPECIFICATIONS**

| Items                   |                                                   | Specifications                                                                                    |
|-------------------------|---------------------------------------------------|---------------------------------------------------------------------------------------------------|
| Throttle body           | Throttle bore mm                                  | 46                                                                                                |
|                         | Throttle position sensor                          | Variable resistor type                                                                            |
|                         | Idle speed control servo                          | Stepper motor type<br>(Stepper motor type by-pass air control system with the air volume limiter) |
|                         | Idle position switch                              | Rotary contact type, within throttle position sensor                                              |
| Engine-ECU              | Identification model No.                          | E2T65774 <Vehicles without immobilizer system><br>E2T65775 <Vehicles with immobilizer system>     |
| Sensors                 | Vacuum sensor (Manifold absolute pressure sensor) | Semiconductor type                                                                                |
|                         | Intake air temperature sensor                     | Thermistor type                                                                                   |
|                         | Engine coolant temperature sensor                 | Thermistor type                                                                                   |
|                         | Oxygen sensor                                     | Zirconia type                                                                                     |
|                         | Vehicle speed sensor                              | Magnetic resistive element type                                                                   |
|                         | Inhibitor switch                                  | Contact switch type                                                                               |
|                         | Crank angle sensor                                | Hall element type                                                                                 |
|                         | Power steering fluid pressure switch              | Contact switch type                                                                               |
| Actuators               | Control relay type                                | Contact switch type                                                                               |
|                         | Fuel pump relay type                              | Contact switch type                                                                               |
|                         | Injector type and number                          | Electromagnetic type, 4                                                                           |
|                         | Injector identification mark                      | CDH116                                                                                            |
|                         | EGR control solenoid valve                        | ON/OFF type solenoid valve                                                                        |
|                         | Purge control solenoid valve                      | ON/OFF type solenoid valve                                                                        |
| Fuel pressure regulator | Regulator pressure kPa                            | 329                                                                                               |

## MULTI-POINT FUEL INJECTION SYSTEM DIAGRAM

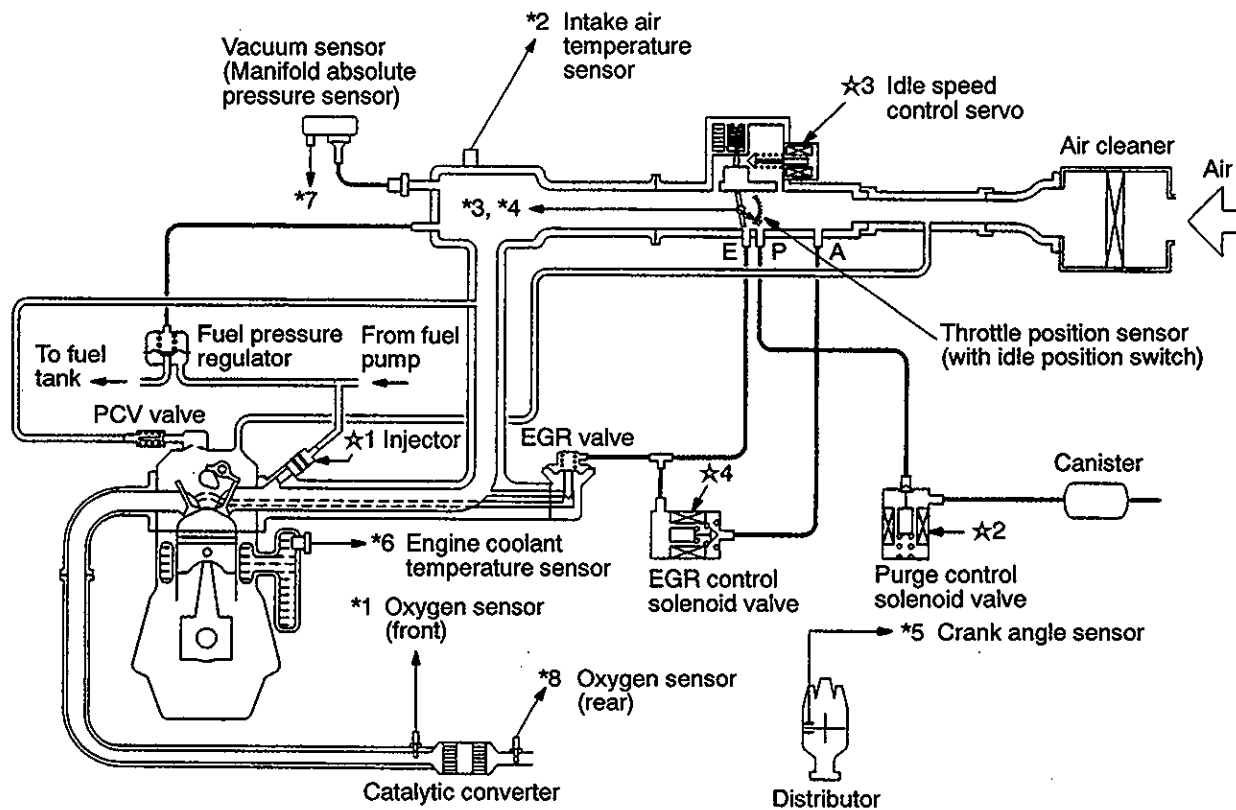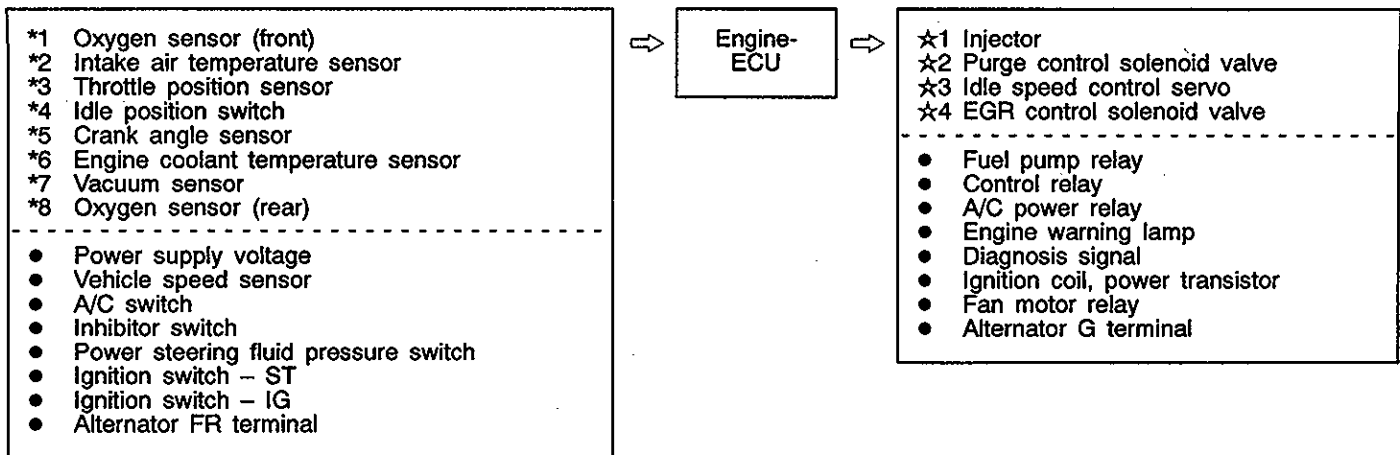

1FU1157

**SERVICE SPECIFICATIONS**

13100030131

| Items                                           |                           | Specifications           |
|-------------------------------------------------|---------------------------|--------------------------|
| Basic idle speed r/min                          |                           | 750±50                   |
| Idle speed when A/C is ON r/min                 |                           | 850 at neutral position  |
| Throttle position sensor adjusting voltage mV   |                           | 400–1,000                |
| Throttle position sensor resistance kΩ          |                           | 3.5–6.5                  |
| Idle speed control servo coil resistance Ω      |                           | 28–33 (at 20°C)          |
| Intake air temperature sensor resistance kΩ     | 20°C                      | 2.3–3.0                  |
|                                                 | 80°C                      | 0.30–0.42                |
| Engine coolant temperature sensor resistance kΩ | 20°C                      | 2.1–2.7                  |
|                                                 | 80°C                      | 0.26–0.36                |
| Oxygen sensor output voltage V                  |                           | 0.6–1.0                  |
| Fuel pressure kPa                               | Vacuum hose disconnection | 324–343 at curb idle     |
|                                                 | Vacuum hose connection    | Approx. 265 at curb idle |
| Injector coil resistance Ω                      |                           | 13–16 (at 20°C)          |





**SEALANT**






13100050038

| Item                                               | Specified sealant                          | Remark         |
|----------------------------------------------------|--------------------------------------------|----------------|
| Engine coolant temperature sensor threaded portion | 3M Nut Locking Part No. 4171 or equivalent | Drying sealant |

## SPECIAL TOOLS

13100060123
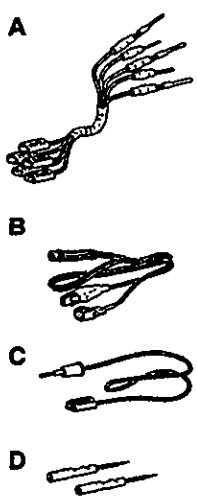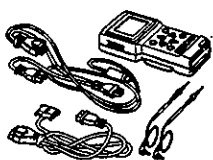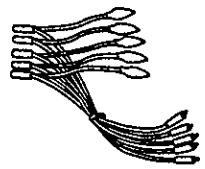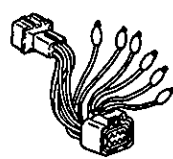
| Tool                                                                                                                  | Number                                                               | Name                                                                                   | Use                                                                                                                                                                                                                   |
|-----------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|----------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>A</p> <p>B</p> <p>C</p> <p>D</p> | MB991223<br>A: MB991219<br>B: MB991220<br>C: MB991221<br>D: MB991222 | Harness set<br>A: Test harness<br>B: LED harness<br>C: LED harness adapter<br>D: Probe | <ul style="list-style-type: none"> <li>Fuel gauge simple inspection</li> <li>A: Connector pin contact pressure inspection</li> <li>B, C: Power circuit inspection</li> <li>D: Commercial tester connection</li> </ul> |
|                                      | MB991502                                                             | MUT-II sub assembly                                                                    | <ul style="list-style-type: none"> <li>Reading diagnosis code</li> <li>MPI system inspection</li> </ul>                                                                                                               |
|                                    | MB991348                                                             | Test harness set                                                                       | Inspection using an analyzer                                                                                                                                                                                          |
|                                    | MB991519                                                             | Alternator harness connector                                                           | Measurement of voltage during troubleshooting                                                                                                                                                                         |
|                                    | MD998463                                                             | Test harness (6-pin, square)                                                           | <ul style="list-style-type: none"> <li>Inspection of idle speed control servo</li> <li>Inspection using an analyzer</li> </ul>                                                                                        |
|                                    | MD998464                                                             | Test harness (4-pin, triangle)                                                         | Inspection of oxygen sensor                                                                                                                                                                                           |

 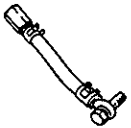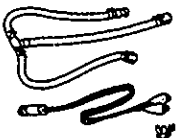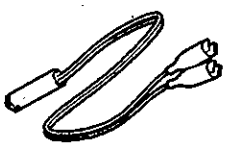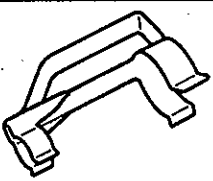
| Tool                                                                                           | Number   | Name                  | Use                                       |
|------------------------------------------------------------------------------------------------|----------|-----------------------|-------------------------------------------|
|               | MD998709 | Adaptor hose          | Measurement of fuel pressure              |
|               | MD998742 | Hose adaptor          | Measurement of fuel pressure              |
|               | MD998706 | Injector test set     | Checking the spray condition of injectors |
| <br>MB991607  | MB991607 | Injector test harness |                                           |
| <br>MD998741 | MD998741 | Injector test adaptor |                                           |
|             | MB991608 | Clip                  |                                           |

## TROUBLESHOOTING

13100850034

### DIAGNOSIS TROUBLESHOOTING FLOW

Refer to GROUP 00 – How to Use Troubleshooting/Inspection Service Points.

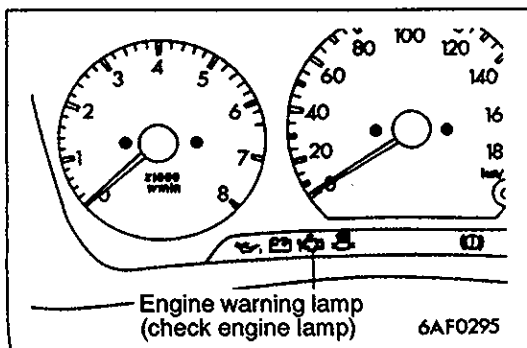

### DIAGNOSIS FUNCTION

13100860129

#### ENGINE WARNING LAMP (CHECK ENGINE LAMP)

If an abnormality occurs in any of the following items related to the Multipoint Fuel Injection (MPI) system, the engine warning lamp will illuminate.

If the lamp remains illuminated or if the lamp illuminates while the engine is running, check the diagnosis code output.

**Engine warning lamp inspection items**

|                                   |
|-----------------------------------|
| Engine-ECU                        |
| Oxygen sensor                     |
| Vacuum sensor                     |
| Intake air temperature sensor     |
| Throttle position sensor          |
| Engine coolant temperature sensor |
| Crank angle sensor                |
| Ignition timing adjustment signal |
| Injector                          |
| Immobilizer system                |

**Caution**

Engine warning lamp will come on even when terminal for ignition timing adjustment is short-circuited. Therefore, It is not abnormal that the lamp comes on even when terminal for Ignition timing adjustment is short-circuited at the time of Ignition timing adjustment.

**METHOD OF READING AND ERASING DIAGNOSIS CODES**

Refer to GROUP 00 – How to Use Troubleshooting/Inspection Service Points.

**INSPECTION USING MUT-II DATA LIST AND ACTUATOR TESTING**

1. Carry out inspection by means of the data list and the actuator test function.  
If there is an abnormality, check and repair the chassis harnesses and components.
2. After repairing, re-check using the MUT-II and check that the abnormal input and output have returned to normal as a result of the repairs.
3. Erase the diagnosis code memory.
4. Remove the MUT-II.
5. Start the engine again and carry out a road test to confirm that the problem has disappeared.

**FAIL-SAFE FUNCTION REFERENCE TABLE**

13100910121

When the main sensor malfunctions are detected by the diagnosis function, the vehicle is controlled by means of the pre-set control logic to maintain safe conditions for driving.

| Malfunctioning item                                     | Control contents during malfunction                                                                                                                                                                                                                                                                                                                |
|---------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Vacuum sensor                                           | <ol style="list-style-type: none"> <li>1. Uses the throttle position sensor signal and engine speed signal (crank angle sensor signal) to take reading of the basic injector drive time and basic ignition timing from the pre-set mapping.</li> <li>2. Fixes the ISC servo in the appointed position so idle control is not performed.</li> </ol> |
| Intake air temperature sensor                           | Controls as if the intake air temperature is 45°C.                                                                                                                                                                                                                                                                                                 |
| Throttle position sensor (TPS)                          | No increase in fuel injection amount during acceleration due to the throttle position sensor signal.                                                                                                                                                                                                                                               |
| Engine coolant temperature sensor                       | Controls as if the engine coolant temperature is 80°C.                                                                                                                                                                                                                                                                                             |
| Oxygen sensor (front)                                   | Air/fuel ratio feedback control (closed loop control) is not performed.                                                                                                                                                                                                                                                                            |
| Oxygen sensor (rear)                                    | Performs the feedback control (closed loop control) of the air/fuel ratio by using only the signal of the oxygen sensor (front) installed on the front of the catalytic converter.                                                                                                                                                                 |
| Communication wire with transmission control unit <A/T> | Ignition timing is not retarded during transmission gear shifting (overall engine and transmission control).                                                                                                                                                                                                                                       |
| Alternator FR terminal                                  | Does not control the output of the alternator according to an electrical load. (works as a normal alternator)                                                                                                                                                                                                                                      |

**INSPECTION CHART FOR DIAGNOSIS CODES**

13100870122


| Code No. | Diagnosis item                               | Reference page |
|----------|----------------------------------------------|----------------|
| 11       | Oxygen sensor (front) system                 | 13A-12         |
| 13       | Intake air temperature sensor system         | 13A-13         |
| 14       | Throttle position sensor system              | 13A-14         |
| 21       | Engine coolant temperature sensor system     | 13A-15         |
| 22       | Crank angle sensor system                    | 13A-16         |
| 24       | Vehicle speed sensor system                  | 13A-17         |
| 32       | Vacuum sensor system                         | 13A-18         |
| 36*      | Ignition timing adjustment signal system     | 13A-19         |
| 41       | Injector system                              | 13A-19         |
| 54       | Immobilizer system                           | 13A-20         |
| 59       | Oxygen sensor (rear) system                  | 13A-21         |
| 61       | Communication wire with A/T-ECU system <A/T> | 13A-22         |
| 64       | Alternator FR terminal system                | 13A-22         |

**NOTE**


\*: Malfunction code No. 36 is not memorized.

## INSPECTION PROCEDURE FOR DIAGNOSIS CODES


| Code No. 11 Oxygen sensor (front) system                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Probable cause                                                                                                                                                                                                            |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Range of Check</p> <ul style="list-style-type: none"> <li>• 3 minutes have passed after engine was started.</li> <li>• Engine coolant temperature is approx. 80°C or more.</li> <li>• Intake air temperature is 20–50°C.</li> <li>• Engine speed is approx. 2,000–3,000 r/min</li> <li>• Vehicle is moving at constant speed on a flat, level road surface</li> </ul> <p>Set conditions</p> <ul style="list-style-type: none"> <li>• The oxygen sensor (front) output voltage is around 0.6 V for 30 seconds (does not cross 0.6 V for 30 seconds).</li> <li>• When the range of check operations given above which accompany starting of the engine are carried out four time in succession, a problem is detected after each operation.</li> </ul> | <ul style="list-style-type: none"> <li>• Malfunction of the oxygen sensor (front)</li> <li>• Improper connector contact, open circuit or short-circuited harness wire</li> <li>• Malfunction of the engine-ECU</li> </ul> |

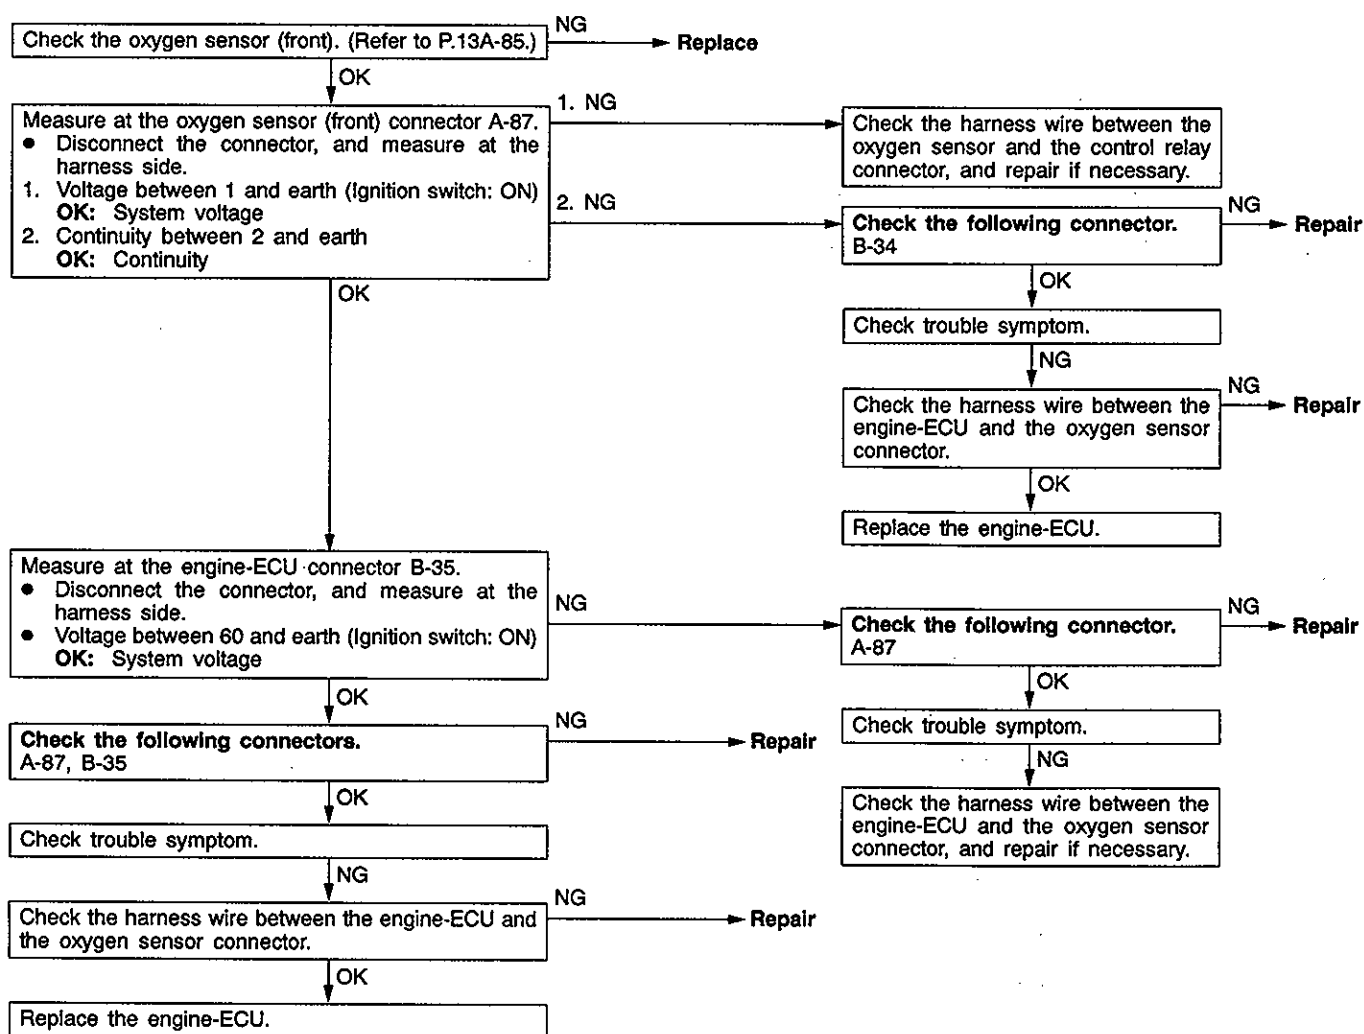


| Code No. 13 Intake air temperature sensor system                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Probable cause                                                                                                                                                                                                                                                           |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Range of Check</p> <ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>Excluding 60 seconds after the ignition switch is turned to ON or immediately after the engine starts.</li> </ul> <p>Set conditions</p> <ul style="list-style-type: none"> <li>Sensor output voltage is 4.6 V or more (corresponding to an intake air temperature of <math>-45^{\circ}\text{C}</math> or less) for 4 seconds.</li> </ul> <p>or</p> <ul style="list-style-type: none"> <li>Sensor output voltage is 0.2V or less (corresponding to an intake air temperature of <math>125^{\circ}\text{C}</math> or more) for 4 seconds.</li> </ul> | <ul style="list-style-type: none"> <li>Malfunction of the intake air temperature sensor</li> <li>Improper connector contact, open circuit or short-circuited harness wire of the intake air temperature sensor circuit</li> <li>Malfunction of the engine-ECU</li> </ul> |

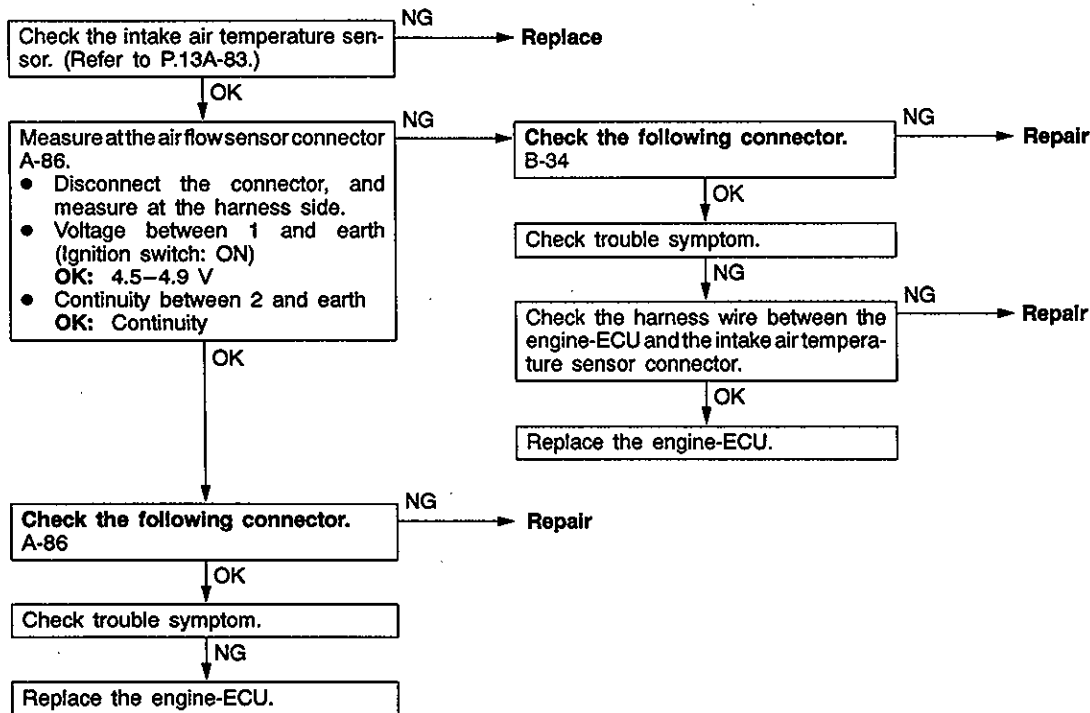


| Code No. 14 Throttle position sensor system                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Probable cause                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Range of Check</b> <ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>Excluding 60 seconds after the ignition switch is turned to ON or immediately after the engine starts.</li> </ul> <b>Set conditions</b> <ul style="list-style-type: none"> <li>When the idle position switch is ON, the sensor output voltage is 2 V or more for 4 seconds.</li> </ul> <b>or</b> <ul style="list-style-type: none"> <li>The sensor output voltage is 0.2 V or less for 4 seconds.</li> </ul> | <ul style="list-style-type: none"> <li>Malfunction of the throttle position sensor or maladjustment</li> <li>Improper connector contact, open circuit or short-circuited harness wire of the throttle position sensor circuit</li> <li>Improper "ON" state of idle position switch</li> <li>Short circuit of the idle position switch signal line</li> <li>Malfunction of the engine-ECU</li> </ul> |

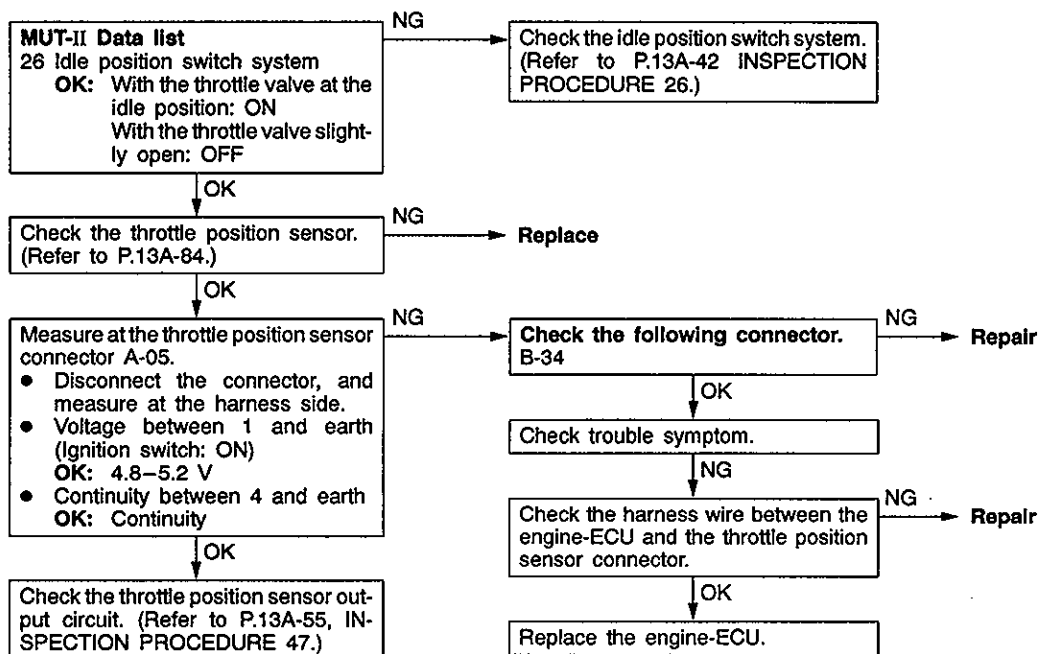


| Code No. 21 Engine coolant temperature sensor system                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Probable cause                                                                                                                                                                                                                                                                   |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Range of Check</p> <ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>Excluding 60 seconds after the ignition switch is turned to ON or immediately after the engine starts.</li> </ul> <p>Set conditions</p> <ul style="list-style-type: none"> <li>Sensor output voltage is 4.6 V or more (corresponding to an engine coolant temperature of <math>-45^{\circ}\text{C}</math> or less) for 4 seconds.</li> </ul> <p>or</p> <ul style="list-style-type: none"> <li>Sensor output voltage is 0.1 V or less (corresponding to an engine coolant temperature of <math>140^{\circ}\text{C}</math> or more) for 4 seconds.</li> </ul> | <ul style="list-style-type: none"> <li>Malfunction of the engine coolant temperature sensor</li> <li>Improper connector contact, open circuit or short-circuited harness wire of the engine coolant temperature sensor circuit</li> <li>Malfunction of the engine-ECU</li> </ul> |
| <p>Range of Check</p> <ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>Engine speed is approx. 50 r/min or more</li> </ul> <p>Set conditions</p> <ul style="list-style-type: none"> <li>The sensor output voltage increases from 1.6 V or less (corresponding to an engine coolant temperature of <math>40^{\circ}\text{C}</math> or more) to 1.6 V or more (corresponding to an engine coolant temperature of <math>40^{\circ}\text{C}</math> or less).</li> <li>After this, the sensor output voltage is 1.6 V or more for 5 minutes.</li> </ul>                                                                                 |                                                                                                                                                                                                                                                                                  |

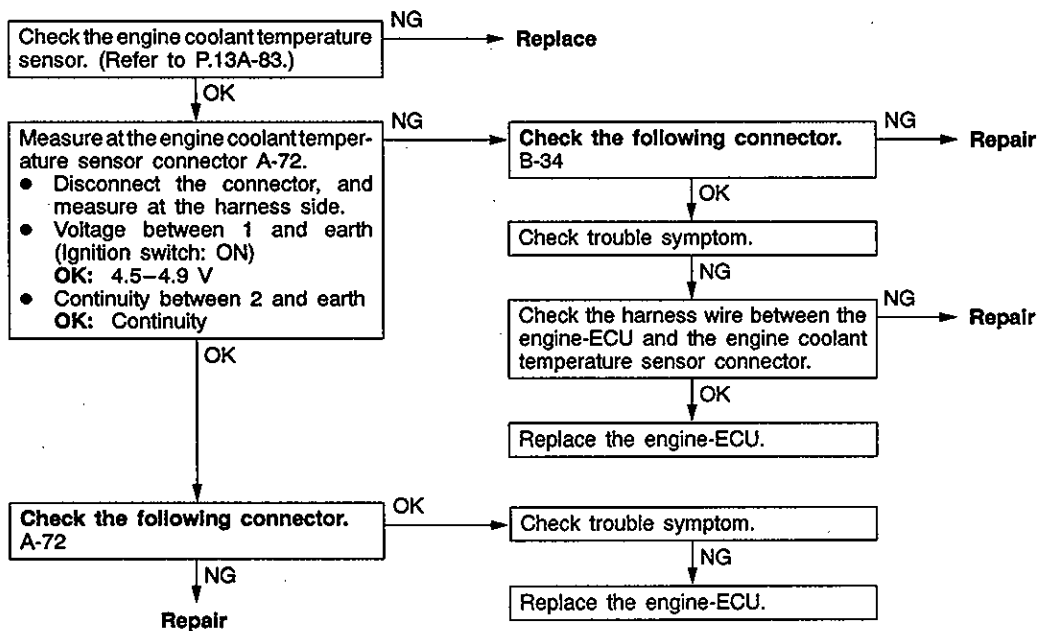


| Code No. 22 Crank angle sensor system                                                                                                                     | Probable cause                                                                                                                                                                             |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Range of Check</b><br>• Engine is cranking.<br><b>Set conditions</b><br>• Sensor output voltage does not change for 4 seconds (no pulse signal input.) | • Malfunction of the crank angle sensor<br>• Improper connector contact, open circuit or short-circuited harness wire of the crank angle sensor circuit<br>• Malfunction of the engine-ECU |

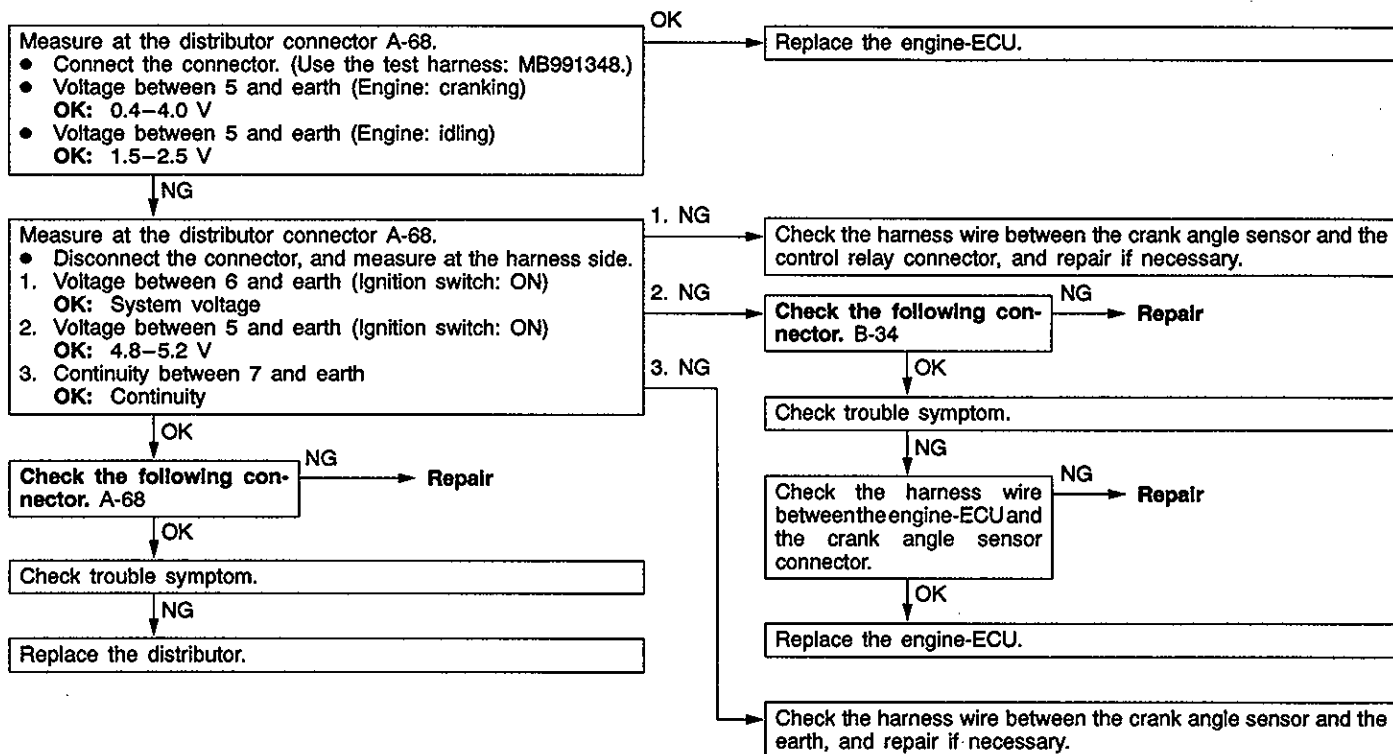


| Code No. 24 Vehicles speed sensor system                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | Probable cause                                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Range of check</b><br><ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>Excluding 60 seconds after the ignition switch is turned to ON or immediately after the engine starts.</li> <li>Idle position switch: OFF</li> <li>Engine speed is 3,000 r/min or more.</li> <li>Driving under high engine load conditions.</li> </ul> <b>Set conditions</b><br><ul style="list-style-type: none"> <li>Sensor output voltage does not change for 4 seconds (no pulse signal input).</li> </ul> | <ul style="list-style-type: none"> <li>Malfunction of the vehicle speed sensor</li> <li>Improper connector contact, open circuit or short-circuited harness wire of the vehicle speed sensor circuit</li> <li>Malfunction of the engine-ECU</li> </ul> |

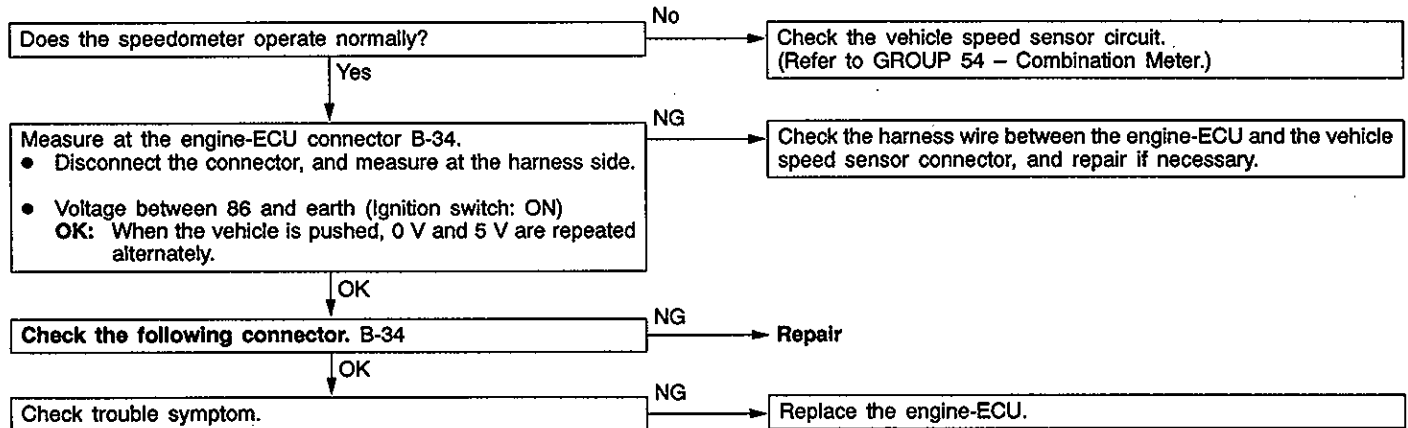


| Code No.32 Vacuum sensor system                                                                                                                                                                                                                                                                         | Range of Check                                                                                                                                    |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|
| Range of Check<br>• Ignition switch: ON<br>Set Conditions<br>• The output voltage of the vacuum sensor is 4.5 V or more for 4 seconds. (This corresponds to the absolute manifold pressure of 115 kPa or more.)                                                                                         | • 12 Malfunction of the vacuum sensor<br>• Improper connector contact, open circuit or short-circuited harness<br>• Malfunction of the engine-ECU |
| Range of Check<br>• The output voltage of the throttle position sensor is 1.25 V or more.<br>or<br>• The vehicle is stationary.<br>Set Conditions<br>• The output voltage of the vacuum sensor is 0.2 V or less for 4 seconds. (This corresponds to the absolute manifold pressure of 4.9 kPa or less.) |                                                                                                                                                   |

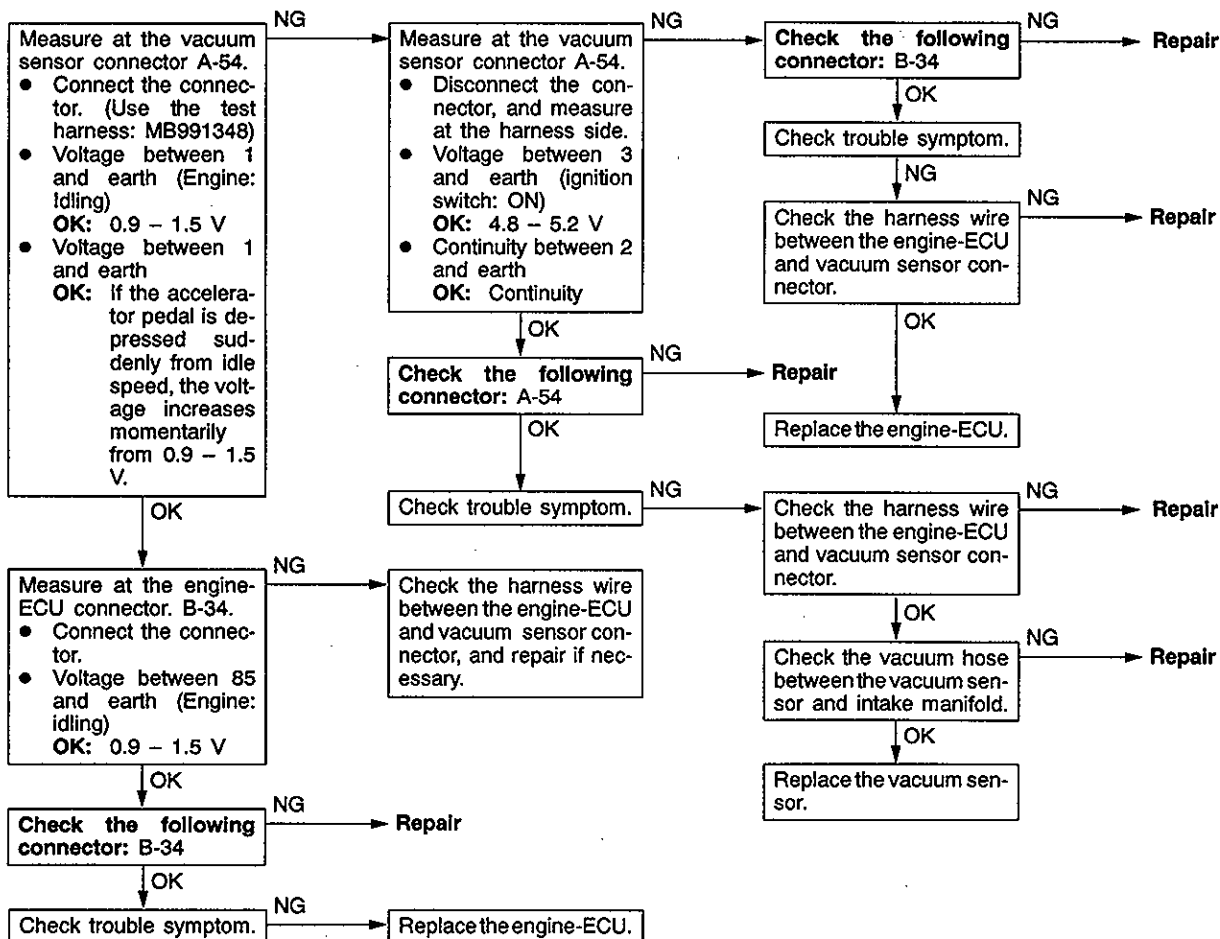

| Code No. 36 Ignition timing adjustment signal system                                                                              | Probable cause                                                                                            |
|-----------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
| Range of Check<br>• Ignition switch: ON<br>Set conditions<br>• The ignition timing adjusting signal wire is shorted to the earth. | • Short circuit to earth of the ignition timing adjustment signal line<br>• Malfunction of the engine-ECU |

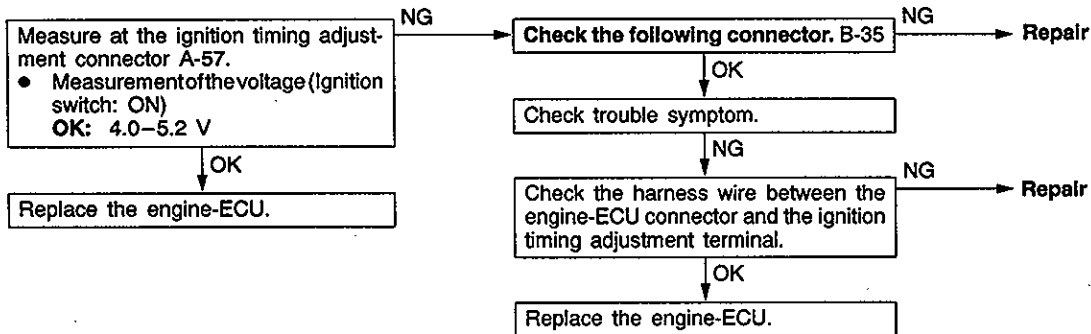


| Code No. 41 Injector system                                                                                                                                                                                                                                          | Probable cause                                                                                                                                                         |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Range of Check<br>• Engine speed is approx. 50–1,000 r/min<br>• The throttle position sensor output voltage is 1.15 V or less.<br>• Actuator test by MUT-II is not carried out.<br>Set conditions<br>• Surge voltage of injector coil is not detected for 4 seconds. | • Malfunction of the injector<br>• Improper connector contact, open circuit or short-circuited harness wire of the injector circuit<br>• Malfunction of the engine-ECU |

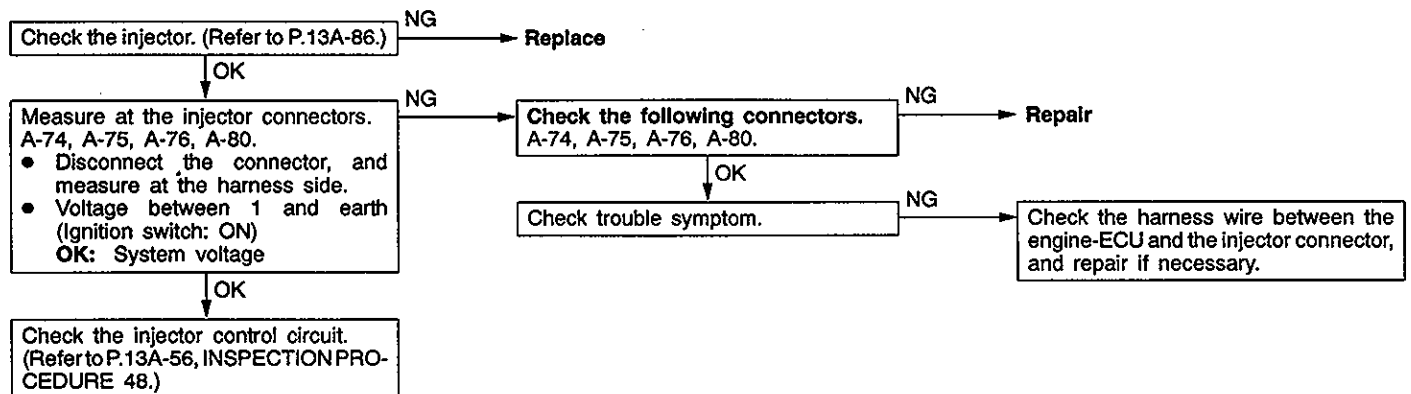


| Code No.54 Immobilizer system                                                                                                    | Probable cause                                                                                                                                                      |
|----------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Range of Check<br>• Ignition switch: ON<br>Set Conditions<br>• Improper communication between the engine-ECU and immobilizer-ECU | • Radio interference of ID codes<br>• Incorrect ID code<br>• Malfunction of harness or connector<br>• Malfunction of immobilizer-ECU<br>• Malfunction of engine-ECU |

**NOTE**


- (1) If the ignition switches are close each other when starting the engine, radio interference may cause this code to be displayed.
- (2) This code may be displayed when registering the key ID code.

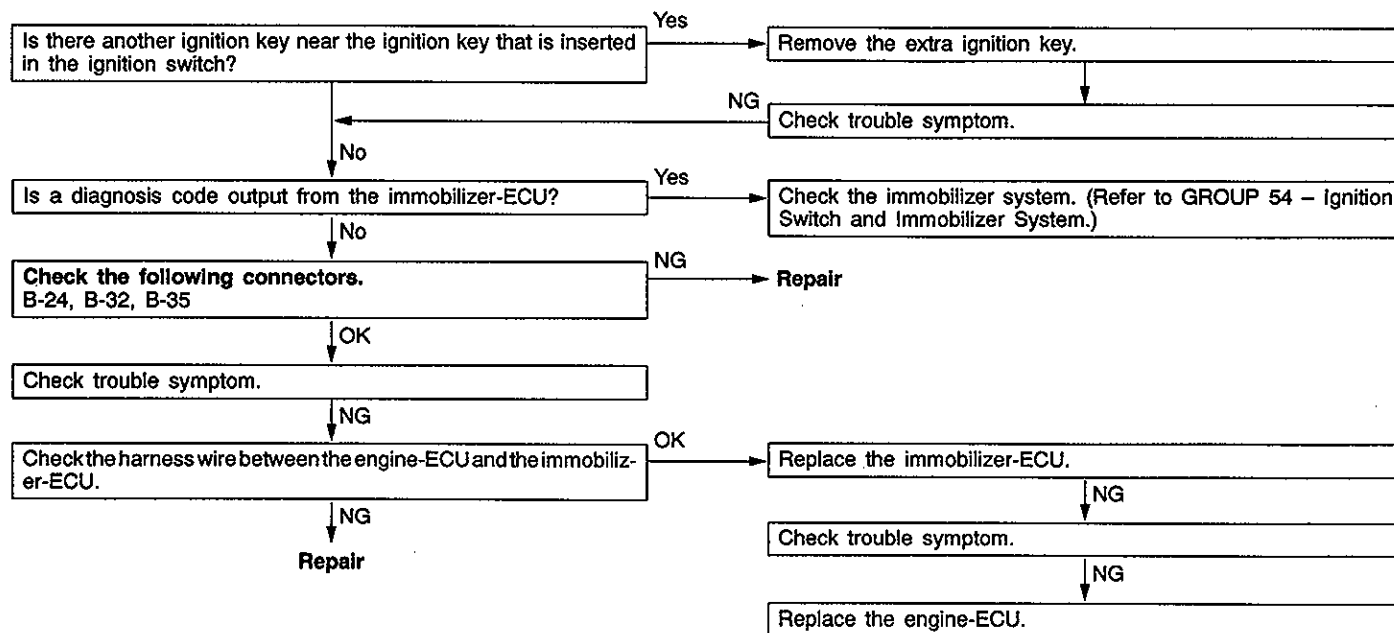


| Code No. 59 Oxygen sensor (rear) system                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Probable cause                                                                                                                                                                                                           |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Range of Check</p> <ul style="list-style-type: none"> <li>• 3 minutes have passed after engine was started.</li> <li>• Engine coolant temperature is approx. 80°C or more.</li> <li>• Idle position switch: OFF</li> <li>• The throttle position sensor output voltage is 4.1 V or more.</li> <li>• Open loop control in operation</li> <li>• 20 seconds have passed after deceleration finished.</li> </ul> <p>Set conditions</p> <ul style="list-style-type: none"> <li>• The oxygen sensor (rear) output voltage is 0.1 V or less.</li> <li>• The difference in the maximum and minimum values for the oxygen sensor (rear) output voltage is 0.08 V or less.</li> <li>• The oxygen sensor (rear) output voltage is 0.5 V or more.</li> <li>• The above conditions continue for a continuous period of 5 seconds.</li> </ul> | <ul style="list-style-type: none"> <li>• Malfunction of the oxygen sensor (rear)</li> <li>• Improper connector contact, open circuit or short-circuited harness wire</li> <li>• Malfunction of the engine-ECU</li> </ul> |

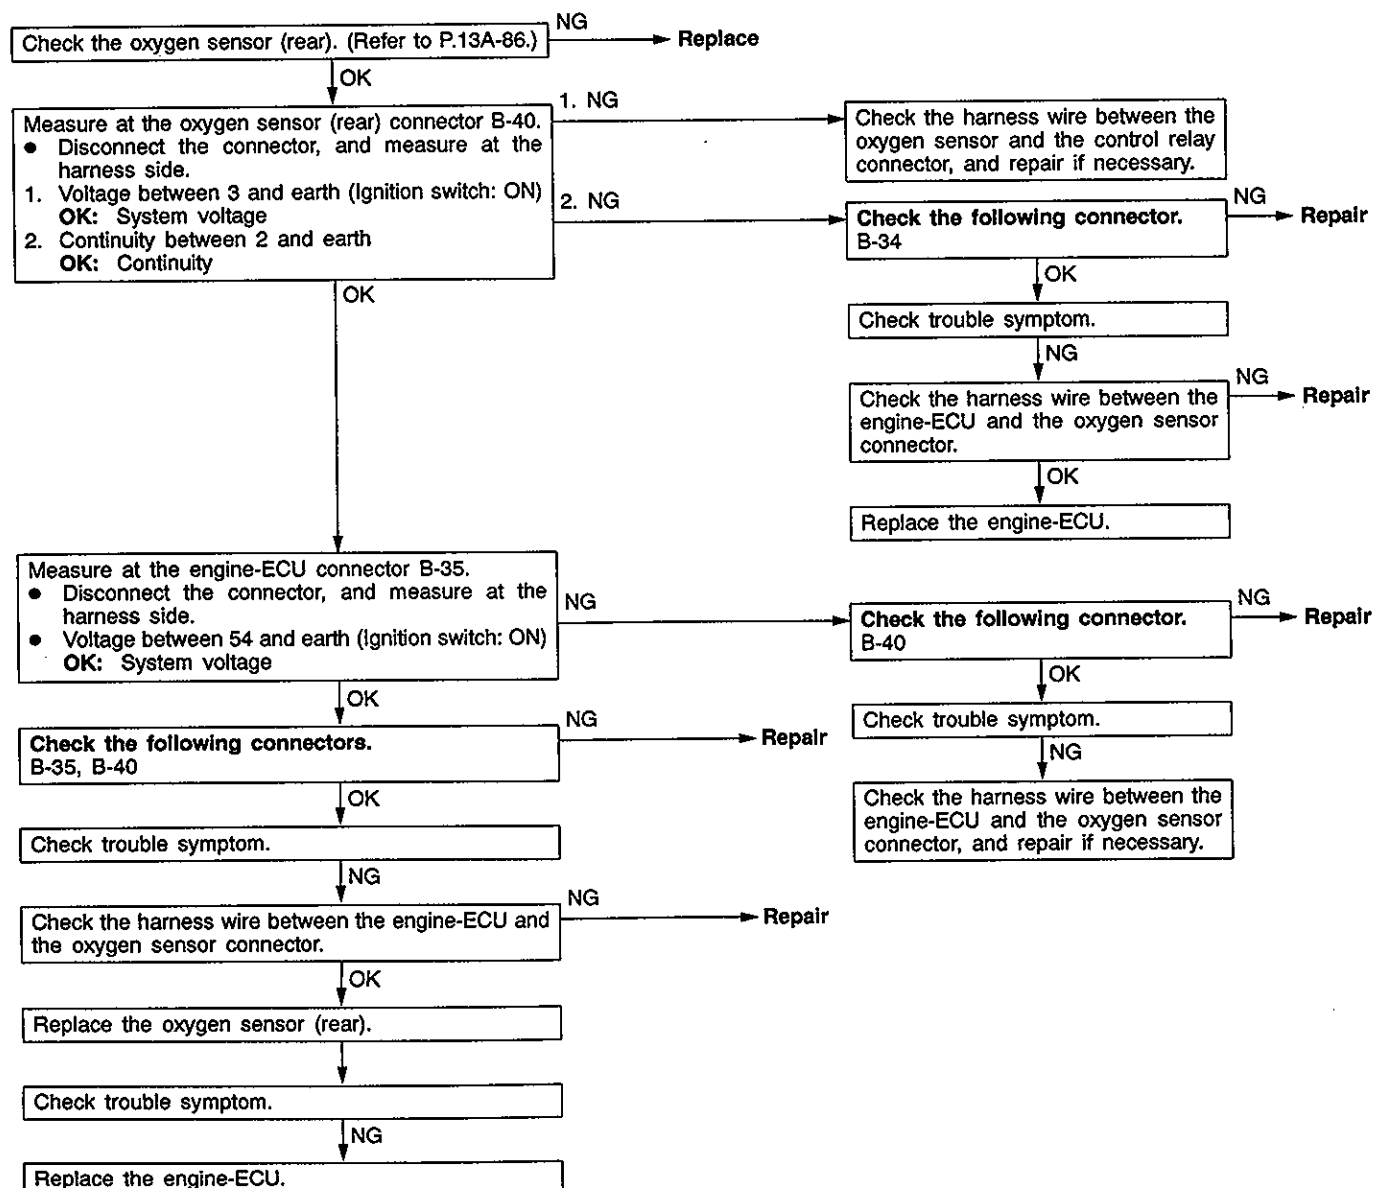

| Code No. 61 Communication wire with A/T-ECU system<br><A/T>                                                                                                                                                                                                                   | Probable cause                                                                                                         |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| <b>Range of Check</b><br>• 60 seconds or more have passed immediately after engine was started.<br>• Engine speed is approx. 50 r/min or more<br><b>Set conditions</b><br>The voltage of the torque reduction request signal from the A/T-ECU is LOW for 1.5 seconds or more. | • Malfunction of the harness wire and the connector<br>• Malfunction of the engine-ECU<br>• Malfunction of the A/T-ECU |

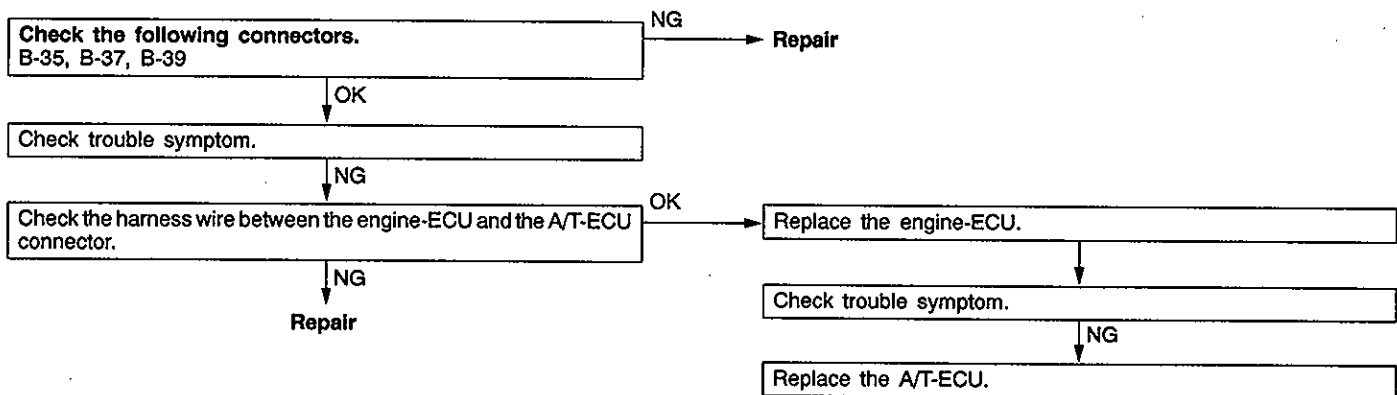

| Code No. 64 Alternator FR Terminal System                                                                                                                   | Probable cause                                                                      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| <b>Range of Check, Set Conditions</b><br>• The alternator FR terminal signal voltage remains high for approximately 20 seconds while the engine is running. | • Open circuit in alternator FR terminal circuit<br>• Malfunction of the engine-ECU |

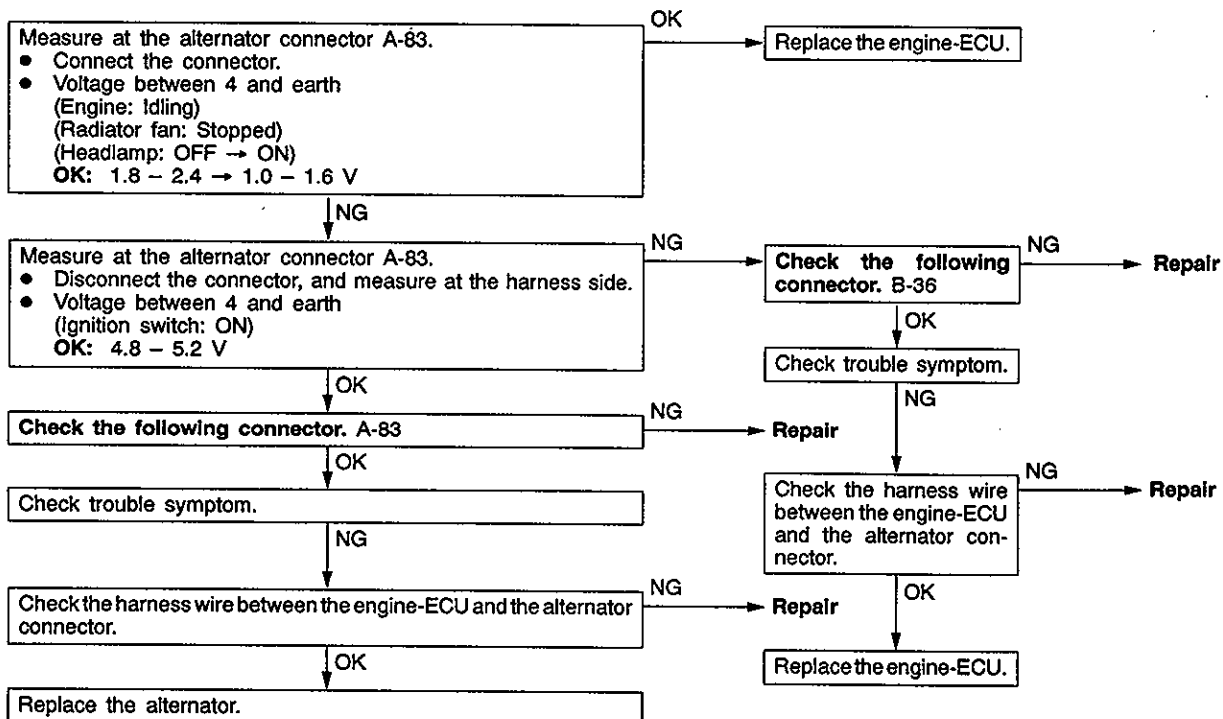



## INSPECTION CHART FOR TROUBLE SYMPTOMS

13100880125

| Trouble symptom                                |                                                                                                           | Inspection procedure No. | Reference page |
|------------------------------------------------|-----------------------------------------------------------------------------------------------------------|--------------------------|----------------|
| Communication with MUT-II is impossible.       | Communication with all systems is not possible.                                                           | 1                        | 13A-25         |
|                                                | Communication with engine-ECU only is not possible.                                                       | 2                        | 13A-26         |
| Engine warning lamp and related parts          | The engine warning lamp does not illuminate right after the ignition switch is turned to the ON position. | 3                        | 13A-27         |
|                                                | The engine warning lamp remains illuminating and never goes out.                                          | 4                        | 13A-27         |
| Starting                                       | No initial combustion (starting impossible)                                                               | 5                        | 13A-28         |
|                                                | Initial combustion but no complete combustion (starting impossible)                                       | 6                        | 13A-29         |
|                                                | Long time to start (improper starting)                                                                    | 7                        | 13A-30         |
| Idling stability (Improper idling)             | Unstable idling (Rough idling, hunting)                                                                   | 8                        | 13A-31         |
|                                                | Idling speed is high. (Improper idling speed)                                                             | 9                        | 13A-32         |
|                                                | Idling speed is low. (Improper idling speed)                                                              | 10                       | 13A-33         |
| Idling stability (Engine stalls)               | When the engine is cold, it stalls at idling. (Die out)                                                   | 11                       | 13A-34         |
|                                                | When the engine becomes hot, it stalls at idling. (Die out)                                               | 12                       | 13A-35         |
|                                                | The engine stalls when starting the car. (Pass out)                                                       | 13                       | 13A-36         |
|                                                | The engine stalls when decelerating.                                                                      | 14                       | 13A-36         |
| Driving                                        | Hesitation, sag or stumble                                                                                | 15                       | 13A-37         |
|                                                | The feeling of impact or vibration when accelerating                                                      | 16                       | 13A-37         |
|                                                | The feeling of impact or vibration when decelerating                                                      | 17                       | 13A-38         |
|                                                | Poor acceleration                                                                                         | 18                       | 13A-38         |
|                                                | Surge                                                                                                     | 19                       | 13A-39         |
|                                                | Knocking                                                                                                  | 20                       | 13A-39         |
| Dieseling                                      |                                                                                                           | 21                       | 13A-39         |
| Too high CO and HC concentration when idling   |                                                                                                           | 22                       | 13A-40         |
| Low alternator output voltage (approx. 12.3 V) |                                                                                                           | 23                       | 13A-41         |

**PROBLEM SYMPTOMS TABLE (FOR YOUR INFORMATION)**


| Items            |                         | Symptom                                                                                                                                                                                                                                                                                                                                  |
|------------------|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Starting         | Won't start             | The starter is used to crank the engine, but there is no combustion within the cylinders, and the engine won't start.                                                                                                                                                                                                                    |
|                  | Fires up and dies       | There is combustion within the cylinders, but then the engine soon stalls.                                                                                                                                                                                                                                                               |
|                  | Hard starting           | Engine starts after cranking a while.                                                                                                                                                                                                                                                                                                    |
| Idling stability | Hunting                 | Engine speed doesn't remain constant; changes at idle.                                                                                                                                                                                                                                                                                   |
|                  | Rough idle              | Usually, a judgement can be based upon the movement of the tachometer pointer, and the vibration transmitted to the steering wheel, shift lever, body, etc. This is called rough idle.                                                                                                                                                   |
|                  | Incorrect idle speed    | The engine doesn't idle at the usual correct speed.                                                                                                                                                                                                                                                                                      |
|                  | Engine stall (Die out)  | The engine stalls when the foot is taken from the accelerator pedal, regardless of whether the vehicles is moving or not.                                                                                                                                                                                                                |
|                  | Engine stall (Pass out) | The engine stalls when the accelerator pedal is depressed or while it is being used.                                                                                                                                                                                                                                                     |
| Driving          | Hesitation Sag          | "Hesitation" is the delay in response of the vehicle speed (engine speed) that occurs when the accelerator is depressed in order to accelerate from the speed at which the vehicle is now traveling, or a temporary drop in vehicle speed (engine speed) during such acceleration. Serious hesitation is called "sag". (Refer to Fig. 1) |
|                  | Poor acceleration       | Poor acceleration is inability to obtain an acceleration corresponding to the degree of throttle opening, even though acceleration is smooth, or the inability to reach maximum speed.                                                                                                                                                   |
|                  | Stumble                 | Engine speed increase is delayed when the accelerator pedal is initially depressed for acceleration. (Refer to Fig. 2)                                                                                                                                                                                                                   |
|                  | Shock                   | The feeling of a comparatively large impact or vibration when the engine is accelerated or decelerated.                                                                                                                                                                                                                                  |
|                  | Surge                   | This is repeated surging ahead during constant speed travel or during variable speed travel.                                                                                                                                                                                                                                             |
|                  | Knocking                | A sharp sound like a hammer striking the cylinder walls during driving and which adversely affects driving.                                                                                                                                                                                                                              |
| Stopping         | Run on ("Dieseling")    | The condition in which the engine continues to run after the ignition switch is turned to OFF. Also called "Dieseling".                                                                                                                                                                                                                  |

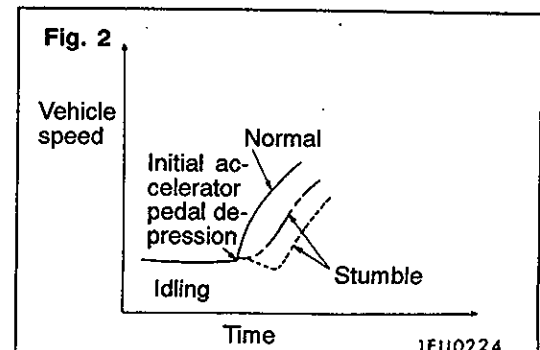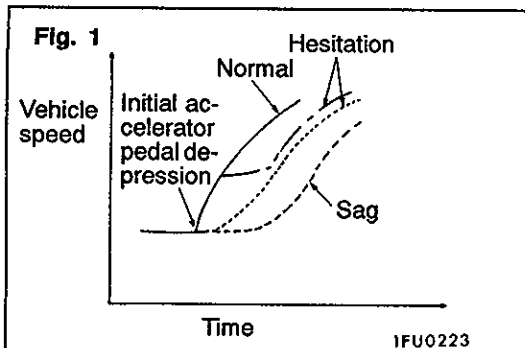

## INSPECTION PROCEDURE FOR TROUBLE SYMPTOMS

## INSPECTION PROCEDURE 1


|                                                                                                         |                                                                                                                             |
|---------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| <b>Communication with MUT-II is not possible.<br/>(Communication with all systems is not possible.)</b> | <b>Probable cause</b>                                                                                                       |
| The cause is probably a defect in the power supply system (including earth) for the diagnosis line.     | <ul style="list-style-type: none"> <li>• Malfunction of the connector</li> <li>• Malfunction of the harness wire</li> </ul> |

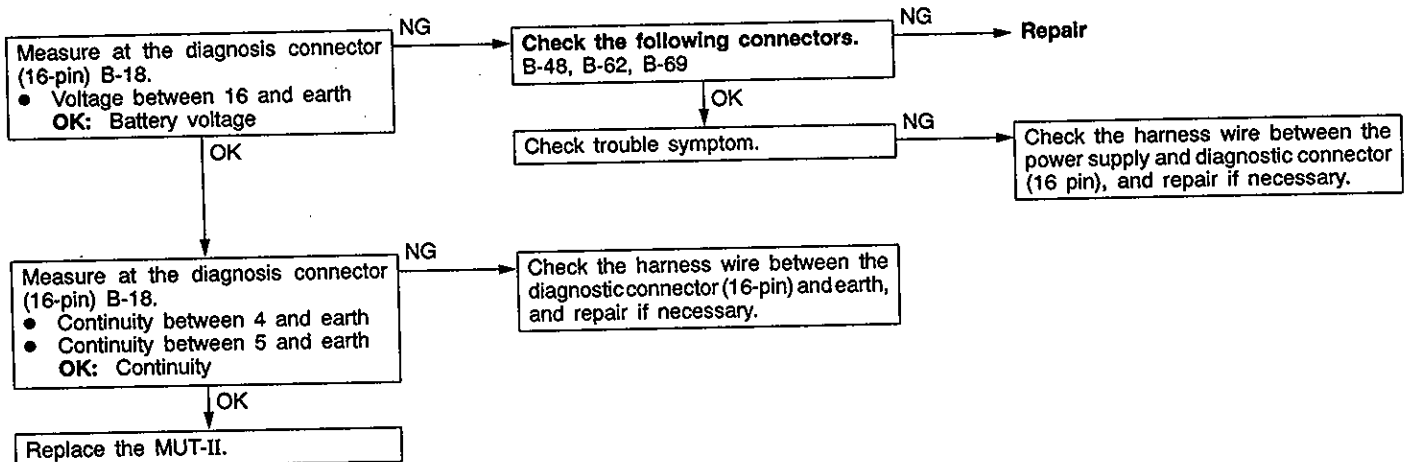


## INSPECTION PROCEDURE 2

| MUT-II communication with engine-ECU is impossible.                                                                                                                                                                                                                                      | Probable cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| One of the following causes may be suspected: <ul style="list-style-type: none"> <li>• No power supply to engine-ECU.</li> <li>• Defective earth circuit of engine-ECU.</li> <li>• Defective engine-ECU.</li> <li>• Improper communication line between engine-ECU and MUT-II</li> </ul> | <Vehicles without immobilizer system> <ul style="list-style-type: none"> <li>• Malfunction of engine-ECU power supply circuit</li> <li>• Malfunction of engine-ECU</li> <li>• Open circuit between engine-ECU and diagnosis connector</li> </ul> <Vehicles with immobilizer system> <ul style="list-style-type: none"> <li>• Malfunction of engine-ECU power supply circuit</li> <li>• Malfunction of engine-ECU</li> <li>• Malfunction of immobilizer-ECU</li> <li>• Open circuit between immobilizer-ECU and diagnosis connector</li> <li>• Open circuit between engine-ECU and immobilizer-ECU</li> </ul> |

## &lt;Vehicles without immobilizer system&gt;

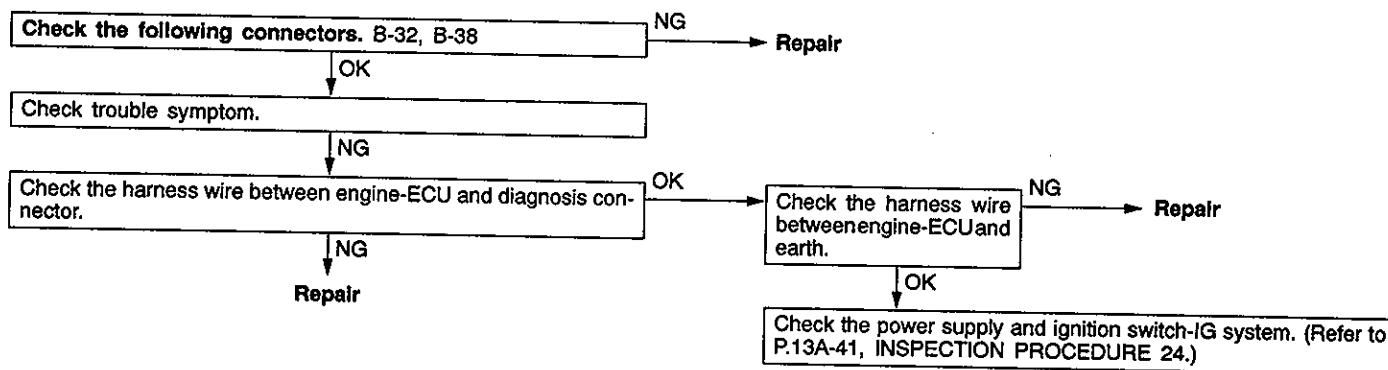


## &lt;Vehicles with immobilizer system&gt;

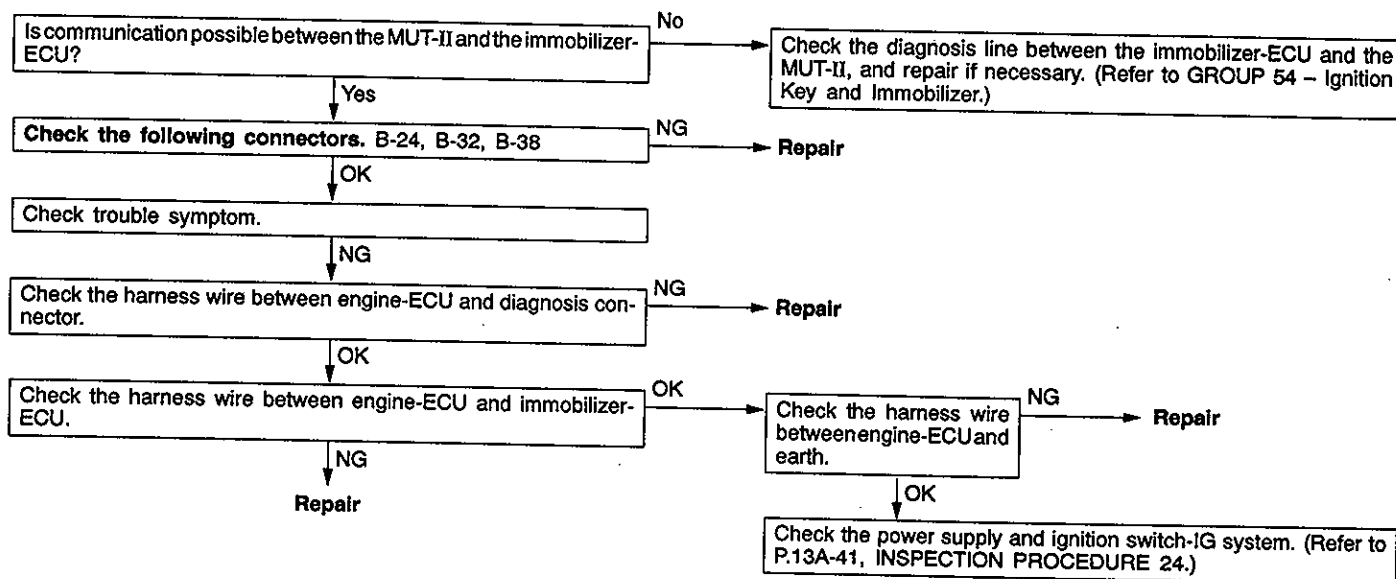


## INSPECTION PROCEDURE 3

| The engine warning lamp does not illuminate right after the ignition switch is turned to the ON position.                                                                                                                                                                                                                                   | Probable cause                                                                                                                                        |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| Because there is a burnt-out bulb, the engine-ECU causes the engine warning lamp to illuminate for five seconds immediately after the ignition switch is turned to ON. If the engine warning lamp does not illuminate immediately after the ignition switch is turned to ON, one of the malfunctions listed at right has probably occurred. | <ul style="list-style-type: none"> <li>• Burnt-out bulb</li> <li>• Defective warning lamp circuit</li> <li>• Malfunction of the engine-ECU</li> </ul> |

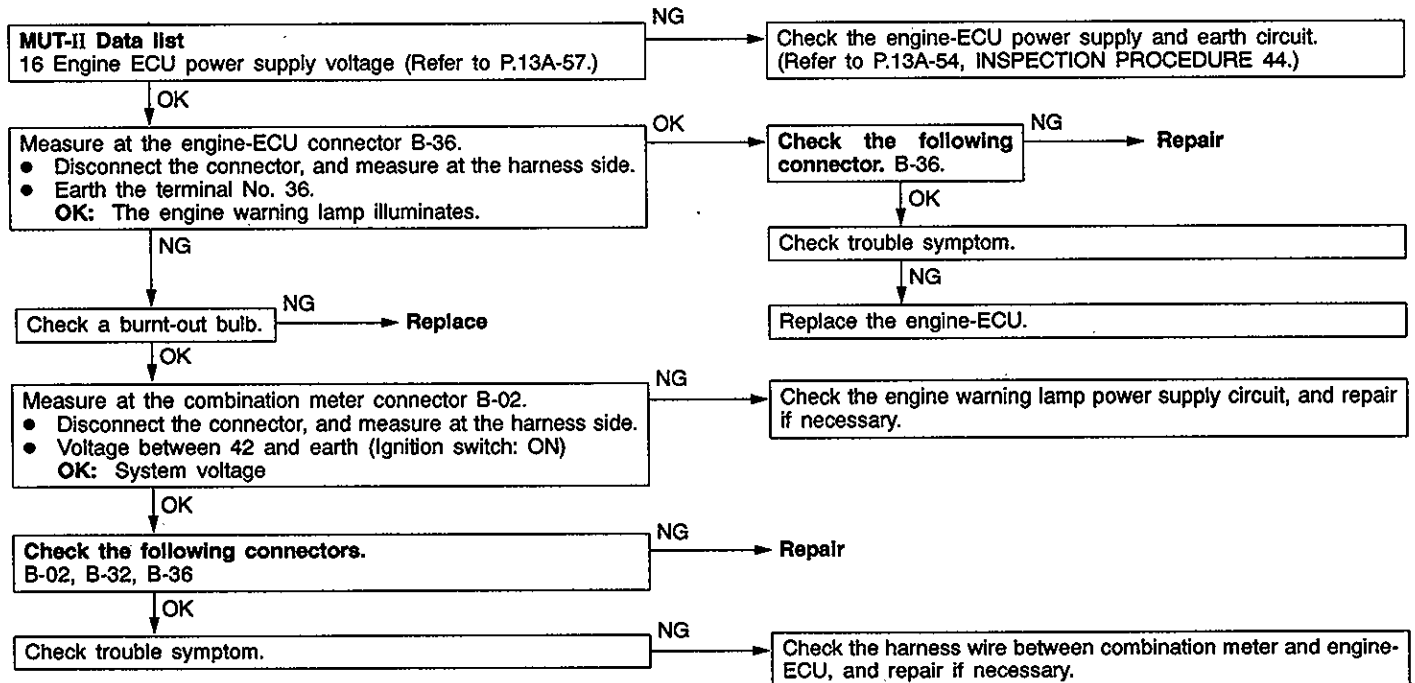


## INSPECTION PROCEDURE 4

| The engine warning lamp remains illuminating and never goes out.                                                                                                                    | Probable cause                                                                                                                                            |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| In cases such as the above, the cause is probably that the engine-ECU is detecting a problem in a sensor or actuator, or that one of the malfunctions listed at right has occurred. | <ul style="list-style-type: none"> <li>• Short-circuit between the engine warning lamp and engine-ECU</li> <li>• Malfunction of the engine-ECU</li> </ul> |

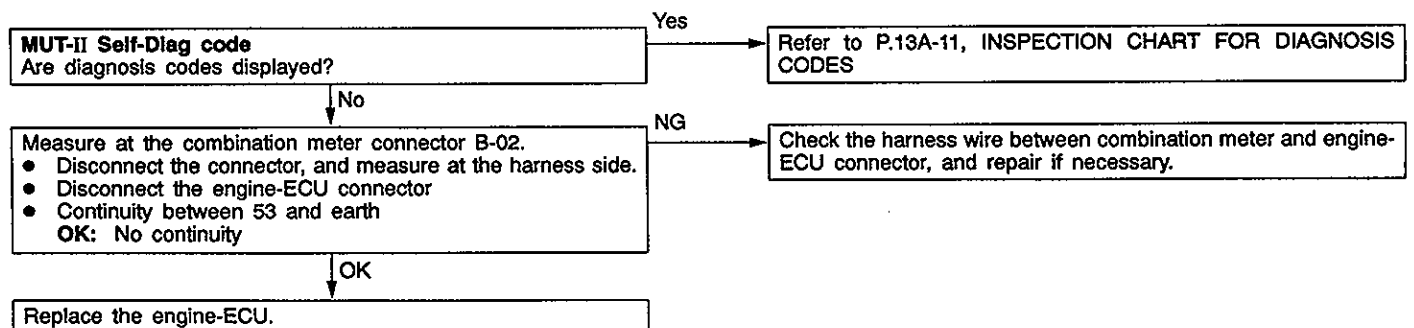


## INSPECTION PROCEDURE 5

| No initial combustion (starting impossible)                                                                                                                                                                                                        | Probable cause                                                                                                                                                                                                                                                                                                                                             |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>In cases such as the above, the cause is probably that a spark plug is defective, or that the supply of fuel to the combustion chamber is defective.<br/>In addition, foreign materials (water, kerosene, etc.) may be mixed with the fuel.</p> | <ul style="list-style-type: none"> <li>• Malfunction of the ignition system</li> <li>• Malfunction of the fuel pump system</li> <li>• Malfunction of the injectors</li> <li>• Malfunction of the engine-ECU</li> <li>• Malfunction of the immobilizer system &lt;only vehicles with immobilizer system&gt;</li> <li>• Foreign materials in fuel</li> </ul> |

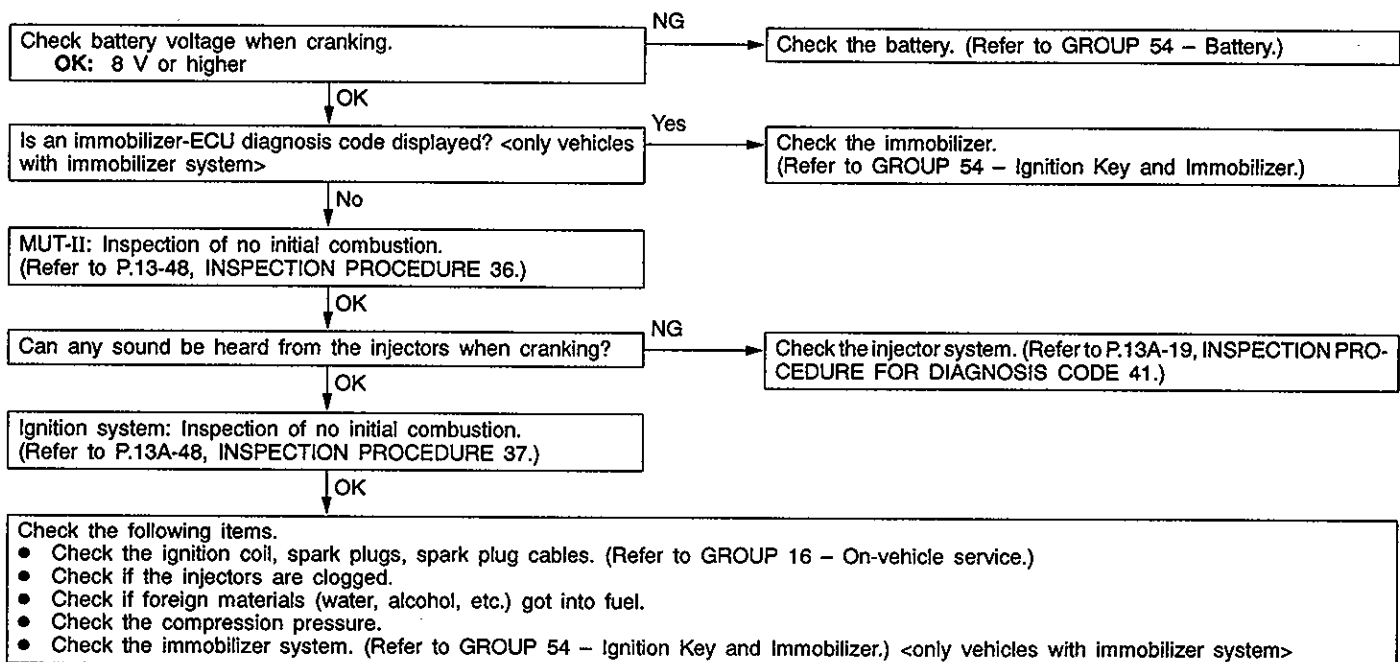


## INSPECTION PROCEDURE 6

| Initial combustion but no complete combustion<br>(starting impossible)                                                                                                        | Probable cause                                                                                                                                                                                                                                 |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| In such cases as the above, the cause is probably that the spark plugs are generating sparks but the sparks are weak, or the initial mixture for starting is not appropriate. | <ul style="list-style-type: none"> <li>• Malfunction of the ignition system</li> <li>• Malfunction of the injector system</li> <li>• Foreign materials in fuel</li> <li>• Poor compression</li> <li>• Malfunction of the engine-ECU</li> </ul> |

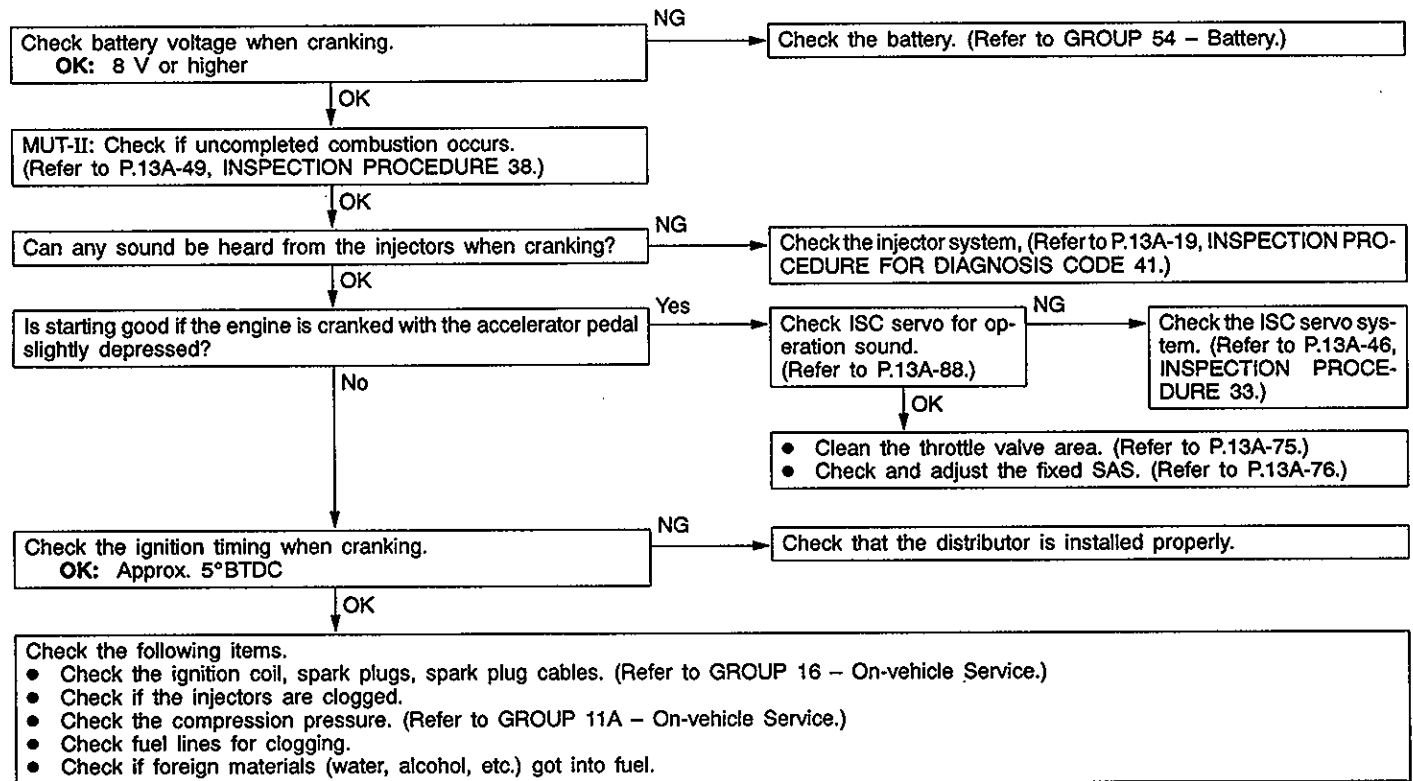


## INSPECTION PROCEDURE 7

| In takes too long time to start. (Incorrect starting)                                                                                                                                                              | Probable cause                                                                                                                                                                                         |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| In cases such as the above, the cause is probably that the spark is weak and ignition is difficult, the initial mixture for starting is not appropriate, or sufficient compression pressure is not being obtained. | <ul style="list-style-type: none"> <li>• Malfunction of the ignition system</li> <li>• Malfunction of the injector system</li> <li>• Inappropriate gasoline use</li> <li>• Poor compression</li> </ul> |

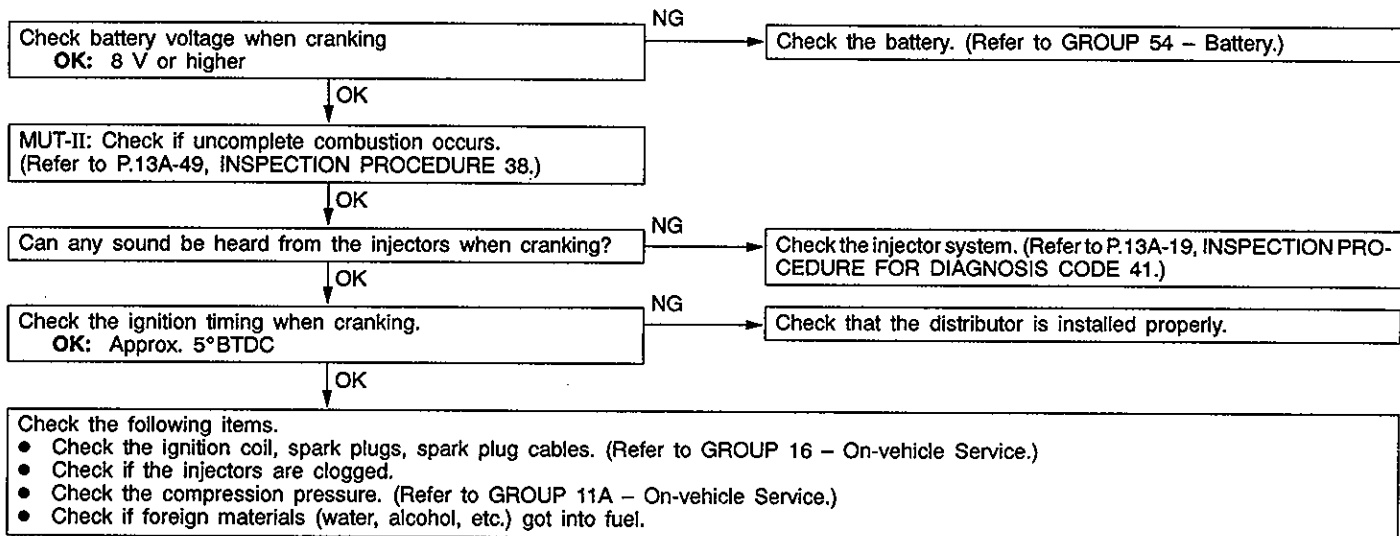


## INSPECTION PROCEDURE 8

| Unstable idling (Rough idling, hunting)                                                                                                                                                                                                             | Probable cause                                                                                                                                                                                                                                                                                                                                                                           |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| In cases as the above, the cause is probably that the ignition system, air/fuel mixture, idle speed control (ISC) or compression pressure is defective. Because the range of possible causes is broad, inspection is narrowed down to simple items. | <ul style="list-style-type: none"> <li>• Malfunction of the ignition system</li> <li>• Malfunction of air-fuel ratio control system</li> <li>• Malfunction of the ISC system</li> <li>• Malfunction of the purge control solenoid valve system</li> <li>• Malfunction of the EGR solenoid valve system</li> <li>• Poor compression</li> <li>• Drawing air into exhaust system</li> </ul> |

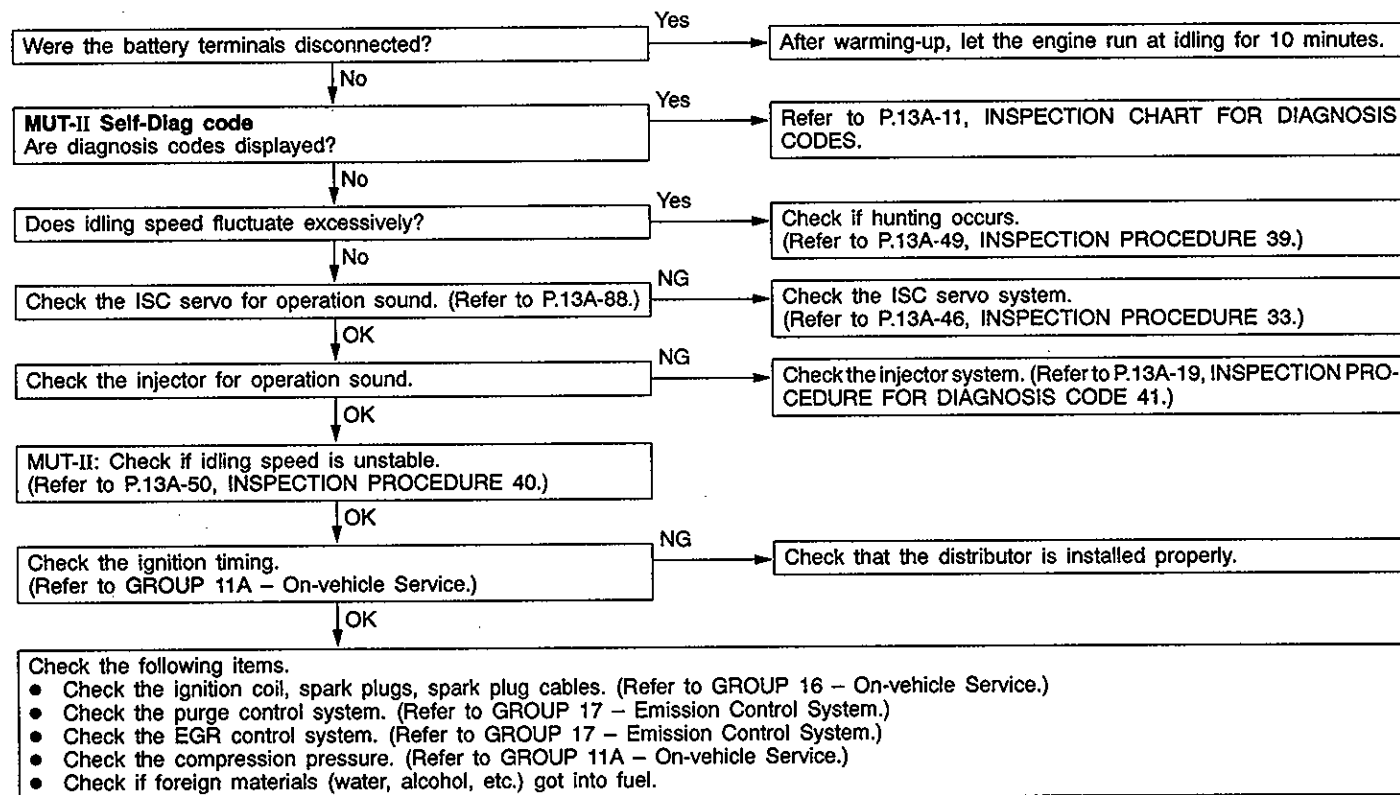


## INSPECTION PROCEDURE 9

| Idling speed is high. (Improper idling speed)                                                            | Probable cause                                                                                                                      |
|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| In such cases as the above, the cause is probably that the intake air volume during idling is too great. | <ul style="list-style-type: none"> <li>• Malfunction of the ISC servo system</li> <li>• Malfunction of the throttle body</li> </ul> |

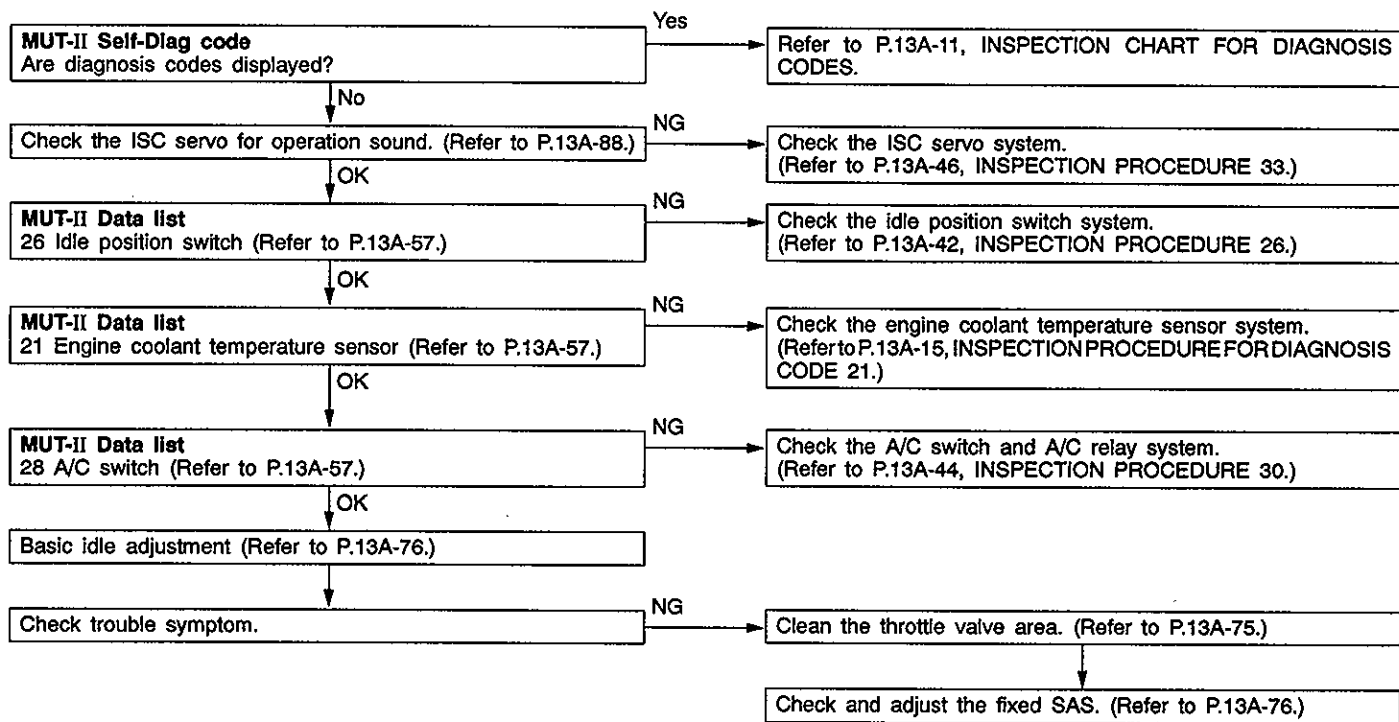


## INSPECTION PROCEDURE 10

| Idling speed is low. (Improper idling speed)                                                             | Probable cause                                                                                                                      |
|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| In cases such as the above, the cause is probably that the intake air volume during idling is too small. | <ul style="list-style-type: none"> <li>• Malfunction of the ISC servo system</li> <li>• Malfunction of the throttle body</li> </ul> |

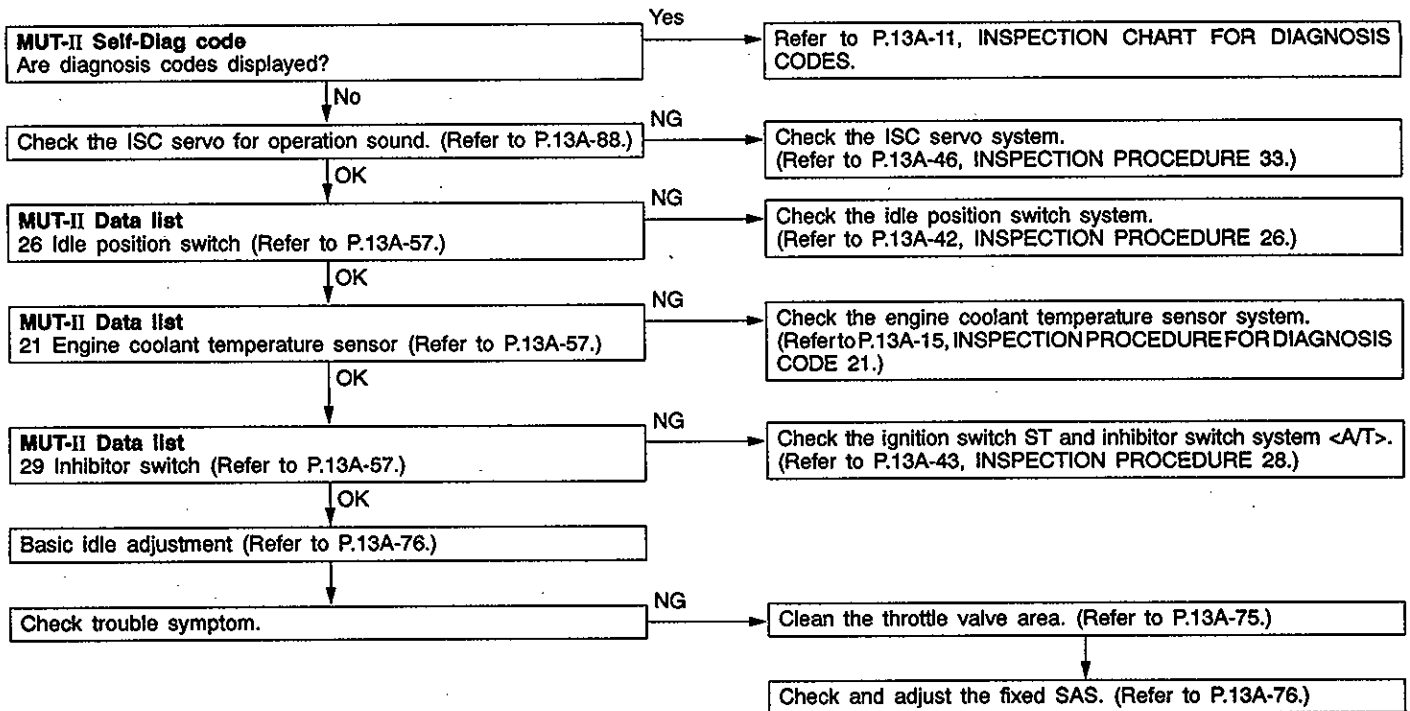


## INSPECTION PROCEDURE 11

| When the engine is cold, it stalls at idling. (Die out)                                                                                                              | Probable cause                                                                                                                                                                                                                  |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| In such cases as the above, the cause is probably that the air/fuel mixture is inappropriate when the engine is cold, or that the intake air volume is insufficient. | <ul style="list-style-type: none"> <li>• Malfunction of the ISC servo system</li> <li>• Malfunction of the throttle body</li> <li>• Malfunction of the injector system</li> <li>• Malfunction of the ignition system</li> </ul> |

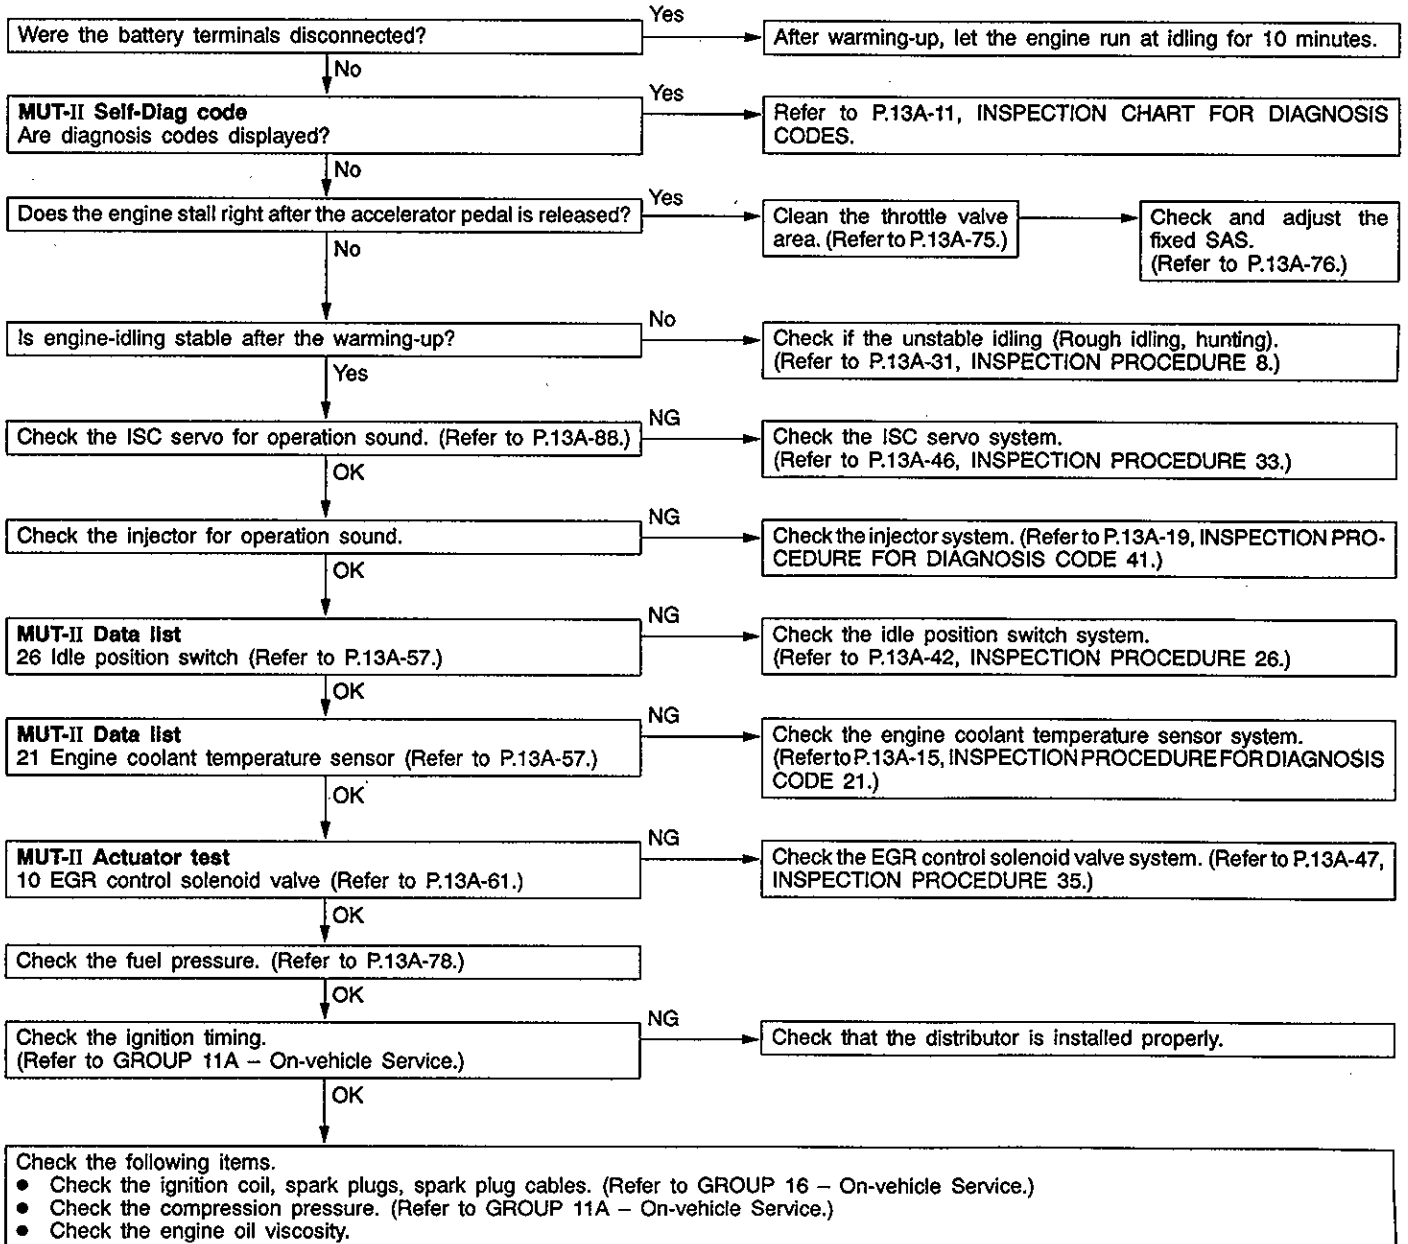


## INSPECTION PROCEDURE 12

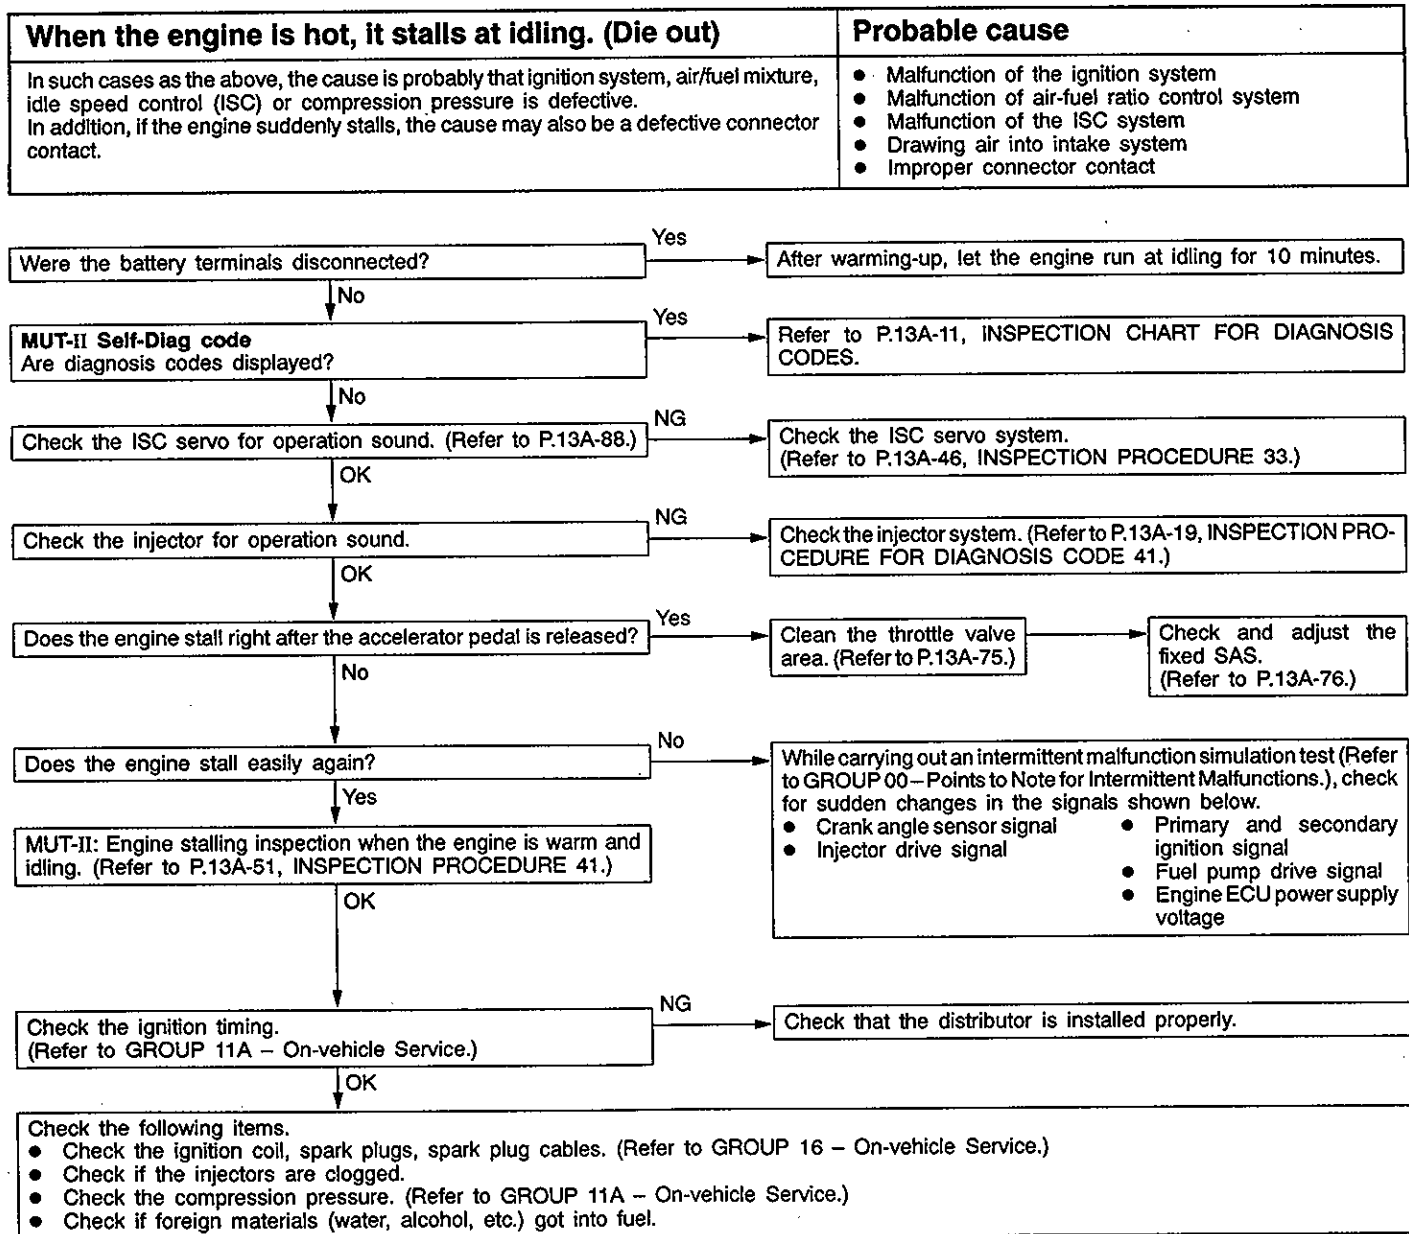


## INSPECTION PROCEDURE 13

| The engine stalls when starting the car. (Pass out)                                                                                                            | Probable cause                                                                                                                   |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| In cases such as the above, the cause is probably misfiring due to a weak spark, or an inappropriate air/fuel mixture when the accelerator pedal is depressed. | <ul style="list-style-type: none"> <li>• Drawing air into intake system</li> <li>• Malfunction of the ignition system</li> </ul> |

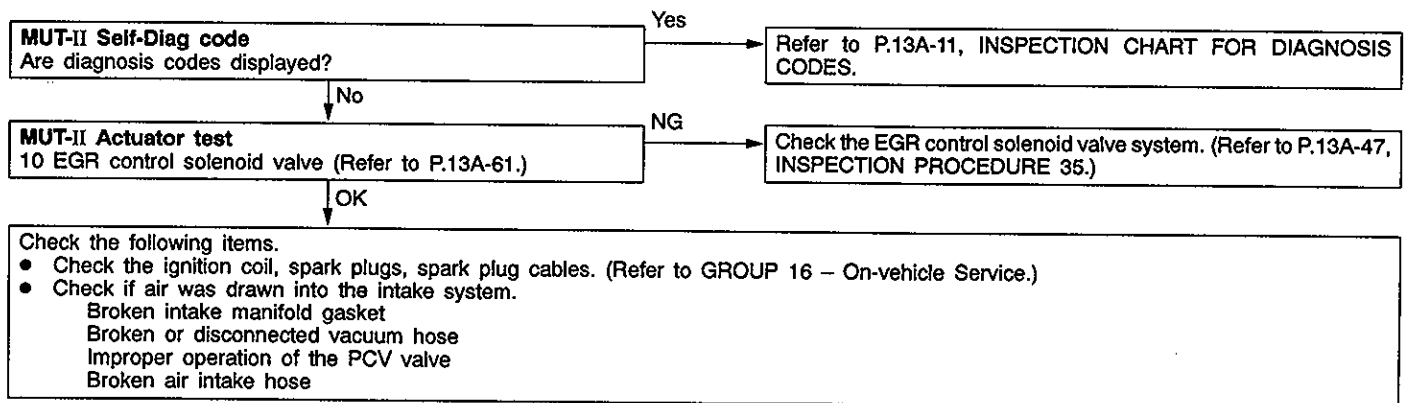


## INSPECTION PROCEDURE 14

| The engine stalls when decelerating.                                                                                                                   | Probable cause                                                                    |
|--------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| In cases such as the above, the cause is probably that the intake air volume is insufficient due to a defective idle speed control (ISC) servo system. | <ul style="list-style-type: none"> <li>• Malfunction of the ISC system</li> </ul> |

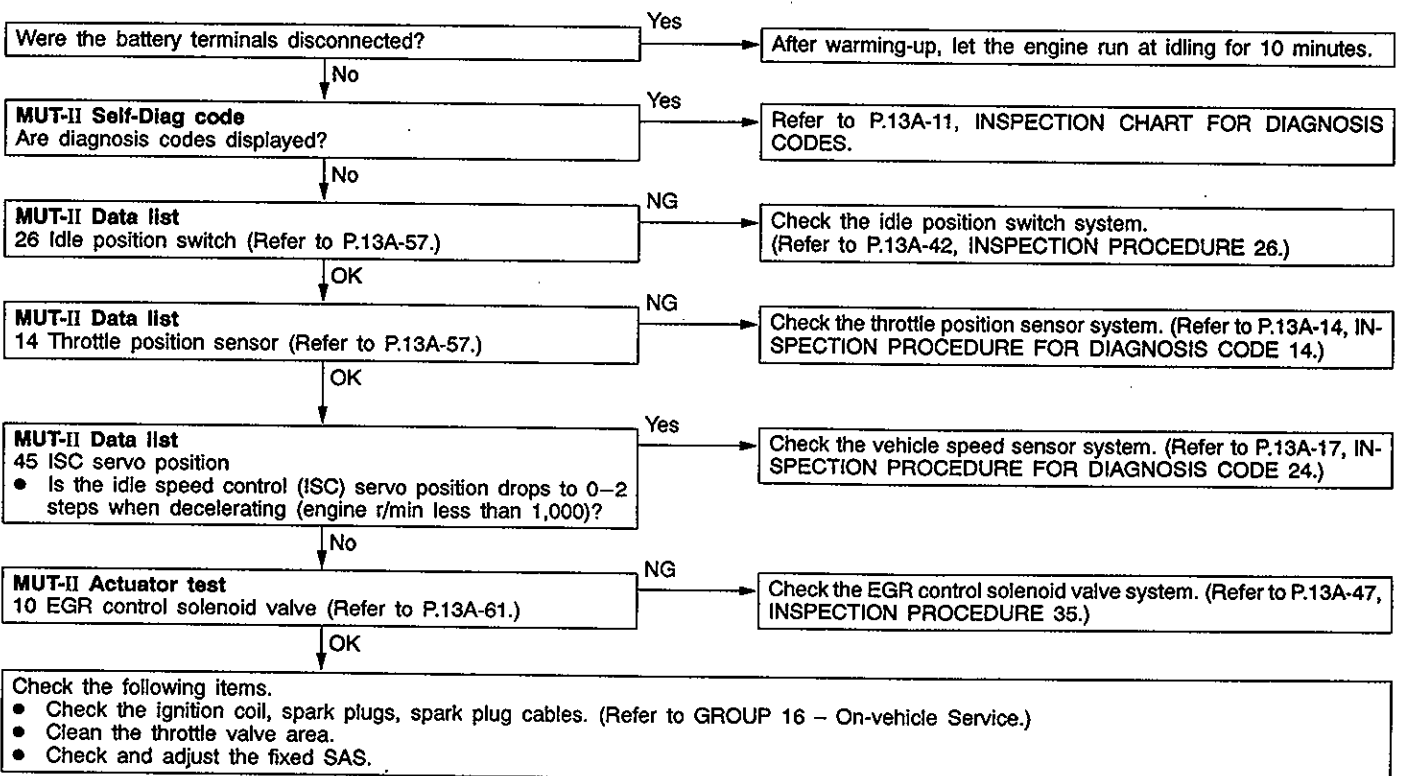


## INSPECTION PROCEDURE 15

| Hesitation, sag or stumble                                                                                                     | Probable cause                                                                                                                                                                                                                                                                              |
|--------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| In cases such as the above, the cause is probably that ignition system, air/fuel mixture or compression pressure is defective. | <ul style="list-style-type: none"> <li>• Malfunction of the ignition system</li> <li>• Malfunction of air-fuel ratio control system</li> <li>• Malfunction of the fuel supply system</li> <li>• Malfunction of the EGR control solenoid valve system</li> <li>• Poor compression</li> </ul> |

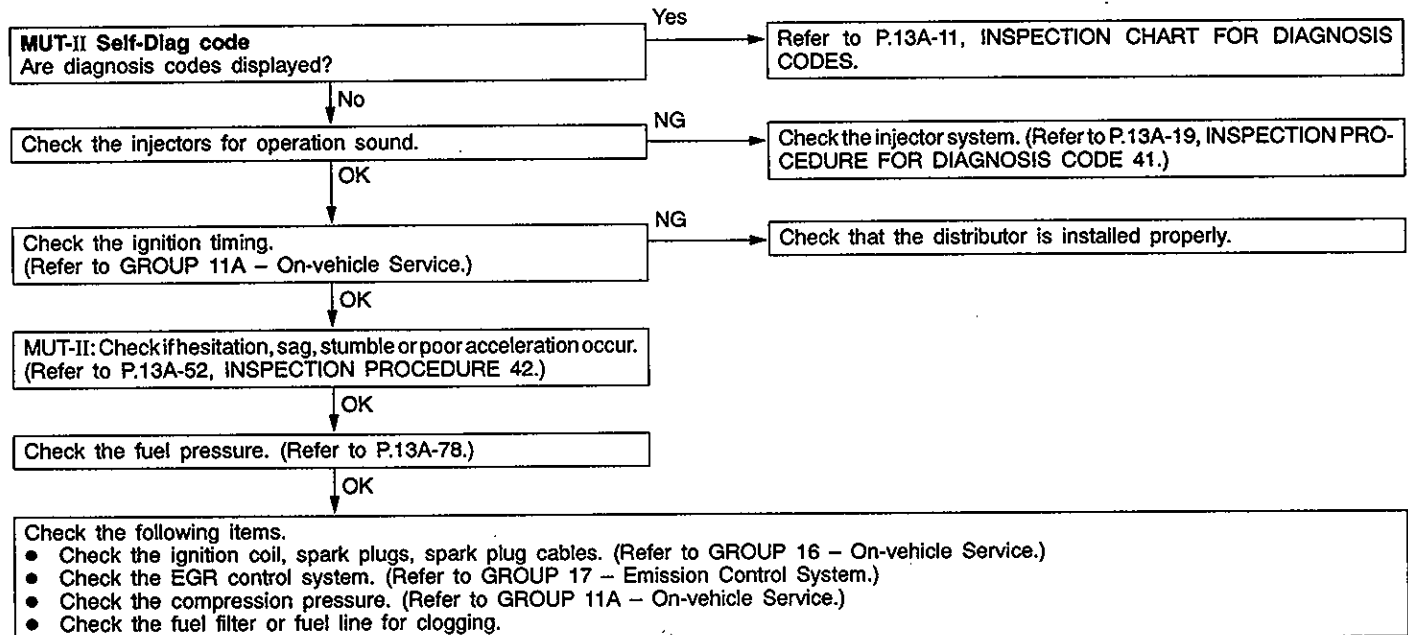


## INSPECTION PROCEDURE 16

| The feeling of Impact or vibration when accelerating                                                                                                             | Probable cause                                                                         |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| In cases such as the above, the cause is probably that there is an ignition leak accompanying the increase in the spark plug demand voltage during acceleration. | <ul style="list-style-type: none"> <li>• Malfunction of the ignition system</li> </ul> |

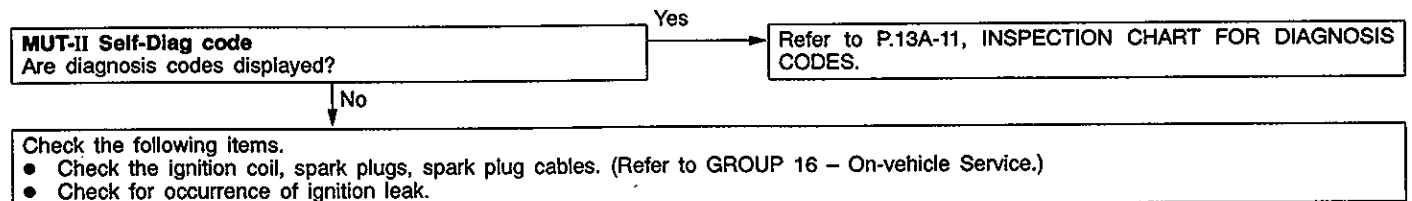


## INSPECTION PROCEDURE 17

| The feeling of impact or vibration when decelerating. | Probable cause                                                                  |
|-------------------------------------------------------|---------------------------------------------------------------------------------|
| Malfunction of the ISC system is suspected.           | <ul style="list-style-type: none"> <li>Malfunction of the ISC system</li> </ul> |

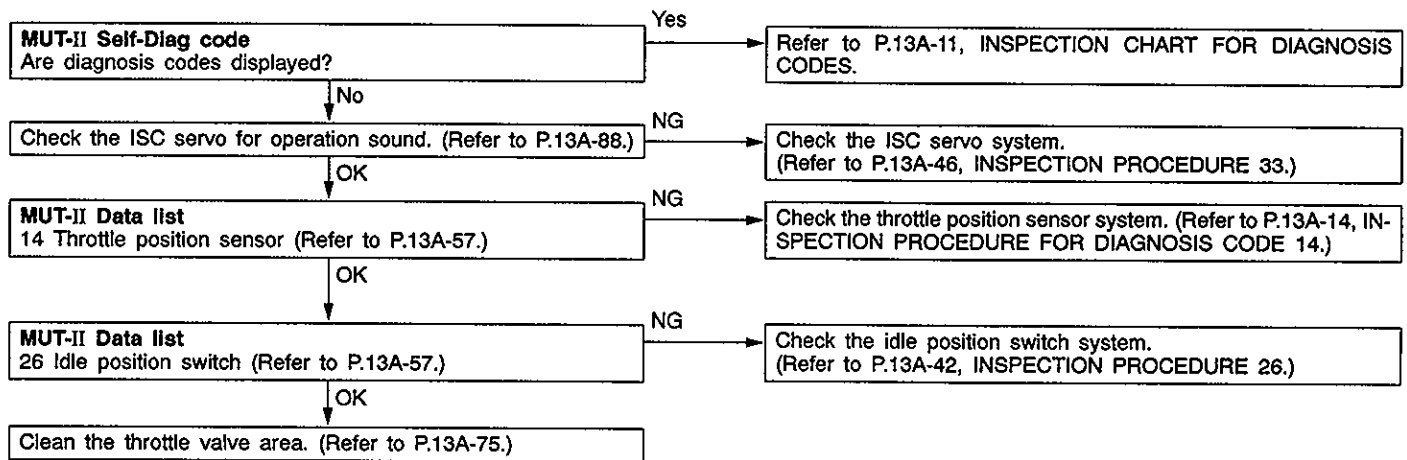


## INSPECTION PROCEDURE 18

| Poor acceleration                                                                                  | Probable cause                                                                                                                                                                                                                                               |
|----------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Defective ignition system, abnormal air-fuel ratio, poor compression pressure, etc. are suspected. | <ul style="list-style-type: none"> <li>Malfunction of the ignition system</li> <li>Malfunction of air-fuel ratio control system</li> <li>Malfunction of the fuel supply system</li> <li>Poor compression pressure</li> <li>Clogged exhaust system</li> </ul> |

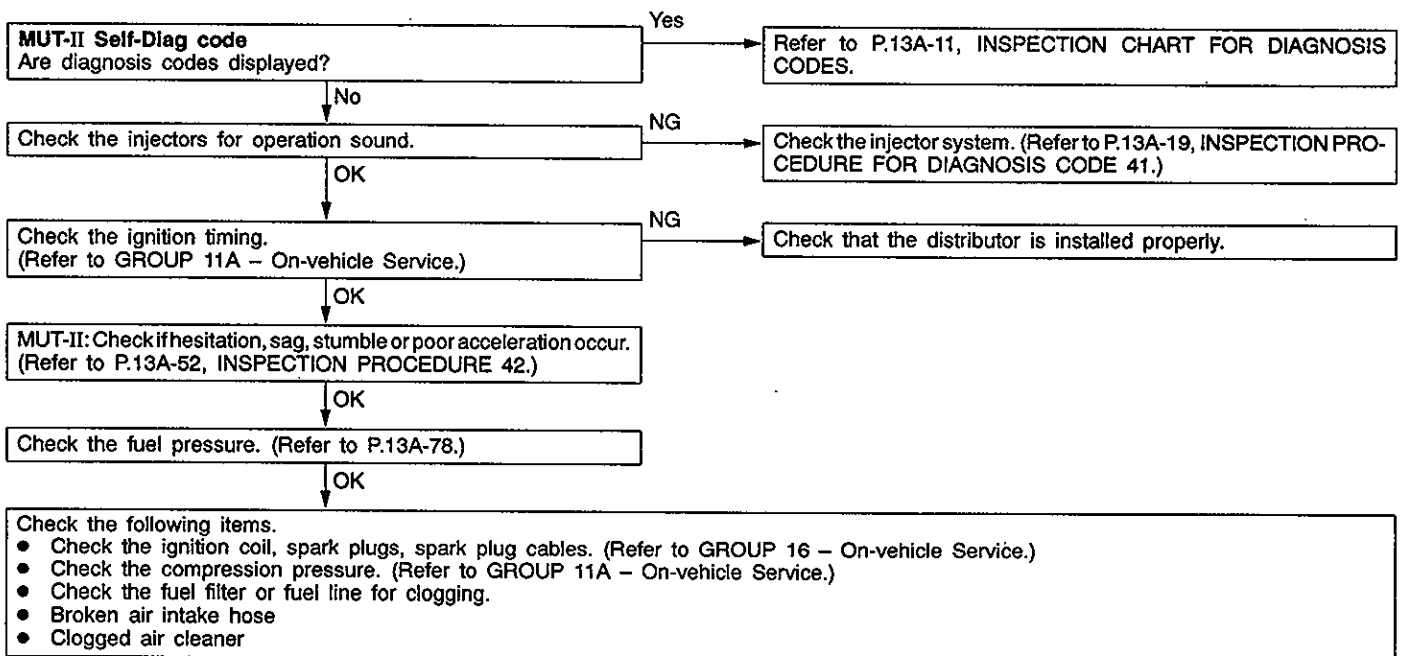

## INSPECTION PROCEDURE 19

| Surge                                                                   | Probable cause                                                                                                                                                                                                 |
|-------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Defective ignition system, abnormal air-fuel ratio, etc. are suspected. | <ul style="list-style-type: none"> <li>• Malfunction of the ignition system</li> <li>• Malfunction of air-fuel ratio control system</li> <li>• Malfunction of the EGR control solenoid valve system</li> </ul> |

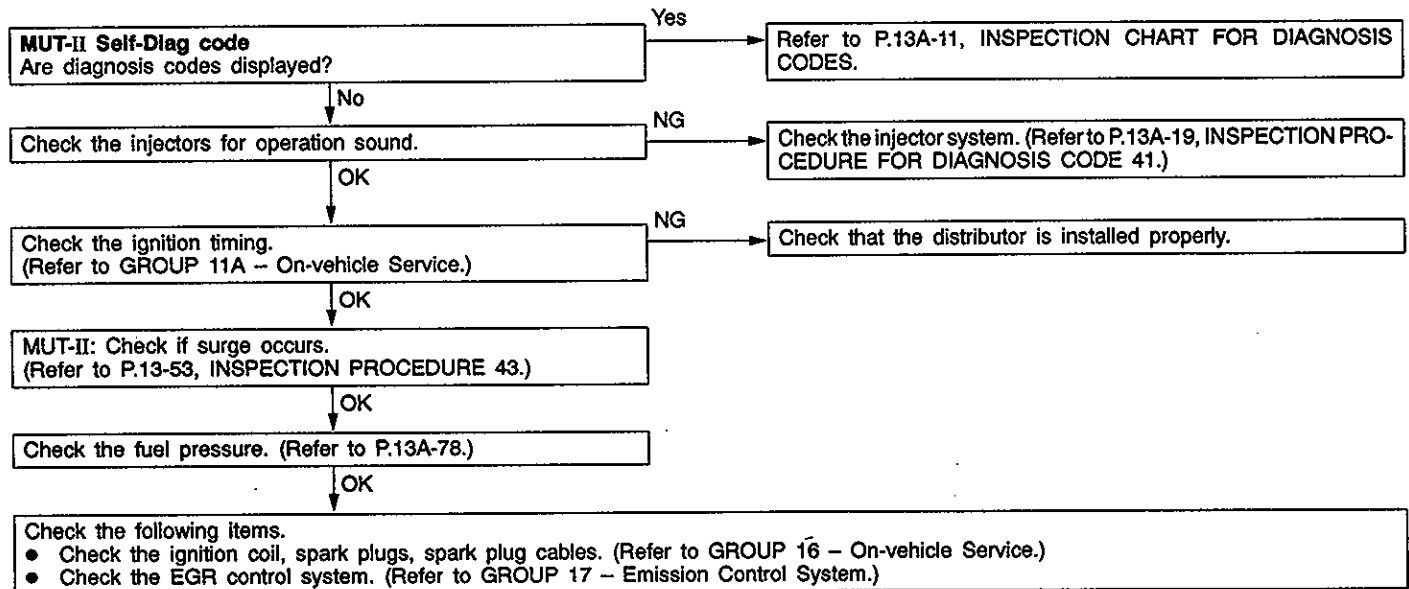

## INSPECTION PROCEDURE 20

| Knocking                                                                                                                                    | Probable cause                                                                                 |
|---------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| In cases as the above, the cause is probably that the detonation control is defective or the heat value of the spark plug is inappropriate. | <ul style="list-style-type: none"> <li>• Inappropriate heat value of the spark plug</li> </ul> |

Check the following items.

- Spark plugs
- Check if foreign materials (water, alcohol, etc.) got into fuel.


## INSPECTION PROCEDURE 21

| Dieseling                                 | Probable cause                                                                  |
|-------------------------------------------|---------------------------------------------------------------------------------|
| Fuel leakage from injectors is suspected. | <ul style="list-style-type: none"> <li>• Fuel leakage from injectors</li> </ul> |

Check the injectors for fuel leakage.


## INSPECTION PROCEDURE 22

| Too high CO and HC concentration when idling | Probable cause                                                                                                                        |
|----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Abnormal air-fuel ratio is suspected.        | <ul style="list-style-type: none"> <li>• Malfunction of the air-fuel ratio control system</li> <li>• Deteriorated catalyst</li> </ul> |

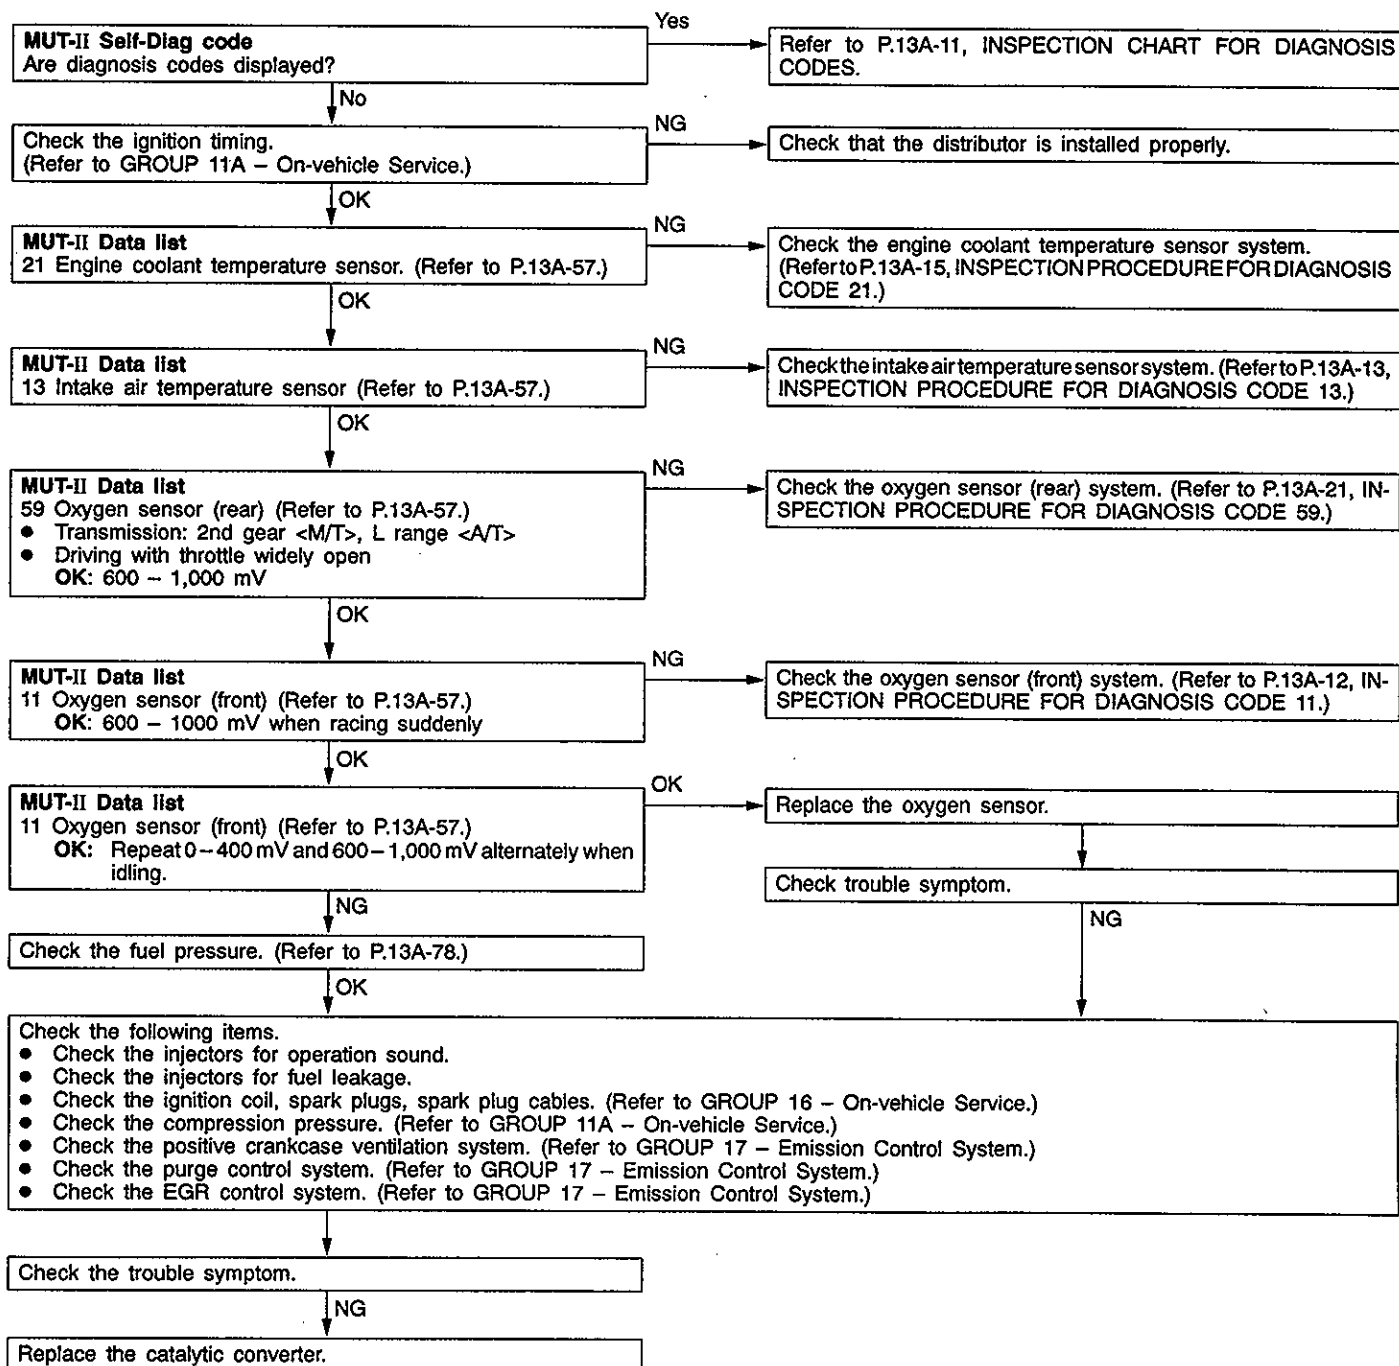


## INSPECTION PROCEDURE 23

| Low alternator output voltage (approx. 12.3 V)                                                            | Probable cause                                                                                                                                                                                                                            |
|-----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The alternator may be defective, or malfunctions, which are listed in the right column, may be suspected. | <ul style="list-style-type: none"> <li>Malfunction of charging system (Refer to GROUP 16 – Charging System.)</li> <li>Short circuit in harness between alternator G terminal and engine-ECU</li> <li>Malfunction of engine-ECU</li> </ul> |

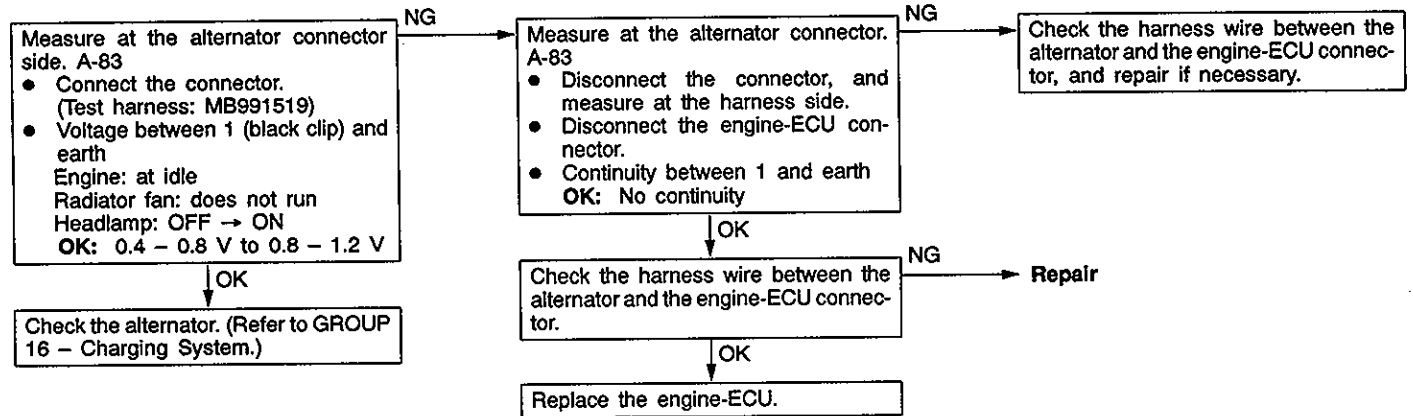


## INSPECTION PROCEDURE 24

| Power supply system and ignition switch-IG system                                                                                                                                                     | Probable cause                                                                                                                                                                                                                                                                                      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| When an ignition switch ON signal is input to the engine-ECU, the engine-ECU turns the control relay ON. This causes battery voltage to be supplied to the engine-ECU, injectors and air flow sensor. | <ul style="list-style-type: none"> <li>Malfunction of the ignition switch</li> <li>Malfunction of the control relay</li> <li>Improper connector contact, open circuit or short-circuited harness wire</li> <li>Disconnected engine-ECU earth wire</li> <li>Malfunction of the engine-ECU</li> </ul> |

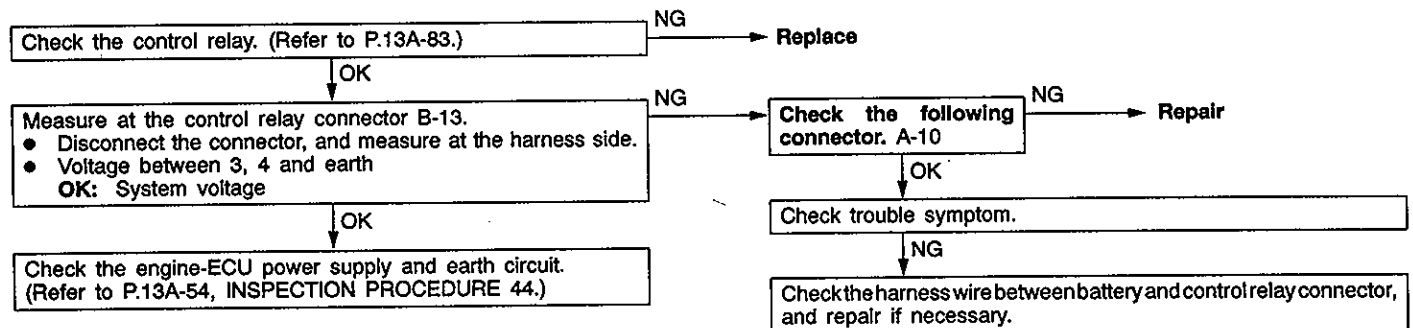


## INSPECTION PROCEDURE 25

| Fuel pump system                                                                                                                    | Probable cause                                                                                                                                                                                                                                              |
|-------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The engine-ECU turns the fuel pump relay ON when the engine is cranking or running, and this supplies power to drive the fuel pump. | <ul style="list-style-type: none"> <li>• Malfunction of the fuel pump relay</li> <li>• Malfunction of the fuel pump</li> <li>• Improper connector contact, open circuit or short-circuited harness wire</li> <li>• Malfunction of the engine-ECU</li> </ul> |

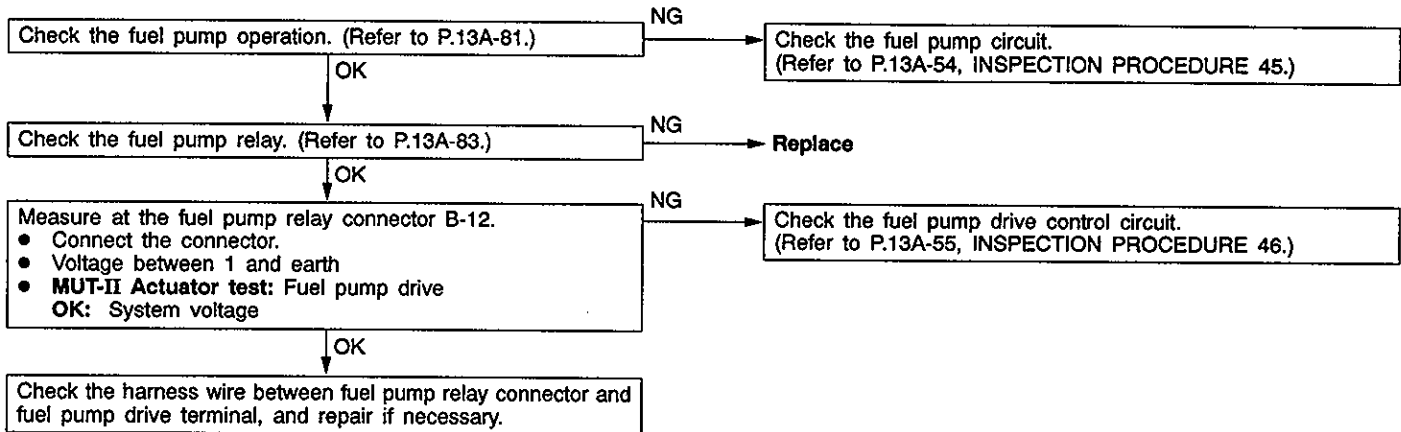


## INSPECTION PROCEDURE 26

| Idle position switch system                                                                                                                                                                                                  | Probable cause                                                                                                                                                                                                                                                                                                                                      |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The idle position switch inputs the condition of the accelerator pedal, i.e. whether it is depressed or released (HIGH/LOW), to the engine-ECU.<br>The engine-ECU controls the idle speed control servo-based on this input. | <ul style="list-style-type: none"> <li>• Maladjustment of the accelerator pedal</li> <li>• Maladjustment of the fixed SAS</li> <li>• Maladjustment of the idle position switch and throttle position sensor</li> <li>• Improper connector contact, open circuit or short-circuited harness wire</li> <li>• Malfunction of the engine-ECU</li> </ul> |

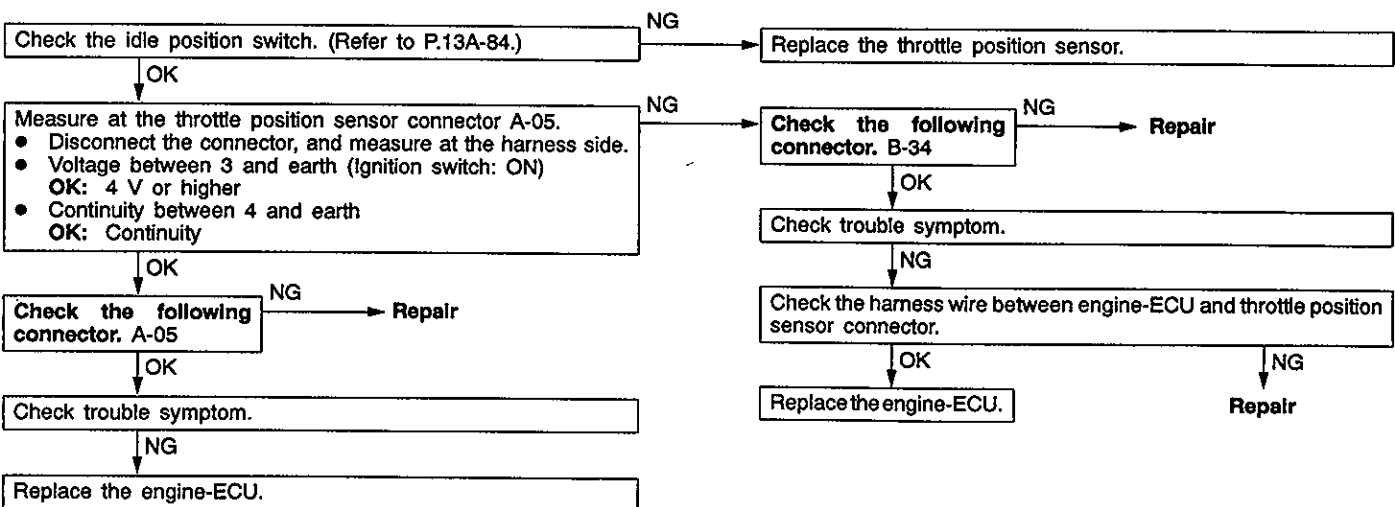


## INSPECTION PROCEDURE 27

| Ignition switch-ST system <M/T>                                                                                                                                                             | Probable cause                                                                                                                                                                                                  |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>The ignition switch-ST inputs a HIGH signal to the engine-ECU while the engine is cranking.</p> <p>The engine-ECU controls fuel injection, etc. during starting based on this input.</p> | <ul style="list-style-type: none"> <li>• Malfunction of ignition switch</li> <li>• Improper connector contact, open circuit or short-circuited harness wire</li> <li>• Malfunction of the engine-ECU</li> </ul> |

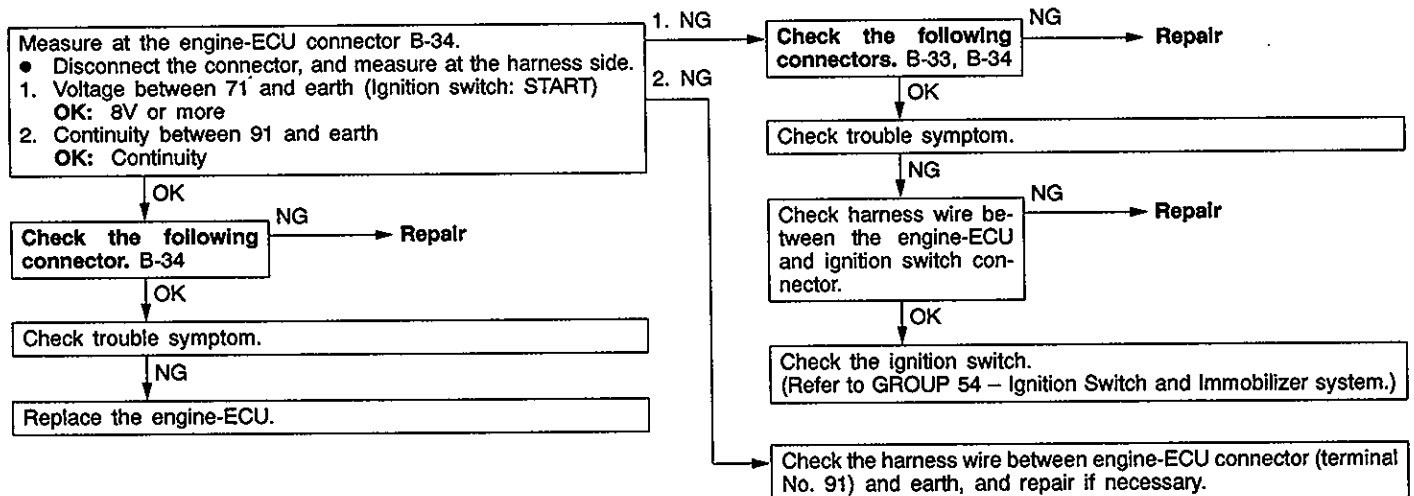


## INSPECTION PROCEDURE 28

| Ignition switch-ST and inhibitor switch system <A/T>                                                                                                                                                                                                                                                                                                                                                                                                                                            | Probable cause                                                                                                                                                                                                                                              |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> <li>• The ignition switch-ST inputs a HIGH signal to the engine-ECU while the engine is cranking.</li> <li>• The engine-ECU controls fuel injection, etc. during starting based on this input.</li> <li>• The inhibitor switch inputs the condition of the select lever, i.e. whether it is in P or N range or in some other range, to the engine-ECU.</li> <li>• The engine-ECU controls the idle speed control (ISC) servo based on this input.</li> </ul> | <ul style="list-style-type: none"> <li>• Malfunction of ignition switch</li> <li>• Malfunction of inhibitor switch</li> <li>• Improper connector contact, open circuit or short-circuited harness wire</li> <li>• Malfunction of the engine-ECU.</li> </ul> |

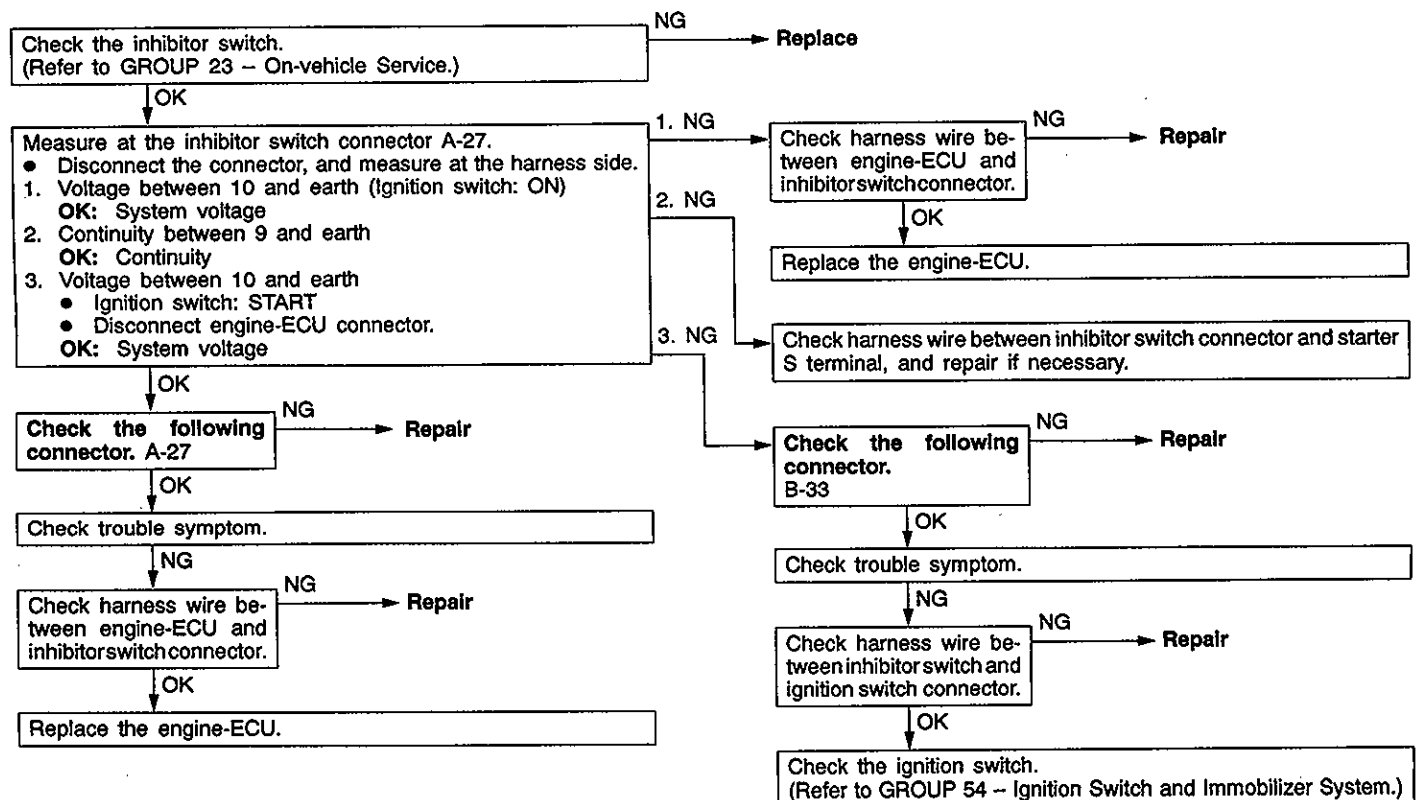


## INSPECTION PROCEDURE 29

| Power steering fluid pressure switch system                                                                                                                | Probable cause                                                                                                                                                                                                                       |
|------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The presence or absence of power steering load is input to the engine-ECU. The engine-ECU controls the idle speed control (ISC) servo based on this input. | <ul style="list-style-type: none"> <li>• Malfunction of power steering fluid pressure switch</li> <li>• Improper connector contact, open circuit or short-circuited harness wire</li> <li>• Malfunction of the engine-ECU</li> </ul> |

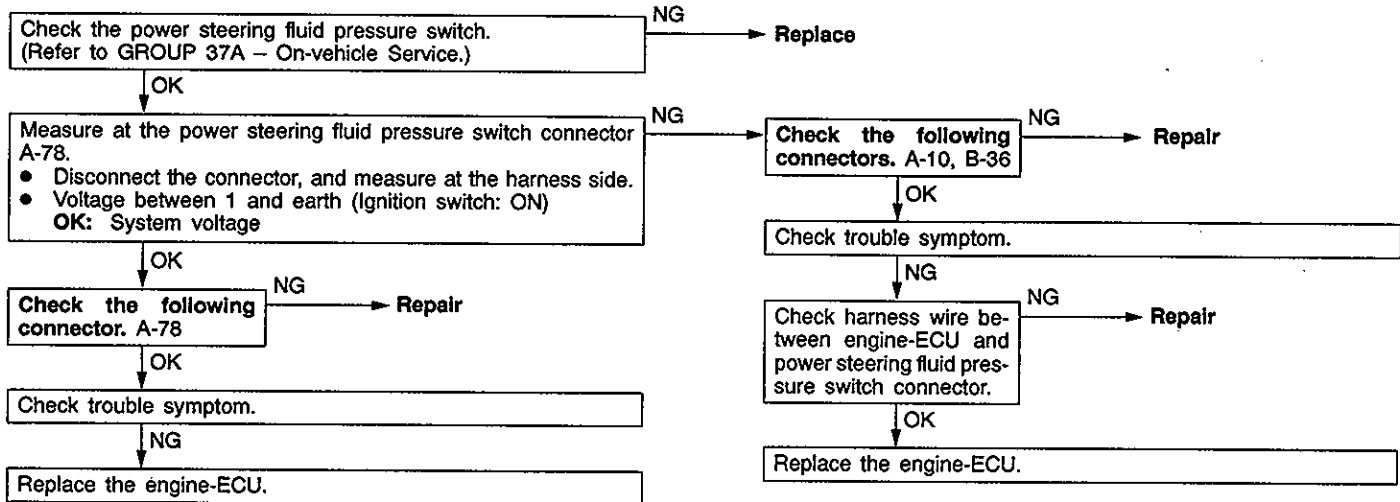


## INSPECTION PROCEDURE 30

| A/C switch and A/C relay system                                                                                                                                                   | Probable cause                                                                                                                                                                                                                                          |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| When an A/C ON signal is input to the engine-ECU, the engine-ECU carries out control of the idle speed control (ISC) servo, and also operates the A/C compressor magnetic clutch. | <ul style="list-style-type: none"> <li>• Malfunction of A/C control system</li> <li>• Malfunction of A/C switch</li> <li>• Improper connector contact, open circuit or short-circuited harness wire</li> <li>• Malfunction of the engine-ECU</li> </ul> |

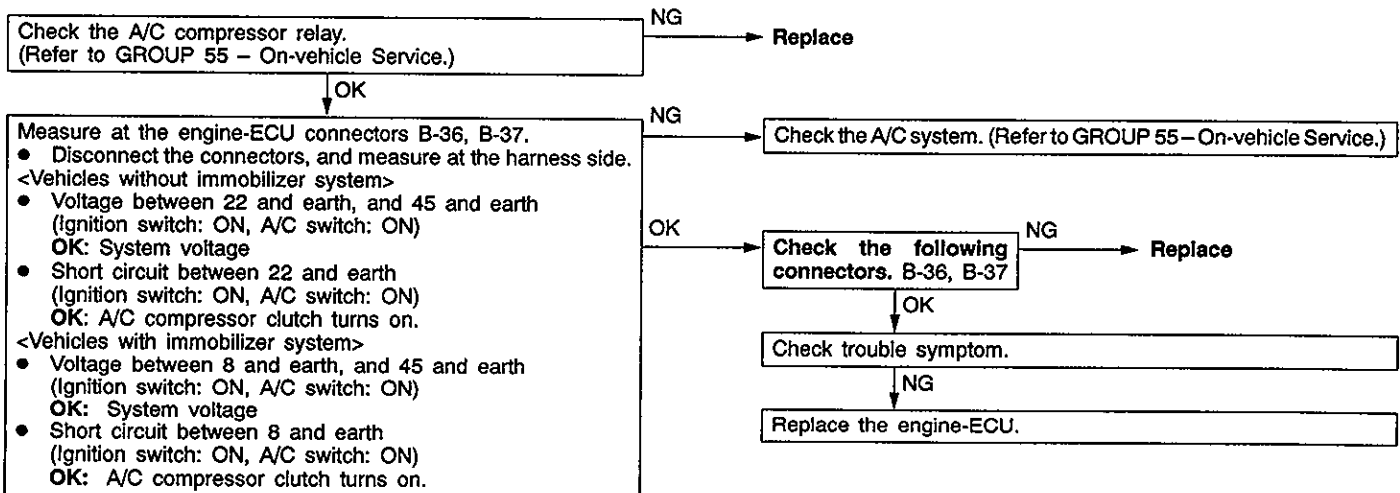


## INSPECTION PROCEDURE 31

| Fan motor relay system (Radiator fan, A/C condenser fan)                         | Probable cause                                                                                                                                                                                                                          |
|----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The power transistor inside the engine-ECU turns the fan motor relay on and off. | <ul style="list-style-type: none"> <li>Malfunction of fan motor relay</li> <li>Malfunction of fan motor</li> <li>Improper connector contact, open circuit or short-circuited harness wire</li> <li>Malfunction of engine-ECU</li> </ul> |

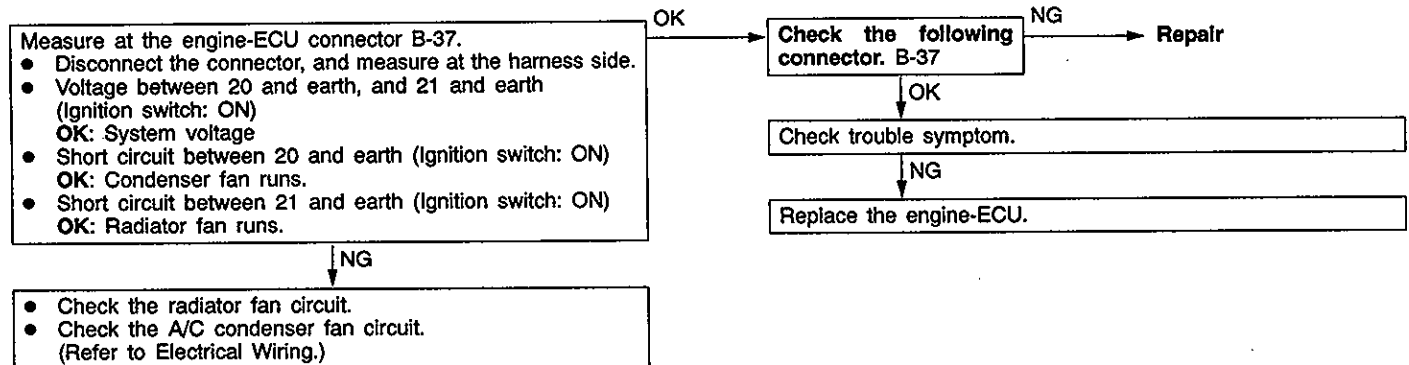


## INSPECTION PROCEDURE 32

| Ignition circuit system                                                                                                       | Probable cause                                                                                                                                                                                            |
|-------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The engine-ECU interrupts the ignition coil primary current by turning the power transistor inside the engine-ECU ON and OFF. | <ul style="list-style-type: none"> <li>Malfunction of ignition switch</li> <li>Improper connector contact, open circuit or short-circuited harness wire</li> <li>Malfunction of the engine-ECU</li> </ul> |

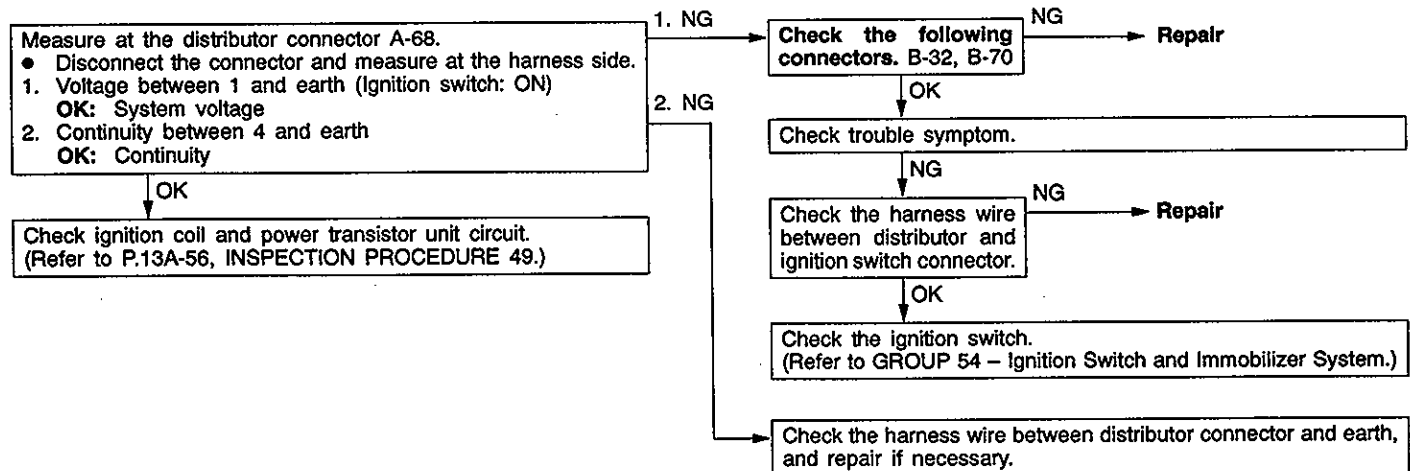


## INSPECTION PROCEDURE 33

| Idle speed control (ISC) servo (Stepper motor) system                                                                                 | Probable cause                                                                                                                                                                                            |
|---------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The engine-ECU controls the intake air volume during idling by opening and closing the servo valve located in the bypass air passage. | <ul style="list-style-type: none"> <li>• Malfunction of ISC servo</li> <li>• Improper connector contact, open circuit or short-circuited harness wire</li> <li>• Malfunction of the engine-ECU</li> </ul> |

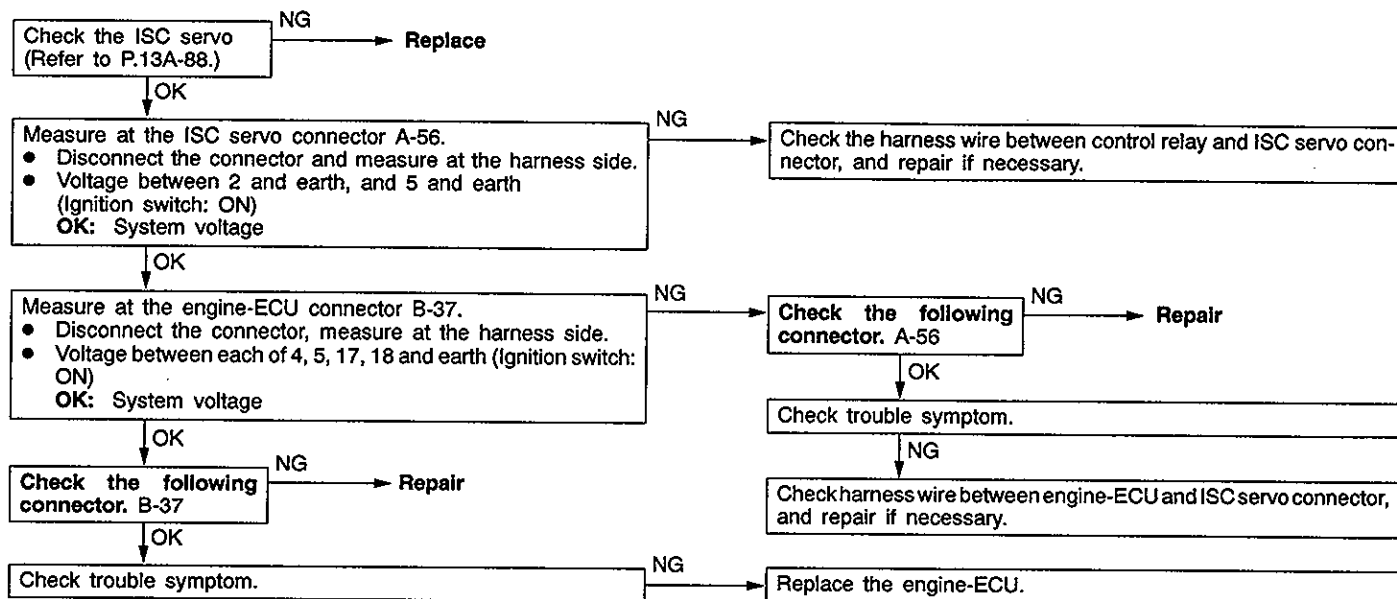


## INSPECTION PROCEDURE 34

| Purge control solenoid valve system                                                                                | Probable cause                                                                                                                                                                                                  |
|--------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The purge control solenoid valve controls the purging of air from the canister located inside the intake manifold. | <ul style="list-style-type: none"> <li>• Malfunction of solenoid valve</li> <li>• Improper connector contact, open circuit or short-circuited harness wire.</li> <li>• Malfunction of the engine-ECU</li> </ul> |

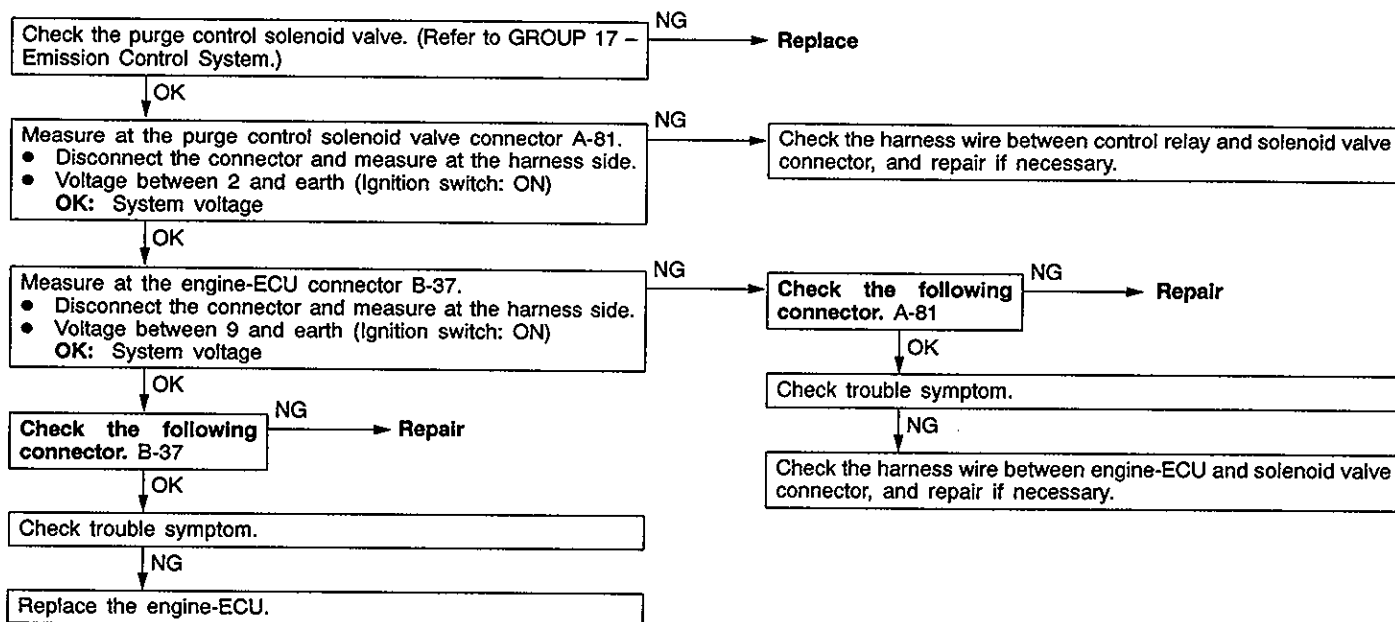


## INSPECTION PROCEDURE 35


| EGR control solenoid valve system                                                                                                            | Probable cause                                                                                                                                                                                                  |
|----------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The EGR control solenoid valve is controlled by the negative pressure resulting from EGR operation leaking to port "A" of the throttle body. | <ul style="list-style-type: none"> <li>• Malfunction of solenoid valve</li> <li>• Improper connector contact, open circuit or short-circuited harness wire.</li> <li>• Malfunction of the engine-ECU</li> </ul> |

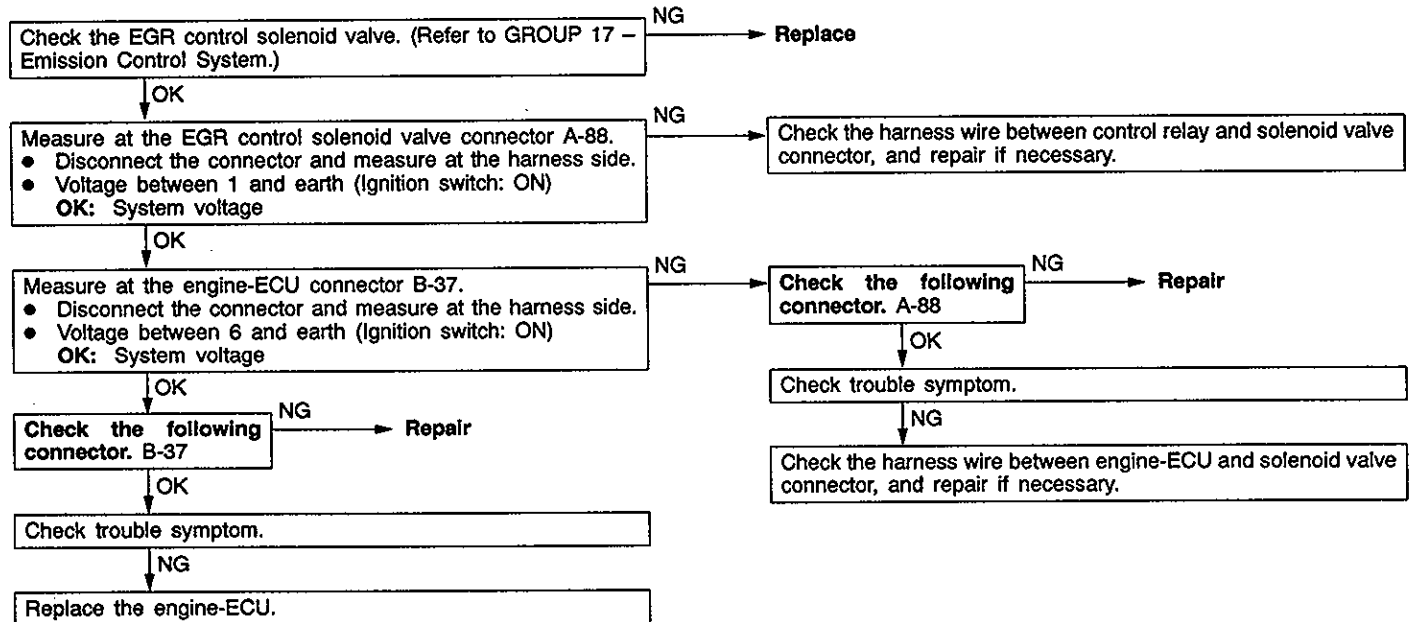


## INSPECTION PROCEDURE 36

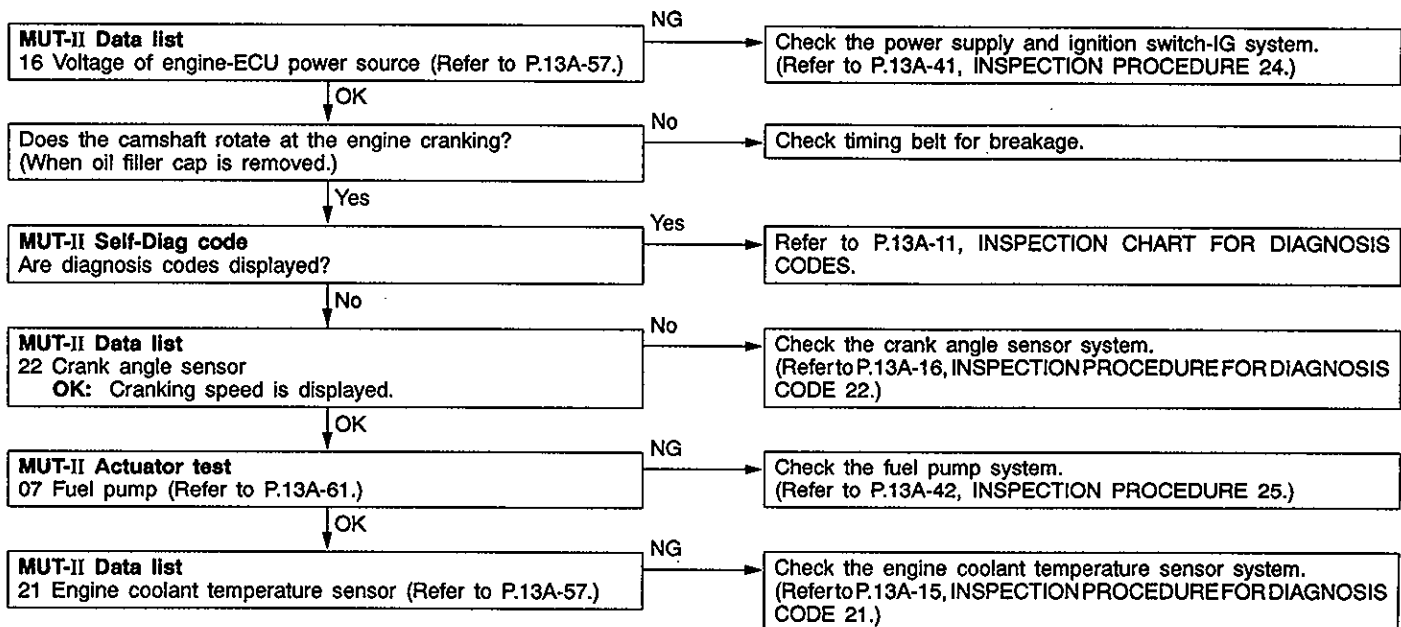**MUT-II: Inspection of no initial combustion**


## INSPECTION PROCEDURE 37

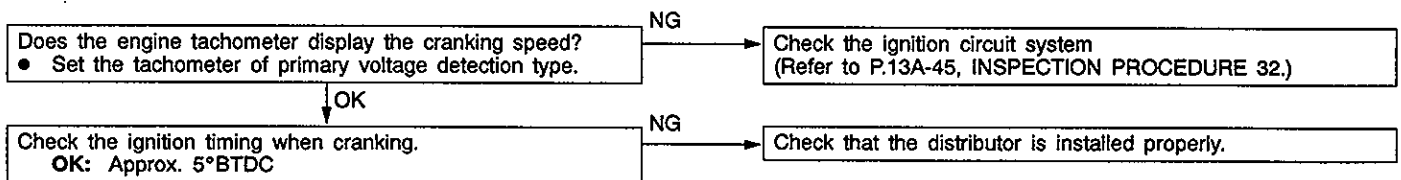**Ignition system: Inspection of no initial combustion.**


## INSPECTION PROCEDURE 38

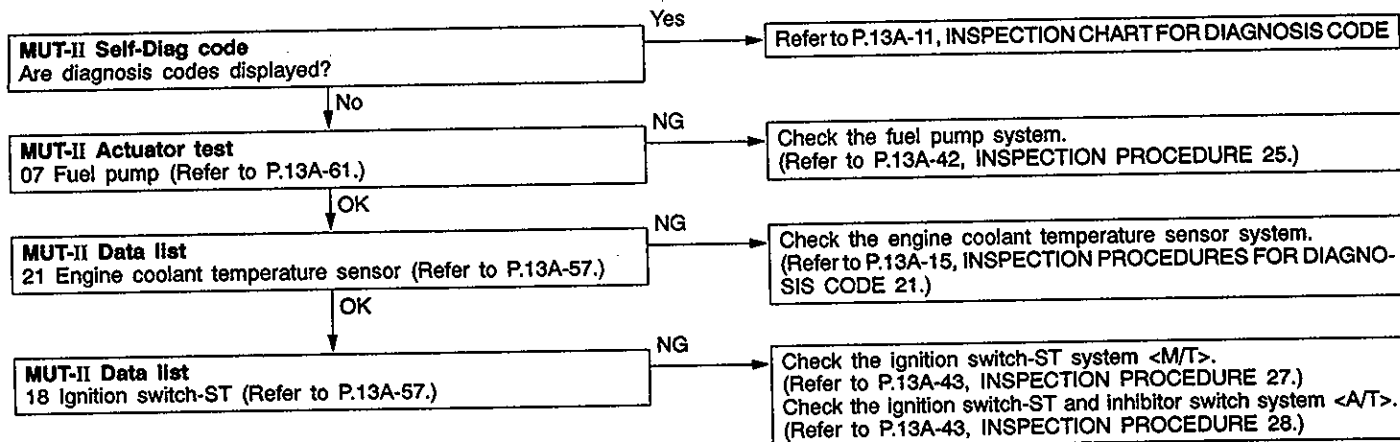**MUT-II: Check if incomplete combustion occurs.**


## INSPECTION PROCEDURE 39

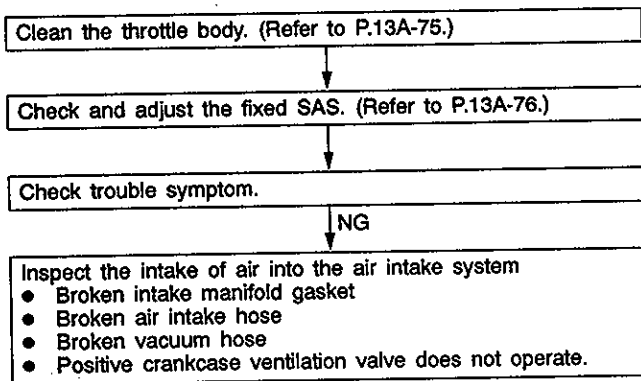**Check if hunting occurs.**

## INSPECTION PROCEDURE 40

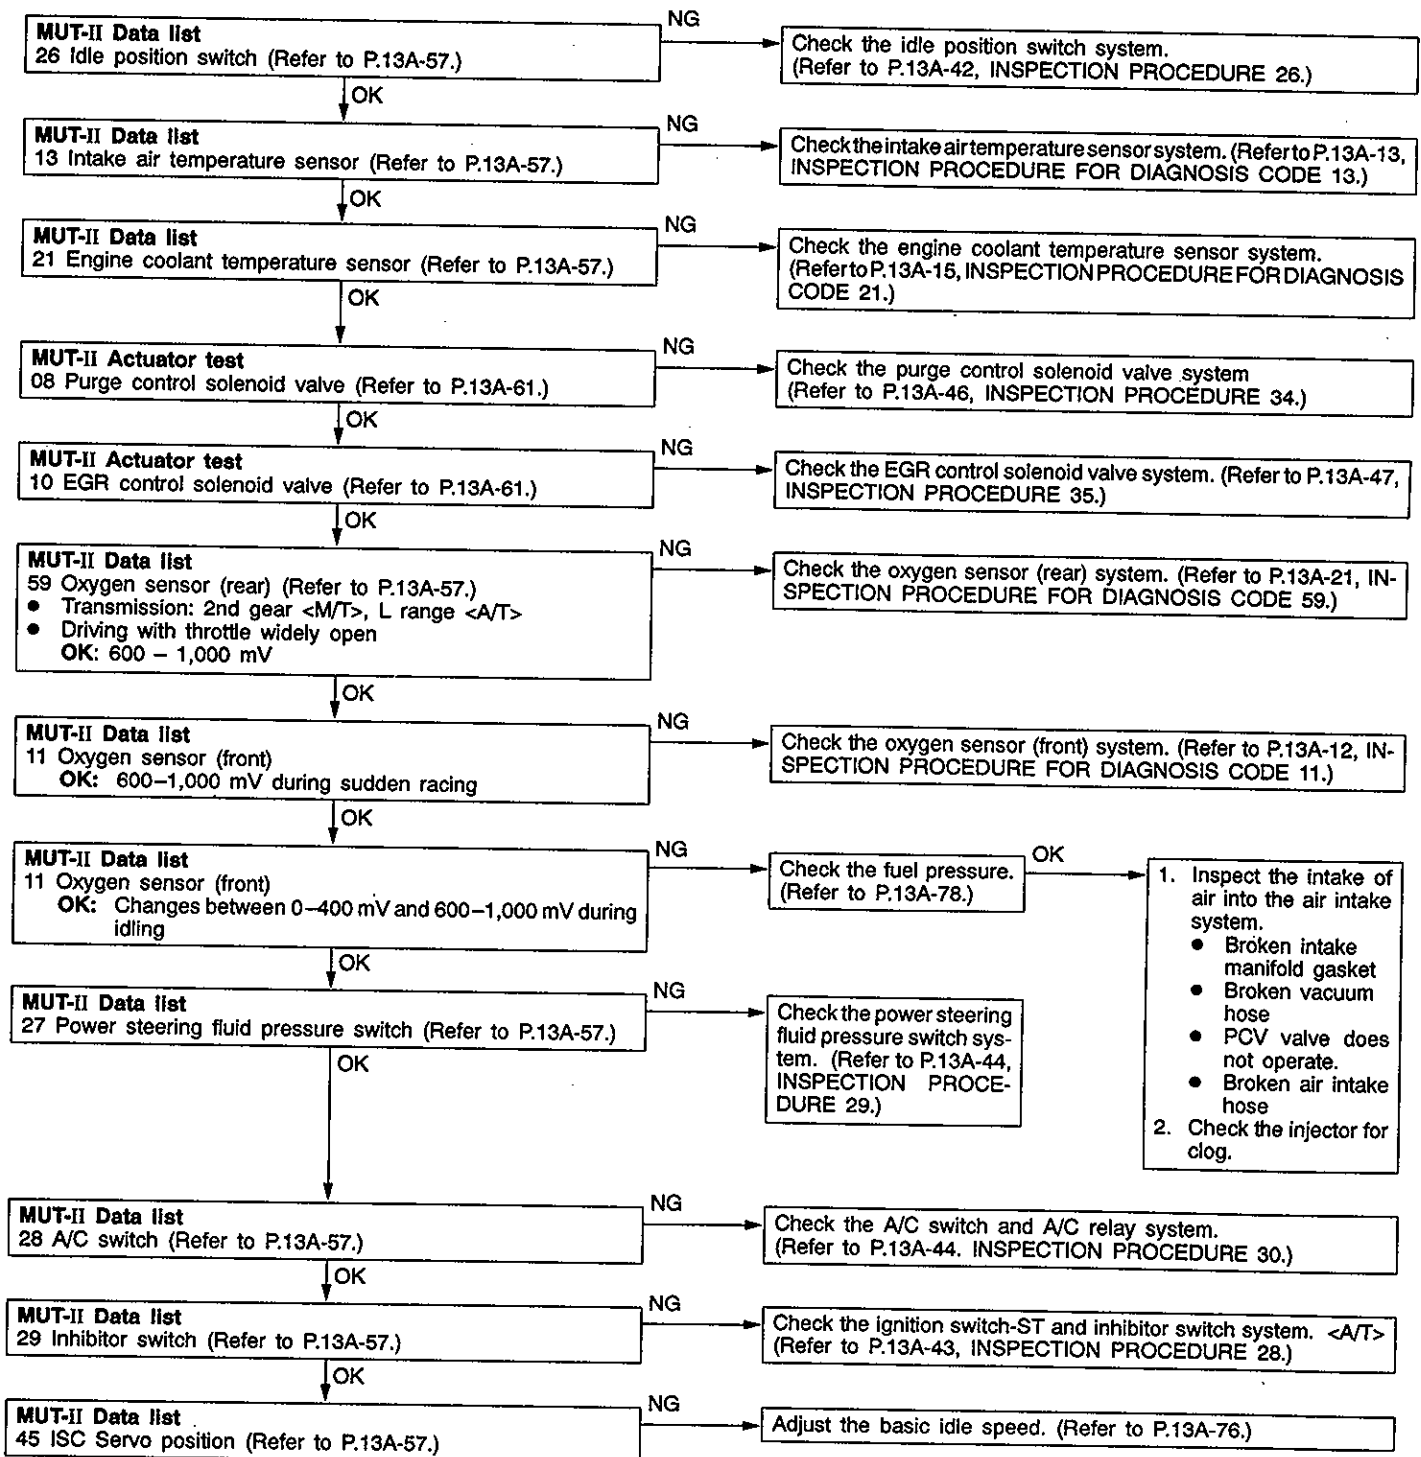
**MUT-II: Check if idling speed is unstable.**

## INSPECTION PROCEDURE 41

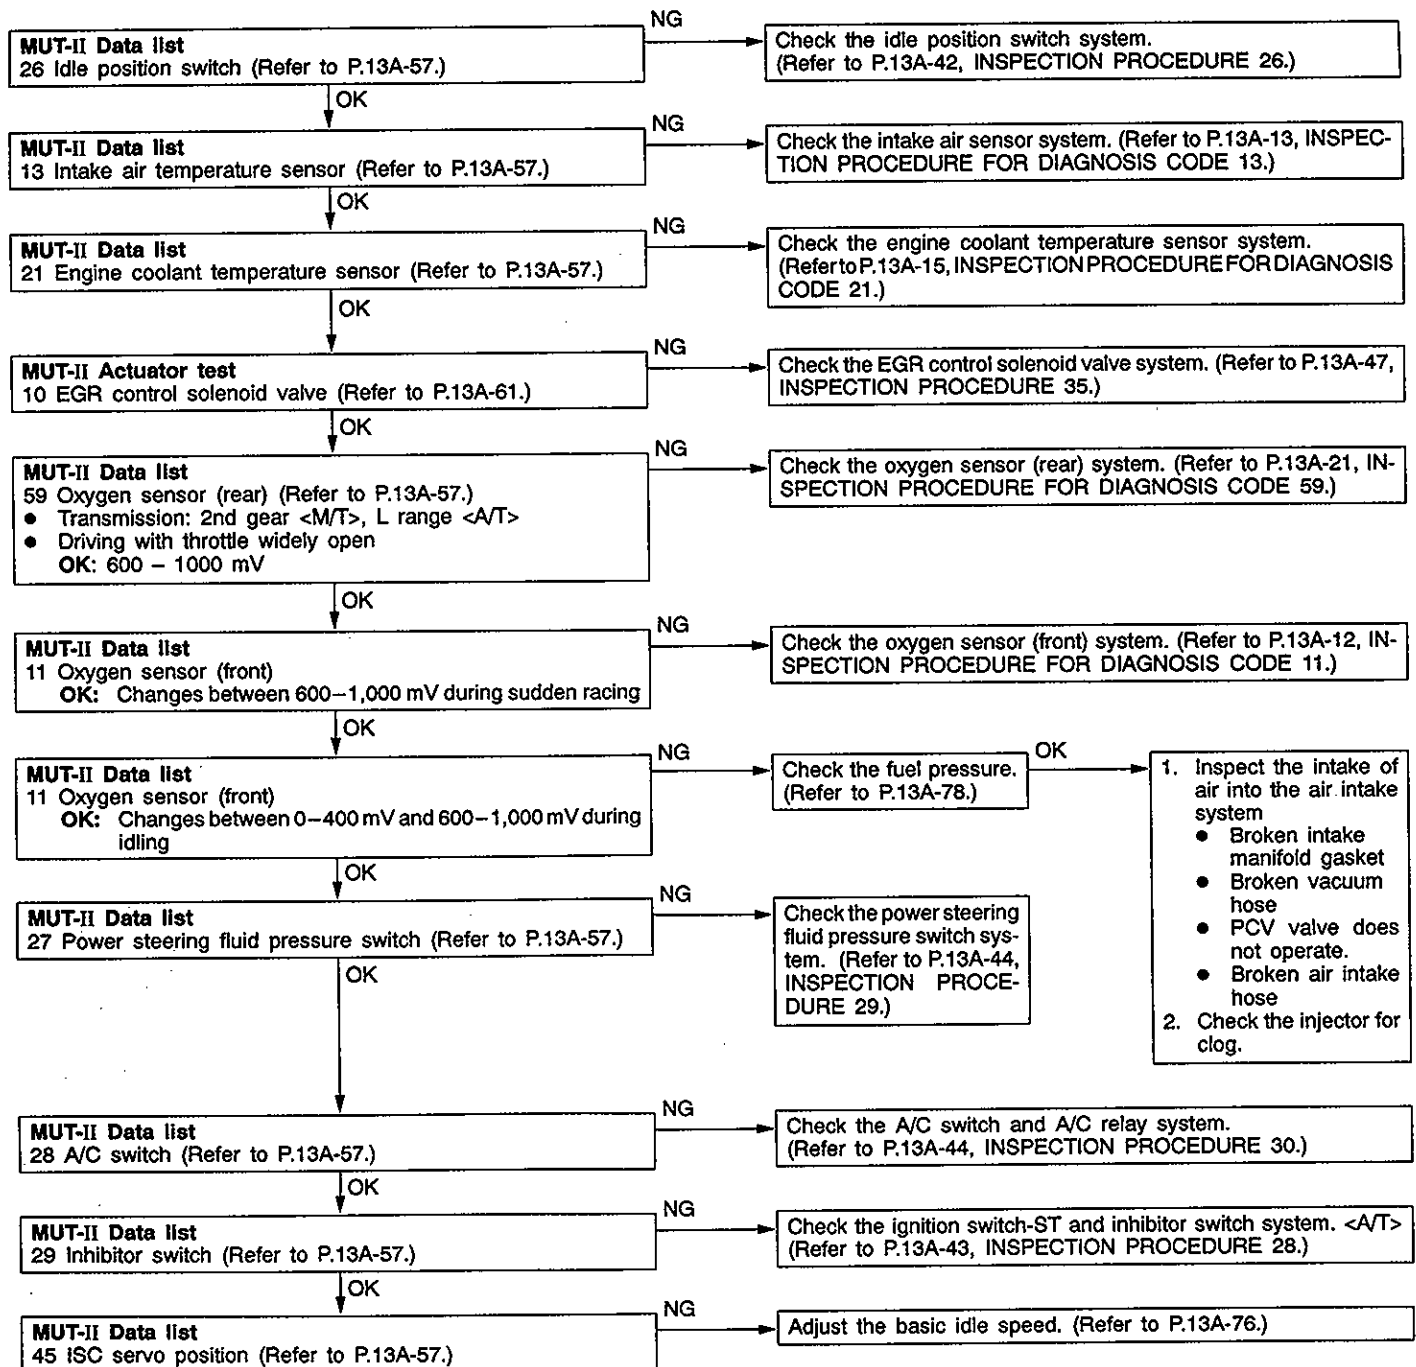
**MUT-II: Engine stalling inspection when the engine is warmed up and idling.**

## INSPECTION PROCEDURE 42

**MUT-II: Check if hesitation, sug, stumble or poor acceleration occurs.**

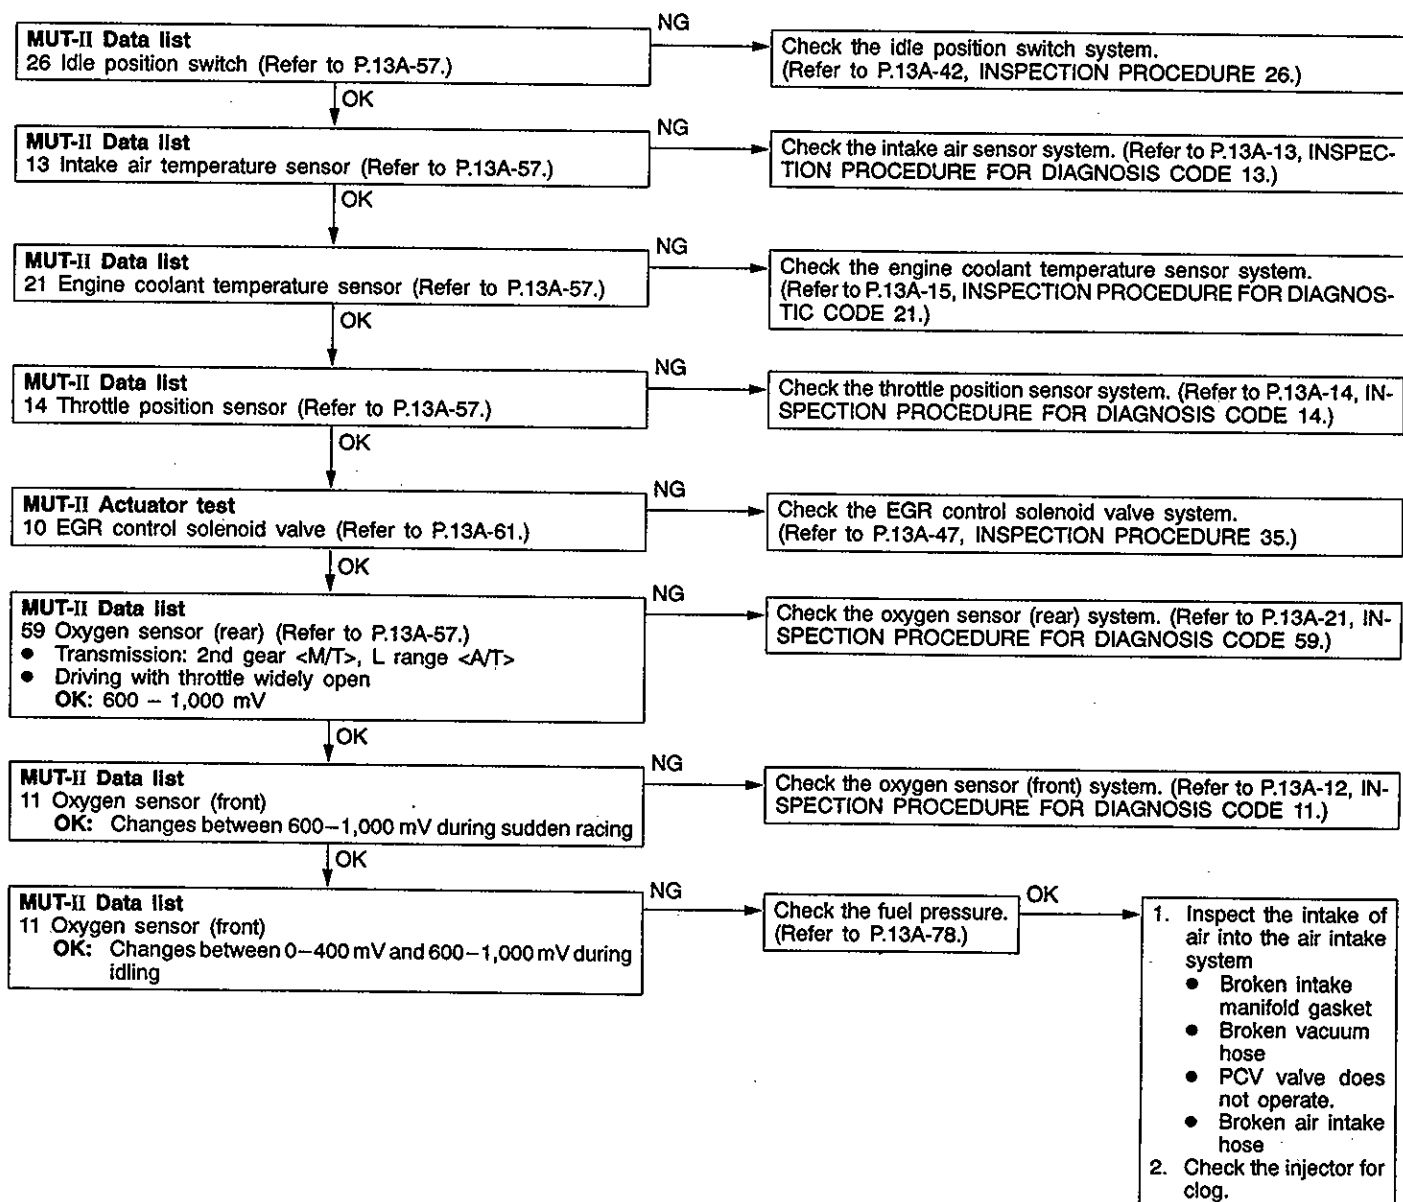


## INSPECTION PROCEDURE 43

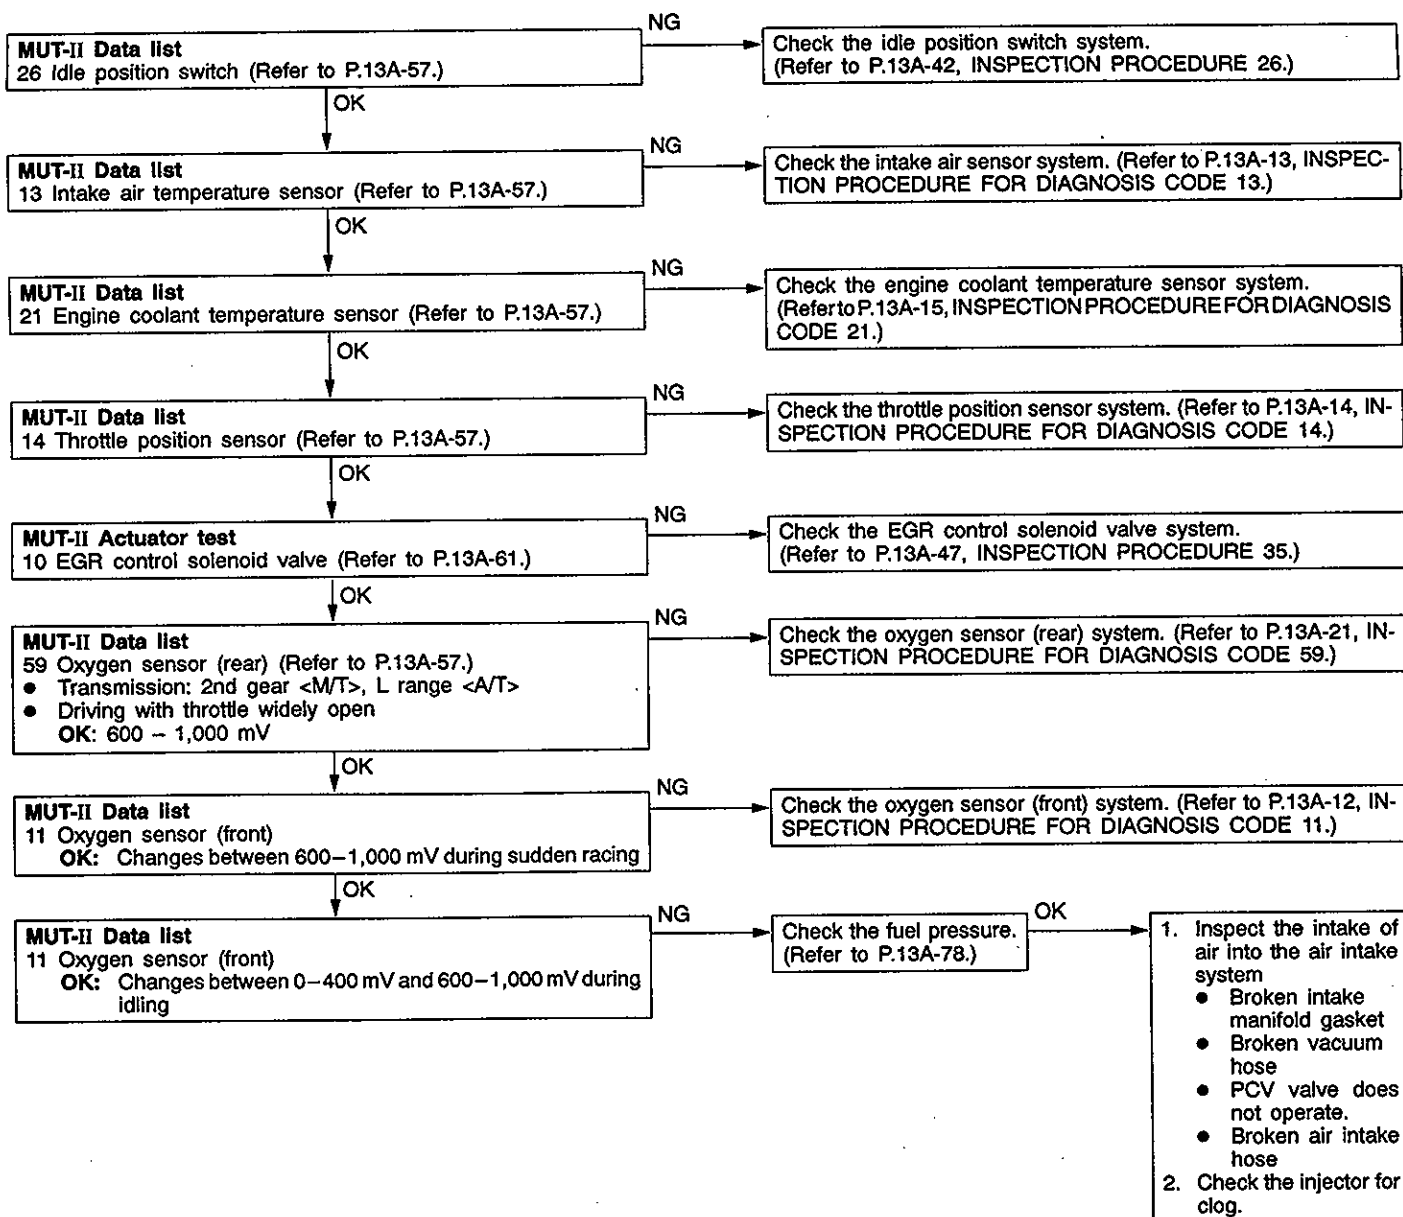**MUT-II Check if surge occurs.**


## INSPECTION PROCEDURE 44

## Check the engine-ECU power supply and earth circuit.

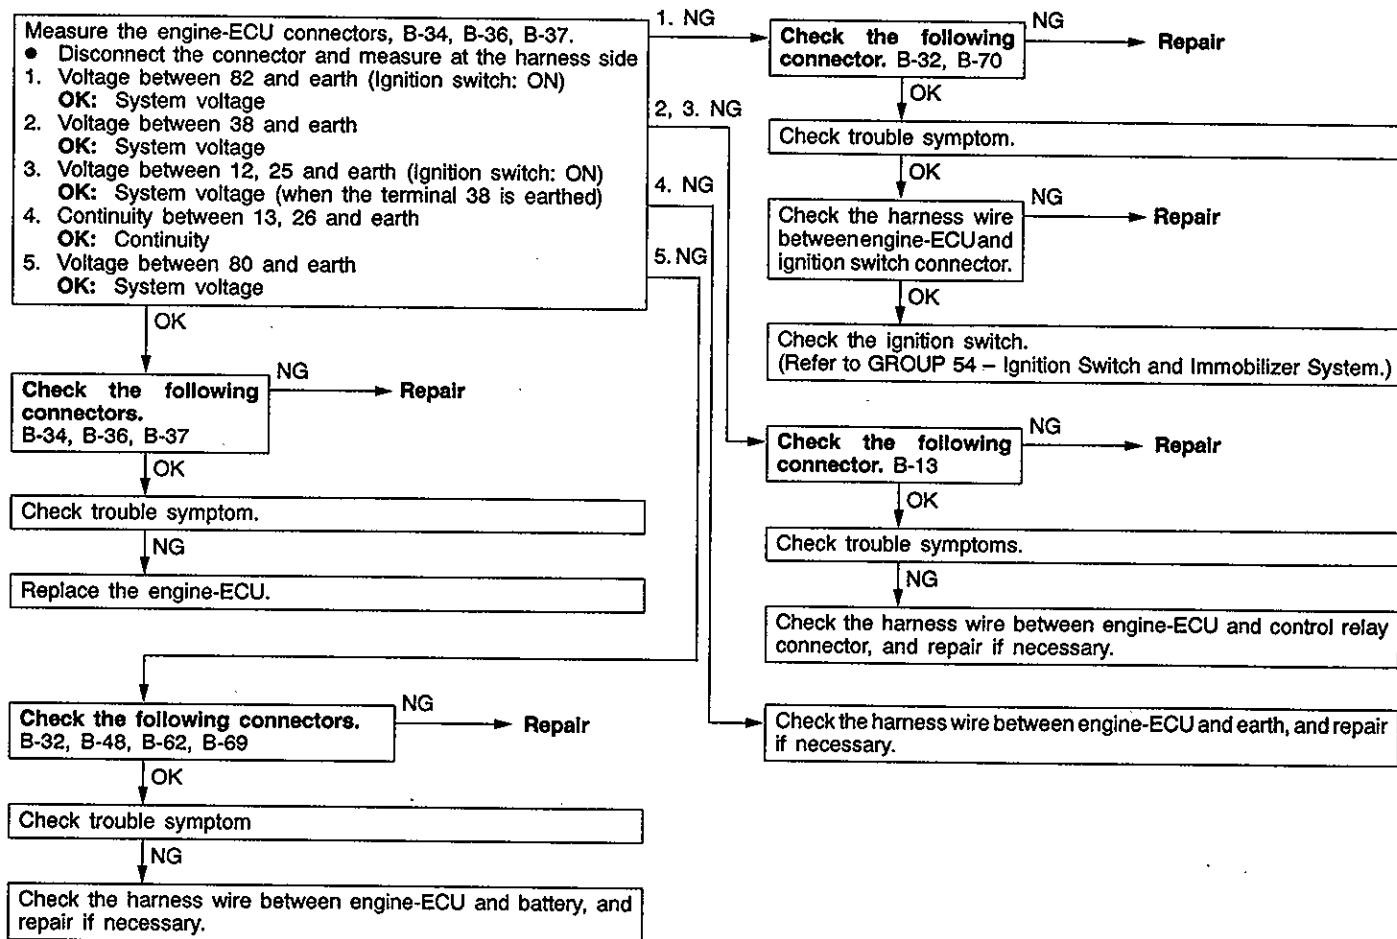


## INSPECTION PROCEDURE 45

## Check fuel pump circuit.

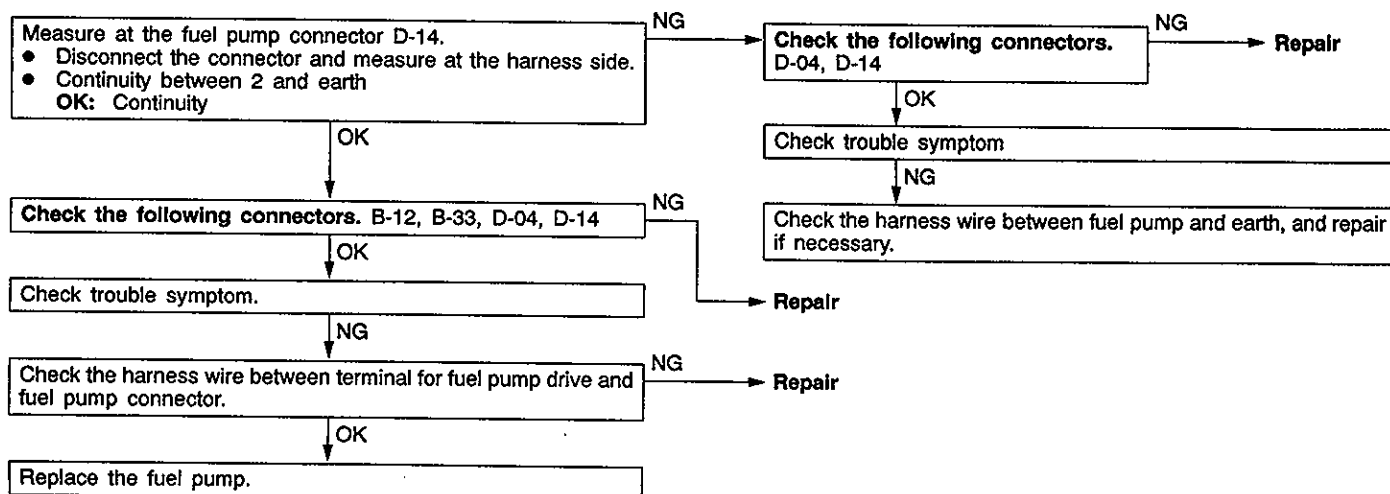


## INSPECTION PROCEDURE 46

## Check the fuel pump drive control circuit.

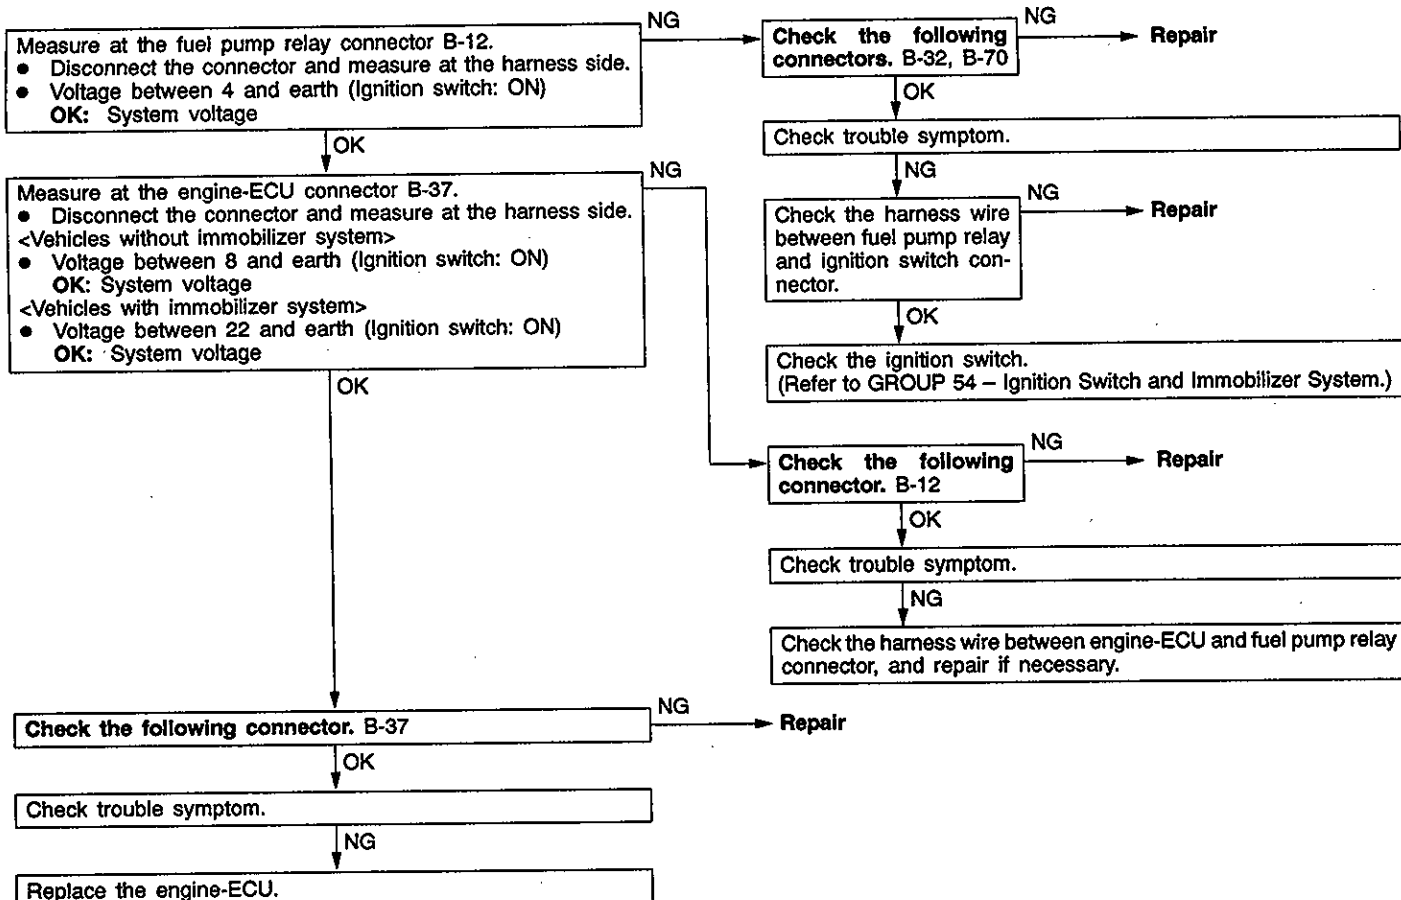


## INSPECTION PROCEDURE 47

## Check throttle position sensor (TPS) output circuit.

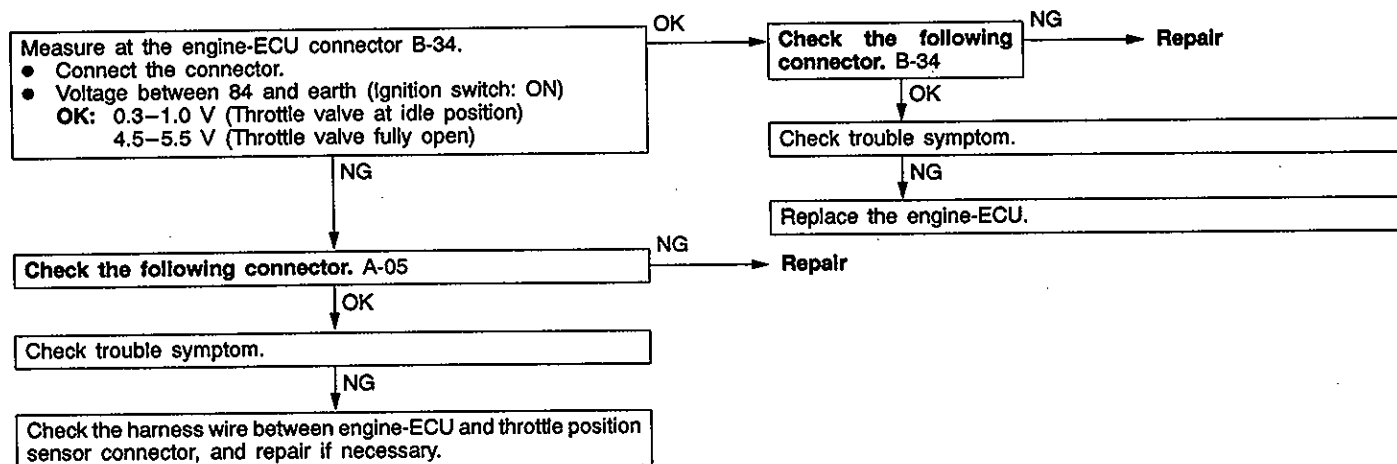


## INSPECTION PROCEDURE 48

## Check injector control circuit

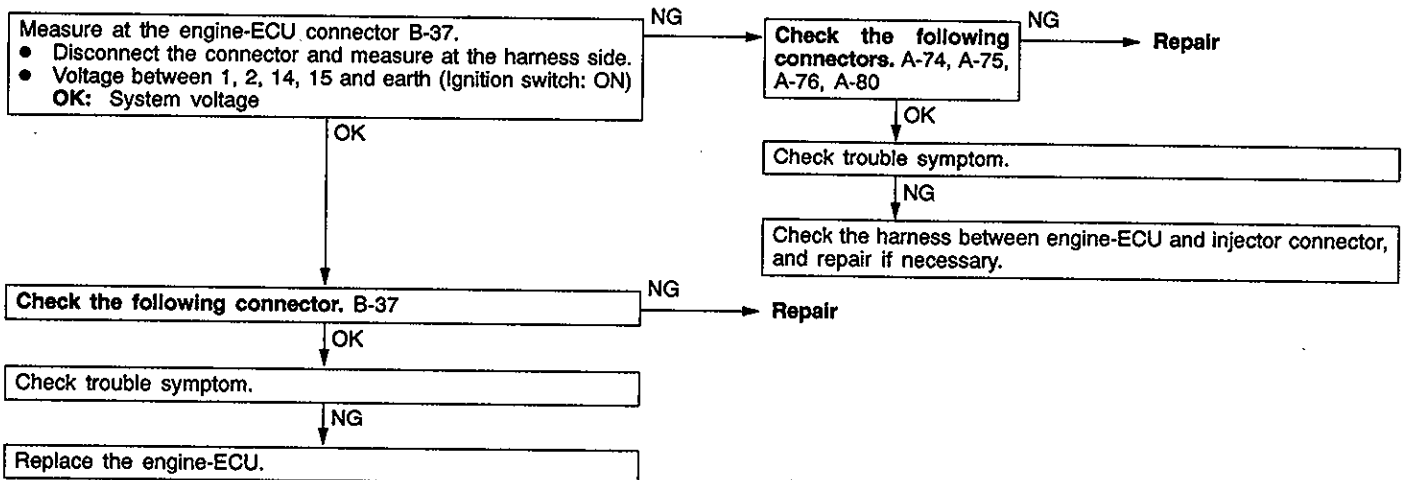

## INSPECTION PROCEDURE 49

## Check ignition coil and power transistor unit circuit.

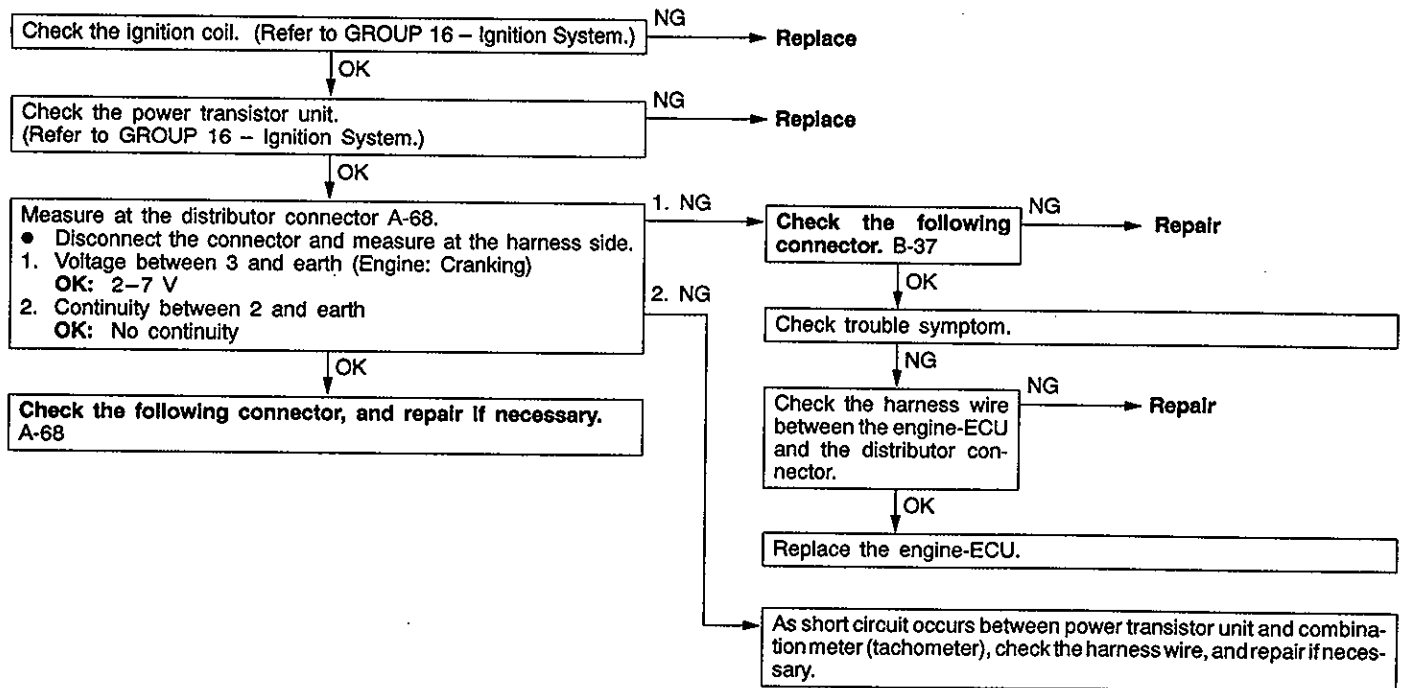

## DATA LIST REFERENCE TABLE

13100890098

**Caution**

When shifting the select lever to D range, the brakes should be applied so that the vehicle does not move forward.

**NOTE**

- \*1. The idle position switch normally turns off when the voltage of the throttle position sensor is 50–100 mV higher than the voltage at the idle position. If the throttle position switch turns back on after the throttle position sensor voltage has risen by 100 mV and the throttle valve has opened, the idle position switch and the throttle position sensor need to be adjusted.
- \*2. In a new vehicle [driven approximately 500 km or less], the air intake plenum pressure is sometimes 10% higher than the standard pressure.
- \*3. The injector drive time represents the time when the cranking speed is at 250 r/min or below when the power supply voltage is 11 V.
- \*4. In a new vehicle [driven approximately 500 km or less], the injector drive time is sometimes 10% longer than the standard time.
- \*5. In a new vehicle [driven approximately 500 km or less], the step of the stepper motor is sometimes 30 steps greater than the standard value.

| Item No. | Inspection item               | Inspection contents                                                                                                                                      |                                                     | Normal condition                                  | Inspection procedure No. | Reference page |
|----------|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------|---------------------------------------------------|--------------------------|----------------|
| 11       | Oxygen sensor (front)         | Engine:After having warmed up<br>Air/fuel mixture is made leaner when decelerating, and is made richer when racing.                                      | When at 4,000 r/min, engine is suddenly decelerated | 200 mV or less                                    | Code No. 11              | 13A-12         |
|          |                               |                                                                                                                                                          | When engine is suddenly raced                       | 600–1,000 mV                                      |                          |                |
|          |                               | Engine:After having warmed up<br>The oxygen sensor signal is used to check the air/fuel mixture ratio, and control condition is also checked by the ECU. | Engine is idling                                    | 400 mV or less (Changes)<br>600–1,000 mV          |                          |                |
|          |                               |                                                                                                                                                          | 2,500 r/min                                         |                                                   |                          |                |
| 13       | Intake air temperature sensor | Ignition switch: ON or with engine running                                                                                                               | When intake air temperature is –20°C                | –20°C                                             | Code No. 13              | 13A-13         |
|          |                               |                                                                                                                                                          | When intake air temperature is 0°C                  | 0°C                                               |                          |                |
|          |                               |                                                                                                                                                          | When intake air temperature is 20°C                 | 20°C                                              |                          |                |
|          |                               |                                                                                                                                                          | When intake air temperature is 40°C                 | 40°C                                              |                          |                |
|          |                               |                                                                                                                                                          | When intake air temperature is 80°C                 | 80°C                                              |                          |                |
| 14       | Throttle position sensor      | Ignition switch: ON                                                                                                                                      | Set to idle position                                | 300–1,000 mV                                      | Code No. 14              | 13A-14         |
|          |                               |                                                                                                                                                          | Gradually open                                      | Increases in proportion to throttle opening angle |                          |                |
|          |                               |                                                                                                                                                          | Open fully                                          | 4,500–5,500 mV                                    |                          |                |

| Item No. | Inspection item                      | Inspection contents                                                                                |                                                                     | Normal condition | Inspection procedure No. | Reference page               |
|----------|--------------------------------------|----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------|------------------|--------------------------|------------------------------|
| 16       | Power supply voltage                 | Ignition switch: ON                                                                                |                                                                     | System voltage   | Procedure No. 24         | 13A-41                       |
| 18       | Cranking signal (ignition switch-ST) | Ignition switch: ON                                                                                | Engine: Stopped                                                     | OFF              | Procedure No. 27 <M/T>   | 13A-43 <M/T><br>13A-43 <A/T> |
|          |                                      |                                                                                                    | Engine: Cranking                                                    | ON               | Procedure No. 28 <A/T>   |                              |
| 21       | Engine coolant temperature sensor    | Ignition switch: ON or with engine running                                                         | When engine coolant temperature is -20°C                            | -20°C            | Code No. 21              | 13A-15                       |
|          |                                      |                                                                                                    | When engine coolant temperature is 0°C                              | 0°C              |                          |                              |
|          |                                      |                                                                                                    | When engine coolant temperature is 20°C                             | 20°C             |                          |                              |
|          |                                      |                                                                                                    | When engine coolant temperature is 40°C                             | 40°C             |                          |                              |
|          |                                      |                                                                                                    | When engine coolant temperature is 80°C                             | 80°C             |                          |                              |
| 22       | Crank angle sensor                   | <ul style="list-style-type: none"> <li>Engine: Cranking</li> <li>Tachometer: Connected</li> </ul>  | Compare the engine speed readings on the tachometer and the MUT-II. | Accord           | Code No. 22              | 13A-16                       |
|          |                                      |                                                                                                    |                                                                     |                  |                          |                              |
|          |                                      | <ul style="list-style-type: none"> <li>Engine: Idling</li> <li>Idle position switch: ON</li> </ul> | When engine coolant temperature is -20°C                            | 1,475–1,675 rpm  |                          |                              |
|          |                                      |                                                                                                    | When engine coolant temperature is 0°C                              | 1,345–1,545 rpm  |                          |                              |
|          |                                      |                                                                                                    | When engine coolant temperature is 20°C                             | 1,300–1,500 rpm  |                          |                              |
|          |                                      |                                                                                                    | When engine coolant temperature is 40°C                             | 1,160–1,360 rpm  |                          |                              |
|          |                                      |                                                                                                    | When engine coolant temperature is 80°C                             | 650–850 rpm      |                          |                              |


| Item No. | Inspection item                      | Inspection contents                                                                                                                                                                                                                 |                                                                                                    | Normal condition | Inspection procedure No. | Reference page |
|----------|--------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|------------------|--------------------------|----------------|
| 26       | Idle position switch                 | Ignition switch: ON<br>Check by operating accelerator pedal repeatedly                                                                                                                                                              | Throttle valve:<br>Set to idle position                                                            | ON               | Procedure No. 26         | 13A-42         |
|          |                                      |                                                                                                                                                                                                                                     | Throttle valve:<br>Slightly open                                                                   | OFF*1            |                          |                |
| 27       | Power steering fluid pressure switch | Engine: Idling                                                                                                                                                                                                                      | Steering wheel stationary                                                                          | OFF              | Procedure No. 29         | 13A-44         |
|          |                                      |                                                                                                                                                                                                                                     | Steering wheel turning                                                                             | ON               |                          |                |
| 28       | A/C switch                           | Engine: Idling<br>(when A/C switch is ON, A/C compressor should be operating.)                                                                                                                                                      | A/C switch: OFF                                                                                    | OFF              | Procedure No. 30         | 13A-44         |
|          |                                      |                                                                                                                                                                                                                                     | A/C switch: ON                                                                                     | ON               |                          |                |
| 29       | Inhibitor switch <A/T>               | Ignition switch: ON                                                                                                                                                                                                                 | P or N                                                                                             | P or N           | Procedure No. 28         | 13A-43         |
|          |                                      |                                                                                                                                                                                                                                     | D, 2, L or R                                                                                       | D, 2, L or R     |                          |                |
| 32       | Vacuum sensor*2                      | <ul style="list-style-type: none"> <li>Engine coolant temperature: 80 – 95°C</li> <li>Lamps, electric cooling fan and all accessories: OFF</li> <li>Transmission: Neutral (P range for A/T)</li> <li>Ignition switch: ON</li> </ul> | Engine: Stopped (At altitude of 0 m)                                                               | 101 kPa          | Code No. 32              | 13A-18         |
|          |                                      |                                                                                                                                                                                                                                     | Engine: Stopped (At altitude of 600 m)                                                             | 95 kPa           |                          |                |
|          |                                      |                                                                                                                                                                                                                                     | Engine: Stopped (At altitude of 1,200 m)                                                           | 88 kPa           |                          |                |
|          |                                      |                                                                                                                                                                                                                                     | Engine: Stopped (At altitude of 1,800 m)                                                           | 81 kPa           |                          |                |
|          |                                      |                                                                                                                                                                                                                                     | Engine: Idling                                                                                     | 24.3 – 37.7 kPa  |                          |                |
|          |                                      |                                                                                                                                                                                                                                     | When engine is suddenly raced                                                                      | Increases        |                          |                |
| 36       | Ignition timing adjustment mode      | Engine: Idling                                                                                                                                                                                                                      | Ignition timing adjustment terminal is earthed                                                     | ON               | Code No. 36              | 13A-19         |
|          |                                      |                                                                                                                                                                                                                                     | Ignition timing adjustment terminal is disconnected from earth                                     | OFF              |                          |                |
| 41       | Injectors *3                         | Engine: Cranking                                                                                                                                                                                                                    | When engine coolant temperature is 0°C (injection is carried out for all cylinders simultaneously) | 19–29 ms         | –                        | –              |
|          |                                      |                                                                                                                                                                                                                                     | When engine coolant temperature is 20°C                                                            | 39–59 ms         |                          |                |
|          |                                      |                                                                                                                                                                                                                                     | When engine coolant temperature is 80°C                                                            | 8.8–13.2 ms      |                          |                |

| Item No. | Inspection item                      | Inspection contents                                                                                                                                                                                                                                                                                                      |                                                                                                         | Normal condition                         | Inspection procedure No. | Reference page |
|----------|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|------------------------------------------|--------------------------|----------------|
| 41       | Injectors*4                          | <ul style="list-style-type: none"><li>Engine coolant temperature: 80–95°C</li><li>Lamps, electric cooling fan and all accessories: OFF</li><li>Transmission: Neutral (A/T : P range)</li></ul>                                                                                                                           | Engine is idling                                                                                        | 1.7–2.9 ms                               | —                        | —              |
|          |                                      |                                                                                                                                                                                                                                                                                                                          | 2,500 r/min                                                                                             | 1.4–2.6 ms                               |                          |                |
|          |                                      |                                                                                                                                                                                                                                                                                                                          | When engine is suddenly raced                                                                           | Increases                                |                          |                |
| 44       | Ignition coils and power transistors | <ul style="list-style-type: none"><li>Engine: After having warmed up</li><li>Timing lamp is set. (The timing lamp is set in order to check actual ignition timing.)</li></ul>                                                                                                                                            | Engine is idling                                                                                        | 2–18 °BTDC                               | —                        | —              |
|          |                                      |                                                                                                                                                                                                                                                                                                                          | 2,500 r/min                                                                                             | 25–45 °BTDC                              |                          |                |
| 45       | ISC (stepper) motor position *5      | <ul style="list-style-type: none"><li>Engine coolant temperature: 80–95°C</li><li>Lamps, electric cooling fan and all accessories: OFF</li><li>Transmission: Neutral (A/T : P range)</li><li>Idle position switch: ON</li><li>Engine: Idling</li><li>When A/C switch is ON, A/C compressor should be operating</li></ul> | A/C switch: OFF                                                                                         | 2–25 STEP                                | —                        | —              |
|          |                                      |                                                                                                                                                                                                                                                                                                                          | A/C switch: OFF → ON                                                                                    | Increases by 10–70 steps                 |                          |                |
|          |                                      |                                                                                                                                                                                                                                                                                                                          | <ul style="list-style-type: none"><li>A/C switch: OFF</li><li>Select lever: N range → D range</li></ul> | Increases by 5–50 steps                  |                          |                |
| 49       | A/C relay                            | Engine: After having warmed up/Engine is idling                                                                                                                                                                                                                                                                          | A/C switch: OFF                                                                                         | OFF (Compressor clutch is not operating) | Procedure No. 30         | 13A-44         |
|          |                                      |                                                                                                                                                                                                                                                                                                                          | A/C switch: ON                                                                                          | ON (Compressor clutch is operating)      |                          |                |
| 59       | Oxygen sensor (rear)                 | <ul style="list-style-type: none"><li>Transmission: 2nd gear &lt;M/T&gt;, L range &lt;A/T&gt;</li><li>Drive with throttle widely open</li></ul>                                                                                                                                                                          | 3,500 r/min                                                                                             | 600 – 1,000 mV                           | Code No. 59              | 13A-21         |

## ACTUATOR TEST REFERENCE TABLE

13100900128

| Item No. | Inspection item              | Drive contents                               | Inspection contents                                                                                                                                   |                                                                                                                                                             | Normal condition                                               | Inspection procedure No. | Reference page |
|----------|------------------------------|----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|--------------------------|----------------|
| 01       | Injectors                    | Cut fuel to No. 1 injector                   | Engine:<br>After having warmed up/Engine is idling<br>(Cut the fuel supply to each injector in turn and check cylinders which don't affect idling.)   |                                                                                                                                                             | Idling condition becomes different (becomes unstable).         | Code No. 41              | 13A-19         |
| 02       |                              | Cut fuel to No. 2 injector                   |                                                                                                                                                       |                                                                                                                                                             |                                                                |                          |                |
| 03       |                              | Cut fuel to No. 3 injector                   |                                                                                                                                                       |                                                                                                                                                             |                                                                |                          |                |
| 04       |                              | Cut fuel to No. 4 injector                   |                                                                                                                                                       |                                                                                                                                                             |                                                                |                          |                |
| 07       | Fuel pump                    | Fuel pump operates and fuel is recirculated. | <ul style="list-style-type: none"> <li>Engine: Cranking</li> <li>Fuel pump: Forced driving</li> </ul> Inspect according to both the above conditions. | Pinch the return hose with fingers to feel the pulse of the fuel being recirculated.<br><br>Listen near the fuel tank for the sound of fuel pump operation. | Pulse is felt.<br><br>Sound of operation is heard.             | Procedure No. 25         | 13A-42         |
| 08       | Purge control solenoid valve | Solenoid valve turns from OFF to ON.         | Ignition switch: ON                                                                                                                                   |                                                                                                                                                             | Sound of operation can be heard when solenoid valve is driven. | Procedure No. 34         | 13A-46         |
| 10       | EGR control solenoid valve   | Solenoid valve turns from OFF to ON.         | Ignition switch: ON                                                                                                                                   |                                                                                                                                                             | Sound of operation can be heard when solenoid valve is driven. | Procedure No. 35         | 13A-47         |
| 20       | Condenser fan                | Drive the fan motors (condenser)             | <ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>A/C switch: ON</li> </ul>                                                         |                                                                                                                                                             | Fan motor runs                                                 | Procedure No. 31         | 13A-45         |
| 21       | Radiator fan                 | Drive the fan motors (radiator)              | <ul style="list-style-type: none"> <li>Ignition switch: ON</li> </ul>                                                                                 |                                                                                                                                                             | Fan motor runs                                                 | Procedure No. 31         | 13A-45         |

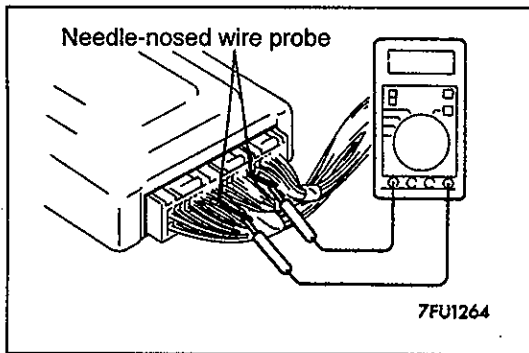

## CHECK AT THE ENGINE-ECU TERMINALS

13100920094

### TERMINAL VOLTAGE CHECK CHART

1. Connect a needle-nosed wire probe (test harness: MB991223 or paper clip) to a voltmeter probe.
2. Insert the needle-nosed wire probe into each of the engine-ECU connector terminals from the wire side, and measure the voltage while referring to the check chart.

#### NOTE


1. Make the voltage measurement with the engine-ECU connectors connected.
2. You may find it convenient to pull out the engine-ECU to make it easier to reach the connector terminals.
3. The checks can be carried out off the order given in the chart.

#### Caution

Short-circuiting the positive (+) probe between a connector terminal and earth could damage the vehicle wiring, the sensor, engine-ECU or all of them. Be careful to prevent this!

3. If voltmeter shows any division from standard value, check the corresponding sensor, actuator and related electrical wiring, then repair or replace.
4. After repair or replacement, recheck with the voltmeter to confirm that the repair has corrected the problem.

### Engine-ECU Connector Terminal Arrangement

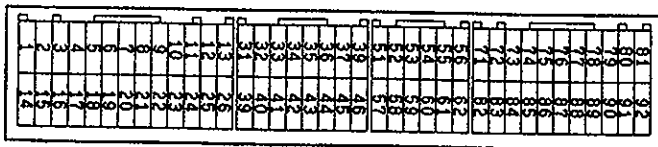

9FU0393

#### NOTE

\*: Vehicles with immobilizer system

| Terminal No. | Check item     | Check condition (Engine condition)                                                     | Normal condition                         |
|--------------|----------------|----------------------------------------------------------------------------------------|------------------------------------------|
| 1            | No. 1 injector | While engine is idling after having warmed up, suddenly depress the accelerator pedal. | From 11–14 V, momentarily drops slightly |
| 14           | No. 2 injector |                                                                                        |                                          |
| 2            | No. 3 injector |                                                                                        |                                          |
| 15           | No. 4 injector |                                                                                        |                                          |

| Terminal No. | Check item                   | Check condition (Engine condition)                                                                                                                           | Normal condition                                  |
|--------------|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------|
| 4            | Stepper motor coil <A1>      | Engine: Soon after the warmed up engine is started                                                                                                           | System voltage ↔ 0 V<br>(Changes repeatedly)      |
| 17           | Stepper motor coil <A2>      |                                                                                                                                                              |                                                   |
| 5            | Stepper motor coil <B1>      |                                                                                                                                                              |                                                   |
| 18           | Stepper motor coil <B2>      |                                                                                                                                                              |                                                   |
| 6            | EGR control solenoid valve   | Ignition switch: ON                                                                                                                                          | System Voltage                                    |
|              |                              | While engine is idling, suddenly depress the accelerator pedal.                                                                                              | From system voltage, momentarily drops            |
| 8 or 22*     | Fuel pump relay              | Ignition switch: ON                                                                                                                                          | System voltage                                    |
|              |                              | Engine: Idle speed                                                                                                                                           | 0–3V                                              |
| 9            | Purge control solenoid valve | Ignition switch: ON                                                                                                                                          | System voltage                                    |
|              |                              | Running at 3,000r/min while engine is warming up after having been started.                                                                                  | 0–3V                                              |
| 10           | Power transistor unit        | Engine r/min: 3,000 r/min                                                                                                                                    | 0.3–3.0V                                          |
| 12           | Power supply                 | Ignition switch: ON                                                                                                                                          | System voltage                                    |
| 25           |                              |                                                                                                                                                              |                                                   |
| 20           | Condenser fan motor relay    | Condenser fan is not operating (Engine coolant temperature is 90°C or less)                                                                                  | System voltage                                    |
|              |                              | Condenser fan is operating (Engine coolant temperature is 105°C or more)                                                                                     | 0 – 3 V                                           |
| 21           | Radiator fan motor relay     | Radiator fan is not operating (Engine coolant temperature is 90°C or less)                                                                                   | System voltage                                    |
|              |                              | Radiator fan is operating (Engine coolant temperature is 90 – 105°C)                                                                                         | 0 – 3 V                                           |
| 22 or 8*     | A/C relay                    | <ul style="list-style-type: none"> <li>Engine: Idle speed</li> <li>A/C switch: OFF → ON (A/C compressor runs)</li> </ul>                                     | System voltage or momentarily 6V or more → 0–3V   |
| 33           | Alternator G terminal        | <ul style="list-style-type: none"> <li>Engine: Warm, idle (radiator fan: OFF)</li> <li>Headlamp: OFF → ON</li> <li>Rear defogger switch: OFF → ON</li> </ul> | 0.4 – 0.8 V to 0.8 – 1.2 V                        |
| 41           | Alternator FR terminal       | <ul style="list-style-type: none"> <li>Engine: Warm, idle (radiator fan: OFF)</li> <li>Headlamp: OFF → ON</li> <li>Rear defogger switch: OFF → ON</li> </ul> | 1.8 – 2.4 V to 1.0 – 1.6 V                        |
| 36           | Engine warning lamp          | Ignition switch: OFF → ON                                                                                                                                    | 0–3V → 9–13V (After several seconds have elapsed) |

| Terminal No. | Check item                           | Check condition (Engine condition)                                                                                                                                                                        |                                                                          | Normal condition                 |
|--------------|--------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------|----------------------------------|
| 37           | Power steering fluid pressure switch | Engine: Idling after warming up                                                                                                                                                                           | When steering wheel is stationary                                        | System voltage                   |
|              |                                      |                                                                                                                                                                                                           | When steering wheel is turned                                            | 0–3V                             |
| 38           | Control relay (Power supply)         | Ignition switch: OFF                                                                                                                                                                                      |                                                                          | System voltage                   |
|              |                                      | Ignition switch: ON                                                                                                                                                                                       |                                                                          | 0–3V                             |
| 45           | A/C switch                           | Engine: Idle speed                                                                                                                                                                                        | Turn the A/C switch OFF                                                  | 0–3V                             |
|              |                                      |                                                                                                                                                                                                           | Turn the A/C switch ON (A/C compressor is operating)                     | System voltage                   |
| 52           | Ignition timing adjustment terminal  | Ignition switch: ON                                                                                                                                                                                       | Earth the ignition timing adjustment terminal                            | 0–1V                             |
|              |                                      |                                                                                                                                                                                                           | Remove the earth connection from the ignition timing adjustment terminal | 4.0–5.5V                         |
| 54           | Oxygen sensor heater (rear)          | Engine: Idling after warming up                                                                                                                                                                           |                                                                          | 0 – 3 V                          |
|              |                                      | Engine r/min: 5,000 r/min                                                                                                                                                                                 |                                                                          | System voltage                   |
| 60           | Oxygen sensor heater (front)         | Engine: Idling after warming up                                                                                                                                                                           |                                                                          | 0–3V                             |
|              |                                      | Engine r/min: 5,000r/min.                                                                                                                                                                                 |                                                                          | System voltage                   |
| 71           | Ignition switch – ST                 | Engine: Cranking                                                                                                                                                                                          |                                                                          | 8V or more                       |
| 72           | Intake air temperature sensor        | Ignition switch: ON                                                                                                                                                                                       | When intake air temperature is 0°C                                       | 3.2–3.8V                         |
|              |                                      |                                                                                                                                                                                                           | When intake air temperature is 20°C                                      | 2.3–2.9V                         |
|              |                                      |                                                                                                                                                                                                           | When intake air temperature is 40°C                                      | 1.5–2.1V                         |
|              |                                      |                                                                                                                                                                                                           | When intake air temperature is 80°C                                      | 0.4–1.0V                         |
| 75           | Oxygen sensor (rear)                 | <ul style="list-style-type: none"> <li>Transmission: 2nd gear &lt;M/T&gt;, L range &lt;A/T&gt;</li> <li>Engine r/min: 3,500 r/min or more</li> <li>Driving with the throttle valve widely open</li> </ul> |                                                                          | 0.6 – 1.0 V                      |
| 76           | Oxygen sensor (front)                | Engine: Running at 2,500 r/min after warmed up (Check using a digital type voltmeter)                                                                                                                     |                                                                          | 0 ↔ 0.8V<br>(Changes repeatedly) |
| 80           | Backup power supply                  | Ignition switch: OFF                                                                                                                                                                                      |                                                                          | System voltage                   |
| 81           | Sensor impressed voltage             | Ignition switch: ON                                                                                                                                                                                       |                                                                          | 4.5–5.5V                         |
| 82           | Ignition switch – IG                 | Ignition switch: ON                                                                                                                                                                                       |                                                                          | System voltage                   |

| Terminal No. | Check item                                        | Check condition (Engine condition)                                                                             |                                         | Normal condition                        |
|--------------|---------------------------------------------------|----------------------------------------------------------------------------------------------------------------|-----------------------------------------|-----------------------------------------|
| 83           | Engine coolant temperature sensor                 | Ignition switch: ON                                                                                            | When engine coolant temperature is 0°C  | 3.2–3.8V                                |
|              |                                                   |                                                                                                                | When engine coolant temperature is 20°C | 2.3–2.9V                                |
|              |                                                   |                                                                                                                | When engine coolant temperature is 40°C | 1.3–1.9V                                |
|              |                                                   |                                                                                                                | When engine coolant temperature is 80°C | 0.3–0.9V                                |
| 84           | Throttle position sensor                          | Ignition switch: ON                                                                                            | Set throttle valve to idle position     | 0.3–1.0V                                |
|              |                                                   |                                                                                                                | Fully open throttle valve               | 4.5–5.5V                                |
| 85           | Vacuum sensor (Manifold absolute pressure sensor) | Ignition switch: ON (when altitude is 0 m)                                                                     |                                         | 3.7 – 4.3 V                             |
|              |                                                   | Ignition switch: ON (when altitude is 1,200 m)                                                                 |                                         | 3.2 – 3.8 V                             |
|              |                                                   | Engine: Idle speed                                                                                             |                                         | 0.9 – 1.5 V                             |
|              |                                                   | While engine is idling after having warmed up, suddenly depress the accelerator pedal                          |                                         | From 0.9 – 1.5 V, momentarily increases |
| 86           | Vehicle speed sensor                              | <ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>Move the vehicle slowly forward</li> </ul> |                                         | 0 ↔ 5V<br>(Changes repeatedly)          |
| 87           | Idle position switch                              | Ignition switch: ON                                                                                            | Set throttle valve to idle position     | 0–1V                                    |
|              |                                                   |                                                                                                                | Slightly open throttle valve            | 4V or more                              |
| 89           | Crank angle sensor                                | Engine: Cranking                                                                                               |                                         | 0.4–4.0V                                |
|              |                                                   | Engine: Idle speed                                                                                             |                                         | 1.5–2.5V                                |
| 91           | Inhibitor switch <A/T>                            | Ignition switch: ON                                                                                            | Set selector lever to P or N            | 0–3V                                    |
|              |                                                   |                                                                                                                | Set selector lever to Other than P or N | 8–14V                                   |

**CHECK CHART FOR RESISTANCE AND CONTINUITY BETWEEN TERMINALS**

1. Turn the ignition switch to OFF.
2. Disconnect the engine-ECU connector.
3. Measure the resistance and check for continuity between the terminals of the engine-ECU harness-side connector while referring to the check chart.

**NOTE**


1. When measuring resistance and checking continuity, a harness for checking contact pin pressure should be used instead of inserting a test probe.
2. Checking need not be carried out in the order given in the chart.

**Caution**

**If the terminals that should be checked are mistaken, or if connector terminals are not correctly shorted to earth, damage may be caused to the vehicle wiring, sensors, engine-ECU and/or ohmmeter.**

**Be careful to prevent this!**


4. If the ohmmeter shows any deviation from the standard value, check the corresponding sensor, actuator and related electrical wiring, and then repair or replace.
5. After repair or replacement, recheck with the ohmmeter to confirm that the repair or replacement has corrected the problem.

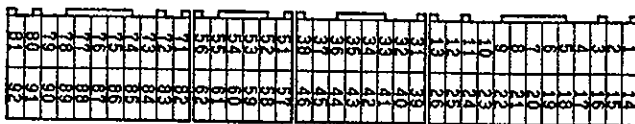**Engine-ECU Harness Side Connector Terminal Arrangement**

9FU0392

| Terminal No. | Inspection item | Normal condition (Check condition) |
|--------------|-----------------|------------------------------------|
| 1-12         | No. 1 injector  | 13-16 $\Omega$ (At 20°C)           |
| 14-12        | No. 2 injector  |                                    |
| 2-12         | No. 3 injector  |                                    |
| 15-12        | No. 4 injector  |                                    |

| Terminal No.  | Inspection item                   | Normal condition (Check condition)                         |
|---------------|-----------------------------------|------------------------------------------------------------|
| 4–12          | Stepper motor coil (A1)           | 28–33 $\Omega$ (At 20°C)                                   |
| 17–12         | Stepper motor coil (A2)           |                                                            |
| 5–12          | Stepper motor coil (B1)           |                                                            |
| 18–12         | Stepper motor coil (B2)           |                                                            |
| 6–12          | EGR control solenoid valve        | 36–44 $\Omega$ (At 20°C)                                   |
| 9–12          | Purge control solenoid valve      | 36–44 $\Omega$ (At 20°C)                                   |
| 13–Body earth | ENGINE-ECU earth                  | Continuity (0 $\Omega$ )                                   |
| 26–Body earth | ENGINE-ECU earth                  |                                                            |
| 54–12         | Oxygen sensor heater (rear)       | 7 – 40 $\Omega$ (At 20°C)                                  |
| 60–12         | Oxygen sensor heater (front)      | 7 – 40 $\Omega$ (At 20°C)                                  |
| 72–92         | Intake air temperature sensor     | 5.3–6.7 k $\Omega$ (When intake air temperature is 0°C)    |
|               |                                   | 2.3–3.0 k $\Omega$ (When intake air temperature is 20°C)   |
|               |                                   | 1.0–1.5 k $\Omega$ (When intake air temperature is 40°C)   |
|               |                                   | 0.30–0.42 k $\Omega$ (When intake air temperature is 80°C) |
| 83–92         | Engine coolant temperature sensor | 5.1–6.5 k $\Omega$ (When coolant temperature is 0°C)       |
|               |                                   | 2.1–2.7 k $\Omega$ (When coolant temperature is 20°C)      |
|               |                                   | 0.9–1.3 k $\Omega$ (When coolant temperature is 40°C)      |
|               |                                   | 0.26–0.36 k $\Omega$ (When coolant temperature is 80°C)    |
| 87–92         | Idle position switch              | Continuity (when throttle valve is at idle position)       |
|               |                                   | No continuity (when throttle valve is slightly open)       |
| 91–Body earth | Inhibitor switch <A/T>            | Continuity (when select lever is at P or N)                |
|               |                                   | No continuity (when select lever is at D, 2, L or R)       |

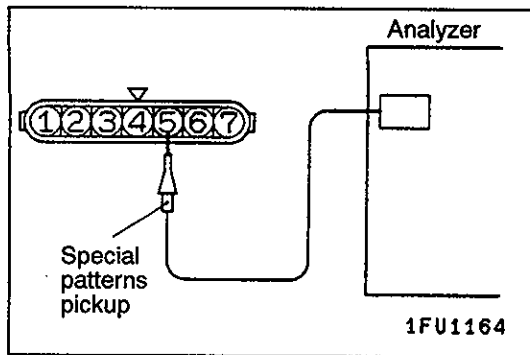

## INSPECTION PROCEDURE USING AN ANALYZER

13100930097

### CRANK ANGLE SENSOR

#### Measurement Method

1. Disconnect the distributor (crank angle sensor) connector and connect the special tool (test harness: MB991348) in between. (All terminals should be connected.)
2. Connect the analyzer special patterns pickup to distributor connector terminal 5.

#### Alternate Method (Test harness not available)


1. Connect the analyzer special patterns pickup to engine-ECU terminal 89.

### Standard Wave Pattern

#### Observation conditions


| Function         | Special patterns |
|------------------|------------------|
| Pattern height   | Low              |
| Pattern selector | Display          |
| Engine r/min     | Idle speed       |

#### Standard wave pattern

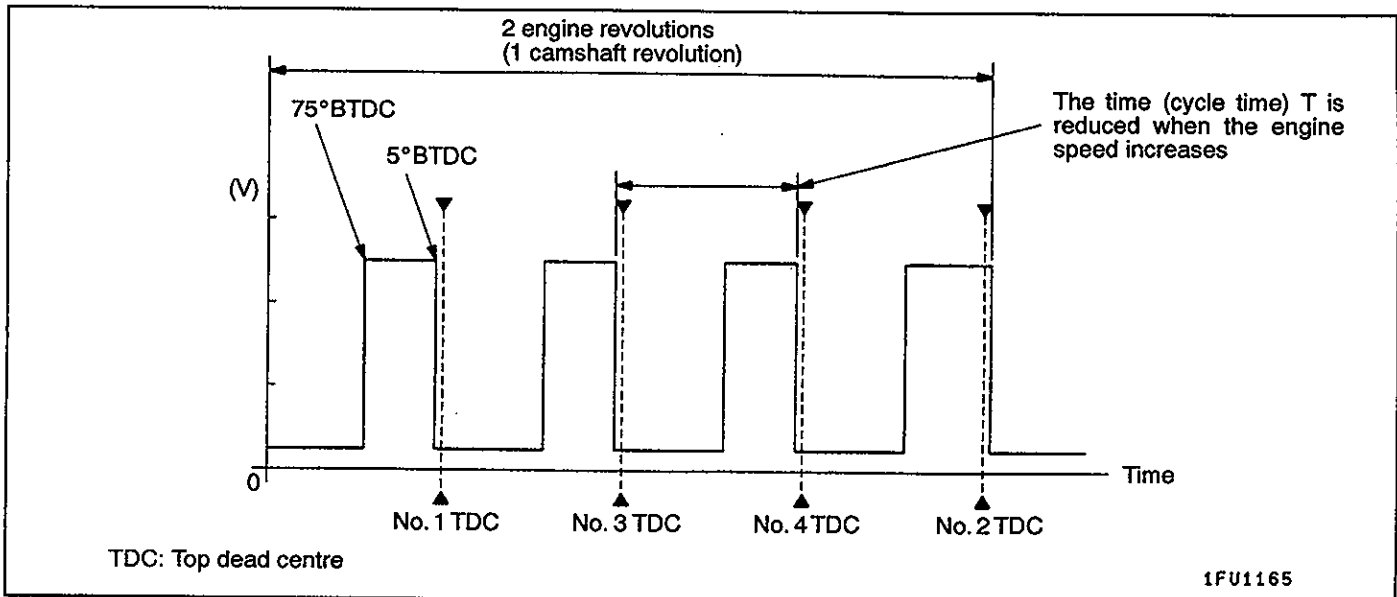

### Wave Pattern Observation Points

Check that cycle time T becomes shorter when the engine speed increases.

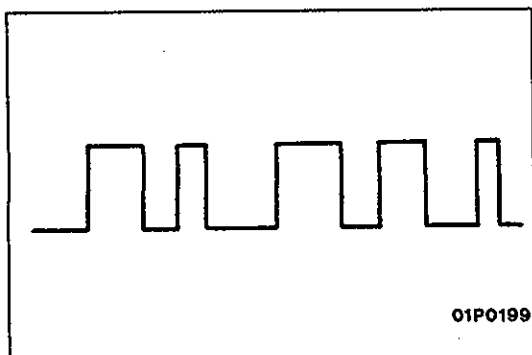**Examples of Abnormal Wave Patterns**


- Example 1

**Cause of problem**

Sensor interface malfunction

**Wave pattern characteristics**

Rectangular wave pattern is output even when the engine is not started.

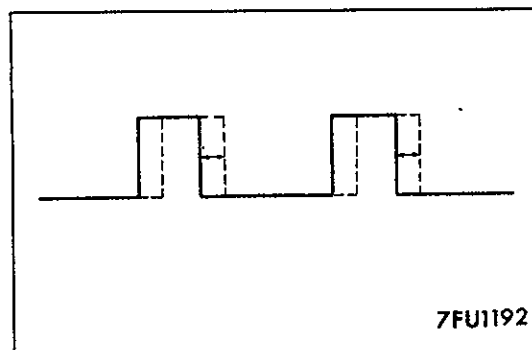

- Example 2


**Cause of problem**

Loose timing belt

Abnormality in sensor disk

**Wave pattern characteristics**

Wave pattern is displaced to the left or right.

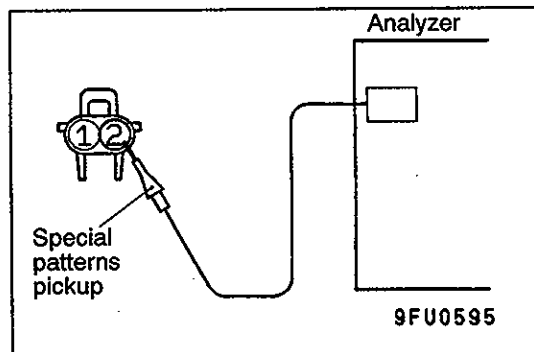**INJECTOR****Measurement Method**


1. Disconnect the injector connector, and then connect the special tool (test harness: MB991348) in between. (Both the power supply side and engine-ECU side should be connected.)
2. Connect the analyzer special patterns pickup to terminal 2 of the injector connector.

**Alternate Method (Test harness not available)**

1. Connect the analyzer special patterns pickup to engine-ECU terminal 1. (When checking the No. 1 cylinder.)
2. Connect the analyzer special patterns pickup to engine-ECU terminal 14. (When checking the No. 2 cylinder.)
3. Connect the analyzer special patterns pickup to engine-ECU terminal 2. (When checking the No. 3 cylinder.)
4. Connect the analyzer special patterns pickup to engine-ECU terminal 15. (When checking the No. 4 cylinder.)

**Standard Wave Pattern****Observation conditions**


|                  |                                       |
|------------------|---------------------------------------|
| Function         | Special patterns                      |
| Pattern height   | Variable                              |
| Variable knob    | Adjust while viewing the wave pattern |
| Pattern selector | Display                               |
| Engine r/min     | Idle speed                            |

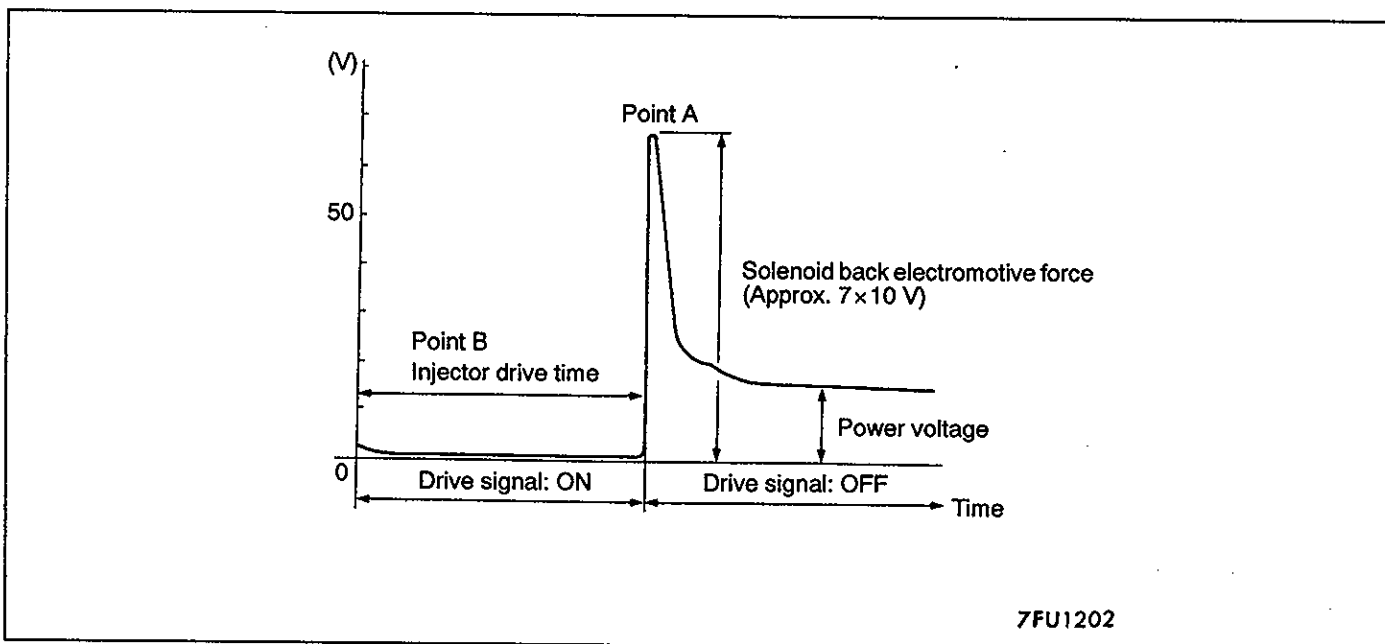**Standard wave pattern****Wave Pattern Observation Points**


Point A: Height of solenoid back electromotive force

|                                                                         |                                |
|-------------------------------------------------------------------------|--------------------------------|
| Contrast with standard wave pattern                                     | Probable cause                 |
| Solenoid coil back electromotive force is low or doesn't appear at all. | Short in the injector solenoid |

Point B: Injector drive time

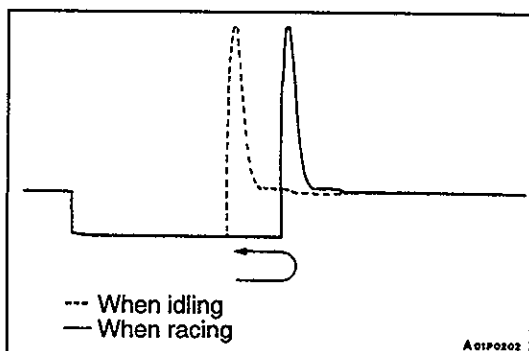

- The injector drive time will be synchronized with the MUT-II tester display.
- When the engine is suddenly raced, the drive time will be greatly extended at first, but the drive time will soon match the engine speed.

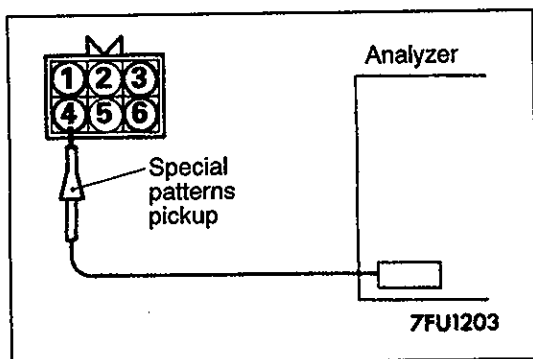**STEPPER MOTOR****Measurement Method**


1. Disconnect the stepper motor connector, and connect the special tool (test harness: MD998463) in between.
2. Connect the analyzer special patterns pickup to the stepper motor-side connector terminal 1 (red clip of special tool), terminal 3 (blue clip), terminal 4 (black clip) and terminal 6 (yellow clip) respectively.

**Alternate Method (Test harness not available)**

1. Connect the analyzer special patterns pickup to engine-ECU terminal 4, connection terminal 5, connection terminal 17, and connection terminal 18 respectively.

**Standard Wave Pattern****Observation conditions**

| Function         | Special patterns                                                                                                             |
|------------------|------------------------------------------------------------------------------------------------------------------------------|
| Pattern height   | High                                                                                                                         |
| Pattern selector | Display                                                                                                                      |
| Engine condition | When the engine coolant temperature is 20°C or below, turn the ignition switch from OFF to ON (without starting the engine). |
|                  | While the engine is idling, turn the A/C switch to ON.                                                                       |
|                  | Immediately after starting the warm engine                                                                                   |

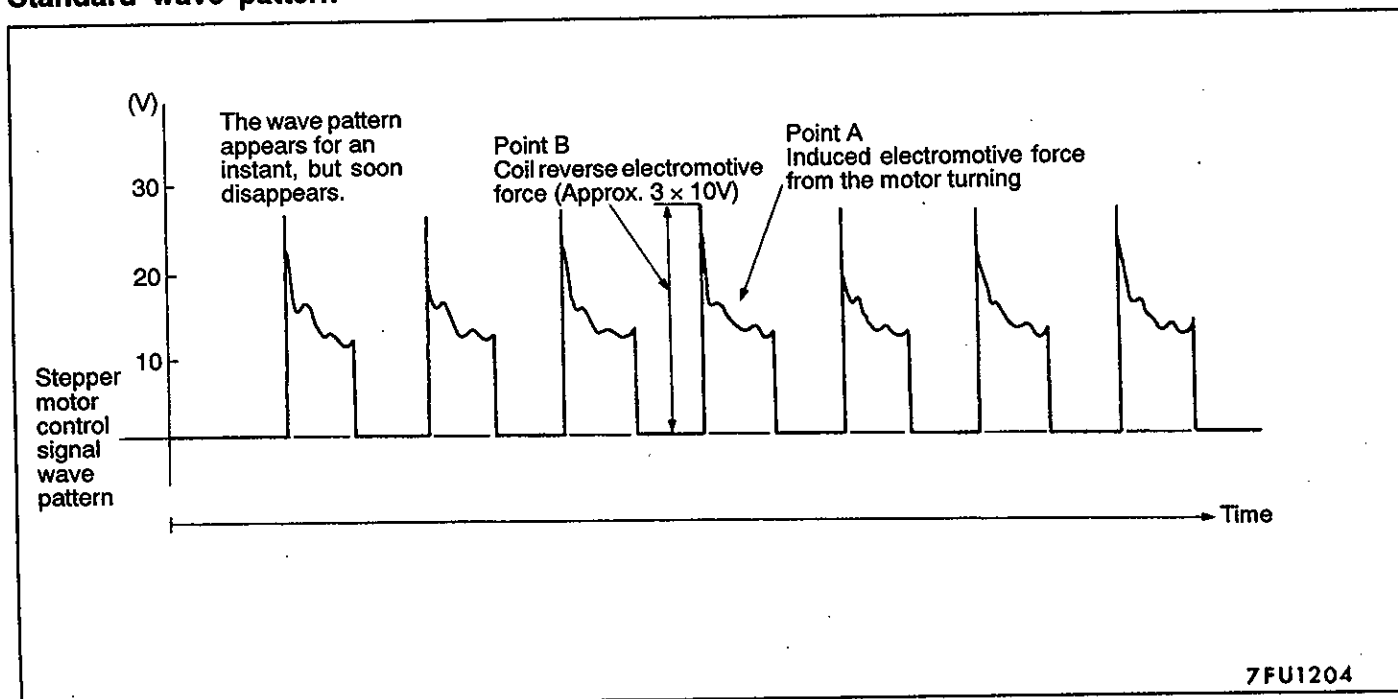**Standard wave pattern**

**Wave Pattern Observation Points**


Check that the standard wave pattern appears when the stepper motor is operating.

Point A: Presence or absence of induced electromotive force from the motor turning. (Refer to the abnormal wave pattern.)

| Contrast with standard wave pattern                                | Probable cause          |
|--------------------------------------------------------------------|-------------------------|
| Induced electromotive force does not appear or is extremely small. | Motor is malfunctioning |

Point B: Height of coil reverse electromotive force

| Contrast with standard wave pattern                                     | Probable cause    |
|-------------------------------------------------------------------------|-------------------|
| Coil reverse electromotive force does not appear or is extremely small. | Short in the coil |

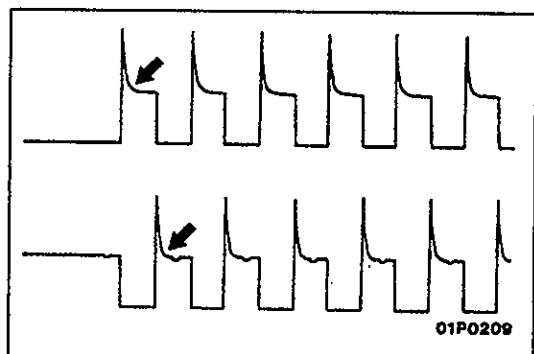**Examples of Abnormal Wave Pattern**


- Example 1

**Cause of problem**

Motor is malfunctioning. (Motor is not operating.)

**Wave pattern characteristics**

Induced electromotive force from the motor turning does not appear.

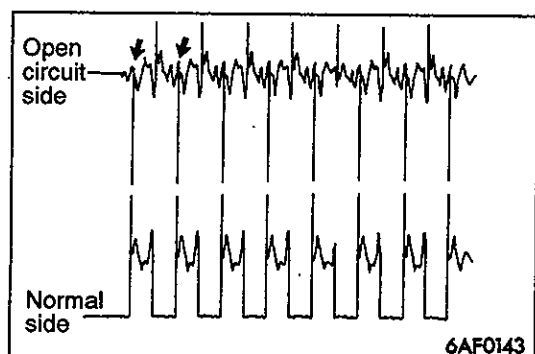

- Example 2


**Cause of problem**

Open circuit in the line between the stepper motor and the engine-ECU.

**Wave pattern characteristics**

Current is not supplied to the motor coil on the open circuit side. (Voltage does not drop to 0 V.)

Furthermore, the induced electromotive force waveform at the normal side is slightly different from the normal waveform.

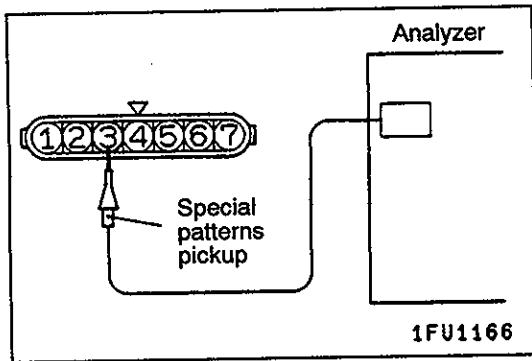**IGNITION COIL AND POWER TRANSISTOR**

- Ignition coil primary signal  
Refer to GROUP 16 – Ignition System.
- Power transistor control signal

**Measurement Method**


1. Disconnect the distributor connector, and connect the special tool (test harness: MB991348) in between. (All terminals should be connected.)
2. Connect the analyzer special patterns pickup to distributor connector terminal 3.

**Alternate Method (Test harness not available)**

1. Connect the analyzer special patterns pickup to engine-ECU terminal 10.

**Standard Wave Pattern****Observation condition**


| Function         | Special patterns    |
|------------------|---------------------|
| Pattern height   | Low                 |
| Pattern selector | Display             |
| Engine r/min     | Approx. 1,200 r/min |

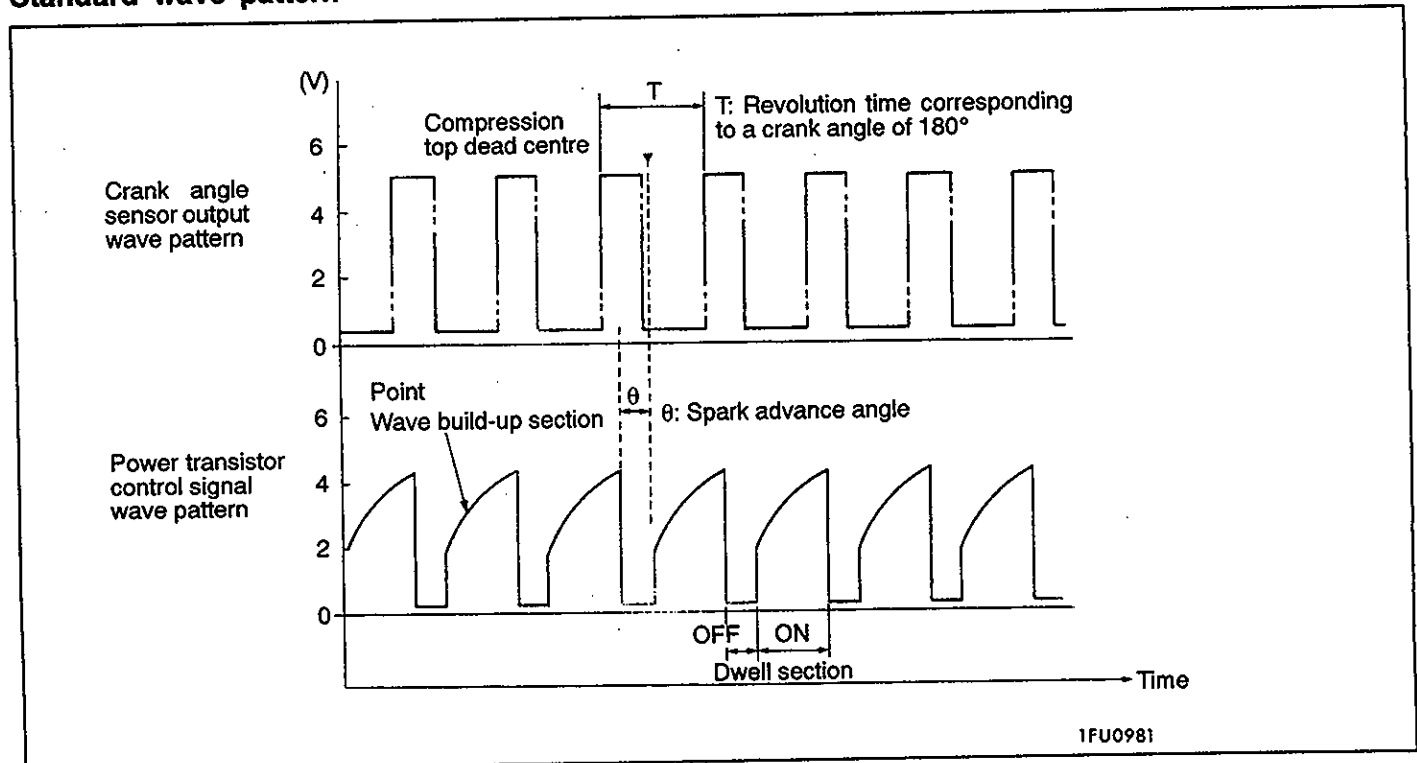**Standard wave pattern**

**Wave Pattern Observation Points**

Point: Condition of wave pattern build-up section and maximum voltage (Refer to abnormal wave pattern examples 1 and 2.)

| Condition of wave pattern build-up section and maximum voltage | Probable cause                           |
|----------------------------------------------------------------|------------------------------------------|
| Rises from approx. 2V to approx. 4.5V at the top-right         | Normal                                   |
| 2V rectangular wave                                            | Open-circuit in ignition primary circuit |
| Rectangular wave at power voltage                              | Power transistor malfunction             |

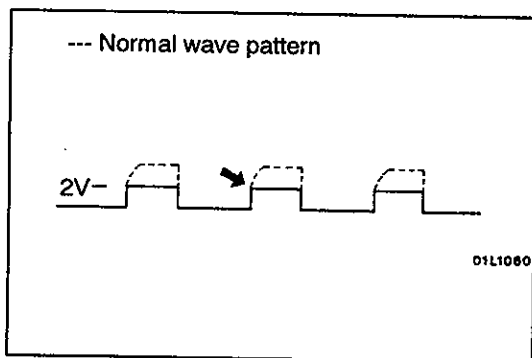**Examples of Abnormal Wave Patterns**

- Example 1


Wave pattern during engine cranking

**Cause of problem**

Open-circuit in ignition primary circuit

**Wave pattern characteristics**

Top-right part of the build-up section cannot be seen, and voltage value is approximately 2V too low.

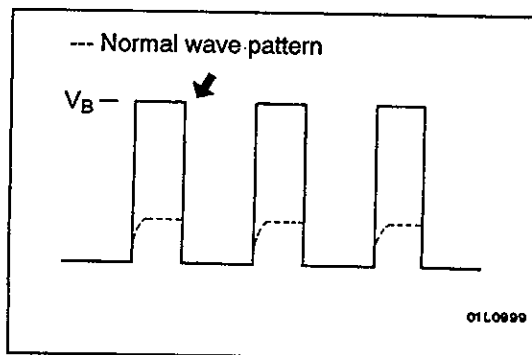

- Example 2

Wave pattern during engine cranking

**Cause of problem**

Malfunction in power transistor

**Wave pattern characteristics**


Power voltage results when the power transistor is ON.

**ON-VEHICLE SERVICE**

13100100115

**THROTTLE BODY (THROTTLE VALVE AREA) CLEANING**

1. Start the engine and warm it up until the coolant is heated to 80°C or higher and then stop the engine.
2. Remove the air intake hose from the throttle body.

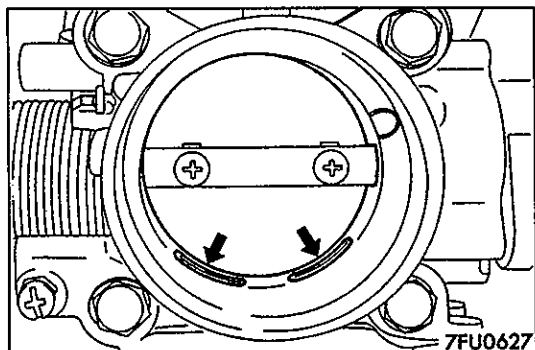

3. Plug the bypass passage inlet of the throttle body.


**Caution**

**Do not allow cleaning solvent to enter the bypass passage.**

4. Spray cleaning solvent into the valve through the throttle body intake port and leave it for about 5 minutes.
5. Start the engine, race it several times and idle it for about 1 minute. If the idling speed becomes unstable (or if the engine stalls) due to the bypass passage being plugged, slightly open the throttle valve to keep the engine running.
6. If the throttle valve deposits are not removed, repeat steps 4 and 5.
7. Unplug the bypass passage inlet.
8. Attach the air intake hose.
9. Use the MUT-II to erase the self-diagnosis code.
10. Adjust the basic idle speed. (Refer to P.13A-76.)


**NOTE**

If the engine hunts while idling after adjustment of the basic idle speed, disconnect the (–) cable from the battery for 10 seconds or more, and then reconnect it and run the engine at idle for about 10 minutes.

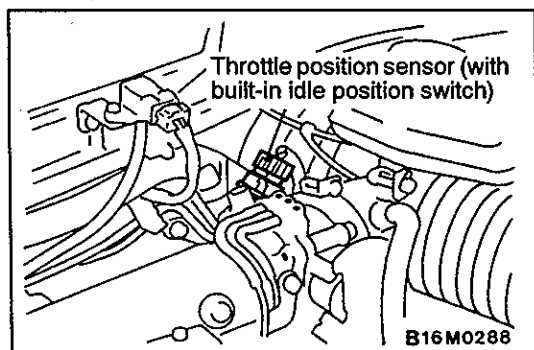
**IDLE POSITION SWITCH AND THROTTLE POSITION SENSOR ADJUSTMENT**

13100130107

1. Connect the MUT-II to the diagnosis connector.

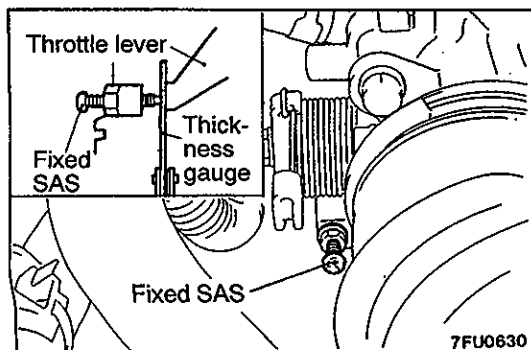

2. Insert a thickness gauge with a thickness of 0.45 mm between the fixed SAS and the throttle lever.
3. Turn the ignition switch to ON (but do not start the engine).

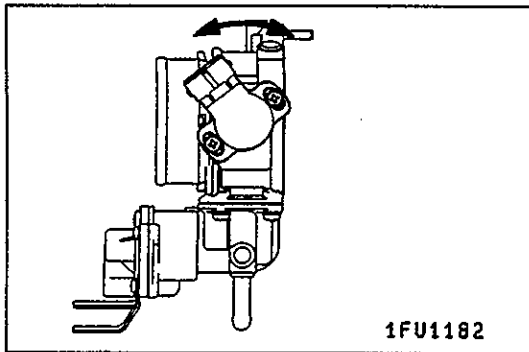


4. Loosen the throttle position sensor mounting bolt, and then turn the throttle position sensor anti-clockwise as far as it will go.
5. Check that the idle position switch is on at this position.
6. Slowly turn the throttle position sensor clockwise and find the point where the idle position switch turns off. Securely tighten the throttle position sensor mounting bolt at this point.

7. Check the throttle position sensor output voltage.

**Standard value: 400–1,000 mV**

8. If there is a deviation from the standard value, check the throttle position sensor and the related harness.
9. Remove the thickness gauge.
10. Turn the ignition switch to OFF.
11. Disconnect the MUT-II.

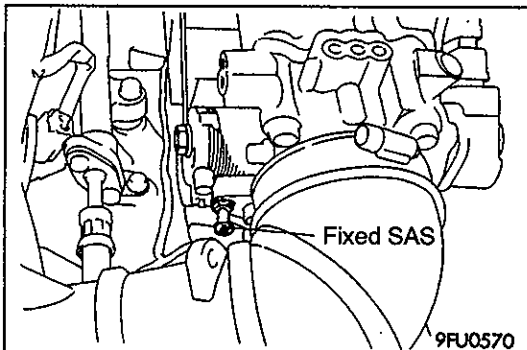

## FIXED SAS ADJUSTMENT

13100150110

### NOTE

1. The fixed SAS should not be moved unnecessarily; it has been precisely adjusted by the manufacturer.
2. If the adjustment is disturbed for any reason, readjust as follows.

1. Loosen the tension of the accelerator cable sufficiently.
2. Back out the fixed SAS lock nut.
3. Turn the fixed SAS counterclockwise until it is sufficiently backed out, and fully close the throttle valve.
4. Tighten the fixed SAS until the point where the throttle lever is touched (i.e., the point at which the throttle valve begins to open) is found. From that point, tighten the fixed SAS 1-1/4 turn.
5. While holding the fixed SAS so that it doesn't move, tighten the lock nut securely.
6. Adjust the tension of the accelerator cable.
7. Adjust the basic idling speed.
8. Adjust the idle position switch and the throttle position sensor (P.13A-75).

## BASIC IDLE SPEED ADJUSTMENT

13100180119

### NOTE


1. The standard idling speed has been adjusted, by the speed adjusting screw (SAS), by the manufacturer, and there should usually be no need for readjustment.
2. If the adjustment has been changed by mistake, the idle speed may become too high or the idle speed may drop too low when loads from components such as the A/C are placed on the engine. If this occurs, adjust by the following procedure.

3. The adjustment, if made, should be made after first confirming that the spark plugs, the injectors, the idle speed control servo, the compression pressure, etc., are all normal.

1. Before inspection and adjustment, set the vehicle to the pre-inspection condition.
2. Connect the MUT-II to the diagnosis connector (16-pin).

**NOTE**

When the MUT-II is connected, the diagnosis control terminal should be earthed.

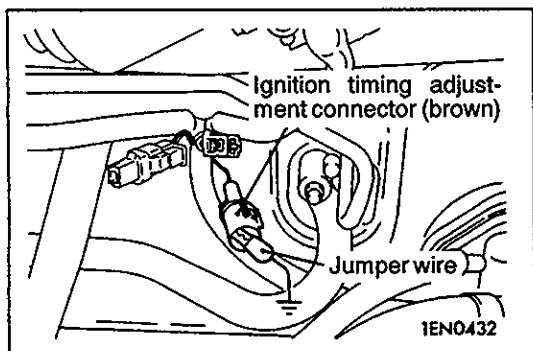

3. Remove the waterproof female connector from the ignition timing adjustment connector.
4. Use a jumper wire to earth the ignition timing adjustment terminal.

5. Start the engine and run at idle.
6. Check the idle speed.

**Standard value: 750 ± 50 r/min**

**NOTE**


1. The engine speed may be 20 to 100 r/min lower than indicated above for a new vehicle [driven approximately 500 km or less], but no adjustment is necessary.
2. If the engine stalls or the engine speed is low even though the vehicle has been driven approximately 500 km or more, it is probable that deposits are adhered to the throttle valve, so clean it. (Refer to P.13A-75.)






7. If not within the standard value range, turn the speed adjusting screw (SAS) to make the necessary adjustment.

**NOTE**

If the idling speed is higher than the standard value range even when the SAS is fully closed, check whether or not there is any indication that the fixed SAS has been moved. If there is an indication that it has been moved, adjust the fixed SAS.

8. Switch OFF the ignition switch.
9. Disconnect the jumper wire from the ignition timing adjustment terminal and return the connector to its original condition.
10. Disconnect the MUT-II.
11. Start the engine again and let it run at idle speed for about 10 minutes; check that the idling condition is normal.

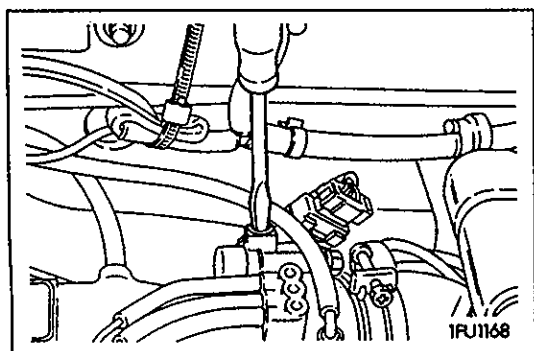

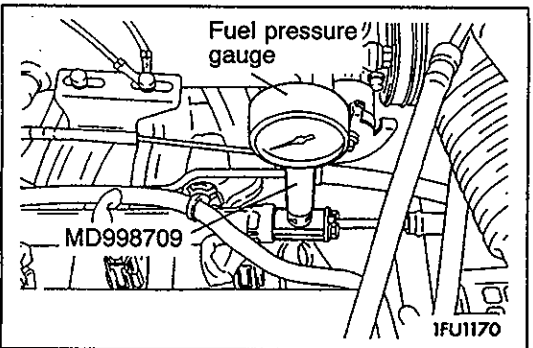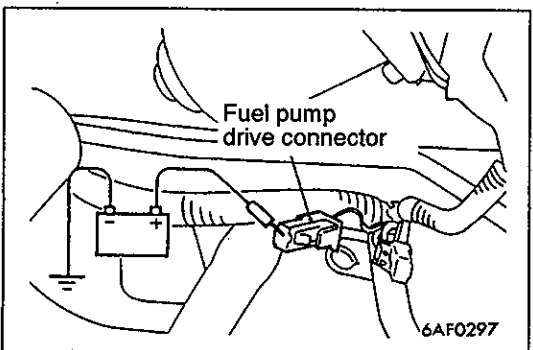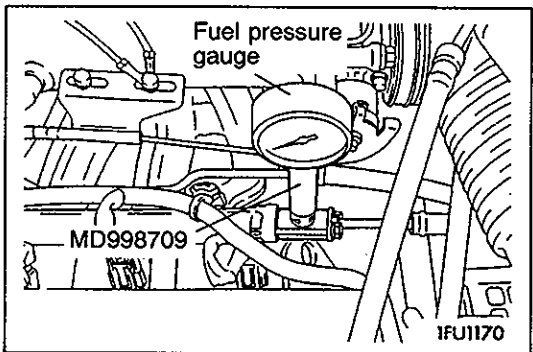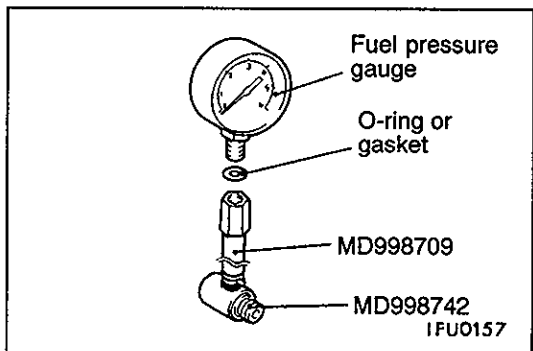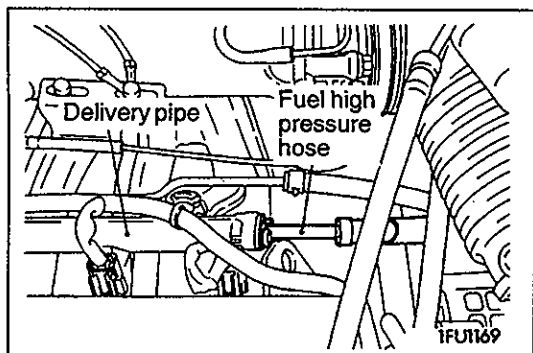

## FUEL PRESSURE TEST

13100190112

1. Release residual pressure from the fuel pipe line to prevent fuel gush out. (Refer to P.13A-81.)
2. Disconnect the fuel high pressure hose at the delivery pipe side.

### Caution

**Cover the hose connection with rags to prevent splash of fuel that could be caused by some residual pressure in the fuel pipe line.**

3. Remove the union joint and bolt from the special tool (adapter hose MD998709) and instead attach the special tool (hose adapter MD998742) to the adapter hose.
4. Install a fuel pressure gauge on the adapter hose that was set up in step 3.

Use a suitable O-ring or gasket between the fuel pressure gauge and the special tool so as to seal in order to prevent fuel leakage at this time.


5. Install the special tool, which was set in place in steps 3 and 4 between the delivery pipe and the high pressure hose.

6. Connect the fuel pump drive connector with the battery (+) terminal using a jumper wire and drive the fuel pump. Under fuel pressure, check the fuel pressure gauge and special tool connections for leaks.
7. Disconnect the jumper wire from the fuel pump drive terminal to stop the fuel pump.
8. Start the engine and run at idle.

9. Measure fuel pressure while the engine is running at idle.

### Standard value:

**Approx. 265 kPa at curb idle**

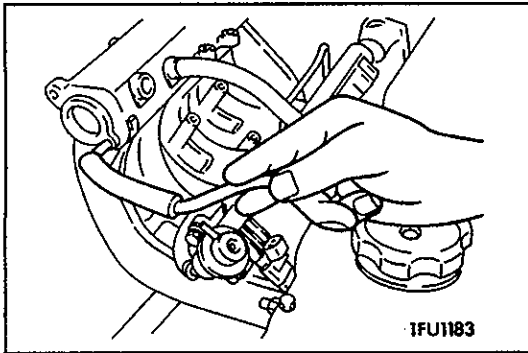

10. Disconnect the vacuum hose from the fuel pressure regulator and measure fuel pressure with the hose end closed by a finger.

**Standard value:**

**324–343 kPa at kerb idle**

11. Check to see that fuel pressure at idle does not drop even after the engine has been raced several times.
12. Racing the engine repeatedly, hold the fuel return hose lightly with fingers to feel that fuel pressure is present in the return hose.

**NOTE**

If the fuel flow rate is low, there will be no fuel pressure in the return hose.

13. If any of fuel pressure measured in steps 9 to 12 is out of specification, troubleshoot and repair according to the table below.

| Symptom                                                                                                                                                               | Probable cause                                                                         | Remedy                              |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|-------------------------------------|
| <ul style="list-style-type: none"> <li>● Fuel pressure too low</li> <li>● Fuel pressure drops after racing</li> <li>● No fuel pressure in fuel return hose</li> </ul> | Clogged fuel filter                                                                    | Replace fuel filter                 |
|                                                                                                                                                                       | Fuel leaking to return side due to poor fuel regulator valve seating or settled spring | Replace fuel pressure regulator     |
|                                                                                                                                                                       | Low fuel pump delivery pressure                                                        | Replace fuel pump                   |
| Fuel pressure too high                                                                                                                                                | Binding valve in fuel pressure regulator                                               | Replace fuel pressure regulator     |
|                                                                                                                                                                       | Clogged fuel return hose or pipe                                                       | Clean or replace hose or pipe       |
| Same fuel pressure when vacuum hose is connected and when disconnected                                                                                                | Damaged vacuum hose or clogged nipple                                                  | Replace vacuum hose or clean nipple |

14. Stop the engine and check change of fuel pressure gauge reading. Normal if the reading does not drop within 2 minutes. If it does, observe the rate of drop and troubleshoot and repair according to the table below.

| Symptom                                                         | Probable cause                        | Remedy                          |
|-----------------------------------------------------------------|---------------------------------------|---------------------------------|
| Fuel pressure drops gradually after engine is stopped           | Leaky injector                        | Replace injector                |
|                                                                 | Leaky fuel regulator valve seat       | Replace fuel pressure regulator |
| Fuel pressure drops sharply immediately after engine is stopped | Check valve in fuel pump is held open | Replace fuel pump               |

15. Release residual pressure from the fuel pipe line. (Refer to P.13A-81.)
16. Remove the fuel pressure gauge and special tool from the delivery pipe.


**Caution**

**Cover the hose connection with rags to prevent splash of fuel that could be caused by some residual pressure in the fuel pipe line.**

17. Replace the O-ring at the end of the fuel high pressure hose with a new one. Furthermore, apply engine oil to the new O-ring before replacement.
18. Fit the fuel high pressure hose over the delivery pipe and tighten the bolt to specified torque.

**Tightening torque: 5 Nm**

19. Check for fuel leaks.
- (1) Apply the battery voltage to the fuel pump drive terminal to drive the fuel pump.
  - (2) Under fuel pressure, check the fuel line for leaks.

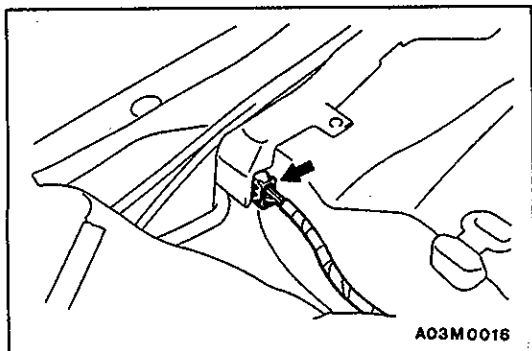


## FUEL PUMP CONNECTOR DISCONNECTION (HOW TO REDUCE THE FUEL PRESSURE)

13100090146

When removing the fuel pipe, hose, etc., since fuel pressure in the fuel pipe line is high, do the following operation so as to release fuel pressure in the line and prevent fuel from running out.

- (1) Raise the rear seat cushion.
- (2) Disconnect the body wiring harness and fuel wiring harness under the floor carpet.
- (3) After starting the engine and letting it run until it stops naturally, turn the ignition switch to OFF.
- (4) Connect the fuel wiring harness and body wiring harness.
- (5) Install the rear seat cushion.

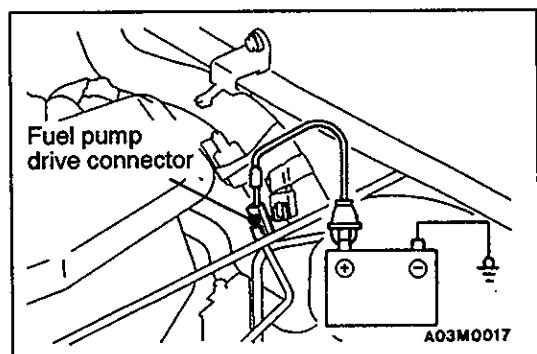

## FUEL PUMP OPERATION CHECK

13100200105

1. Check the operation of the fuel pump by using the MUT-II to force-drive the fuel pump.
2. If the fuel pump will not operate, check by using the following procedure, and if it is normal, check the drive circuit.
  - (1) Turn the ignition switch to OFF.
  - (2) When the fuel pump drive connector (black) is attached directly to the battery, check if the sound of the fuel pump operation can be heard.

### NOTE




As the fuel pump is an in-tank type, the fuel pump sound is hard to hear, so remove the fuel filler cap and check from the tank inlet.

- (3) Check the fuel pressure by pinching the fuel hose with the fingertips.


## COMPONENT LOCATION

13100210153

| Name                                                    | Symbol | Name                                                 | Symbol |
|---------------------------------------------------------|--------|------------------------------------------------------|--------|
| A/C relay                                               | A      | Ignition timing adjustment terminal                  | G      |
| A/C switch                                              | M      | Inhibitor switch <A/T>                               | J      |
| Control relay and fuel pump relay                       | N      | Injectors                                            | H      |
| Diagnosis connector                                     | L      | Intake air temperature sensor                        | C      |
| Distributor (with ignition coil and crank angle sensor) | I      | Oxygen sensor (front)                                | Q      |
|                                                         |        | Oxygen sensor (rear)                                 | P      |
| EGR control solenoid valve                              | D      | Power steering fluid pressure switch                 | B      |
| Engine coolant temperature sensor                       | I      | Purge control solenoid valve                         | D      |
| Engine-ECU                                              | O      | Throttle position sensor (with idle position switch) | F      |
| Engine warning lamp (check engine lamp)                 | K      |                                                      |        |
| Fuel pump check terminal                                | G      | Vacuum sensor                                        | E      |
| Idle speed control servo                                | F      | Vehicle speed sensor                                 | J      |

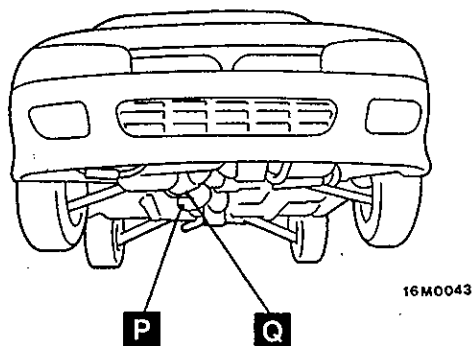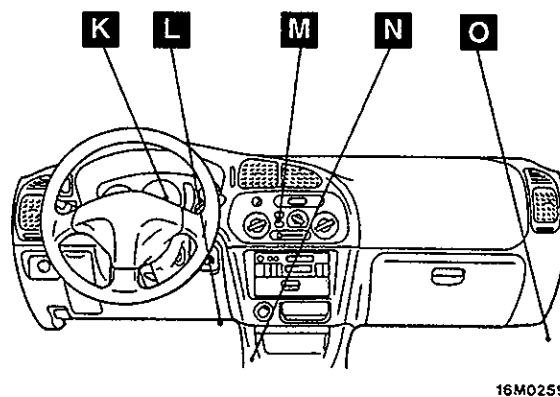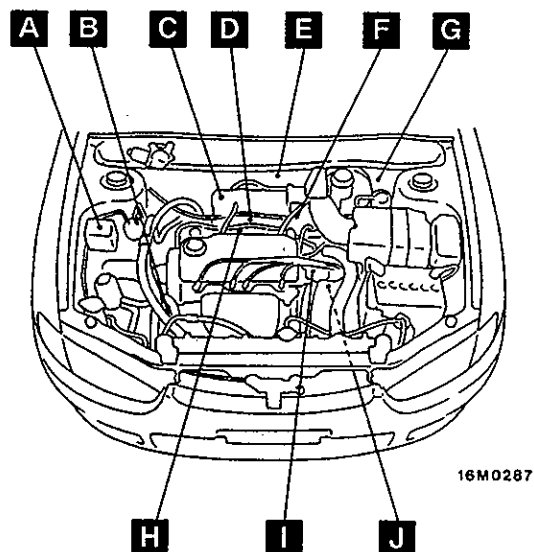


1FU1171

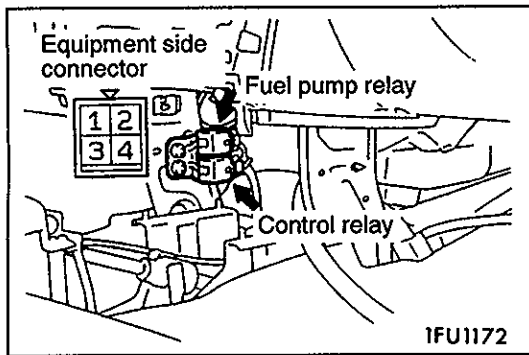

## CONTROL RELAY AND FUEL PUMP RELAY CONTINUITY CHECK

13100990057

| Battery voltage | Terminal No. |   |   |   |
|-----------------|--------------|---|---|---|
|                 | 1            | 2 | 3 | 4 |
| Not supplied    |              | ○ |   | ○ |
| Supplied        | ○            | ⊖ | ○ | ⊕ |

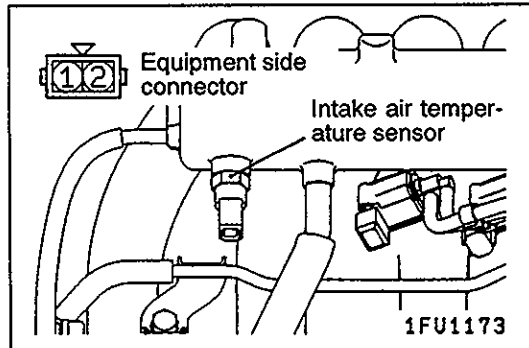

## INTAKE AIR TEMPERATURE SENSOR CHECK

13100280109


1. Disconnect the intake air temperature sensor connector.
2. Measure resistance between terminals 1 and 2.

### Standard value:

2.3 – 3.0 kΩ (at 20°C)

0.30 – 0.42 kΩ (at 80°C)

3. Remove the intake air temperature sensor.

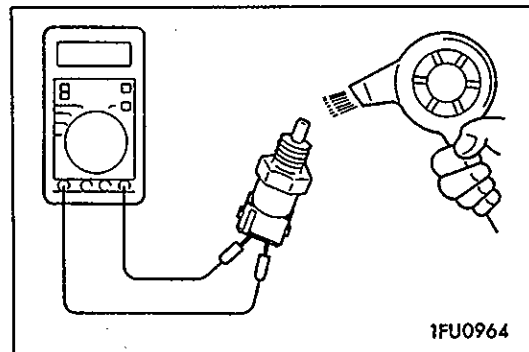


4. Measure resistance while heating the sensor using a hair drier.

### Normal condition:

| Temperature (°C) | Resistance (kΩ) |
|------------------|-----------------|
| Higher           | Smaller         |

5. If the value deviates from the standard value or the resistance remains unchanged, replace the intake air temperature sensor.
6. Install the intake air temperature sensor and tighten it to the specified torque.

**Tightening torque: 12 – 15 Nm**

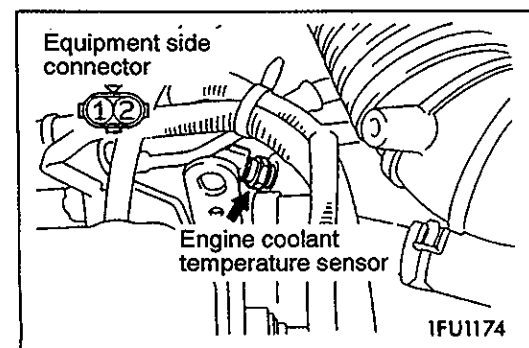


## ENGINE COOLANT TEMPERATURE SENSOR CHECK

13100310105

### Caution

Be careful not to touch the connector (resin section) with the tool when removing and installing.

1. Remove the engine coolant temperature sensor.

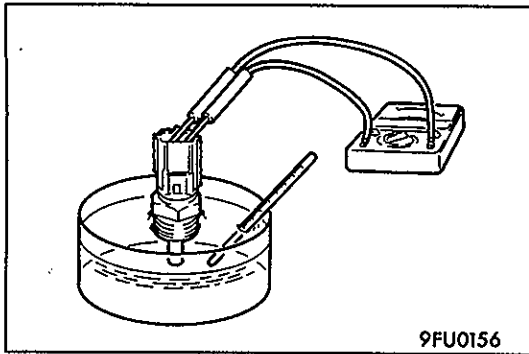


2. With temperature sensing portion of engine coolant temperature sensor immersed in hot water, check resistance.

**Standard value:**

2.1 – 2.7 k $\Omega$  (at 20°C)

0.26 – 0.36 k $\Omega$  (at 80°C)

3. If the resistance deviates from the standard value greatly, replace the sensor.

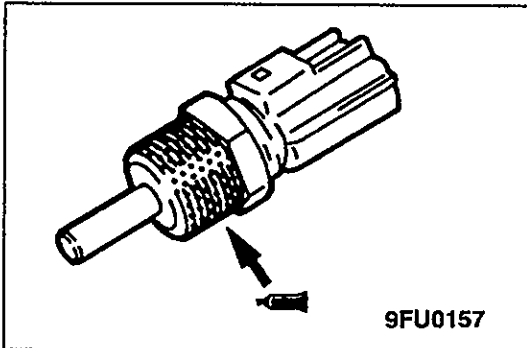


4. Apply sealant to threaded portion.

**Specified sealant:**

**3M NUT Locking Part No.4171 or equivalent**

5. Install the engine coolant temperature sensor and tighten it to the specified torque.

**Tightening torque: 29 Nm**

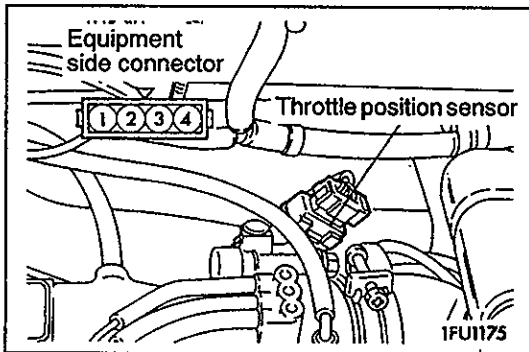

## THROTTLE POSITION SENSOR CHECK 13100320108

1. Disconnect the throttle position sensor connector.
2. Measure the resistance between the throttle position sensor side connector terminal 1 and terminal 4.

**Standard value: 3.5–6.5 k $\Omega$**

3. Measure the resistance between the throttle position sensor side connector terminal 2 and terminal 4.


**Normal condition:**

|                                                                    |                                                                           |
|--------------------------------------------------------------------|---------------------------------------------------------------------------|
| Throttle valve slowly open until fully open from the idle position | Changes smoothly in proportion to the opening angle of the throttle valve |
|--------------------------------------------------------------------|---------------------------------------------------------------------------|

4. If the resistance is outside the standard value, or if it doesn't change smoothly, replace the throttle position sensor.

### NOTE

For the throttle position sensor adjustment procedure, refer to P.13A-75.

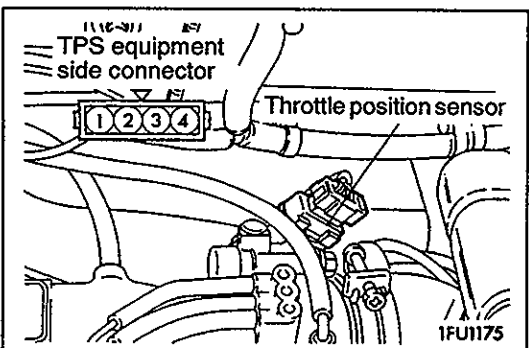

## IDLE POSITION SWITCH CHECK

13100330118

1. Disconnect the throttle position sensor connector.
2. Check the continuity between the throttle position sensor connector side terminal 3 and terminal 4.




**Normal condition:**

|                   |                                    |
|-------------------|------------------------------------|
| Accelerator pedal | Continuity                         |
| Depressed         | Non-conductive ( $\infty \Omega$ ) |
| Released          | Conductive (0 $\Omega$ )           |

- If out of specification, replace the throttle position sensor.

**NOTE**

After replacement, the idle position switch and throttle position sensor should be adjusted. (Refer to P.13A-75.)

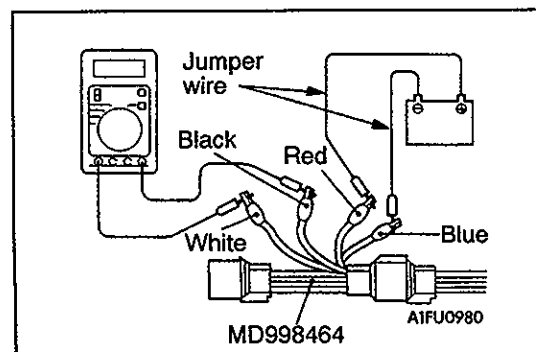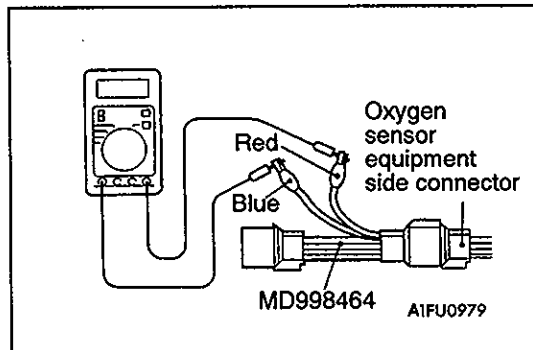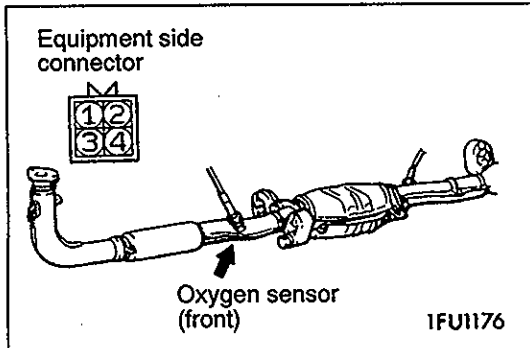**OXYGEN SENSOR CHECK**

13100510048

**<Oxygen sensor (front)>**

- Disconnect the oxygen sensor connector and connect the special tool (test harness) to the connector on the oxygen sensor side.
- Make sure that there is continuity ( $7 - 40 \Omega$  at  $20^\circ\text{C}$ ) between terminal 1 (red clip of special tool) and terminal 3 (blue clip of special tool) on the oxygen sensor connector.
- If there is no continuity, replace the oxygen sensor.
- Warm up the engine until engine coolant is  $80^\circ\text{C}$  or higher.

- Use the jumper wire to connect terminal 1 (red clip) of the oxygen sensor connector to the battery (+) terminal and terminal 3 (blue clip) to the battery (-) terminal.

**Caution**

**Be very careful when connecting the jumper wire; incorrect connection can damage the oxygen sensor.**

- Connect a digital voltage meter between terminal 2 (black clip) and terminal 4 (white clip).
- While repeatedly racing the engine, measure the oxygen sensor output voltage.


**Standard value:**

| Engine                 | Oxygen sensor output voltage | Remarks                                                                                                                           |
|------------------------|------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| When racing the engine | 0.6 – 1.0 V                  | If you make the air/fuel ratio rich by racing the engine repeatedly, a normal oxygen sensor will output a voltage of 0.6 – 1.0 V. |

8. If the sensor is defective, replace the oxygen sensor.

**NOTE**



For removal and installation of the oxygen sensor, refer to GROUP 15 – Exhaust Pipe and Main Muffler.

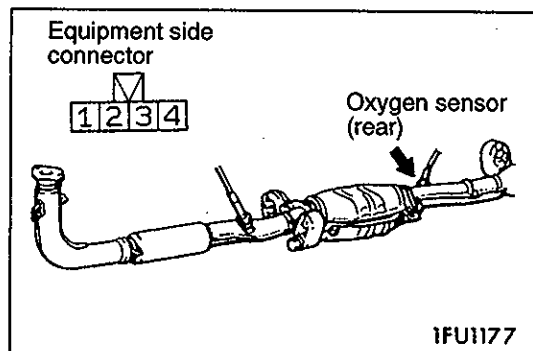**<Oxygen sensor (rear)>**

1. Disconnect the oxygen sensor connector and connect the special tool (test harness set) to the connector on the oxygen sensor side.
2. Make sure that there is continuity ( $7 - 40 \Omega$  at  $20^\circ\text{C}$ ) between terminal 3 and terminal 4 on the oxygen sensor connector.
3. If there is no continuity, replace the oxygen sensor.

**NOTE**

1. If the MUT-II does not display the standard value although no abnormality is found by the above mentioned continuity test and harness check, replace the oxygen sensor (rear).
2. For removal and installation of the oxygen sensor, refer to GROUP 15 – Exhaust Pipe and Main Muffler.

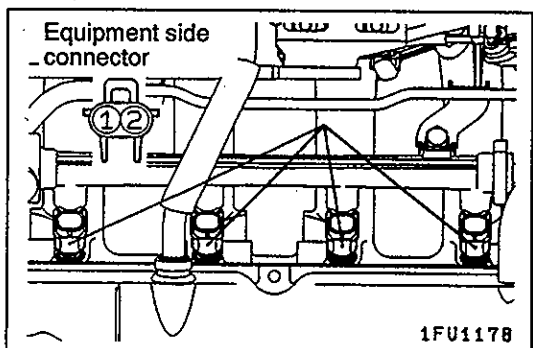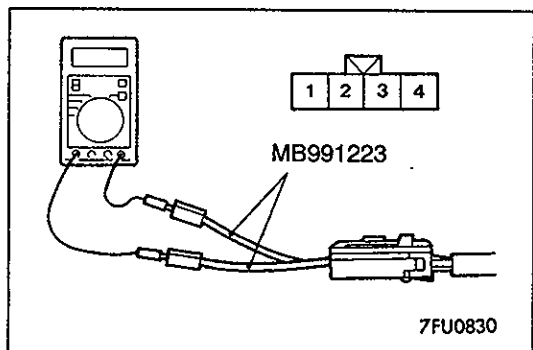**INJECTOR CHECK**

13100520102

**Measurement of Resistance between Terminals**

1. Remove the injector connector.
2. Measure the resistance between terminals.



**Standard value:  $13-16 \Omega$  (at  $20^\circ\text{C}$ )**

3. Install the injector connector.


**Checking the Injection Condition**

1. Following the steps below, bleed out the residual pressure within the fuel pipe line to prevent flow of the fuel. (Refer to P.13-81.)
2. Remove the injector.


3. Arrange the special tool (injector test set), adaptor, fuel pressure regulator and clips as shown in the illustration below.

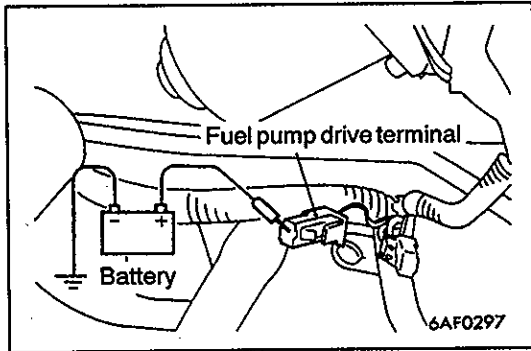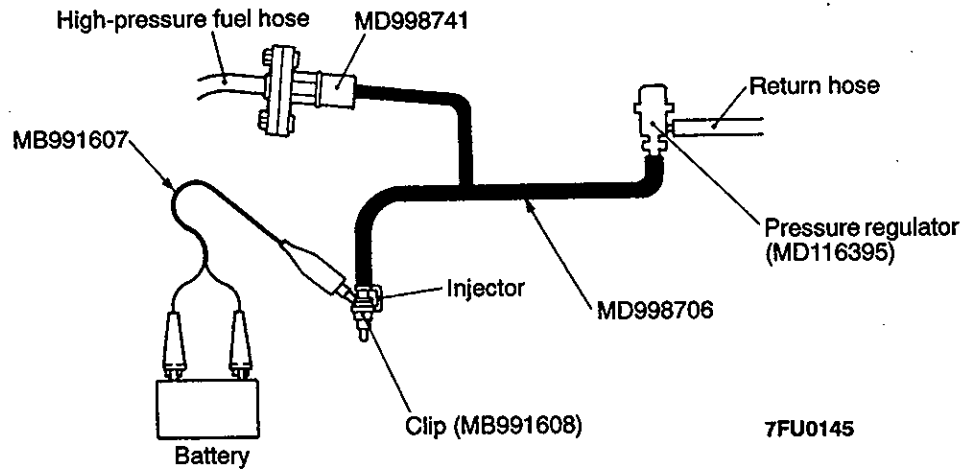

4. Apply battery voltage to the fuel pump drive terminal (black) and activate the fuel pump.

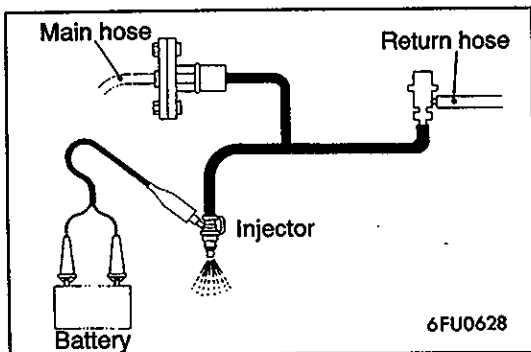


5. Activate the injector and check the atomized spray condition of the fuel. The condition can be considered satisfactory unless it is extremely poor.

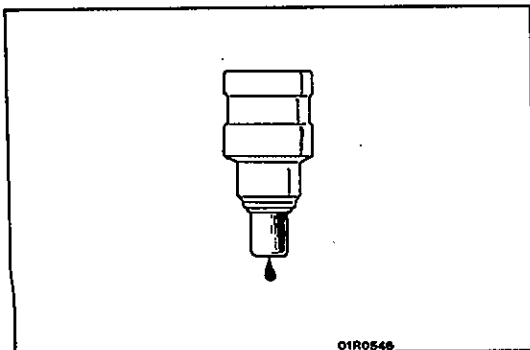

6. Stop the actuation of the injector, and check for leakage from the injector's nozzle.

**Standard value: 1 drop or less per minute**

7. Activate the injector without activating the fuel pump; then, when the spray emission of fuel from the injector stops, disconnect the special tool and restore it to its original condition.

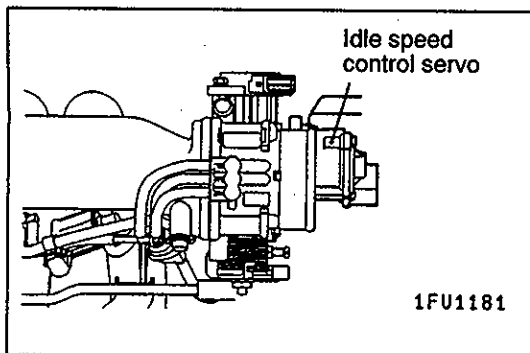

## IDLE SPEED CONTROL (ISC) SERVO (STEPPER MOTOR) CHECK

13100540146

### Checking the Operation Sound

1. Check that the engine coolant temperature is 20°C or below.

#### NOTE

Disconnecting the engine coolant temperature sensor connector and connecting the harness-side of the connector to another engine coolant temperature sensor that is at 20°C or below is also okay.

2. Check that the operation sound of the stepper motor can be heard after the ignition is switched ON. (but without starting the motor.)
3. If the operation sound cannot be heard, check the stepper motor's activation circuit.  
If the circuit is normal, it is probable that there is a malfunction of the stepper motor or of the engine control unit.



### Checking the Coil Resistance

1. Disconnect the idle speed control servo connector and connect the special tool (test harness).
2. Measure the resistance between terminal 2 (white clip of the special tool) and either terminal 1 (red clip) or terminal 3 (blue clip) of the connector at the idle speed control servo side.

**Standard value: 28–33 Ω (at 20°C)**


3. Measure the resistance between terminal 5 (green clip of the special tool) and either terminal 6 (yellow clip) or terminal 4 (black clip) of the connector at the idle speed control servo side.

**Standard value: 28–33 Ω (at 20°C)**

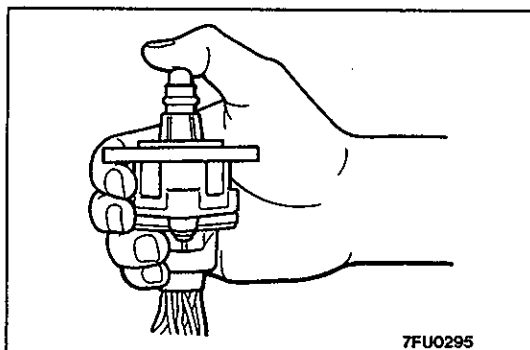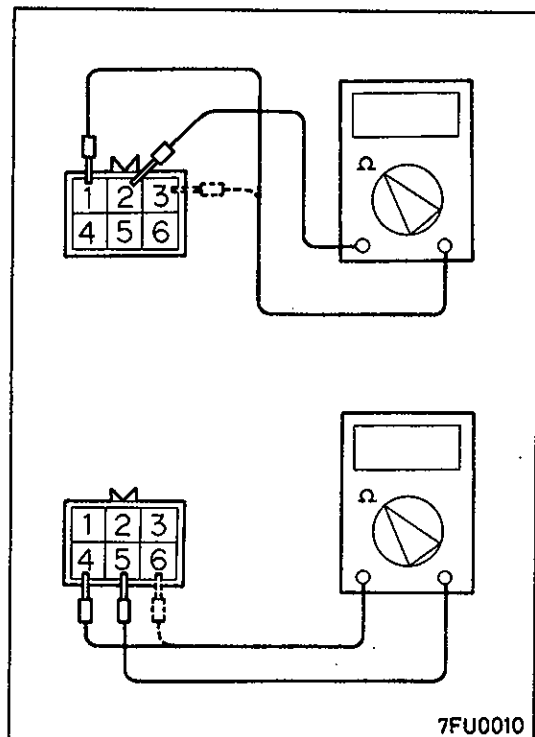

### Operation Check

1. Remove the throttle body.
2. Remove the stepper motor.

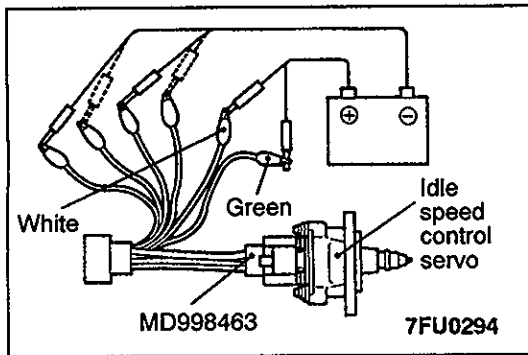

3. Connect the special tool (test harness) to the idle speed control servo connector.
4. Connect the positive (+) terminal of a power supply (approx. 6 V) to the white clip and the green clip.
5. With the idle speed control servo as shown in the illustration, connect the negative (–) terminal of the power supply to each clip as described in the following steps, and check whether or not a vibrating feeling (a feeling of very slight vibration of the stepper motor) is generated as a result of the activation of the stepper motor.
  - (1) Connect the negative (–) terminal of the power supply to the red and black clip.
  - (2) Connect the negative (–) terminal of the power supply to the blue and black clip.
  - (3) Connect the negative (–) terminal of the power supply to the blue and yellow clip.
  - (4) Connect the negative (–) terminal of the power supply to the red and yellow clip.
  - (5) Connect the negative (–) terminal of the power supply to the red and black clip.
  - (6) Repeat the tests in sequence from (5) to (1).
6. If, as a result of these tests, vibration is detected, the stepper motor can be considered to be normal.

## PURGE CONTROL SOLENOID VALVE CHECK

13100560111

Refer to GROUP 17 – Emission Control System.

## EGR CONTROL SOLENOID VALVE CHECK

13100570107



Refer to GROUP 17 – Emission Control System.

# INJECTOR

## REMOVAL AND INSTALLATION

### Pre-removal Operation

- Fuel Discharge Prevention (Refer to P.13A-81.)

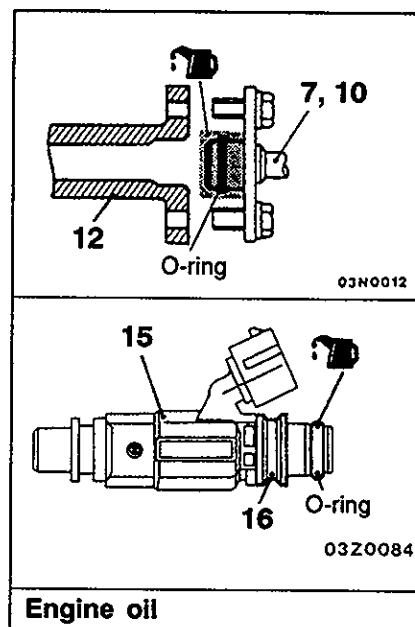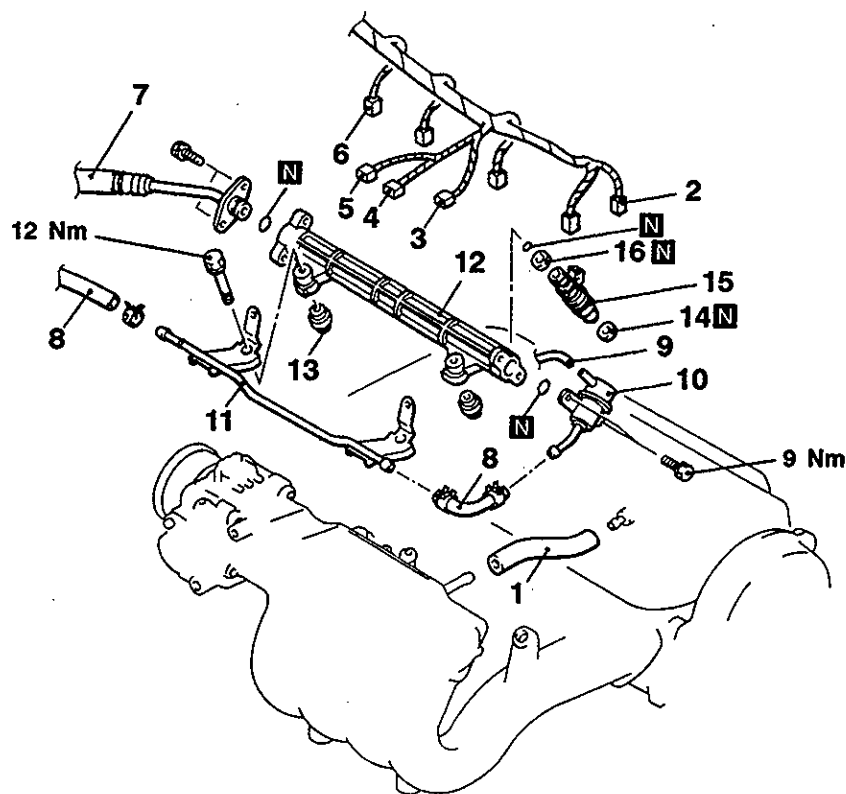

03M0019 00004499

### Removal steps

- |                                            |         |                                 |
|--------------------------------------------|---------|---------------------------------|
| 1. PCV hose                                |         | 8. Fuel return hose connection  |
| 2. Oxygen sensor connector                 |         | 9. Vacuum hose connection       |
| 3. Intake air temperature sensor connector |         | ▶A◀ 10. Fuel pressure regulator |
| 4. Purge control solenoid valve connector  | ◀A▶     | 11. Fuel return pipe            |
| 5. EGR solenoid valve connector            |         | 12. Delivery pipe               |
| 6. Injector connector                      | ◀A▶ ▶A▶ | 13. Insulators                  |
| ▶A◀ 7. High-pressure fuel hose connection  |         | 14. Insulators                  |
|                                            |         | 15. Injectors                   |
|                                            |         | 16. Grommets                    |

**REMOVAL SERVICE POINT****◀A▶ DELIVERY PIPE/INJECTOR REMOVAL**

Remove the delivery pipe (with the injectors attached to it).

**Caution**

Care must be taken, when removing the delivery pipe, not to drop the injector.

**INSTALLATION SERVICE POINT****▶A◀ INJECTOR/FUEL PRESSURE REGULATOR/  
HIGH-PRESSURE FUEL HOSE INSTALLATION**

- (1) Apply a drop of new engine oil to the O-ring.

**Caution**

Be sure not to let engine oil enter the delivery pipe.

- (2) While turning the injector, high-pressure fuel hose and fuel pressure regulator to the right and left, install the delivery pipe, while being careful not to damage the O-ring. After installing, check that the hose turns smoothly.
- (3) If it does not turn smoothly, the O-ring may be trapped, remove the fuel pressure regulator and then re-insert it into the delivery pipe and check once again.
- (4) Tighten the high-pressure fuel hose to the standard torque, and tighten the fuel pressure regulator to the specified torque.

**Tightening torque:**

9 Nm (Fuel pressure regulator)

# THROTTLE BODY


## REMOVAL AND INSTALLATION

### Pre-removal Operation

- Engine Coolant Draining (Refer to GROUP 14 – On-vehicle Service.)
- Air Cleaner Removal

### Post-Installation Operation

- Air Cleaner Installation
- Engine Coolant Supplying (Refer to GROUP 14 – On-vehicle Service.)
- Accelerator Cable Adjustment (Refer to GROUP 17 – On-vehicle Service.)

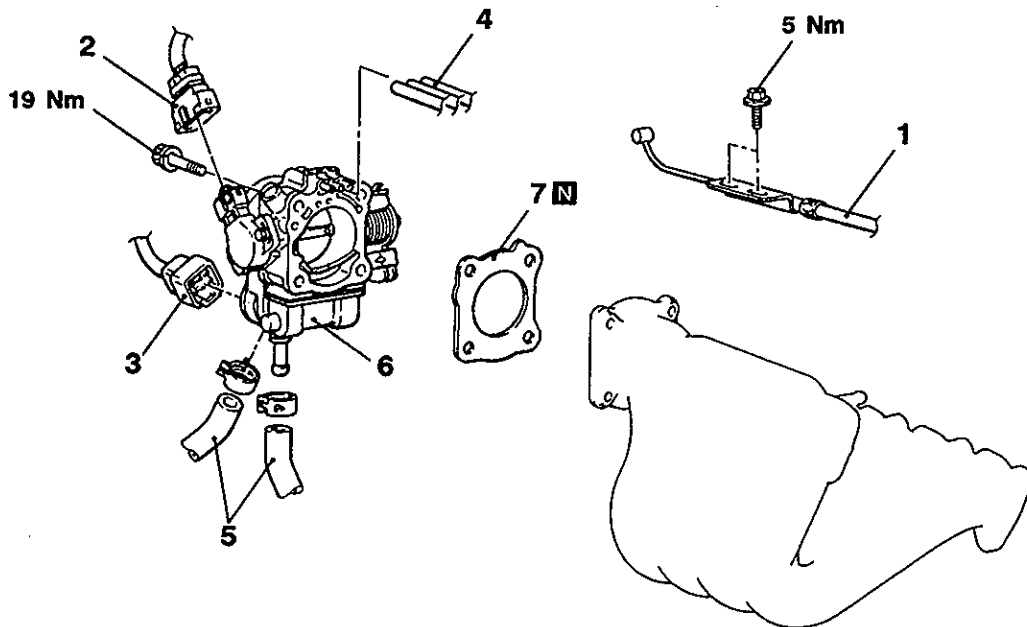


A03M0008

### Removal steps

1. Accelerator cable connection
2. Throttle position sensor connector
3. Idle speed control servo connector
4. Vacuum hose connection

5. Water hose connection
6. Throttle body
7. Throttle body gasket

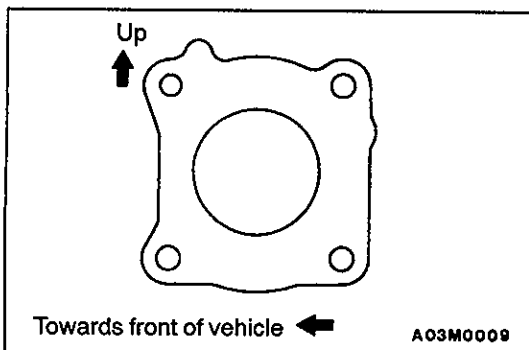

A03M0009


### INSTALLATION SERVICE POINT

#### ►◄ THROTTLE BODY GASKET INSTALLATION

Place the gasket so that the projecting part is positioned as shown in the illustration, and then install it between the intake manifold and the throttle body.

## DISASSEMBLY AND REASSEMBLY

13100970105

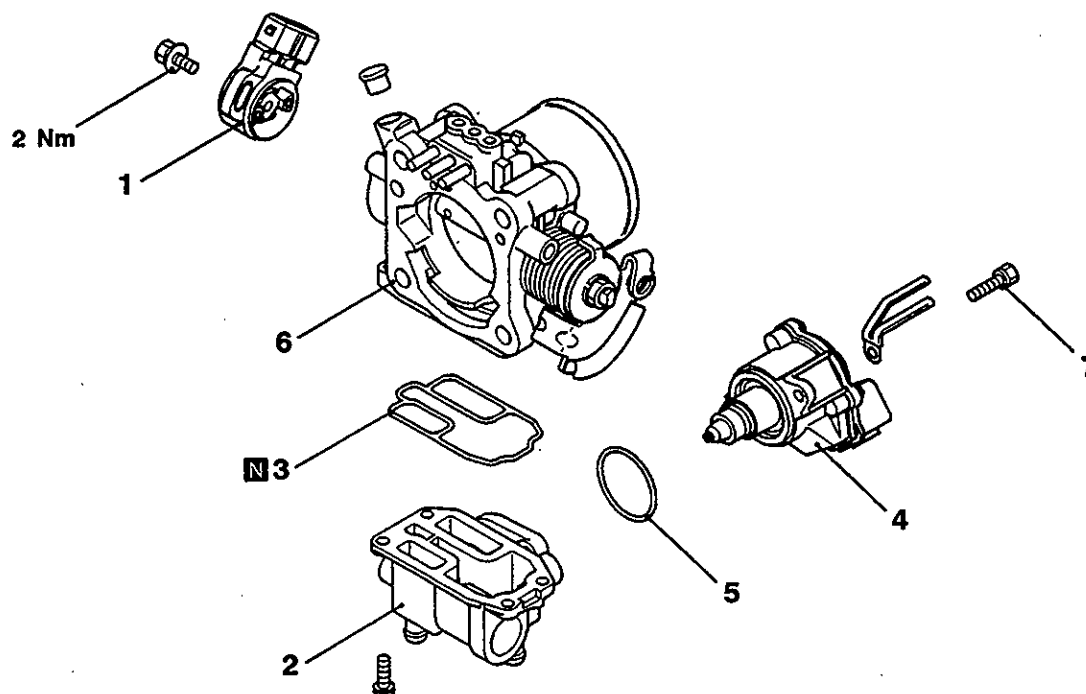

1FU1179

## Disassembly steps





1. Throttle position sensor
2. Idle speed control body assembly
3. O-ring
4. Idle speed control servo
5. O-ring
6. Throttle body
7. Fixed SAS

## NOTE

1. The fixed SAS is correctly adjusted at the factory and should not be removed.
2. If the fixed SAS should happen to have been removed, carry out fixed SAS adjustment. (Refer to page 13A-76.)

## CLEANING THROTTLE BODY PARTS

1. Clean all throttle body parts.  
Do not use solvent to clean the following parts:
  - Throttle position sensor
  - Accelerator pedal position sensor
  - Idle speed control body assembly
 If these parts are immersed in solvent, their insulation will deteriorate.  
Wipe them with cloth only.
2. Check if the vacuum port or passage is clogged. Use compressed air to clean the vacuum passage.

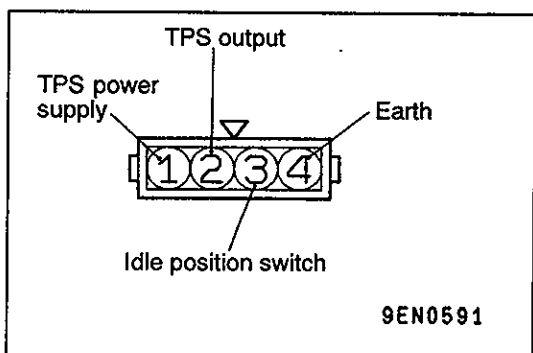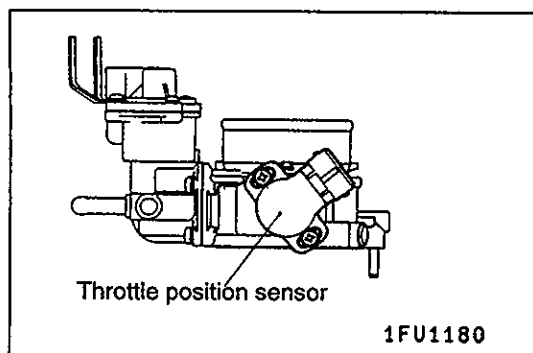

## REASSEMBLY SERVICE POINT

### ▶A◀ THROTTLE POSITION SENSOR (TPS) INSTALLATION

1. Install the TPS so that it faces as shown in the illustration, and then tighten it with the screw.
2. Connect a multimeter between terminal (1) (TPS power supply) and terminal (2) (TPS output) of the TPS connector, and check that the resistance increases gradually as the throttle valve is opened slowly to the fully-open position.
3. Check the continuity between terminal (3) (idle position switch) and terminal (4) (earth) of the TPS connector when the throttle valve is fully closed and fully open.

#### Normal condition:

| Throttle valve condition | Continuity    |
|--------------------------|---------------|
| Fully closed             | Continuity    |
| Fully open               | No continuity |

If there is no continuity when the throttle valve is fully closed, turn the TPS body anti-clockwise and then check again.

- (4) If there is an abnormality, replace the TPS.

# MULTIPOINT FUEL INJECTION (MPI) <4G9>

13100010159

## GENERAL INFORMATION

The Multipoint Fuel Injection System consists of sensors which detect the engine conditions, the engine-ECU which controls the system based on signals from these sensors, and actuators which operate under the control of the engine-ECU. The engine-ECU carries out

activities such as fuel injection control, idle speed control and ignition timing control. In addition, the engine-ECU is equipped with several diagnosis modes which simplify troubleshooting when a problem develops.

## FUEL INJECTION CONTROL

The injector drive times and injector timing are controlled so that the optimum air/fuel mixture is supplied to the engine to correspond to the continually-changing engine operation conditions.

A single injector is mounted at the intake port of each cylinder. Fuel is sent under pressure from the fuel tank by the fuel pump, with the pressure being regulated by the fuel pressure regulator. The fuel thus regulated is distributed to each of the injectors.

Fuel injection is normally carried out once for each cylinder for every two rotations of the crankshaft. The firing order is 1-3-4-2. This is called sequential fuel injection.

<Except MVV>

The engine-ECU provides a richer air/fuel mixture by carrying out "open-loop" control when the engine is cold or operating under high load conditions in order to maintain engine performance. In addition, when the engine is warm or operating under normal conditions,

the engine-ECU controls the air/fuel mixture by using the oxygen sensor signal to carry out "closed-loop" control in order to obtain the theoretical air/fuel mixture ratio that provides the maximum cleaning performance from the three way catalyst.

<MVV>

The engine-ECU provides a richer air/fuel mixture by carrying out "open-loop" control when the engine is cold or operating under high load conditions in order to maintain engine performance.

In addition, engine-ECU makes an air/fuel mixture most efficient in fuel consumption by carrying out a lean air/fuel mixture ratio compensation (closed-loop control) when the engine is operating under normal conditions. The engine-ECU carries out a theoretical air/fuel mixture ratio compensation (closed-loop control) when the engine is being warmed up or under other conditions.

## IDLE AIR CONTROL

The idle speed is kept at the optimum speed by controlling the amount of air that bypasses the throttle valve in accordance with changes in idling conditions and engine load during idling. The engine-ECU drives the idle speed control (ISC) motor to keep the engine running at the pre-set idle target speed in accordance with the engine coolant temperature and air

conditioner load. In addition, when the air conditioner switch is turned off and on while the engine is idling, the ISC motor operates to adjust the throttle valve bypass air amount in accordance with the engine load conditions in order to avoid fluctuations in the engine speed.

## IGNITION TIMING CONTROL

The power transistor located in the ignition primary circuit turns ON and OFF to control the primary current flow to the ignition coil. This controls the ignition timing in order to provide the optimum ignition timing with respect to the

engine operating conditions. The ignition timing is determined by the engine-ECU from the engine speed, intake air volume, engine coolant temperature and atmospheric pressure.

**SELF-DIAGNOSIS FUNCTION**

- When an abnormality is detected in one of the sensors or actuators related to emission control, the engine warning lamp (check engine lamp) illuminates as a warning to the driver.
- When an abnormality is detected in one of the sensors or actuators, a diagnosis

code corresponding to the abnormality is output.

- The RAM data inside the engine-ECU that is related to the sensors and actuators can be read by means of the MUT-II. In addition, the actuators can be force-driven under certain circumstances.

**OTHER CONTROL FUNCTIONS**

1. Fuel Pump Control  
Turns the fuel pump relay ON so that current is supplied to the fuel pump while the engine is cranking or running.
2. A/C Relay Control  
Turns the compressor clutch of the A/C ON and OFF.
3. Fan Relay Control  
The revolutions of the radiator fan and condenser fan are controlled in response to the engine coolant temperature and vehicle speed.

4. Air By-pass Control Solenoid Valve Control <MVV>  
Supplies air without passing through the throttle valve, based on signal from the engine-ECU, when the engine is operating under a lean mixture.
5. Purge Control Solenoid Valve Control  
Refer to GROUP 17.
6. EGR Control Solenoid Valve Control  
Refer to GROUP 17.

**GENERAL SPECIFICATIONS**

| Items         |                          | Specifications                                                                                    |
|---------------|--------------------------|---------------------------------------------------------------------------------------------------|
| Throttle body | Throttle bore mm         | 46 <MVV><br>50 <Except MVV>                                                                       |
|               | Throttle position sensor | Variable resistor type                                                                            |
|               | Idle speed control servo | Stepper motor type<br>(Stepper motor type by-pass air control system with the air volume limiter) |
|               | Idle position switch     | Rotary contact type, within throttle position sensor                                              |

| Items                   |                                      | Specifications                                                                                                                                                                                                                       |
|-------------------------|--------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Engine-ECU              | Identification model No.             | E2T65679 <MVV (Vehicles without immobilizer system)><br>E2T65681 <MVV (Vehicles with immobilizer system)><br>E2T65678 <Except MVV (Vehicles without immobilizer system)><br>E2T65680 <Except MVV (Vehicles with immobilizer system)> |
|                         |                                      |                                                                                                                                                                                                                                      |
| Sensors                 | Air flow sensor                      | Karman vortex type                                                                                                                                                                                                                   |
|                         | Barometric pressure sensor           | Semiconductor type                                                                                                                                                                                                                   |
|                         | Intake air temperature sensor        | Thermistor type                                                                                                                                                                                                                      |
|                         | Engine coolant temperature sensor    | Thermistor type                                                                                                                                                                                                                      |
|                         | Oxygen sensor                        | Zirconia type                                                                                                                                                                                                                        |
|                         | Vehicle speed sensor                 | Magnetic resistive element type                                                                                                                                                                                                      |
|                         | Inhibitor switch                     | Contact switch type                                                                                                                                                                                                                  |
|                         | Camshaft position sensor             | Hall element type                                                                                                                                                                                                                    |
|                         | Crank angle sensor                   | Hall element type                                                                                                                                                                                                                    |
|                         | Detonation sensor                    | Piezoelectric type                                                                                                                                                                                                                   |
|                         | Power steering fluid pressure switch | Contact switch type                                                                                                                                                                                                                  |
| Actuators               | Control relay type                   | Contact switch type                                                                                                                                                                                                                  |
|                         | Fuel pump relay type                 | Contact switch type                                                                                                                                                                                                                  |
|                         | Injector type and number             | Electromagnetic type, 4                                                                                                                                                                                                              |
|                         | Injector identification mark         | CDH210 <Except MVV><br>CDH210N <MVV>                                                                                                                                                                                                 |
|                         | EGR control solenoid valve           | Duty cycle type solenoid valve                                                                                                                                                                                                       |
|                         | Purge control solenoid valve         | ON/OFF type solenoid valve                                                                                                                                                                                                           |
|                         | Air by-pass control solenoid valve   | ON/OFF type solenoid valve                                                                                                                                                                                                           |
| Fuel pressure regulator | Regulator pressure kPa               | 329                                                                                                                                                                                                                                  |

## MULTIPOINT FUEL INJECTION SYSTEM DIAGRAM

&lt;Except MVV&gt;


- \*1 Oxygen sensor
- \*2 Air flow sensor
- \*3 Intake air temperature sensor
- \*4 Throttle position sensor
- \*5 Idle position switch
- \*6 Camshaft position sensor
- \*7 Crank angle sensor
- \*8 Barometric pressure sensor
- \*9 Engine coolant temperature sensor
- \*10 Detonation sensor

- Power supply voltage
- Vehicle speed sensor
- A/C switch
- Inhibitor switch
- Power steering fluid pressure switch
- Ignition switch – ST
- Ignition switch – IG
- Alternator FR terminal

⇒ Engine-ECU ⇒

- ★1 Injector
- ★2 Purge control solenoid valve
- ★3 Idle speed control servo
- ★4 EGR control solenoid valve

- Fuel pump relay
- Control relay
- A/C power relay
- Engine warning lamp
- Diagnosis signal
- Ignition coil, power transistor
- Fan motor relay
- Alternator G terminal

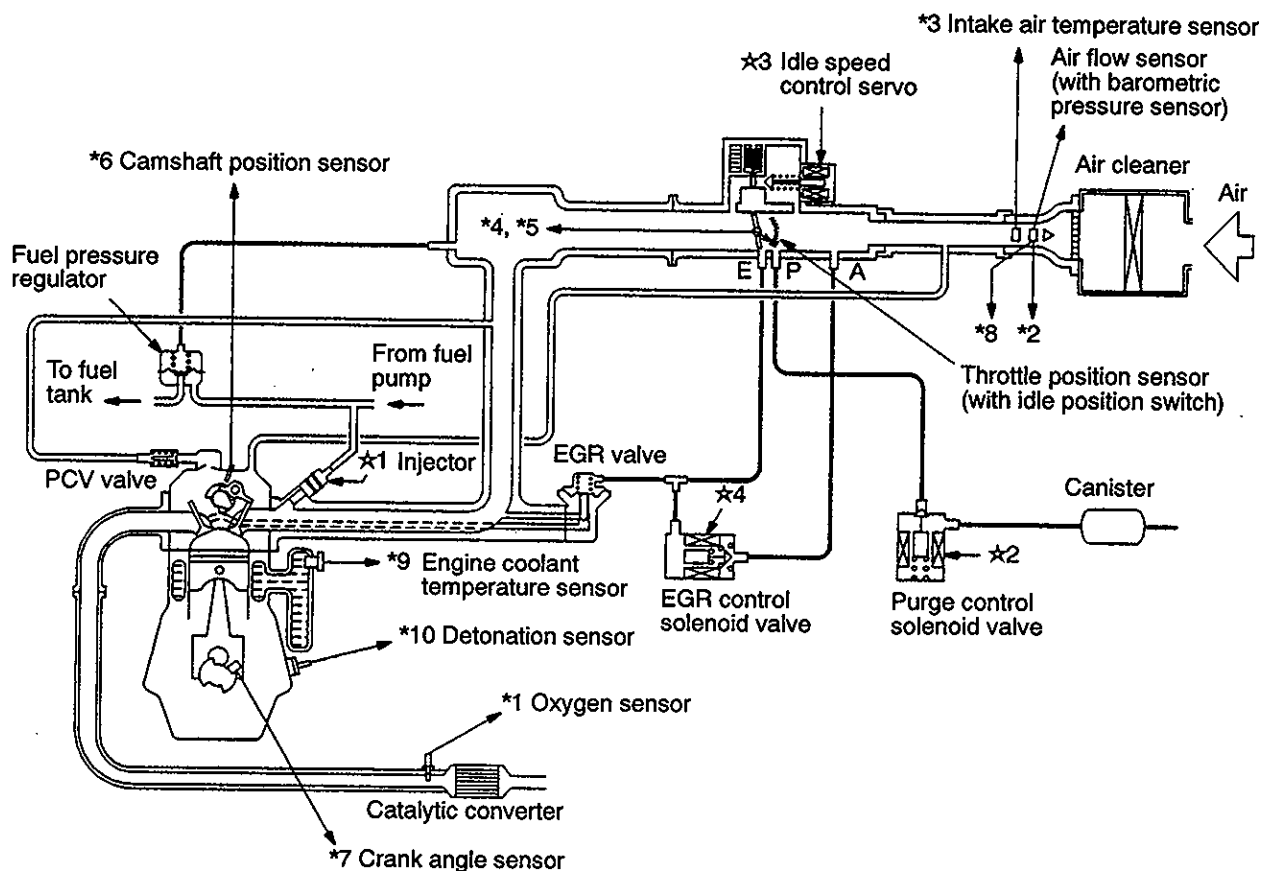

9FU0635

## &lt;MVV&gt;


- \*1 Oxygen sensor
- \*2 Air flow sensor
- \*3 Intake air temperature sensor
- \*4 Throttle position sensor
- \*5 Idle position switch
- \*6 Camshaft position sensor
- \*7 Crank angle sensor
- \*8 Barometric pressure sensor
- \*9 Engine coolant temperature sensor
- \*10 Detonation sensor

- Power supply voltage
- Vehicle speed sensor
- A/C switch
- Inhibitor switch
- Power steering fluid pressure switch
- Ignition switch – ST
- Ignition switch – IG
- Alternator FR terminal

⇒ Engine-ECU ⇒

- ★1 Injector
- ★2 Purge control solenoid valve
- ★3 Idle speed control servo
- ★4 EGR control solenoid valve

- Fuel pump relay
- Control relay
- A/C power relay
- Engine warning lamp
- Diagnosis signal
- Ignition coil, power transistor
- Fan motor relay
- Alternator G terminal

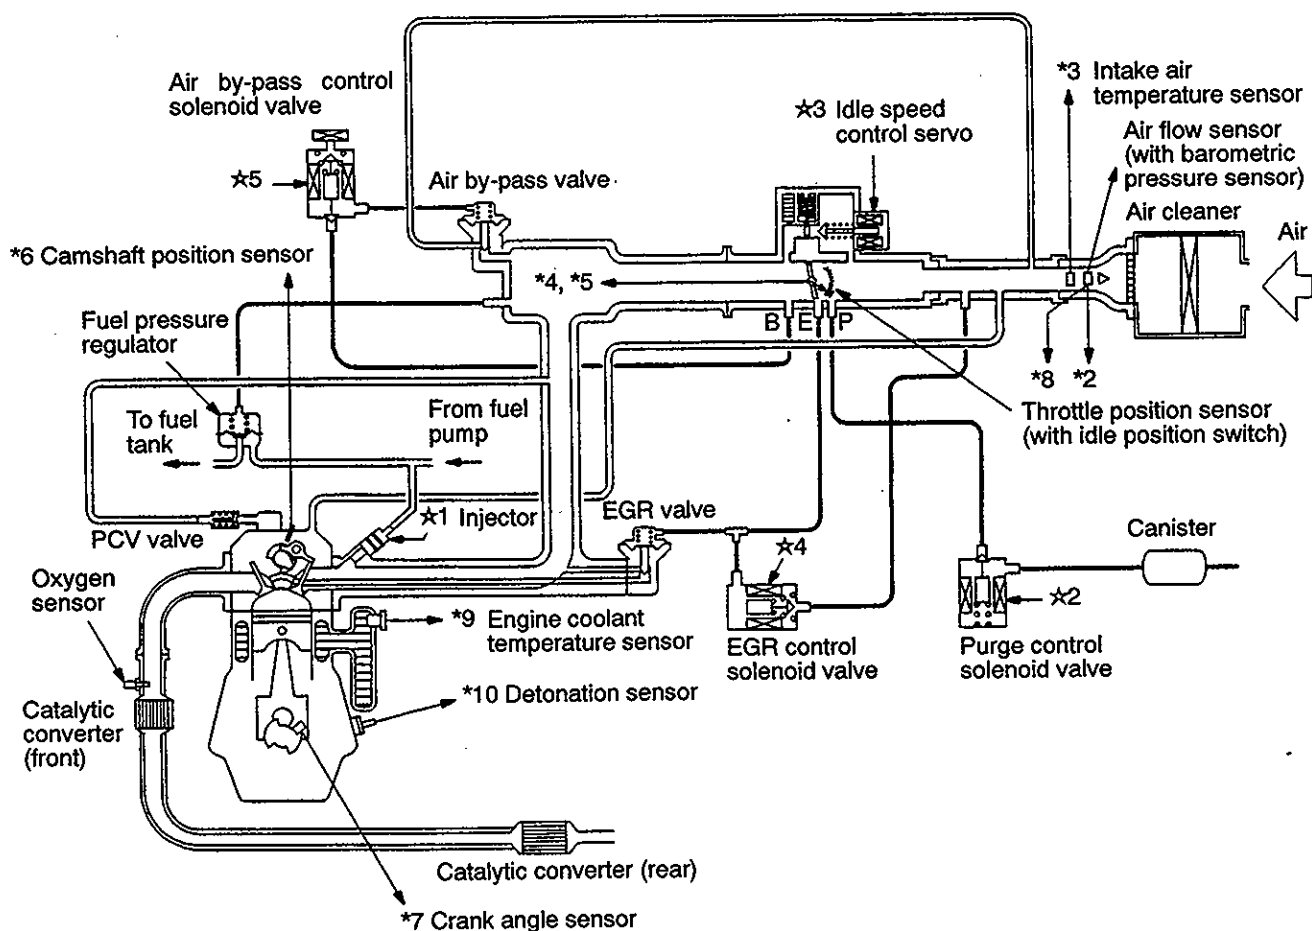

9FU0636

## SERVICE SPECIFICATIONS

13100030148

| Items                                                      |                           | Specifications           |
|------------------------------------------------------------|---------------------------|--------------------------|
| Basic idle speed r/min                                     | Except MVV                | 750±50                   |
|                                                            | MVV                       | 700±50                   |
| Idle speed when A/C is ON r/min                            |                           | 850 at neutral position  |
| Throttle position sensor adjusting voltage mV              |                           | 400–1,000                |
| Throttle position sensor resistance kΩ                     |                           | 3.5–6.5                  |
| Idle speed control servo coil resistance Ω                 |                           | 28–33 (at 20°C)          |
| Intake air temperature sensor resistance kΩ                | 20°C                      | 2.3–3.0                  |
|                                                            | 80°C                      | 0.30–0.42                |
| Engine coolant temperature sensor resistance kΩ            | 20°C                      | 2.1–2.7                  |
|                                                            | 80°C                      | 0.26–0.36                |
| Oxygen sensor output voltage V                             |                           | 0.6–1.0                  |
| Fuel pressure kPa                                          | Vacuum hose disconnection | 324–343 at curb idle     |
|                                                            | Vacuum hose connection    | Approx. 265 at curb idle |
| Injector coil resistance Ω                                 |                           | 13–16 (at 20°C)          |
| Air by-pass control solenoid valve coil resistance <MVV> Ω |                           | 36–44 (at 20°C)          |





## SEALANT




13100050038

| Item                                               | Specified sealant                          | Remark         |
|----------------------------------------------------|--------------------------------------------|----------------|
| Engine coolant temperature sensor threaded portion | 3M Nut Locking Part No. 4171 or equivalent | Drying sealant |

## SPECIAL TOOLS

13100060130
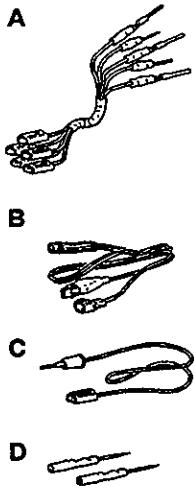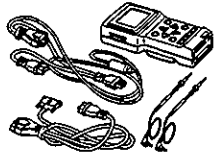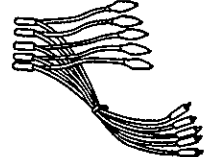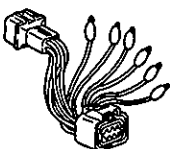
| Tool                                                                                                                                                 | Number   | Name                                                                                   | Use                                                                                                                                                                                                                   |
|------------------------------------------------------------------------------------------------------------------------------------------------------|----------|----------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>A: MB991219<br/>B: MB991220<br/>C: MB991221<br/>D: MB991222</p> | MB991223 | Harness set<br>A: Test harness<br>B: LED harness<br>C: LED harness adapter<br>D: Probe | <ul style="list-style-type: none"> <li>Fuel gauge simple inspection</li> <li>A: Connector pin contact pressure inspection</li> <li>B, C: Power circuit inspection</li> <li>D: Commercial tester connection</li> </ul> |
|                                                                     | MB991502 | MUT-II sub assembly                                                                    | <ul style="list-style-type: none"> <li>Reading diagnosis code</li> <li>MPI system inspection</li> </ul>                                                                                                               |
|                                                                   | MB991348 | Test harness set                                                                       | Inspection using an analyzer                                                                                                                                                                                          |
|                                                                   | MB991519 | Alternator harness connector                                                           | Measurement of voltage during troubleshooting                                                                                                                                                                         |
|                                                                   | MD998463 | Test harness (6-pin, square)                                                           | <ul style="list-style-type: none"> <li>Inspection of idle speed control servo</li> <li>Inspection using an analyzer</li> </ul>                                                                                        |
|                                                                   | MD998464 | Test harness (4-pin, square)                                                           | Inspection of oxygen sensor                                                                                                                                                                                           |
|                                                                   | MD998478 | Test harness (3-pin, triangle)                                                         | Inspection using an analyzer                                                                                                                                                                                          |

 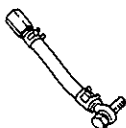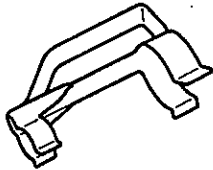
| Tool                                                                                            | Number   | Name                  | Use                                       |
|-------------------------------------------------------------------------------------------------|----------|-----------------------|-------------------------------------------|
|                | MD998709 | Adaptor hose          | Measurement of fuel pressure              |
|                | MD998742 | Hose adaptor          |                                           |
|                | MD998706 | Injector test set     | Checking the spray condition of injectors |
| <br>MB991607   | MB991607 | Injector test harness |                                           |
| <br>MD998741 | MD998741 | Injector test adaptor |                                           |
|              | MB991608 | Clip                  |                                           |

## TROUBLESHOOTING

13100850034

### DIAGNOSIS TROUBLESHOOTING FLOW

Refer to GROUP 00 – How to Use Troubleshooting/Inspection Service Points.

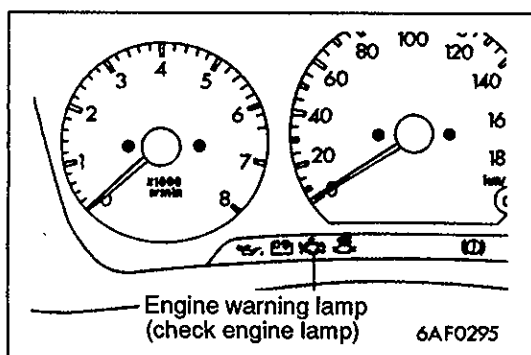

### DIAGNOSIS FUNCTION

13100860136

#### ENGINE WARNING LAMP (CHECK ENGINE LAMP)

If an abnormality occurs in any of the following items related to the Multipoint Fuel Injection (MPI) system, the engine warning lamp will illuminate.

If the lamp remains illuminated or if the lamp illuminates while the engine is running, check the diagnosis code output.

**Engine warning lamp inspection items**

|                                   |
|-----------------------------------|
| Engine-ECU                        |
| Oxygen sensor                     |
| Air flow sensor                   |
| Intake air temperature sensor     |
| Throttle position sensor          |
| Engine coolant temperature sensor |
| Crank angle sensor                |
| Camshaft position sensor          |
| Barometric pressure sensor        |
| Detonation sensor                 |
| Injector                          |
| Ignition coil, power transistor   |
| Immobilizer system                |

**METHOD OF READING AND ERASING DIAGNOSIS  
CODES**

Refer to GROUP 00 – How to Use Troubleshooting/Inspection  
Service Points.

**INSPECTION USING MUT-II DATA LIST AND  
ACTUATOR TESTING**

Refer to P.13A-9.

**FAIL-SAFE FUNCTION REFERENCE TABLE**

13100910138

When the main sensor malfunctions are detected by the diagnosis function, the vehicle is controlled by means of the pre-set control logic to maintain safe conditions for driving.

| Malfunctioning item                                     | Control contents during malfunction                                                                                                                                                                                                                                                                                                                |
|---------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Air flow sensor                                         | <ol style="list-style-type: none"> <li>1. Uses the throttle position sensor signal and engine speed signal (crank angle sensor signal) to take reading of the basic injector drive time and basic ignition timing from the pre-set mapping.</li> <li>2. Fixes the ISC servo in the appointed position so idle control is not performed.</li> </ol> |
| Intake air temperature sensor                           | Controls as if the intake air temperature is 25°C.                                                                                                                                                                                                                                                                                                 |
| Throttle position sensor (TPS)                          | No increase in fuel injection amount during acceleration due to the throttle position sensor signal.                                                                                                                                                                                                                                               |
| Engine coolant temperature sensor                       | Controls as if the engine coolant temperature is 80°C.                                                                                                                                                                                                                                                                                             |
| Camshaft position sensor                                | Cuts off the fuel supply 4 seconds after a problem is detected.<br>(However, after the ignition switch is turned to ON, the No. 1 cylinder top dead centre is not detected at all.)                                                                                                                                                                |
| Barometric pressure sensor                              | Controls as if the barometric pressure is 101 kPa.                                                                                                                                                                                                                                                                                                 |
| Detonation sensor                                       | Switches the ignition timing from ignition timing for super petrol to ignition timing for standard petrol.                                                                                                                                                                                                                                         |
| Ignition coil, power transistor                         | Cuts off the fuel supply to cylinders with an abnormal ignition.                                                                                                                                                                                                                                                                                   |
| Oxygen sensor                                           | Air/fuel ratio feedback control (closed loop control) is not performed.                                                                                                                                                                                                                                                                            |
| Communication wire with transmission control unit <A/T> | Ignition timing is not retarded during transmission gear shifting (overall engine and transmission control).                                                                                                                                                                                                                                       |
| Alternator FR terminal                                  | Does not control the output of the alternator according to an electrical load. (works as a normal alternator)                                                                                                                                                                                                                                      |


## INSPECTION CHART FOR DIAGNOSIS CODES

13100870139


| Code No. | Diagnosis item                                 | Reference page |
|----------|------------------------------------------------|----------------|
| 11       | Oxygen sensor system                           | 13A-106        |
| 12       | Air flow sensor system                         | 13A-107        |
| 13       | Intake air temperature sensor system           | 13A-107        |
| 14       | Throttle position sensor system                | 13A-108        |
| 21       | Engine coolant temperature sensor system       | 13A-109        |
| 22       | Crank angle sensor system                      | 13A-110        |
| 23       | Camshaft position sensor                       | 13A-111        |
| 24       | Vehicle speed sensor system                    | 13A-112        |
| 25       | Barometric pressure sensor system              | 13A-113        |
| 31       | Detonation sensor system                       | 13A-114        |
| 41       | Injector system                                | 13A-114        |
| 44       | Ignition coil and power transistor unit system | 13A-115        |
| 54       | Immobilizer system                             | 13A-116        |
| 61       | Communication wire with A/T-ECU system <A/T>   | 13A-116        |
| 64       | Alternator FR terminal system                  | 13A-117        |

## INSPECTION PROCEDURE FOR DIAGNOSIS CODES


| Code No. 11 Oxygen sensor system                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Probable cause                                                                                                                                                                                                    |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Range of Check</p> <ul style="list-style-type: none"> <li>• 3 minutes have passed after engine was started.</li> <li>• Engine coolant temperature is approx. 80°C or more.</li> <li>• Intake air temperature is 20–50°C.</li> <li>• Engine speed is approx. 2,000–3,000 r/min</li> <li>• Vehicle is moving at constant speed on a flat, level road surface</li> </ul> <p>Set conditions</p> <ul style="list-style-type: none"> <li>• The oxygen sensor output voltage is around 0.6 V for 30 seconds (does not cross 0.6 V for 30 seconds).</li> <li>• When the range of check operations given above which accompany starting of the engine are carried out four time in succession, a problem is detected after each operation.</li> </ul> | <ul style="list-style-type: none"> <li>• Malfunction of the oxygen sensor</li> <li>• Improper connector contact, open circuit or short-circuited harness wire</li> <li>• Malfunction of the engine-ECU</li> </ul> |

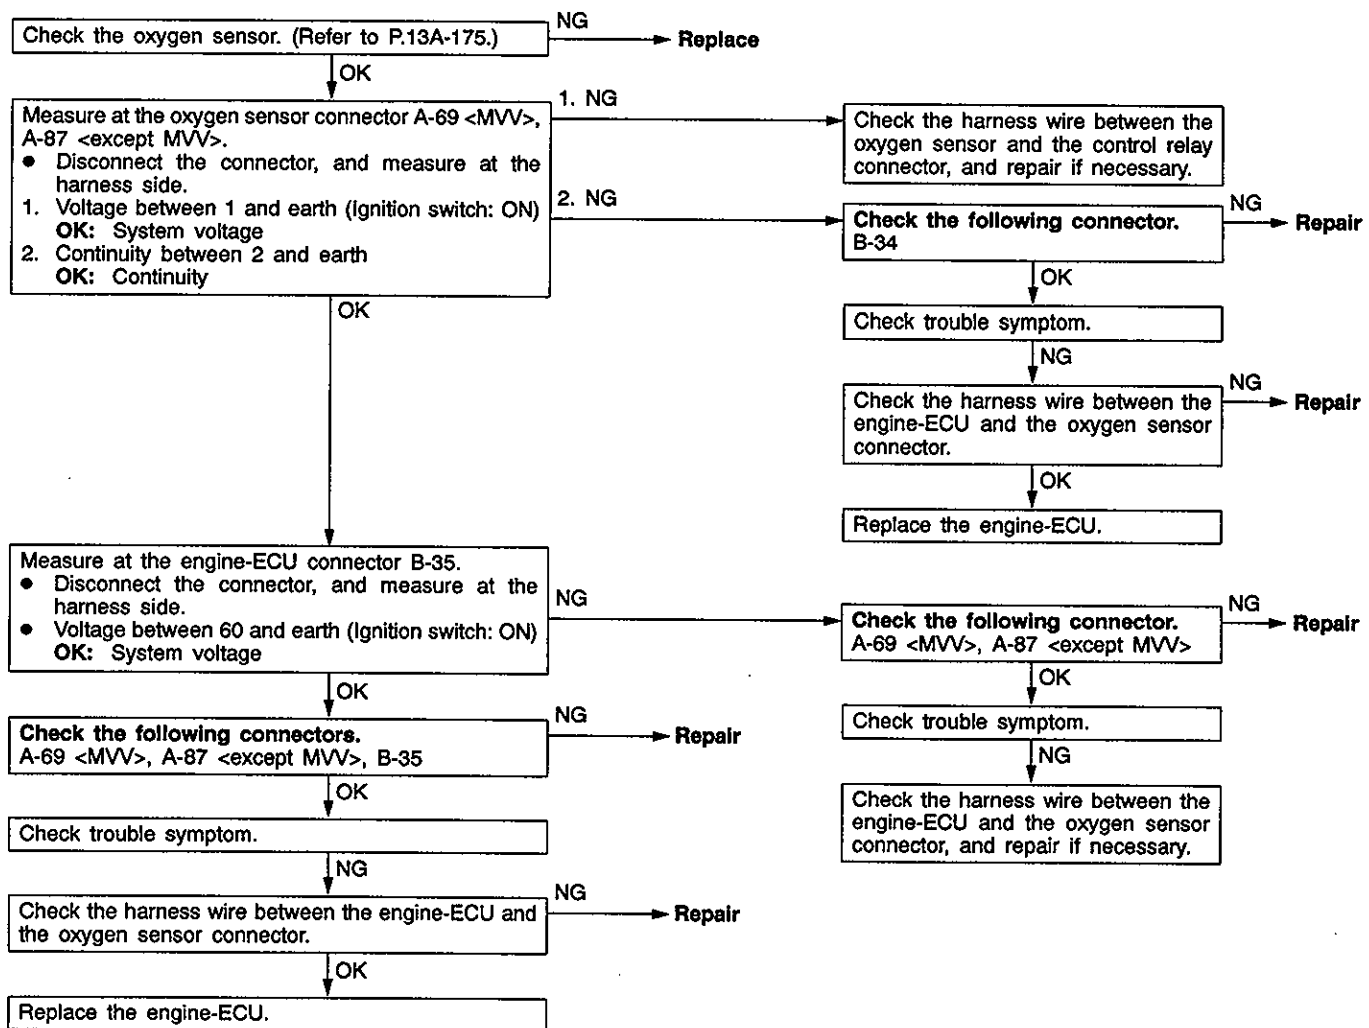


| Code No. 12 Air flow sensor system                                                                                                                                                                                                        | Probable cause                                                                                                                                                                                                                       |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Range of Check</b> <ul style="list-style-type: none"> <li>Engine speed is 500 r/min or more.</li> </ul> <b>Set conditions</b> <ul style="list-style-type: none"> <li>Sensor output frequency is 3 Hz or less for 4 seconds.</li> </ul> | <ul style="list-style-type: none"> <li>Malfunction of the air flow sensor</li> <li>Improper connector contact, open circuit or short-circuited harness wire of the air flow sensor</li> <li>Malfunction of the engine-ECU</li> </ul> |

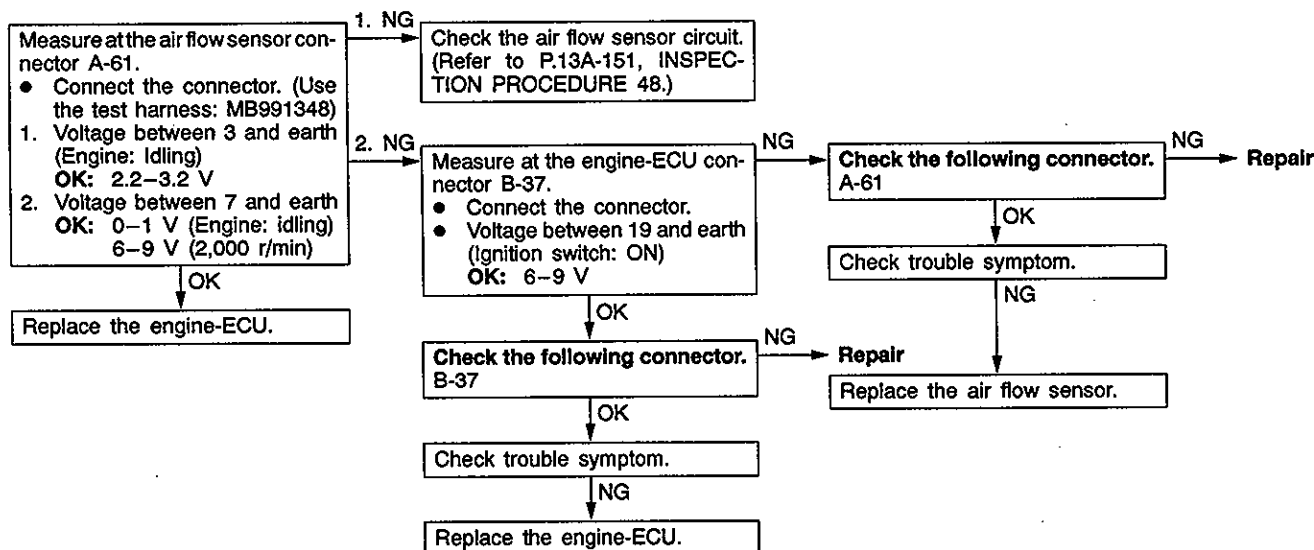


| Code No. 13 Intake air temperature sensor system                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Probable cause                                                                                                                                                                                                                                                           |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Range of Check</b> <ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>Excluding 60 seconds after the ignition switch is turned to ON or immediately after the engine starts.</li> </ul> <b>Set conditions</b> <ul style="list-style-type: none"> <li>Sensor output voltage is 4.6 V or more (corresponding to an intake air temperature of <math>-45^{\circ}\text{C}</math> or less) for 4 seconds.</li> </ul> <b>or</b> <ul style="list-style-type: none"> <li>Sensor output voltage is 0.2V or less (corresponding to an intake air temperature of <math>125^{\circ}\text{C}</math> or more) for 4 seconds.</li> </ul> | <ul style="list-style-type: none"> <li>Malfunction of the intake air temperature sensor</li> <li>Improper connector contact, open circuit or short-circuited harness wire of the intake air temperature sensor circuit</li> <li>Malfunction of the engine-ECU</li> </ul> |

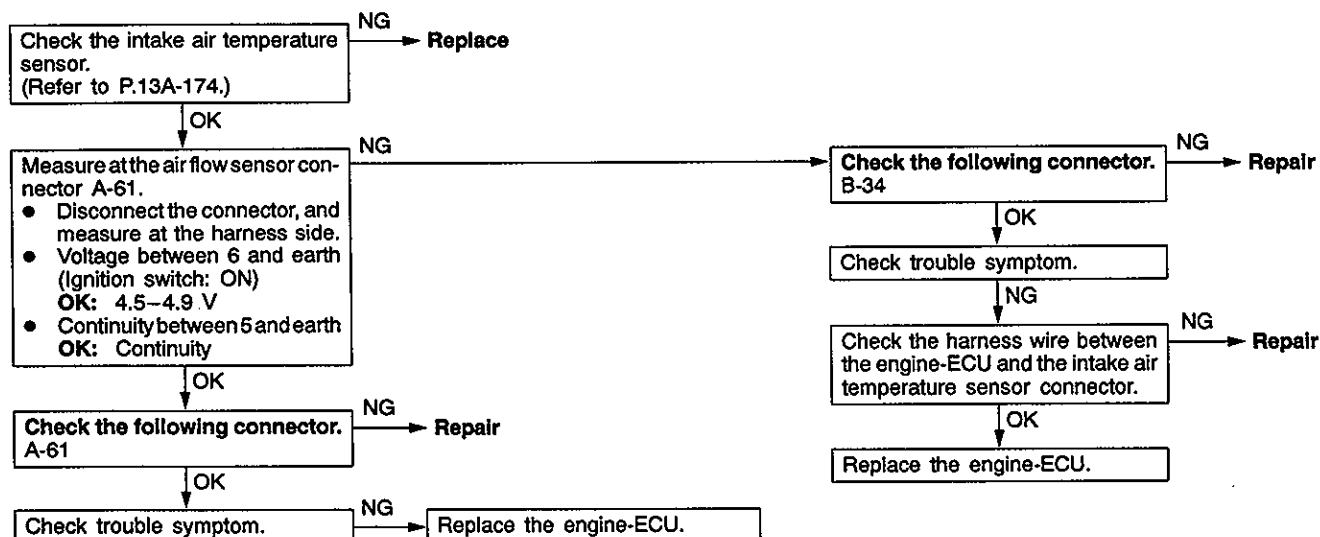


| Code No. 14 Throttle position sensor system                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Probable cause                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Range of Check</b> <ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>Excluding 60 seconds after the ignition switch is turned to ON or immediately after the engine starts.</li> </ul> <b>Set conditions</b> <ul style="list-style-type: none"> <li>When the idle position switch is ON, the sensor output voltage is 2 V or more for 4 seconds.</li> </ul> <b>or</b> <ul style="list-style-type: none"> <li>The sensor output voltage is 0.2 V or less for 4 seconds.</li> </ul> | <ul style="list-style-type: none"> <li>Malfunction of the throttle position sensor or maladjustment</li> <li>Improper connector contact, open circuit or short-circuited harness wire of the throttle position sensor circuit</li> <li>Improper "ON" state of idle position switch</li> <li>Short circuit of the idle position switch signal line</li> <li>Malfunction of the engine-ECU</li> </ul> |

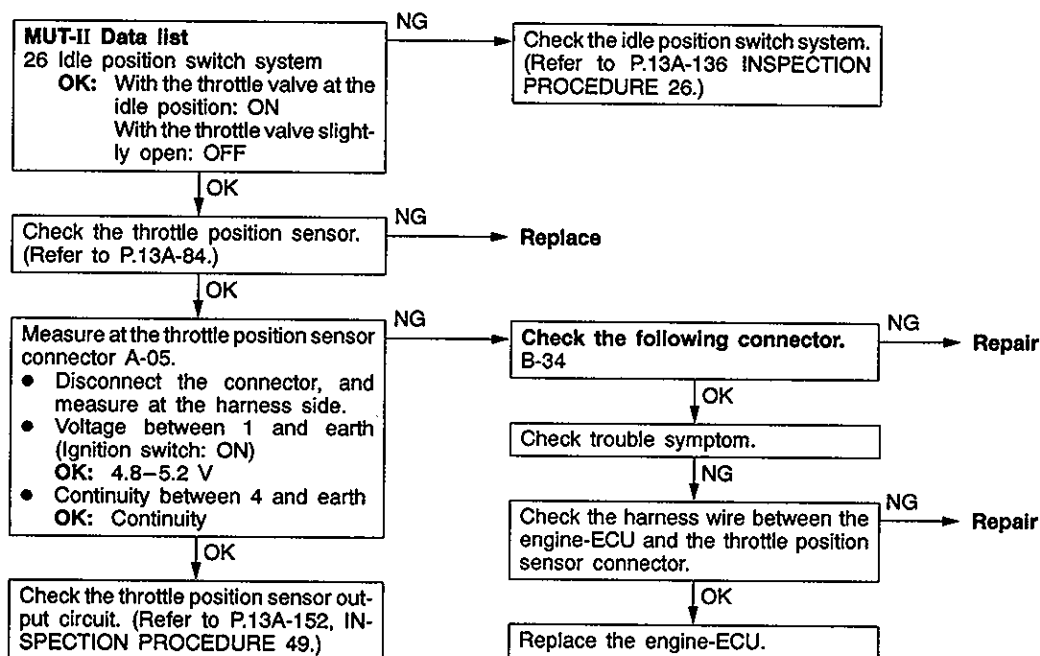


| Code No. 21 Engine coolant temperature sensor system                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Probable cause                                                                                                                                                                                                                                                                   |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Range of Check</p> <ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>Excluding 60 seconds after the ignition switch is turned to ON or immediately after the engine starts.</li> </ul> <p>Set conditions</p> <ul style="list-style-type: none"> <li>Sensor output voltage is 4.6 V or more (corresponding to an engine coolant temperature of <math>-45^{\circ}\text{C}</math> or less) for 4 seconds.</li> </ul> <p>or</p> <ul style="list-style-type: none"> <li>Sensor output voltage is 0.1 V or less (corresponding to an engine coolant temperature of <math>140^{\circ}\text{C}</math> or more) for 4 seconds.</li> </ul> | <ul style="list-style-type: none"> <li>Malfunction of the engine coolant temperature sensor</li> <li>Improper connector contact, open circuit or short-circuited harness wire of the engine coolant temperature sensor circuit</li> <li>Malfunction of the engine-ECU</li> </ul> |
| <p>Range of Check</p> <ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>Engine speed is approx. 50 r/min or more</li> </ul> <p>Set conditions</p> <ul style="list-style-type: none"> <li>The sensor output voltage increases from 1.6 V or less (corresponding to an engine coolant temperature of <math>40^{\circ}\text{C}</math> or more) to 1.6 V or more (corresponding to an engine coolant temperature of <math>40^{\circ}\text{C}</math> or less).</li> <li>After this, the sensor output voltage is 1.6 V or more for 5 minutes.</li> </ul>                                                                                 |                                                                                                                                                                                                                                                                                  |

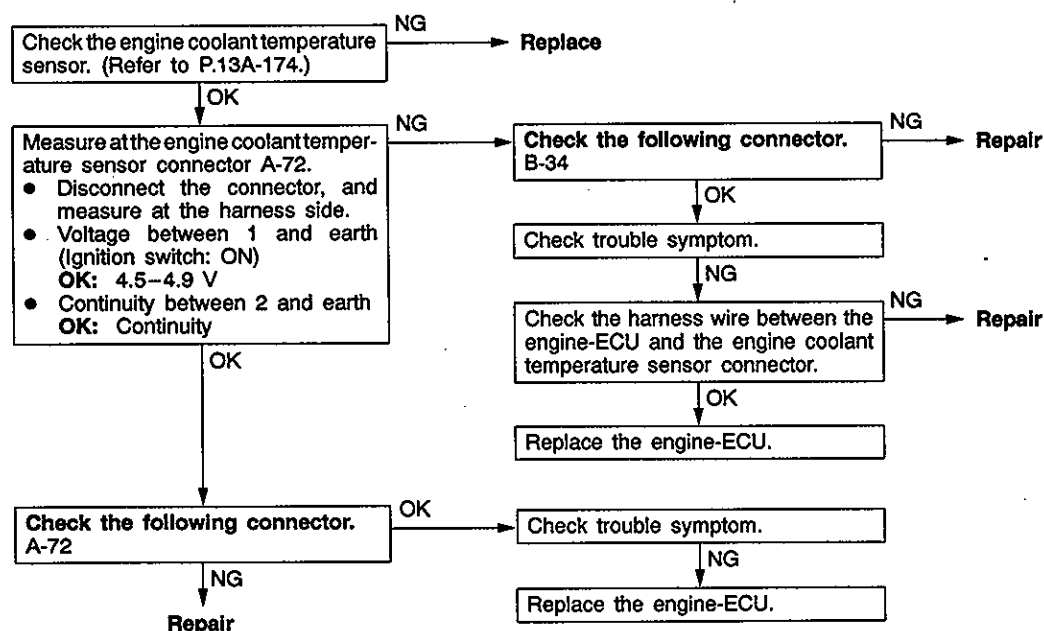


| Code No. 22 Crank angle sensor system                                                                                                       | Probable cause                                                                                                                                                                     |
|---------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Range of Check<br>• Engine is cranking.<br>Set conditions<br>• Sensor output voltage does not change for 4 seconds (no pulse signal input.) | • Malfunction of the crank angle sensor<br>• Improper connector contact, open circuit or short-circuited harness wire of the crank angle sensor<br>• Malfunction of the engine-ECU |

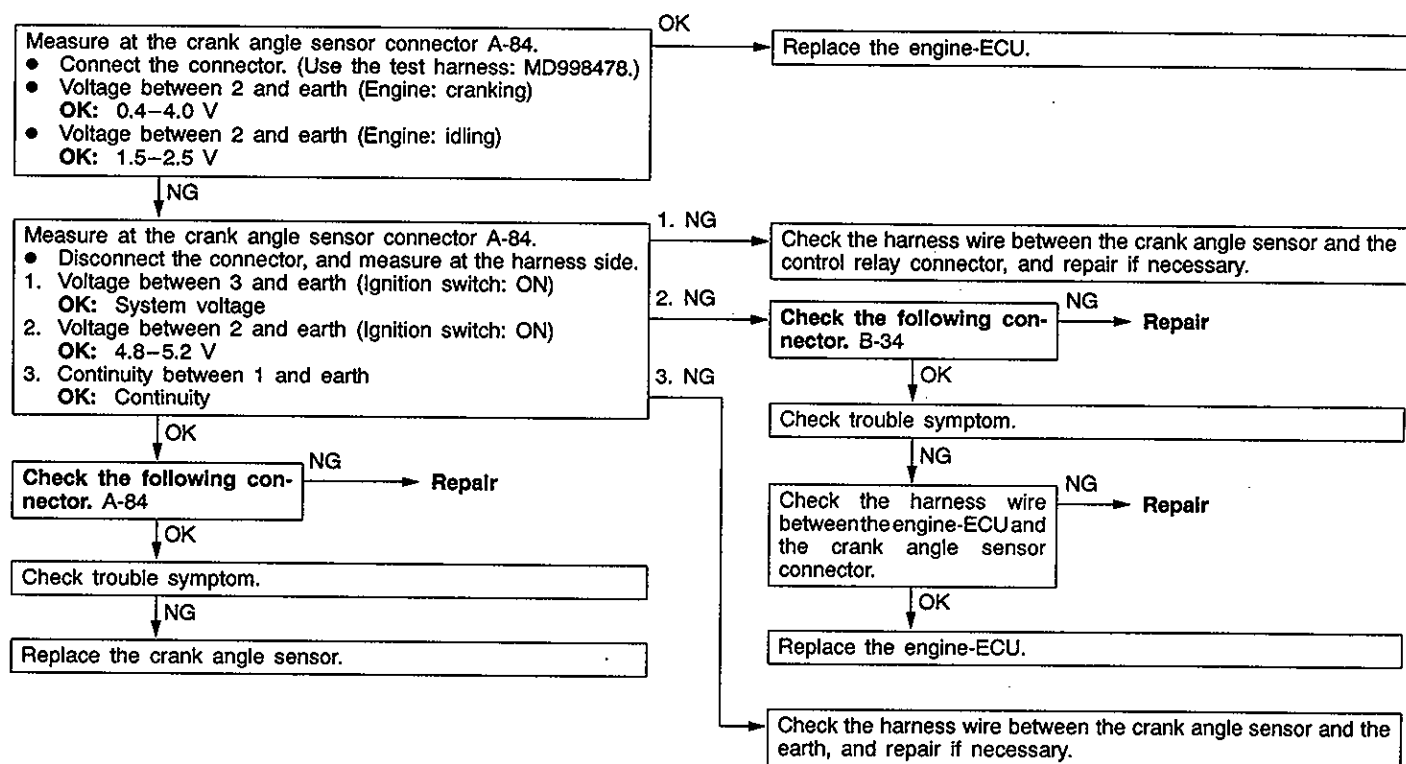


| Code No. 23 Camshaft position sensor system                                                                                                                                                              | Probable cause                                                                                                                                                                                         |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Range of Check</b><br>• Ignition switch: ON<br>• Engine speed is approx. 50 r/min or more.<br><b>Set conditions</b><br>• Sensor output voltage does not change for 4 seconds (no pulse signal input.) | • Malfunction of the camshaft position sensor<br>• Improper connector contact, open circuit or short-circuited harness wire of the camshaft position sensor circuit<br>• Malfunction of the engine-ECU |

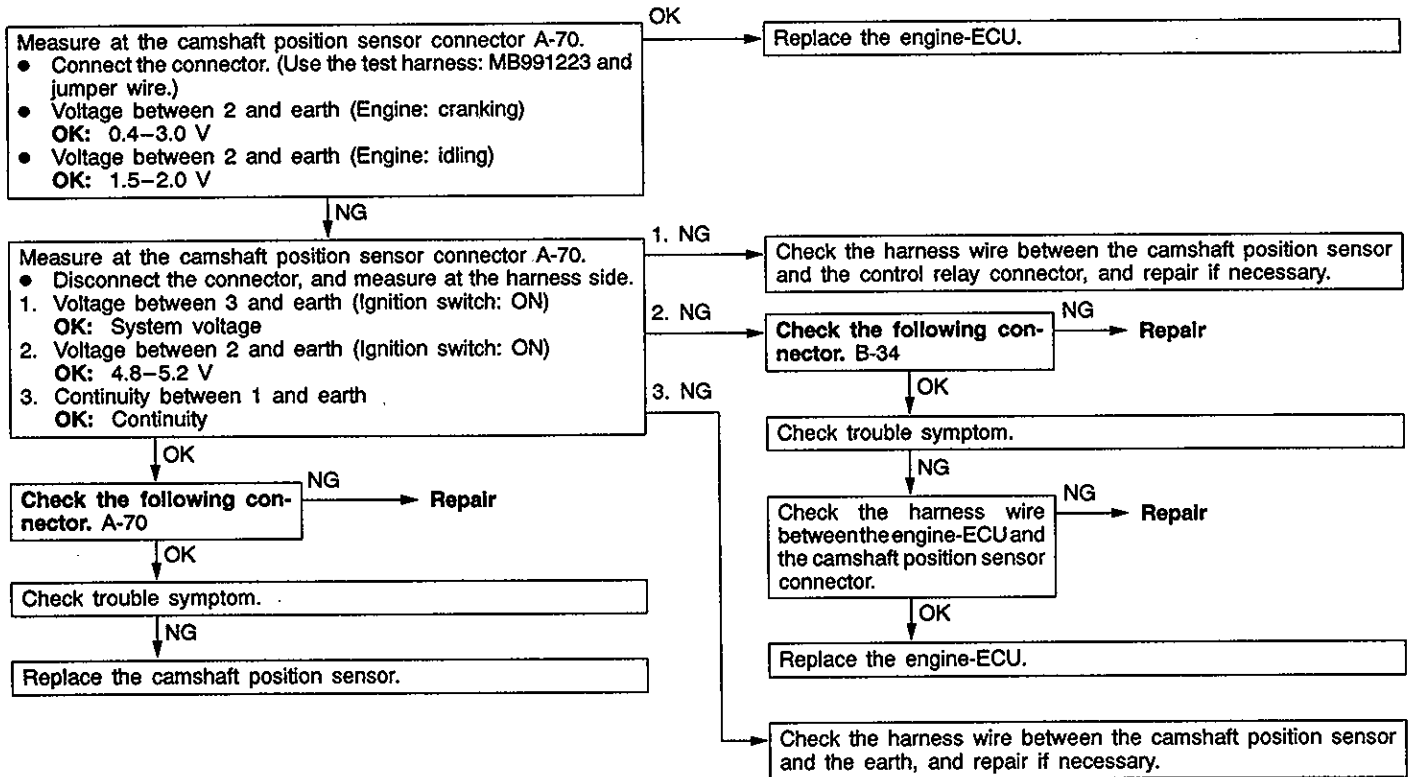


| Code No. 24 Vehicles speed sensor system                                                                                                                                                                                                                                                                                                                                                                                                                                                | Probable cause                                                                                                                                                                                                                                         |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Range of check <ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>Excluding 60 seconds after the ignition switch is turned to ON or immediately after the engine starts.</li> <li>Idle position switch: OFF</li> <li>Engine speed is 3,000 r/min or more.</li> <li>Driving under high engine load conditions.</li> </ul> Set conditions <ul style="list-style-type: none"> <li>Sensor output voltage does not change for 4 seconds (no pulse signal input).</li> </ul> | <ul style="list-style-type: none"> <li>Malfunction of the vehicle speed sensor</li> <li>Improper connector contact, open circuit or short-circuited harness wire of the vehicle speed sensor circuit</li> <li>Malfunction of the engine-ECU</li> </ul> |

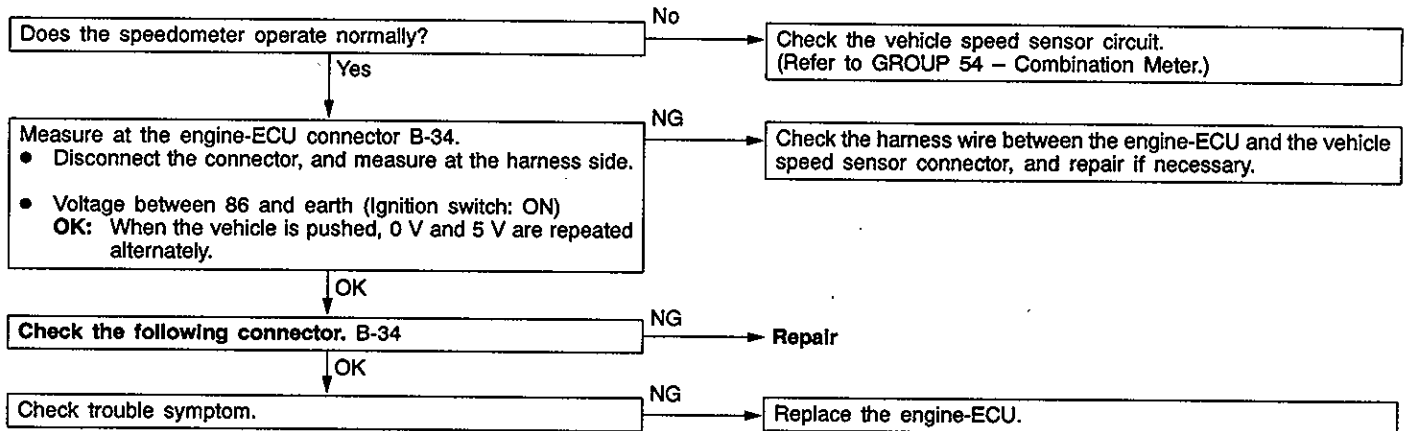


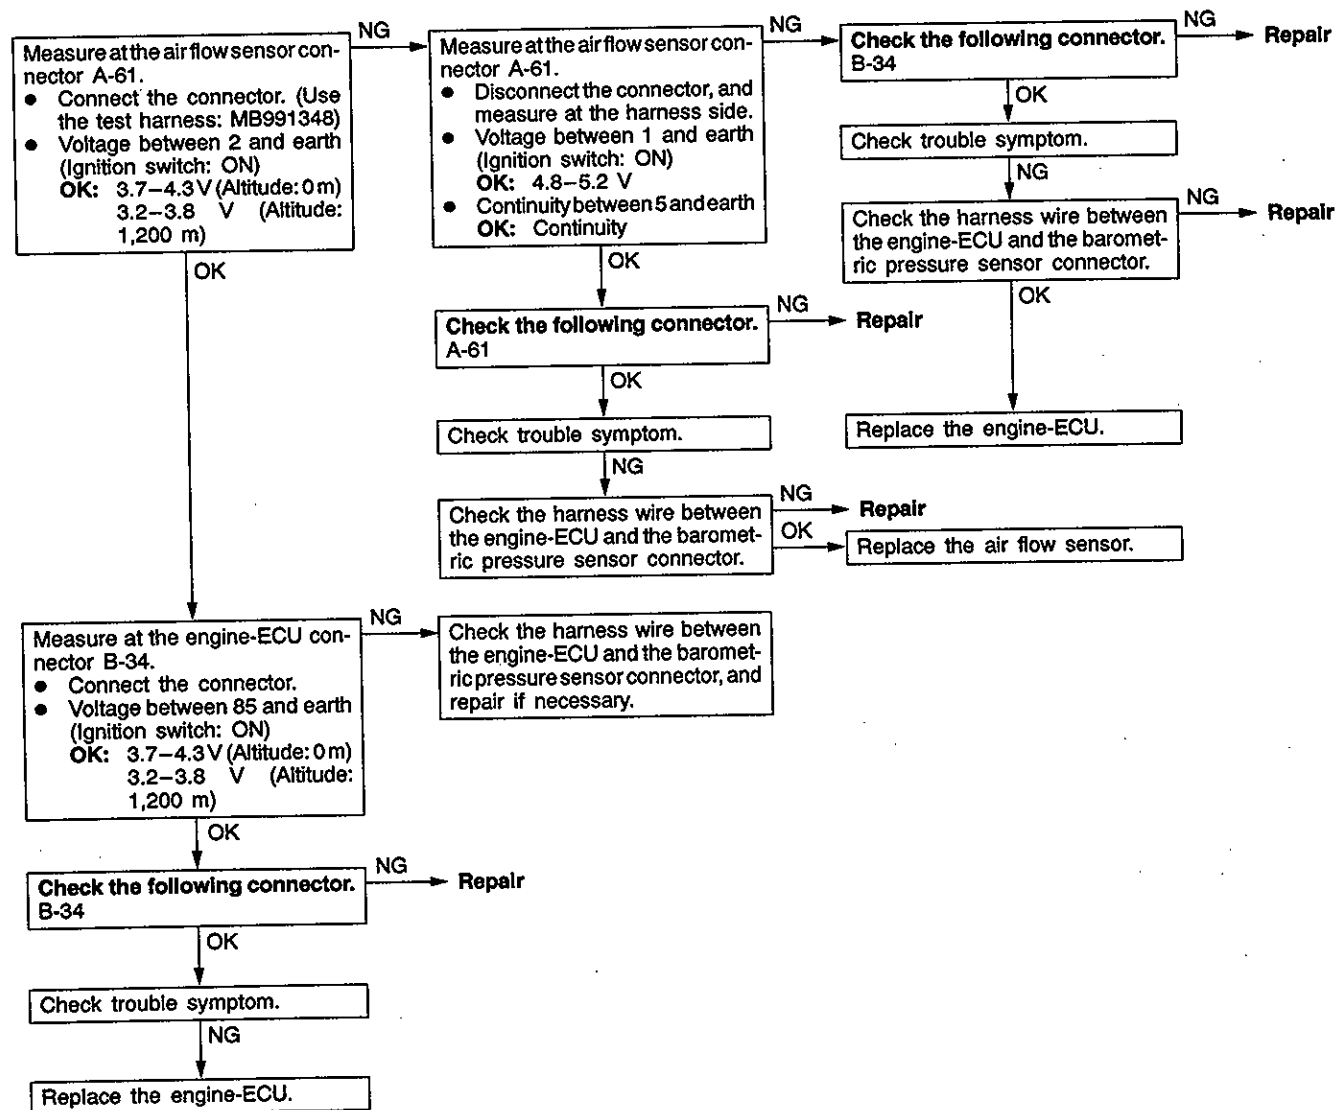


| Code No. 31 Detonation sensor system                                                                                                                                                                                                                                                                                                                                                                                                                                        | Probable cause                                                                                                                                                                                                                                   |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Range of Check</p> <ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>Excluding 60 seconds after the ignition switch is turned to ON or immediately after the engine starts.</li> <li>Engine speed is approx. 5,000 r/min or more</li> </ul> <p>Set conditions</p> <p>The change in the detonation sensor output voltage (detonation sensor peak voltage at each 1/2 revolution of the crankshaft) is less than 0.06 V for 200 times in succession.</p> | <ul style="list-style-type: none"> <li>Malfunction of the detonation sensor</li> <li>Improper connector contact, open circuit or short-circuited harness wire of the detonation sensor circuit</li> <li>Malfunction of the engine-ECU</li> </ul> |

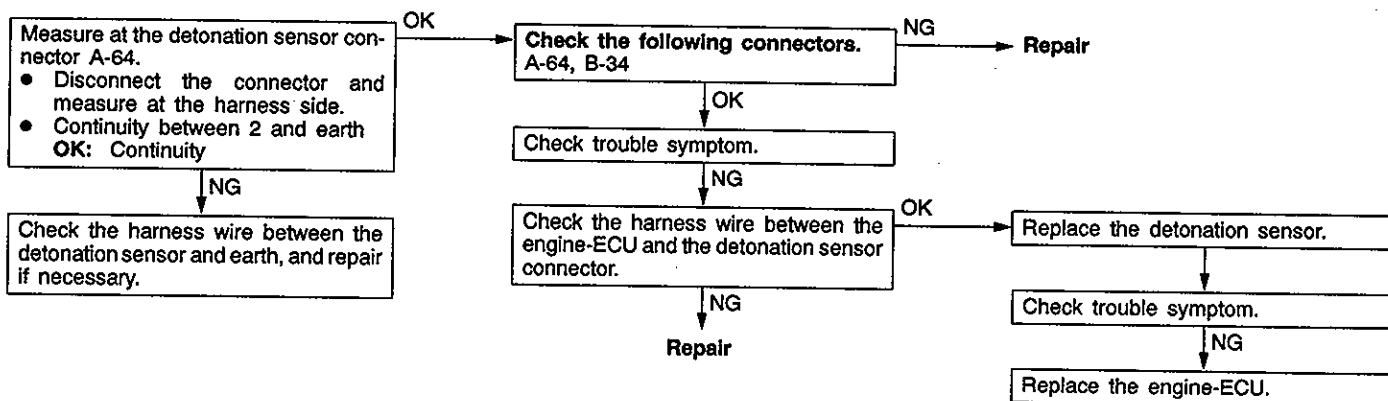

| Code No. 41 Injector system                                                                                                                                                                                                                                                                                                                                                       | Probable cause                                                                                                                                                                                                                 |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Range of Check</p> <ul style="list-style-type: none"> <li>Engine speed is approx. 50–1,000 r/min</li> <li>The throttle position sensor output voltage is 1.15 V or less.</li> <li>Actuator test by MUT-II is not carried out.</li> </ul> <p>Set conditions</p> <ul style="list-style-type: none"> <li>Surge voltage of injector coil is not detected for 4 seconds.</li> </ul> | <ul style="list-style-type: none"> <li>Malfunction of the injector</li> <li>Improper connector contact, open circuit or short-circuited harness wire of the injector circuit</li> <li>Malfunction of the engine-ECU</li> </ul> |

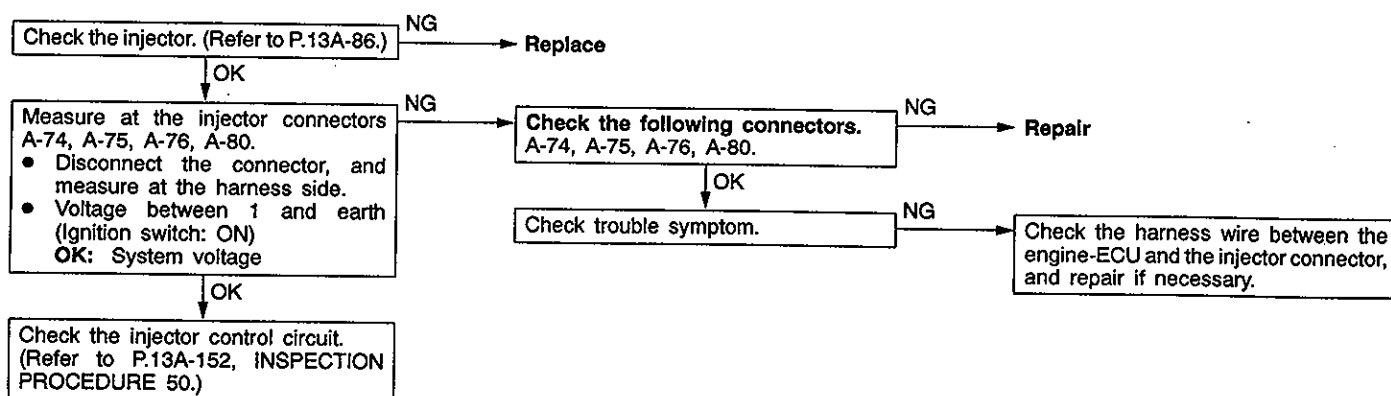


| Code No. 44 Ignition coil and power transistor unit system                                                                                                                                                                                                                                                                      | Probable cause                                                                                                                                                                                                                              |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>Range of Check</p> <ul style="list-style-type: none"> <li>Engine speed is approx. 50–4,000 r/min</li> <li>Engine is not cranking.</li> </ul> <p>Set conditions</p> <ul style="list-style-type: none"> <li>The crank angle sensor detects an abnormal engine speed caused by misfire (one of the two coils fails).</li> </ul> | <ul style="list-style-type: none"> <li>Malfunction of the ignition coil</li> <li>Improper connector contact, open circuit or short-circuited harness wire of the ignition primary circuit</li> <li>Malfunction of the engine-ECU</li> </ul> |

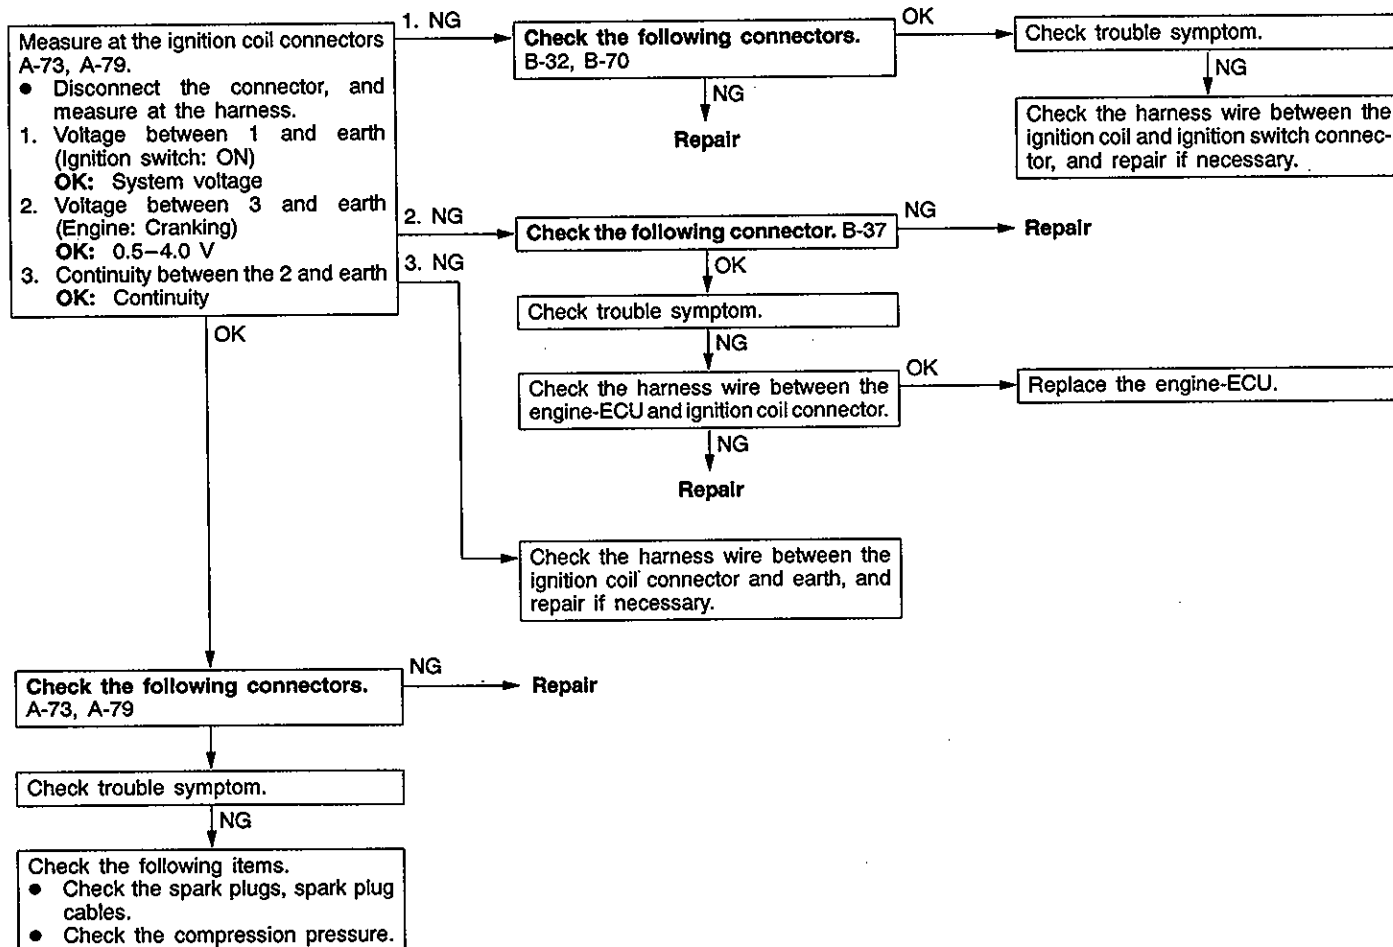


| Code No.54 Immobilizer system                                                                                                    | Probable cause                                                                                                                                                      |
|----------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Range of Check<br>• Ignition switch: ON<br>Set Conditions<br>• Improper communication between the engine-ECU and immobilizer-ECU | • Radio interference of ID codes<br>• Incorrect ID code<br>• Malfunction of harness or connector<br>• Malfunction of immobilizer-ECU<br>• Malfunction of engine-ECU |

## NOTE


- (1) If the ignition switches are close each other when starting the engine, radio interference may cause this code to be displayed.
- (2) This code may be displayed when registering the key ID code.

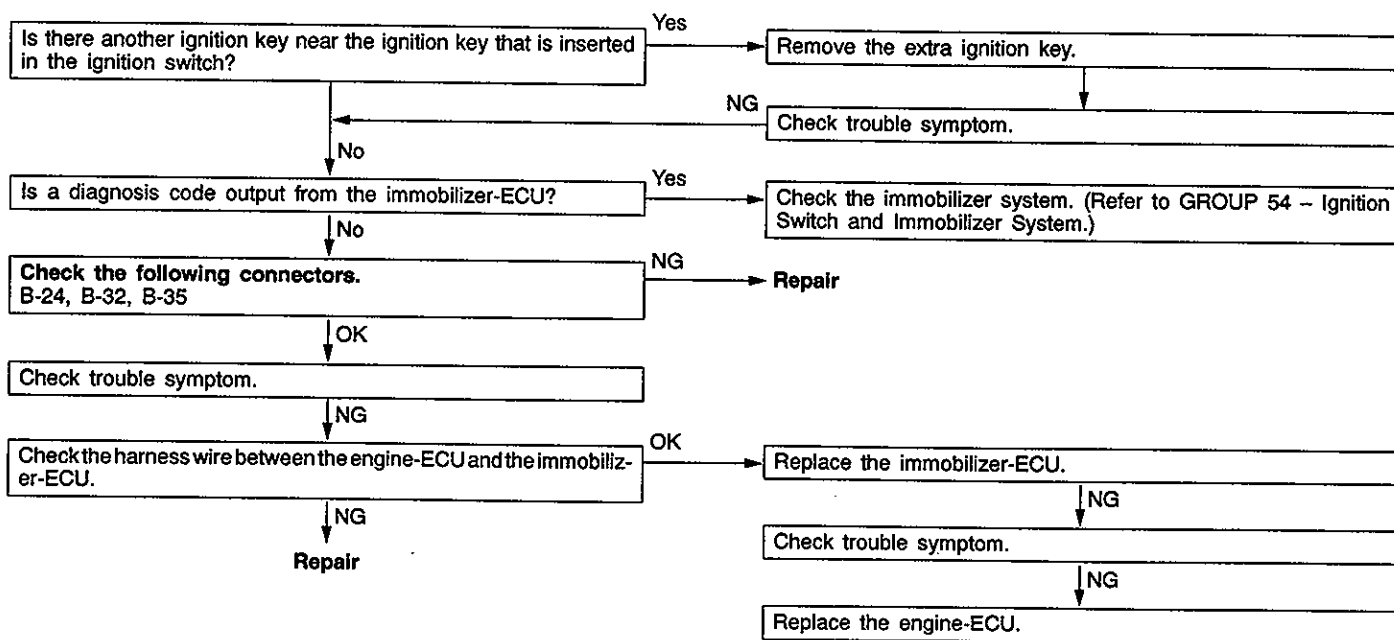

| Code No. 61 Communication wire with A/T-ECU system <A/T>                                                                                                                                                                                                        | Probable cause                                                                                                         |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| Range of Check<br>• 60 seconds or more have passed immediately after engine was started.<br>• Engine speed is approx. 50 r/min or more<br>Set conditions<br>The voltage of the torque reduction request signal from the A/T-ECU is LOW for 1.5 seconds or more. | • Malfunction of the harness wire and the connector<br>• Malfunction of the engine-ECU<br>• Malfunction of the A/T-ECU |

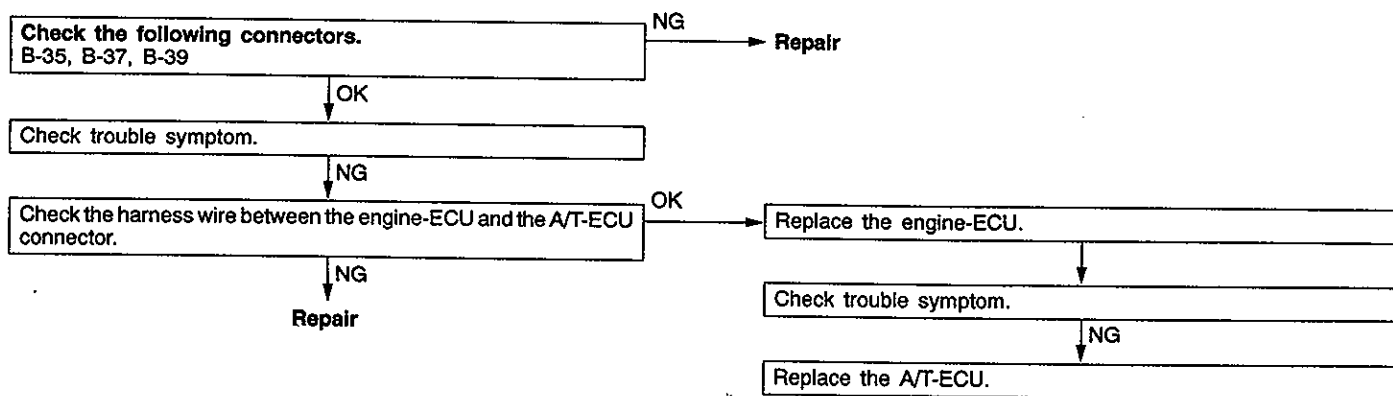

| Code No. 64 Alternator FR Terminal System                                                                                                            | Probable cause                                                                      |
|------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Range of Check, Set Conditions<br>• The alternator FR terminal signal voltage remains high for approximately 20 seconds while the engine is running. | • Open circuit in alternator FR terminal circuit<br>• Malfunction of the engine-ECU |

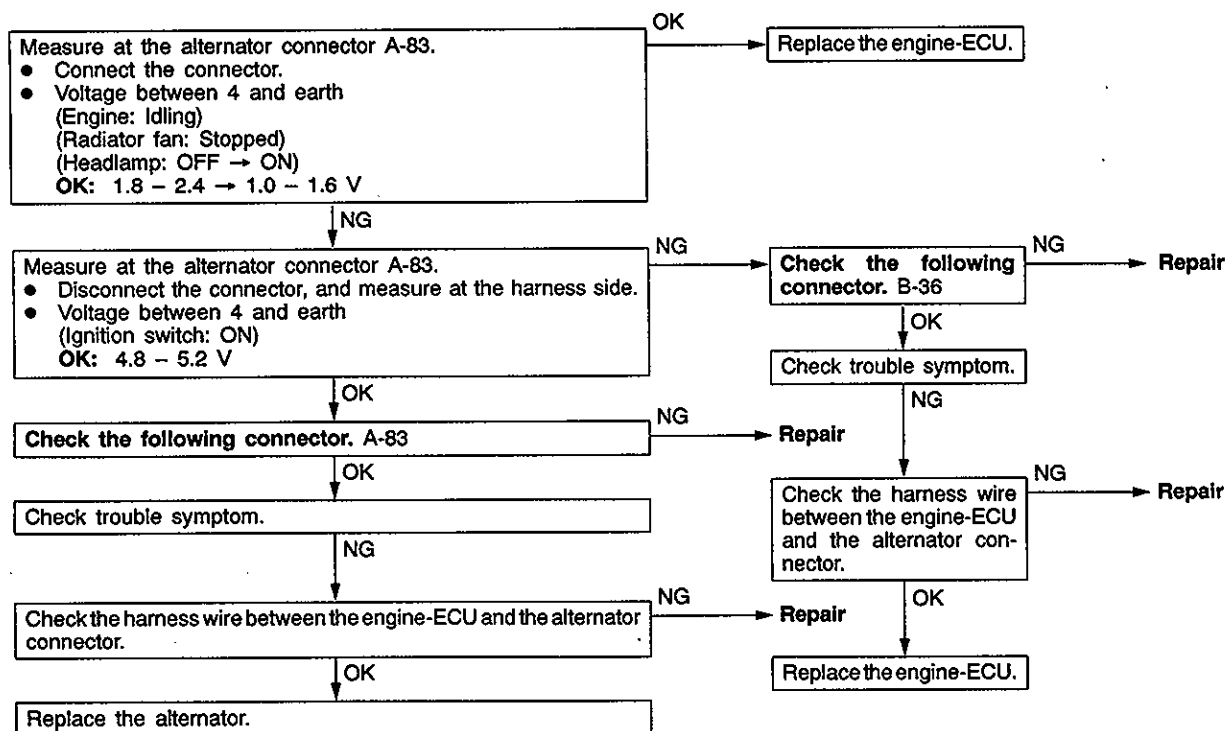

## INSPECTION CHART FOR TROUBLE SYMPTOMS

13100880132


| Trouble symptom                                |                                                                                                           | Inspection procedure No. | Reference page |
|------------------------------------------------|-----------------------------------------------------------------------------------------------------------|--------------------------|----------------|
| Communication with MUT-II is impossible.       | Communication with all systems is not possible.                                                           | 1                        | 13A-119        |
|                                                | Communication with engine-ECU only is not possible.                                                       | 2                        | 13A-120        |
| Engine warning lamp and related parts          | The engine warning lamp does not illuminate right after the ignition switch is turned to the ON position. | 3                        | 13A-121        |
|                                                | The engine warning lamp remains illuminating and never goes out.                                          | 4                        | 13A-121        |
| Starting                                       | No initial combustion (starting impossible)                                                               | 5                        | 13A-122        |
|                                                | Initial combustion but no complete combustion (starting impossible)                                       | 6                        | 13A-123        |
|                                                | Long time to start (improper starting)                                                                    | 7                        | 13A-124        |
| Idling stability (Improper idling)             | Unstable idling (Rough idling, hunting)                                                                   | 8                        | 13A-125        |
|                                                | Idling speed is high. (Improper idling speed)                                                             | 9                        | 13A-126        |
|                                                | Idling speed is low. (Improper idling speed)                                                              | 10                       | 13A-127        |
| Idling stability (Engine stalls)               | When the engine is cold, it stalls at idling. (Die out)                                                   | 11                       | 13A-128        |
|                                                | When the engine becomes hot, it stalls at idling. (Die out)                                               | 12                       | 13A-129        |
|                                                | The engine stalls when starting the car. (Pass out)                                                       | 13                       | 13A-130        |
|                                                | The engine stalls when decelerating.                                                                      | 14                       | 13A-130        |
| Driving                                        | Hesitation, sag or stumble                                                                                | 15                       | 13A-131        |
|                                                | The feeling of impact or vibration when accelerating                                                      | 16                       | 13A-131        |
|                                                | The feeling of impact or vibration when decelerating                                                      | 17                       | 13A-132        |
|                                                | Poor acceleration                                                                                         | 18                       | 13A-132        |
|                                                | Surge                                                                                                     | 19                       | 13A-133        |
|                                                | Knocking                                                                                                  | 20                       | 13A-133        |
| Dieseling                                      |                                                                                                           | 21                       | 13A-133        |
| Too high CO and HC concentration when idling   |                                                                                                           | 22                       | 13A-134        |
| Low alternator output voltage (approx. 12.3 V) |                                                                                                           | 23                       | 13A-135        |

## PROBLEM SYMPTOMS TABLE (FOR YOUR INFORMATION)

Refer to P.13A-24.

**INSPECTION PROCEDURE FOR TROUBLE SYMPTOMS****INSPECTION PROCEDURE 1**


| Communication with MUT-II is not possible.<br>(Communication with all systems is not possible.)     | Probable cause                                                                                                              |
|-----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| The cause is probably a defect in the power supply system (including earth) for the diagnosis line. | <ul style="list-style-type: none"> <li>• Malfunction of the connector</li> <li>• Malfunction of the harness wire</li> </ul> |

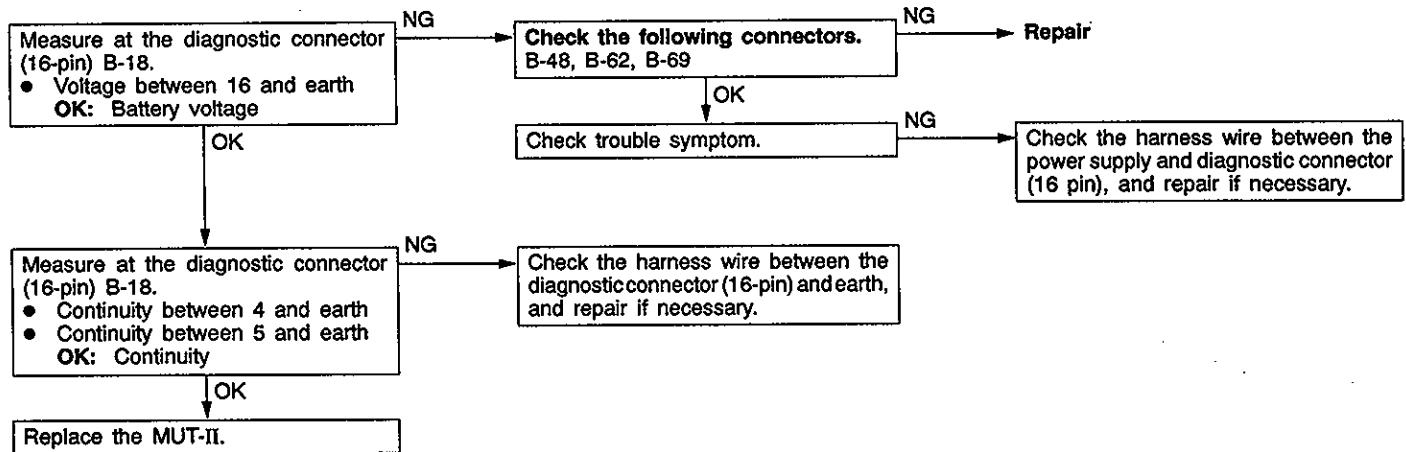


## INSPECTION PROCEDURE 2

| MUT-II communication with engine-ECU is impossible.                                                                                                                                                                                                                                      | Probable cause                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| One of the following causes may be suspected. <ul style="list-style-type: none"> <li>• No power supply to engine-ECU.</li> <li>• Defective earth circuit of engine-ECU.</li> <li>• Defective engine-ECU.</li> <li>• Improper communication line between engine-ECU and MUT-II</li> </ul> | <Vehicles without immobilizer system> <ul style="list-style-type: none"> <li>• Malfunction of engine-ECU power supply circuit</li> <li>• Malfunction of engine-ECU</li> <li>• Open circuit between engine-ECU and diagnosis connector</li> </ul> <Vehicles with immobilizer system> <ul style="list-style-type: none"> <li>• Malfunction of engine-ECU power supply circuit</li> <li>• Malfunction of engine-ECU</li> <li>• Malfunction of immobilizer-ECU</li> <li>• Open circuit between immobilizer-ECU and diagnosis connector</li> <li>• Open circuit between engine-ECU and immobilizer-ECU</li> </ul> |

## &lt;Vehicles without Immobilizer system&gt;

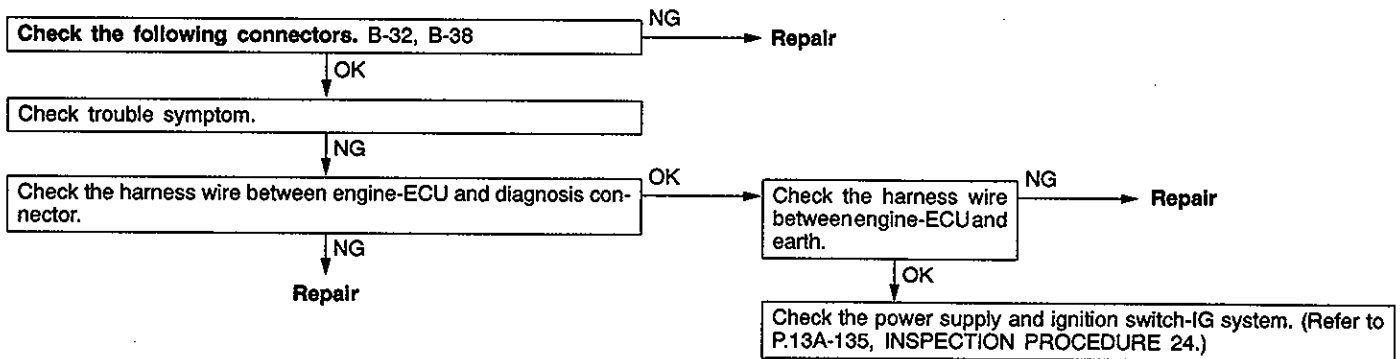


## &lt;Vehicles with Immobilizer system&gt;

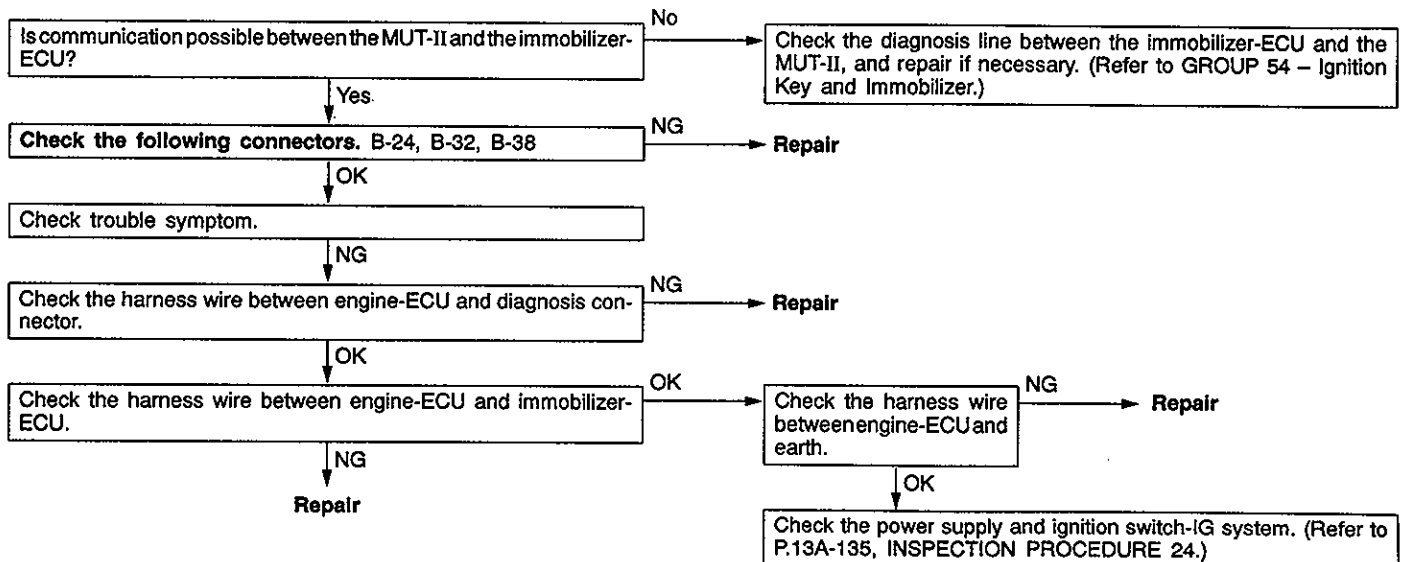


## INSPECTION PROCEDURE 3

| The engine warning lamp does not illuminate right after the ignition switch is turned to the ON position.                                                                                                                                                                                                                                   | Probable cause                                                                                                                                        |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| Because there is a burnt-out bulb, the engine-ECU causes the engine warning lamp to illuminate for five seconds immediately after the ignition switch is turned to ON. If the engine warning lamp does not illuminate immediately after the ignition switch is turned to ON, one of the malfunctions listed at right has probably occurred. | <ul style="list-style-type: none"> <li>• Burnt-out bulb</li> <li>• Defective warning lamp circuit</li> <li>• Malfunction of the engine-ECU</li> </ul> |

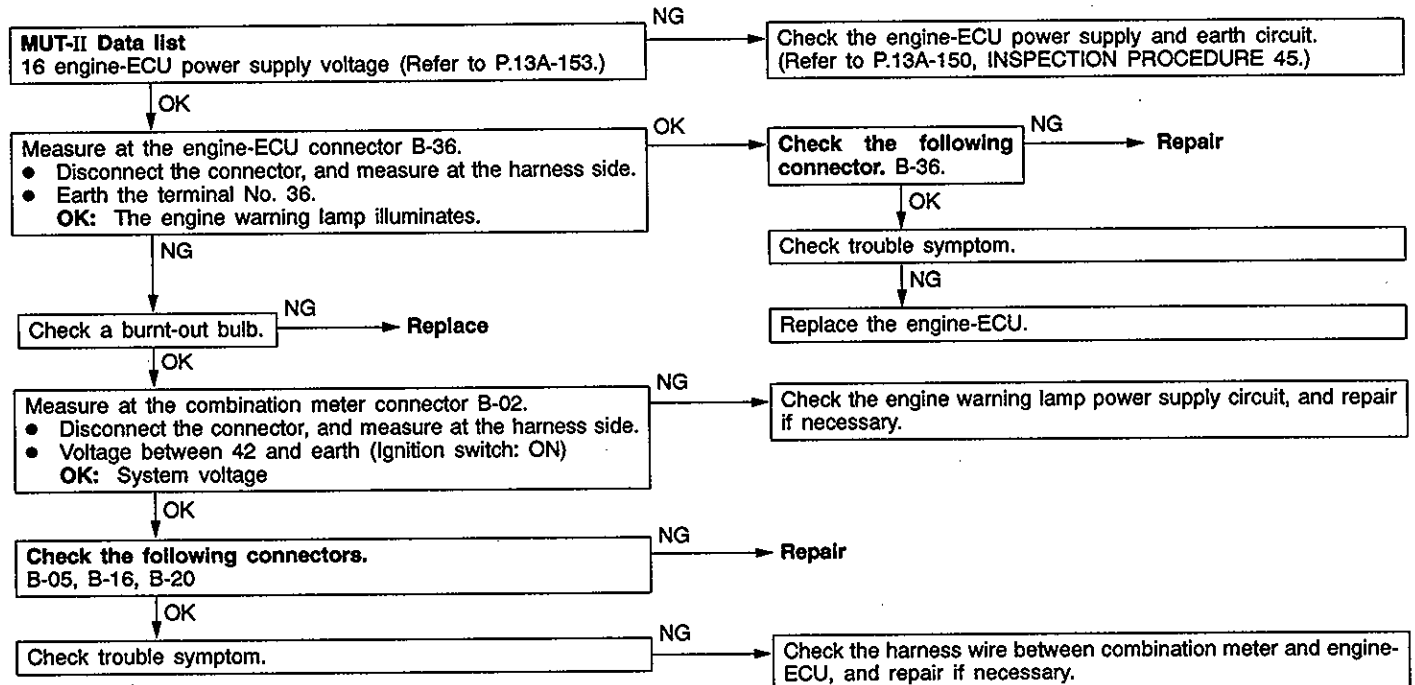


## INSPECTION PROCEDURE 4

| The engine warning lamp remains illuminating and never goes out.                                                                                                                    | Probable cause                                                                                                                                            |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| In cases such as the above, the cause is probably that the engine-ECU is detecting a problem in a sensor or actuator, or that one of the malfunctions listed at right has occurred. | <ul style="list-style-type: none"> <li>• Short-circuit between the engine warning lamp and engine-ECU</li> <li>• Malfunction of the engine-ECU</li> </ul> |

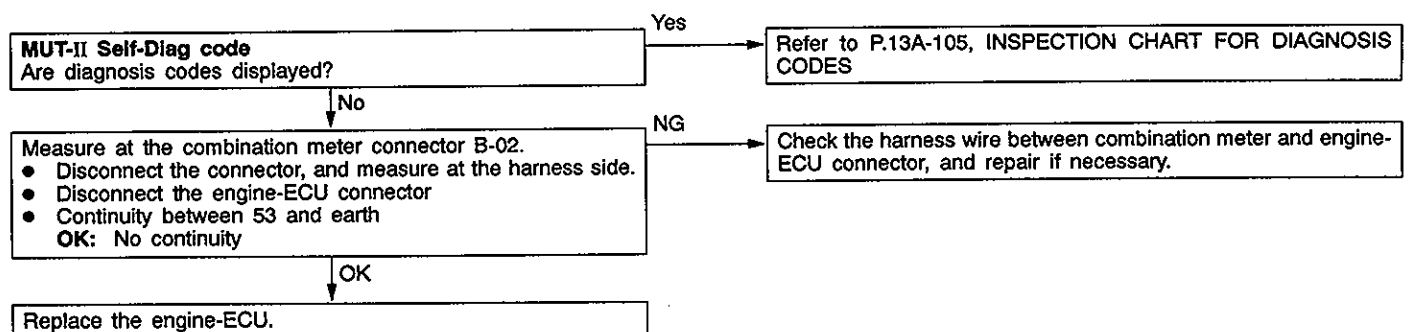


## INSPECTION PROCEDURE 5

| No initial combustion (starting impossible)                                                                                                                                                                                                           | Probable cause                                                                                                                                                                                                                                                                                                                                             |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>In cases such as the above, the cause is probably that a spark plug is defective, or that the supply of fuel to the combustion chamber is defective.</p> <p>In addition, foreign materials (water, kerosene, etc.) may be mixed with the fuel.</p> | <ul style="list-style-type: none"> <li>● Malfunction of the ignition system</li> <li>● Malfunction of the fuel pump system</li> <li>● Malfunction of the injectors</li> <li>● Malfunction of the engine-ECU</li> <li>● Malfunction of the immobilizer system &lt;only vehicles with immobilizer system&gt;</li> <li>● Foreign materials in fuel</li> </ul> |

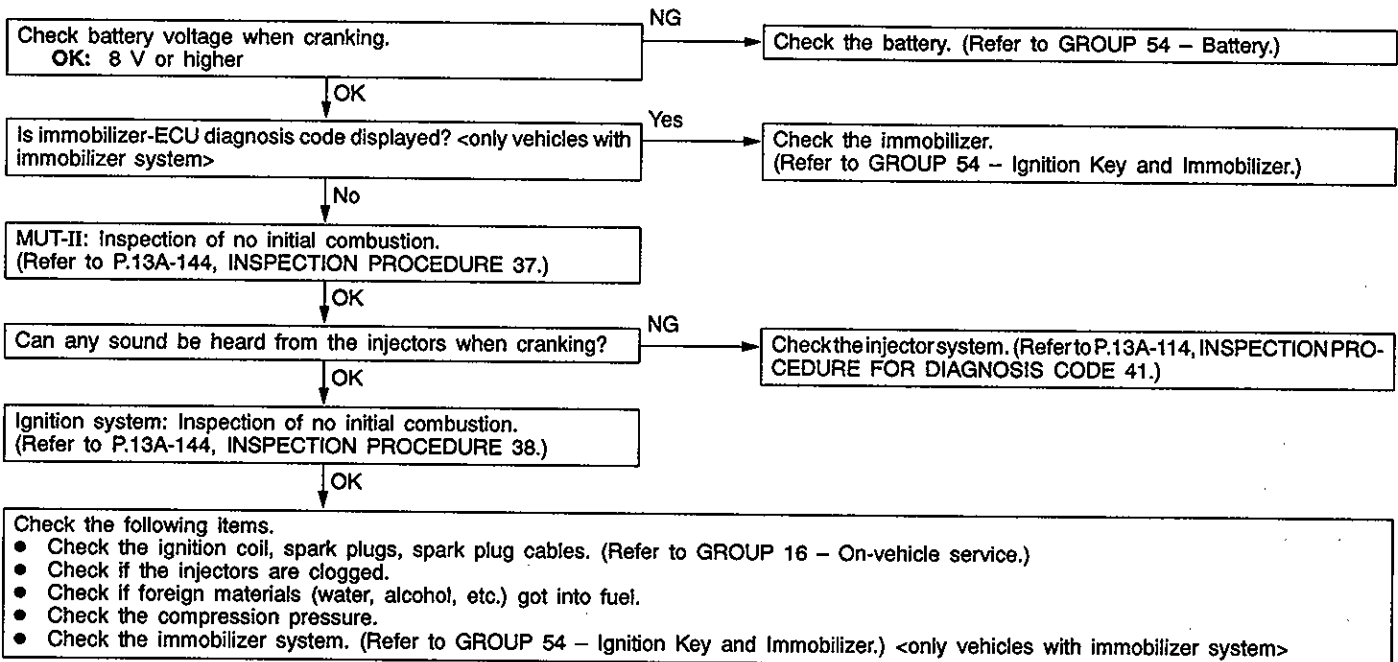


## INSPECTION PROCEDURE 6

| Initial combustion but no complete combustion<br>(starting impossible)                                                                                                        | Probable cause                                                                                                                                                                                                                                 |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| In such cases as the above, the cause is probably that the spark plugs are generating sparks but the sparks are weak, or the initial mixture for starting is not appropriate. | <ul style="list-style-type: none"> <li>• Malfunction of the ignition system</li> <li>• Malfunction of the injector system</li> <li>• Foreign materials in fuel</li> <li>• Poor compression</li> <li>• Malfunction of the engine-ECU</li> </ul> |

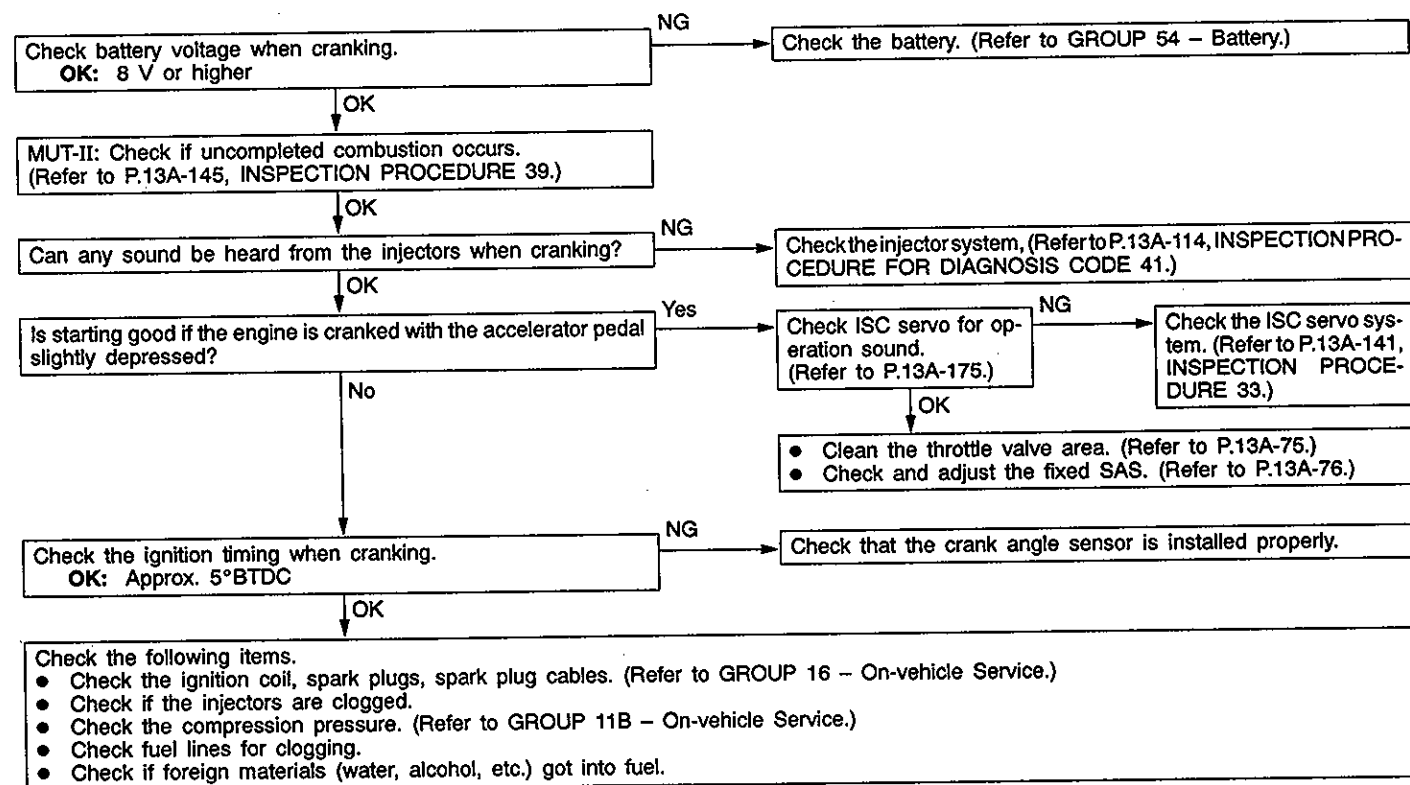


## INSPECTION PROCEDURE 7

| In takes too long time to start. (Incorrect starting)                                                                                                                                                              | Probable cause                                                                                                                                                                                         |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| In cases such as the above, the cause is probably that the spark is weak and ignition is difficult, the initial mixture for starting is not appropriate, or sufficient compression pressure is not being obtained. | <ul style="list-style-type: none"> <li>● Malfunction of the ignition system</li> <li>● Malfunction of the injector system</li> <li>● Inappropriate gasoline use</li> <li>● Poor compression</li> </ul> |

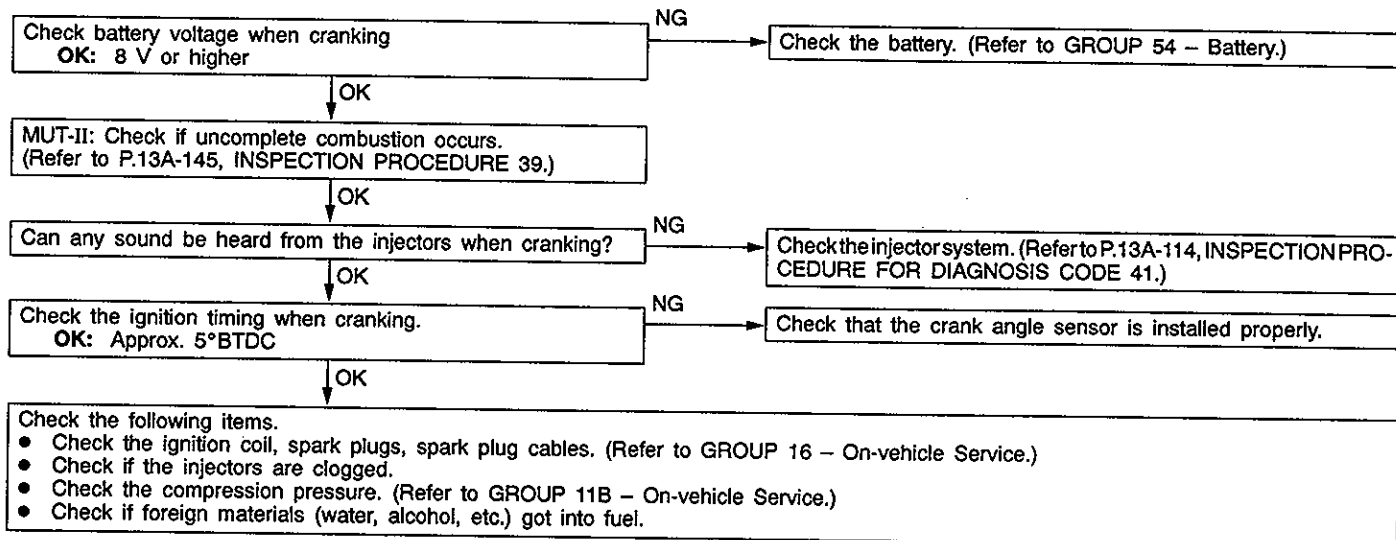


## INSPECTION PROCEDURE 8

| Unstable idling (Rough idling, hunting)                                                                                                                                                                                                             | Probable cause                                                                                                                                                                                                                                                                                                                                                                           |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| In cases as the above, the cause is probably that the ignition system, air/fuel mixture, idle speed control (ISC) or compression pressure is defective. Because the range of possible causes is broad, inspection is narrowed down to simple items. | <ul style="list-style-type: none"> <li>• Malfunction of the ignition system</li> <li>• Malfunction of air-fuel ratio control system</li> <li>• Malfunction of the ISC system</li> <li>• Malfunction of the purge control solenoid valve system</li> <li>• Malfunction of the EGR solenoid valve system</li> <li>• Poor compression</li> <li>• Drawing air into exhaust system</li> </ul> |

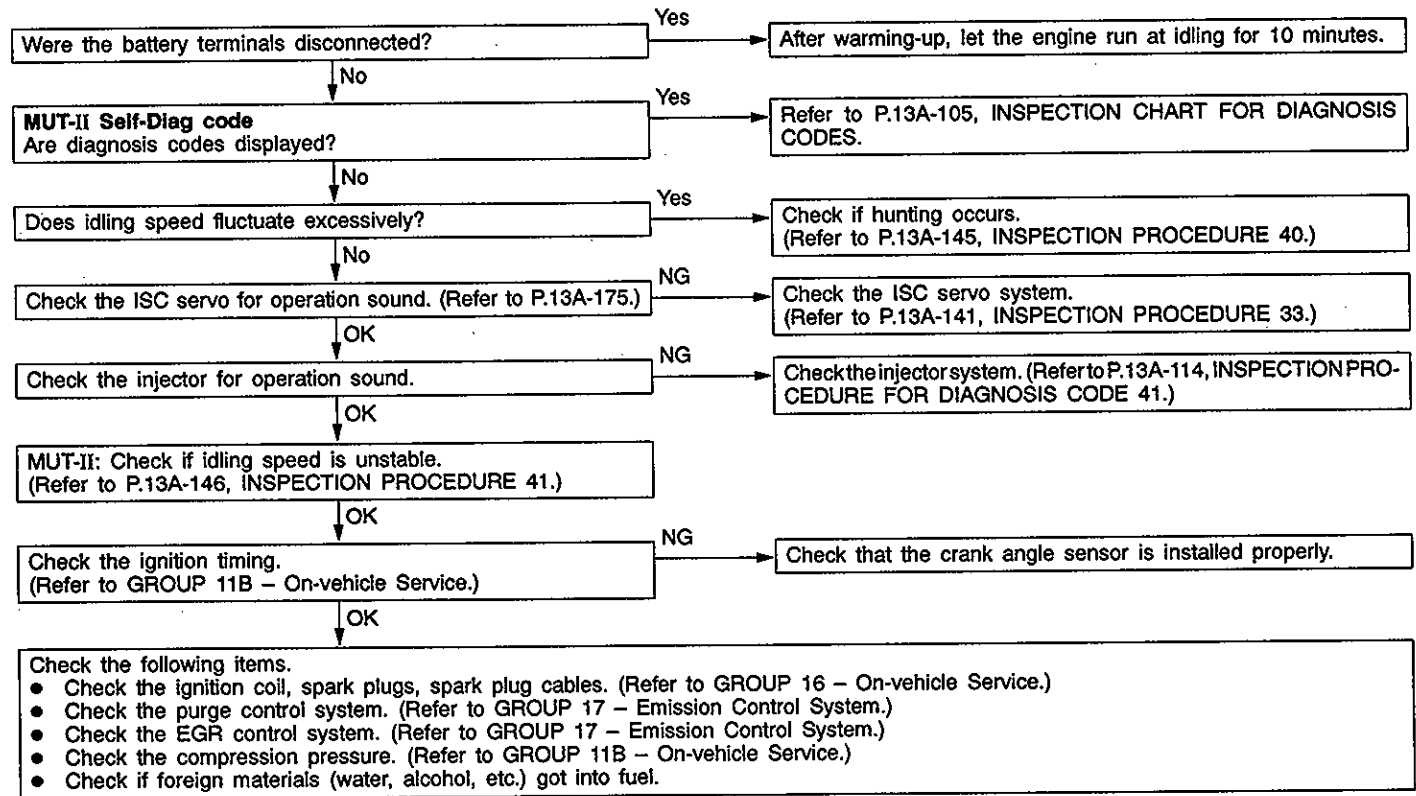


## INSPECTION PROCEDURE 9

| Idling speed is high. (Improper idling speed)                                                            | Probable cause                                                                                                                      |
|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| In such cases as the above, the cause is probably that the intake air volume during idling is too great. | <ul style="list-style-type: none"> <li>• Malfunction of the ISC servo system</li> <li>• Malfunction of the throttle body</li> </ul> |

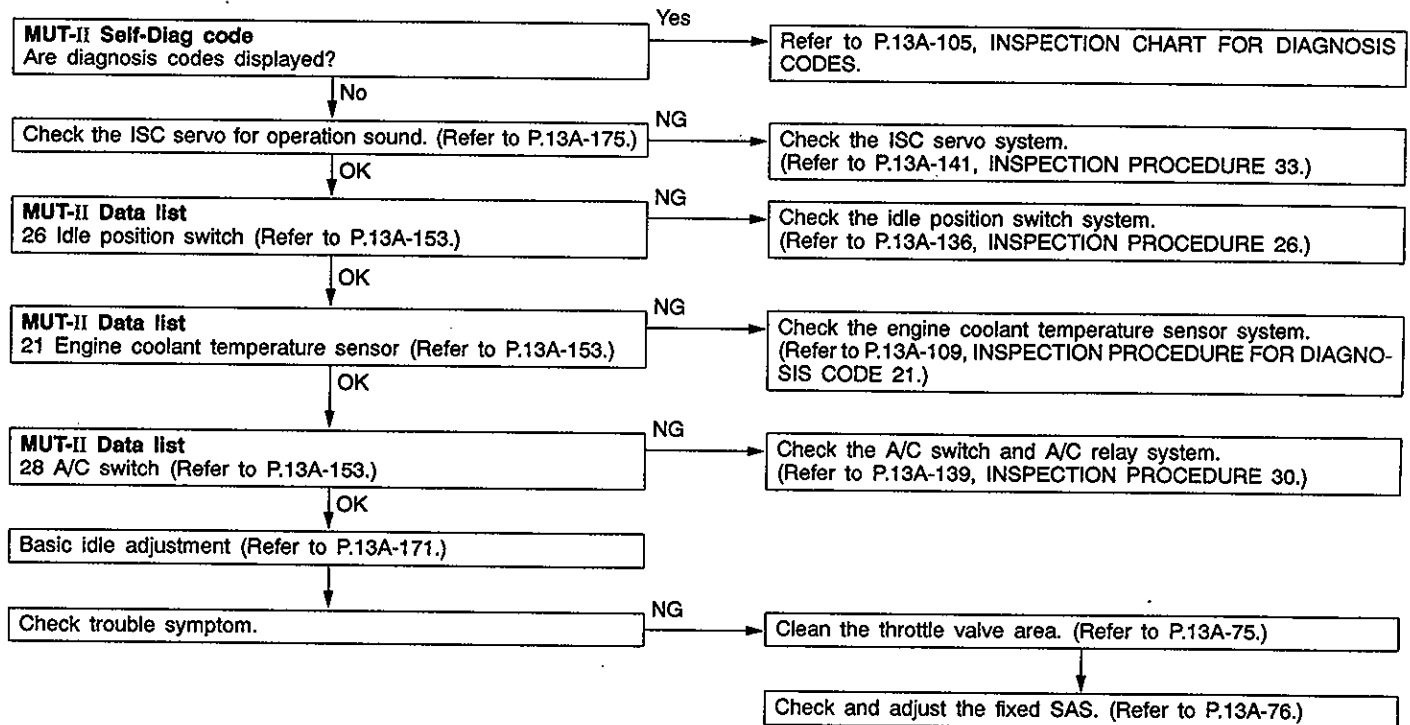


## INSPECTION PROCEDURE 10

| Idling speed is low. (Improper idling speed)                                                             | Probable cause                                                                                                                      |
|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| In cases such as the above, the cause is probably that the intake air volume during idling is too small. | <ul style="list-style-type: none"> <li>• Malfunction of the ISC servo system</li> <li>• Malfunction of the throttle body</li> </ul> |

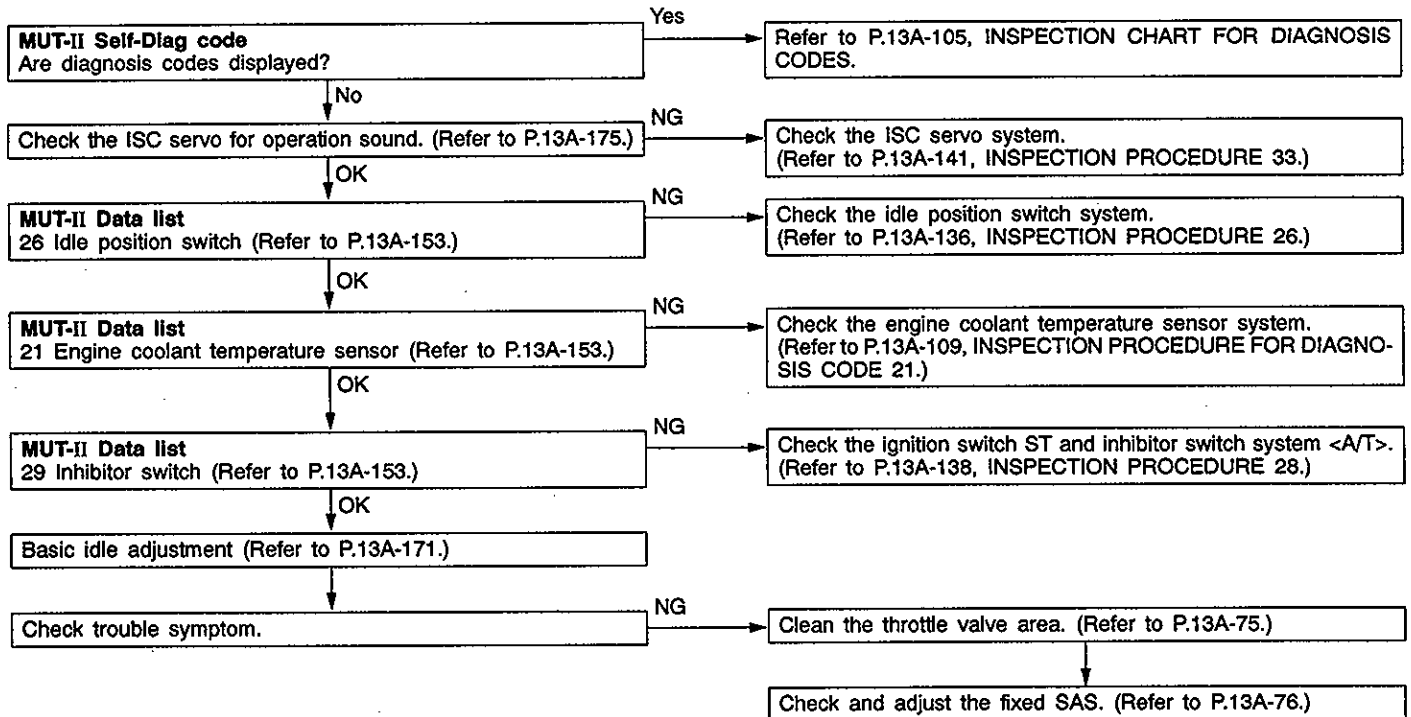


## INSPECTION PROCEDURE 11

| When the engine is cold, it stalls at idling. (Die out)                                                                                                              | Probable cause                                                                                                                                                                                                                  |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| In such cases as the above, the cause is probably that the air/fuel mixture is inappropriate when the engine is cold, or that the intake air volume is insufficient. | <ul style="list-style-type: none"> <li>• Malfunction of the ISC servo system</li> <li>• Malfunction of the throttle body</li> <li>• Malfunction of the injector system</li> <li>• Malfunction of the ignition system</li> </ul> |

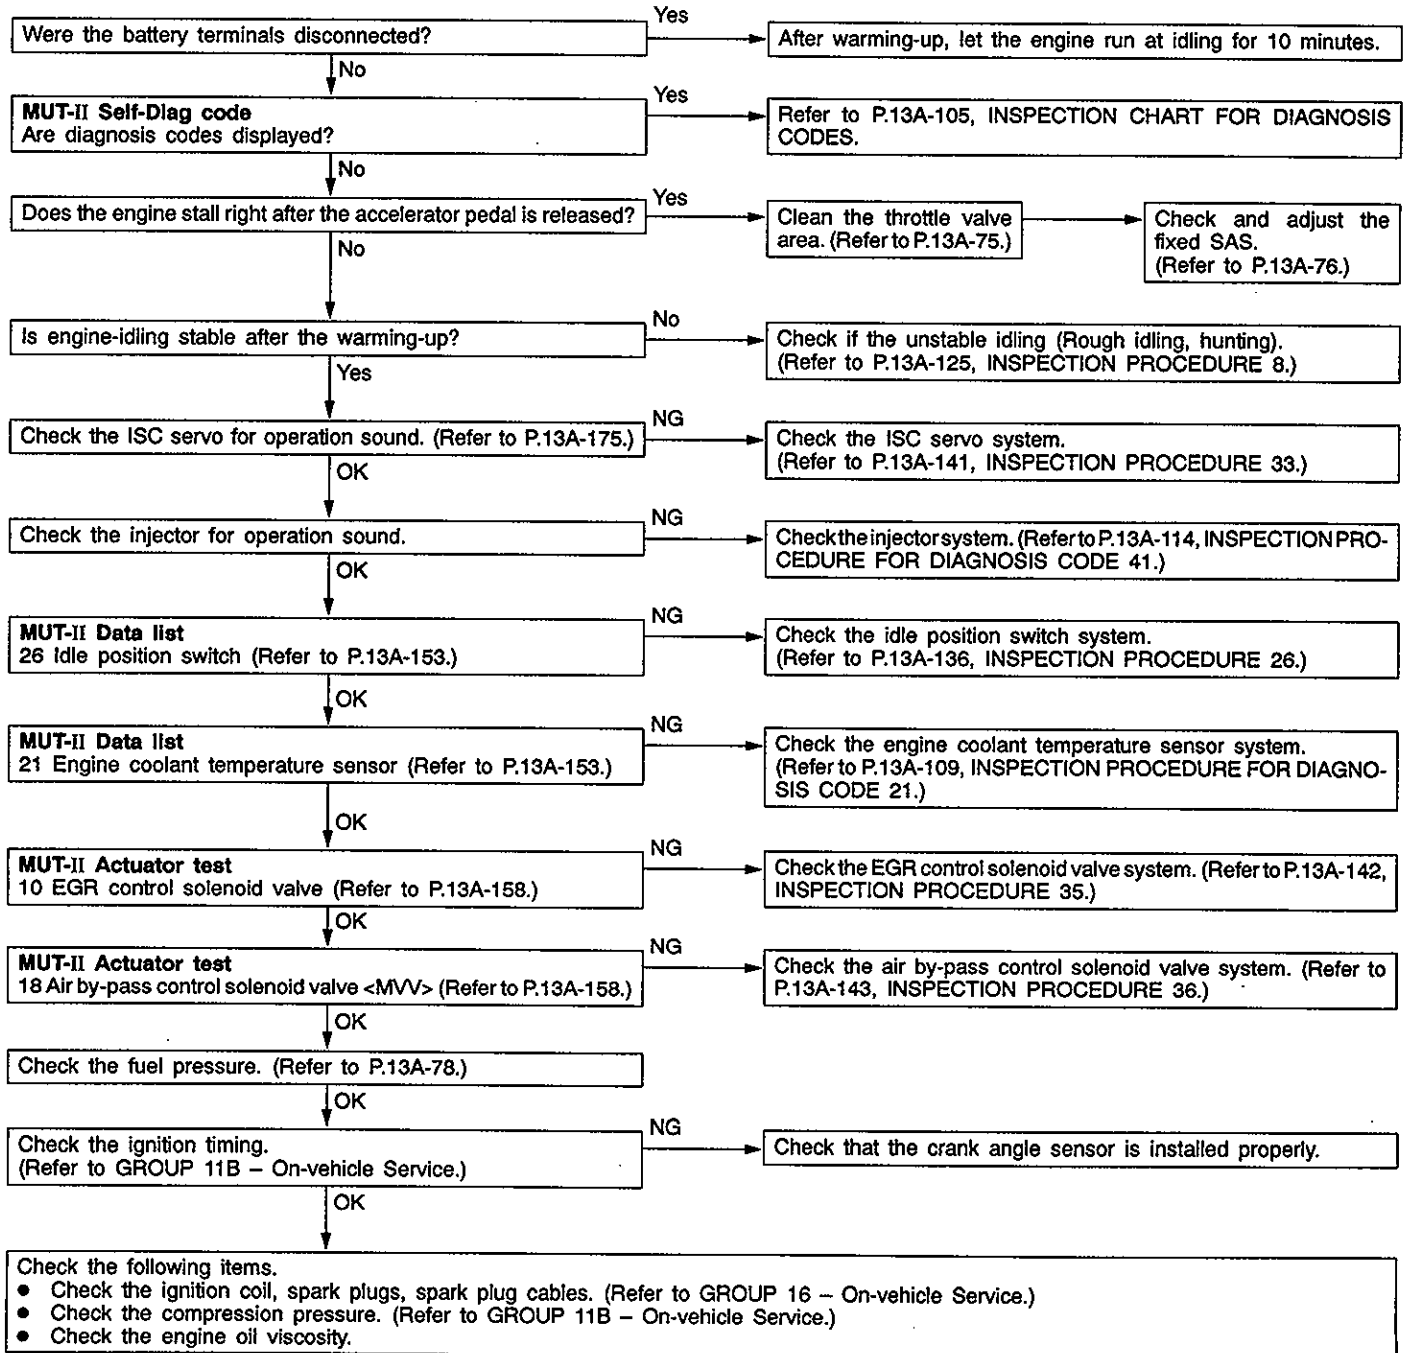


## INSPECTION PROCEDURE 12

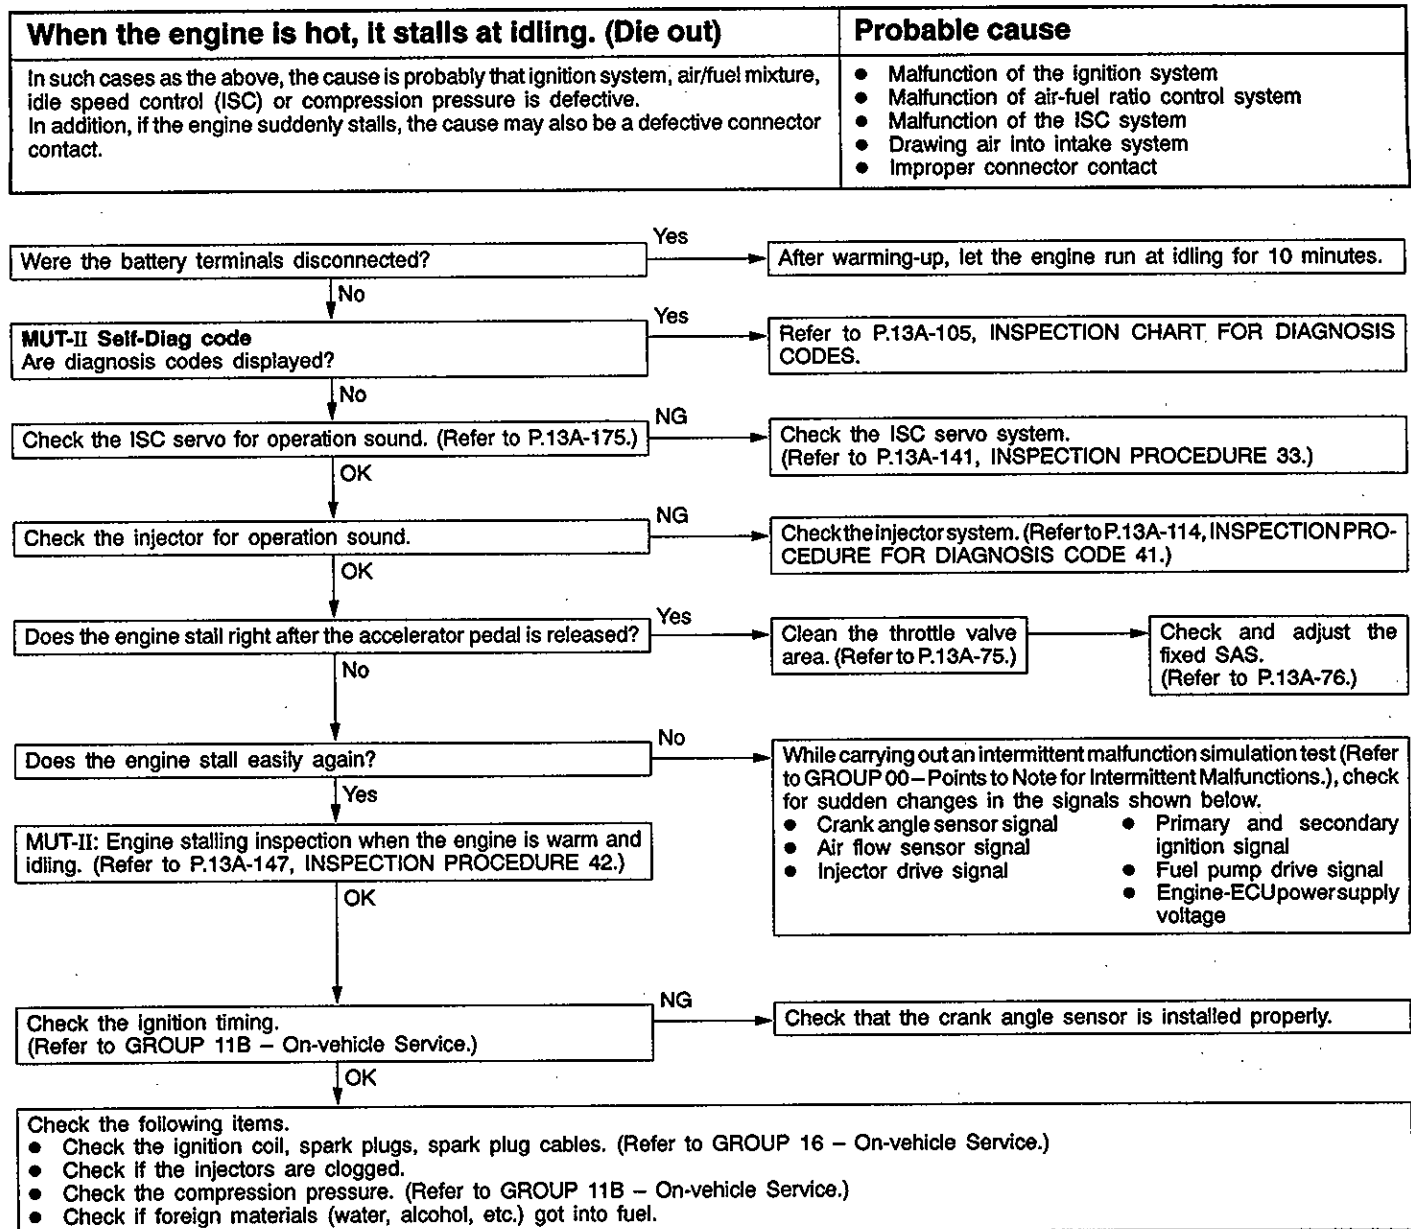


## INSPECTION PROCEDURE 13

| The engine stalls when starting the car. (Pass out)                                                                                                            | Probable cause                                                                                                                   |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| In cases such as the above, the cause is probably misfiring due to a weak spark, or an inappropriate air/fuel mixture when the accelerator pedal is depressed. | <ul style="list-style-type: none"> <li>• Drawing air into intake system</li> <li>• Malfunction of the ignition system</li> </ul> |

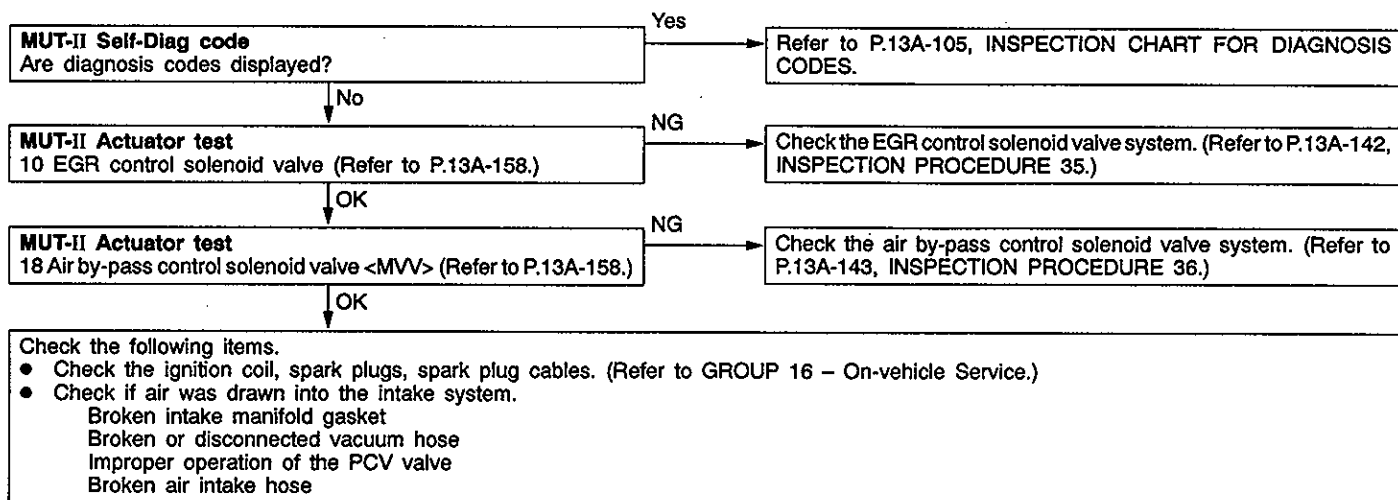


## INSPECTION PROCEDURE 14

| The engine stalls when decelerating.                                                                                                                   | Probable cause                                                                    |
|--------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| In cases such as the above, the cause is probably that the intake air volume is insufficient due to a defective idle speed control (ISC) servo system. | <ul style="list-style-type: none"> <li>• Malfunction of the ISC system</li> </ul> |

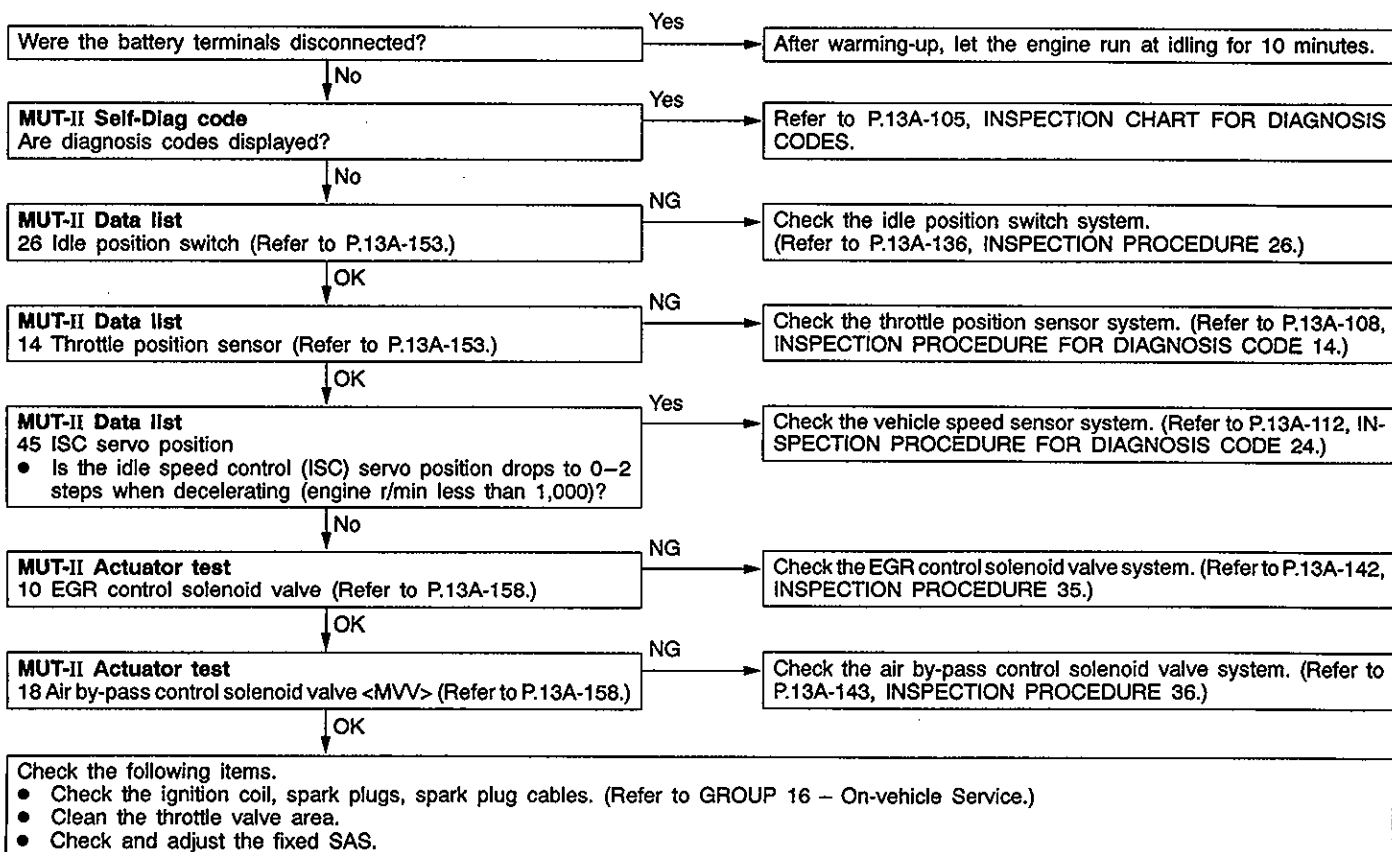


## INSPECTION PROCEDURE 15

| Hesitation, sag or stumble                                                                                                     | Probable cause                                                                                                                                                                                                                                                                              |
|--------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| In cases such as the above, the cause is probably that ignition system, air/fuel mixture or compression pressure is defective. | <ul style="list-style-type: none"> <li>• Malfunction of the ignition system</li> <li>• Malfunction of air-fuel ratio control system</li> <li>• Malfunction of the fuel supply system</li> <li>• Malfunction of the EGR control solenoid valve system</li> <li>• Poor compression</li> </ul> |

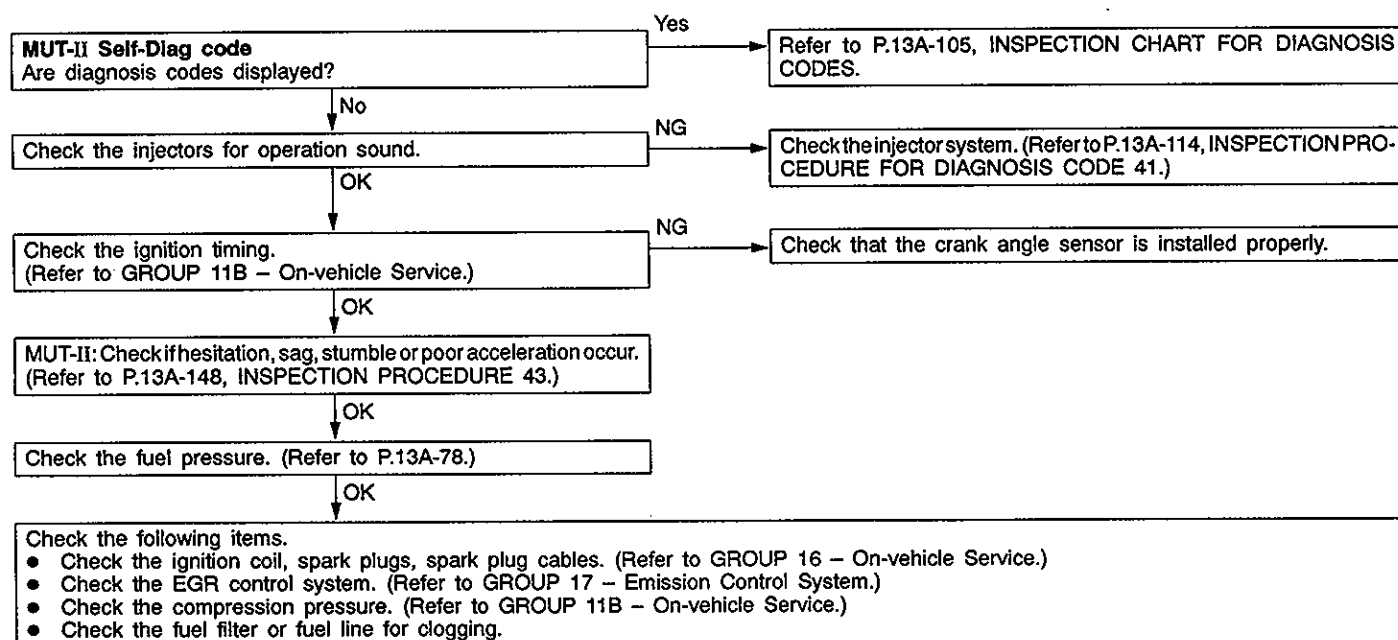


## INSPECTION PROCEDURE 16

| The feeling of impact or vibration when accelerating                                                                                                             | Probable cause                                                                         |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------|
| In cases such as the above, the cause is probably that there is an ignition leak accompanying the increase in the spark plug demand voltage during acceleration. | <ul style="list-style-type: none"> <li>• Malfunction of the ignition system</li> </ul> |

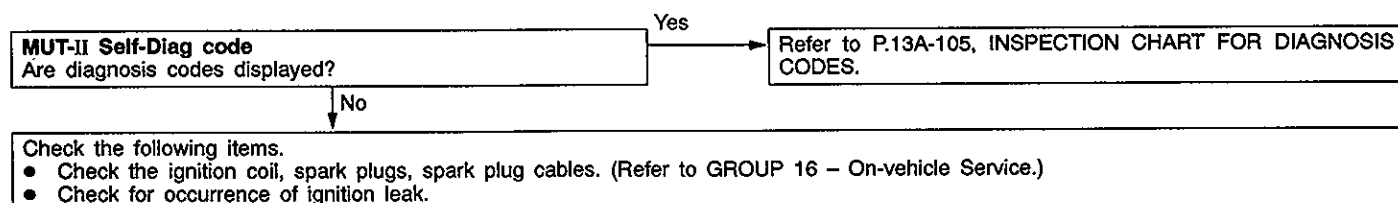


## INSPECTION PROCEDURE 17

| The feeling of impact or vibration when decelerating. | Probable cause                                                                  |
|-------------------------------------------------------|---------------------------------------------------------------------------------|
| Malfunction of the ISC system is suspected.           | <ul style="list-style-type: none"> <li>Malfunction of the ISC system</li> </ul> |

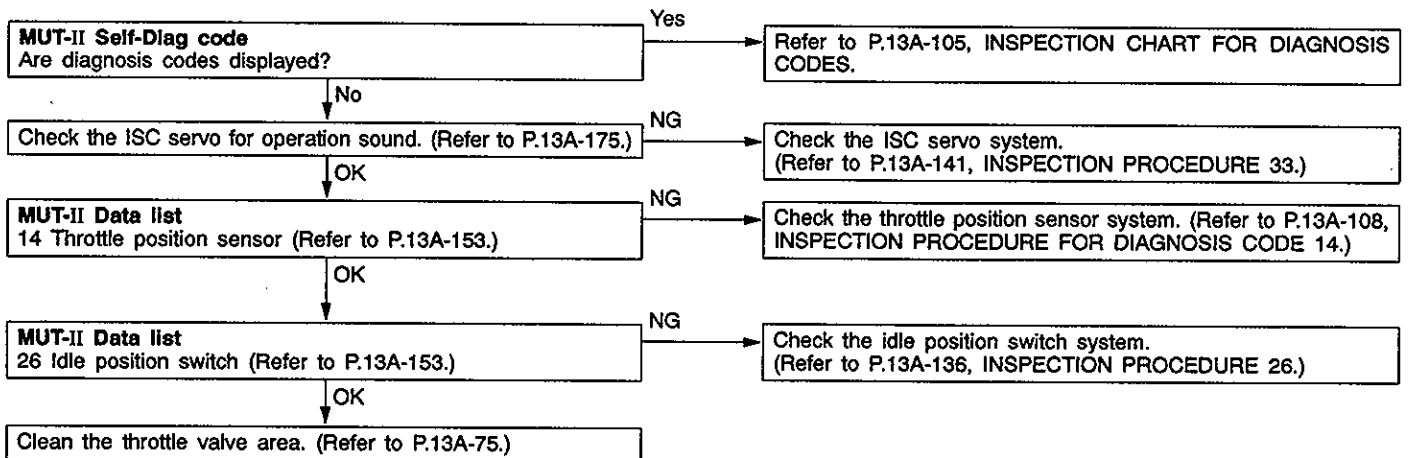


## INSPECTION PROCEDURE 18

| Poor acceleration                                                                                  | Probable cause                                                                                                                                                                                                                                               |
|----------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Defective ignition system, abnormal air-fuel ratio, poor compression pressure, etc. are suspected. | <ul style="list-style-type: none"> <li>Malfunction of the ignition system</li> <li>Malfunction of air-fuel ratio control system</li> <li>Malfunction of the fuel supply system</li> <li>Poor compression pressure</li> <li>Clogged exhaust system</li> </ul> |

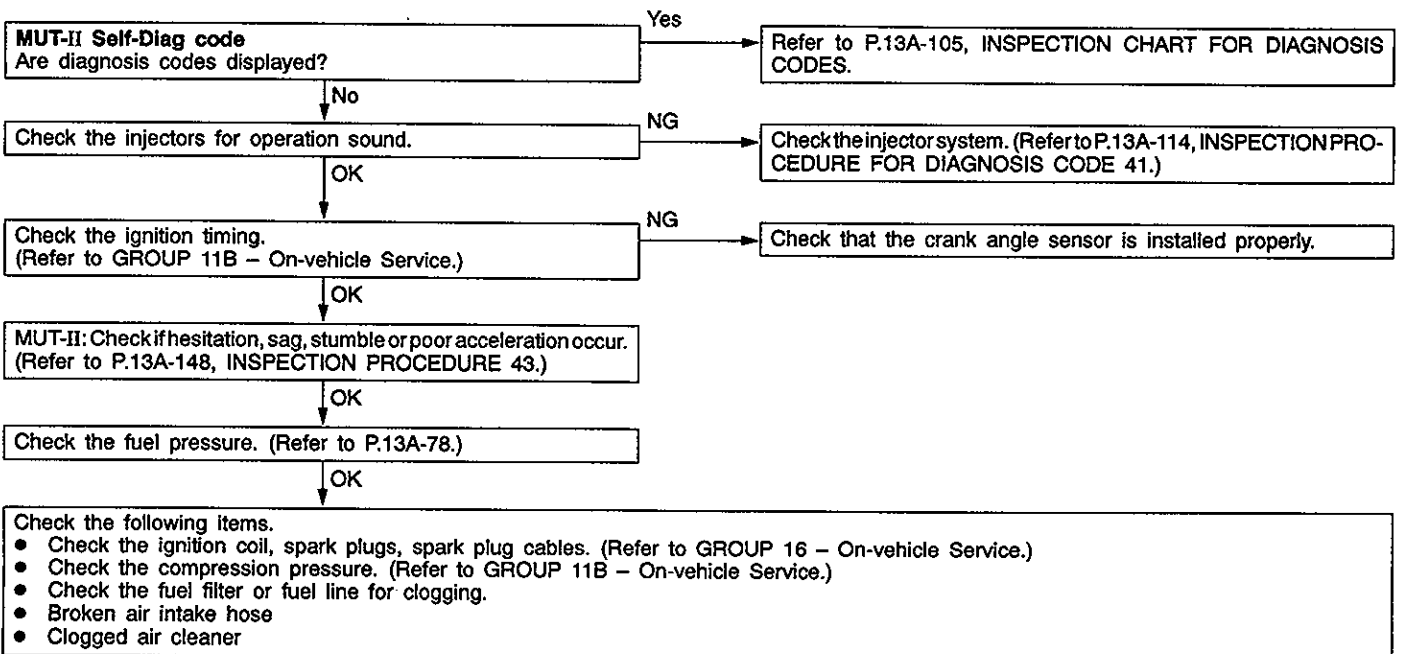


## INSPECTION PROCEDURE 19

| Surge                                                                   | Probable cause                                                                                                                                                                                                 |
|-------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Defective ignition system, abnormal air-fuel ratio, etc. are suspected. | <ul style="list-style-type: none"> <li>• Malfunction of the ignition system</li> <li>• Malfunction of air-fuel ratio control system</li> <li>• Malfunction of the EGR control solenoid valve system</li> </ul> |

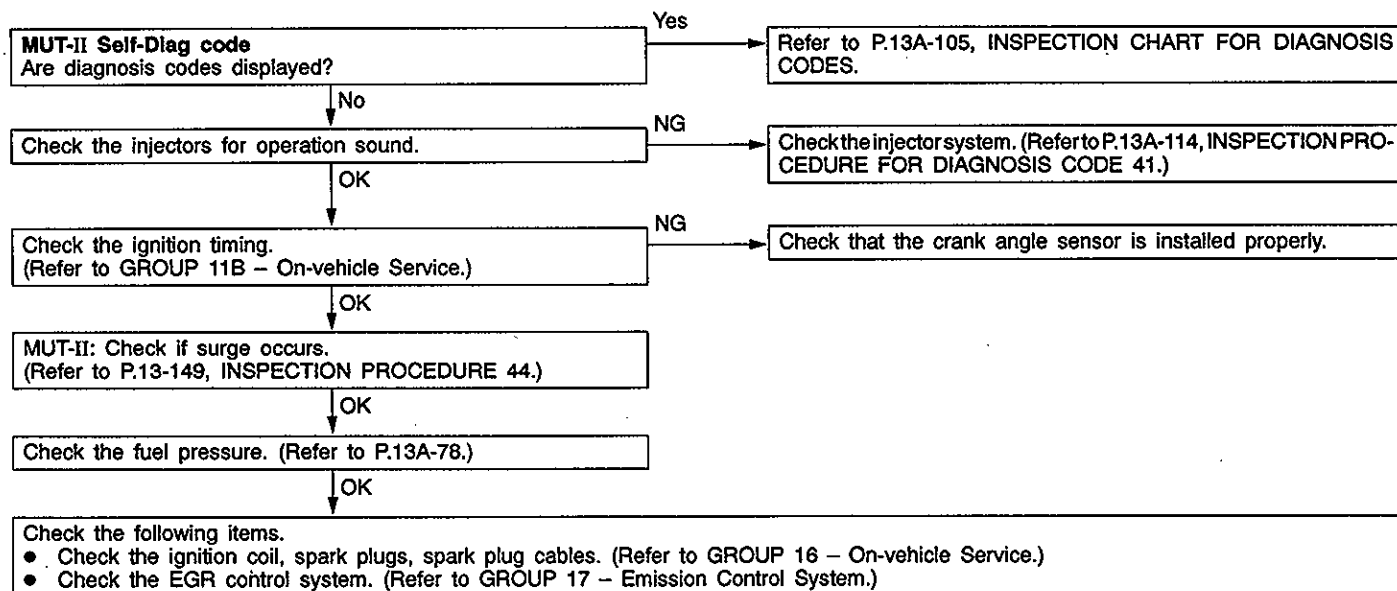

## INSPECTION PROCEDURE 20

| Knocking                                                                                                                                    | Probable cause                                                                                                                        |
|---------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| In cases as the above, the cause is probably that the detonation control is defective or the heat value of the spark plug is inappropriate. | <ul style="list-style-type: none"> <li>• Defective detonation sensor</li> <li>• Inappropriate heat value of the spark plug</li> </ul> |

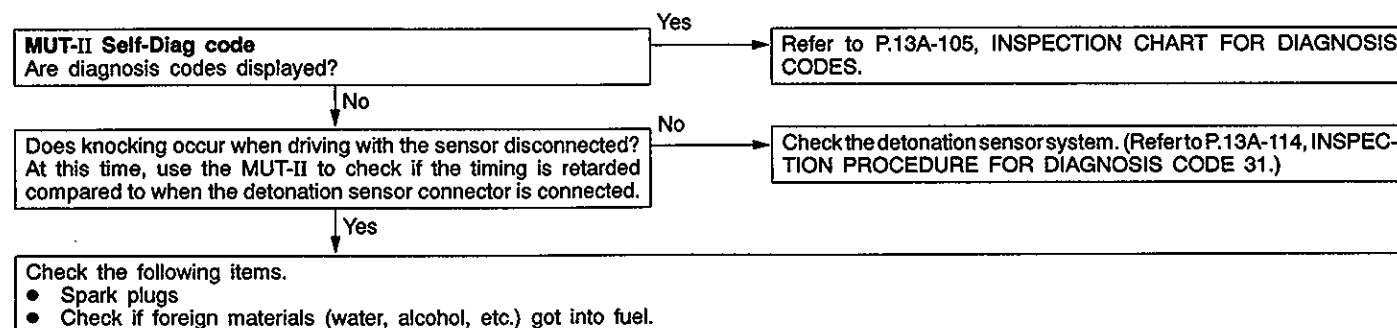


## INSPECTION PROCEDURE 21

| Dieseling                                 | Probable cause                                                                  |
|-------------------------------------------|---------------------------------------------------------------------------------|
| Fuel leakage from injectors is suspected. | <ul style="list-style-type: none"> <li>• Fuel leakage from injectors</li> </ul> |

Check the injectors for fuel leakage.


## INSPECTION PROCEDURE 22

| Too high CO and HC concentration when idling | Probable cause                                                                                                                    |
|----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Abnormal air-fuel ratio is suspected.        | <ul style="list-style-type: none"> <li>Malfunction of the air-fuel ratio control system</li> <li>Deteriorated catalyst</li> </ul> |

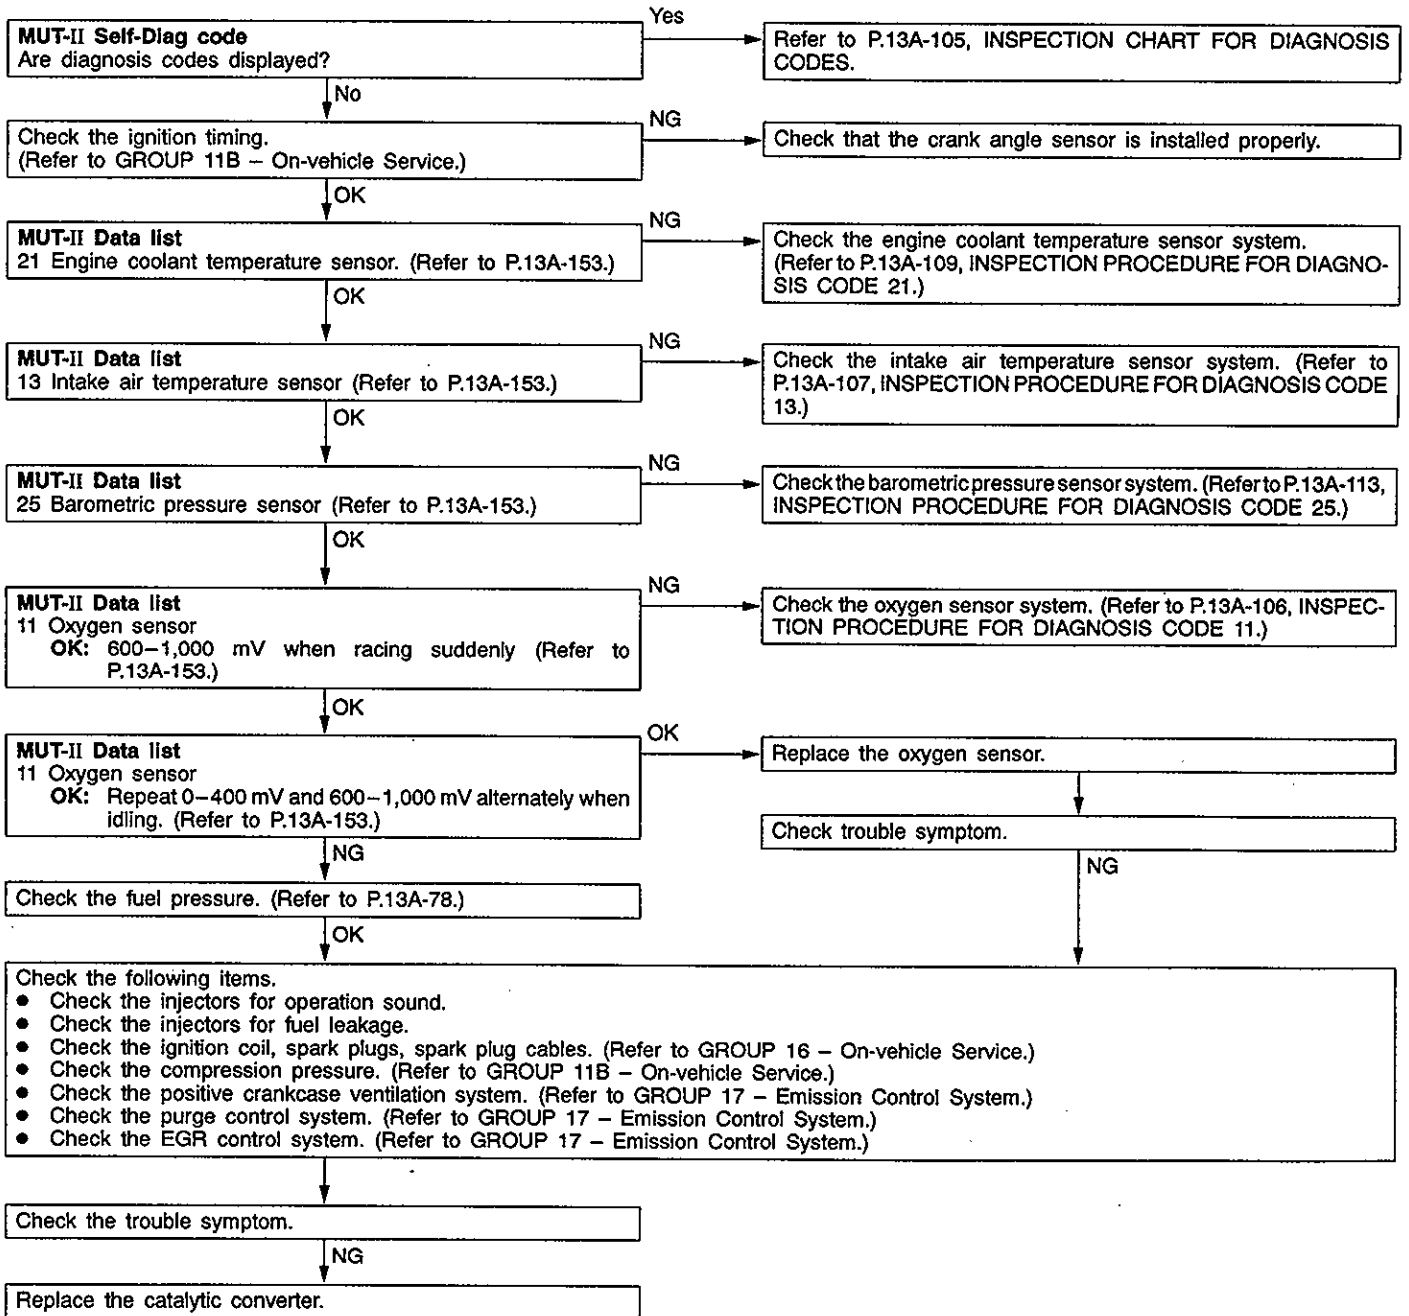


## INSPECTION PROCEDURE 23

| Low alternator output voltage (approx. 12.3 V)                                                            | Probable cause                                                                                                                                                                                                                            |
|-----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The alternator may be defective, or malfunctions, which are listed in the right column, may be suspected. | <ul style="list-style-type: none"> <li>Malfunction of charging system (Refer to GROUP 16 – Charging System.)</li> <li>Short circuit in harness between alternator G terminal and engine-ECU</li> <li>Malfunction of engine-ECU</li> </ul> |

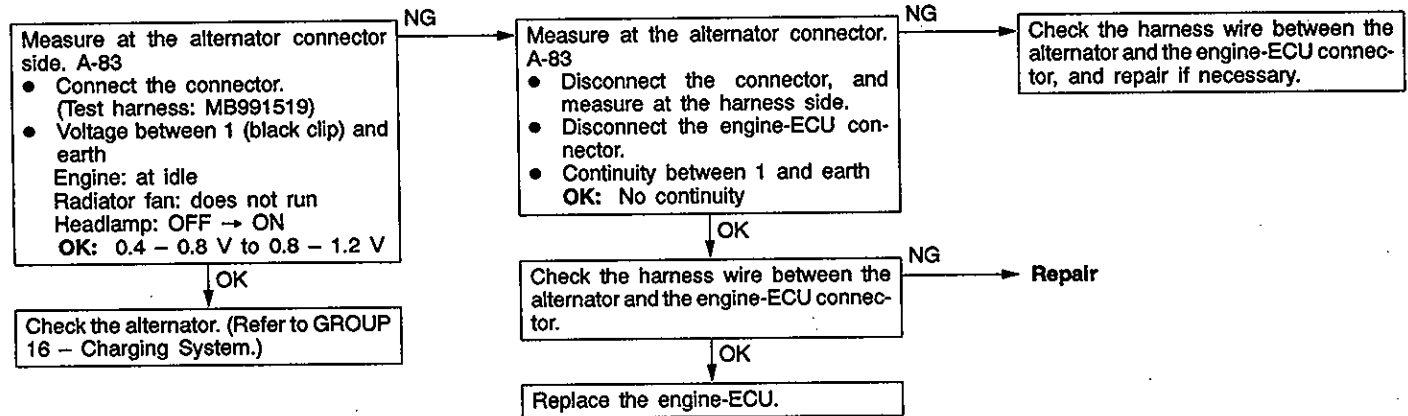


## INSPECTION PROCEDURE 24

| Power supply system and ignition switch-IG system                                                                                                                                                     | Probable cause                                                                                                                                                                                                                                                                                      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| When an ignition switch ON signal is input to the engine-ECU, the engine-ECU turns the control relay ON. This causes battery voltage to be supplied to the engine-ECU, injectors and air flow sensor. | <ul style="list-style-type: none"> <li>Malfunction of the ignition switch</li> <li>Malfunction of the control relay</li> <li>Improper connector contact, open circuit or short-circuited harness wire</li> <li>Disconnected engine-ECU earth wire</li> <li>Malfunction of the engine-ECU</li> </ul> |

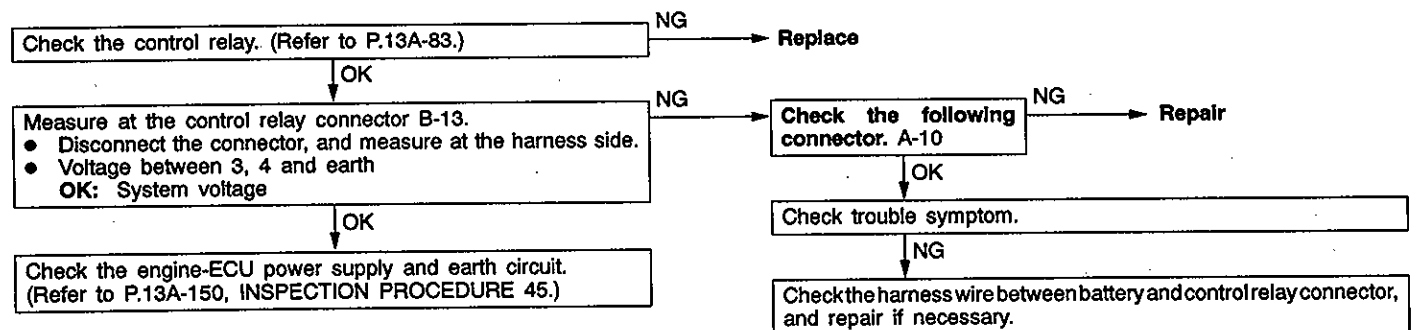


## INSPECTION PROCEDURE 25

| Fuel pump system                                                                                                                  | Probable cause                                                                                                                                                                                                                                      |
|-----------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The engine-ECU turns the control relay ON when the engine is cranking or running, and this supplies power to drive the fuel pump. | <ul style="list-style-type: none"> <li>Malfunction of the fuel pump relay</li> <li>Malfunction of the fuel pump</li> <li>Improper connector contact, open circuit or short-circuited harness wire</li> <li>Malfunction of the engine-ECU</li> </ul> |

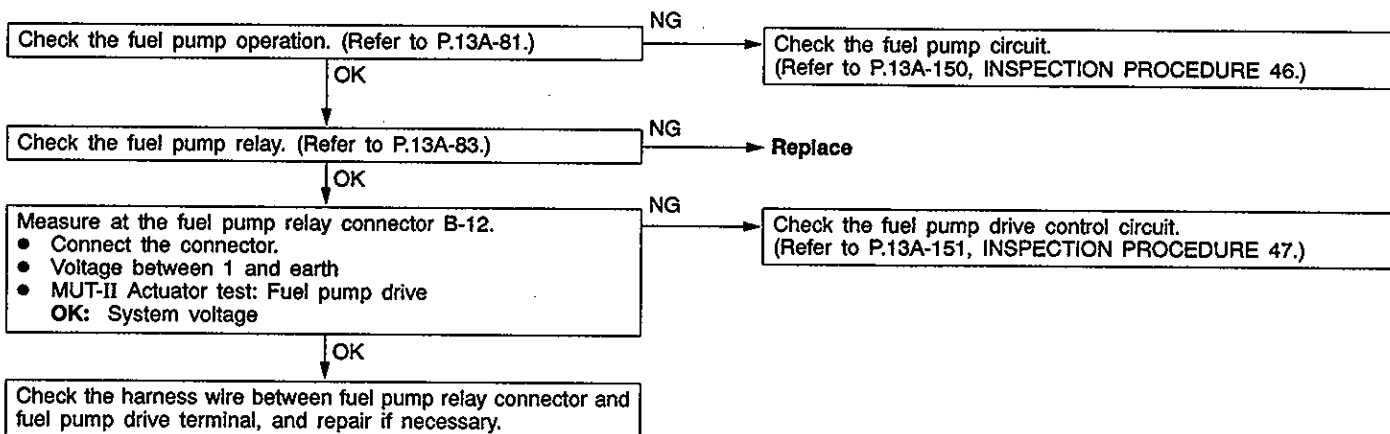


## INSPECTION PROCEDURE 26

| Idle position switch system                                                                                                                                                                                                  | Probable cause                                                                                                                                                                                                                                                                                                                            |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The idle position switch inputs the condition of the accelerator pedal, i.e. whether it is depressed or released (HIGH/LOW), to the engine-ECU.<br>The engine-ECU controls the idle speed control servo based on this input. | <ul style="list-style-type: none"> <li>Maladjustment of the accelerator pedal</li> <li>Maladjustment of the fixed SAS</li> <li>Maladjustment of the idle position switch and throttle position sensor</li> <li>Improper connector contact, open circuit or short-circuited harness wire</li> <li>Malfunction of the engine-ECU</li> </ul> |

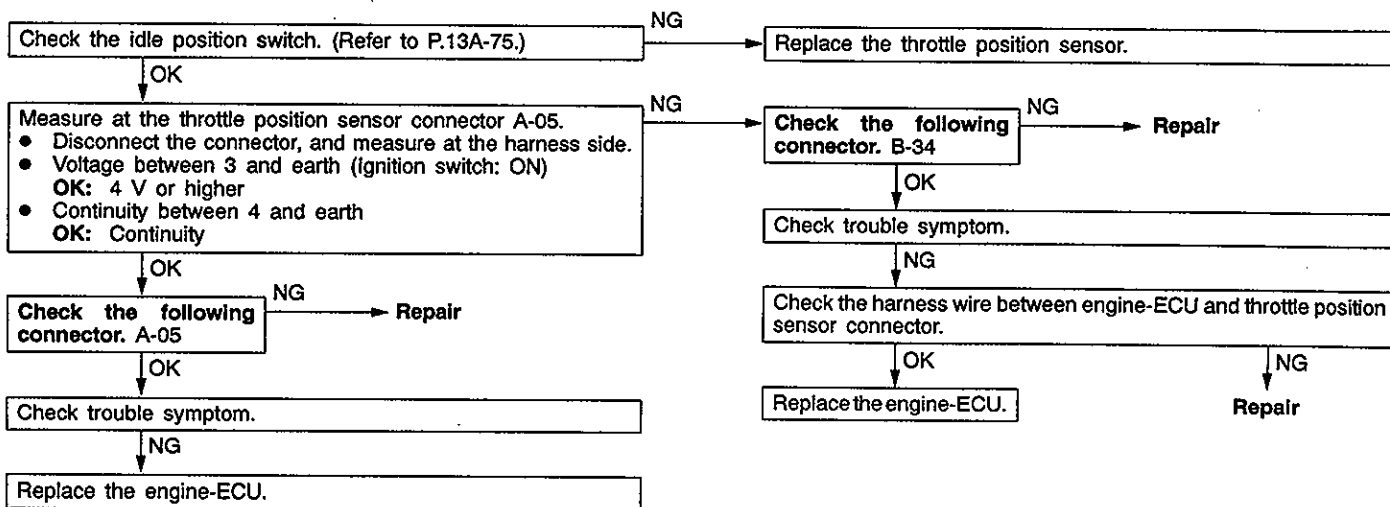


## INSPECTION PROCEDURE 27

| Ignition switch-ST system <M/T>                                                                                                                                                          | Probable cause                                                                                                                                                                                                  |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>The ignition switch-ST inputs a HIGH signal to the engine-ECU while the engine is cranking.<br/>The engine-ECU controls fuel injection, etc. during starting based on this input.</p> | <ul style="list-style-type: none"> <li>• Malfunction of ignition switch</li> <li>• Improper connector contact, open circuit or short-circuited harness wire</li> <li>• Malfunction of the engine-ECU</li> </ul> |

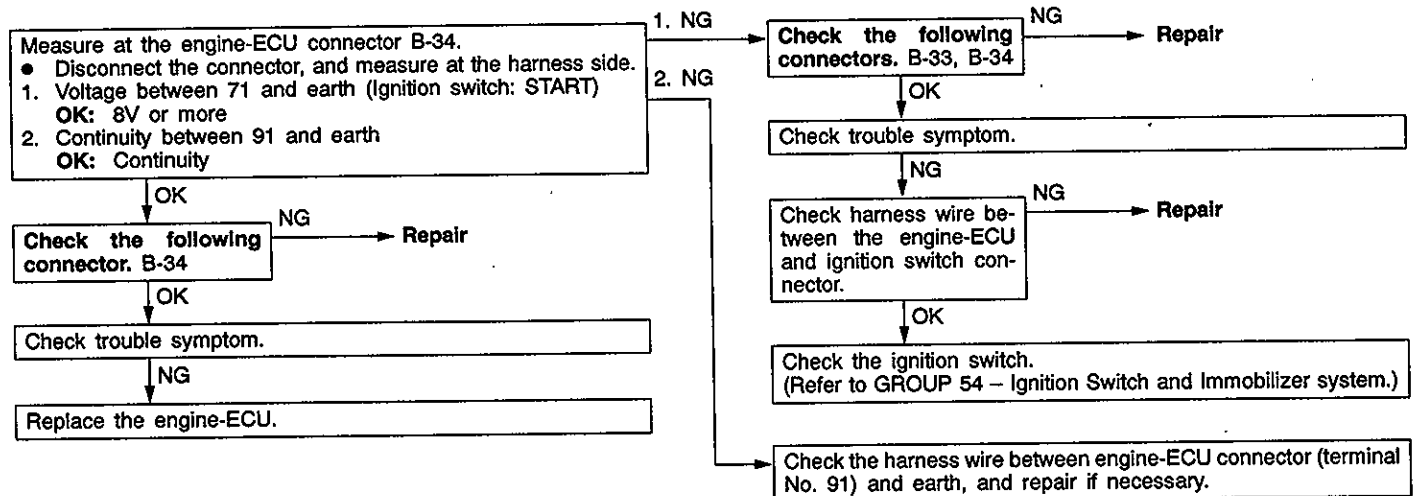


## INSPECTION PROCEDURE 28

| Ignition switch-ST and inhibitor switch system <A/T>                                                                                                                                                                                                                                                                                                                                                                                                                                    | Probable cause                                                                                                                                                                                                                                      |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <ul style="list-style-type: none"> <li>The ignition switch-ST inputs a HIGH signal to the engine-ECU while the engine is cranking.</li> <li>The engine-ECU controls fuel injection, etc. during starting based on this input.</li> <li>The inhibitor switch inputs the condition of the select lever, i.e. whether it is in P or N range or in some other range, to the engine-ECU.</li> <li>The engine-ECU controls the idle speed control (ISC) servo based on this input.</li> </ul> | <ul style="list-style-type: none"> <li>Malfunction of ignition switch</li> <li>Malfunction of inhibitor switch</li> <li>Improper connector contact, open circuit or short-circuited harness wire</li> <li>Malfunction of the engine-ECU.</li> </ul> |

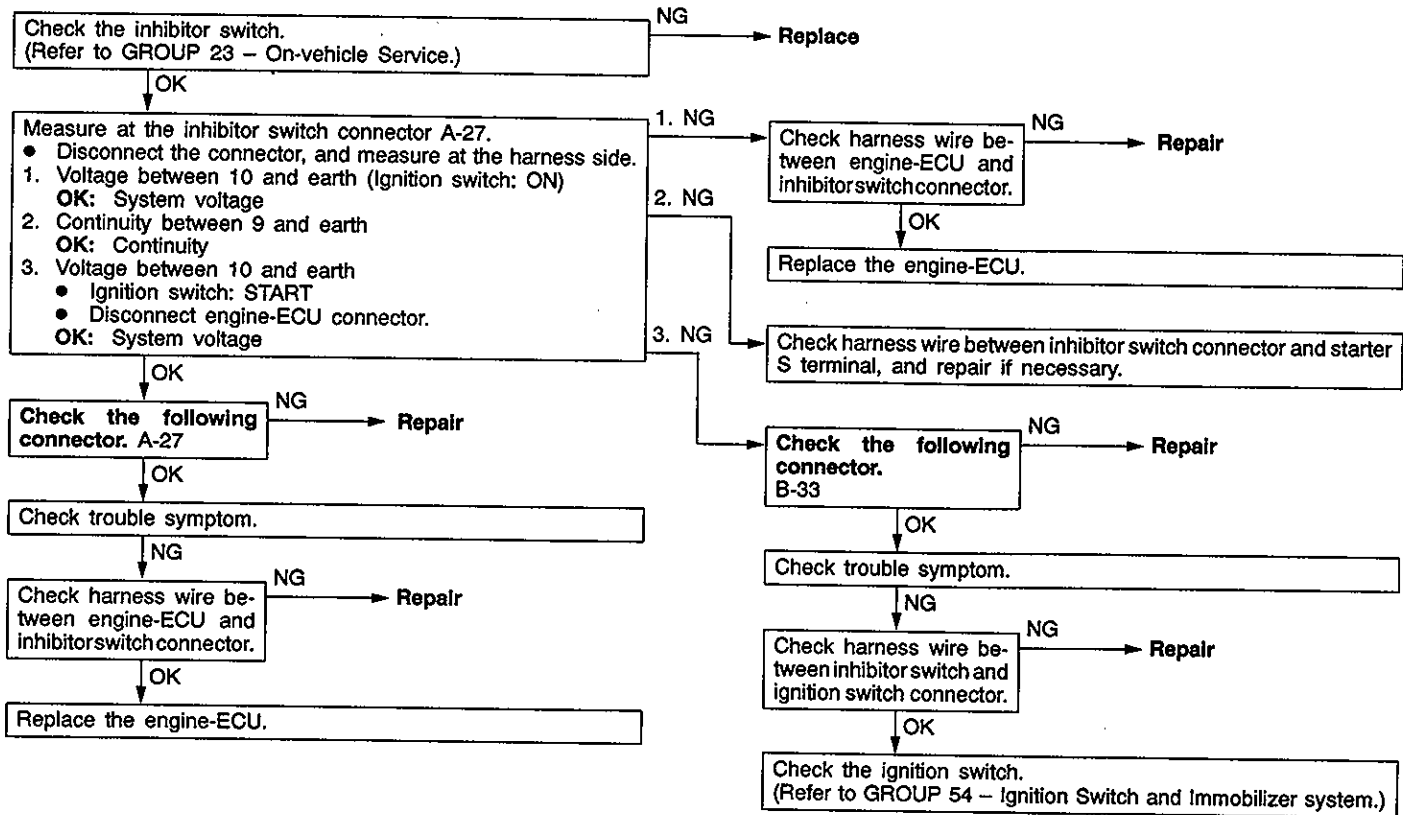


## INSPECTION PROCEDURE 29

| Power steering fluid pressure switch system                                                                                                                | Probable cause                                                                                                                                                                                                                       |
|------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The presence or absence of power steering load is input to the engine-ECU. The engine-ECU controls the idle speed control (ISC) servo based on this input. | <ul style="list-style-type: none"> <li>• Malfunction of power steering fluid pressure switch</li> <li>• Improper connector contact, open circuit or short-circuited harness wire</li> <li>• Malfunction of the engine-ECU</li> </ul> |

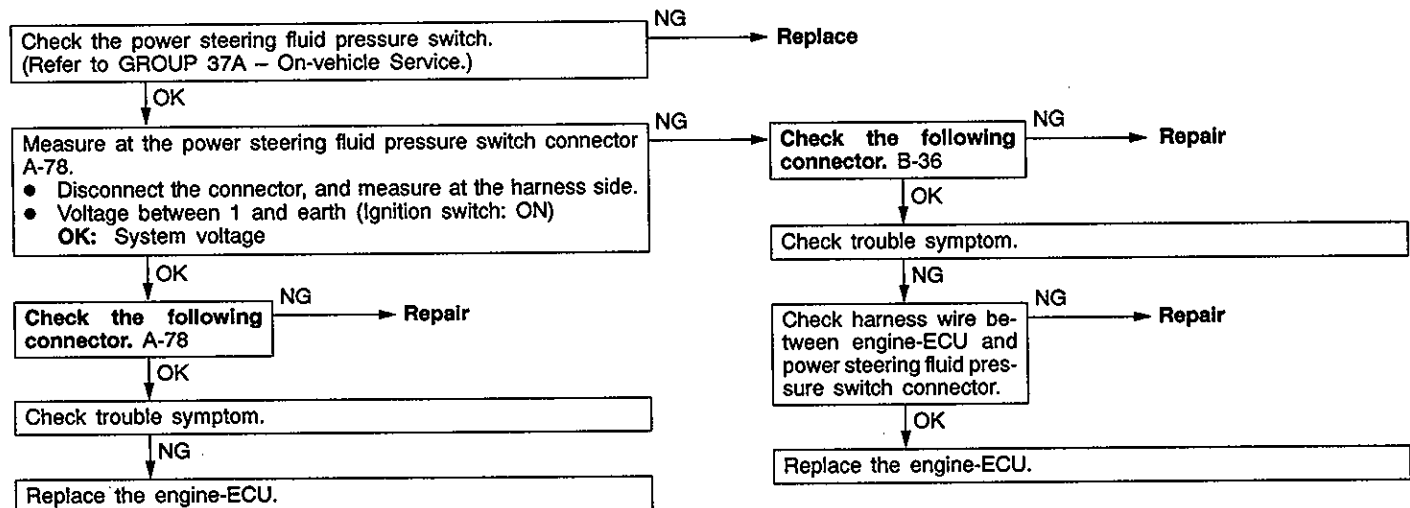


## INSPECTION PROCEDURE 30

| A/C switch and A/C relay system                                                                                                                                                   | Probable cause                                                                                                                                                                                                                                          |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| When an A/C ON signal is input to the engine-ECU, the engine-ECU carries out control of the idle speed control (ISC) servo, and also operates the A/C compressor magnetic clutch. | <ul style="list-style-type: none"> <li>• Malfunction of A/C control system</li> <li>• Malfunction of A/C switch</li> <li>• Improper connector contact, open circuit or short-circuited harness wire</li> <li>• Malfunction of the engine-ECU</li> </ul> |

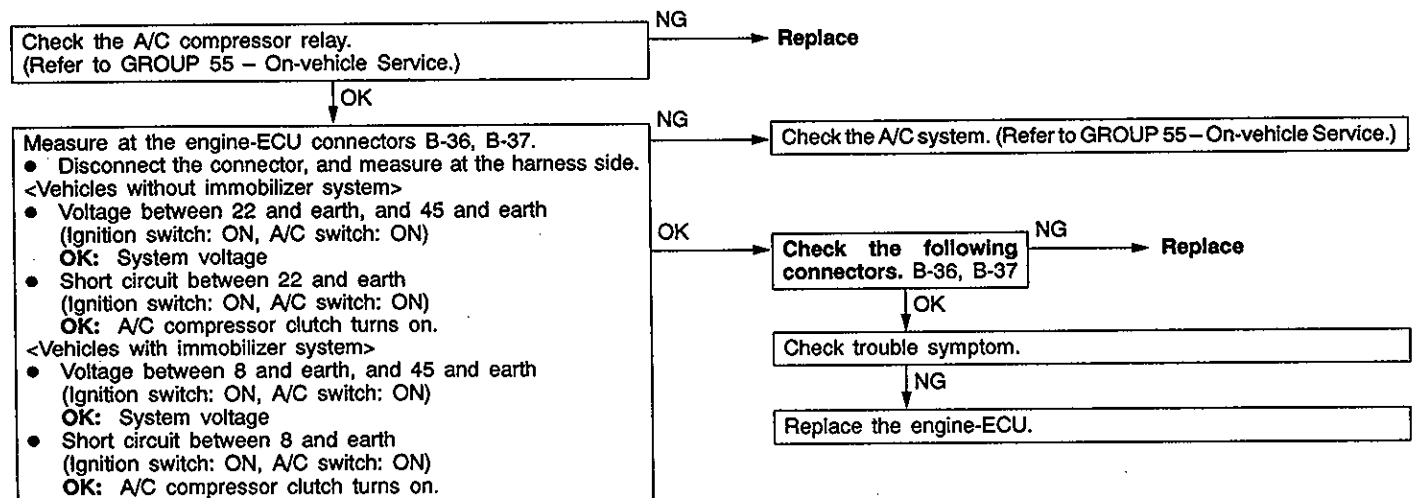


## INSPECTION PROCEDURE 31

| Fan motor relay system (Radiator fan, A/C condenser fan)                         | Probable cause                                                                                                                                                                                                                          |
|----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The power transistor inside the engine-ECU turns the fan motor relay on and off. | <ul style="list-style-type: none"> <li>Malfunction of fan motor relay</li> <li>Malfunction of fan motor</li> <li>Improper connector contact, open circuit or short-circuited harness wire</li> <li>Malfunction of engine-ECU</li> </ul> |

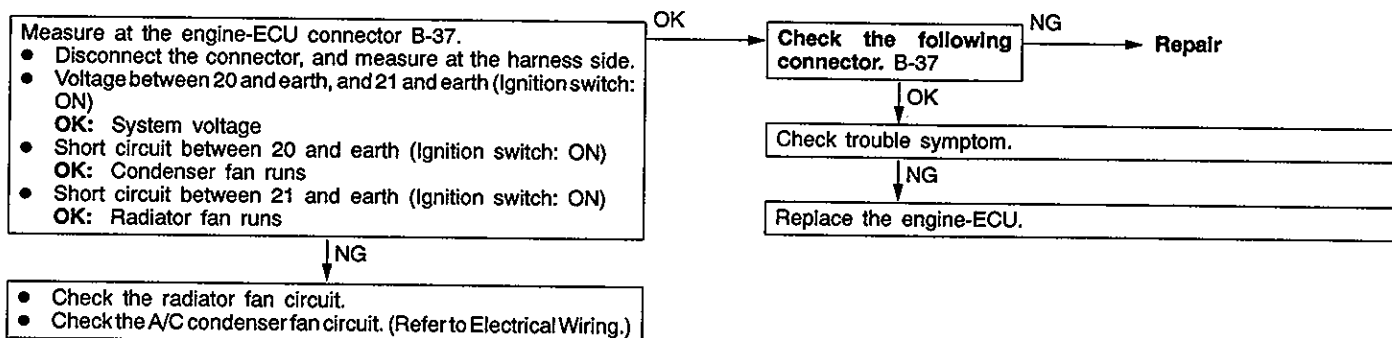


## INSPECTION PROCEDURE 32

| Ignition circuit system                                                                                                       | Probable cause                                                                                                                                                                                             |
|-------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The engine-ECU interrupts the ignition coil primary current by turning the power transistor inside the engine-ECU ON and OFF. | <ul style="list-style-type: none"> <li>Malfunction of ignition switch.</li> <li>Improper connector contact, open circuit or short-circuited harness wire</li> <li>Malfunction of the engine-ECU</li> </ul> |

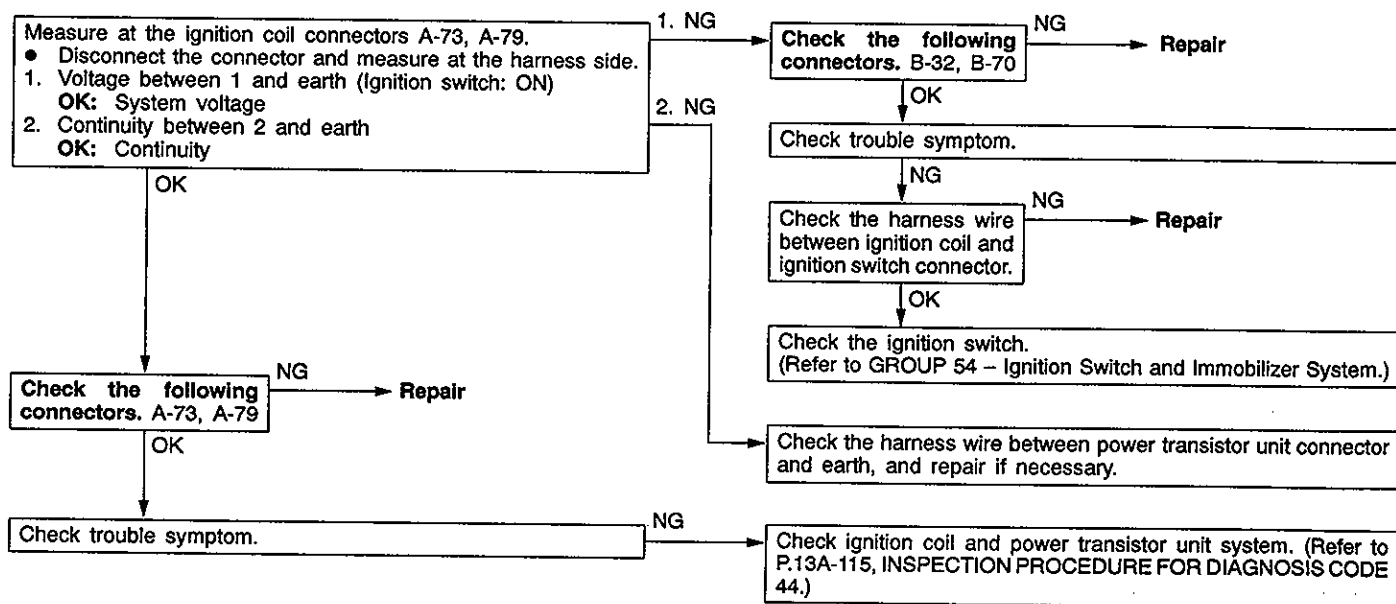


## INSPECTION PROCEDURE 33

| Idle speed control (ISC) servo (Stepper motor) system                                                                                 | Probable cause                                                                                                                                                                                      |
|---------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The engine-ECU controls the intake air volume during idling by opening and closing the servo valve located in the bypass air passage. | <ul style="list-style-type: none"> <li>Malfunction of ISC servo</li> <li>Improper connector contact, open circuit or short-circuited harness wire</li> <li>Malfunction of the engine-ECU</li> </ul> |

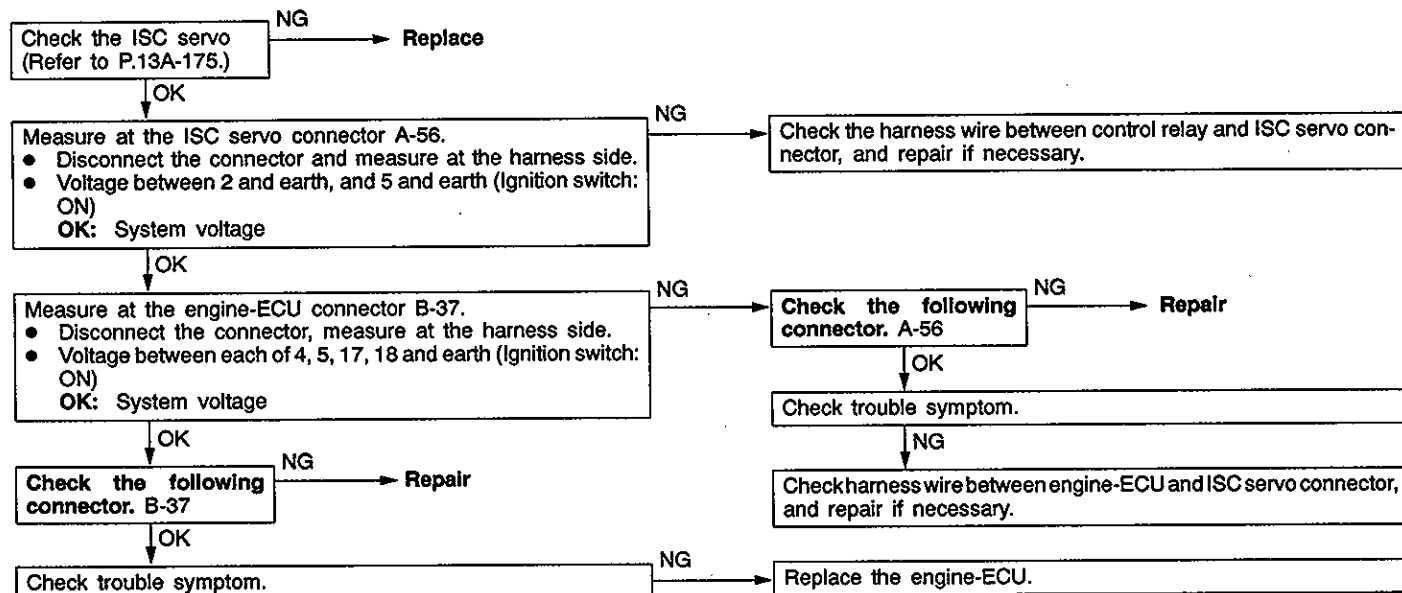


## INSPECTION PROCEDURE 34

| Purge control solenoid valve system                                                                                | Probable cause                                                                                                                                                                                            |
|--------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The purge control solenoid valve controls the purging of air from the canister located inside the intake manifold. | <ul style="list-style-type: none"> <li>Malfunction of solenoid valve</li> <li>Improper connector contact, open circuit or short-circuited harness wire.</li> <li>Malfunction of the engine-ECU</li> </ul> |

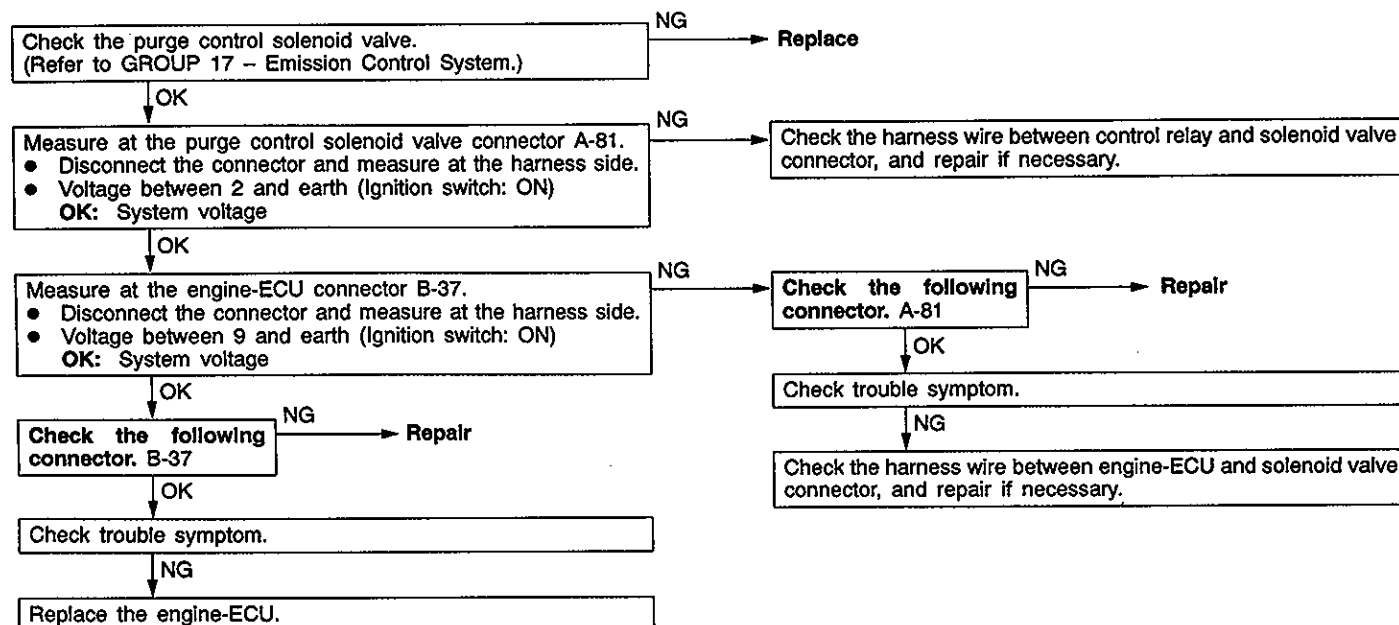


## INSPECTION PROCEDURE 35

| EGR control solenoid valve system                                                                                                            | Probable cause                                                                                                                                                                                                  |
|----------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The EGR control solenoid valve is controlled by the negative pressure resulting from EGR operation leaking to port "A" of the throttle body. | <ul style="list-style-type: none"> <li>• Malfunction of solenoid valve</li> <li>• Improper connector contact, open circuit or short-circuited harness wire.</li> <li>• Malfunction of the engine-ECU</li> </ul> |

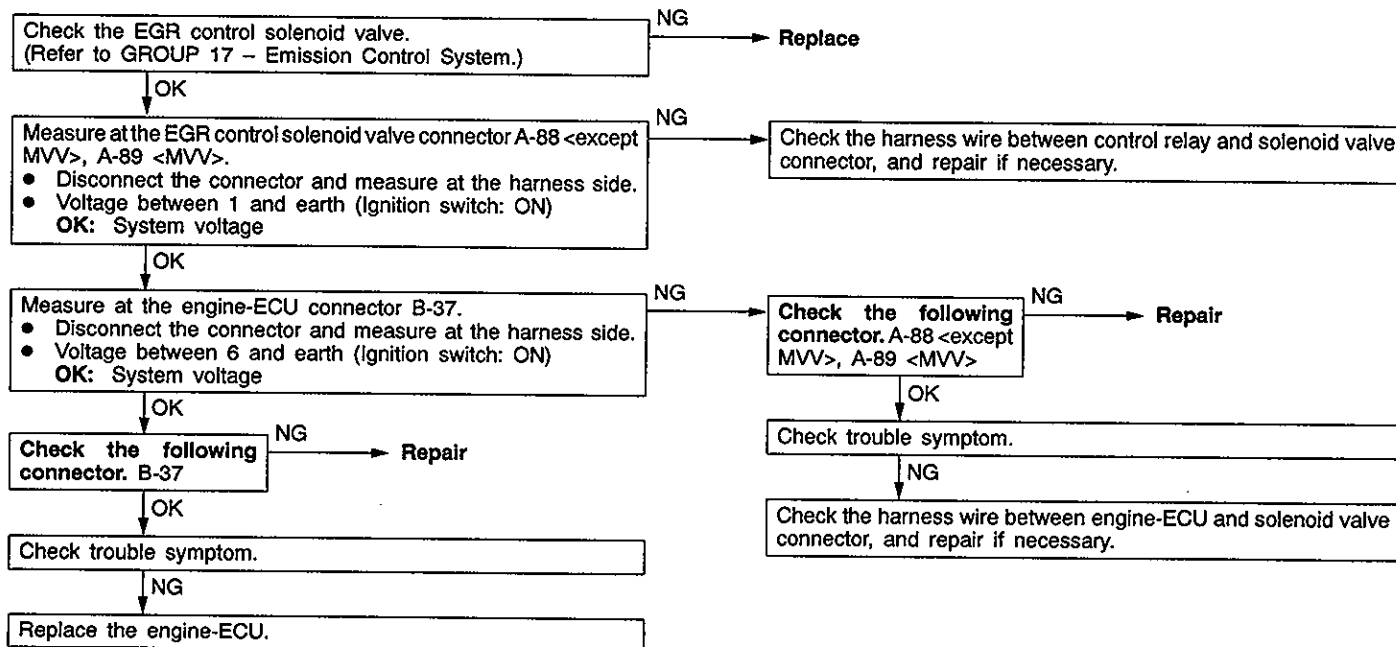


## INSPECTION PROCEDURE 36


| Air by-pass control solenoid valve system                                                       | Probable cause                                                                                                                                                                                                  |
|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The engine-ECU controls the air by-pass control solenoid valve to control its operating vacuum. | <ul style="list-style-type: none"> <li>• Malfunction of solenoid valve</li> <li>• Improper connector contact, open circuit or short-circuited harness wire.</li> <li>• Malfunction of the engine-ECU</li> </ul> |

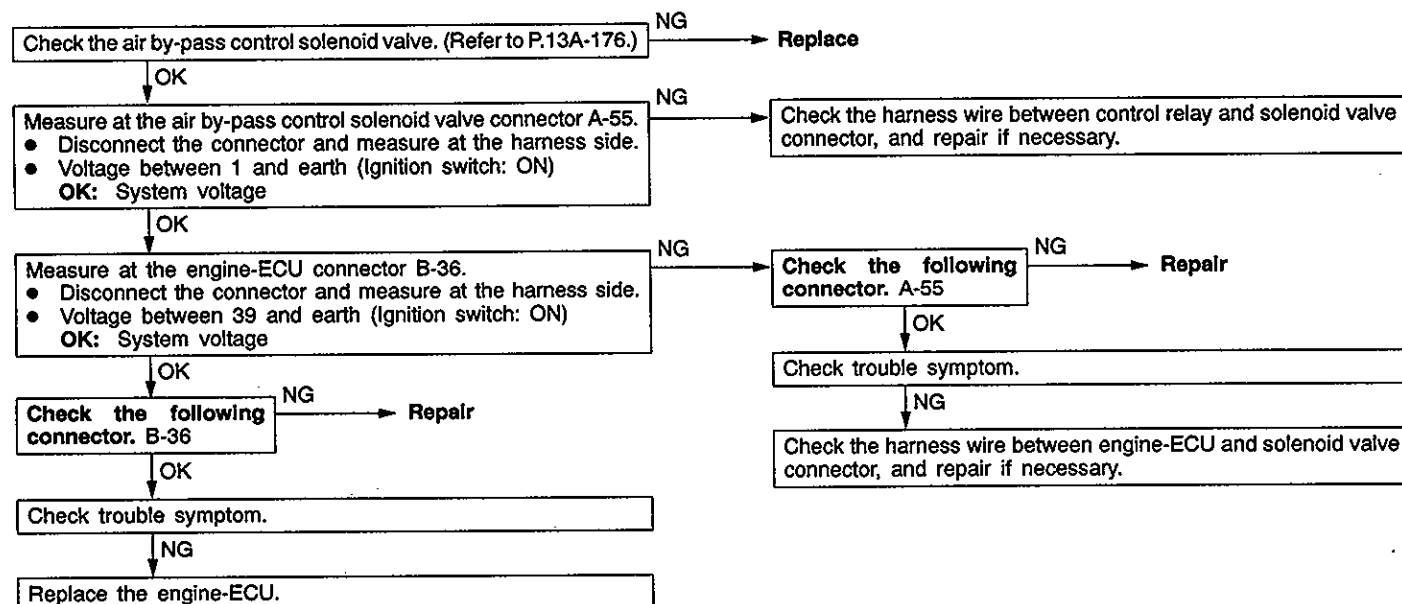


## INSPECTION PROCEDURE 37

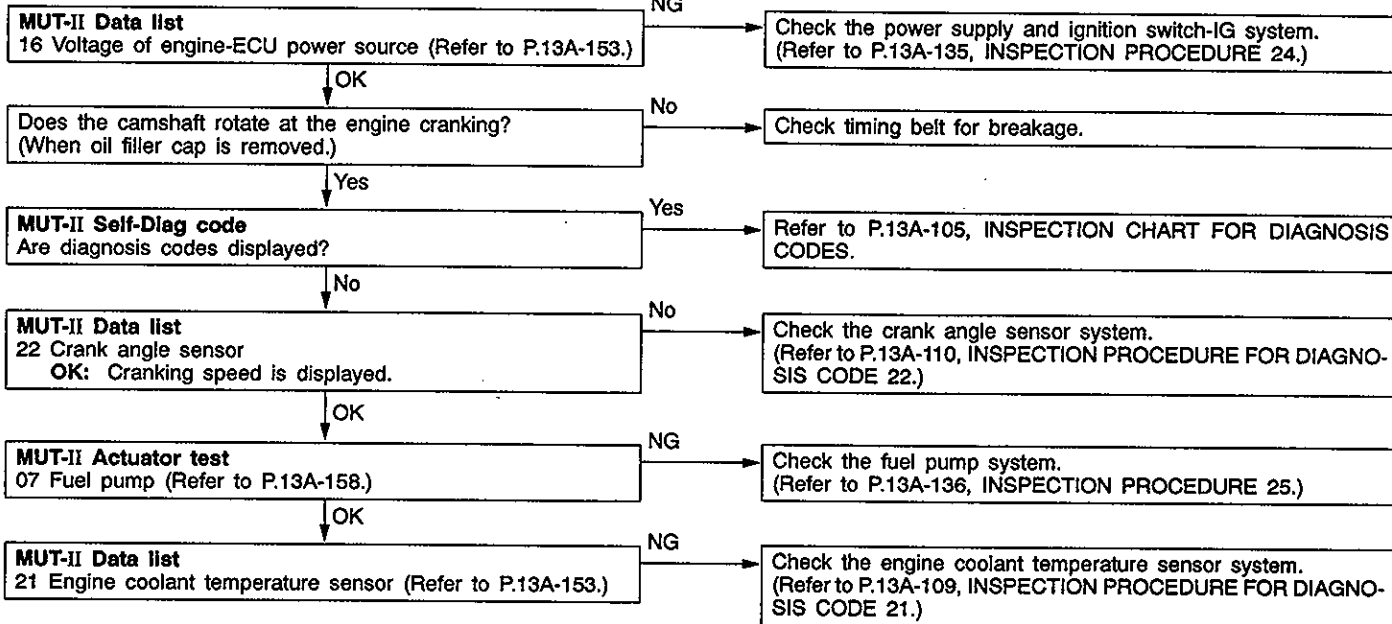**MUT-II: Inspection of no initial combustion**


## INSPECTION PROCEDURE 38

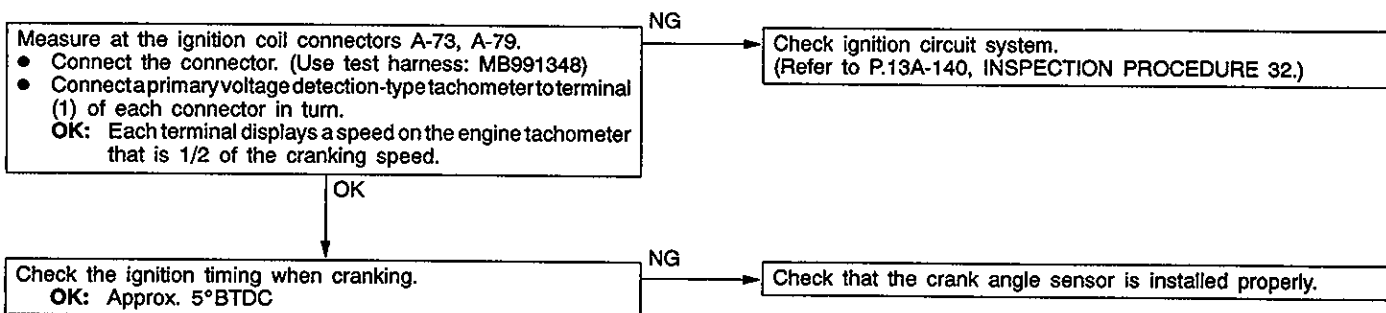**Ignition system: Inspection of no initial combustion.**

## INSPECTION PROCEDURE 39

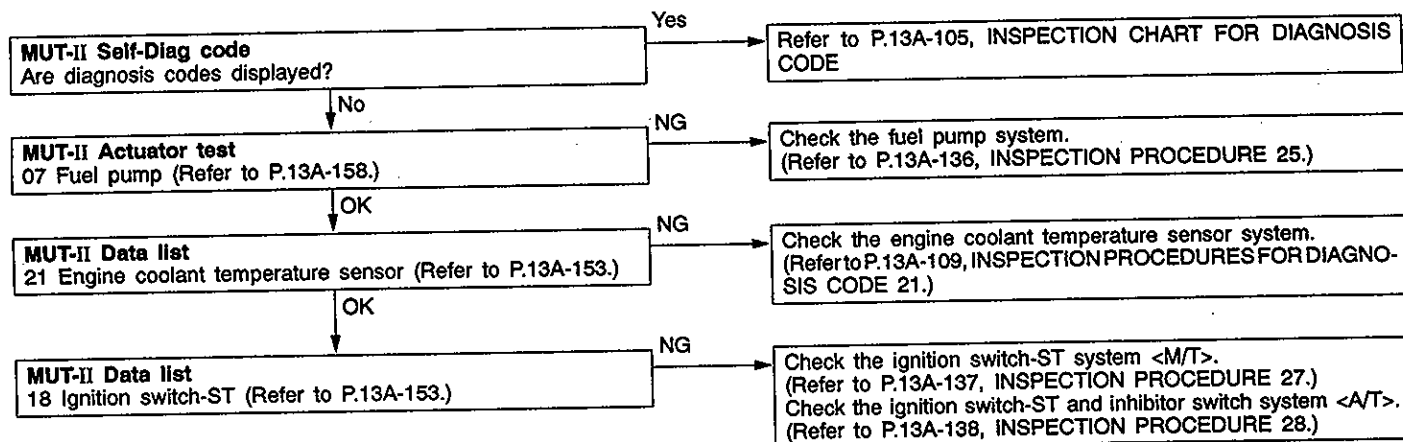
**MUT-II: Check if incomplete combustion occurs.**

## INSPECTION PROCEDURE 40

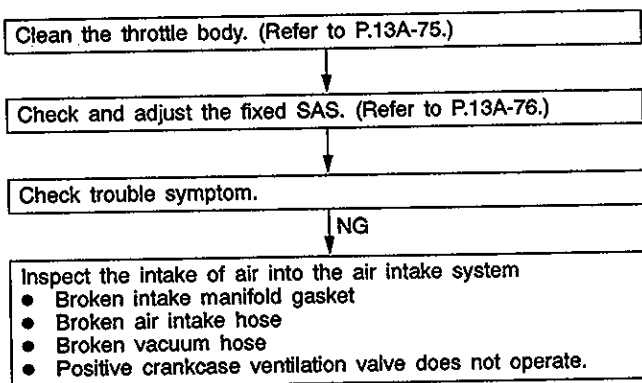
**Check if hunting occurs.**

## INSPECTION PROCEDURE 41

## MUT-II: Check if idling speed is unstable.

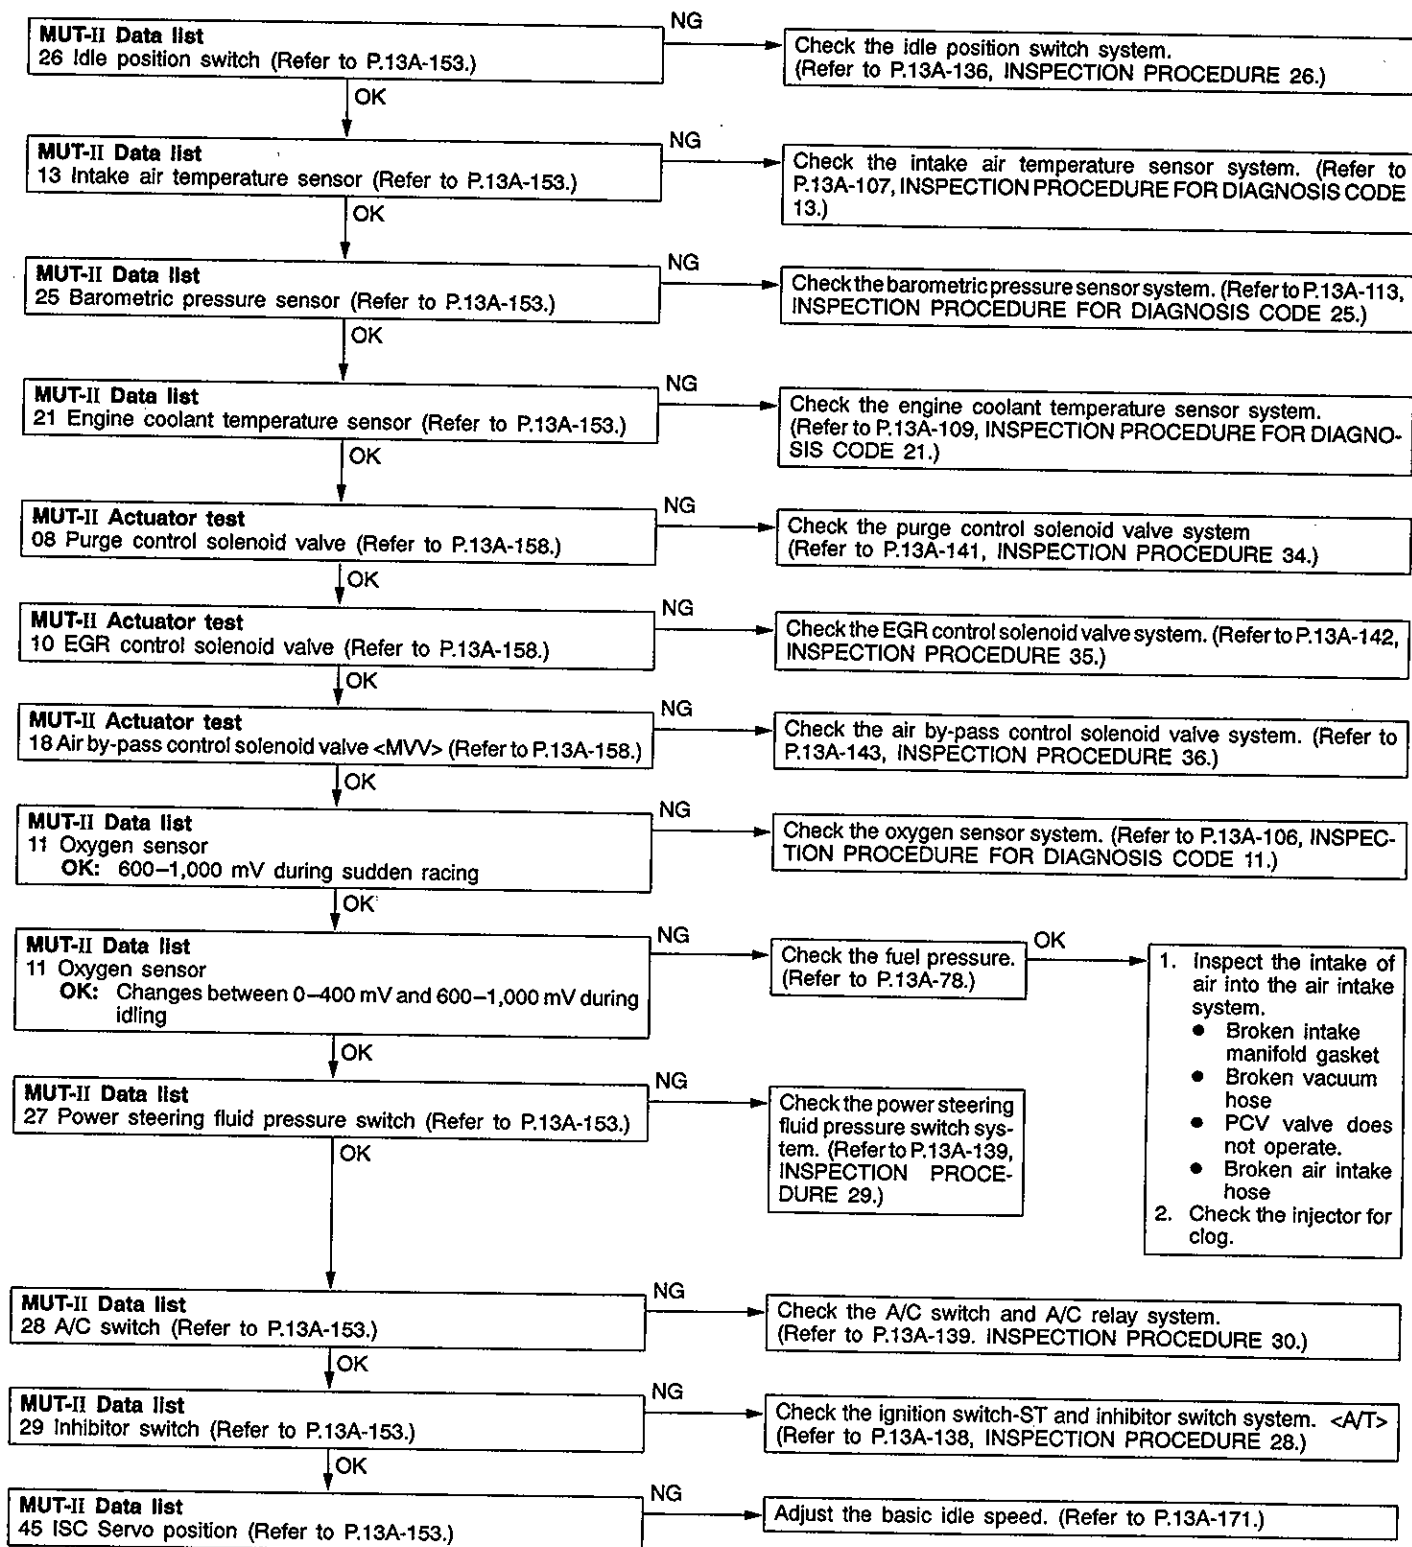


## INSPECTION PROCEDURE 42

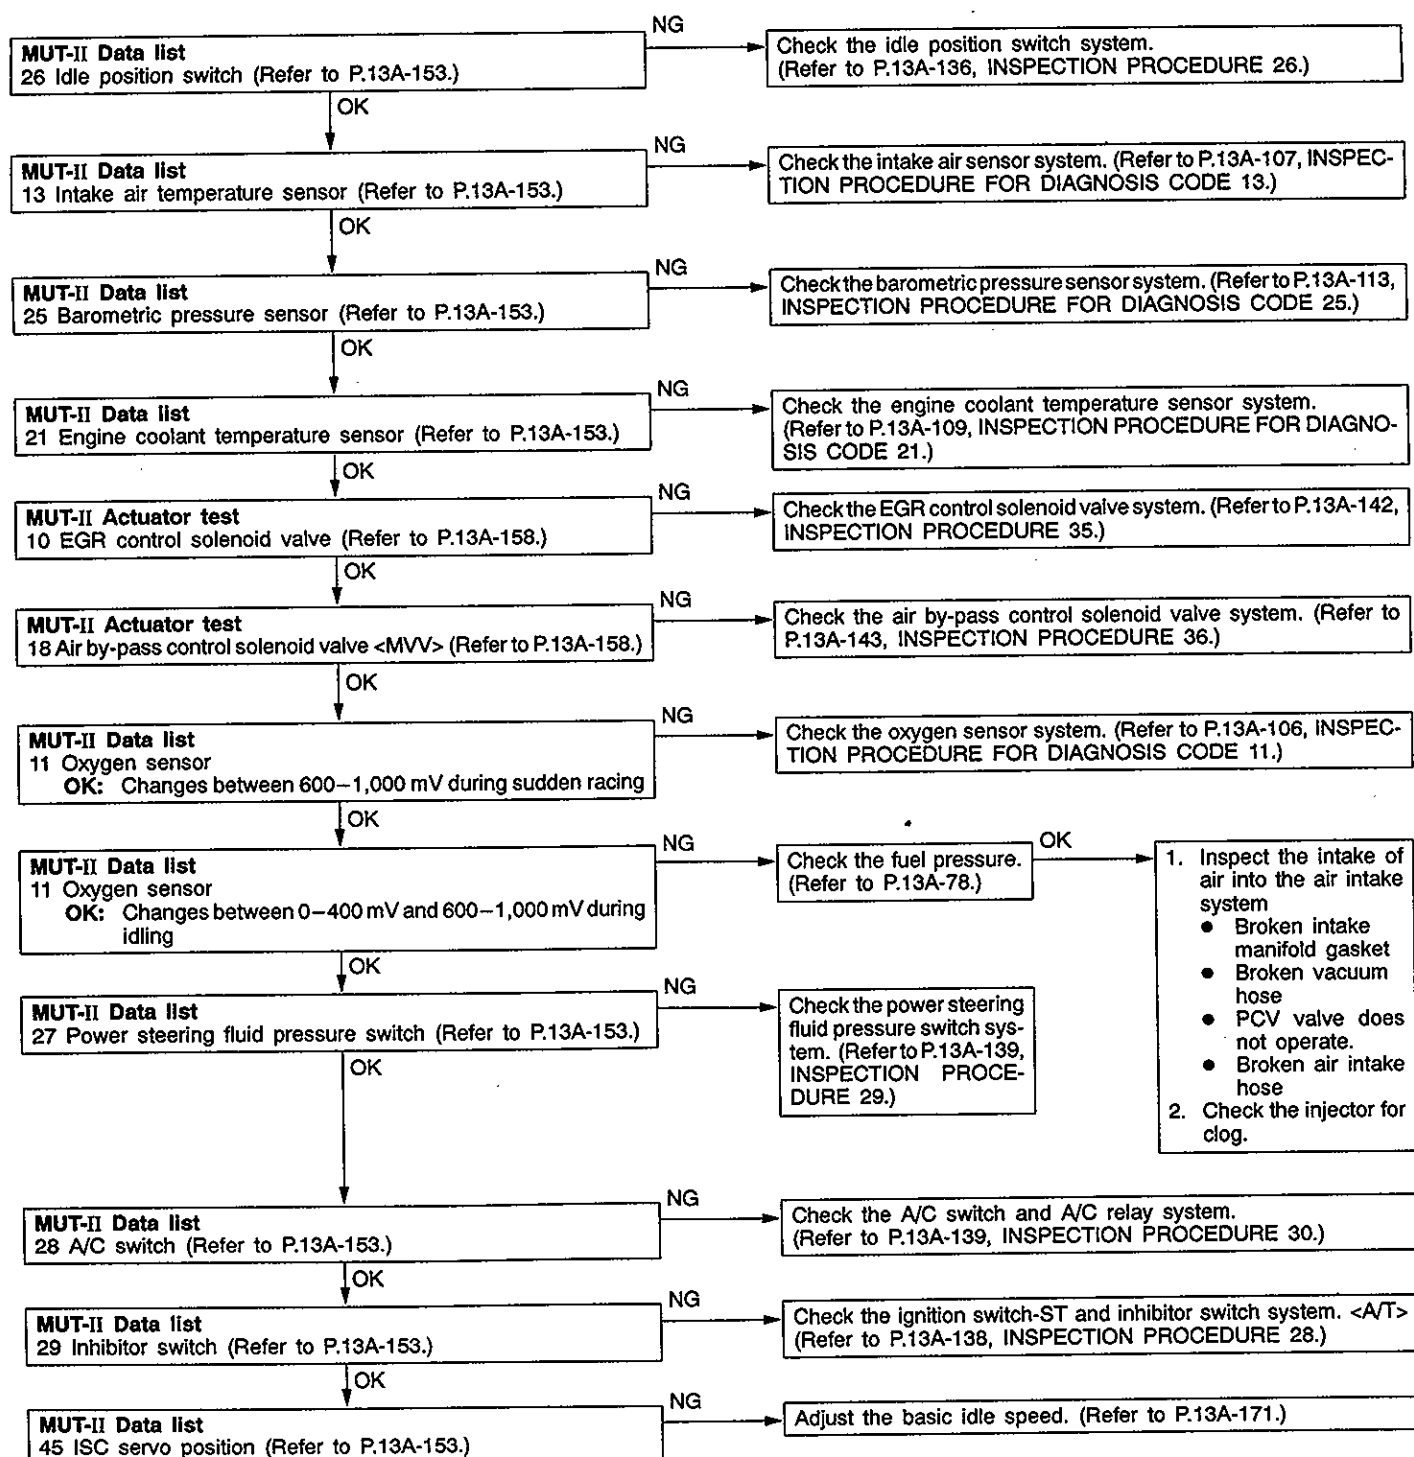
**MUT-II: Engine stalling inspection when the engine is warmed up and idling.**

## INSPECTION PROCEDURE 43

**MUT-II: Check if hesitation, sug, stumble or poor acceleration occurs.**

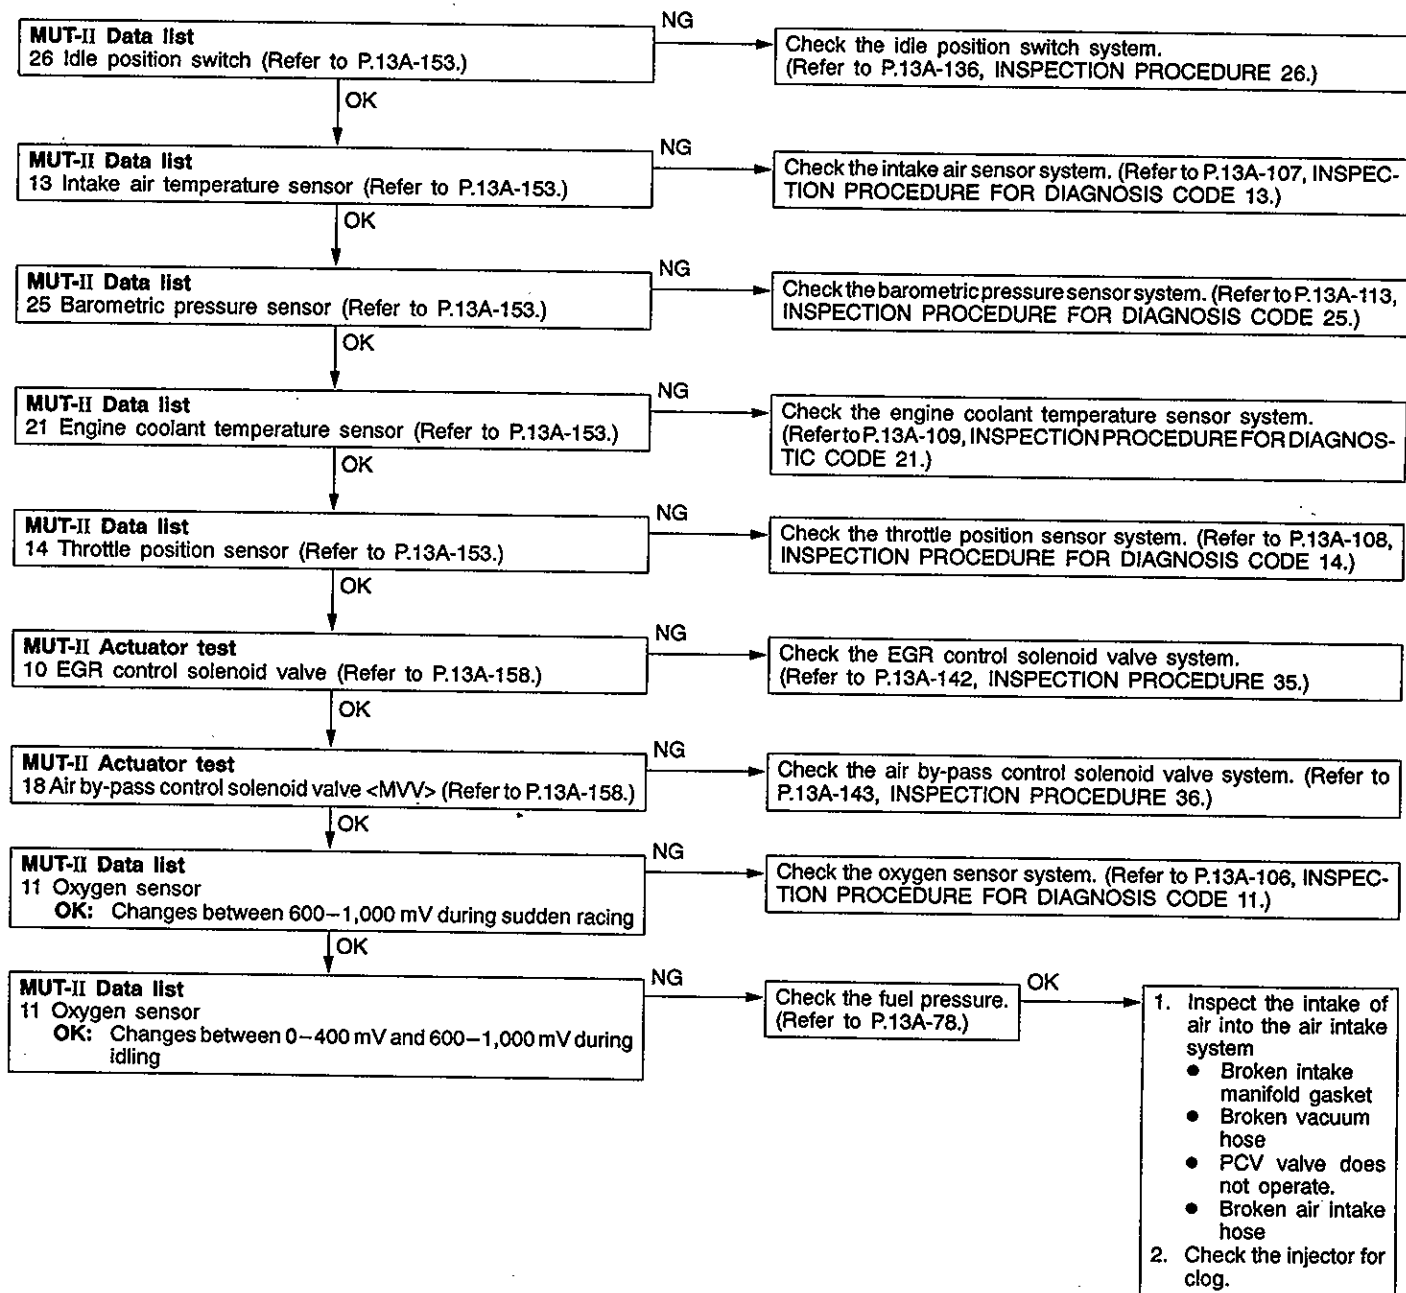


## INSPECTION PROCEDURE 44

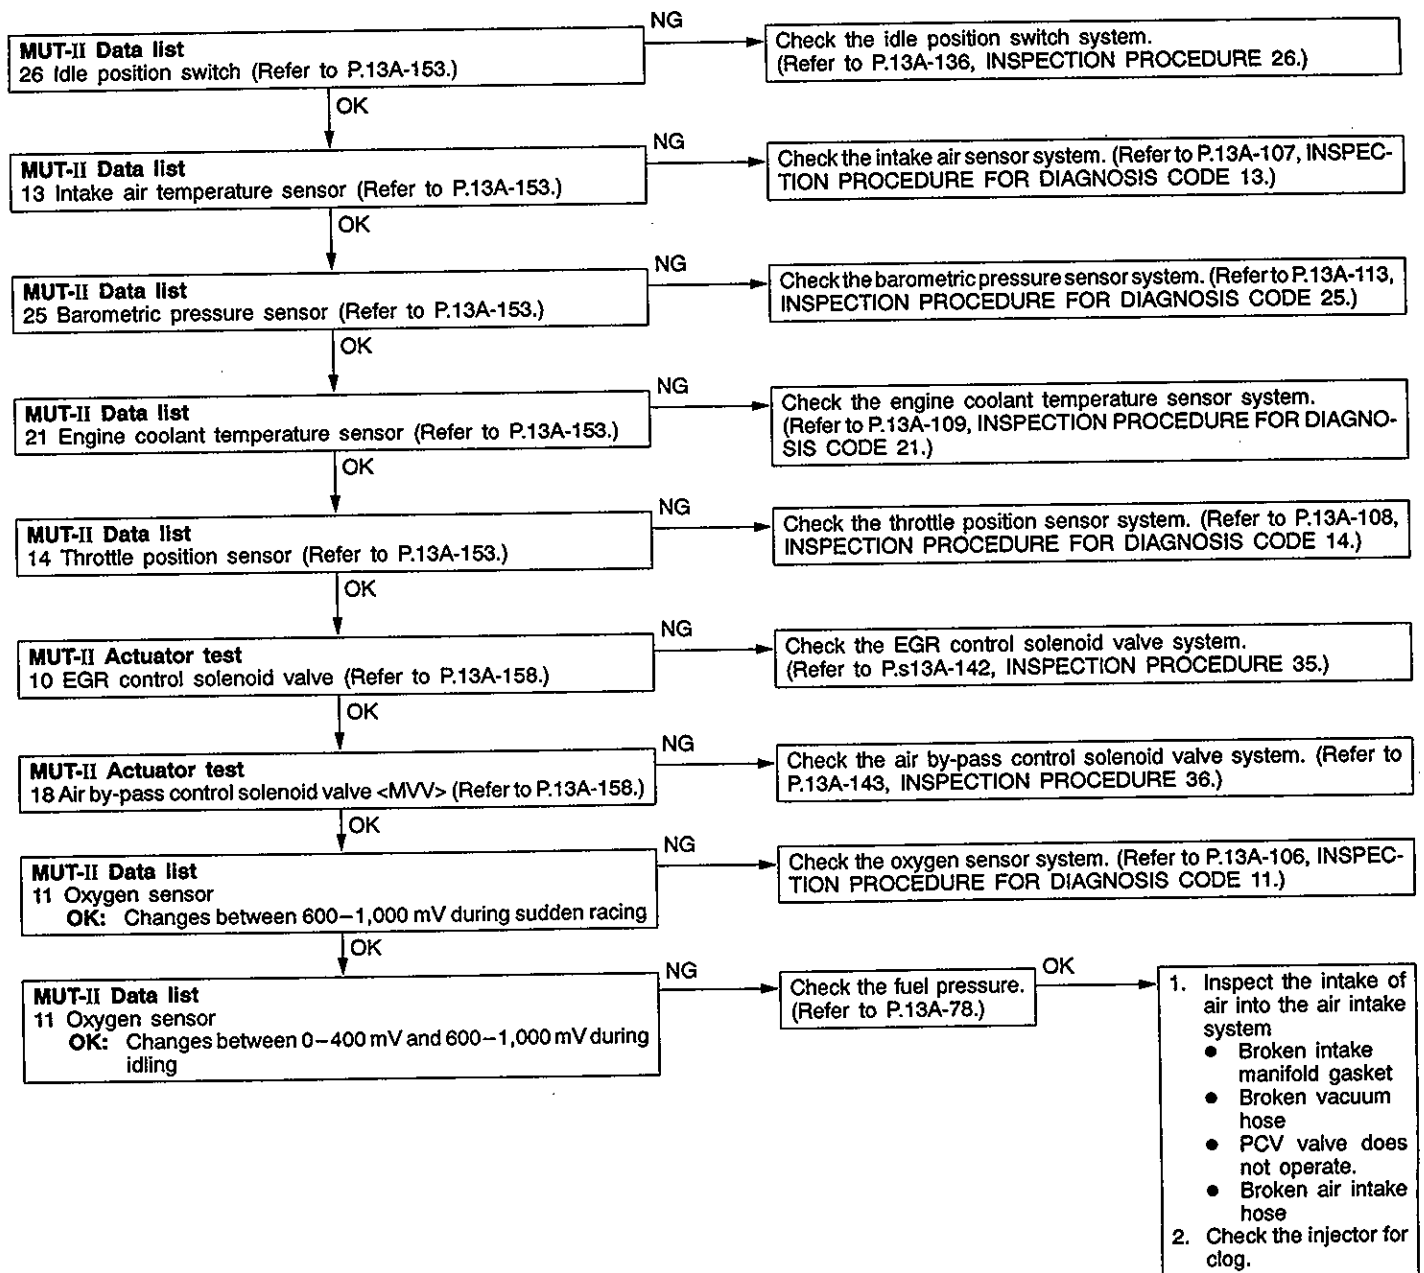**MUT-II: Check if surge occurs.**


## INSPECTION PROCEDURE 45

## Check the engine-ECU power supply and earth circuit.

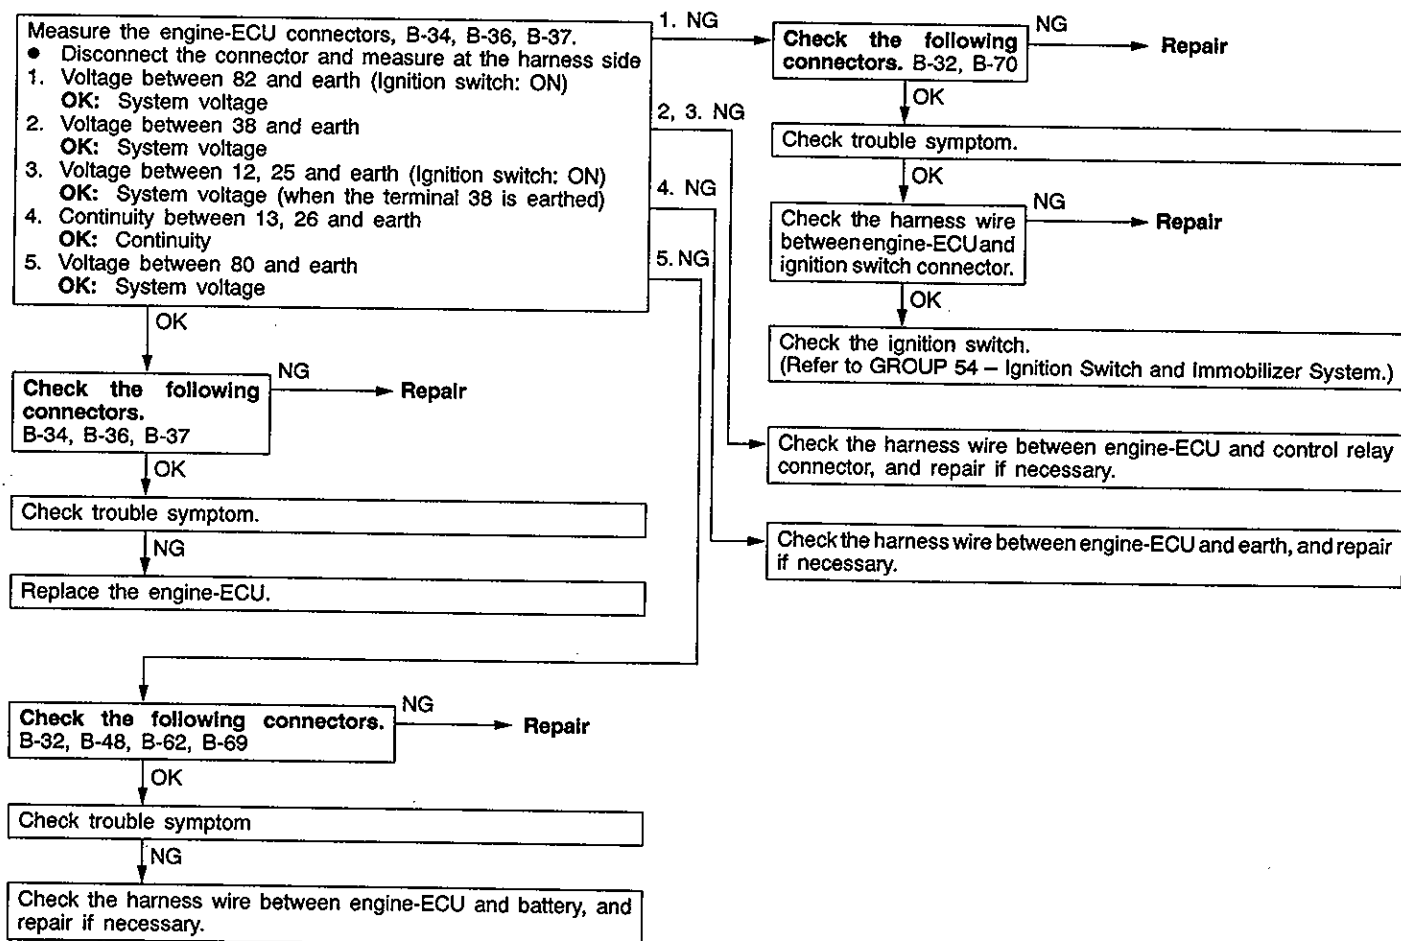


## INSPECTION PROCEDURE 46

## Check fuel pump circuit.

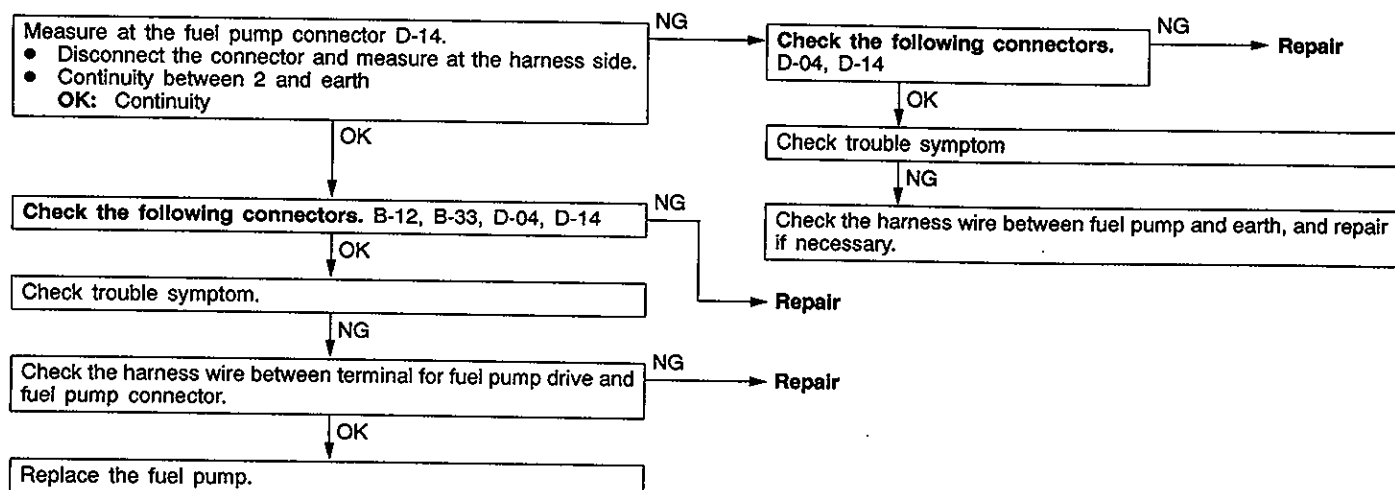


## INSPECTION PROCEDURE 47

## Check the fuel pump drive control circuit.

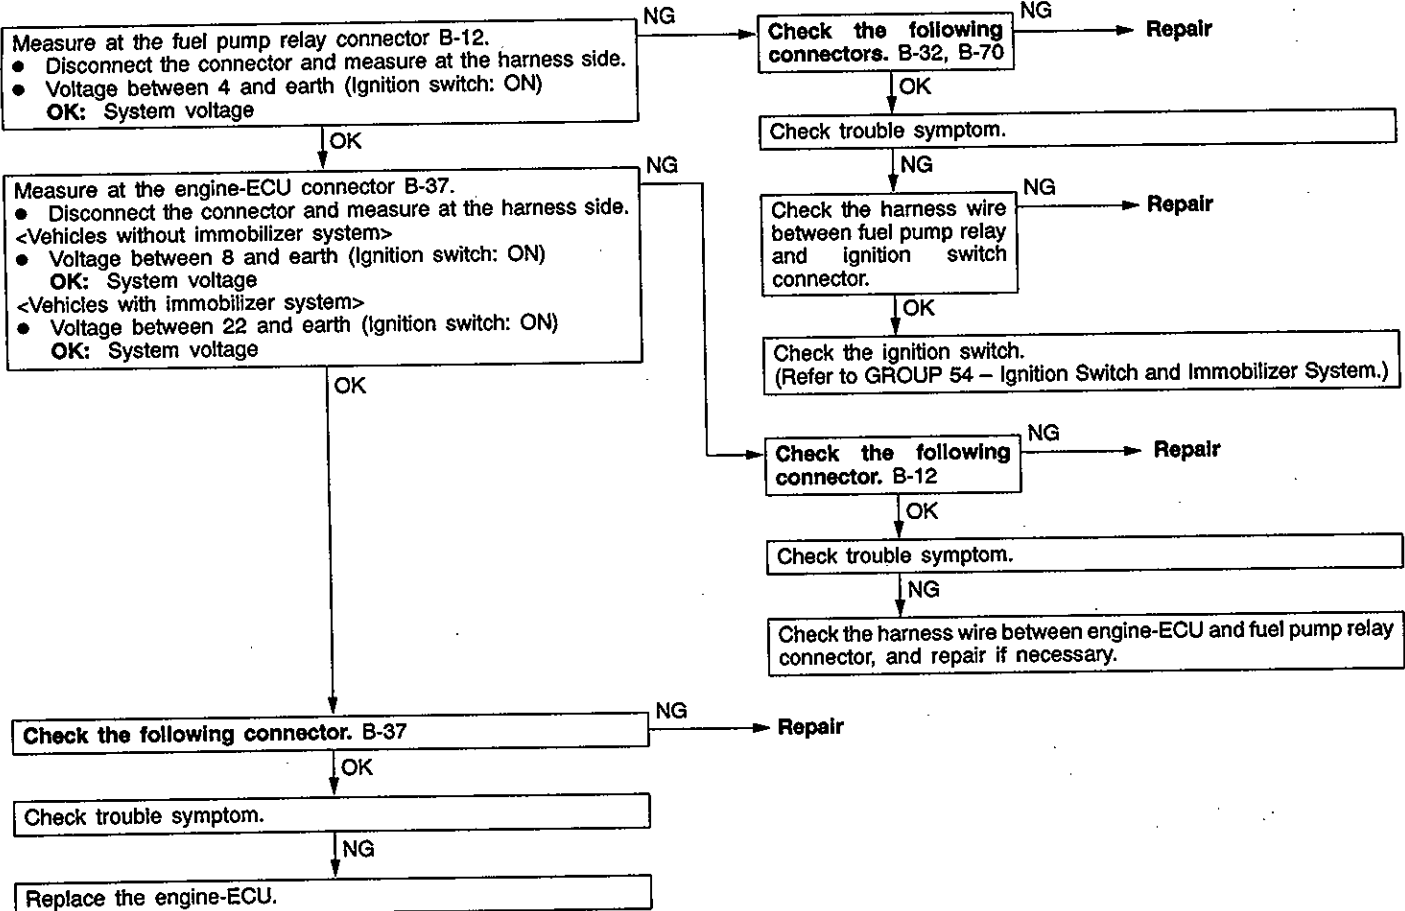


## INSPECTION PROCEDURE 48

## Check air flow sensor (AFS) control circuit.

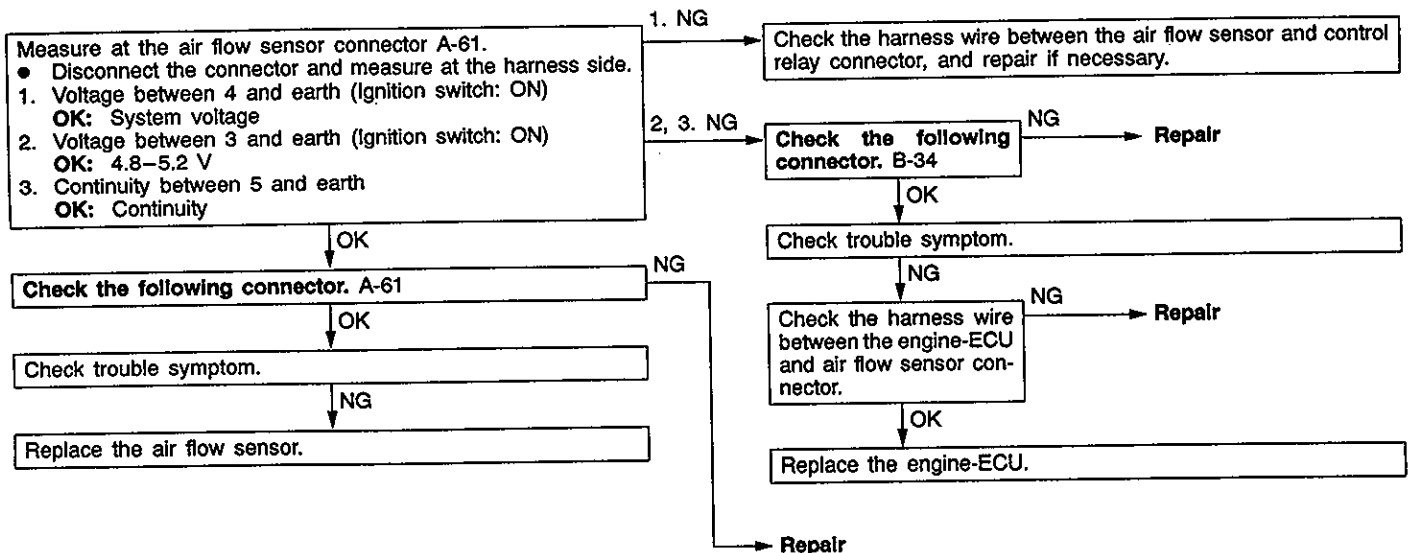


## INSPECTION PROCEDURE 49

## Check throttle position sensor (TPS) output circuit.

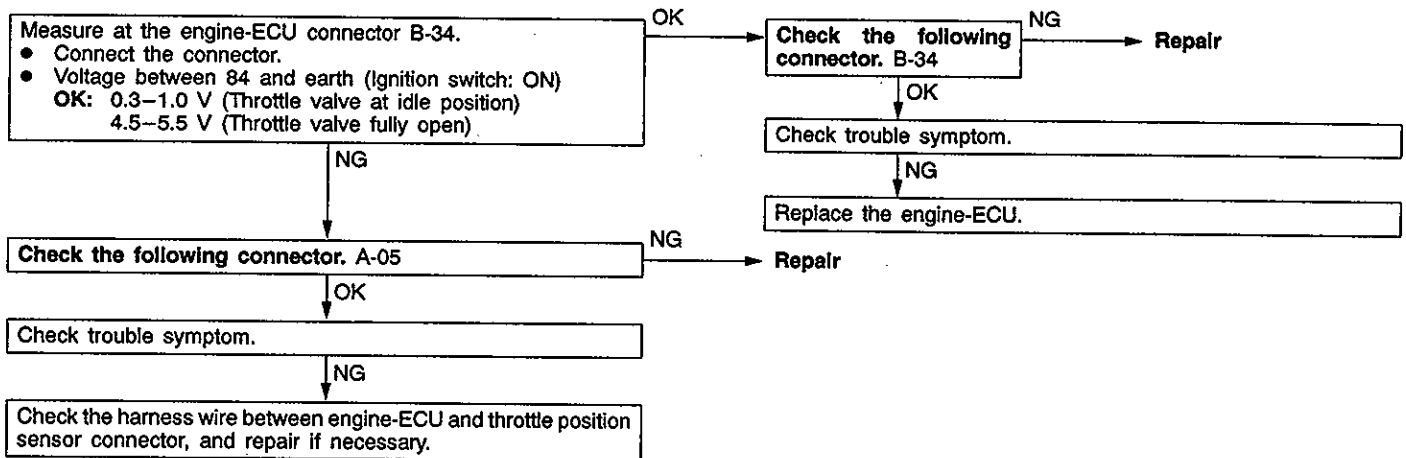

## INSPECTION PROCEDURE 50

## Check injector control circuit

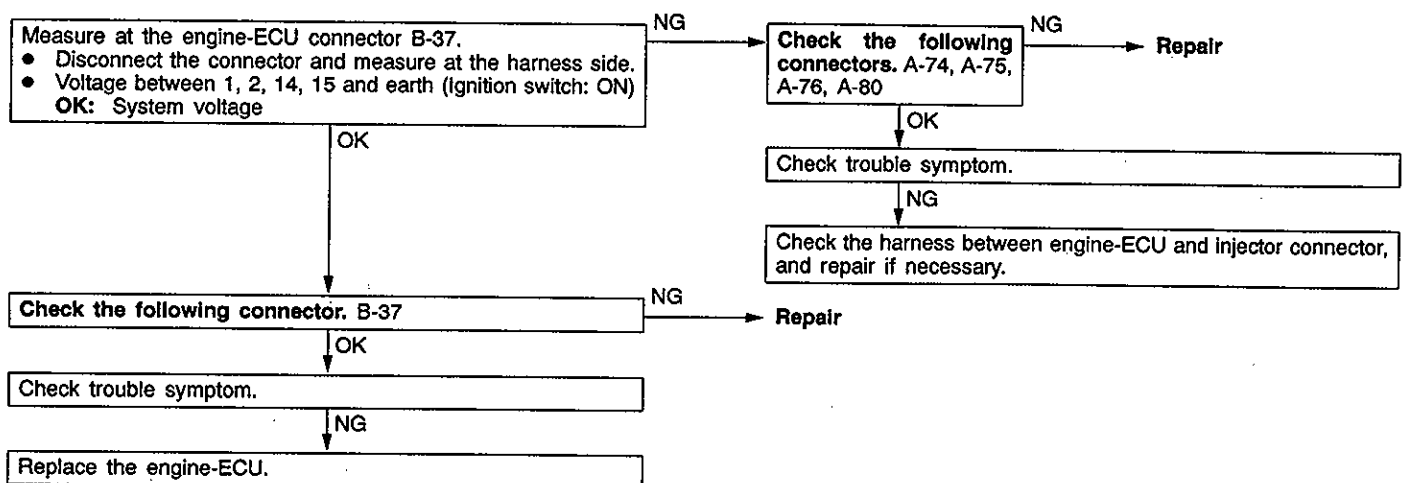

## DATA LIST REFERENCE TABLE

13100890104

**Caution**

When shifting the select lever to D range, the brakes should be applied so that the vehicle does not move forward.

**NOTE**

- \*1. In a new vehicle [driven approximately 500 km or less], the air flow sensor output frequency is sometimes 10% higher than the standard frequency.
- \*2. The idle position switch normally turns off when the voltage of the throttle position sensor is 50–100 mV higher than the voltage at the idle position. If the throttle position switch turns back on after the throttle position sensor voltage has risen by 100 mV and the throttle valve has opened, the idle position switch and the throttle position sensor need to be adjusted.
- \*3. The injector drive time represents the time when the cranking speed is at 250 r/min or below when the power supply voltage is 11 V.
- \*4. In a new vehicle [driven approximately 500 km or less], the injector drive time is sometimes 10% longer than the standard time.
- \*5. In a new vehicle [driven approximately 500 km or less], the step of the stepper motor is sometimes 30 steps greater than the standard value.

| Item No. | Inspection item   | Inspection contents                                                                                                                                                                                     |                                                     | Normal condition                          | Inspection procedure No. | Reference page |
|----------|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------|-------------------------------------------|--------------------------|----------------|
| 11       | Oxygen sensor     | Engine:After having warmed up                                                                                                                                                                           | When at 4,000 r/min, engine is suddenly decelerated | 200 mV or less                            | Code No. 11              | 13A-106        |
|          |                   | Air/fuel mixture is made leaner when decelerating, and is made richer when racing.                                                                                                                      | When engine is suddenly raced                       | 600–1,000 mV                              |                          |                |
|          |                   | Engine:After having warmed up                                                                                                                                                                           | Engine is idling                                    | 400 mV or less<br>(Changes)               |                          |                |
|          |                   | The oxygen sensor signal is used to check the air/fuel mixture ratio, and control condition is also checked by the ECU.                                                                                 | 2,500 r/min                                         | 600–1,000 mV                              |                          |                |
| 12       | Air flow sensor*1 | <ul style="list-style-type: none"> <li>● Engine coolant temperature: 80–95°C</li> <li>● Lamps, electric cooling fan and all accessories: OFF</li> <li>● Transmission: Neutral (A/T: P range)</li> </ul> | Engine is idling                                    | 25–51 Hz                                  | —                        | —              |
|          |                   |                                                                                                                                                                                                         | 2,500 r/min                                         | 80–120 Hz                                 |                          |                |
|          |                   |                                                                                                                                                                                                         | Engine is raced                                     | Frequency increases in response to racing |                          |                |

| Item No. | Inspection item                      | Inspection contents                        |                                          | Normal condition                                  | Inspection procedure No. | Reference page                 |
|----------|--------------------------------------|--------------------------------------------|------------------------------------------|---------------------------------------------------|--------------------------|--------------------------------|
| 13       | Intake air temperature sensor        | Ignition switch: ON or with engine running | When intake air temperature is -20°C     | -20°C                                             | Code No. 13              | 13A-107                        |
|          |                                      |                                            | When intake air temperature is 0°C       | 0°C                                               |                          |                                |
|          |                                      |                                            | When intake air temperature is 20°C      | 20°C                                              |                          |                                |
|          |                                      |                                            | When intake air temperature is 40°C      | 40°C                                              |                          |                                |
|          |                                      |                                            | When intake air temperature is 80°C      | 80°C                                              |                          |                                |
| 14       | Throttle position sensor             | Ignition switch: ON                        | Set to idle position                     | 300–1,000 mV                                      | Code No. 14              | 13A-108                        |
|          |                                      |                                            | Gradually open                           | Increases in proportion to throttle opening angle |                          |                                |
|          |                                      |                                            | Open fully                               | 4,500–5,500 mV                                    |                          |                                |
| 16       | Power supply voltage                 | Ignition switch: ON                        |                                          | System voltage                                    | Procedure No. 24         | 13A-135                        |
| 18       | Cranking signal (ignition switch-ST) | Ignition switch: ON                        | Engine: Stopped                          | OFF                                               | Procedure No. 27 <M/T>   | 13A-137 <M/T><br>13A-138 <M/T> |
|          |                                      |                                            | Engine: Cranking                         | ON                                                | Procedure No. 28 <A/T>   |                                |
| 21       | Engine coolant temperature sensor    | Ignition switch: ON or with engine running | When engine coolant temperature is -20°C | -20°C                                             | Code No. 21              | 13A-109                        |
|          |                                      |                                            | When engine coolant temperature is 0°C   | 0°C                                               |                          |                                |
|          |                                      |                                            | When engine coolant temperature is 20°C  | 20°C                                              |                          |                                |
|          |                                      |                                            | When engine coolant temperature is 40°C  | 40°C                                              |                          |                                |
|          |                                      |                                            | When engine coolant temperature is 80°C  | 80°C                                              |                          |                                |

| Item No. | Inspection item                      | Inspection contents                                                                                |                                                                     | Normal condition                                      | Inspection procedure No. | Reference page |
|----------|--------------------------------------|----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------|-------------------------------------------------------|--------------------------|----------------|
| 22       | Crank angle sensor                   | <ul style="list-style-type: none"> <li>Engine: Cranking</li> <li>Tachometer: Connected</li> </ul>  | Compare the engine speed readings on the tachometer and the MUT-II. | Accord                                                | Code No. 22              | 13A-110        |
|          |                                      |                                                                                                    |                                                                     |                                                       |                          |                |
|          |                                      | <ul style="list-style-type: none"> <li>Engine: Idling</li> <li>Idle position switch: ON</li> </ul> | When engine coolant temperature is -20°C                            | 1,400–1,600 rpm <except MVV><br>1,500–1,700 rpm <MVV> |                          |                |
|          |                                      |                                                                                                    | When engine coolant temperature is 0°C                              | 1,350–1,550 rpm                                       |                          |                |
|          |                                      |                                                                                                    | When engine coolant temperature is 20°C                             | 1,300–1,500 rpm                                       |                          |                |
|          |                                      |                                                                                                    | When engine coolant temperature is 40°C                             | 1,100–1,300 rpm                                       |                          |                |
|          |                                      |                                                                                                    | When engine coolant temperature is 80°C                             | 650–850 rpm <except MVV><br>600–800 rpm <MVV>         |                          |                |
| 25       | Barometric pressure sensor           | Ignition switch: ON                                                                                | At altitude of 0 m                                                  | 101 kPa                                               | Code No. 25              | 13A-113        |
|          |                                      |                                                                                                    | At altitude of 600 m                                                | 95 kPa                                                |                          |                |
|          |                                      |                                                                                                    | At altitude of 1,200 m                                              | 88 kPa                                                |                          |                |
|          |                                      |                                                                                                    | At altitude of 1,800 m                                              | 81 kPa                                                |                          |                |
| 26       | Idle position switch                 | Ignition switch: ON<br>Check by operating accelerator pedal repeatedly                             | Throttle valve: Set to idle position                                | ON                                                    | Procedure No. 26         | 13A-136        |
|          |                                      |                                                                                                    | Throttle valve: Slightly open                                       | OFF*2                                                 |                          |                |
| 27       | Power steering fluid pressure switch | Engine: Idling                                                                                     | Steering wheel stationary                                           | OFF                                                   | Procedure No. 29         | 13A-139        |
|          |                                      |                                                                                                    | Steering wheel turning                                              | ON                                                    |                          |                |


| Item No. | Inspection item                      | Inspection contents                                                                                                                                                                                |                                                                                                    | Normal condition                                    | Inspection procedure No. | Reference page |
|----------|--------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|-----------------------------------------------------|--------------------------|----------------|
| 28       | A/C switch                           | Engine: Idling<br>(when A/C switch is ON, A/C compressor should be operating.)                                                                                                                     | A/C switch: OFF                                                                                    | OFF                                                 | Procedure No. 30         | 13A-139        |
|          |                                      |                                                                                                                                                                                                    | A/C switch: ON                                                                                     | ON                                                  |                          |                |
| 29       | Inhibitor switch<br><A/T>            | Ignition switch: ON                                                                                                                                                                                | P or N                                                                                             | P or N                                              | Procedure No. 28         | 13A-138        |
|          |                                      |                                                                                                                                                                                                    | D, 2, L or R                                                                                       | D, 2, L or R                                        |                          |                |
| 41       | Injectors *3                         | Engine: Cranking                                                                                                                                                                                   | When engine coolant temperature is 0°C (injection is carried out for all cylinders simultaneously) | 13–19 ms<br><except MVV><br>15–23 ms<br><MVV>       | –                        | –              |
|          |                                      |                                                                                                                                                                                                    | When engine coolant temperature is 20°C                                                            | 27–40 ms<br><except MVV><br>30–44 ms<br><MVV>       |                          |                |
|          |                                      |                                                                                                                                                                                                    | When engine coolant temperature is 80°C                                                            | 5.9–8.9 ms<br><except MVV><br>7.0–10.6 ms<br><MVV>  |                          |                |
|          | Injectors*4                          | <ul style="list-style-type: none"> <li>Engine coolant temperature: 80–95°C</li> <li>Lamps, electric cooling fan and all accessories: OFF</li> <li>Transmission: Neutral (A/T : P range)</li> </ul> | Engine is idling                                                                                   | 1.7–2.9 ms<br><except MVV><br>1.6–2.8 ms<br><MVV>   |                          |                |
|          |                                      |                                                                                                                                                                                                    | 2,500 r/min                                                                                        | 1.4–2.6 ms                                          |                          |                |
|          |                                      |                                                                                                                                                                                                    | When engine is suddenly raced                                                                      | Increases                                           |                          |                |
|          |                                      |                                                                                                                                                                                                    |                                                                                                    |                                                     |                          |                |
| 44       | Ignition coils and power transistors | <ul style="list-style-type: none"> <li>Engine: After having warmed up</li> <li>Timing lamp is set. (The timing lamp is set in order to check actual ignition timing.)</li> </ul>                   | Engine is idling                                                                                   | 2–18° BTDC<br><except MVV><br>4–20° BTDC<br><MVV>   | –                        | –              |
|          |                                      |                                                                                                                                                                                                    | 2,500 r/min                                                                                        | 30–50° BTDC<br><except MVV><br>25–45° BTDC<br><MVV> |                          |                |

| Item No. | Inspection item                 | Inspection contents                                                                                                                                                                                                                                                                                                             |                                                                                                            | Normal condition                         | Inspection procedure No. | Reference page |
|----------|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|------------------------------------------|--------------------------|----------------|
| 45       | ISC (stepper) motor position *5 | <ul style="list-style-type: none"> <li>Engine coolant temperature: 80–95°C</li> <li>Lamps, electric cooling fan and all accessories: OFF</li> <li>Transmission: Neutral (A/T : P range)</li> <li>Idle position switch: ON</li> <li>Engine: Idling</li> <li>When A/C switch is ON, A/C compressor should be operating</li> </ul> | A/C switch: OFF                                                                                            | 2–25 STEP                                | –                        | –              |
|          |                                 |                                                                                                                                                                                                                                                                                                                                 | A/C switch: OFF → ON                                                                                       | Increases by 10–70 steps                 |                          |                |
|          |                                 |                                                                                                                                                                                                                                                                                                                                 | <ul style="list-style-type: none"> <li>A/C switch: OFF</li> <li>Select lever: N range → D range</li> </ul> | Increases by 5–50 steps                  |                          |                |
| 49       | A/C relay                       | Engine: After having warmed up/Engine is idling                                                                                                                                                                                                                                                                                 | A/C switch: OFF                                                                                            | OFF (Compressor clutch is not operating) | Procedure No. 30         | 13A-139        |
|          |                                 |                                                                                                                                                                                                                                                                                                                                 | A/C switch: ON                                                                                             | ON (Compressor clutch is operating)      |                          |                |

## ACTUATOR TEST REFERENCE TABLE

13100900135

| Item No. | Inspection item                          | Drive contents                               | Inspection contents                                                                                                                                 |                                                                                                                                                             | Normal condition                                               | Inspection procedure No. | Reference page |
|----------|------------------------------------------|----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|--------------------------|----------------|
| 01       | Injectors                                | Cut fuel to No. 1 injector                   | Engine:<br>After having warmed up/Engine is idling<br>(Cut the fuel supply to each injector in turn and check cylinders which don't affect idling.) |                                                                                                                                                             | Idling condition becomes different (becomes unstable).         | Code No. 41              | 13A-114        |
| 02       |                                          | Cut fuel to No. 2 injector                   |                                                                                                                                                     |                                                                                                                                                             |                                                                |                          |                |
| 03       |                                          | Cut fuel to No. 3 injector                   |                                                                                                                                                     |                                                                                                                                                             |                                                                |                          |                |
| 04       |                                          | Cut fuel to No. 4 injector                   |                                                                                                                                                     |                                                                                                                                                             |                                                                |                          |                |
| 07       | Fuel pump                                | Fuel pump operates and fuel is recirculated. | <ul style="list-style-type: none"> <li>Engine: Cranking</li> <li>Fuel pump: Forced driving</li> </ul>                                               | Pinch the return hose with fingers to feel the pulse of the fuel being recirculated.<br><br>Listen near the fuel tank for the sound of fuel pump operation. | Pulse is felt.<br><br>Sound of operation is heard.             | Procedure No. 25         | 13A-136        |
| 08       | Purge control solenoid valve             | Solenoid valve turns from OFF to ON.         | Ignition switch: ON                                                                                                                                 |                                                                                                                                                             | Sound of operation can be heard when solenoid valve is driven. | Procedure No. 34         | 13A-141        |
| 10       | EGR control solenoid valve               | Solenoid valve turns from OFF to ON.         | Ignition switch: ON                                                                                                                                 |                                                                                                                                                             | Sound of operation can be heard when solenoid valve is driven. | Procedure No. 35         | 13A-142        |
| 17       | Basic ignition timing                    | Set to ignition timing adjustment mode       | Engine: Idling<br>Timing light is set                                                                                                               |                                                                                                                                                             | 5° BTDC                                                        | —                        | —              |
| 18       | Air by-pass control solenoid valve <MVV> | Solenoid valve turns from OFF to ON.         | Ignition switch: ON                                                                                                                                 |                                                                                                                                                             | Sound of operation can be heard when solenoid valve is driven. | Procedure No. 36         | 13A-143        |
| 20       | Condenser fan                            | Drive the fan motors (condenser)             | <ul style="list-style-type: none"> <li>Ignition switch: ON</li> <li>A/C switch: ON</li> </ul>                                                       |                                                                                                                                                             | Fan motor operates                                             | Procedure No. 31         | 13A-140        |
| 21       | Radiator fan                             | Drive the fan motors (radiator)              | <ul style="list-style-type: none"> <li>Ignition switch: ON</li> </ul>                                                                               |                                                                                                                                                             | Fan motor operates                                             | Procedure No. 31         | 13A-140        |

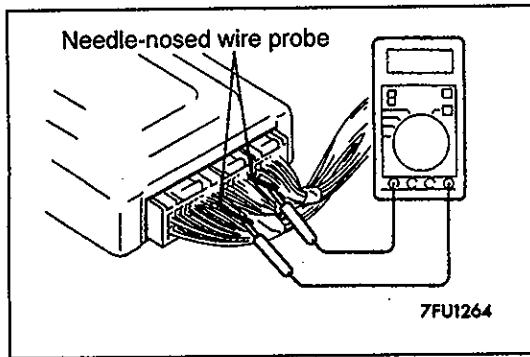

## CHECK AT THE ENGINE-ECU TERMINALS

13100920100

### TERMINAL VOLTAGE CHECK CHART

1. Connect a needle-nosed wire probe (test harness: MB991223 or paper clip) to a voltmeter probe.
2. Insert the needle-nosed wire probe into each of the engine-ECU connector terminals from the wire side, and measure the voltage while referring to the check chart.

#### NOTE


1. Make the voltage measurement with the engine-ECU connectors connected.
2. You may find it convenient to pull out the engine-ECU to make it easier to reach the connector terminals.
3. The checks can be carried out off the order given in the chart.

#### Caution

**Short-circuiting the positive (+) probe between a connector terminal and earth could damage the vehicle wiring, the sensor, engine-ECU or all of them. Be careful to prevent this!**

3. If voltmeter shows any division from standard value, check the corresponding sensor, actuator and related electrical wiring, then repair or replace.
4. After repair or replacement, recheck with the voltmeter to confirm that the repair has corrected the problem.

## Engine-ECU Connector Terminal Arrangement

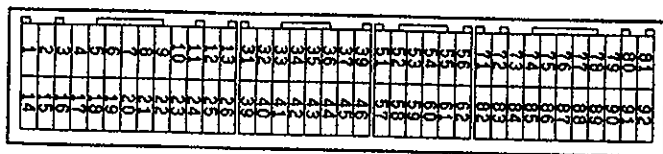

9FU0393

## NOTE

\*: Vehicles with immobilizer system

| Terminal No. | Check item                                      | Check condition (Engine condition)                                                     | Normal condition                             |
|--------------|-------------------------------------------------|----------------------------------------------------------------------------------------|----------------------------------------------|
| 1            | No. 1 injector                                  | While engine is idling after having warmed up, suddenly depress the accelerator pedal. | From 11–14 V, momentarily drops slightly     |
| 14           | No. 2 injector                                  |                                                                                        |                                              |
| 2            | No. 3 injector                                  |                                                                                        |                                              |
| 15           | No. 4 injector                                  |                                                                                        |                                              |
| 4            | Stepper motor coil <A1>                         | Engine: Soon after the warmed up engine is started                                     | System voltage ↔ 0 V<br>(Changes repeatedly) |
| 17           | Stepper motor coil <A2>                         |                                                                                        |                                              |
| 5            | Stepper motor coil <B1>                         |                                                                                        |                                              |
| 18           | Stepper motor coil <B2>                         |                                                                                        |                                              |
| 6            | EGR control solenoid valve                      | Ignition switch: ON                                                                    | System Voltage                               |
|              |                                                 | While engine is idling, suddenly depress the accelerator pedal.                        | From system voltage, momentarily drops       |
| 8 or 22*     | Fuel pump relay                                 | Ignition switch: ON                                                                    | System voltage                               |
|              |                                                 | Engine: Idle speed                                                                     | 0–3V                                         |
| 9            | Purge control solenoid valve                    | Ignition switch: ON                                                                    | System voltage                               |
|              |                                                 | Running at 3,000r/min while engine is warming up after having been started.            | 0–3V                                         |
| 10           | Ignition coil – No. 1, No. 4 (power transistor) | Engine r/min: 3,000 r/min                                                              | 0.3–3.0V                                     |
| 23           | Ignition coil – No. 2, No. 3 (power transistor) |                                                                                        |                                              |
| 12           | Power supply                                    | Ignition switch: ON                                                                    | System voltage                               |
| 25           |                                                 |                                                                                        |                                              |
| 19           | Air flow sensor reset signal                    | Engine: Idle speed                                                                     | 0–1V                                         |
|              |                                                 | Engine r/min: 3,000 r/min                                                              | 6–9V                                         |
| 20           | Condenser fan motor relay                       | Condenser fan is not operating (Engine coolant temperature is 90°C or less)            | System voltage                               |
|              |                                                 | Condenser fan is operating (Engine coolant temperature is 105°C or more)               | 0 – 3 V                                      |

| Terminal No. | Check item                               | Check condition (Engine condition)                                                                                                                             |                                                      | Normal condition                                     |
|--------------|------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------|------------------------------------------------------|
| 21           | Radiator fan motor relay                 | Radiator fan is not operating (Engine coolant temperature is 90°C or less)                                                                                     |                                                      | System voltage                                       |
|              |                                          | Radiator fan is operating (Engine coolant temperature is 90 – 105°C)                                                                                           |                                                      | 0 – 3 V                                              |
| 22 or 8*     | A/C relay                                | <ul style="list-style-type: none"> <li>Engine: Idle speed</li> <li>A/C switch: OFF → ON (A/C compressor is operating)</li> </ul>                               |                                                      | System voltage or momentarily 6V or more → 0–3V      |
| 33           | Alternator G terminal                    | <ul style="list-style-type: none"> <li>Engine: Warm, idle (radiator fan: OFF)</li> <li>Headlamp: OFF to ON</li> <li>Rear defogger switch: OFF to ON</li> </ul> |                                                      | 0.4 – 0.8 V to 0.8 – 1.2 V                           |
| 41           | Alternator FR terminal                   | <ul style="list-style-type: none"> <li>Engine: Warm, idle (radiator fan: OFF)</li> <li>Headlamp: OFF to ON</li> <li>Rear defogger switch: OFF to ON</li> </ul> |                                                      | 1.8 – 2.4 V to 1.0 – 1.6 V                           |
| 36           | Engine warning lamp                      | Ignition switch: OFF → ON                                                                                                                                      |                                                      | 0–3V → 9–13V<br>(After several seconds have elapsed) |
| 37           | Power steering fluid pressure switch     | Engine: Idling after warming up                                                                                                                                | When steering wheel is stationary                    | System voltage                                       |
|              |                                          |                                                                                                                                                                | When steering wheel is turned                        | 0–3V                                                 |
| 38           | Control relay (Power supply)             | Ignition switch: OFF                                                                                                                                           |                                                      | System voltage                                       |
|              |                                          | Ignition switch: ON                                                                                                                                            |                                                      | 0–3V                                                 |
| 39           | Air by-pass control solenoid valve <MVV> | Engine: Idling after warming up                                                                                                                                |                                                      | 0 – 3 V                                              |
|              |                                          | Engine r/min: 1,000 r/min                                                                                                                                      |                                                      | System voltage                                       |
| 45           | A/C switch                               | Engine: Idle speed                                                                                                                                             | Turn the A/C switch OFF                              | 0–3V                                                 |
|              |                                          |                                                                                                                                                                | Turn the A/C switch ON (A/C compressor is operating) | System voltage                                       |
| 58           | Tachometer signal                        | Engine r/min: 3,000 r/min                                                                                                                                      |                                                      | 0.3–3.0V                                             |
| 60           | Oxygen sensor heater                     | Engine: Idling after warming up                                                                                                                                |                                                      | 0–3V                                                 |
|              |                                          | Engine r/min: 5,000r/min.                                                                                                                                      |                                                      | System voltage                                       |
| 71           | Ignition switch – ST                     | Engine: Cranking                                                                                                                                               |                                                      | 8V or more                                           |

| Terminal No. | Check item                        | Check condition (Engine condition)                                                    |                                         | Normal condition                 |
|--------------|-----------------------------------|---------------------------------------------------------------------------------------|-----------------------------------------|----------------------------------|
| 72           | Intake air temperature sensor     | Ignition switch: ON                                                                   | When intake air temperature is 0°C      | 3.2–3.8V                         |
|              |                                   |                                                                                       | When intake air temperature is 20°C     | 2.3–2.9V                         |
|              |                                   |                                                                                       | When intake air temperature is 40°C     | 1.5–2.1V                         |
|              |                                   |                                                                                       | When intake air temperature is 80°C     | 0.4–1.0V                         |
| 76           | Oxygen sensor                     | Engine: Running at 2,500 r/min after warmed up (Check using a digital type voltmeter) |                                         | 0 ↔ 0.8V<br>(Changes repeatedly) |
| 80           | Backup power supply               | Ignition switch: OFF                                                                  |                                         | System voltage                   |
| 81           | Sensor impressed voltage          | Ignition switch: ON                                                                   |                                         | 4.5–5.5V                         |
| 82           | Ignition switch – IG              | Ignition switch: ON                                                                   |                                         | System voltage                   |
| 83           | Engine coolant temperature sensor | Ignition switch: ON                                                                   | When engine coolant temperature is 0°C  | 3.2–3.8V                         |
|              |                                   |                                                                                       | When engine coolant temperature is 20°C | 2.3–2.9V                         |
|              |                                   |                                                                                       | When engine coolant temperature is 40°C | 1.3–1.9V                         |
|              |                                   |                                                                                       | When engine coolant temperature is 80°C | 0.3–0.9V                         |

| Terminal No. | Check item                 | Check condition (Engine condition)                         |                                         | Normal condition               |
|--------------|----------------------------|------------------------------------------------------------|-----------------------------------------|--------------------------------|
| 84           | Throttle position sensor   | Ignition switch: ON                                        | Set throttle valve to idle position     | 0.3–1.0V                       |
|              |                            |                                                            | Fully open throttle valve               | 4.5–5.5V                       |
| 85           | Barometric pressure sensor | Ignition switch: ON                                        | When altitude is 0m                     | 3.7–4.3V                       |
|              |                            |                                                            | When altitude is 1,200m                 | 3.2–3.8V                       |
| 86           | Vehicle speed sensor       | ● Ignition switch: ON<br>● Move the vehicle slowly forward |                                         | 0 ↔ 5V<br>(Changes repeatedly) |
| 87           | Idle position switch       | Ignition switch: ON                                        | Set throttle valve to idle position     | 0–1V                           |
|              |                            |                                                            | Slightly open throttle valve            | 4V or more                     |
| 88           | Camshaft position sensor   | Engine: Cranking                                           |                                         | 0.4–3.0V                       |
|              |                            | Engine: Idle speed                                         |                                         | 0.5–2.0V                       |
| 89           | Crank angle sensor         | Engine: Cranking                                           |                                         | 0.4–4.0V                       |
|              |                            | Engine: Idle speed                                         |                                         | 1.5–2.5V                       |
| 90           | Air flow sensor            | Engine: Idle speed                                         |                                         | 2.2–3.2V                       |
|              |                            | Engine r/min: 2,500r/min                                   |                                         |                                |
| 91           | Inhibitor switch <A/T>     | Ignition switch: ON                                        | Set selector lever to P or N            | 0–3V                           |
|              |                            |                                                            | Set selector lever to Other than P or N | 8–14V                          |

**CHECK CHART FOR RESISTANCE AND CONTINUITY BETWEEN TERMINALS**

1. Turn the ignition switch to OFF.
2. Disconnect the engine-ECU connector.
3. Measure the resistance and check for continuity between the terminals of the engine-ECU harness-side connector while referring to the check chart.


**NOTE**

1. When measuring resistance and checking continuity, a harness for checking contact pin pressure should be used instead of inserting a test probe.
2. Checking need not be carried out in the order given in the chart.

**Caution**

If the terminals that should be checked are mistaken, or if connector terminals are not correctly shorted to earth, damage may be caused to the vehicle wiring, sensors, engine-ECU and/or ohmmeter.  
Be careful to prevent this!


4. If the ohmmeter shows any deviation from the standard value, check the corresponding sensor, actuator and related electrical wiring, and then repair or replace.
5. After repair or replacement, recheck with the ohmmeter to confirm that the repair or replacement has corrected the problem.

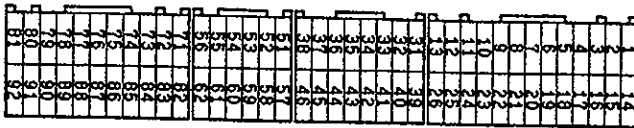**Engine-ECU Harness Side Connector Terminal Arrangement**

9FU0392

| Terminal No. | Inspection item | Normal condition (Check condition) |
|--------------|-----------------|------------------------------------|
| 1-12         | No. 1 injector  | 13-16 $\Omega$ (At 20°C)           |
| 14-12        | No. 2 injector  |                                    |
| 2-12         | No. 3 injector  |                                    |
| 15-12        | No. 4 injector  |                                    |

| Terminal No.  | Inspection item                    | Normal condition (Check condition)                         |
|---------------|------------------------------------|------------------------------------------------------------|
| 4–12          | Stepper motor coil (A1)            | 28–33 $\Omega$ (At 20°C)                                   |
| 17–12         | Stepper motor coil (A2)            |                                                            |
| 5–12          | Stepper motor coil (B1)            |                                                            |
| 18–12         | Stepper motor coil (B2)            |                                                            |
| 6–12          | EGR control solenoid valve         | 36–44 $\Omega$ (At 20°C)                                   |
| 9–12          | Purge control solenoid valve       | 36–44 $\Omega$ (At 20°C)                                   |
| 13–Body earth | ENGINE-ECU earth                   | Continuity (0 $\Omega$ )                                   |
| 26–Body earth | ENGINE-ECU earth                   |                                                            |
| 39–12         | Air by-pass control solenoid valve | 36 – 44 $\Omega$ (At 20°C)                                 |
| 60–12         | Oxygen sensor heater               | 7–40 $\Omega$ (At 20°C)                                    |
| 72–92         | Intake air temperature sensor      | 5.3–6.7 k $\Omega$ (When intake air temperature is 0°C)    |
|               |                                    | 2.3–3.0 k $\Omega$ (When intake air temperature is 20°C)   |
|               |                                    | 1.0–1.5 k $\Omega$ (When intake air temperature is 40°C)   |
|               |                                    | 0.30–0.42 k $\Omega$ (When intake air temperature is 80°C) |
| 83–92         | Engine coolant temperature sensor  | 5.1–6.5 k $\Omega$ (When coolant temperature is 0°C)       |
|               |                                    | 2.1–2.7 k $\Omega$ (When coolant temperature is 20°C)      |
|               |                                    | 0.9–1.3 k $\Omega$ (When coolant temperature is 40°C)      |
|               |                                    | 0.26–0.36 k $\Omega$ (When coolant temperature is 80°C)    |
| 87–92         | Idle position switch               | Continuity (when throttle valve is at idle position)       |
|               |                                    | No continuity (when throttle valve is slightly open)       |
| 91–Body earth | Inhibitor switch <AT>              | Continuity (when select lever is at P or N)                |
|               |                                    | No continuity (when select lever is at D, 2, L or R)       |

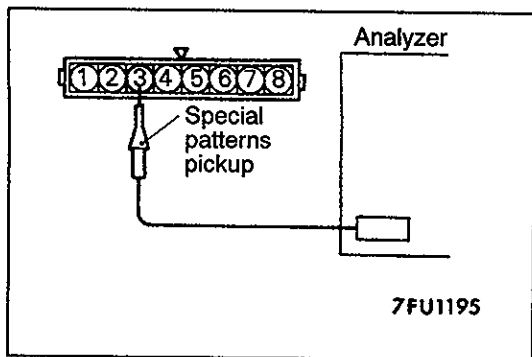

## INSPECTION PROCEDURE USING AN ANALYZER

13100930103

### AIR FLOW SENSOR (AFS)

#### Measurement Method

1. Disconnect the air flow sensor connector, and connect the special tool (test harness: MB991348) in between. (All terminals should be connected.)
2. Connect the analyzer special patterns pickup to air flow sensor connector terminal 3.

#### Alternate Method (Test harness not available)


1. Connect the analyzer special patterns pickup to engine-ECU terminal 90.

#### Standard Wave Pattern


##### Observation conditions

| Function         | Special patterns |
|------------------|------------------|
| Pattern height   | Low              |
| Pattern selector | Display          |
| Engine r/min     | Idle speed       |

#### Standard wave pattern

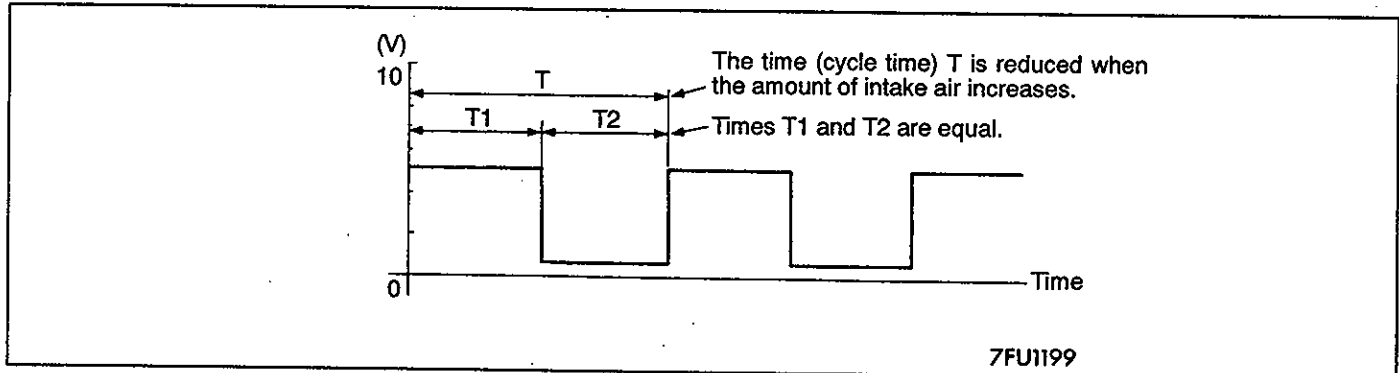


#### Observation conditions (from conditions above engine speed is increased by racing.)

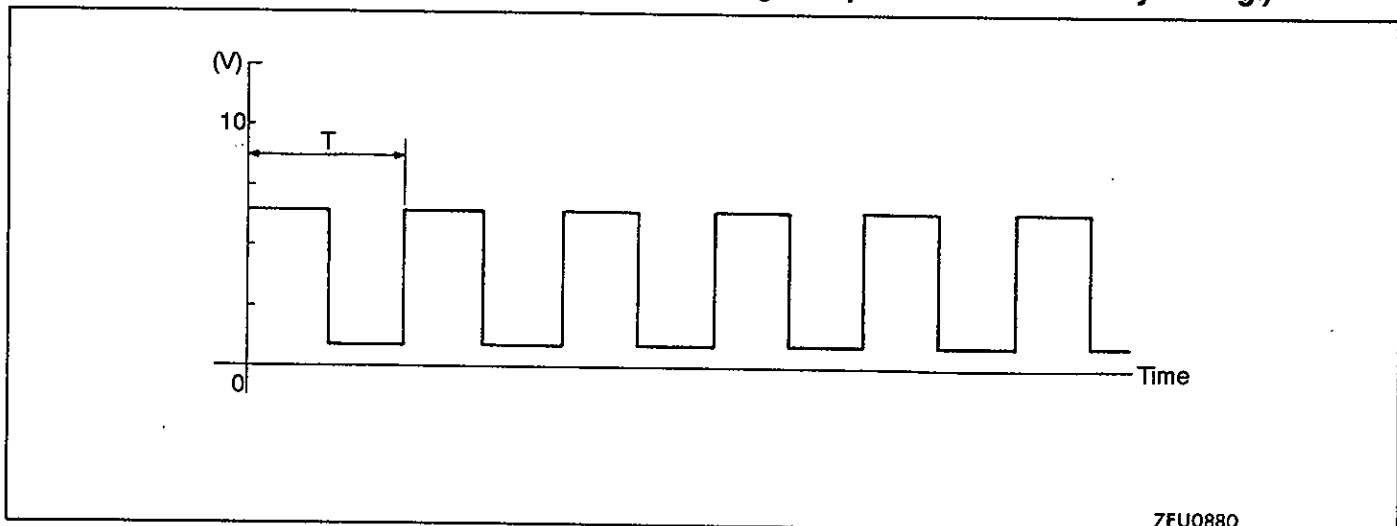

#### Wave Pattern Observation Points

Check that cycle time T becomes shorter and the frequency increases when the engine speed is increased.

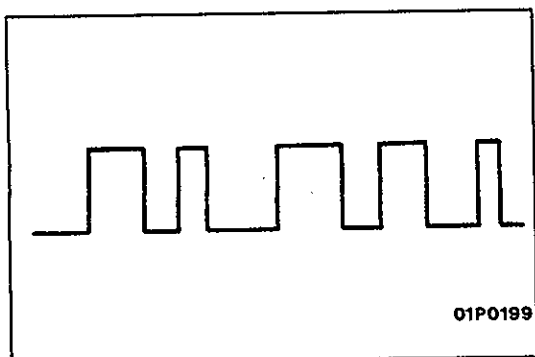

### Examples of Abnormal Wave Patterns

#### ● Example 1

##### Cause of problem

Sensor interface malfunction

##### Wave pattern characteristics

Rectangular wave pattern is output even when the engine is not started.


#### ● Example 2

##### Cause of problem

Damaged rectifier or vortex generation column

##### Wave pattern characteristics

Unstable wave pattern with non-uniform frequency. However, when an ignition leak occurs during acceleration, the wave pattern will be distorted temporarily, even if the air flow sensor is normal.

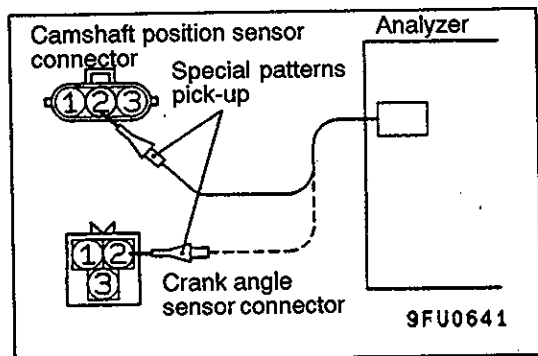

### CAMSHAFT POSITION SENSOR AND CRANK ANGLE SENSOR

#### Measurement Method

1. Disconnect the camshaft position sensor connector and connect the special tool (test harness: MB991223) and jumper wire in between. (All terminals should be connected.)
2. Connect the analyzer special patterns pickup to camshaft position sensor terminal 2.
3. Disconnect the crank angle sensor connector and connect the special tool (test harness: MD998478) in between.
4. Connect the analyzer special patterns pickup to crank angle sensor terminal 2.

#### Alternate Method (Test harness not available)


1. Connect the analyzer special patterns pickup to engine-ECU terminal 88. (When checking the camshaft position sensor signal wave pattern.)
2. Connect the analyzer special patterns pickup to engine-ECU terminal 89. (When checking the crank angle sensor signal wave pattern.)

### Standard Wave Pattern

#### Observation conditions


| Function         | Special patterns |
|------------------|------------------|
| Pattern height   | Low              |
| Pattern selector | Display          |
| Engine r/min     | Idle speed       |

## Standard wave pattern

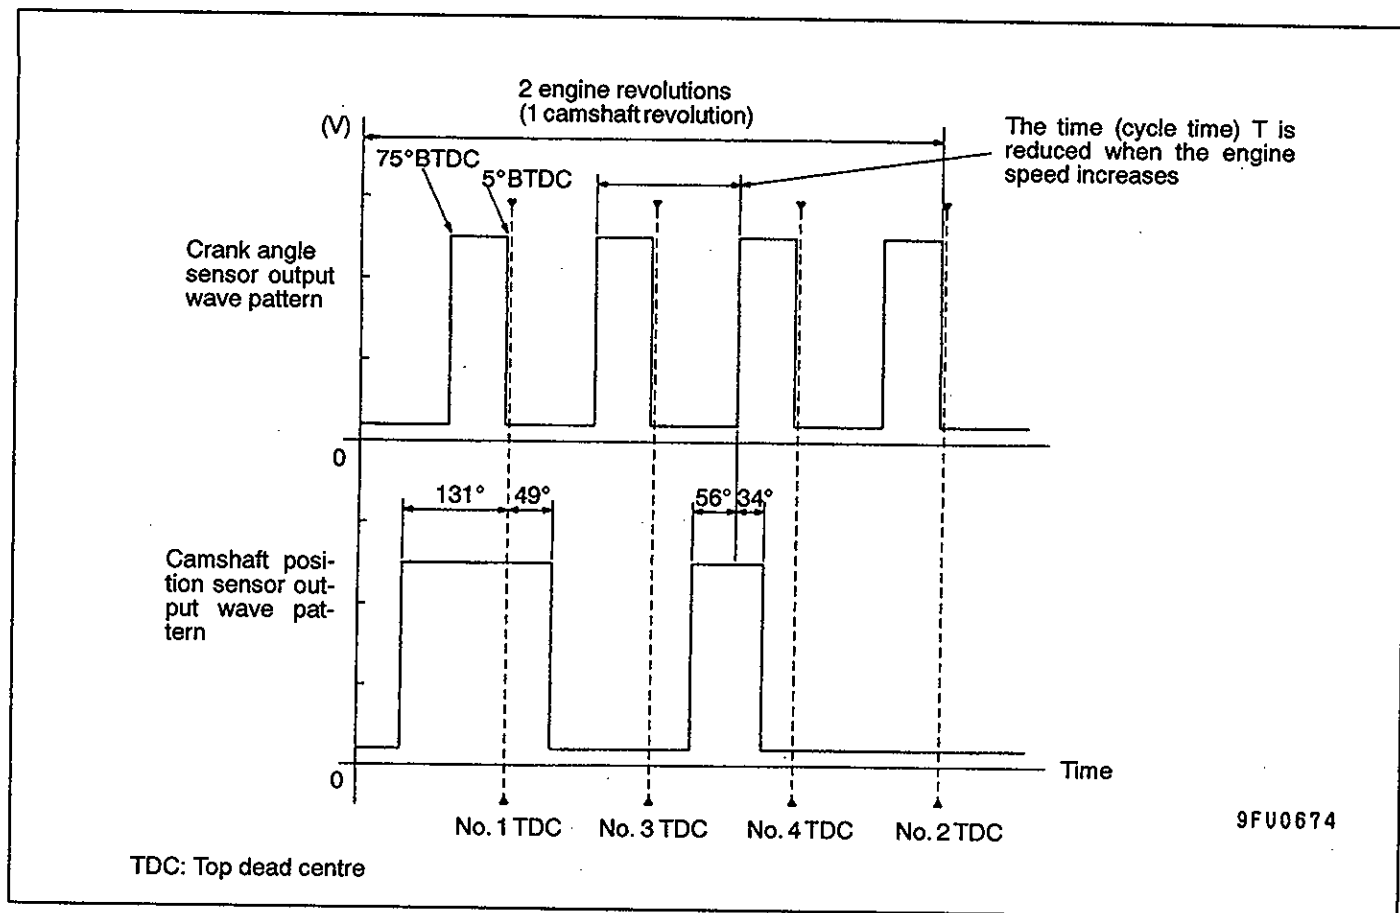

## Wave Pattern Observation Points

Check that cycle time T becomes shorter when the engine speed increases.

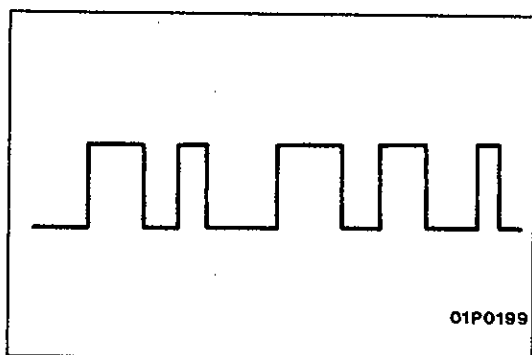

## Examples of Abnormal Wave Patterns


## ● Example 1

## Cause of problem

Sensor interface malfunction

## Wave pattern characteristics

Rectangular wave pattern is output even when the engine is not started.

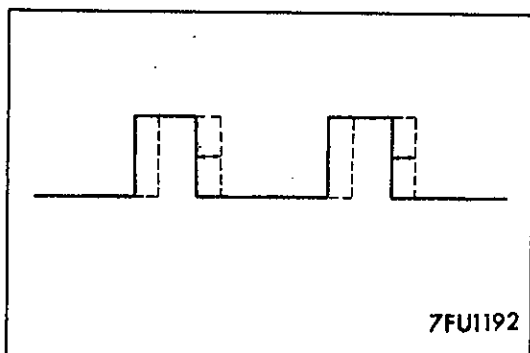

## ● Example 2

## Cause of problem

Loose timing belt

Abnormality in sensor disk

## Wave pattern characteristics


Wave pattern is displaced to the left or right.

**INJECTOR**

Refer to P.13A-69.

**STEPPER MOTOR**

Refer to P.13A-71.

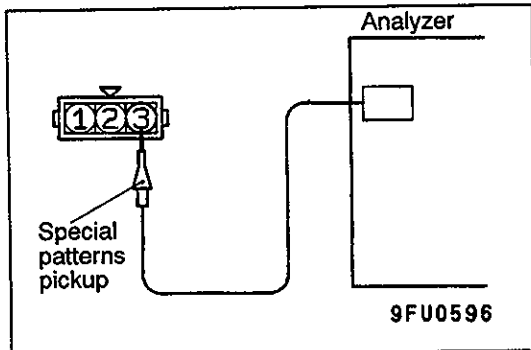**IGNITION COIL AND POWER TRANSISTOR**

Power transistor control signal

**Measurement Method**


1. Disconnect the ignition coil connector, and connect the special tool (test harness: MB991348) in between. (All terminals should be connected.)
2. Connect the analyzer special patterns pickup to terminal 3 of each ignition coil connector in turn.

**Alternate Method (Test harness not available)**

1. Connect the analyzer special patterns pickup to engine-ECU terminal 10 (No. 1 – No. 4), terminal 23 (No. 2 – No. 3) respectively.

**Standard Wave Pattern****Observation condition**


| Function         | Special patterns    |
|------------------|---------------------|
| Pattern height   | Low                 |
| Pattern selector | Display             |
| Engine r/min     | Approx. 1,200 r/min |

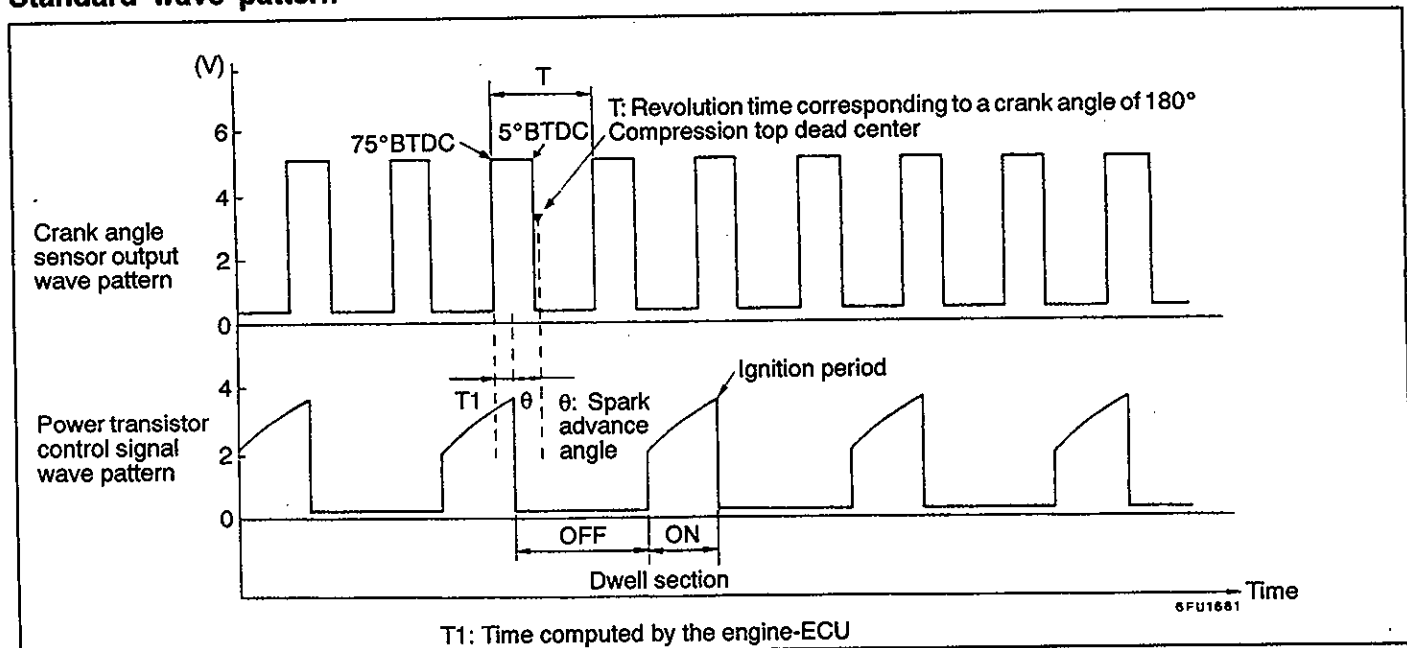**Standard wave pattern**

**Wave Pattern Observation Points**

Point: Condition of wave pattern build-up section and maximum voltage (Refer to abnormal wave pattern examples 1 and 2.)

| Condition of wave pattern build-up section and maximum voltage | Probable cause                           |
|----------------------------------------------------------------|------------------------------------------|
| Rises from approx. 2V to approx. 4.5V at the top-right         | Normal                                   |
| 2V rectangular wave                                            | Open-circuit in ignition primary circuit |
| Rectangular wave at power voltage                              | Power transistor malfunction             |

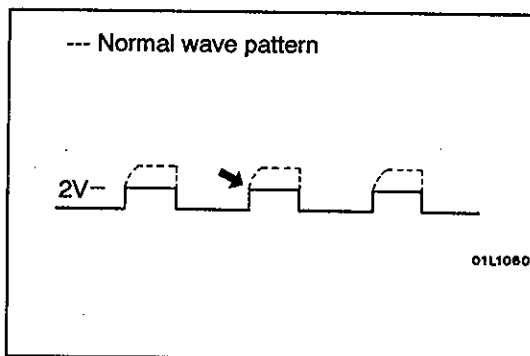**Examples of Abnormal Wave Patterns**

- Example 1


Wave pattern during engine cranking

**Cause of problem**

Open-circuit in ignition primary circuit

**Wave pattern characteristics**

Top-right part of the build-up section cannot be seen, and voltage value is approximately 2V too low.

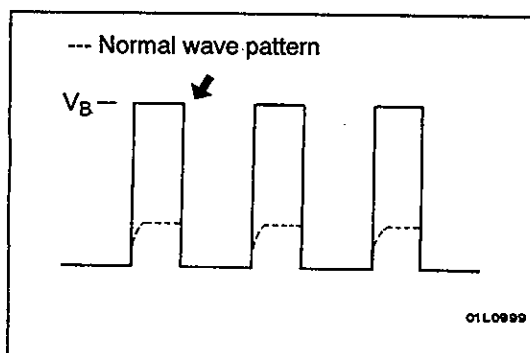

- Example 2

Wave pattern during engine cranking

**Cause of problem**

Malfunction in power transistor

**Wave pattern characteristics**

Power voltage results when the power transistor is ON.

**ON-VEHICLE SERVICE**

13100100122

**THROTTLE BODY (THROTTLE VALVE AREA)  
CLEANING**

Refer to P.13A-75.

**IDLE POSITION SWITCH AND THROTTLE  
POSITION SENSOR ADJUSTMENT**

13100130114

Refer to P.13A-75.

**FIXED SAS ADJUSTMENT**

13100150127

Refer to P.13A-76.

**BASIC IDLE SPEED ADJUSTMENT**

13100180126

**NOTE**

1. The standard idling speed has been adjusted, by the speed adjusting screw (SAS), by the manufacturer, and there should usually be no need for readjustment.
  2. If the adjustment has been changed by mistake, the idle speed may become too high or the idle speed may drop too low when loads from components such as the A/C are placed on the engine. If this occurs, adjust by the following procedure.
  3. The adjustment, if made, should be made after first confirming that the spark plugs, the injectors, the idle speed control servo, the compression pressure, etc., are all normal.
1. Before inspection and adjustment, set the vehicle to the pre-inspection condition.
  2. Connect the MUT-II to the diagnosis connector (16-pin).

**NOTE**

When the MUT-II is connected, the diagnosis control terminal should be earthed.

3. Start the engine and run at idle.
4. Select the item No.30 of the MUT-II ACTUATOR TEST.

**NOTE**

This holds the ISC servo at the basic step to adjust the basic idle speed.


5. Check the idle speed.

**Standard value:**

**750 ± 50 r/min <except MVV>**  
**700 ± 50 r/min <MVV>**

**NOTE**

1. The engine speed may be 20 to 100 r/min lower than indicated above for a new vehicle [driven approximately 500 km or less], but no adjustment is necessary.
2. If the engine stalls or the engine speed is low even though the vehicle has been driven approximately 500 km or more, it is probable that deposits are adhered to the throttle valve, so clean it. (Refer to P.13A-75.)

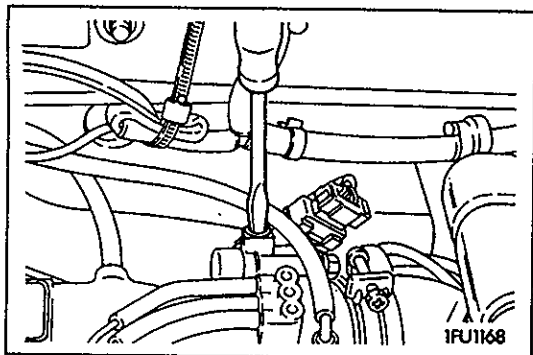

6. If not within the standard value range, turn the speed adjusting screw (SAS) to make the necessary adjustment.

**NOTE**

If the idling speed is higher than the standard value range even when the SAS is fully closed, check whether or not there is any indication that the fixed SAS has been moved. If there is an indication that it has been moved, adjust the fixed SAS.

7. Press the MUT-II clear key, and release the ISC servo from the ACTUATOR TEST mode.

**NOTE**

Unless the ISC servo is released, the ACTUATOR TEST mode will continue 27 minutes.

8. Switch OFF the ignition switch.
9. Disconnect the MUT-II.
10. Start the engine again and let it run at idle speed for about 10 minutes; check that the idling condition is normal.

**FUEL PRESSURE TEST**

13100190129

Refer to P.13A-78.

**FUEL PUMP CONNECTOR DISCONNECTION  
(HOW TO REDUCE THE FUEL PRESSURE)**

13100090153

Refer to P.13A-81.

**FUEL PUMP OPERATION CHECK**




13100200112

Refer to P.13A-81.

## COMPONENT LOCATION

13100210160

| Name                                                                                | Symbol | Name                                                 | Symbol |
|-------------------------------------------------------------------------------------|--------|------------------------------------------------------|--------|
| A/C relay                                                                           | A      | Engine warning lamp (check engine lamp)              | N      |
| A/C switch                                                                          | P      | Fuel pump check terminal                             | H      |
| Air by-pass control solenoid valve <MVV>                                            | C      | Idle speed control servo                             | E      |
| Air flow sensor (with intake air temperature sensor and barometric pressure sensor) | I      | Ignition coil                                        | K      |
|                                                                                     |        | Inhibitor switch <A/T>                               | M      |
| Camshaft position sensor                                                            | F      | Injectors                                            | K      |
| Control relay and fuel pump relay                                                   | Q      | Oxygen sensor <except MVV>                           | S      |
| Crank angle sensor                                                                  | J      | Oxygen sensor <MVV>                                  | L      |
| Detonation sensor                                                                   | D      | Power steering fluid pressure switch                 | B      |
| Diagnosis connector                                                                 | O      | Purge control solenoid valve                         | C      |
| EGR control solenoid valve                                                          | C      | Throttle position sensor (with idle position switch) | E      |
| Engine coolant temperature sensor                                                   | G      |                                                      |        |
| Engine-ECU                                                                          | R      | Vehicle speed sensor                                 | M      |

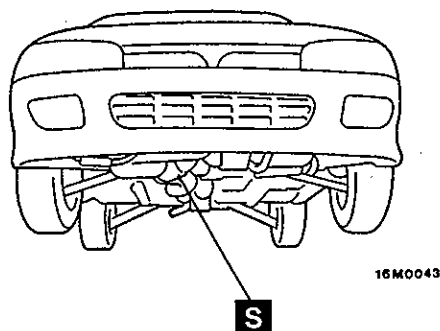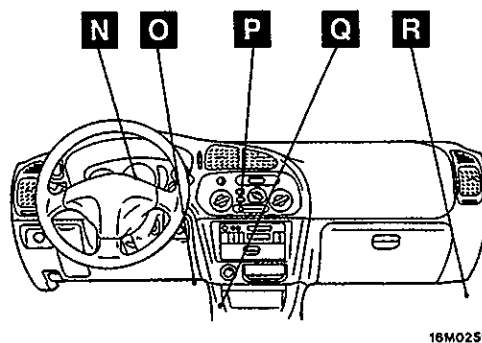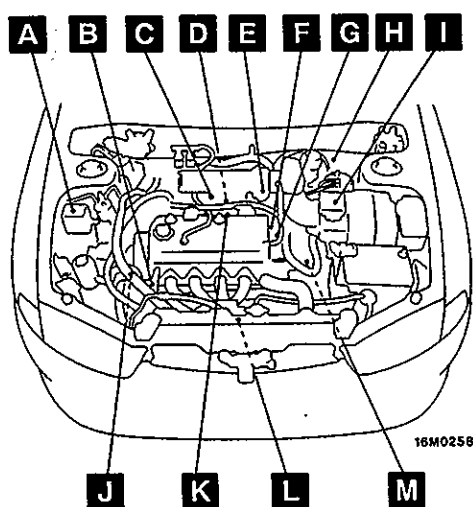


9FU0642

## CONTROL RELAY AND FUEL PUMP RELAY CONTINUITY CHECK

13100990064

Refer to P.13A-83.

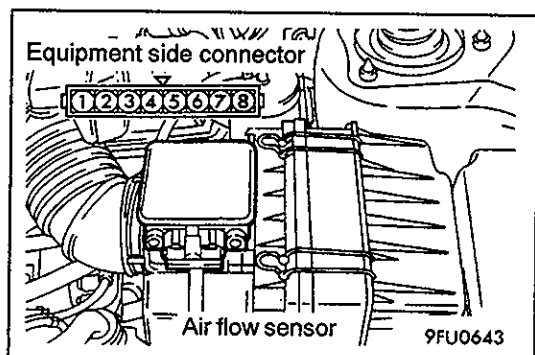

## INTAKE AIR TEMPERATURE SENSOR CHECK

13100280116

1. Disconnect the air flow sensor connectors.
2. Measure resistance between terminals 5 and 6.

### Standard value:



2.3–3.0 k $\Omega$  (at 20°C)0.30–0.42 k $\Omega$  (at 80°C)

3. Measure resistance while heating the sensor using a hair drier.

### Normal condition:

| Temperature (°C) | Resistance (k $\Omega$ ) |
|------------------|--------------------------|
| Higher           | Smaller                  |

4. If the value deviates from the standard value or the resistance remains unchanged, replace the air flow sensor assembly.

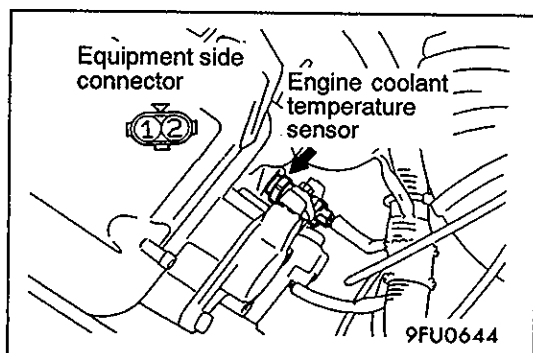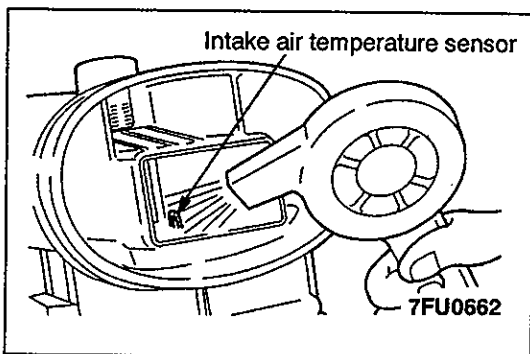

## ENGINE COOLANT TEMPERATURE SENSOR CHECK

13100310112

Refer to P.13A-83.

## THROTTLE POSITION SENSOR CHECK


13100320115

Refer to P.13A-84.

## IDLE POSITION SWITCH CHECK


13100330125

Refer to P.13A-84.

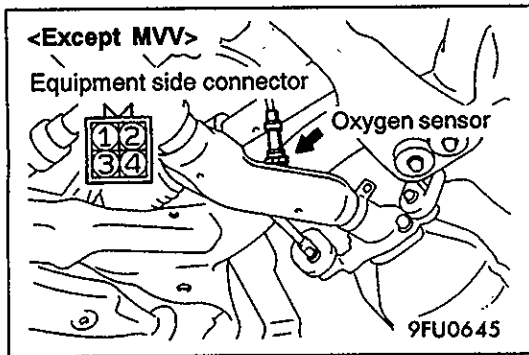**OXYGEN SENSOR CHECK**


13100510055

Refer to P.13A-85. (Oxygen sensor &lt;front&gt;)

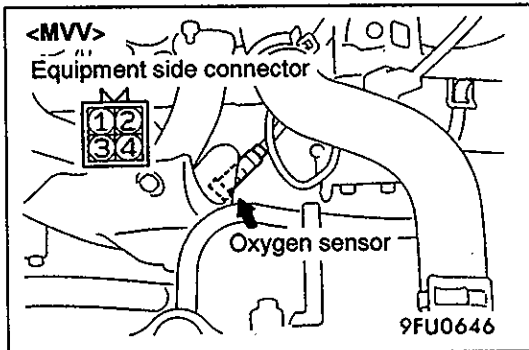**INJECTOR CHECK**

13100520119

Refer to P.13A-86.

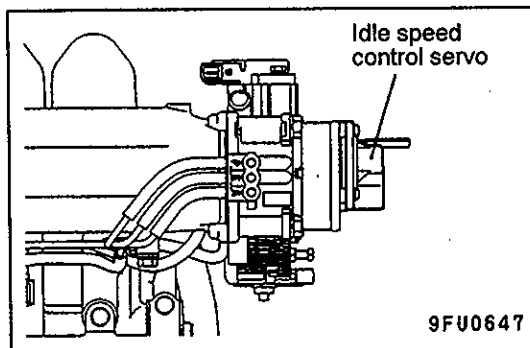**IDLE SPEED CONTROL (ISC) SERVO (STEPPER MOTOR) CHECK**


13100540153

**Checking the Operation Sound**

1. Check that the engine coolant temperature is 20°C or below.

**NOTE**

Disconnecting the engine coolant temperature sensor connector and connecting the harness-side of the connector to another engine coolant temperature sensor that is at 20°C or below is also okay.

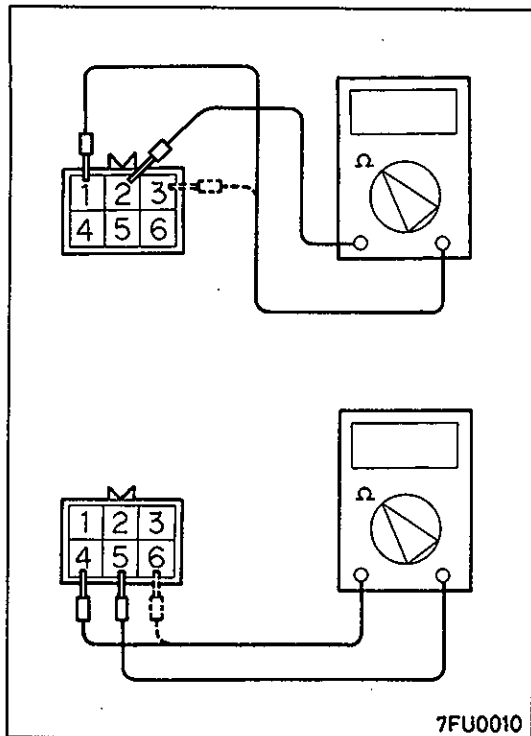

2. Check that the operation sound of the stepper motor can be heard after the ignition is switched ON. (but without starting the motor.)
3. If the operation sound cannot be heard, check the stepper motor's activation circuit.  
If the circuit is normal, it is probable that there is a malfunction of the stepper motor or of the engine control unit.

#### Checking the Coil Resistance

1. Disconnect the idle speed control servo connector and connect the special tool (test harness).
2. Measure the resistance between terminal 2 (white clip of the special tool) and either terminal 1 (red clip) or terminal 3 (blue clip) of the connector at the idle speed control servo side.

**Standard value: 28–33  $\Omega$  (at 20°C)**

3. Measure the resistance between terminal 5 (green clip of the special tool) and either terminal 6 (yellow clip) or terminal 4 (black clip) of the connector at the idle speed control servo side.

**Standard value: 28–33  $\Omega$  (at 20°C)**

#### PURGE CONTROL SOLENOID VALVE CHECK


13100580128

Refer to GROUP 17 – Emission Control System.

#### EGR CONTROL SOLENOID VALVE CHECK

13100570114

Refer to GROUP 17 – Emission Control System.

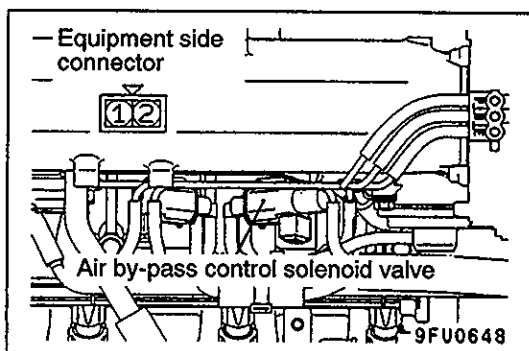


#### AIR BY-PASS CONTROL SOLENOID VALVE CHECK <MVV>

13101080012

##### NOTE

When disconnecting the vacuum hose, always make a mark so that it can be reconnected at original position.

1. Disconnect the vacuum hose (white stripe, yellow stripe) from the solenoid valve.
2. Disconnect the harness connector.

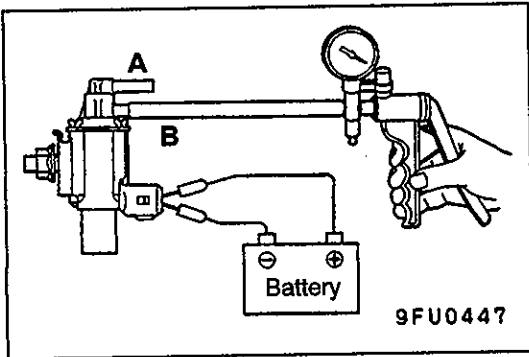


3. Connect a hand vacuum pump to nipple B of the solenoid valve.
4. Use jumper wires to connect the terminals of the solenoid valve and the battery.
5. Check the air-tightness when negative pressure is applied while the jumper wire is connected to the battery (-) terminal and while it is disconnected.

**Normal condition:**

| Jumper wire  | Nipple A condition | Normal condition                |
|--------------|--------------------|---------------------------------|
| Connected    | Open               | Negative pressure leaks         |
|              | Closed             | Negative pressure is maintained |
| Disconnected | Open               | Negative pressure leaks         |

6. Measure the resistance between the terminals of the solenoid valve.

**Standard value:** 36–44  $\Omega$  (at 20°C)

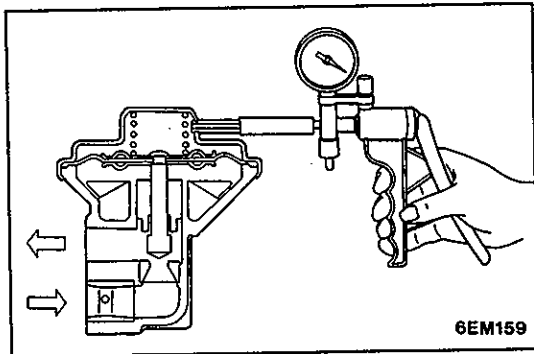**AIR BY-PASS VALVE CHECK <MVV>**

13101090015

1. Remove the air by-pass valve.
2. Connect a hand vacuum pump to the air by-pass valve.
3. Apply 67 kPa of vacuum, and check that the vacuum is maintained.
4. Apply a vacuum and check the passage of air by blowing through one side of the air by-pass valve.

**Normal condition:**

| Vacuum          | Passage of air       |
|-----------------|----------------------|
| 2.0 kPa or less | Air is not blown out |
| 11 kPa or more  | Air is blown out     |

5. Replace the gasket, and tighten to the specified torque.


**Tightening torque:** 22 Nm

# INJECTOR


## REMOVAL AND INSTALLATION

### Pre-removal Operation

- Fuel Discharge Prevention (Refer to P.13A-172.)

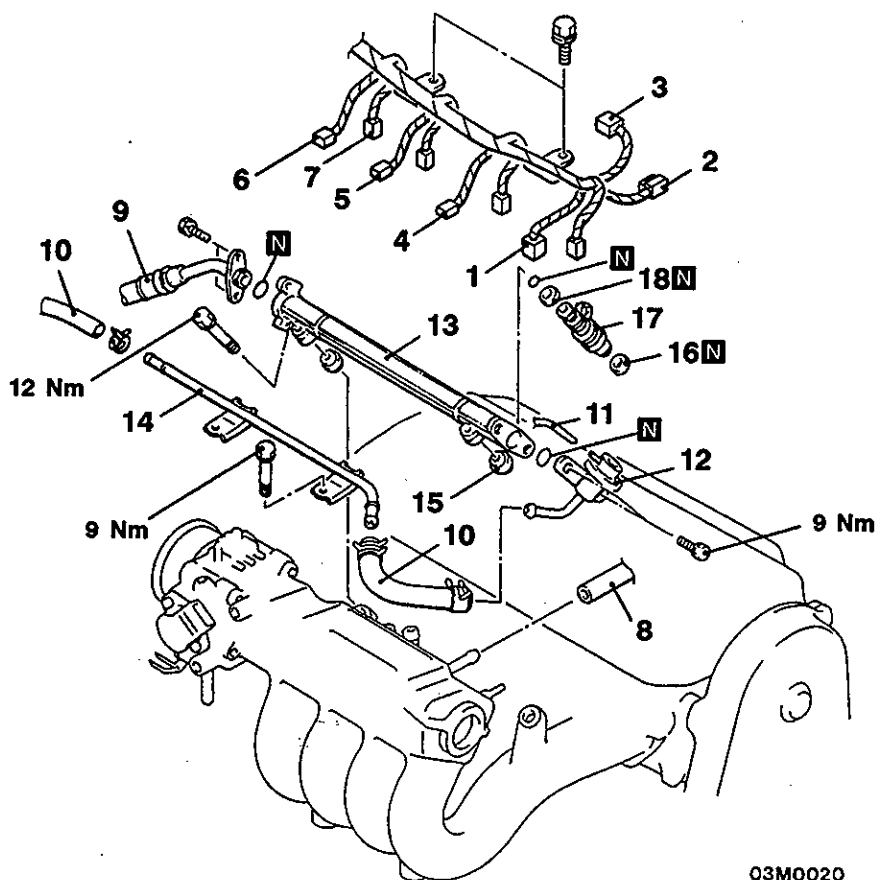

03M0020 00004500

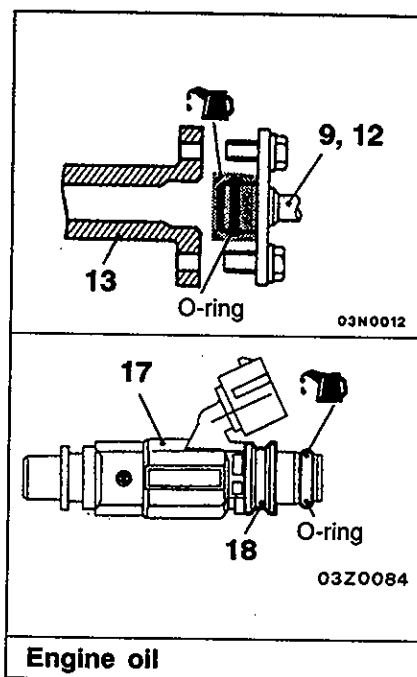

### Removal steps

- Oxygen sensor connector <except MVV>
- Crank angle sensor connector
- Ignition coil connector
- Purge control solenoid valve connector
- EGR solenoid valve connector
- Air by-pass solenoid valve connector <MVV>
- Injector connector
- PCV hose

- |     |                                       |
|-----|---------------------------------------|
| ▶A◀ | 9. High-pressure fuel hose connection |
|     | 10. Fuel return hose connection       |
|     | 11. Vacuum hose connection            |
| ▶A◀ | 12. Fuel pressure regulator           |
|     | 13. Delivery pipe                     |
|     | 14. Fuel return pipe                  |
|     | 15. Insulators                        |
|     | 16. Insulators                        |
| ▶A◀ | 17. Injectors                         |
|     | 18. Grommets                          |

**REMOVAL SERVICE POINT****◀A▶ DELIVERY PIPE/INJECTOR REMOVAL**

Remove the delivery pipe (with the injectors attached to it).

**Caution**

Care must be taken, when removing the delivery pipe, not to drop the injector.

**INSTALLATION SERVICE POINT****▶A◀ INJECTOR/FUEL PRESSURE REGULATOR/  
HIGH-PRESSURE FUEL HOSE INSTALLATION**

- (1) Apply a drop of new engine oil to the O-ring.

**Caution**

Be sure not to let engine oil in the delivery pipe.

- (2) While turning the injector, high-pressure fuel hose and fuel pressure regulator to the right and left, install the delivery pipe, while being careful not to damage the O-ring. After installing, check that the hose turns smoothly.
- (3) If it does not turn smoothly, the O-ring may be trapped, remove the fuel pressure regulator and then re-insert it into the delivery pipe and check once again.
- (4) Tighten the high-pressure fuel hose to the standard torque, and tighten the fuel pressure regulator to the specified torque.

**Tightening torque:**

9 Nm (Fuel pressure regulator)

## THROTTLE BODY

13100770132


## REMOVAL AND INSTALLATION

**Pre-removal Operation**

- Engine Coolant Draining (Refer to GROUP 14 – On-vehicle Service.)
- Air Cleaner Removal

**Post-Installation Operation**

- Air Cleaner Installation
- Engine Coolant Supplying (Refer to GROUP 14 – On-vehicle Service.)
- Accelerator Cable Adjustment (Refer to GROUP 17 – On-vehicle Service.)

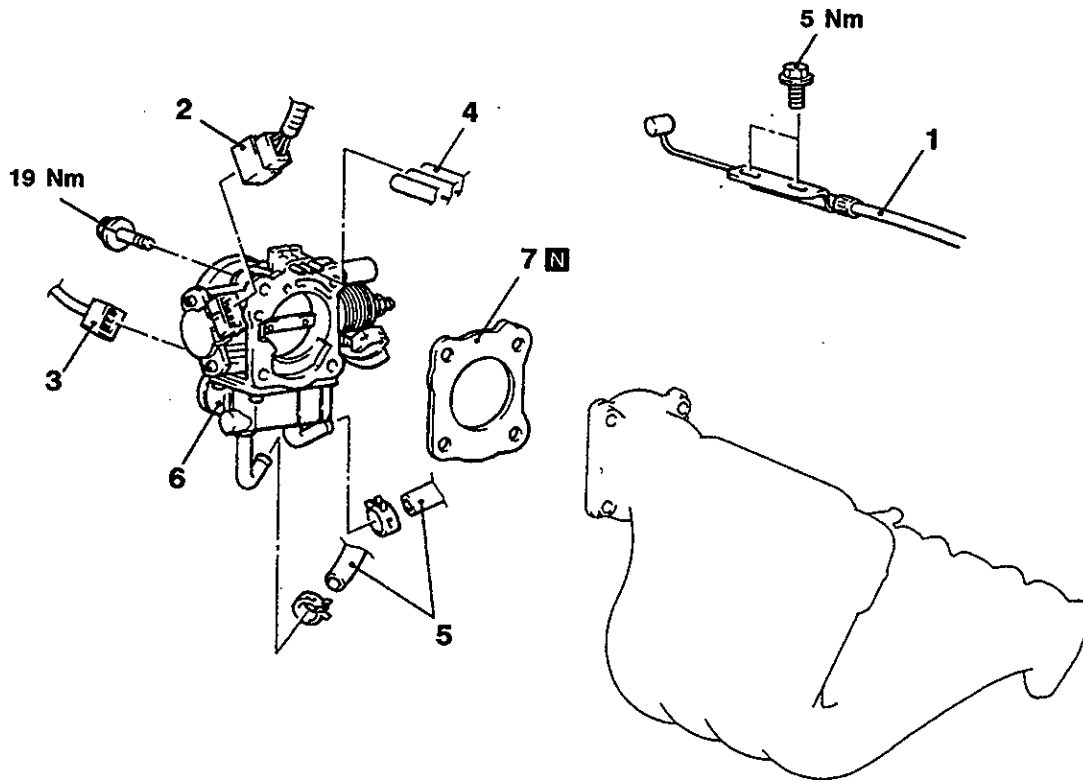

A03M0018


**Removal steps**

1. Accelerator cable connection
2. Throttle position sensor connector
3. Idle speed control servo connector
4. Vacuum hose connection

5. Water hose connection

6. Throttle body


▶◀ 7. Throttle body gasket

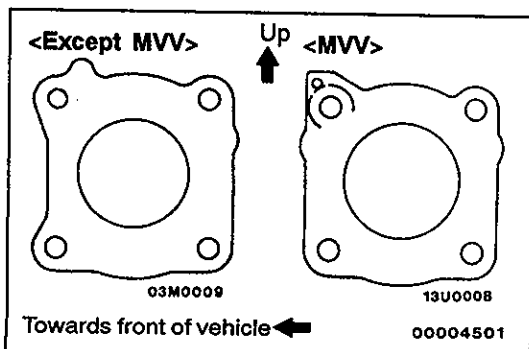**INSTALLATION SERVICE POINT****▶◀ THROTTLE BODY GASKET INSTALLATION**

Place the gasket so that the projecting part is positioned as shown in the illustration, and then install it between the intake manifold and the throttle body.

## DISASSEMBLY AND REASSEMBLY

13100970112

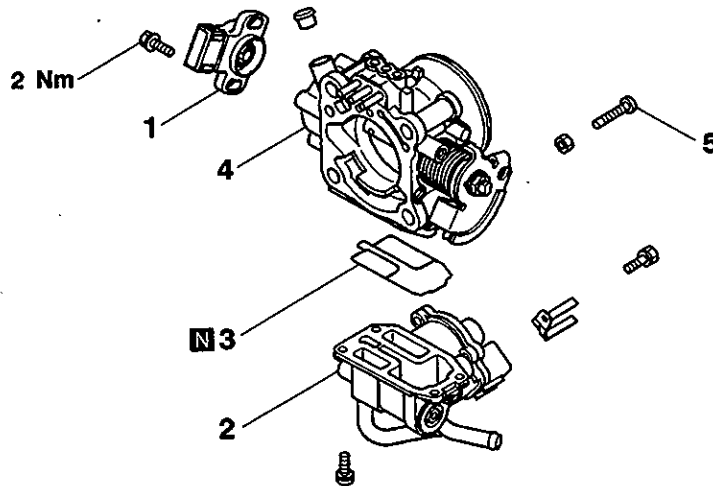

9EN0588

**Disassembly steps**



1. Throttle position sensor
2. Idle speed control body assembly
3. O-ring
4. Throttle body
5. Fixed SAS

**NOTE**

1. The fixed SAS is correctly adjusted at the factory and should not be removed.
2. If the fixed SAS should happen to have been removed, carry out fixed SAS adjustment. (Refer to page 13A-76.)

**CLEANING THROTTLE BODY PARTS**

1. Clean all throttle body parts.  
Do not use solvent to clean the following parts:
  - Throttle position sensor
  - Accelerator pedal position sensor
  - Idle speed control body assembly
 If these parts are immersed in solvent, their insulation will deteriorate.  
Wipe them with cloth only.
2. Check if the vacuum port or passage is clogged. Use compressed air to clean the vacuum passage.

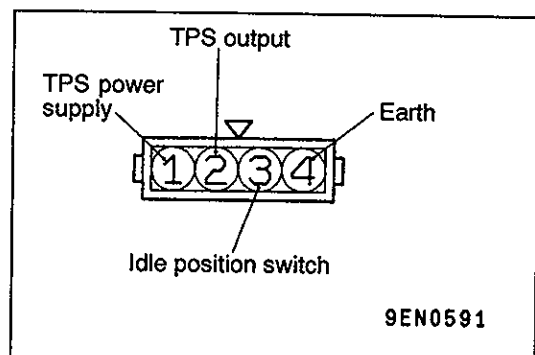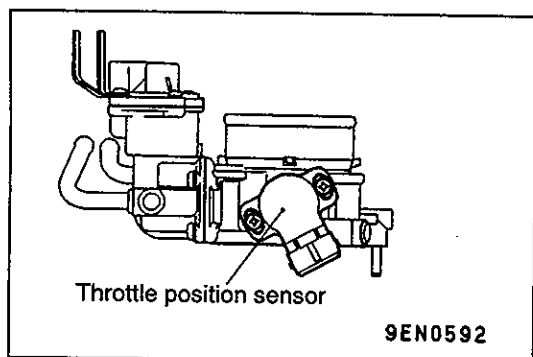

## REASSEMBLY SERVICE POINT

### ►A◄ THROTTLE POSITION SENSOR (TPS) INSTALLATION

1. Install the TPS so that it faces as shown in the illustration, and then tighten it with the screw.
2. Connect a multimeter between terminal (1) (TPS power supply) and terminal (2) (TPS output) of the TPS connector, and check that the resistance increases gradually as the throttle valve is opened slowly to the fully-open position.
3. Check the continuity between terminal (3) (idle position switch) and terminal (4) (earth) of the TPS connector when the throttle valve is fully closed and fully open.

#### Normal condition:

| Throttle valve condition | Continuity    |
|--------------------------|---------------|
| Fully closed             | Continuity    |
| Fully open               | No continuity |

If there is no continuity when the throttle valve is fully closed, turn the TPS body anti-clockwise and then check again.

4. If there is an abnormality, replace the TPS.

# FUEL SUPPLY



## CONTENTS

13509000098

GENERAL INFORMATION ..... 2

FUEL TANK ..... 3

SEALANT ..... 2

---

**GENERAL INFORMATION**

13500010038

- (1) The fuel tank is located under the floor of the rear seats to provide increased safety and a wider luggage space.
- (2) A fuel cut-off valve has been adopted to prevent fuel from leaking out in the event of a collision.
- (3) A plastic fuel tank has been adopted to reduce weight, and improve anti-corrossion effectiveness.

**SEALANT**

13500050023


| Item               | Specified sealant                           |
|--------------------|---------------------------------------------|
| Plug and floor pan | 3M 8513 Grommated windshield sealer (Black) |

**FUEL TANK****REMOVAL AND INSTALLATION****Pre-removal Operation**

- (1) Draining Fuel
- (2) Reduce the Inner Pressure of Fuel Line and Hose  
(Refer to GROUP 13A – On-vehicle Service.)

**Post-installation Operation**


- (1) Refilling Fuel.
- (2) Checking for Fuel Leaks

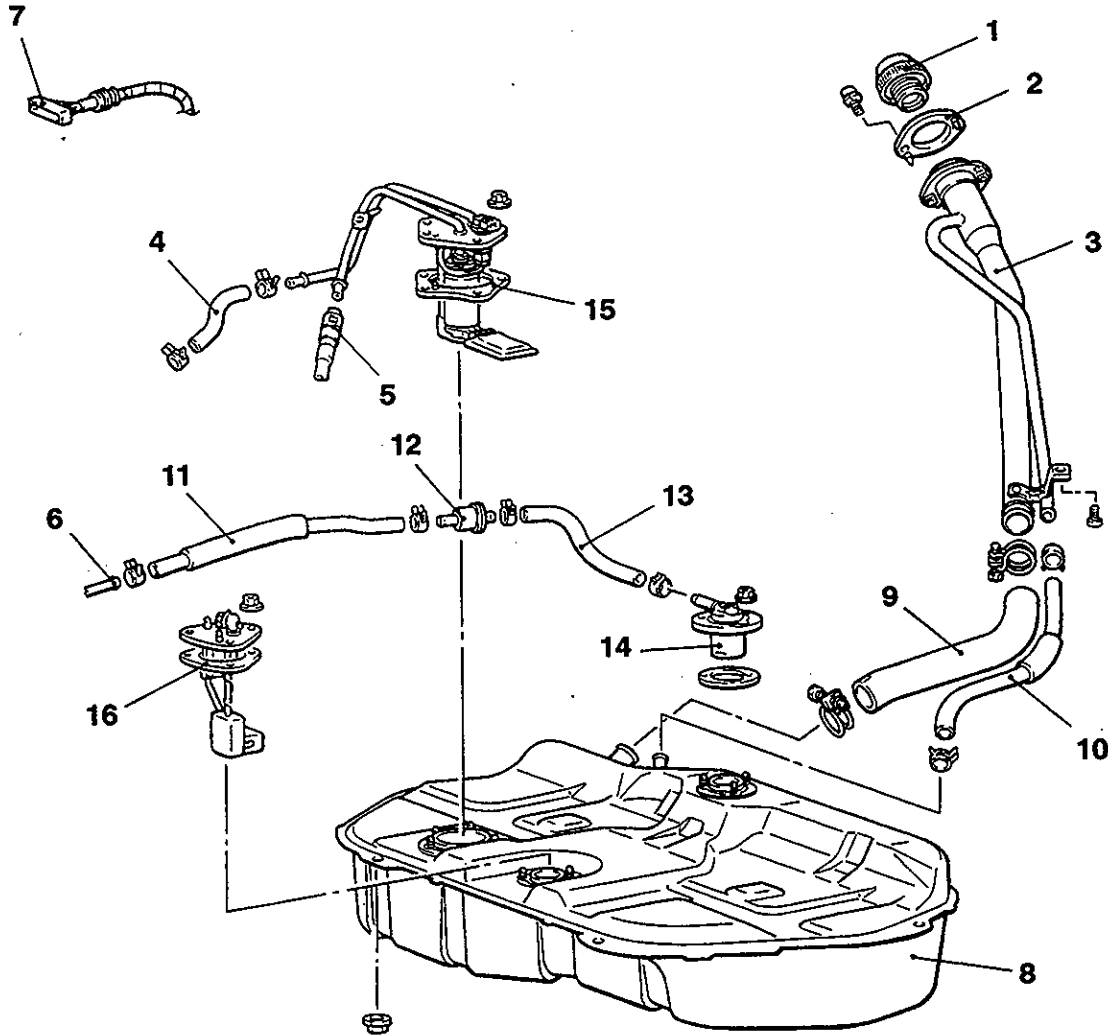

A03M0014

**Removal steps**

1. Fuel filler cap
2. Packing
3. Fuel filler neck assembly
4. Return hose
5. High-pressure fuel hose
6. Hose connection
  - Rear seat cushion (Refer to GROUP 52A – Rear Seat).
7. Harness connector
8. Fuel tank
9. Filler hose
10. Leveling hose
11. Vapour hose
12. Tow-way valve (Refer to GROUP 17 – Canister And Two-way Valve.)
13. Vapour hose
14. Fuel cut-off valve
15. Fuel pump
16. Fuel gauge unit assembly

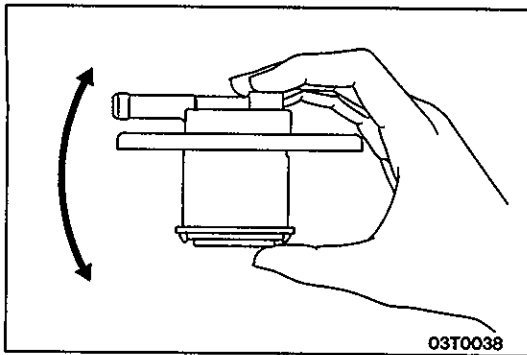**INSPECTION**


13500300067

**FUEL CUT-OFF VALVE CHECK**

If the sound of the float valve moving (knocking sound) can be heard when the valve assembly is gently shaken up and down, then the valve is okay.

**FUEL GAUGE UNIT CHECK**

Refer to GROUP 54 – Combination Meter.

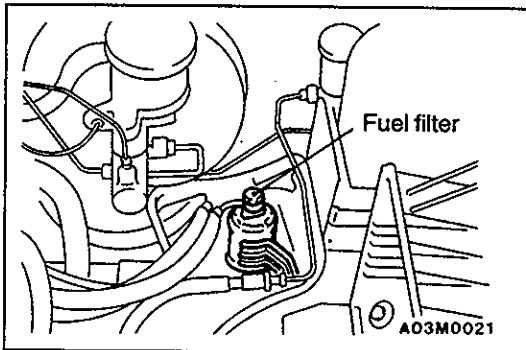
**FUEL FILTER REPLACEMENT**

13500130055


1. Bleed the residual pressure from inside the fuel line. (Refer to GROUP 13A – On-vehicle Service.)
2. Remove the air intake hose and canister.
3. Hold the fuel filter with a spanner and remove the eye bolt. Then remove the high-pressure hose.

**Caution**

As there will be some pressure remaining in the fuel pipe line, cover it with a rag to prevent fuel from spraying out.

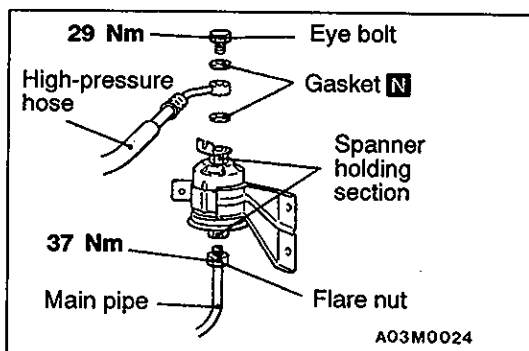


4. Hold the fuel filter with a spanner and loosen the flare nut. Then disconnect the main pipe connection.
5. Remove the fuel filter.
6. When installing the fuel filter, use a new gasket, and tighten the flare nut of the high-pressure hose and the main pipe to the specified torque.
7. After installation, check that there are no fuel leaks.
  - (1) Apply battery voltage to the fuel pump drive terminal to operate the fuel pump. (Refer to GROUP 13A – On-vehicle Service.)
  - (2) Check for leaks when fuel pressure is applied.

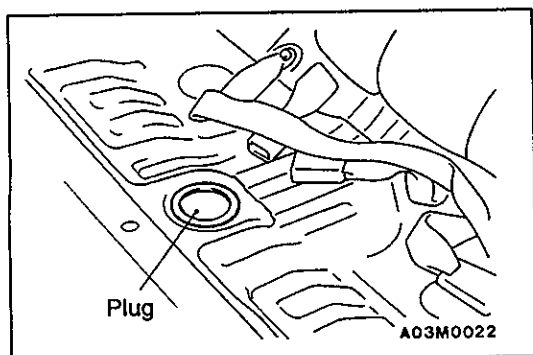
**FUEL GAUGE UNIT REPLACEMENT**

13500160092

1. Remove the rear seat cushion.  
(Refer to GROUP 52A – Rear Seat.)
2. Remove the plug.

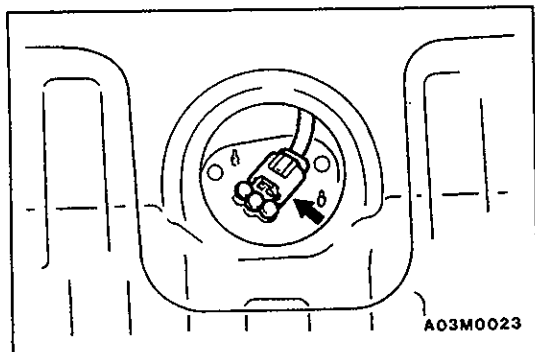

3. Disconnect the fuel gauge unit connector and remove the fuel gauge unit.

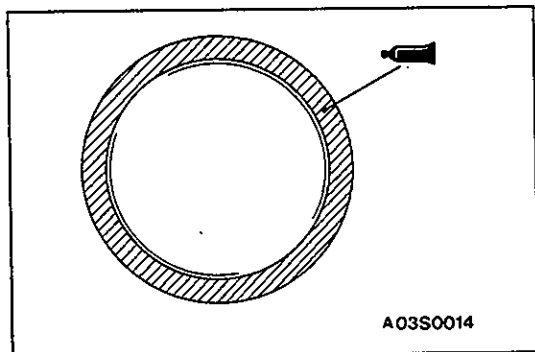

4. Apply the specified sealant to the contact surfaces of the plug and the floor pan, and install the plug.

**Specified sealant:****3M 8513 Grommeted Windshield Sealer (Black)**

5. Install the rear seat cushion  
(Refer to GROUP 52A – Rear Seat).

---

**NOTES**