

GROUP 51

EXTERIOR

GENERAL

OUTLINE OF CHANGES

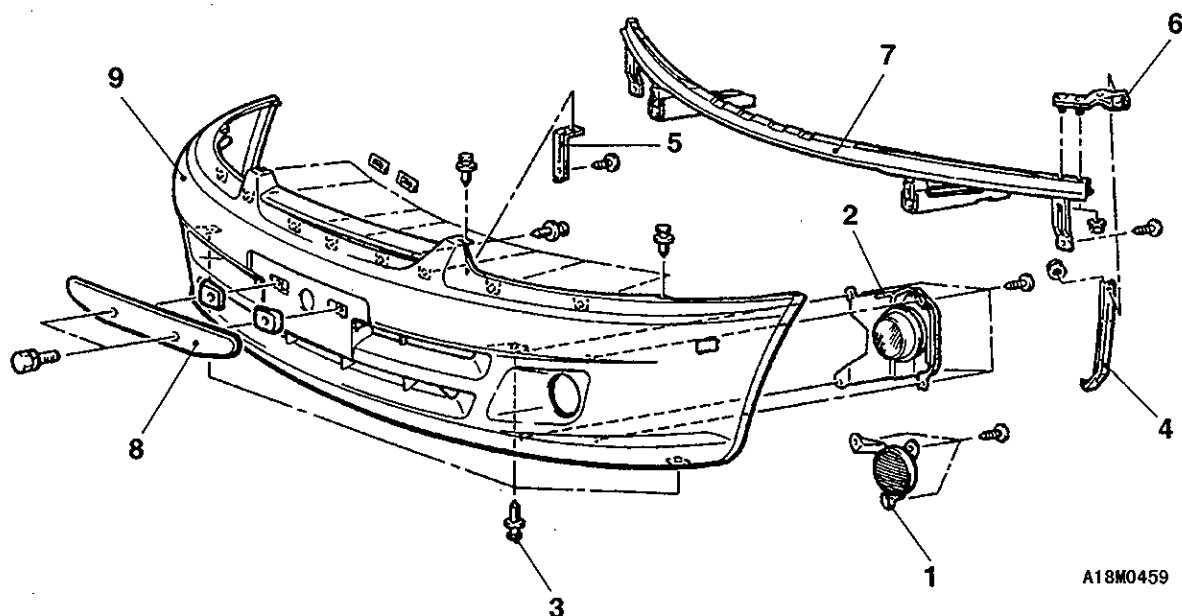
Following items have been changed. The service procedures for these items have been now established.

- Front bumper
- Fog lamp
- Aero parts

FRONT BUMPER

DISASSEMBLY AND REASSEMBLY

<Hatchback>



A18M0459

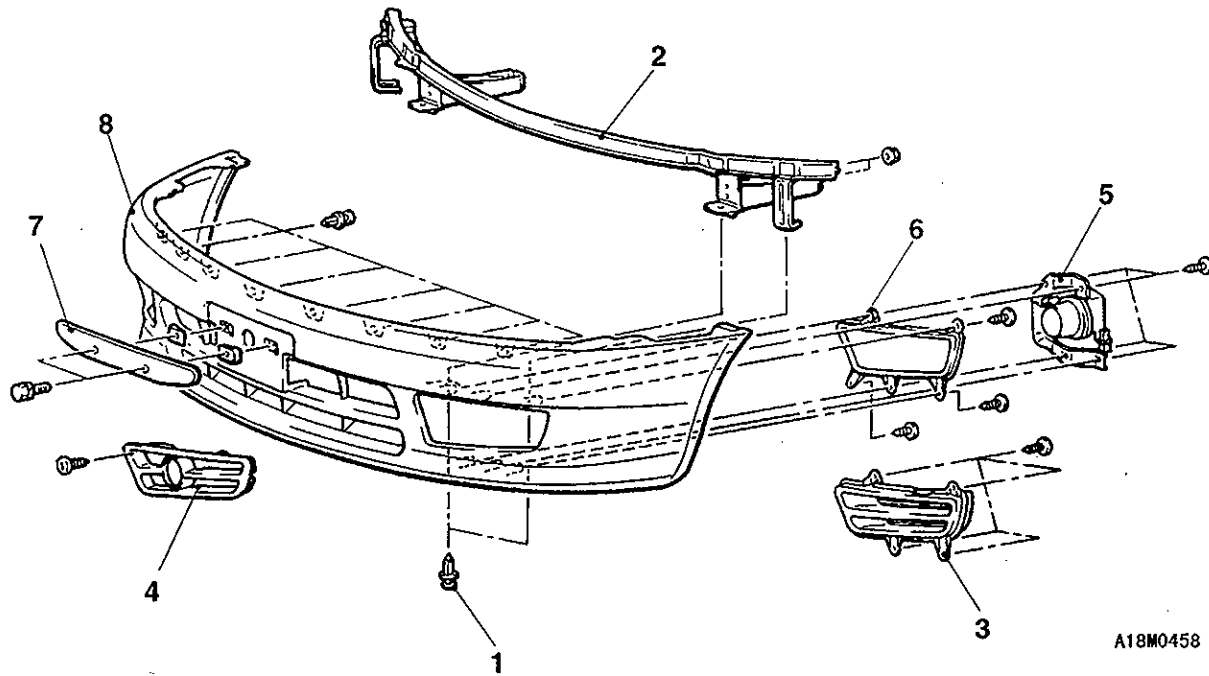
Disassembly steps

1. Air intake bezel
<Vehicles without fog lamp>
2. Front fog lamp assembly
<Vehicles with fog lamp>
3. Clip
4. Side rear plate

5. Center upper plate
6. Side upper plate
7. Front bumper reinforcement
8. Licence plate bracket
9. Bumper face

◀A▶

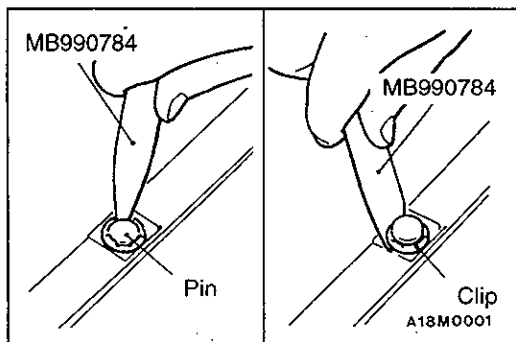
<Sedan>

**Disassembly steps**

◀A▶

1. Clip
2. Front bumper reinforcement
3. Air intake bezel
<Vehicles without fog lamp>
4. Front fog lamp bezel
<Vehicles with fog lamp>

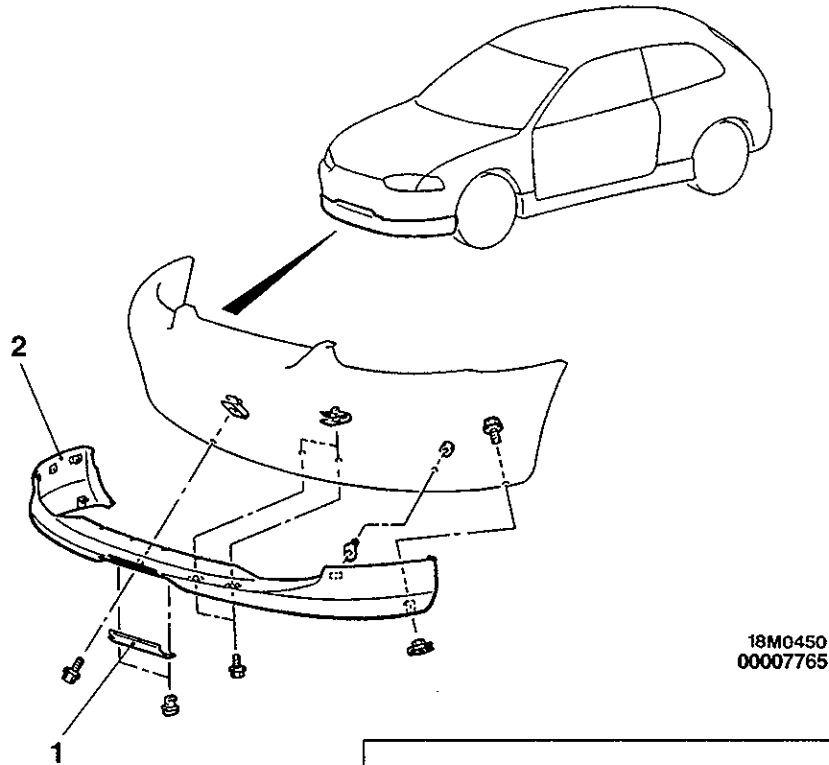
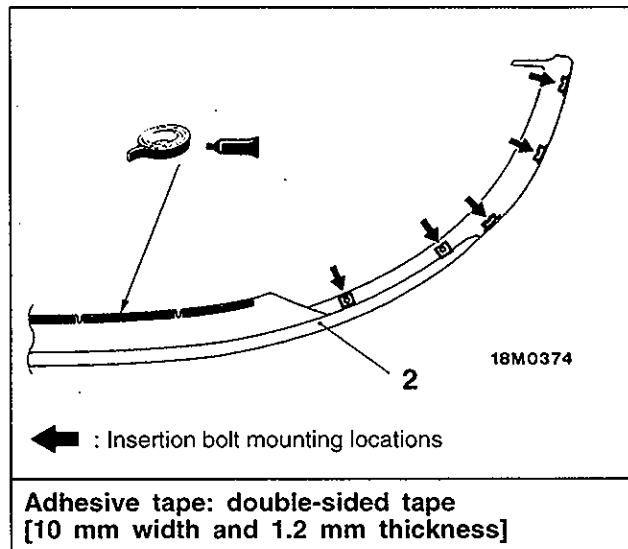
5. Front fog lamp assembly
<Vehicles with fog lamp>
6. Front fog lamp bezel plate
<Vehicles with fog lamp>
7. Licence plate bracket
8. Bumper face

**DISASSEMBLY SERVICE POINT**◀A▶ **CLIP REMOVAL**

- (1) Use the special tool to pull up the centre pin in the clip.
- (2) Remove the clip.

AERO PARTS**REMOVAL AND INSTALLATION**

<Hatchback>

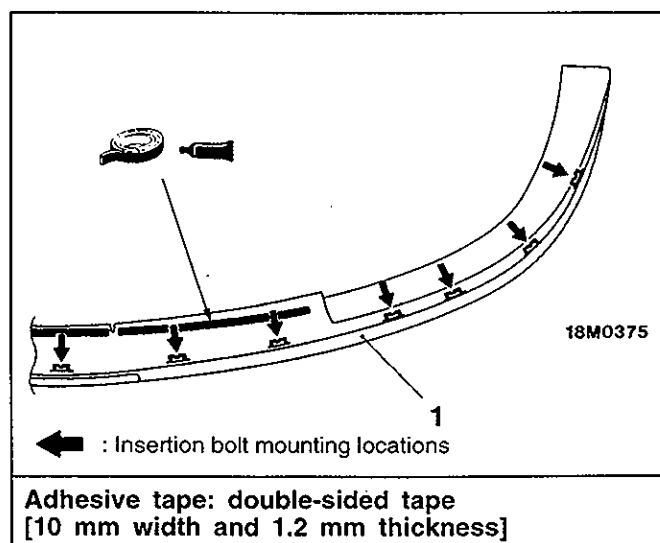
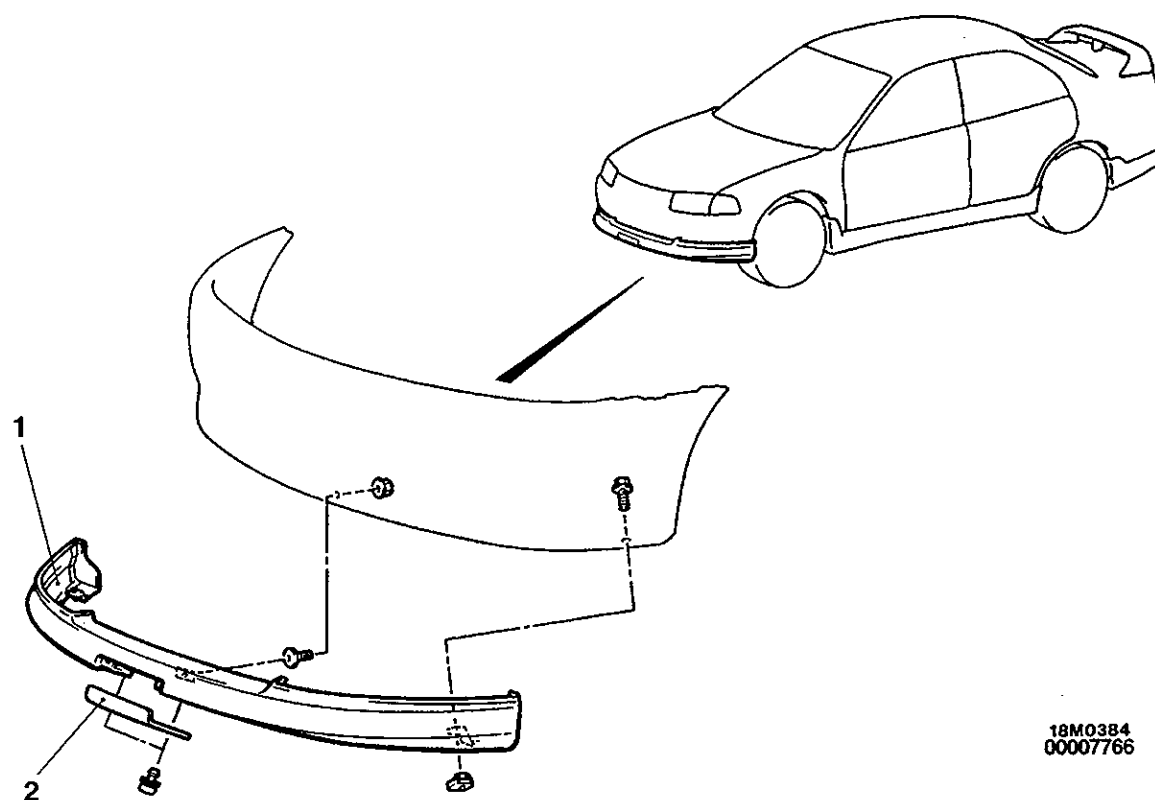
18M0450
00007765**Front airdam panel removal steps**

1. Center cover
2. Front airdam panel

NOTE

For each service point, refer to Basic Manual.

<Sedan>



Front airdam panel removal steps



1. Front airdam panel
2. Center cover

NOTE

For each service point, refer to Basic Manual.