

GROUP 54

CHASSIS ELECTRICAL


HEADLAMP AND FRONT TURN-SIGNAL LAMP <HATCHBACK>

GENERAL

OUTLINE OF CHANGE

The following maintenance service points have been established to correspond to changes in the shape of the headlamps and front turn signal lamps.


REMOVAL AND INSTALLATION

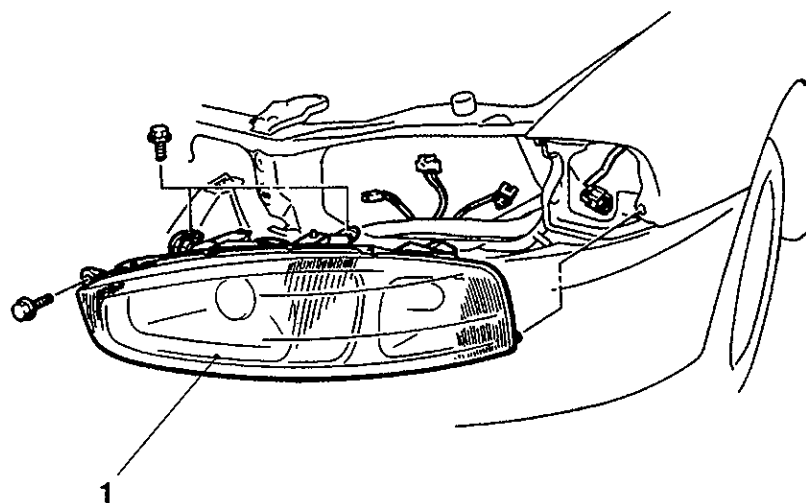

A16M0448



1. Headlamp

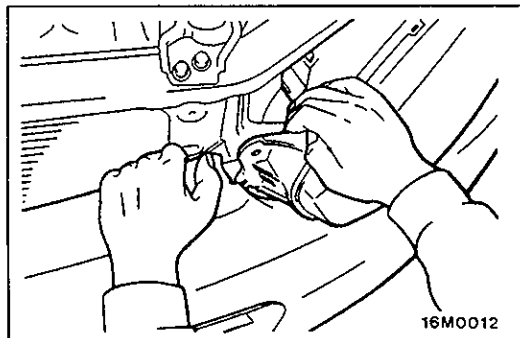

16M0012

REMOVAL SERVICE POINT

◀A▶ HEADLAMP REMOVAL

After removing the inside of the headlamp while pulling the bumper towards you as shown in the illustration, remove the outside, and then remove the headlamp.

FRONT FOG LAMP


GENERAL

OUTLINE OF CHANGE

The following maintenance service points have been established to correspond to changes in the shape of the fog lamps.


REMOVAL AND INSTALLATION

<Hatchback>

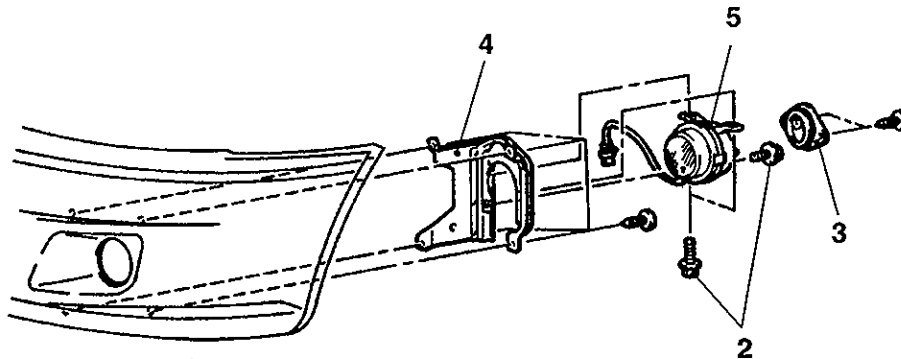

<Sedan>

18M0449

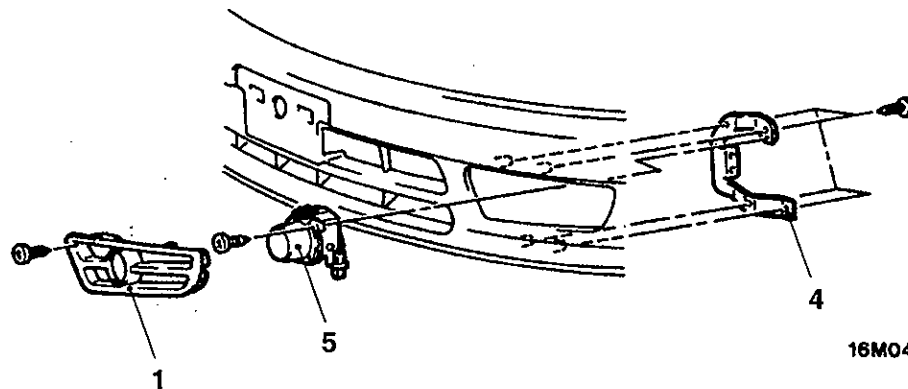

16M0450

00007771

Fog lamp unit removal steps

1. Fog lamp bezel
2. Fog lamp unit mounting bolt
<Hatchback>
3. Cap
4. Fog lamp unit

Fog lamp bracket removal steps

- Front bumper (Refer to GROUP 51.)
- 2. Fog lamp unit mounting bolt
<Hatchback>
- 4. Fog lamp bracket
- 5. Fog lamp unit

REMOVAL SERVICE POINT <HATCHBACK>**◀A▶ FOG LAMP UNIT MOUNTING BOLT/CAP/FOG
LAMP UNIT REMOVAL**

Remove the fog lamp unit mounting bolt and the fog lamp unit cap. Then pull the fog lamp unit out through the gap at the front bumper.