

WORKSHOP MANUAL

TF SERIES

ACCESSORIES

SECTION 9

ISUZU



NOTICE

Before using this Workshop Manual to assist you in performing vehicle service and maintenance operations, it is recommended that you carefully read and thoroughly understand the information contained in Section - OA under the headings "GENERAL REPAIR INSTRUCTIONS" and "HOW TO USE THIS MANUAL".

All material contained in this Manual is based on the latest product information available at the time of publication.

All rights are reserved to make changes at any time without prior notice.

SECTION 9


ACCESSORIES

TABLE OF CONTENTS


	PAGE
Parts Location	9- 2
Circuit Diagram.....	9- 4
Connector List	9- 8
Radio	9- 9
Speaker	9- 10
Antenna	9- 10

PARTS LOCATION

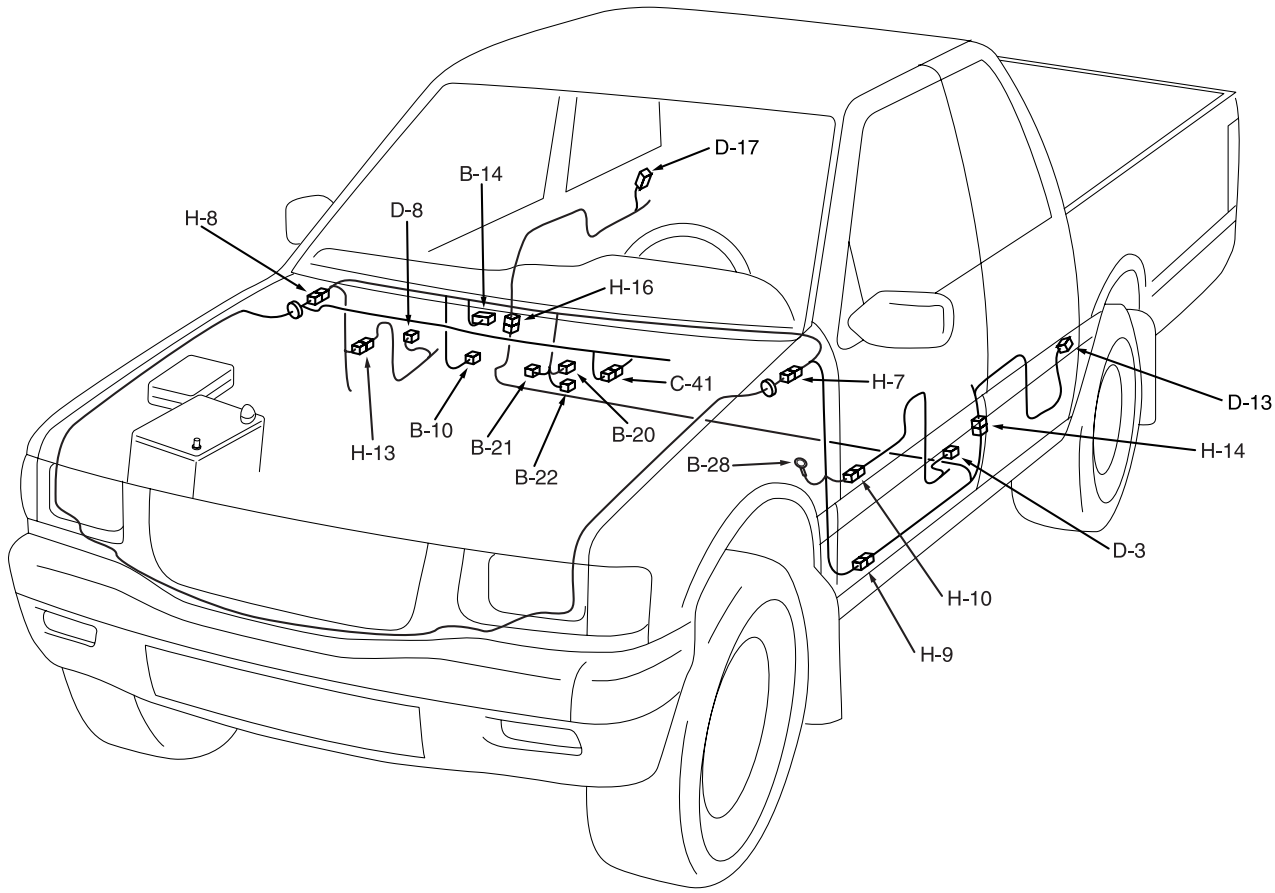
LHD




RHD

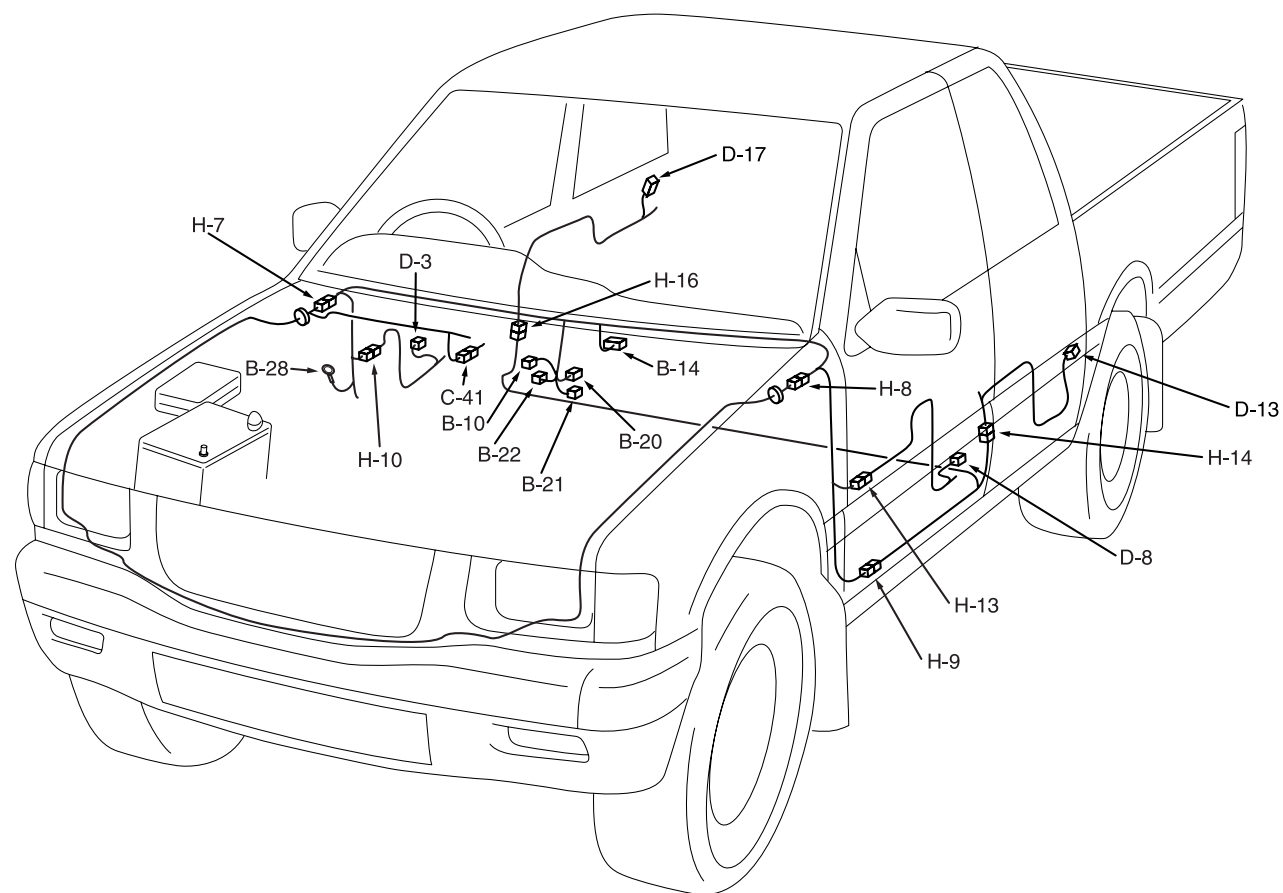



LHD

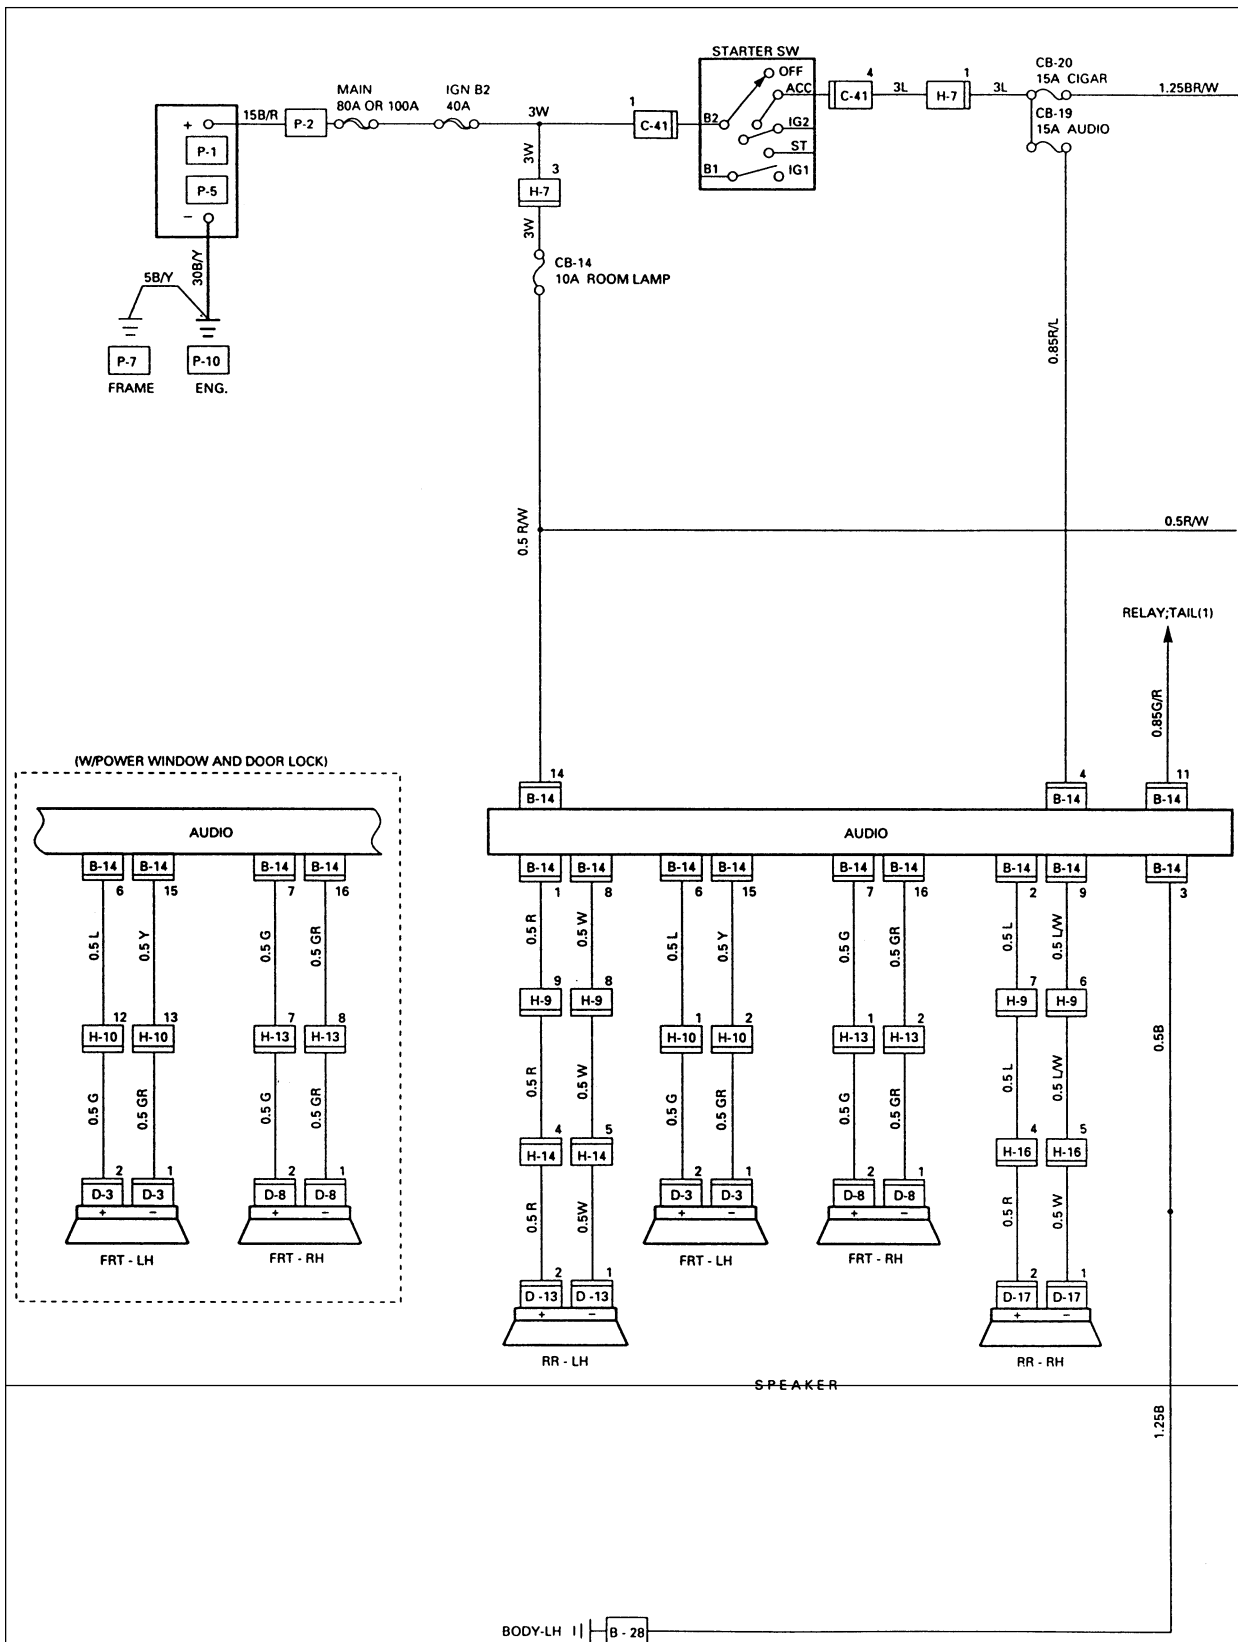
















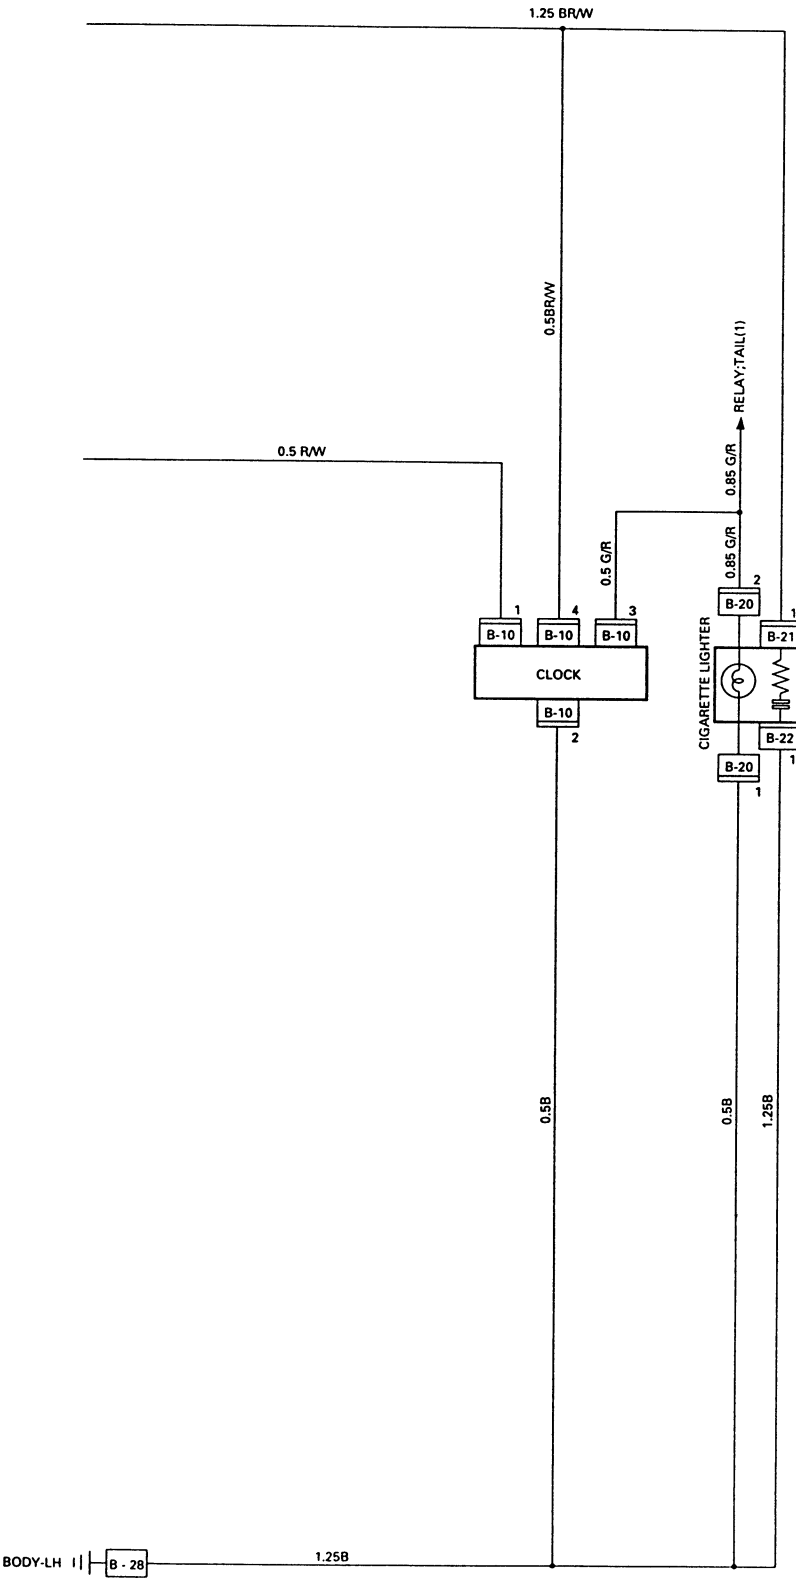


RHD

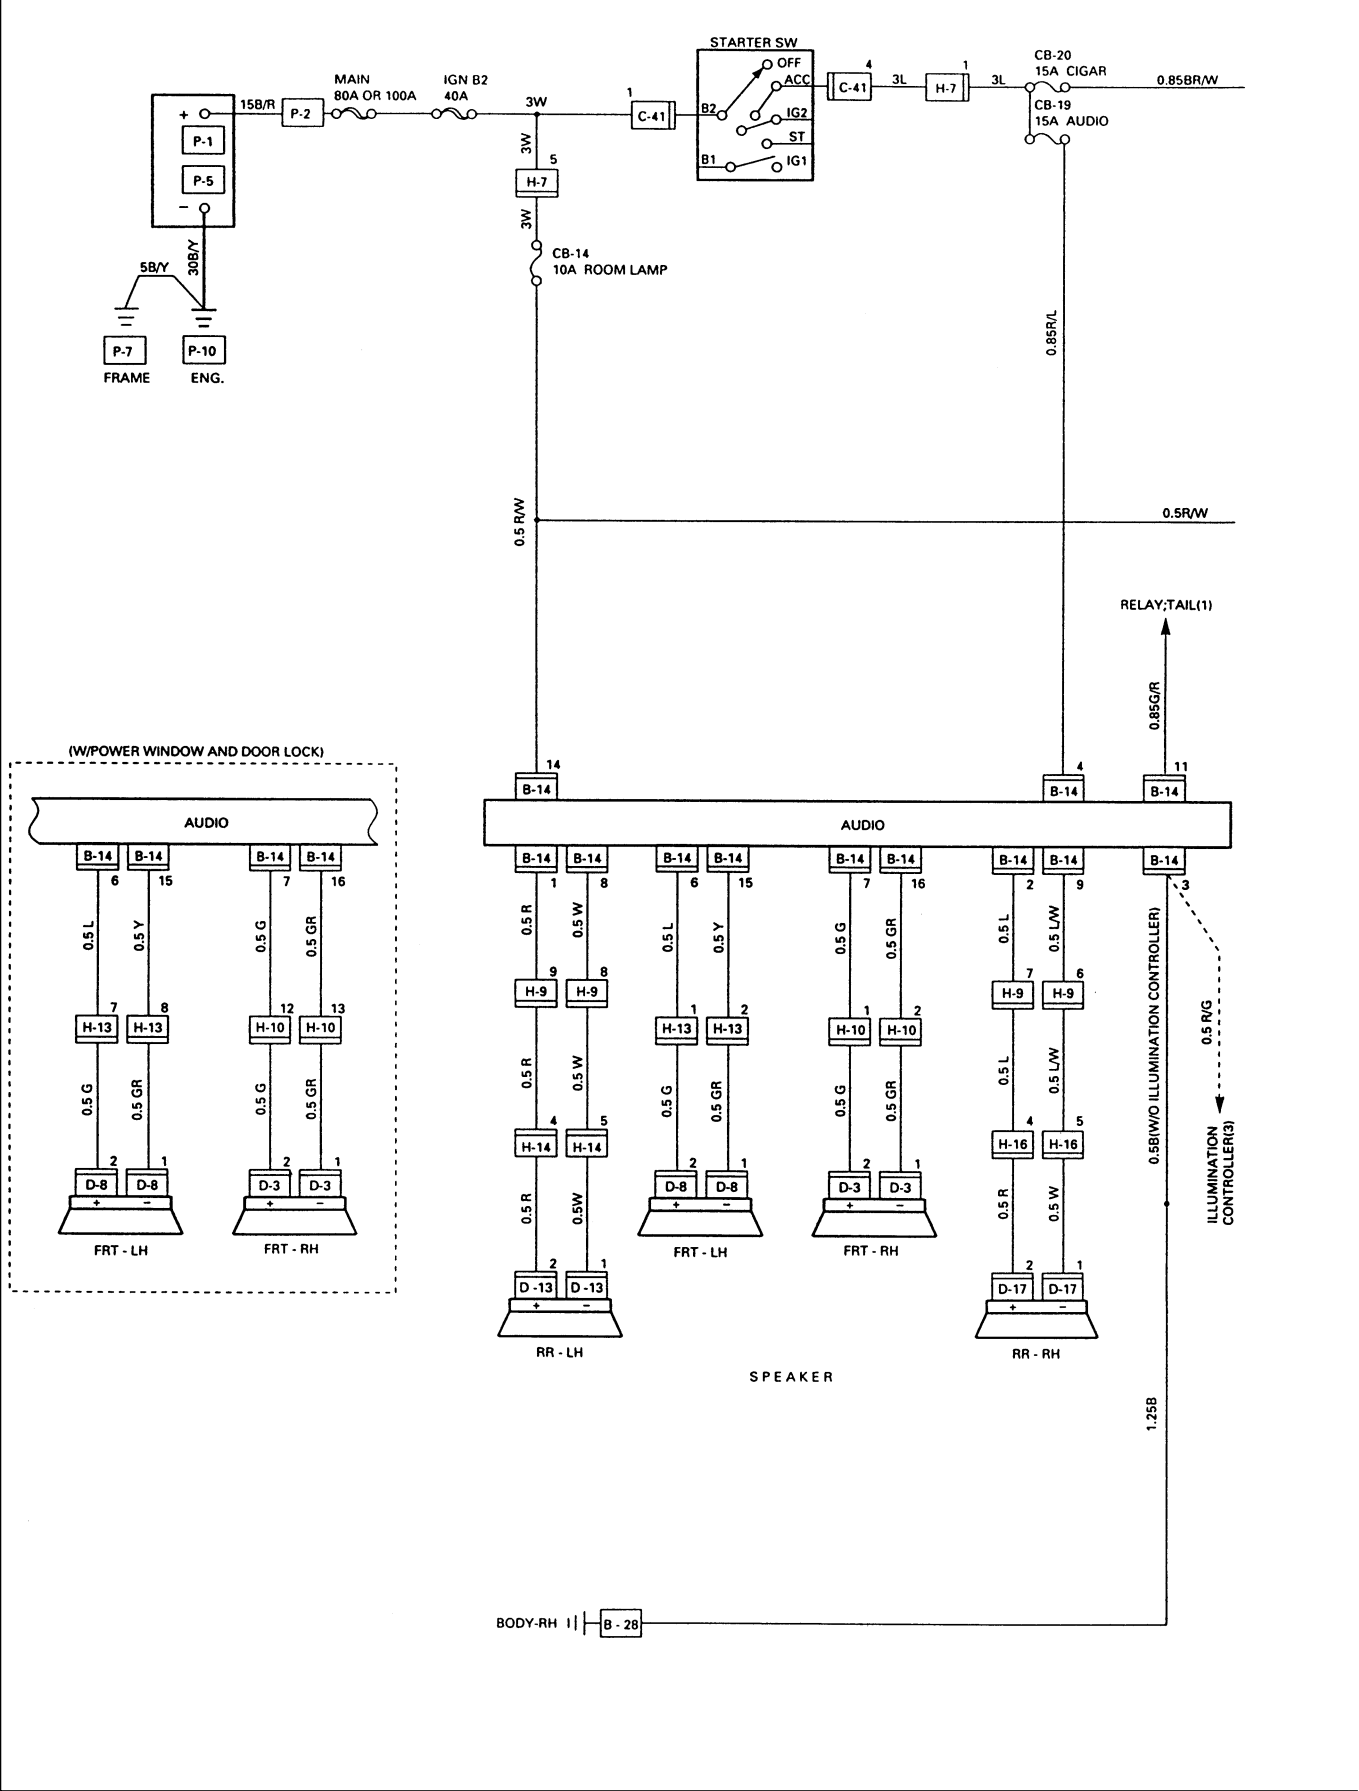

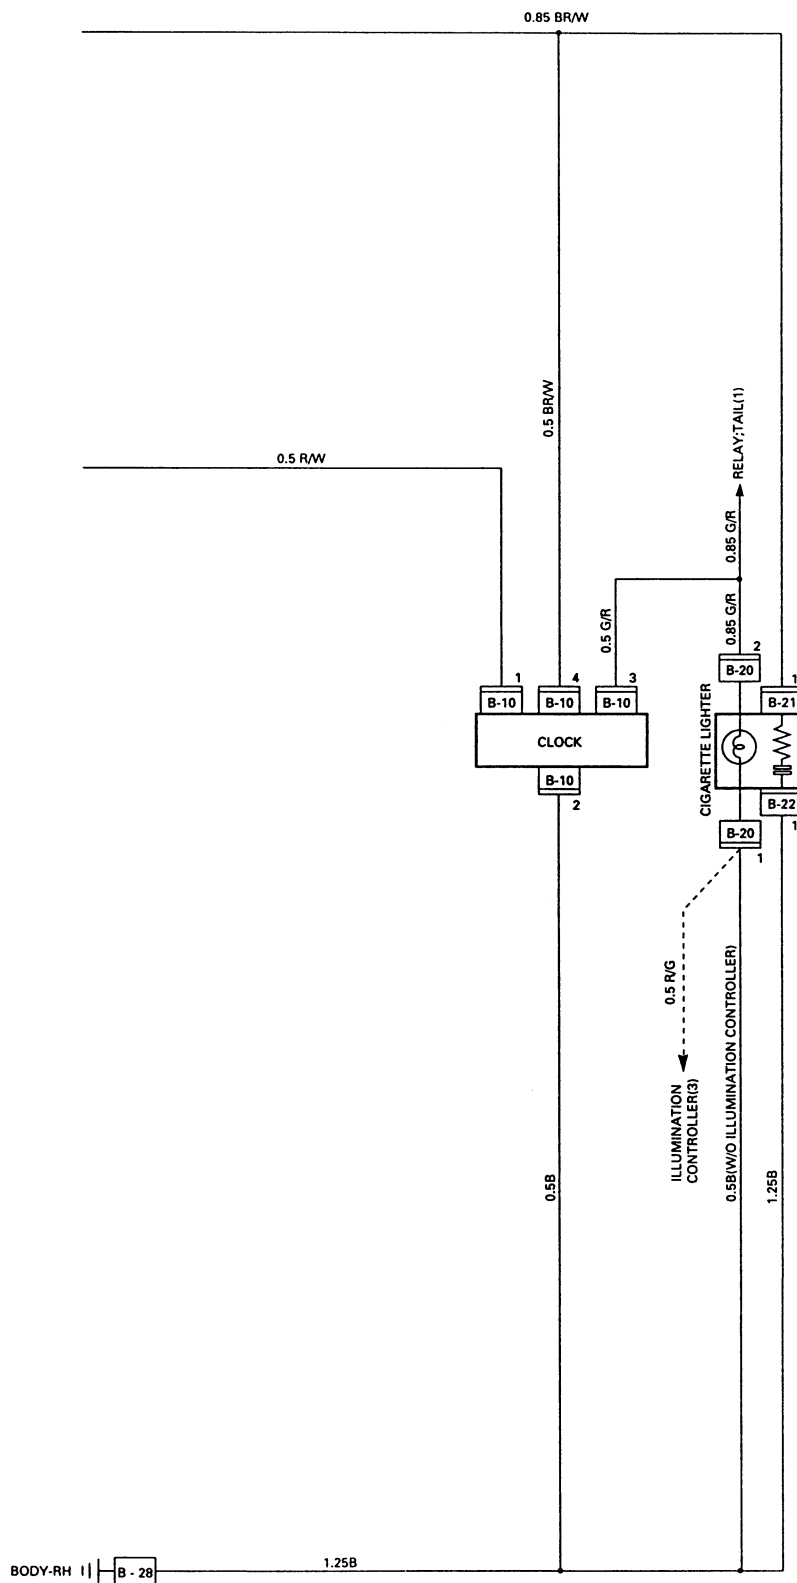


CONNECTOR LIST

        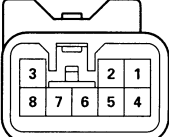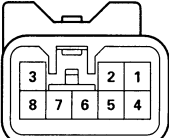     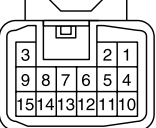No.	Connector face	No.	Connector face
B-14		H-10	  (W/POWER WINDOW AND DOOR LOCK)
B-28		H-10	  (W/O POWER WINDOW AND DOOR LOCK)
C-41	 	H-13	  (W/ POWER WINDOW AND DOOR LOCK)
D-3		H-13	  (W/O POWER WINDOW AND DOOR LOCK)
D-8		H-14	 
D-13		H-16	 
D-17			
H-7 (LHD)	 		
H-7 (RHD)	 		
H-9	 		

RADIO

↔ ↔ REMOVAL AND INSTALLATION

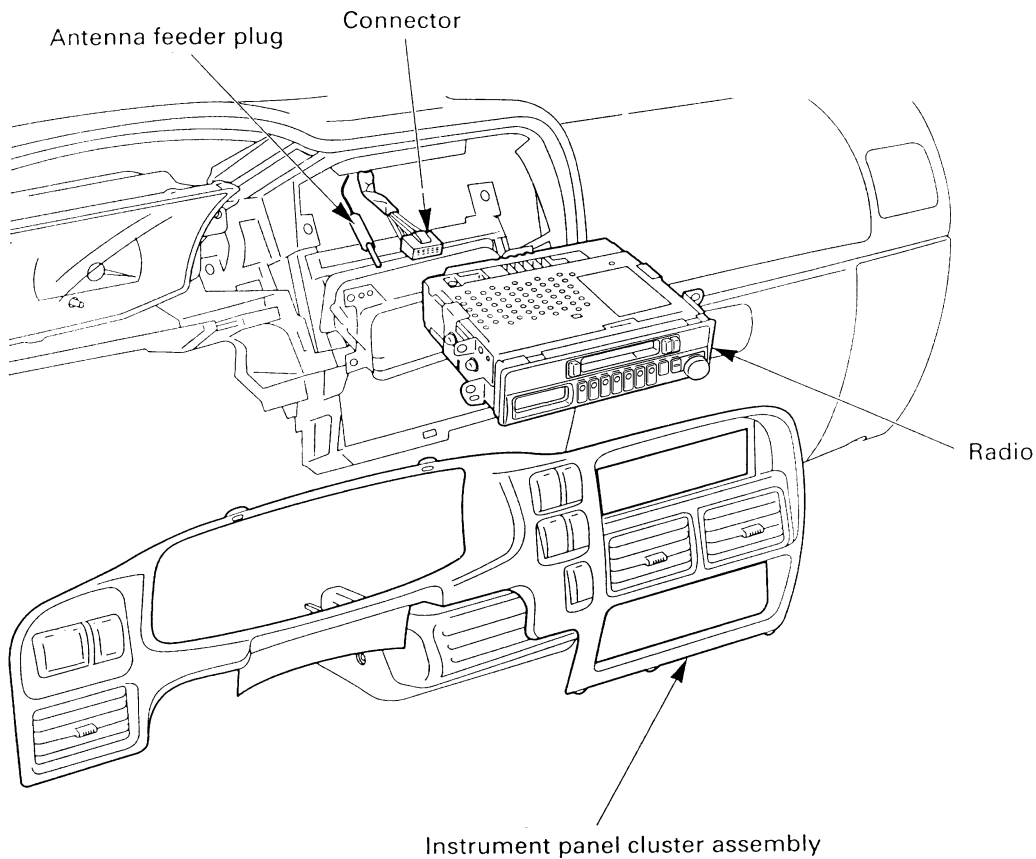This illustration is based on LHD model.



↔ Removal

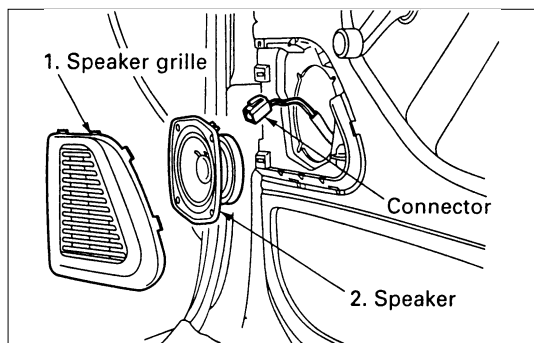
1. Remove Instrument Panel lower cover assembly.
2. Remove meter cluster assembly.
3. Disconnect the connector for Audio and Mirror.
4. Remove 4 screws on the radio.
5. Disconnect the Antenna feeder plug.
6. Pull out the radio.

↔ Installation

To install, follow the removal steps in the reverse order.

SPEAKER

↔ ↔ REMOVAL AND INSTALLATION



↔ Removal

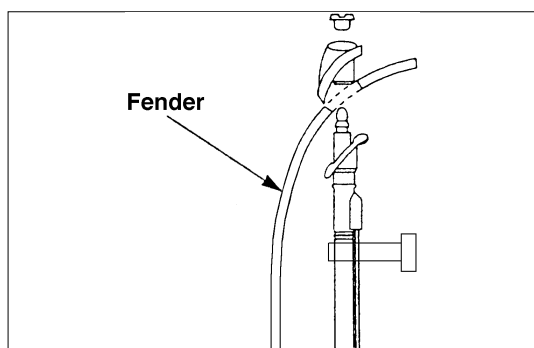
1. Speaker Grille
 - Pull the grille to release the locks.
2. Speaker
 - Remove four screws.
 - Disconnect the connector.

↔ Installation

To install, follow the removal steps in the reverse order.

ANTENNA

↔ ↔ REMOVAL AND INSTALLATION



↔ Removal and Installation

1. Remove the antenna nut.
 2. Remove the antenna cover.
 3. Remove the fender cover.
 4. Remove the antenna stay.
 5. Pull out the antenna downward.
- Remove and install the antenna as illustrated.
Antenna unit is located on the front fender driver side.
To install, follow the removal steps in the reverse order.

TFACC-WE-981

You are requested to order this manual using the manual number that is shown above.

This manual is applicable for vehicles in all countries except the USA, Canada, Europe and Thailand.

All rights reserved, This manual may not be reproduced in whole or in part, without the permission in writing of ISUZU MOTORS LIMITED.

Issued by
ISUZU MOTORS LIMITED

INTERNATIONAL SERVICE DEPARTMENT

Tokyo, Japan

First edition May., 1998

9805-01A-4

