


Rear left door , (L0R)

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

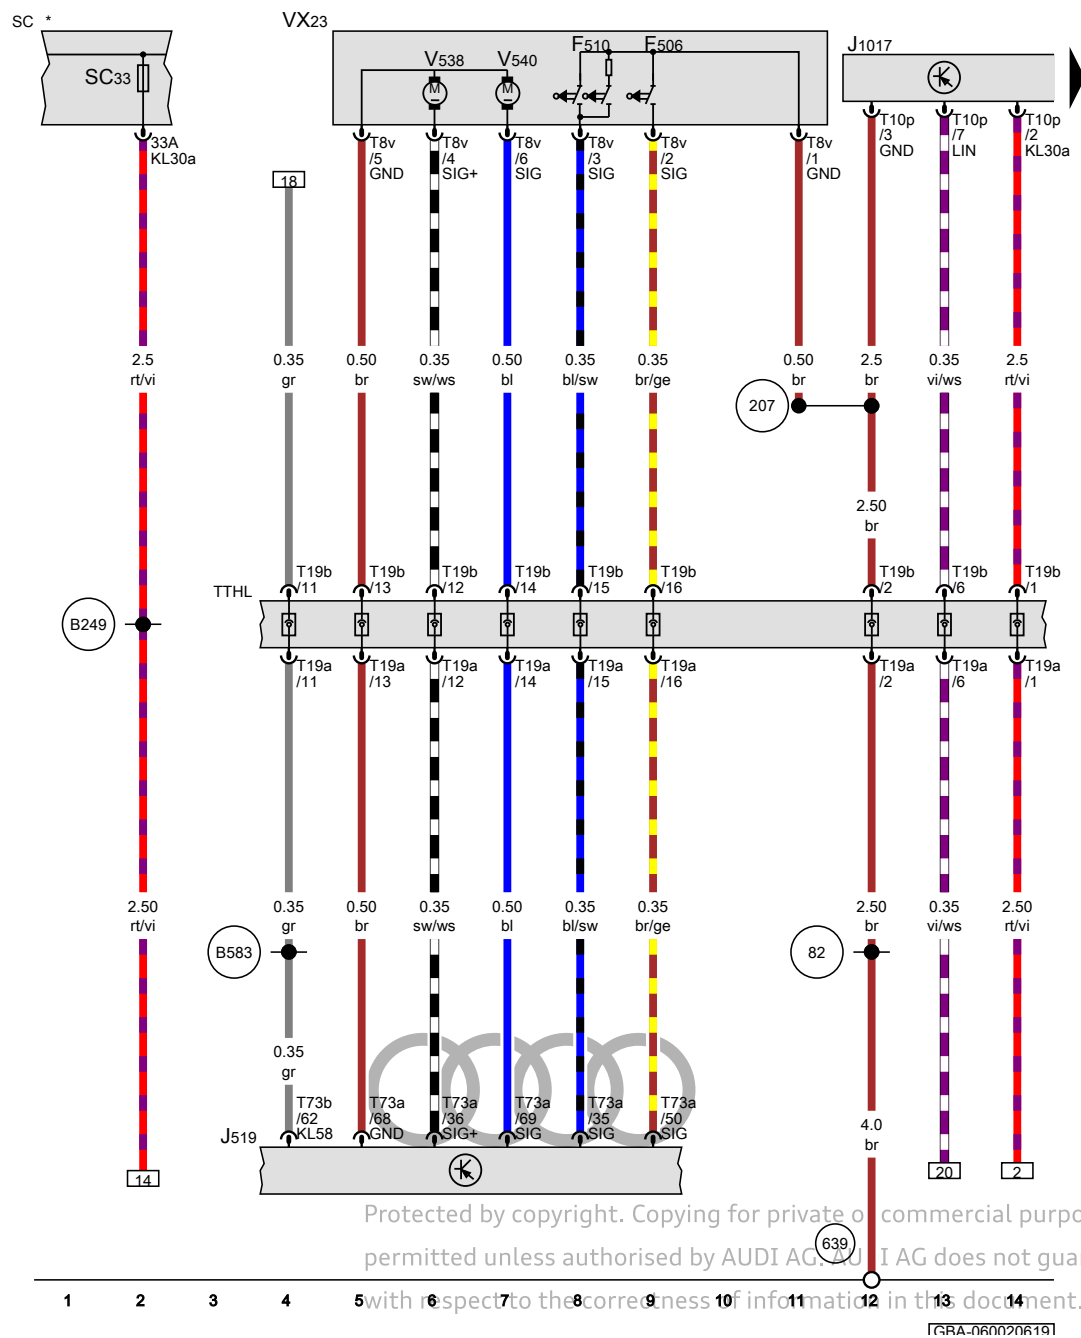


Onboard supply control unit, Control unit with rear passenger side window regulator motor, Fuse holder C, Rear left door lock unit

- | | |
|-------|--|
| F506 | Rear door contact switch, passenger side |
| F510 | Rear central locking actuator, passenger side |
| J519 | Onboard supply control unit |
| J1017 | Control unit with rear passenger side window regulator motor |
| SC | Fuse holder C |
| SC33 | Fuse 33 on fuse holder C |
| T8v | 8-pin connector, black |
| T10p | 10-pin connector, black |
| T19a | 19-pin connector, black |
| T19b | 19-pin connector, black |
| T73a | 73-pin connector, black |
| T73b | 73-pin connector, black |
| TTHL | Coupling point for rear left door |
| VX23 | Rear left door lock unit |
| V538 | Rear central locking SAFELOCK function motor, passenger side |
| V540 | Rear central locking motor, passenger side |

- 82 Earth connection 1, in front left wiring harness
- 207 Earth connection, in rear left door wiring harness
- 639 Earth point, left A-pillar
- B249 Connection 2 (30, window regulator), in interior wiring harness
- B583 Positive connection (58), in interior wiring harness

* see applicable current flow diagram for fuses in interior

ws	=	white
sw	=	black
ro	=	red
rt	=	red
br	=	brown
gn	=	green
bl	=	blue
gr	=	gray
li	=	purple
vi	=	purple
ge	=	yellow
or	=	orange
rs	=	pink

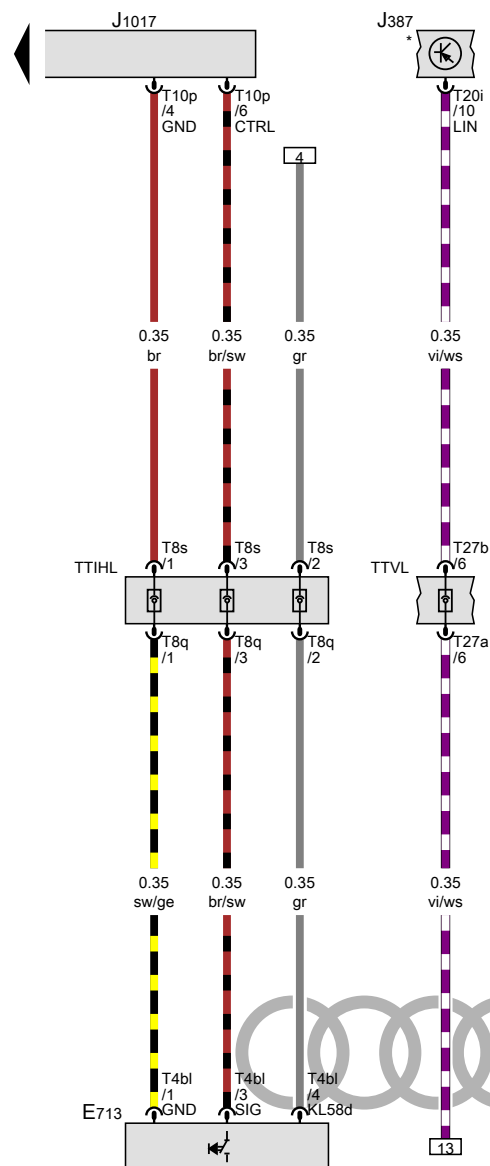

Rear passenger side window regulator button, Front passenger door control unit, Control unit with rear passenger side window regulator motor

- E713 Rear passenger side window regulator button
- J387 Front passenger door control unit
- J1017 Control unit with rear passenger side window regulator motor
- T4bl 4-pin connector, black
- T8q 8-pin connector, black
- T8s 8-pin connector, black
- T10p 10-pin connector, black
- T20i 20-pin connector, white
- T27a 27-pin connector, black
- T27b 27-pin connector, black
- TTIHL Coupling point in rear left door
- TTVL Coupling point for front left door
- * see applicable current flow diagram

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.