


POWER DISTRIBUTION

Component Index

- ABS Hydraulic Unit
- Anti-theft Horn
- Dash Fuse Box
- Fog Light Relay
- Fuel Pump Relay
- Fuse/Relay Box
- Generator
- Heater and A/C Relay
- Horn Relay
- Lighting Relay
- PCM Main Relay
- Powertrain Control Module (PCM)
- SRS Fuse Box
- Starter
- Starter Relay
- Starter Switch
- Taillight Relay


POWER DISTRIBUTION

Circuit Schematic

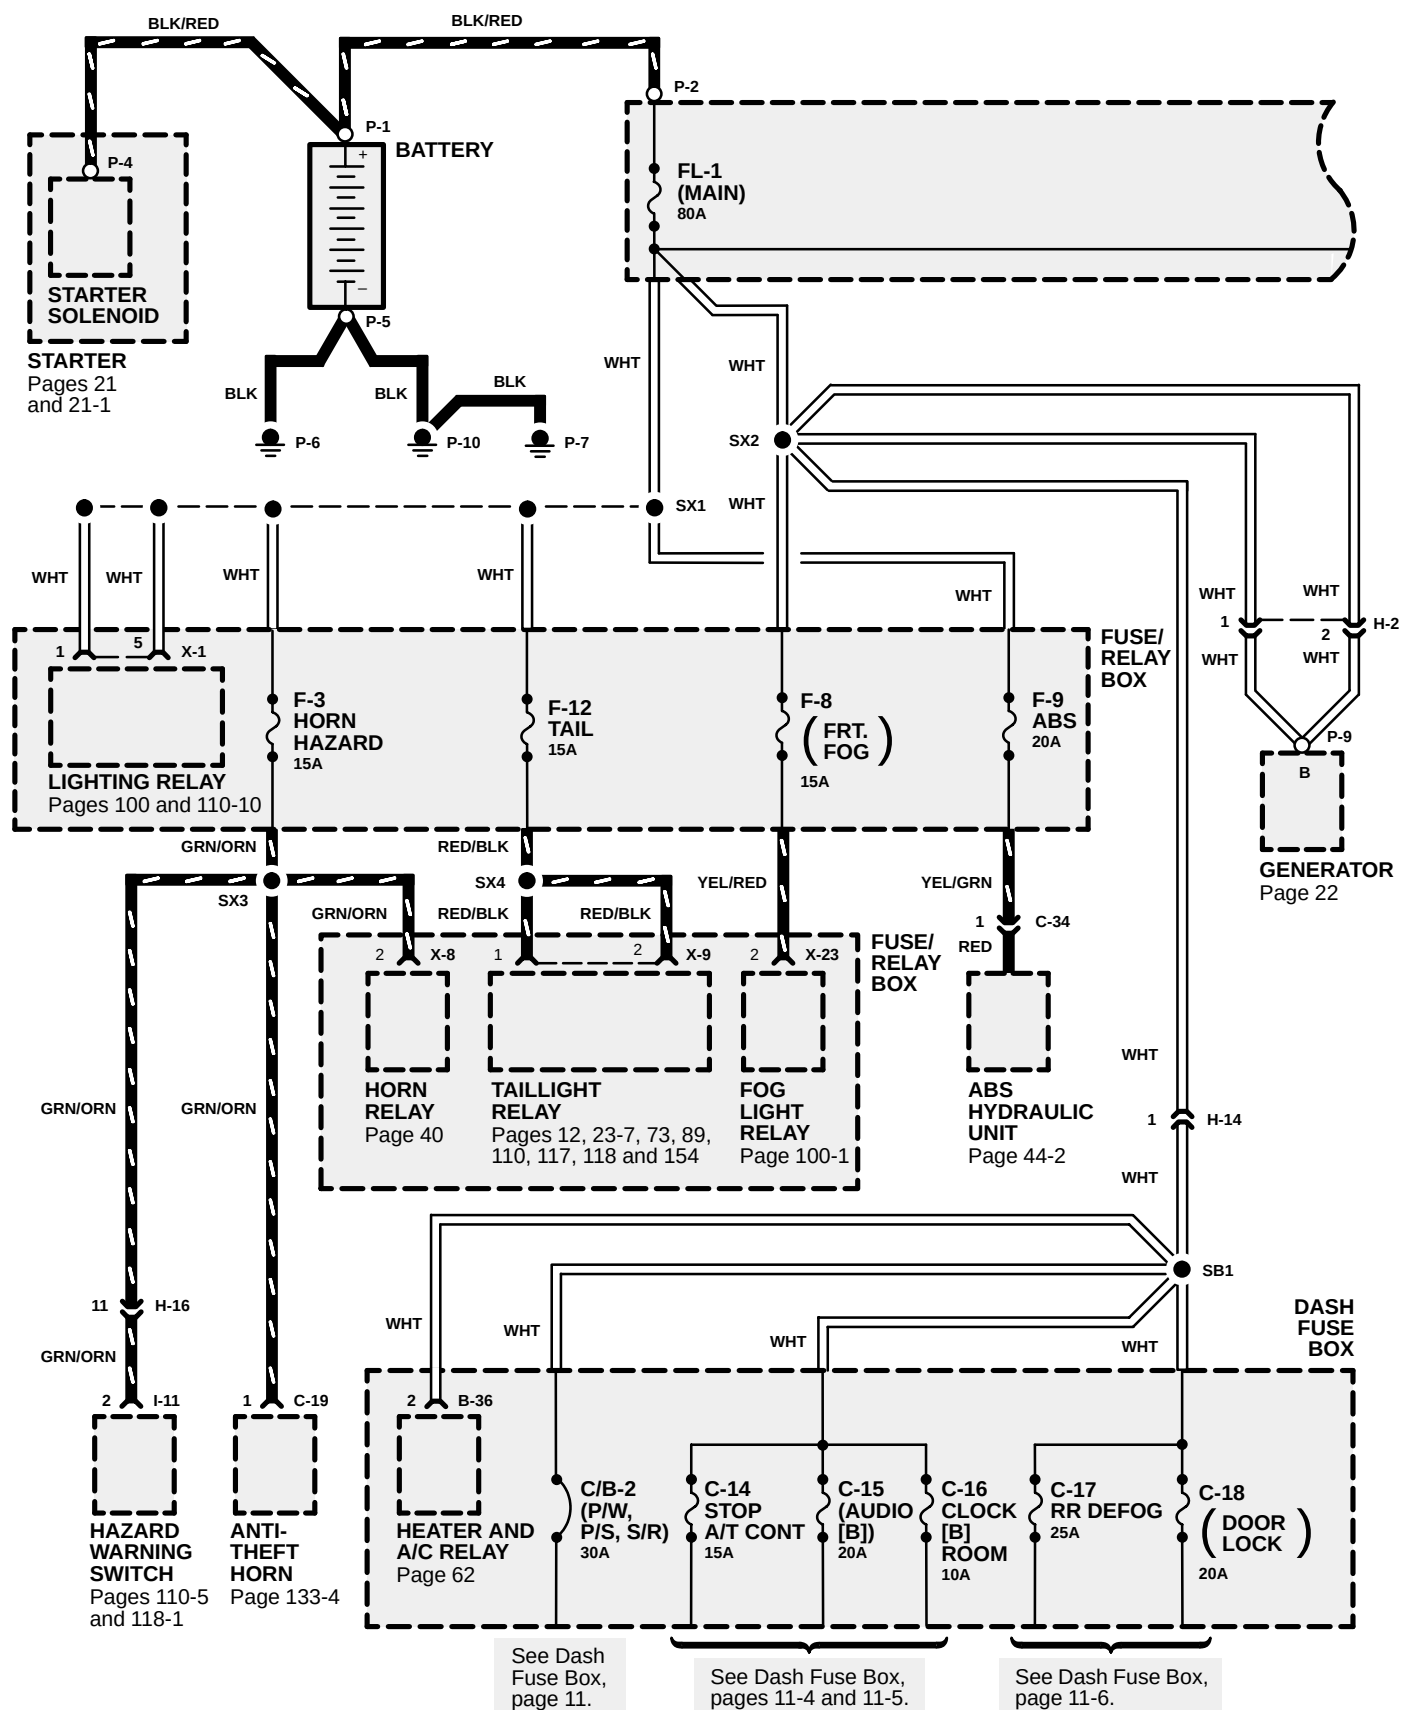


POWER DISTRIBUTION

Circuit Schematic

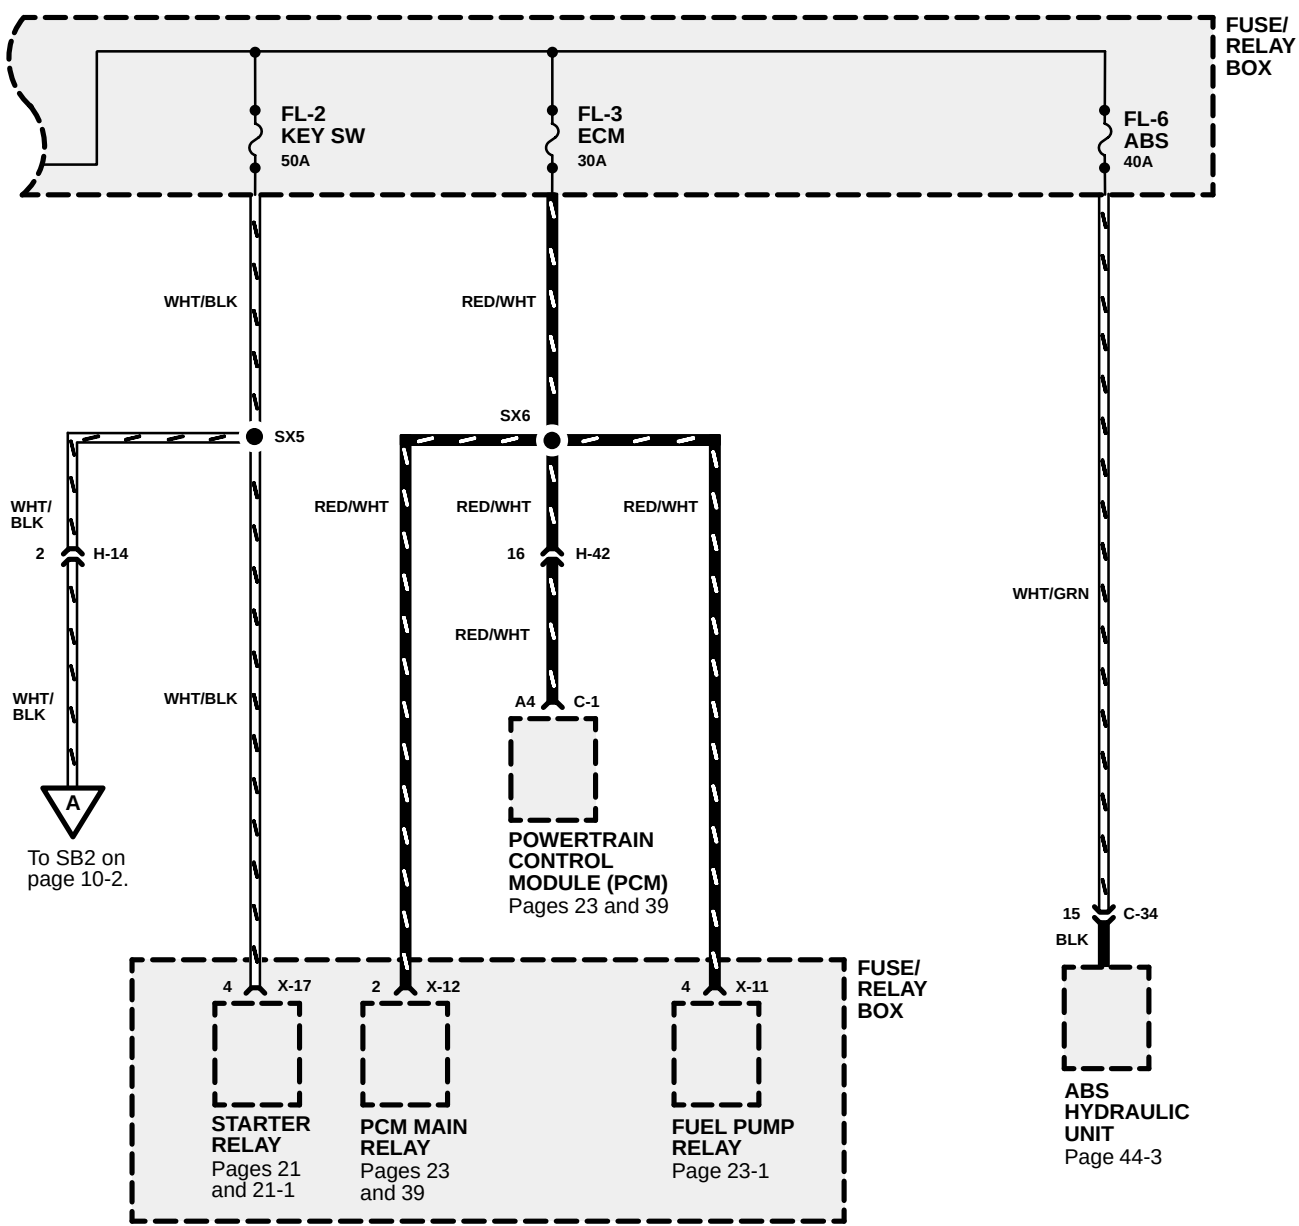


POWER DISTRIBUTION

Circuit Schematic

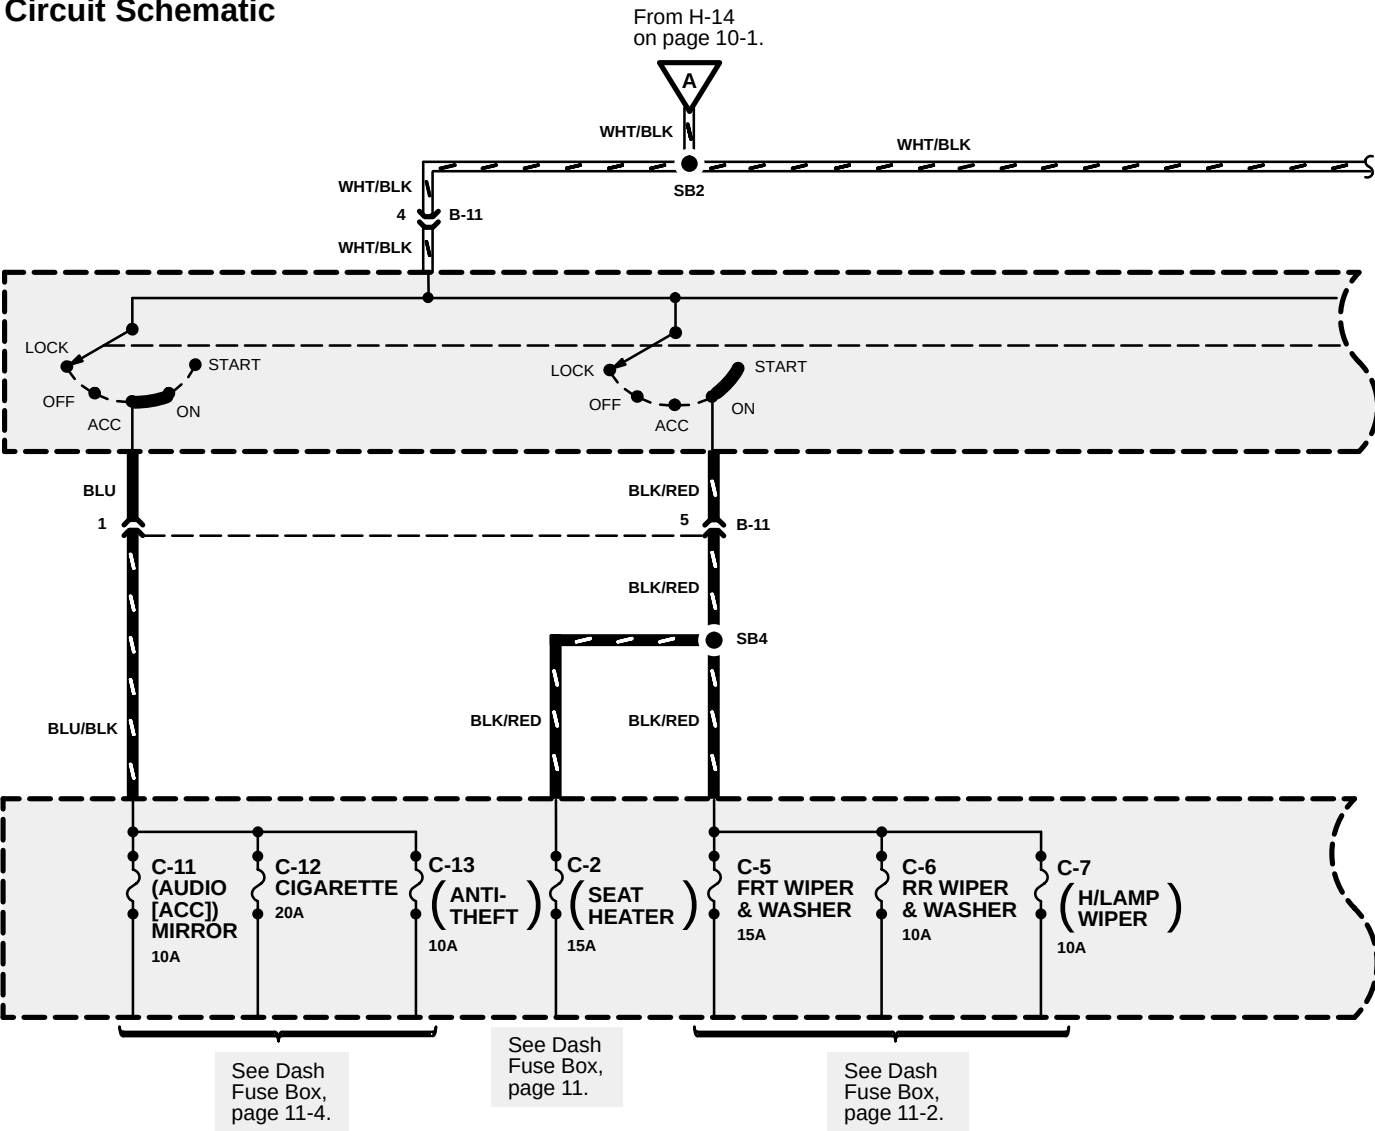

POWER DISTRIBUTION

Circuit Schematic

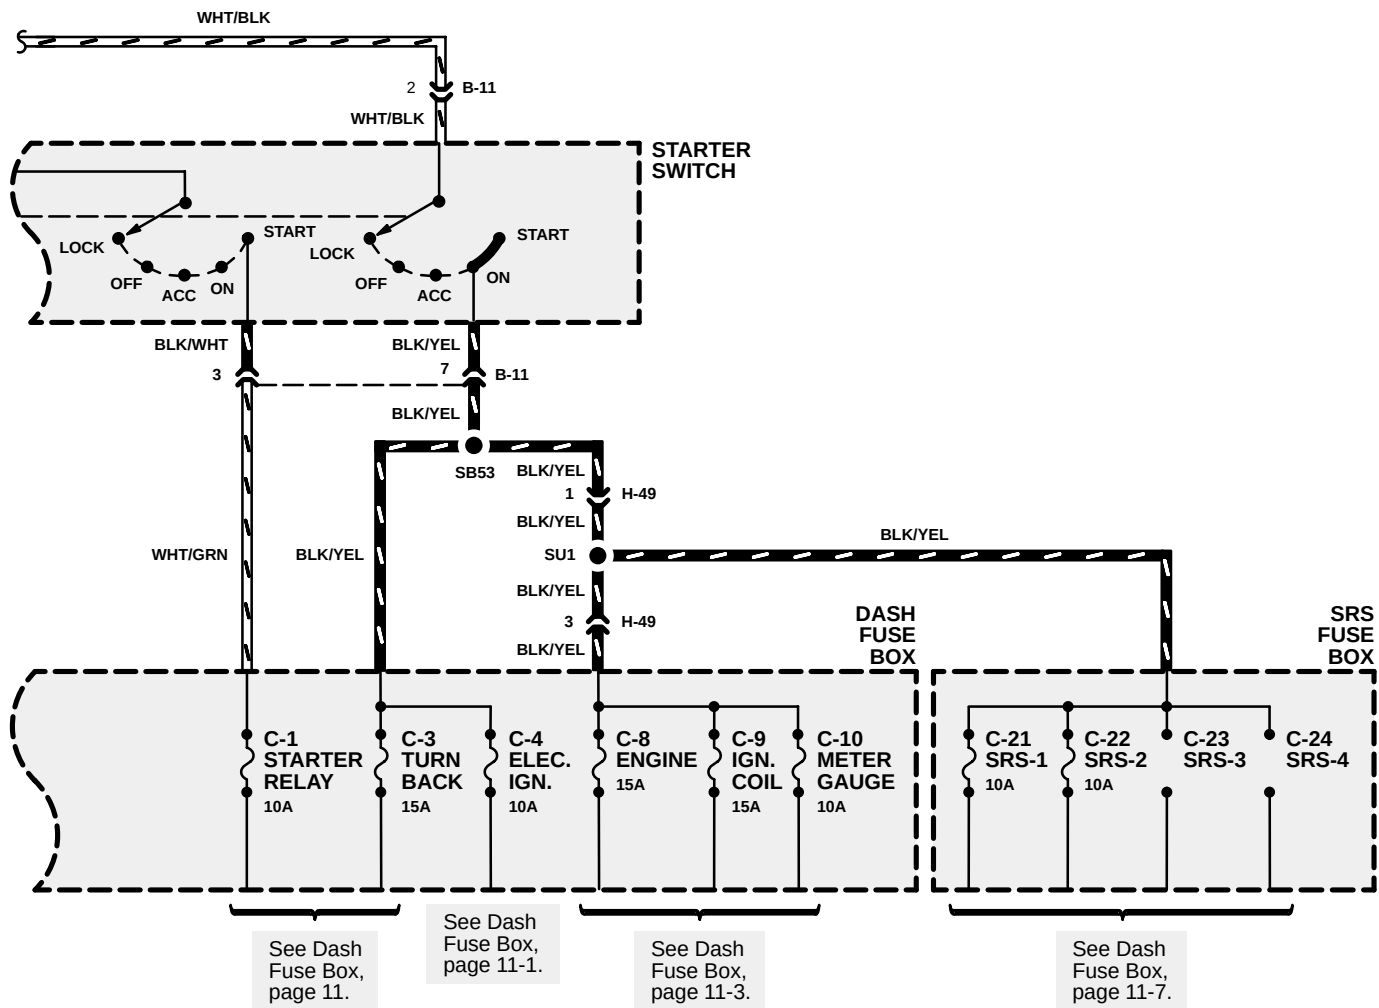

POWER DISTRIBUTION

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>	<u>Photo No.</u>
ABS Hydraulic Unit	Right side of engine compartment
Anti-theft Horn	Right rear corner of engine compartment 39
Dash Fuse Box	Behind left dash side trim panel 51
Fog Light Relay	In fuse/relay box 35
Fuel Pump Relay	In fuse/relay box 38
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 33
Generator	Lower right front of engine 5
Heater and A/C Relay	In dash fuse box 50
Horn Relay	In fuse/relay box 37
Lighting Relay	In fuse/relay box 35
PCM Main Relay	In fuse/relay box 38
Powertrain Control Module (PCM)	Behind the lower cluster assembly 62
SRS Fuse Box	On top of dash fuse box 51
Starter	Lower left rear of engine 24
Starter Relay	In fuse/relay box 38
Starter Switch	Underside of steering column 46
Taillight Relay	In fuse/relay box 35
 <u>Connector</u>	
B-11 (8-WHT)	Below I/P, right of steering column 58
C-34 (16-BLK)	Right front corner of engine compartment 32
H-2 (2-GRY)	Right side of engine compartment 40
H-13 (6-GRY)	Below I/P, above right dash side trim panel, on bracket 69
H-14 (2-RED)	Below I/P, above right dash side trim panel, on bracket 70
H-16 (22-WHT)	Behind right dash side trim panel 73
H-42 (16-BLK)	Right front of engine compartment 31
H-49 (4-WHT)	On top of dash fuse box 51
 <u>Ground</u>	
P-6	Right side of engine compartment, on rear of battery tray 40
P-7	Lower right front of engine compartment 5
P-10	Lower right side of engine compartment
 <u>Terminal</u>	
P-2	In fuse/relay box 37
P-4	On starter solenoid 24