


DASH FUSE BOX

Component Index

A/T Shift Indicator Control Unit	No. 3 Ignition Coil
Anti-theft Controller	No. 4 Ignition Coil
Automatic Transmission Mode Switch	No. 5 Ignition Coil
Back Up Light Switch	No. 6 Ignition Coil
Brake Switch	PCM Main Relay
Clutch Start Switch	Power Window Relay
Clutch Switch	Powertrain Control Module (PCM)
Cornering Light Relay	Rear Defogger Relay
Cruise Control Unit	Rear Intermittent Wiper Relay
Dash Fuse Box	Rear Wiper Motor
Data Link Connector (DLC) C63 (16-BLK)	Right Headlight Wiper Motor
Electronic Brake Control Module (EBCM)	Seat Belt, Key, and Light Remind Buzzer
Evaporative Emission (EVAP) Canister Purge Valve	Shift Lock Controller
Exhaust Gas Recirculation (EGR) Valve	Shift-on-the-Fly Relay
Fuse/Relay Box	SRS Fuse Box
Generator	SRS Unit
Headlight Washer Motor	Starter Switch
Headlight Wiper Timer Unit	Stop Light Switch
Ignition Control Module (ICM)	Transmission Switch 1-2
Left Headlight Wiper Motor	Vehicle Speed Sensor (VSS) (A/T)
Mass Air Flow (MAF) Sensor	Vehicle Speed Sensor (VSS) (M/T)
No. 1 Ignition Coil	Windshield Intermittent Wiper Relay
No. 2 Ignition Coil	Windshield Wiper Motor


DASH FUSE BOX

Circuit Schematic

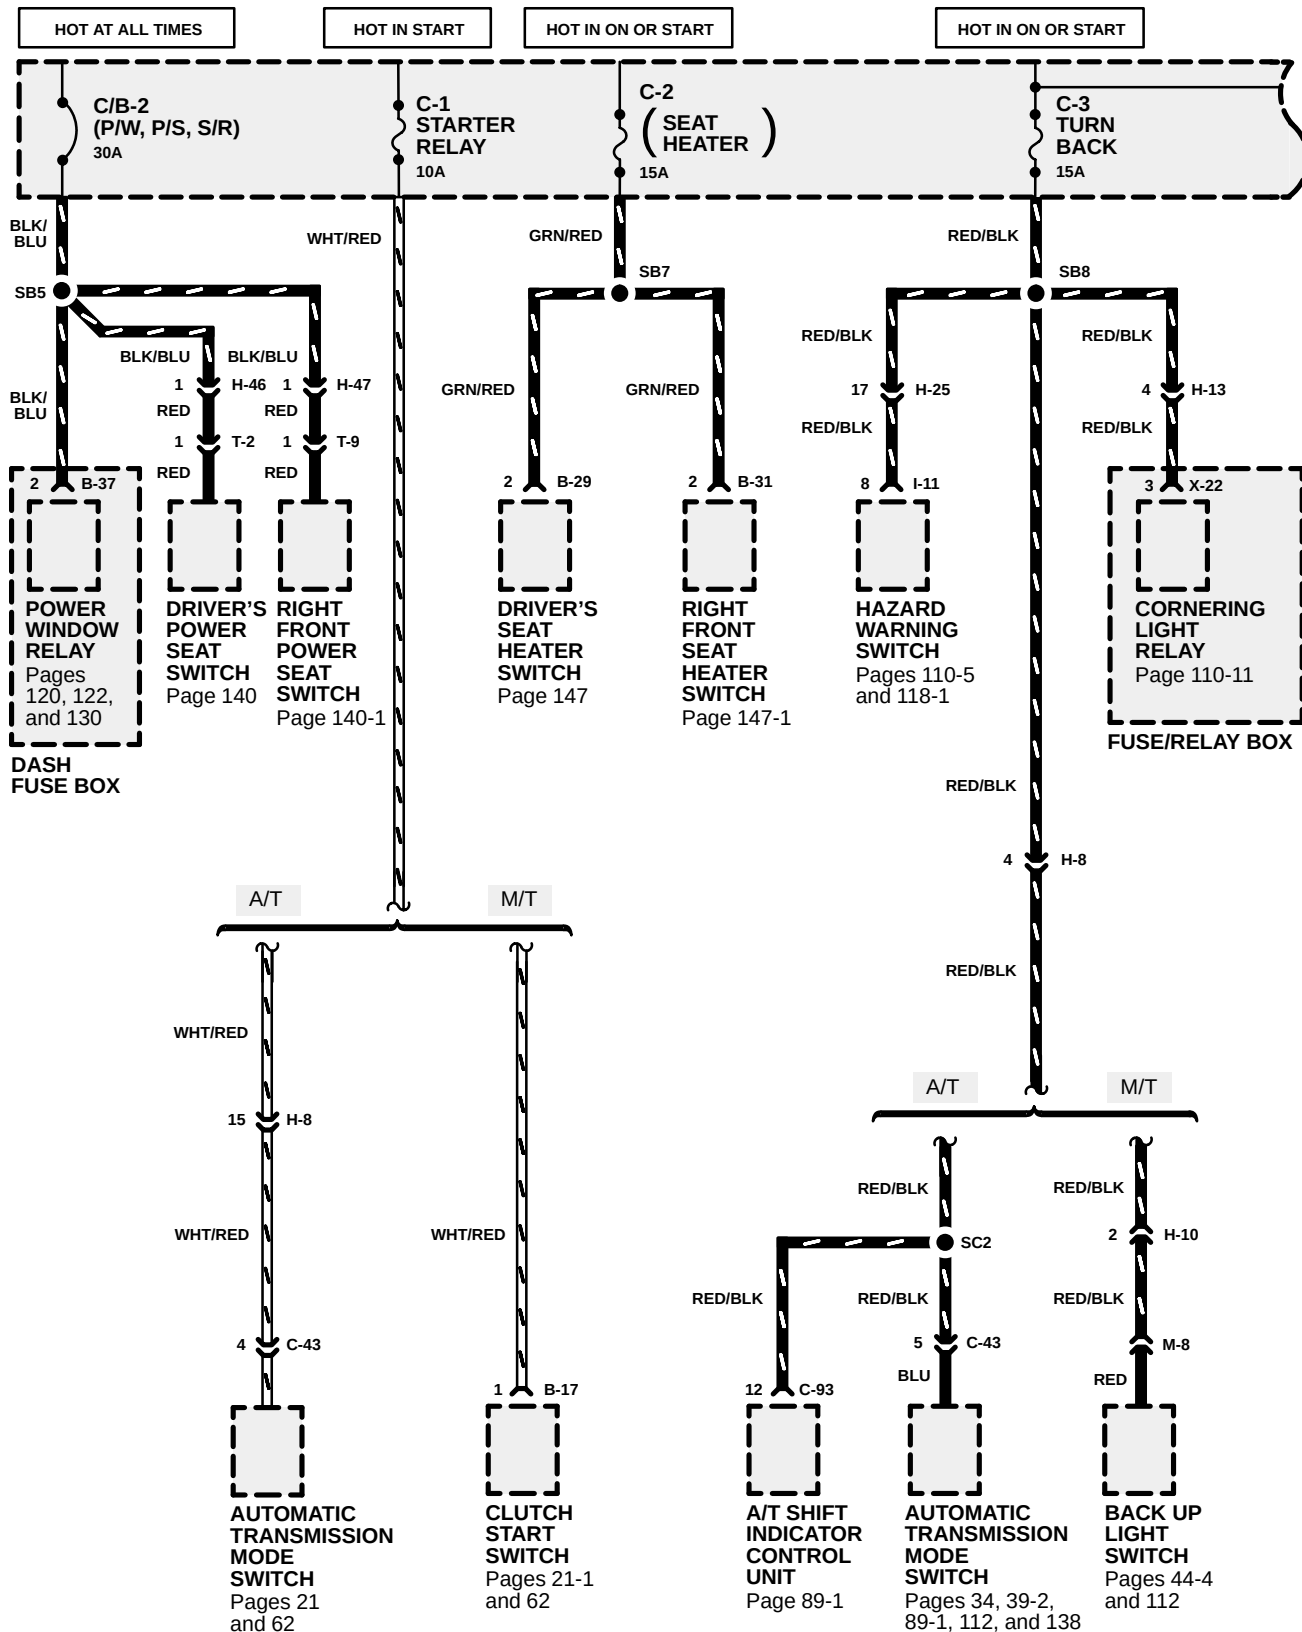


DASH FUSE BOX

Circuit Schematic

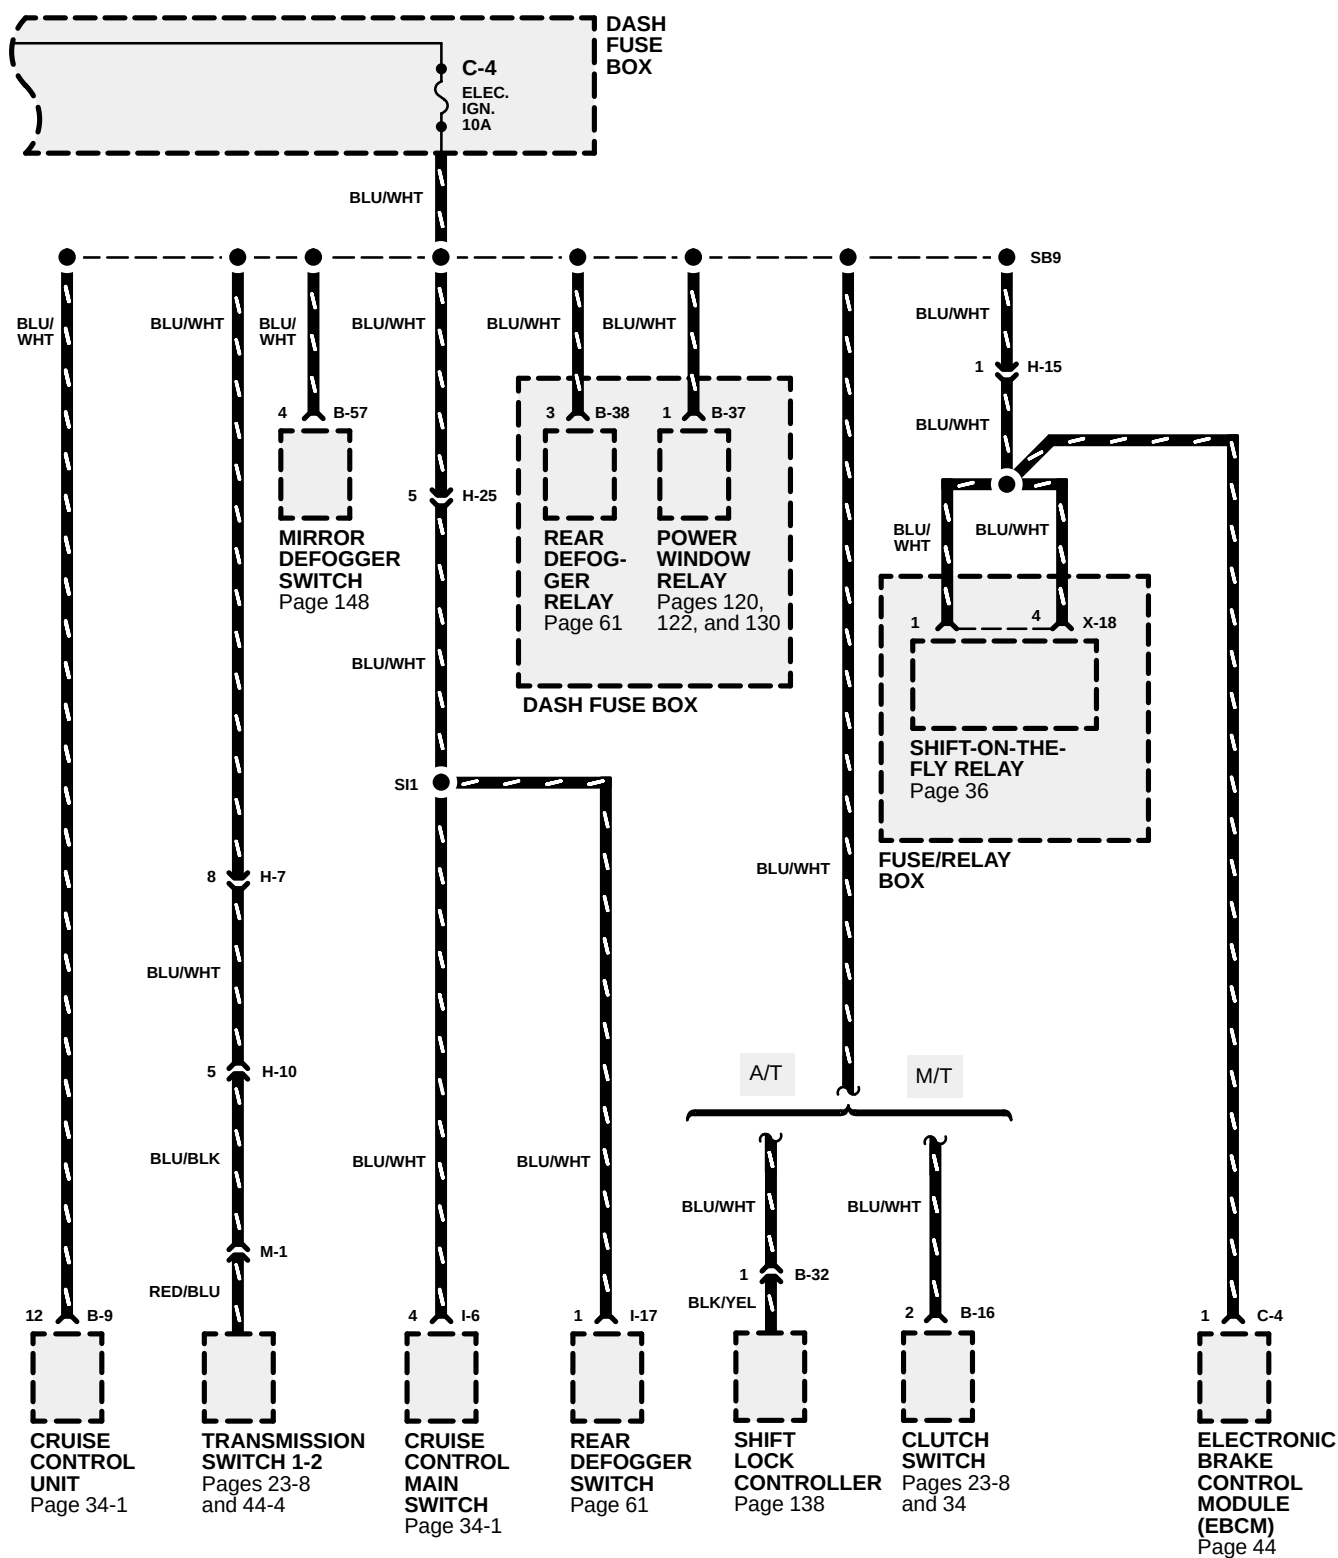


DASH FUSE BOX

Circuit Schematic

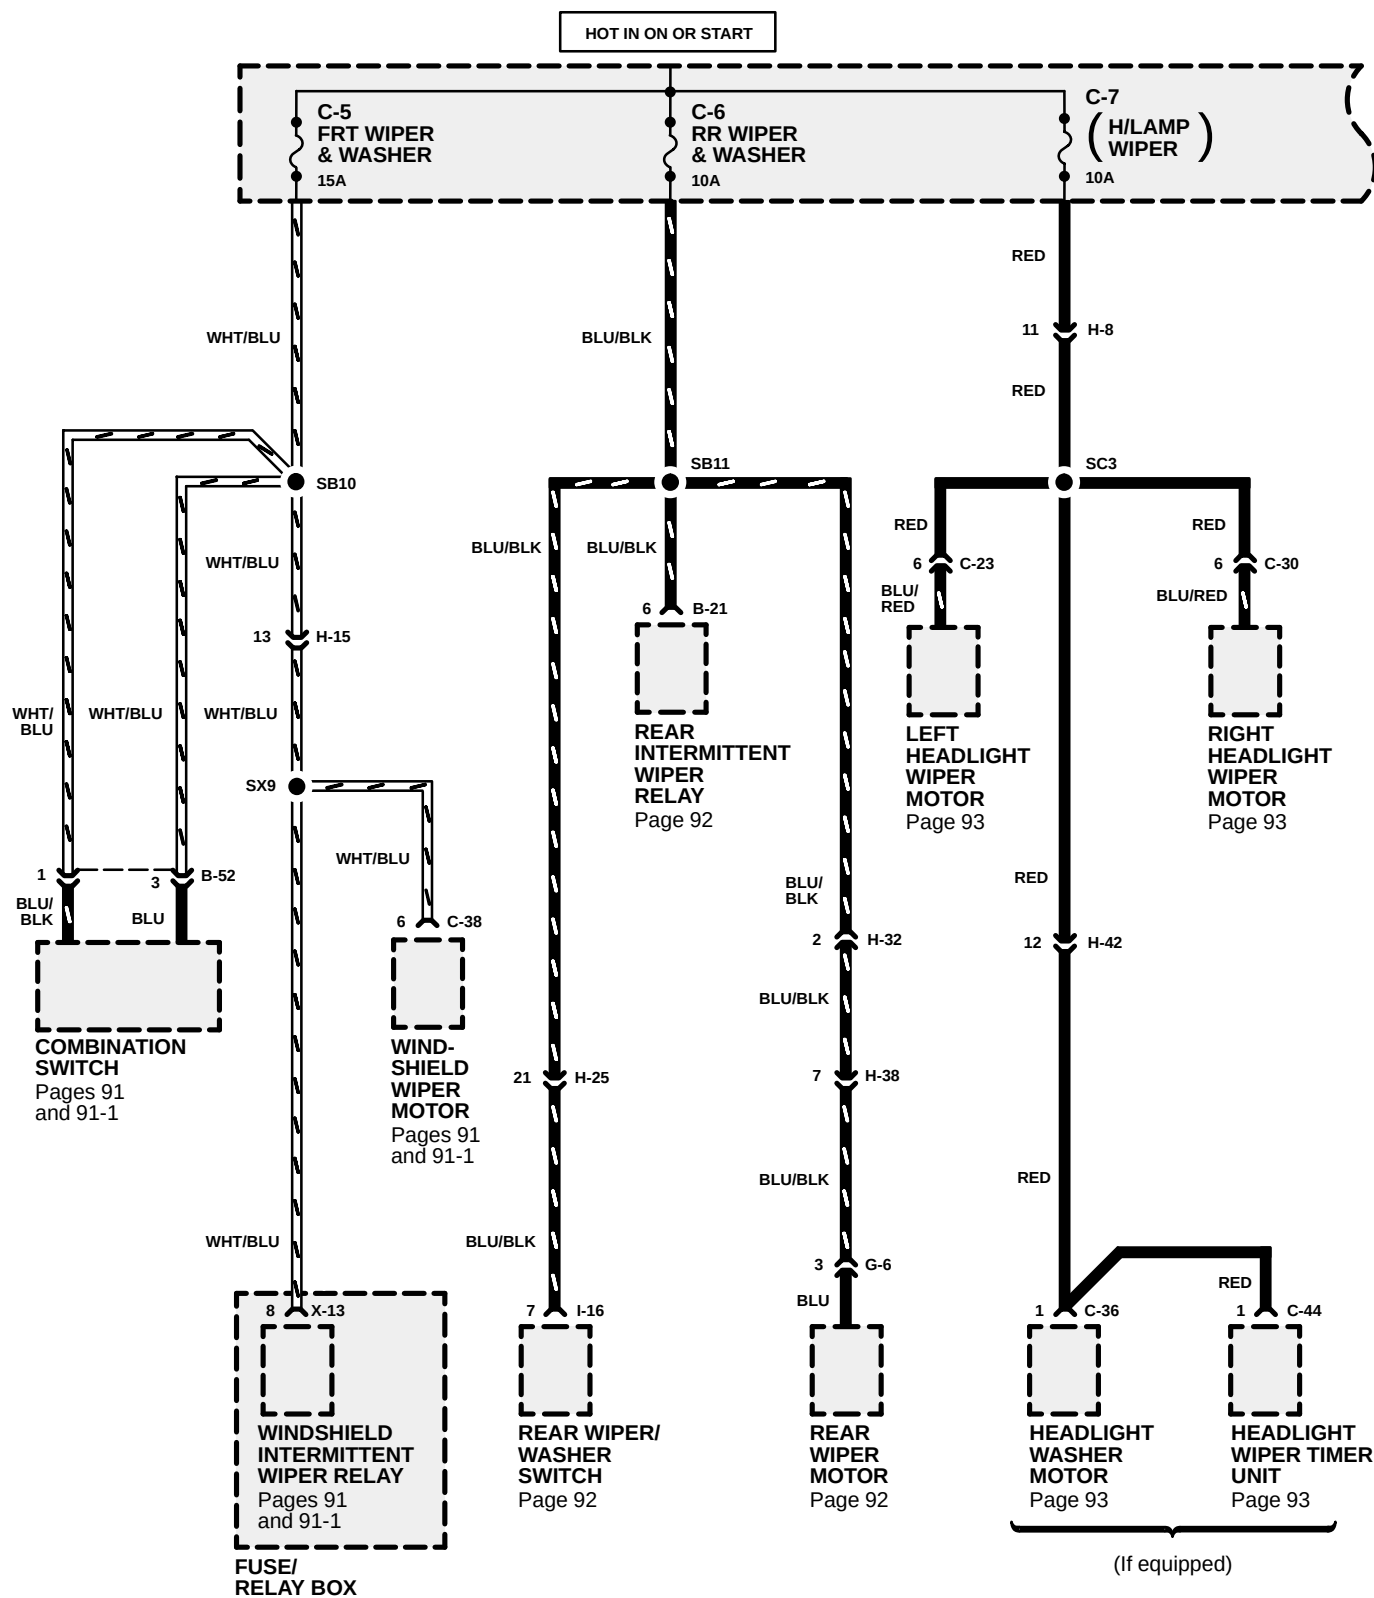


DASH FUSE BOX

Circuit Schematic

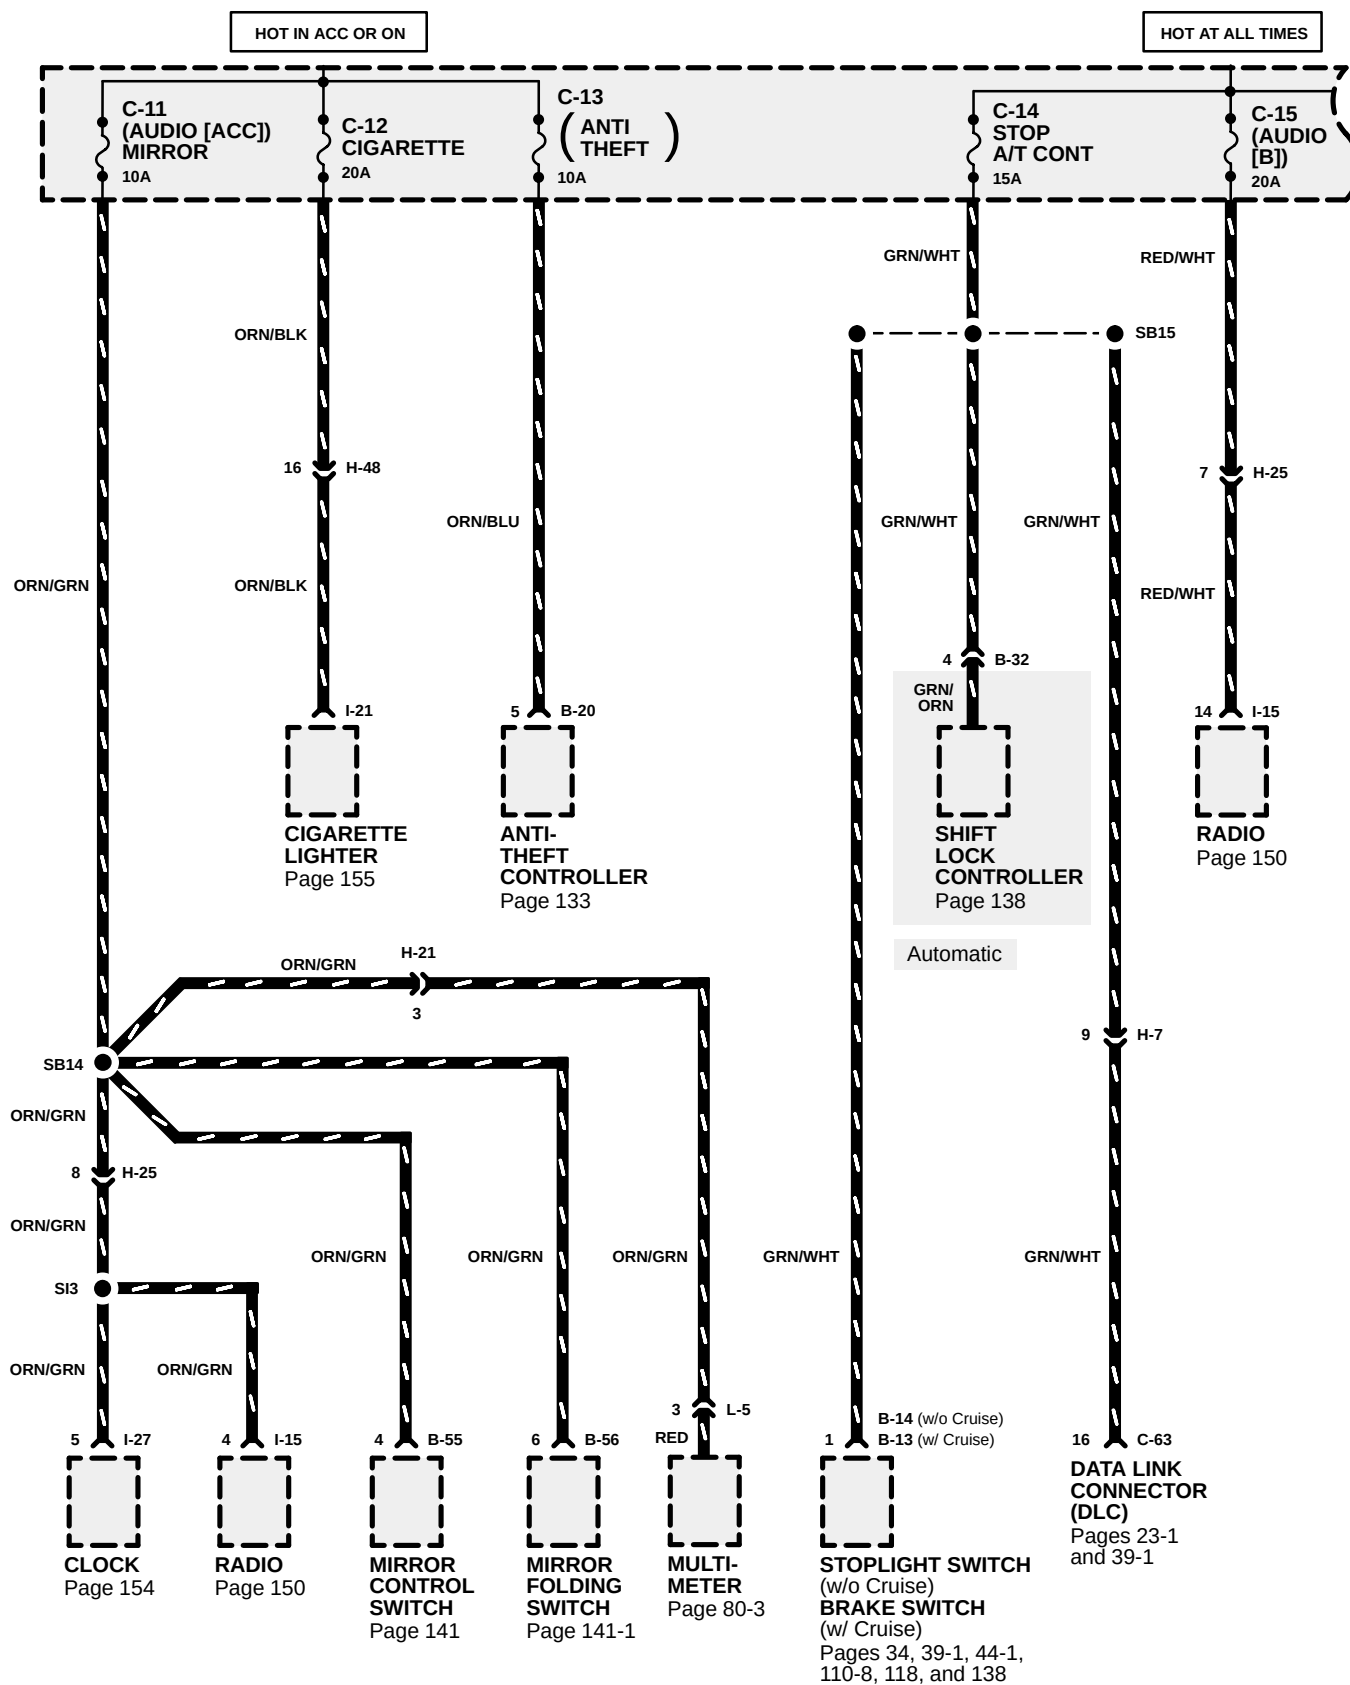


DASH FUSE BOX

Circuit Schematic

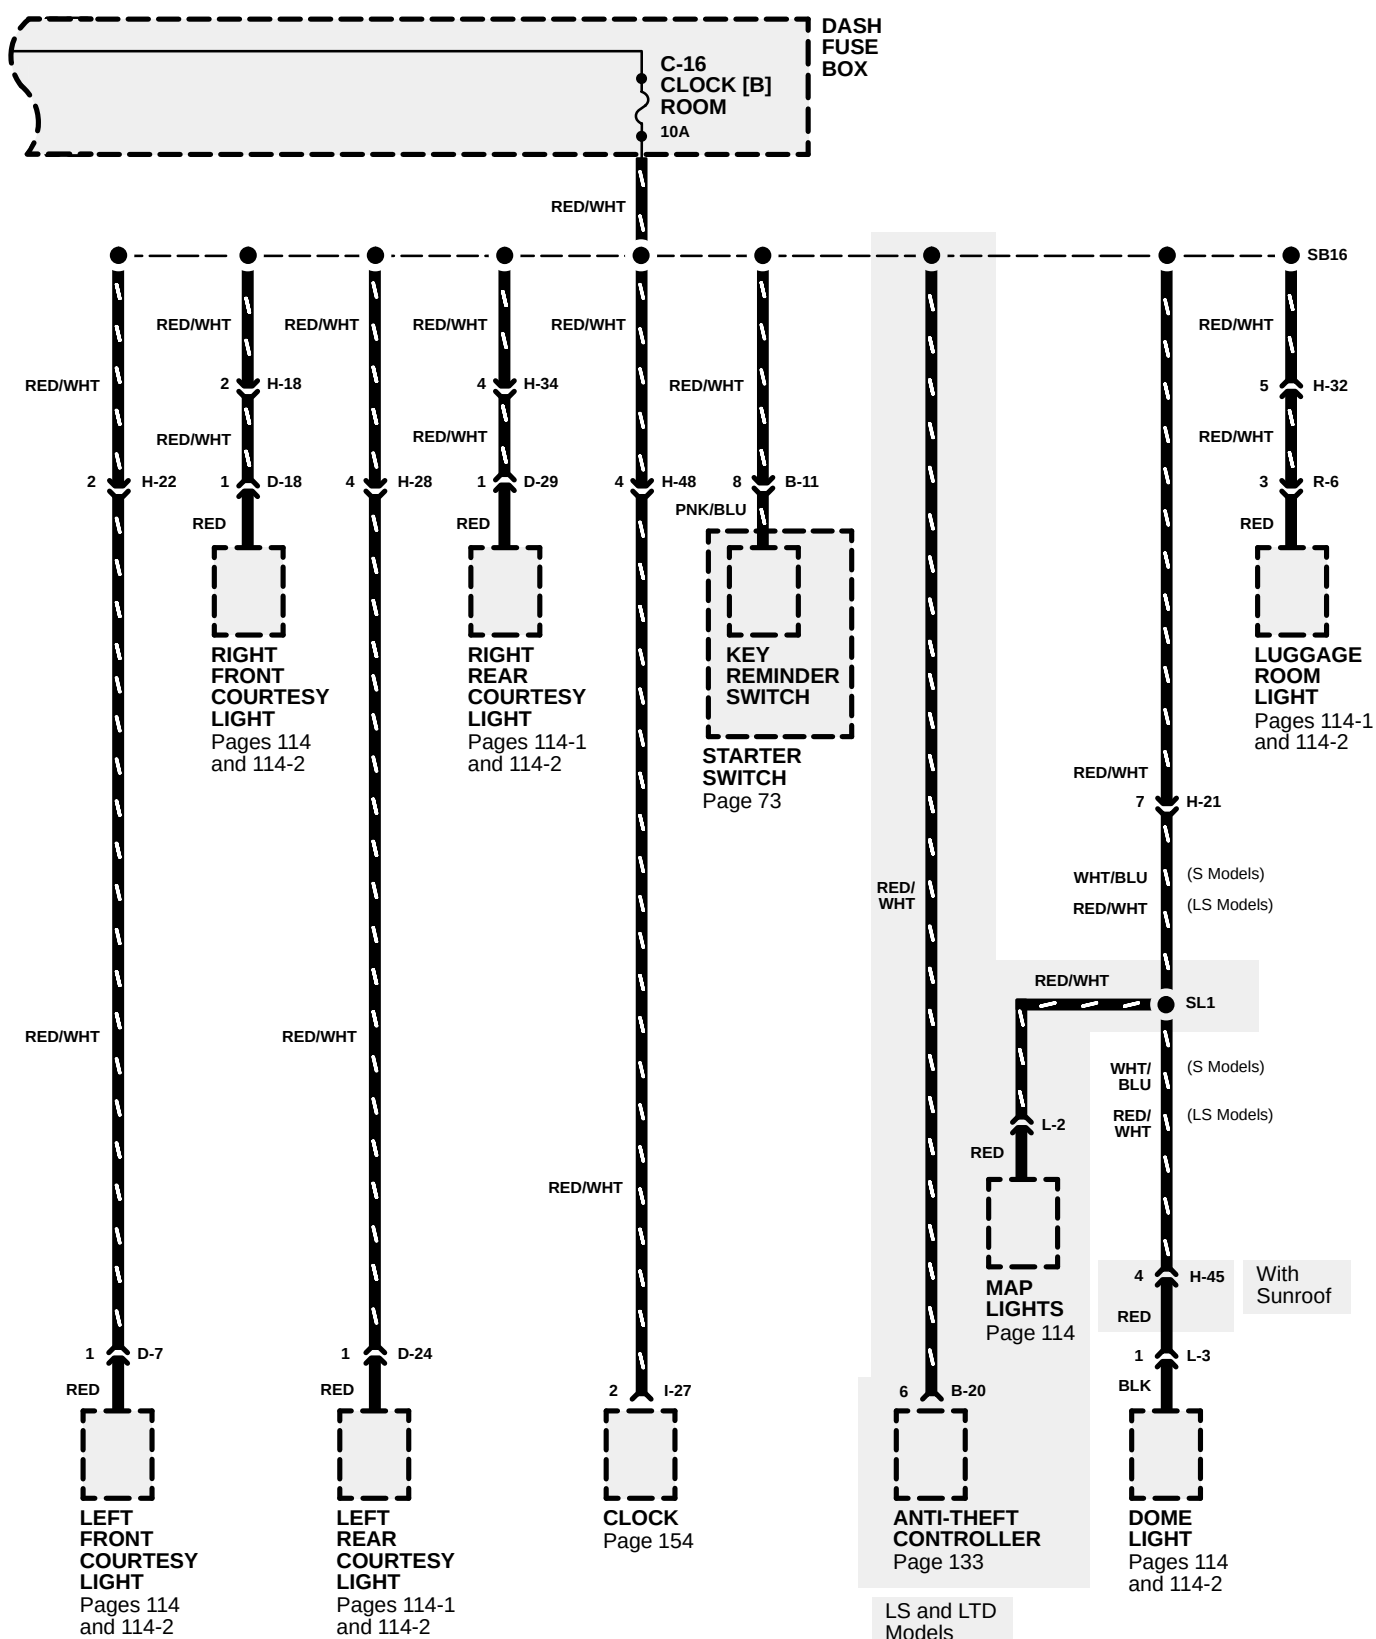


DASH FUSE BOX

Circuit Schematic

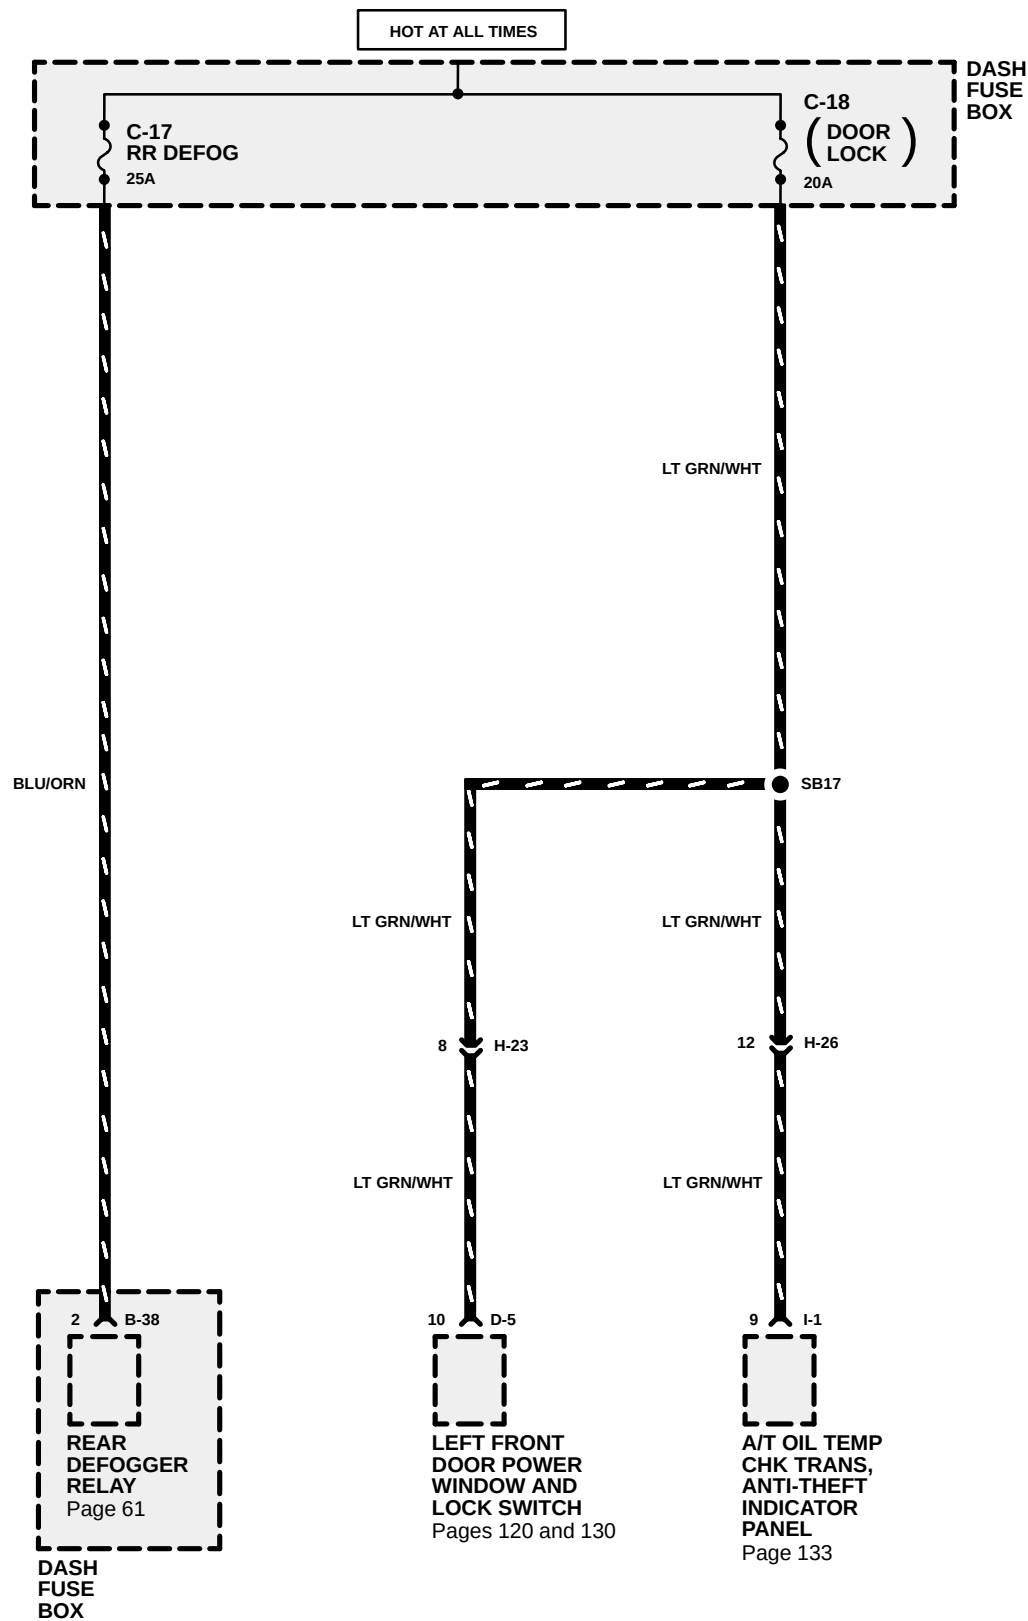

DASH FUSE BOX

Circuit Schematic

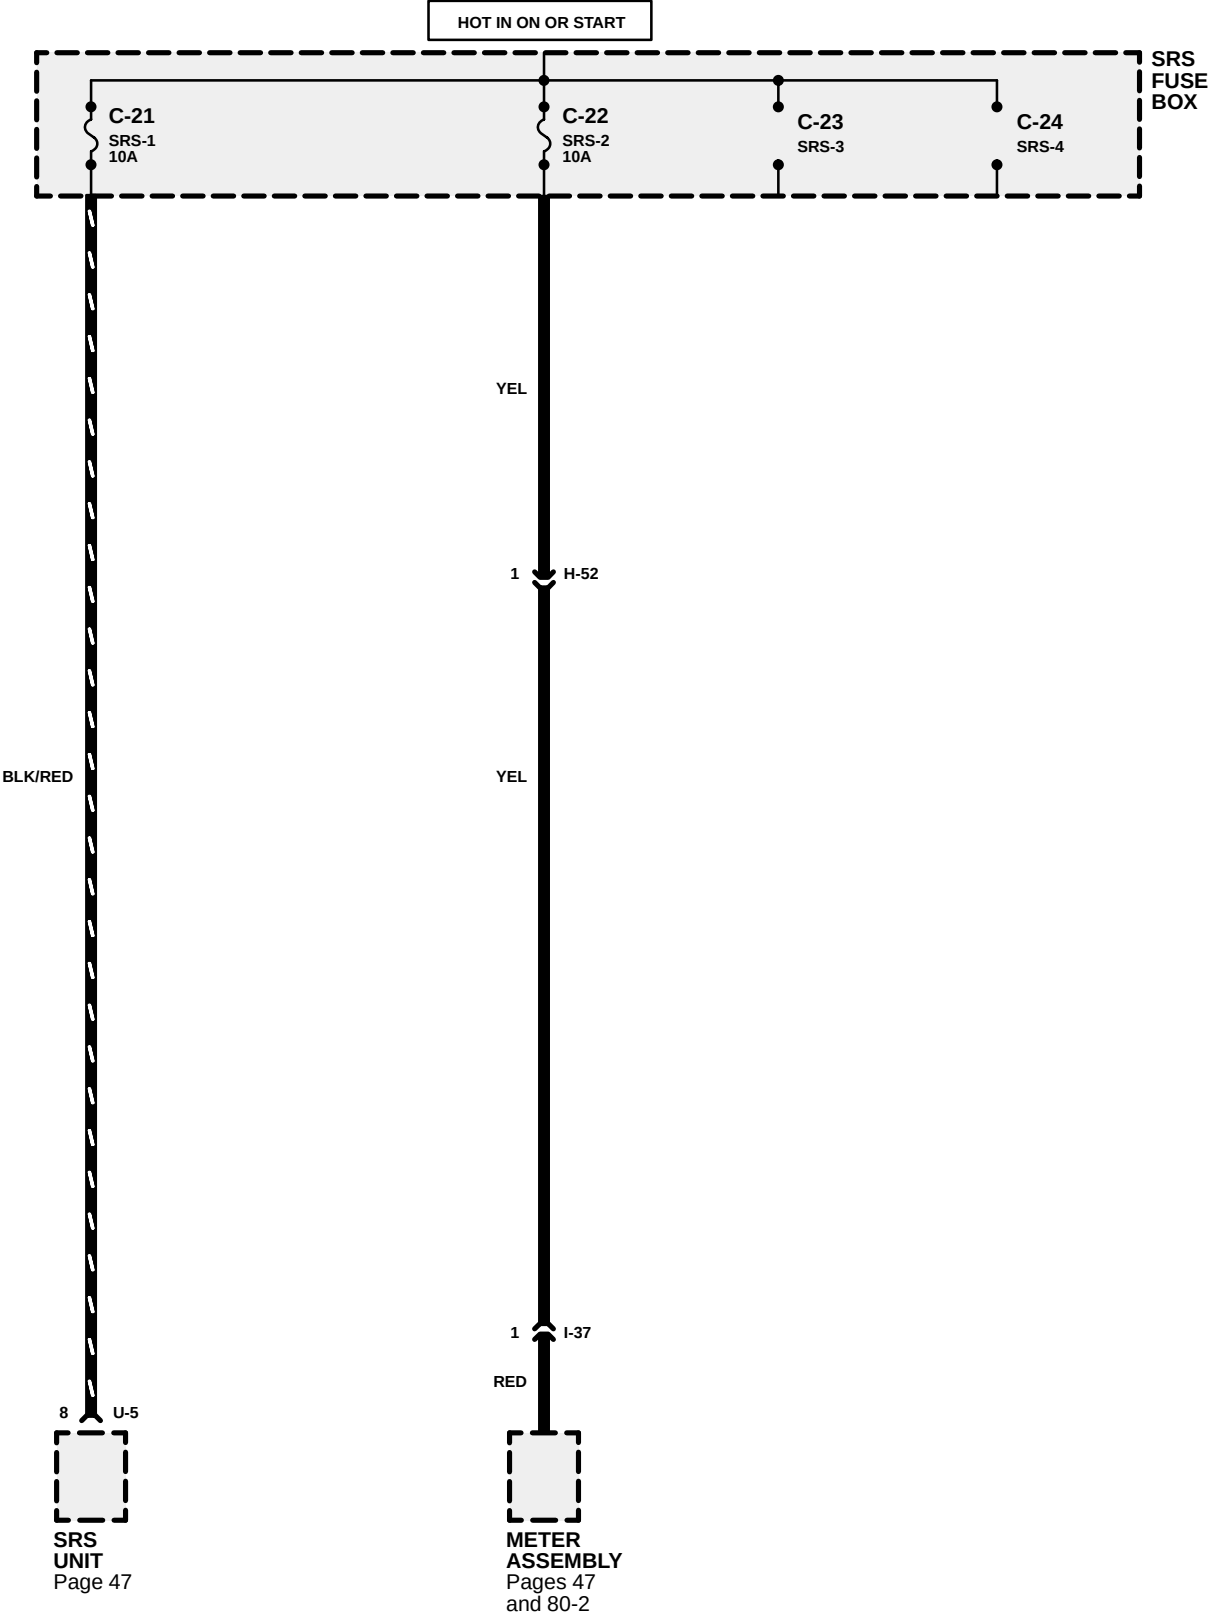

DASH FUSE BOX

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>	<u>Photo No.</u>
A/T Shift Indicator Control	
Unit	Below I/P, left of steering column 56
Anti-theft Controller	Below left side of I/P 56
Automatic Transmission Mode	
Switch	Beneath vehicle, on left side of transmission 43
Back Up Light Switch	Beneath vehicle, on left side of transmission 118
Brake Switch	Below I/P, on brake pedal support 56
Clutch Start Switch	Below I/P, top of clutch pedal support 57
Clutch Switch	Below I/P, top of clutch pedal support 57
Cornering Light Relay	In fuse/relay box 35
Cruise Control Unit	Below right side of I/P, above dash side trim panel 71
Dash Fuse Box	Behind left dash side trim panel 51
Data Link Connector (DLC)	
C63 (16-BLK)	Left I/P lower cover, behind access cover 47
Electronic Brake Control	
Module (EBCM)	Beneath right front seat 116
Evaporative Emission (EVAP)	
Canister Purge Valve	Top left rear of engine 15
Exhaust Gas Recirculation	
(EGR) Valve	Top left rear of engine 16
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 33
Generator	Lower right front of engine 5
Headlight Washer Motor	Right front corner of engine compartment, in washer fluid reservoir 122
Headlight Wiper Timer Unit . . .	Right of the glove box 70
Ignition Control Module	
(ICM)	Top center of engine 15
Left Headlight Wiper Motor . . .	Behind left headlight assembly 120
Mass Air Flow (MAF) Sensor . .	Left front corner of engine compartment 13
No. 1 Ignition Coil	Right side of engine 11
No. 2 Ignition Coil	Left side of engine 12
No. 3 Ignition Coil	Right side of engine 11
No. 4 Ignition Coil	Left side of engine 12
No. 5 Ignition Coil	Right side of engine 11
No. 6 Ignition Coil	Left side of engine 12
PCM Main Relay	In fuse/relay box 38
Power Window Relay	In dash fuse box 50
Powertrain Control Module	
(PCM)	Behind the lower cluster assembly 62
Rear Defogger Relay	In dash fuse box 50
Rear Intermittent Wiper	
Relay	Behind left dash side trim panel, in access hole 48
Rear Wiper Motor	Inside left tailgate door, behind trim pad 91
Right Headlight Wiper Motor . .	Behind right headlight assembly 123
Seat Belt, Key, and Light	
Remind Buzzer	Behind right dash side trim panel 73
Shift Lock Controller	Below front console 65

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Shift-on-the-Fly Relay	In fuse/relay box 34
SRS Fuse Box	On top of dsh fuse box 51
SRS Unit	Behind lower cluster assembly 61
Starter Switch	Underside of steering column 46
Stop Light Switch	Below I/P on brake pedal support 56
Transmission Switch 1-2	Beneath vehicle, on right side of transmission
Vehicle Speed Sensor (VSS)	
(A/T)	Beneath center of vehicle, on rear of transmission 41
Vehicle Speed Sensor (VSS)	
(M/T)	Beneath the center of the vehicle, on rear of transmission 119
Windshield Intermittent	
Wiper Relay	In fuse/relay box 36
Windshield Wiper Motor	Right rear corner of engine compartment 39
Connector	
B-11 (8-WHT)	Below I/P, right of steering column 58
B-32 (6-WHT)	Below rear of front console 66
B-52 (14-BLK)	Below I/P, right of steering column 58
C-23 (6-GRY)	Behind left side of front bumper 120
C-30 (6-GRY)	Behind right side of front bumper 120
C-43 (8-BLK)	Left front of engine compartment 27
D-7 (2-BLK)	Inside left front door, behind trim pad 77
D-18 (2-BLK)	Inside right front door, behind trim pad 77
D-24 (2-BLK)	Inside rear of left rear door, behind door courtesy light 83
D-29 (2-BLK)	Inside rear of right rear door, behind door courtesy light 83
G-6 (4-WHT)	Inside left tailgate door, behind trim pad 91
H-3 (3-BLK)	Right side of engine compartment 40
H-4 (9-BLK)	Left side of engine compartment 13
H-6 (16-BLU)	Left side of engine compartment 13
H-7 (20-BRN/WHT)	Below I/P, above left dash side trim panel, on bracket 52
H-8 (16-BLK)	Below I/P, above left dash side trim panel, on bracket 53
H-10 (12-BLU) (M/T)	Left front of engine compartment 27
H-10 (16-BLU) (A/T)	Left front of engine compartment 27
H-11 (16-BLK)	Left front of engine compartment 27
H-13 (6-GRY)	Below I/P, above right dash side trim panel, on bracket 69
H-15 (14-WHT)	Below I/P, above right dash side trim panel, on bracket 70
H-18 (18-WHT)	Behind right dash side trim panel, in access hole 74
H-21 (8-WHT)	Below I/P, above right dash side trim panel, on bracket 69
H-22 (18-WHT)	Behind left dash side trim panel, in access hole 74
H-23 (8-BLK)	Behind left dash side trim panel, in access hole 74
H-25 (22-BLU)	Below I/P, above left dash side trim panel, on bracket 54
H-26 (20-WHT)	Below I/P, above left dash side trim panel, on bracket 54
H-28 (6-WHT)	In left center pillar 81
L-5 (6-WHT)	Above multi-meter 26

DASH FUSE BOX

Component Location Index

(Refer to Section 201 for photographs.)

Connector		Photo No.
H-32 (16-CAVITY) (S w/o PEP)	Below left front seat	105
H-32 (22-BLK) (S w/ PEP, LS, LTD)	Below left front seat	105
H-34 (6-WHT)	In right center pillar	81
H-38 (10-WHT)	Left rear of luggage room	89
H-45 (6-BLK/WHT)	Center of roof, above map lights	85
H-46 (6-WHT)	Below left side of left front seat	105
H-47 (6-WHT)	Below right side of right front seat	110
H-48 (16-BLK)	Behind right dash side trim panel	73
H-52 (3-YEL)	Below I/P, above left dash side trim panel, on bracket	52
I-9 (16-BLK)	On left rear of meter assembly	45
I-37 (2-YEL)	Behind left side of meter assembly	45
I-40 (7-WHT)	On rear of meter assembly	45
L-2 (1-WHT)	Center front of roof, above map lights	85
L-3 (2-WHT)	Center of roof, above dome light	86
M-1 (1-CLR)	Beneath center of vehicle, top left side of transmission	
M-8 (1-CLR)	Beneath center of vehicle, top left side of transmission	118
R-6 (3-WHT)	Center rear of roof	87
T-2 (2-WHT)	Underside of driver's seat	108
T-9 (2-WHT)	Underside of right front seat	112