


SEAT BELT, LIGHTS-ON, AND KEY-IN IGNITION WARNING SYSTEM

Component Index

- [Dash Fuse Box](#)
- [Driver's Seat Belt Switch](#)
- [Fuse/Relay Box](#)
- [Left Front Door Switch](#)
- [Seat Belt, Key, and Light Remind Buzzer](#)
- [Starter Switch](#)
- [Taillight Relay](#)

SEAT BELT, LIGHTS-ON, AND KEY-IN IGNITION WARNING SYSTEM

Circuit Schematic

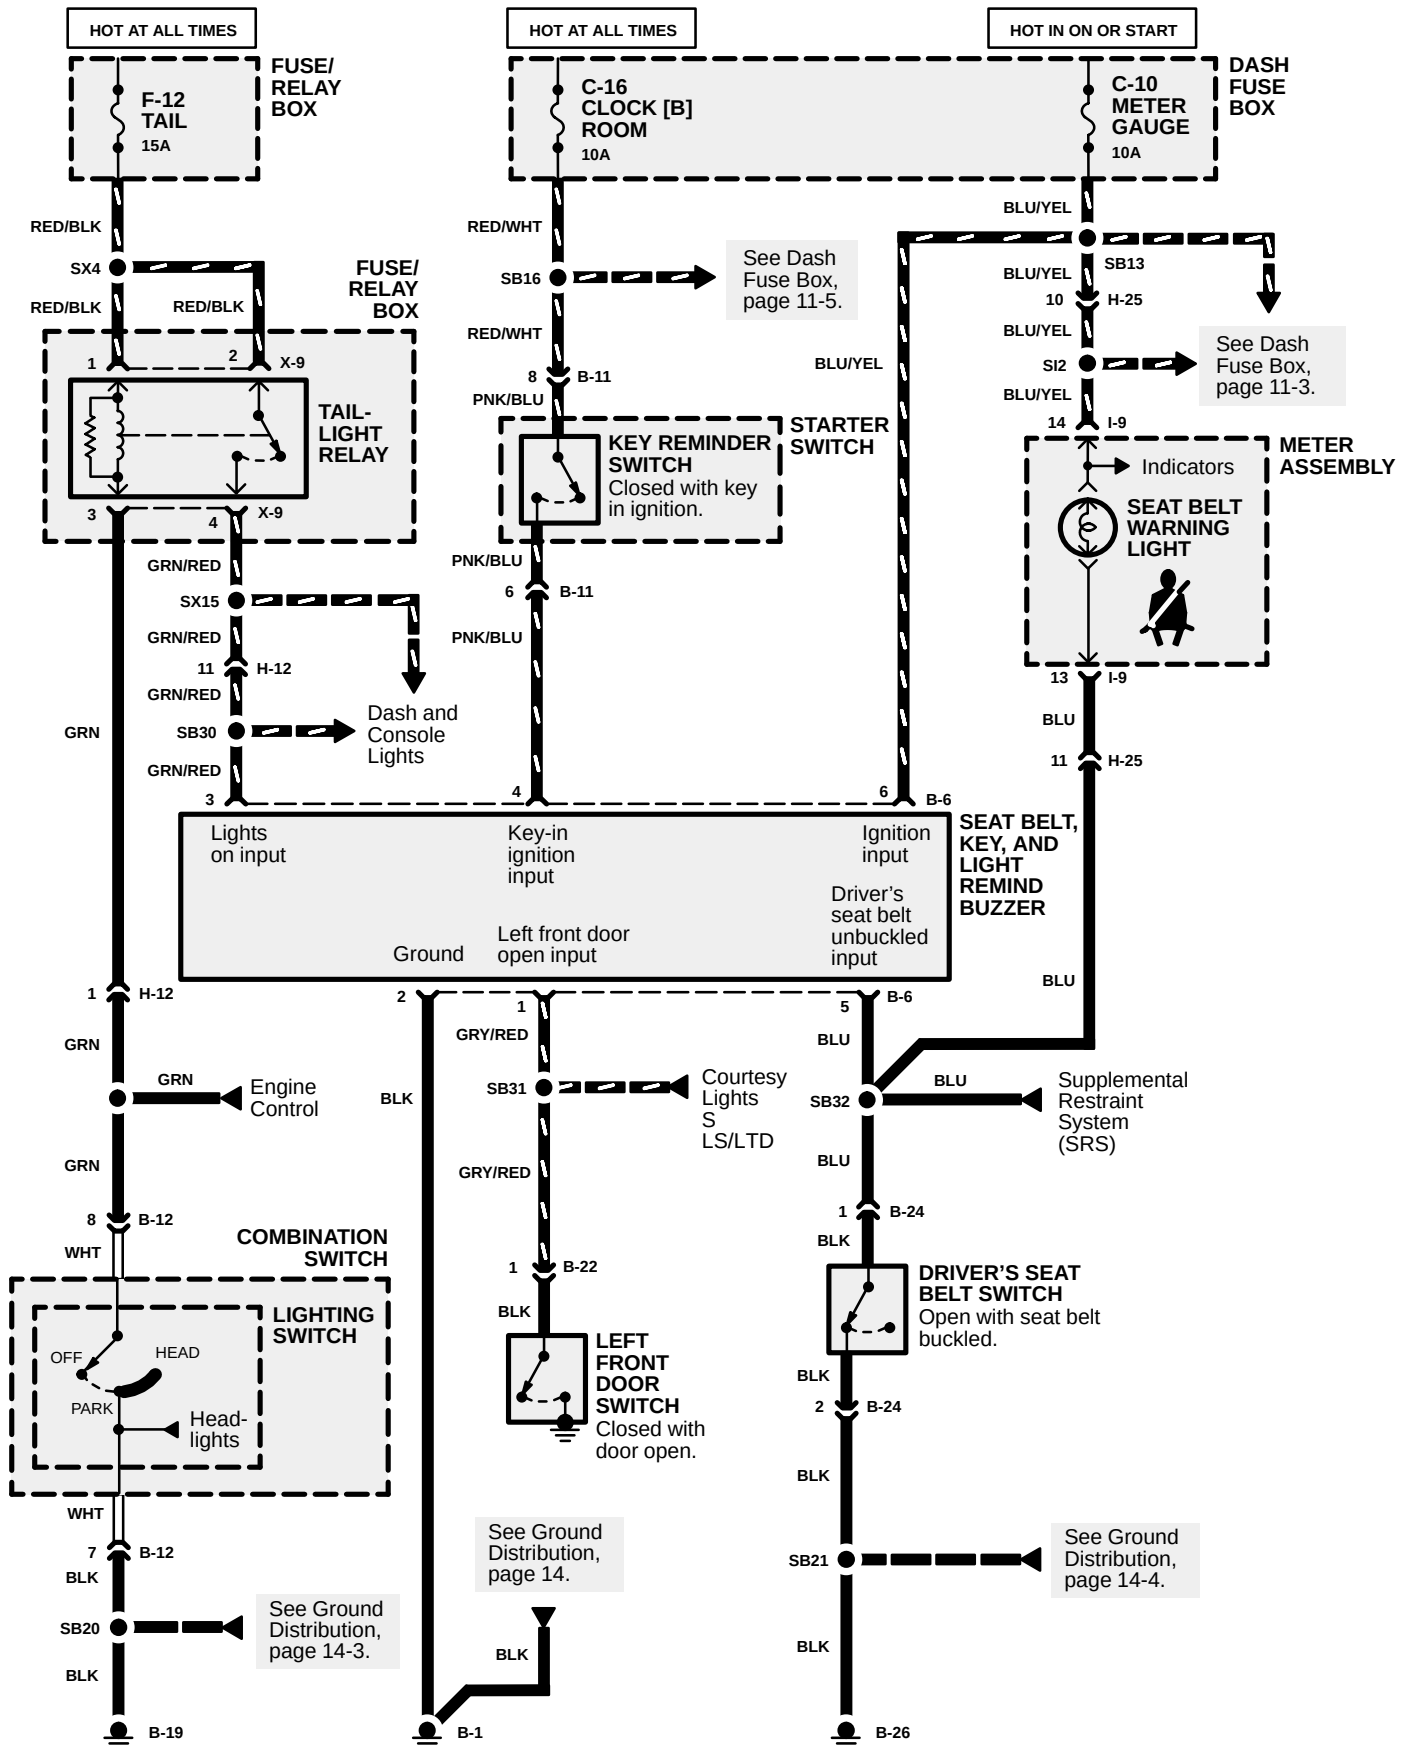

SEAT BELT, LIGHTS-ON, AND KEY-IN IGNITION WARNING SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Dash Fuse Box	Behind left dash side trim panel 51
Driver's Seat Belt Switch	In left front seat belt buckle 33
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 75
Left Front Door Switch	Near left front door striker 73
Seat Belt, Key, and Light Remind Buzzer	Behind right dash side trim panel 46
Starter Switch	Underside of steering column 35
Taillight Relay	In fuse/relay box

Connector

B-11 (8-WHT)	Below I/P, right of steering column 58
B-12 (16-WHT)	Below I/P, right of steering column 58
B-22 (2-WHT)	In left center pillar, behind door switch 104
B-24 (3-BLK)	Below driver's seat 69
H-12 (20-WHT)	Below I/P, above right dash side trim panel, on bracket 54
H-25 (22-BLU)	Below I/P, above left dash side trim panel, on bracket 45
I-9 (16-BLK)	On left rear of meter assembly

Ground

B-1	Above right dash side trim panel 71
B-19	Behind top of left dash side trim panel 54
B-26	Below rear of center console 67

Circuit Operation

Key-In Ignition Warning

When the key remind switch is closed, battery voltage is applied to the PNK/BLU wire of the seat belt, key and light remind buzzer. With the left front door open, ground is provided at the GRY/RED wire of the seat belt, key and light remind buzzer and the buzzer sounds.

Seat Belt Warning

With the starter switch in ON or START, battery voltage is applied to the seat belt warning light from fuse C-10. With the driver's seat belt unbuckled, ground is provided at the BLU wire of the seat belt, key and light remind buzzer. With the starter switch in the ON position, the seat belt warning light turns on for four to eight seconds and the buzzer will sound for the same amount of time. With the driver's seat belt buckled, the seat belt warning light turns on for four to eight seconds, but the buzzer does not sound.

Lights-on Warning

When the starter switch is turned from the ON or START position to the OFF position, and the park lights are on, the taillight relay applies battery voltage to the seat belt, key and light remind buzzer at the GRN/RED wire. The buzzer will sound until the lights are turned off.