


# INDICATORS

## Component Index

- Ambient Sensor
- Dash Fuse Box
- Front Axle Switch
- SRS Fuse Box


# INDICATORS

## Circuit Schematic

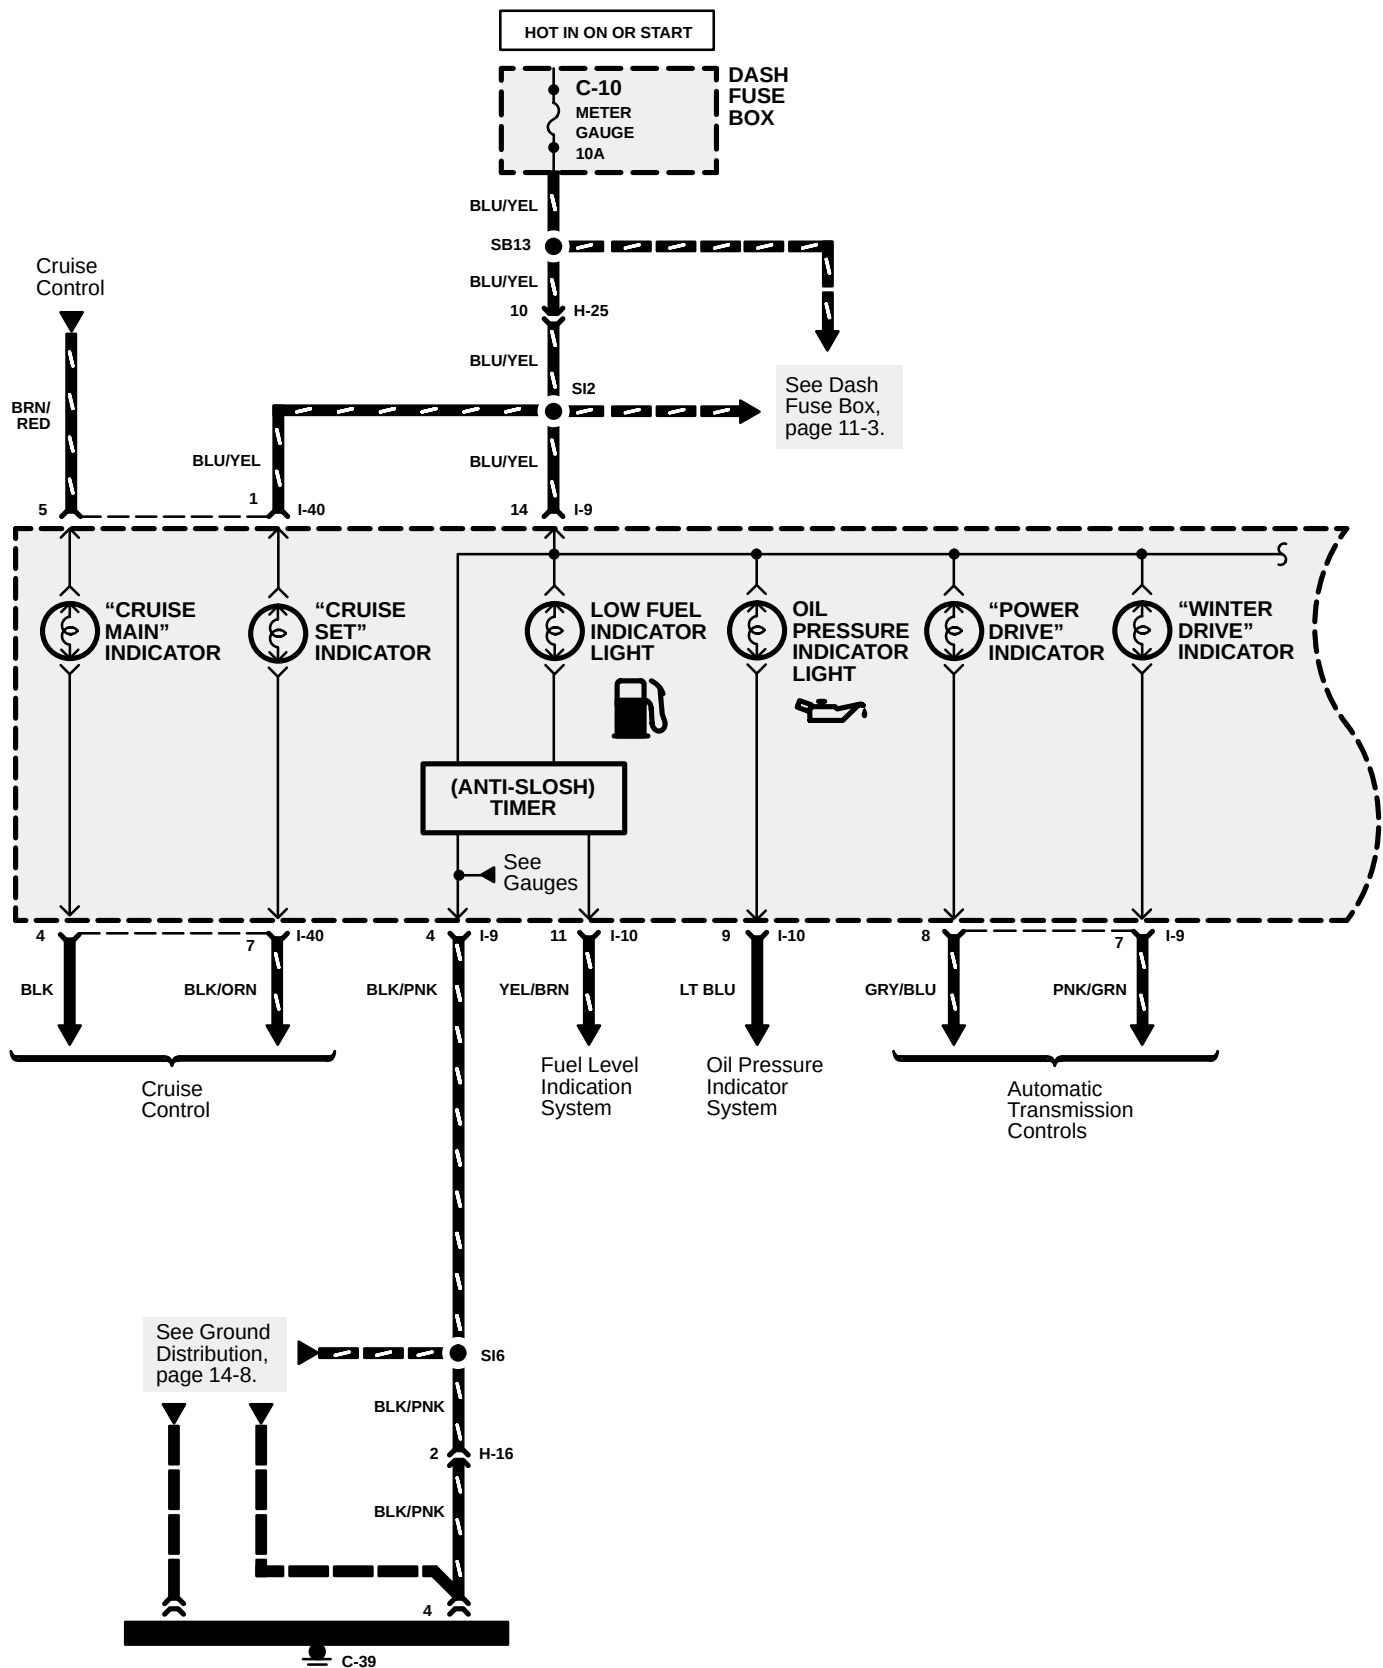


# INDICATORS


## Circuit Schematic

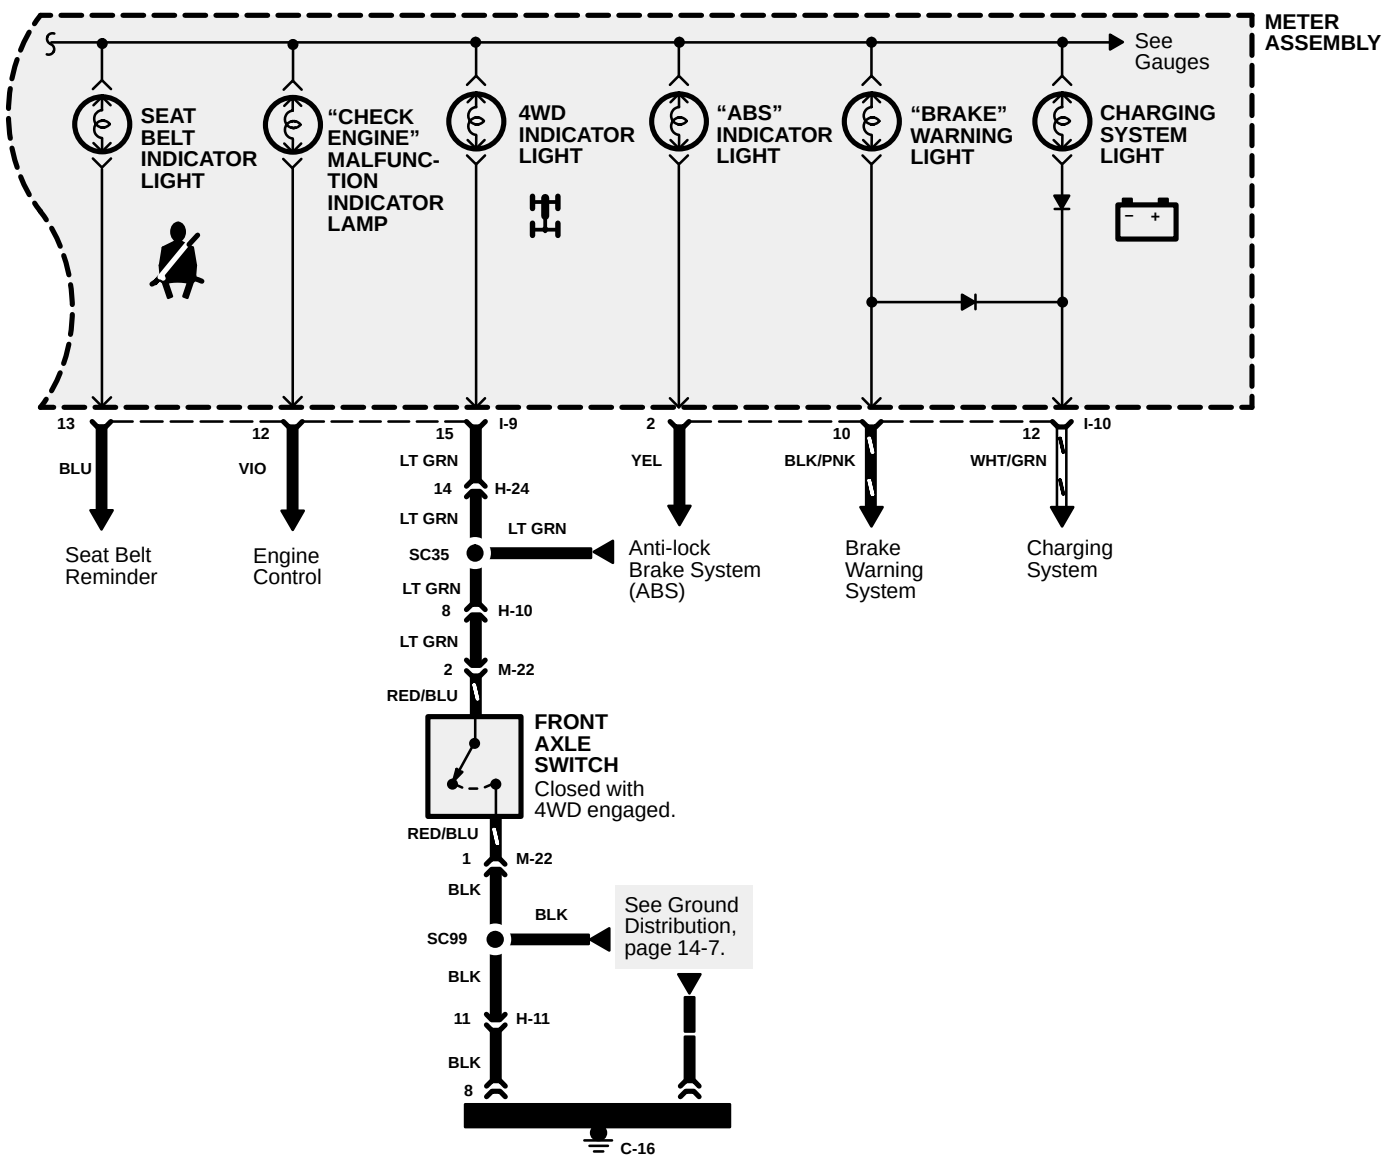

# INDICATORS

## Circuit Schematic

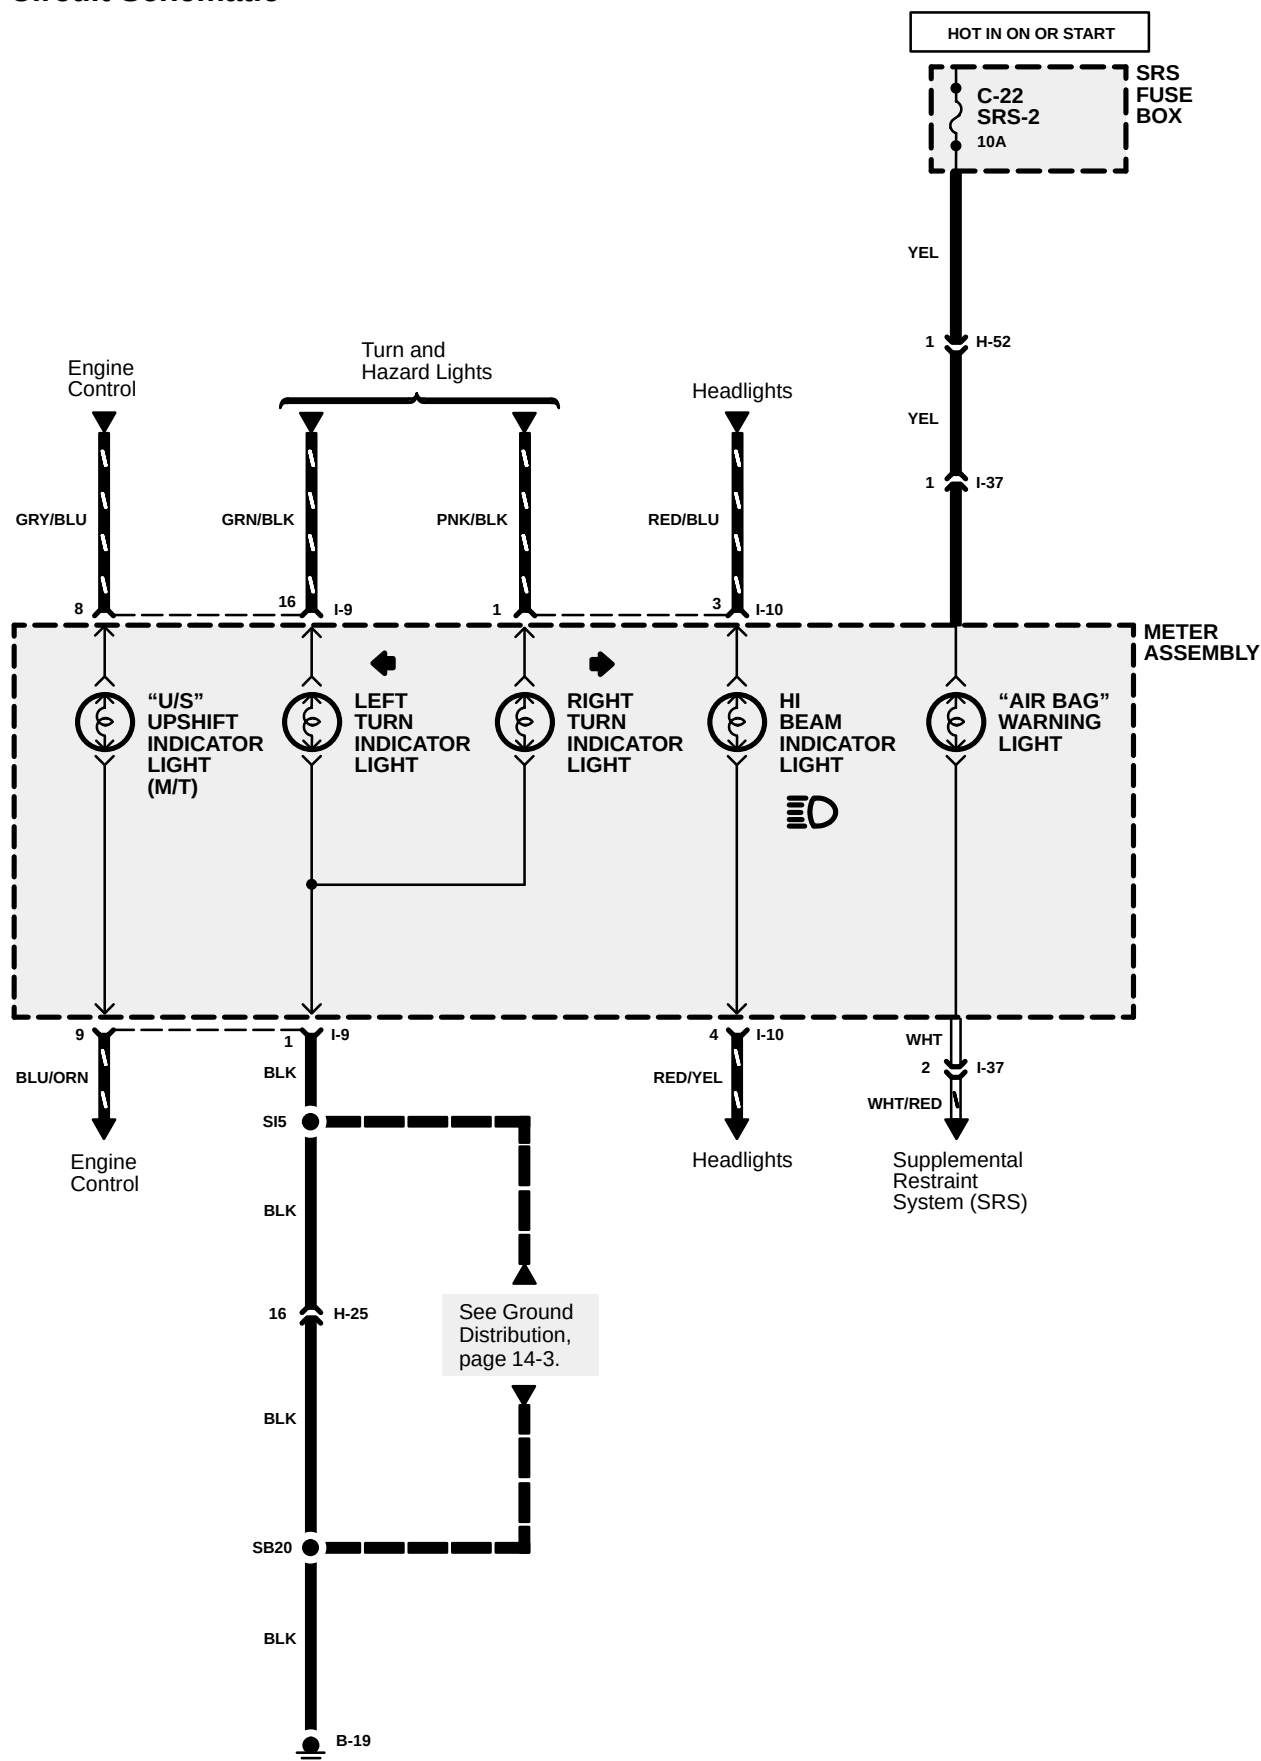

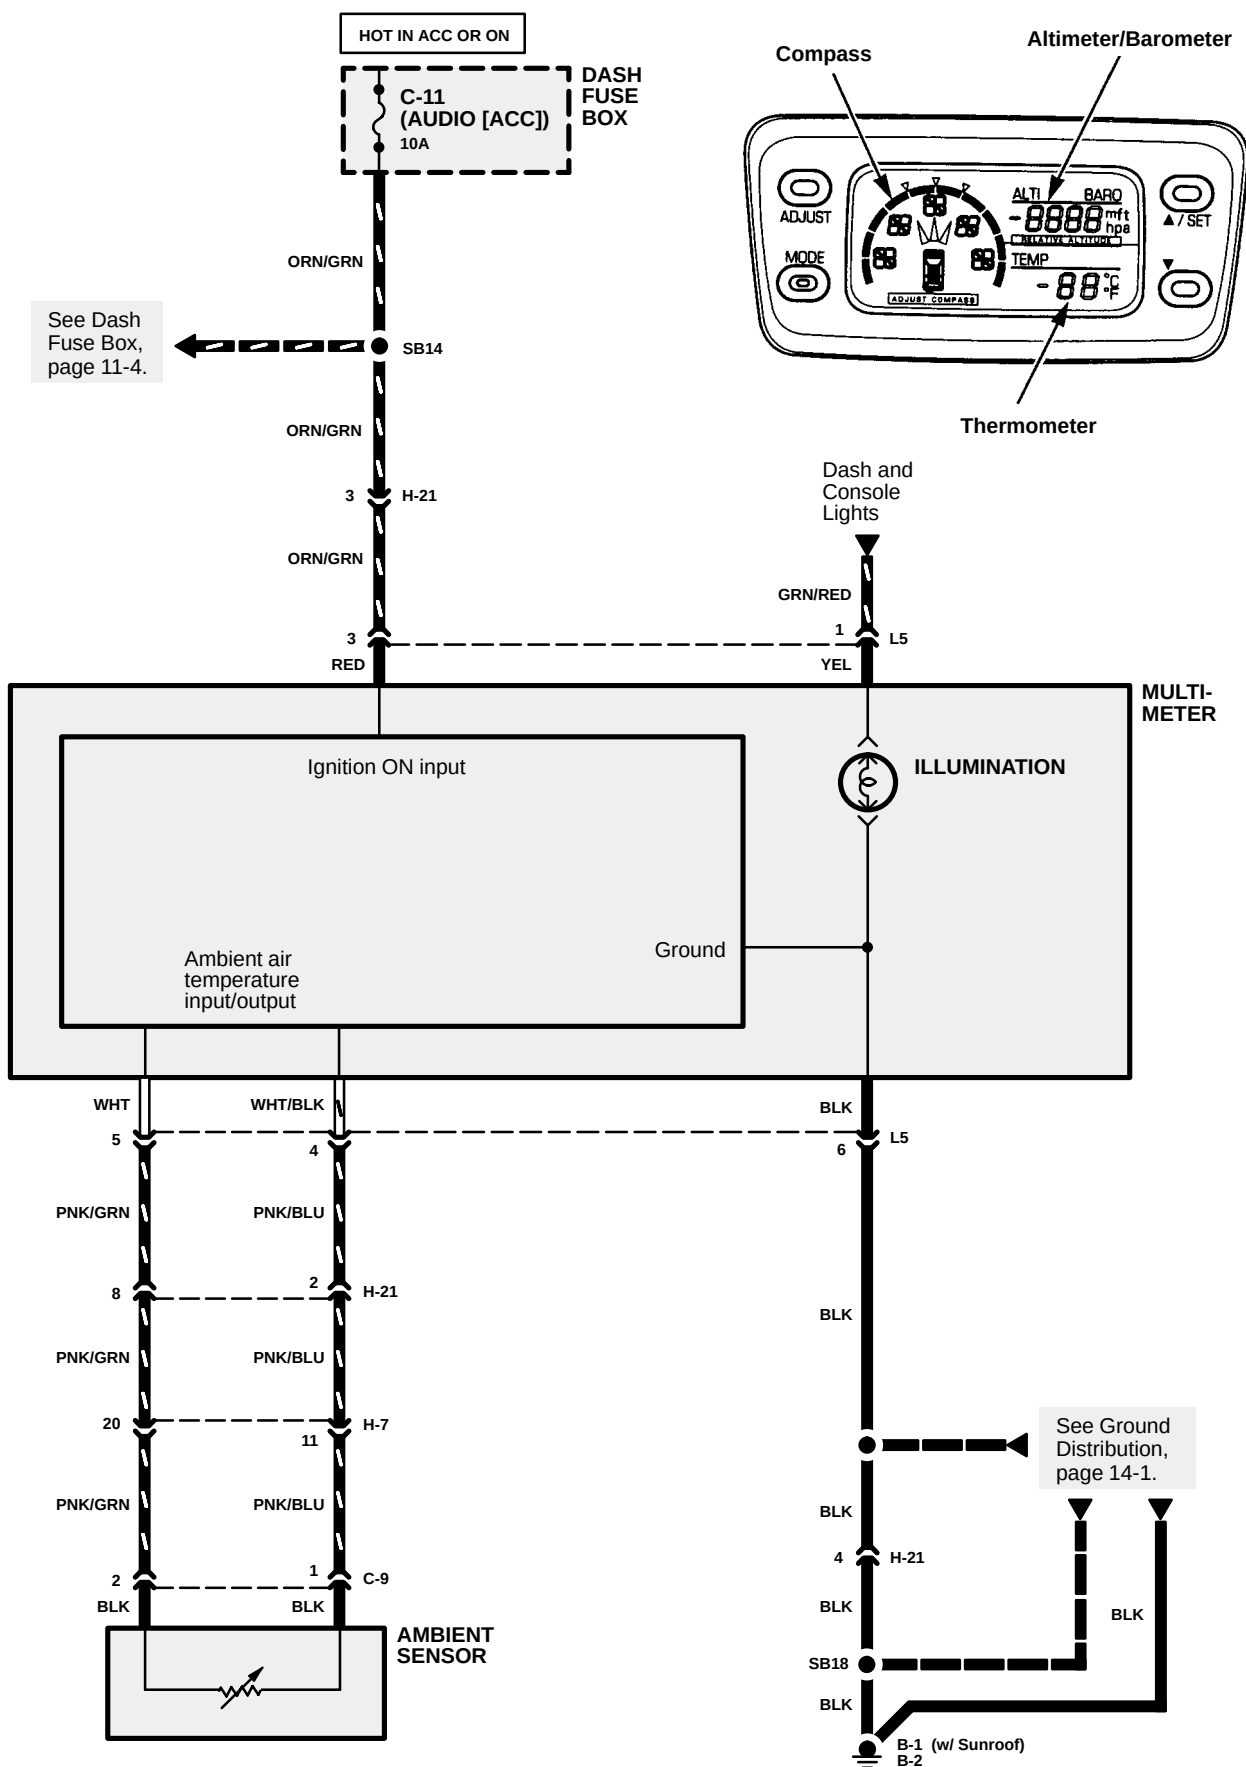

# INDICATORS

## Component Location Index

(Refer to Section 201 for photographs.)

| <b>Component</b>        | <b>Photo No.</b>                           |
|-------------------------|--------------------------------------------|
| Ambient Sensor .....    | Top left front of radiator bracket ..... 2 |
| Dash Fuse Box .....     | Behind left dash side trim panel ..... 51  |
| Front Axle Switch ..... | Left center of front axle ..... 17         |
| SRS Fuse Box .....      | On top of dash fuse box ..... 51           |

### Connector

|                           |                                                                  |
|---------------------------|------------------------------------------------------------------|
| C-9 (2-BRN) .....         | Top left front of radiator bracket ..... 2                       |
| H-7 (20-BRN/WHT) .....    | Below I/P, above left dash side trim panel, on bracket ..... 52  |
| H-10 (12-BLU) (M/T) ..... | Left front of engine compartment ..... 27                        |
| H-10 (16-BLU) (A/T) ..... | Left front of engine compartment ..... 27                        |
| H-11 (16-BLK) .....       | Left front of engine compartment ..... 27                        |
| H-16 (22-WHT) .....       | Behind right dash side trim panel ..... 73                       |
| H-21 (8-WHT) .....        | Below I/P, above right dash side trim panel, on bracket ..... 69 |
| H-24 (18-YEL) .....       | Below I/P, above left dash side trim panel, on bracket ..... 53  |
| H-25 (22-BLU) .....       | Below I/P, above left dash side trim panel, on bracket ..... 54  |
| H-52 (3-YEL) .....        | Below I/P, above left dash side trim panel, on bracket ..... 52  |
| I-9 (16-BLK) .....        | On left rear of meter assembly ..... 45                          |
| I-10 (16-WHT) .....       | On right rear of meter assembly ..... 45                         |
| I-37 (2-YEL) .....        | Behind left side of meter assembly ..... 45                      |
| I-40 (7-WHT) .....        | On rear of meter assembly ..... 45                               |
| L-5 (6-WHT) .....         | Above multi-meter ..... 26                                       |
| M-22 (2-BRN) .....        | Center of front axle ..... 17                                    |

### Ground

|            |                                                                         |
|------------|-------------------------------------------------------------------------|
| B-1 .....  | Above right dash side trim panel ..... 71                               |
| B-2 .....  | Above right dash side trim panel ..... 71                               |
| B-19 ..... | Behind top of left dash side trim panel ..... 54                        |
| C-16 ..... | Left rear corner of engine compartment, on inner fender panel ..... 28  |
| C-39 ..... | Right rear corner of engine compartment, on inner fender panel ..... 40 |

## Circuit Operation

The indicator lights are controlled by different conditions in their associated systems. See the associated system for the indicator light circuit description.

### Bulb Check

With the starter switch in ON or START, battery voltage is applied to the "BRAKE" warning and charge warning lights. The generator will provide ground to the circuit until the engine is running. The lights go on to test the light bulbs and then go off after the engine is started.