


A/T SHIFT INDICATOR

Component Index

- A/T Shift Indicator Control Unit
- Automatic Transmission Mode Switch
- Dash Fuse Box
- Fuse/Relay Box
- Taillight Relay

A/T SHIFT INDICATOR

Circuit Schematic

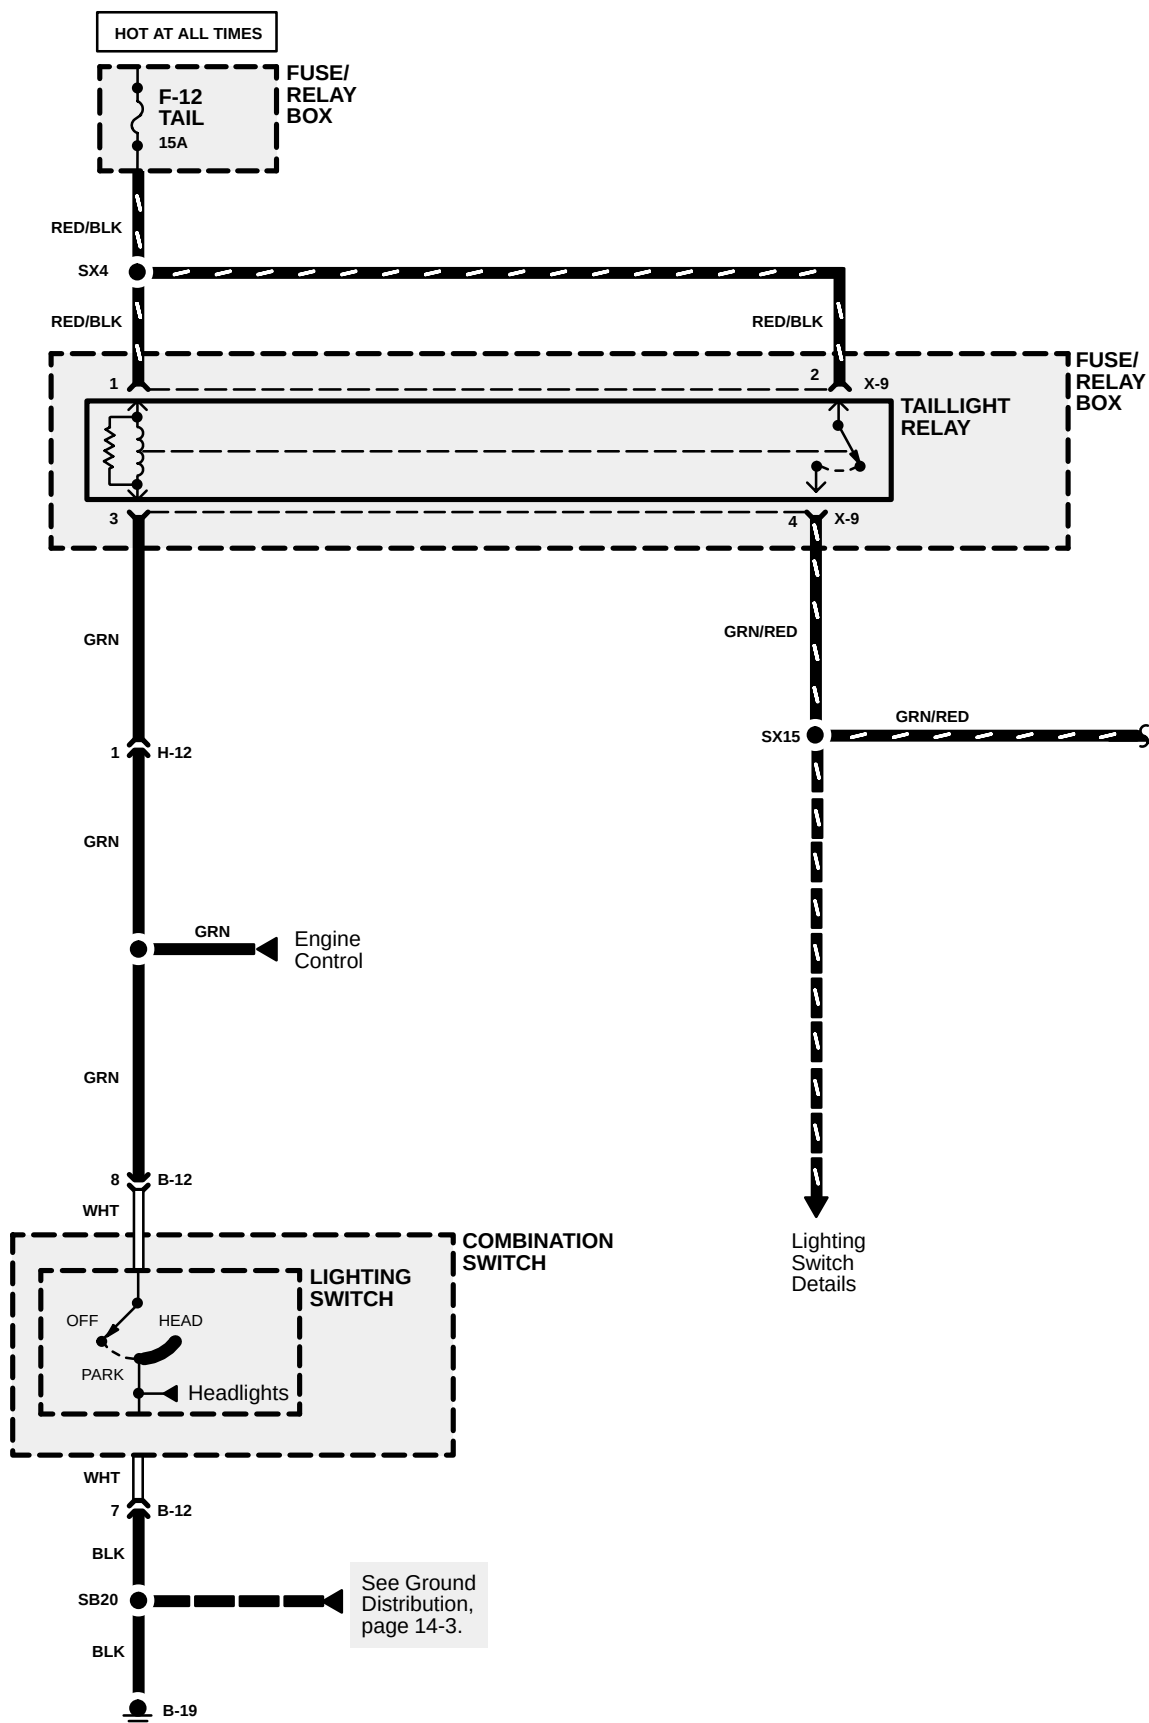

A/T SHIFT INDICATOR

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
A/T Shift Indicator Control	
Unit	Below I/P, left of steering column 56
Automatic Transmission Mode	
Switch	Beneath vehicle, on left side of transmission 43
Dash Fuse Box	Behind left dash side trim panel 51
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 33
Taillight Relay	In fuse/relay box 35
Connector	
B-12 (16-WHT)	Below I/P, right of steering column 58
C-43 (8-BLK)	Left front of engine compartment 27
H-8 (16-BLK)	Below I/P, above left dash side trim panel, on bracket 53
H-9 (20-BLK)	Below I/P, above left dash side trim panel, on bracket 53
H-12 (20-WHT)	Below I/P, above right dash side trim panel, on bracket 69
H-24 (18-YEL)	Below I/P, above left dash side trim panel, on bracket 53
H-41 (16-BLU)	Right front of engine compartment 31
I -36 (10-WHT)	On rear of meter assembly 45
Ground	
B-19	Behind top of left dash side trim panel 54
C-16	Left rear corner of engine compartment, on inner fender panel 28

Circuit Operation

With the starter switch in ON or START, battery voltage is applied to the automatic transmission mode switch and the A/T shift indicator control unit from fuse C-3. The automatic transmission mode switch sends a signal to the A/T shift indicator control unit corresponding to the gear selected. The A/T shift indicator control unit applies voltage to the appropriate A/T shift indicator causing it to light up.