

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

FRONT SIDE MARKER, FRONT PARK, REAR PARK, AND LICENSE PLATE LIGHTS


Component Index

- [Fuse/Relay Box](#)
- [Taillight Relay](#)
- [Trailer Lighting Connector H-44 \(6-WHT\)](#)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views	Contd
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------	-----------------------


FRONT SIDE MARKER, FRONT PARK, REAR PARK, AND LICENSE PLATE LIGHTS

Circuit Schematic

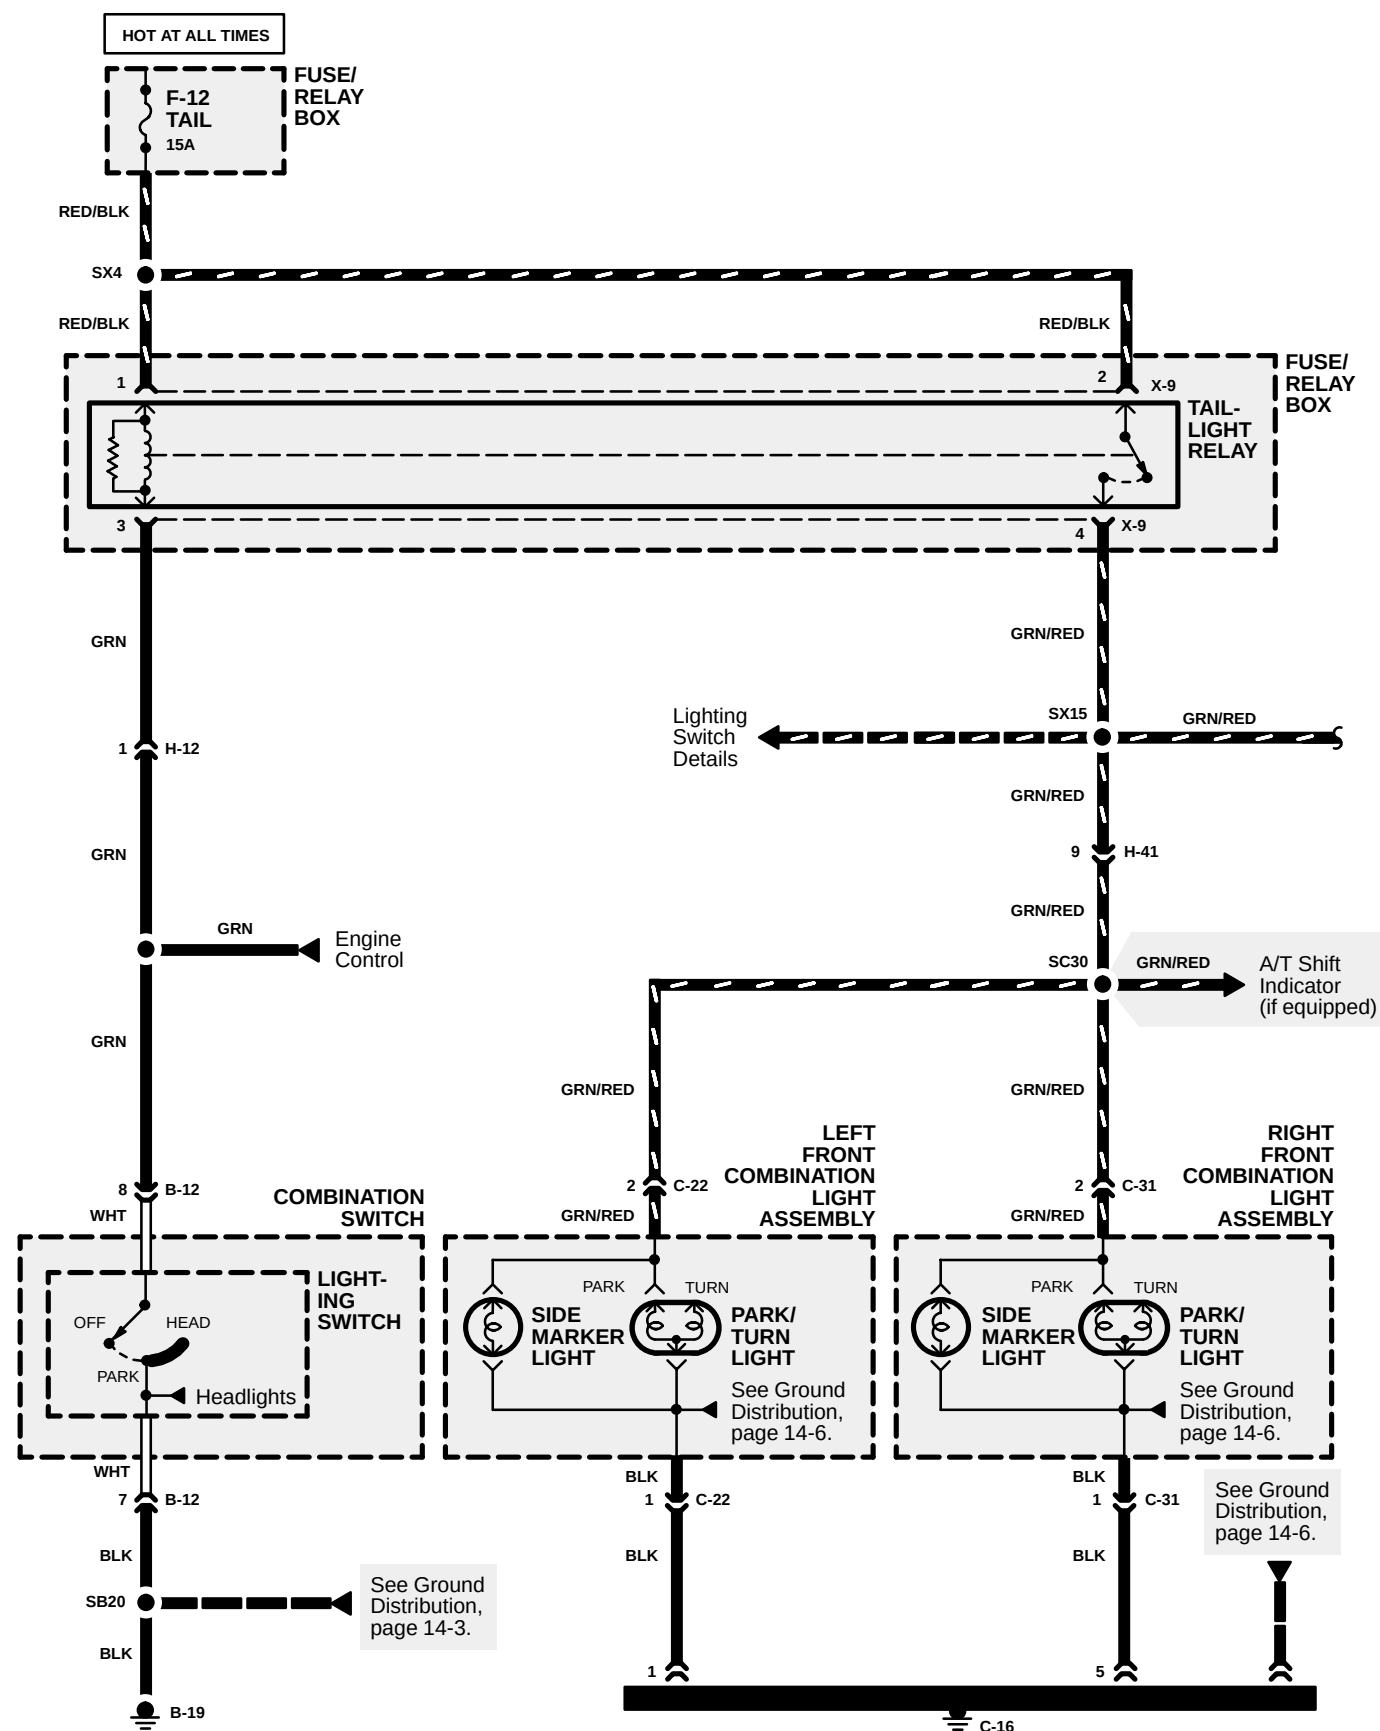

FRONT SIDE MARKER, FRONT PARK, REAR PARK, AND LICENSE PLATE LIGHTS

Circuit Schematic

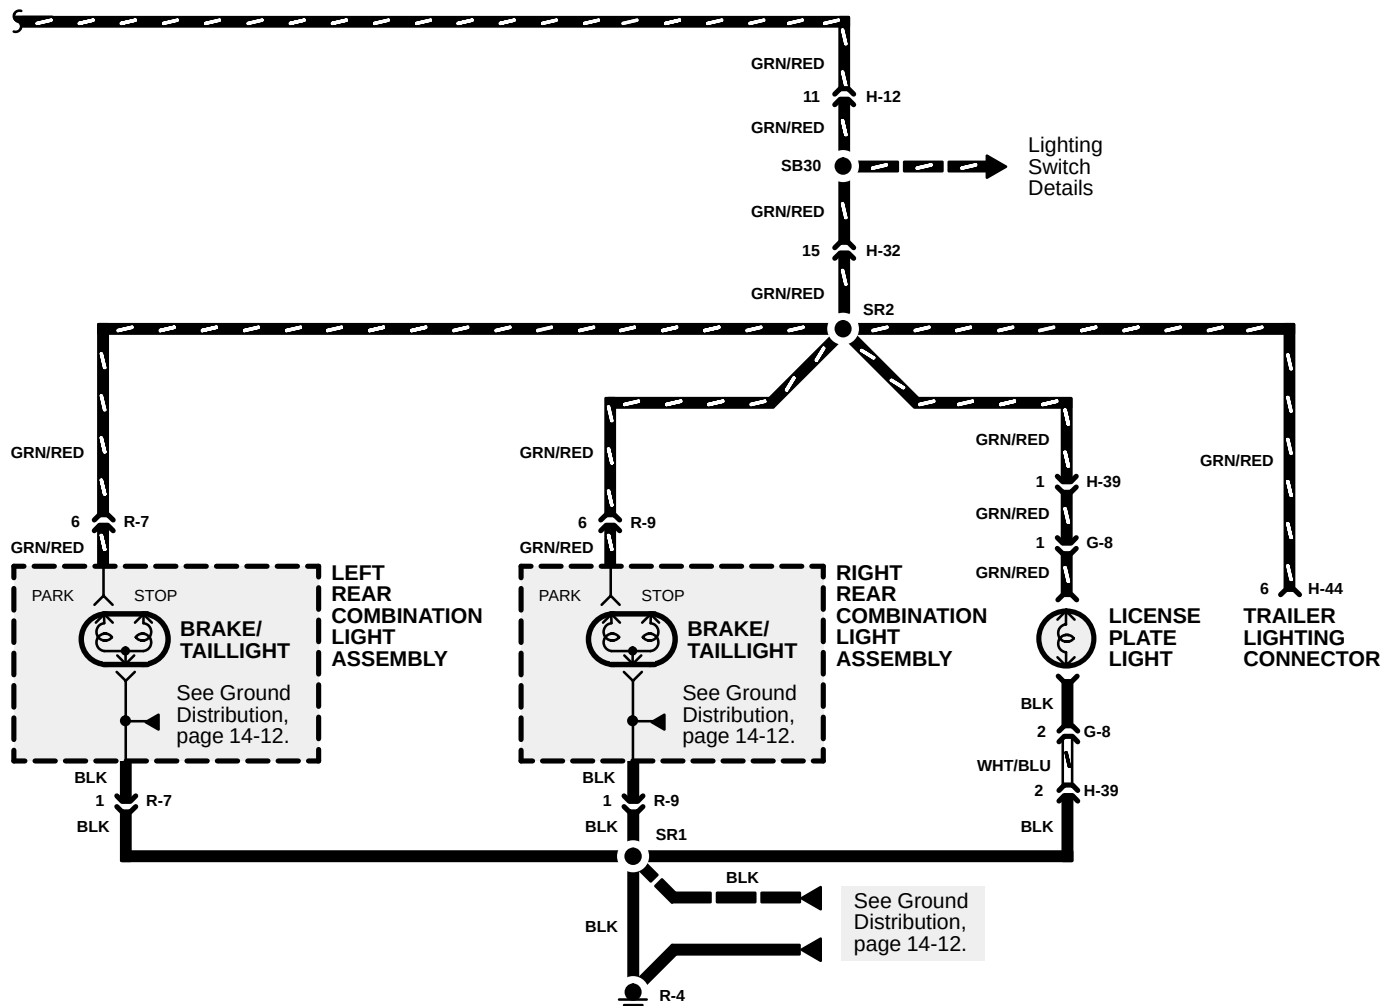

FRONT SIDE MARKER, FRONT PARK, REAR PARK, AND LICENSE PLATE LIGHTS

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 33
Taillight Relay	In fuse/relay box 35
Trailer Lighting Connector	
H-44 (6-WHT)	Below left rear corner of vehicle, behind grommet 102

Connector

B-12 (16-WHT)	Below I/P, right of steering column 58
C-22 (4-GRY)	Behind left front combination light assembly 3
C-31 (4-GRY)	Behind right front combination light assembly 3
G-8 (2-WHT)	Inside right tailgate door, behind trim pad 95
H-12 (20-WHT)	Below I/P, above right dash side trim panel, on bracket 69
H-32 (16-CAVITY)	
(S w/o PEP)	Below left front seat 105
H-32 (22-BLK)	
(S w/PEP, LS, LTD)	Below left front seat 105
H-39 (2-WHT)	Right rear of luggage room 96
H-41 (16-BLU)	Right front of engine compartment 31
R-7 (6-WHT/BLK)	Behind left taillight assembly 103
R-9 (6-WHT/BLK)	Behind right taillight assembly 103

Ground

B-19	Behind top of left dash side trim panel 54
C-16	Left rear corner of engine compartment, on inner fender panel 28
R-4	Left side of luggage room 90

Circuit Operation

Battery voltage is applied to the taillight relay from fuse F-12. With the lighting switch in PARK or HEAD, ground is provided to the taillight relay. The taillight relay energizes and battery voltage is applied to the park, license, and side marker lights and the lights go on.