


BRAKE LIGHTS

Component Index

- [Brake Switch](#)
- [Dash Fuse Box](#)
- [Stop Light Switch](#)
- [Trailer Lighting Connector H-44 \(6-WHT\)](#)

BRAKE LIGHTS

Circuit Schematic

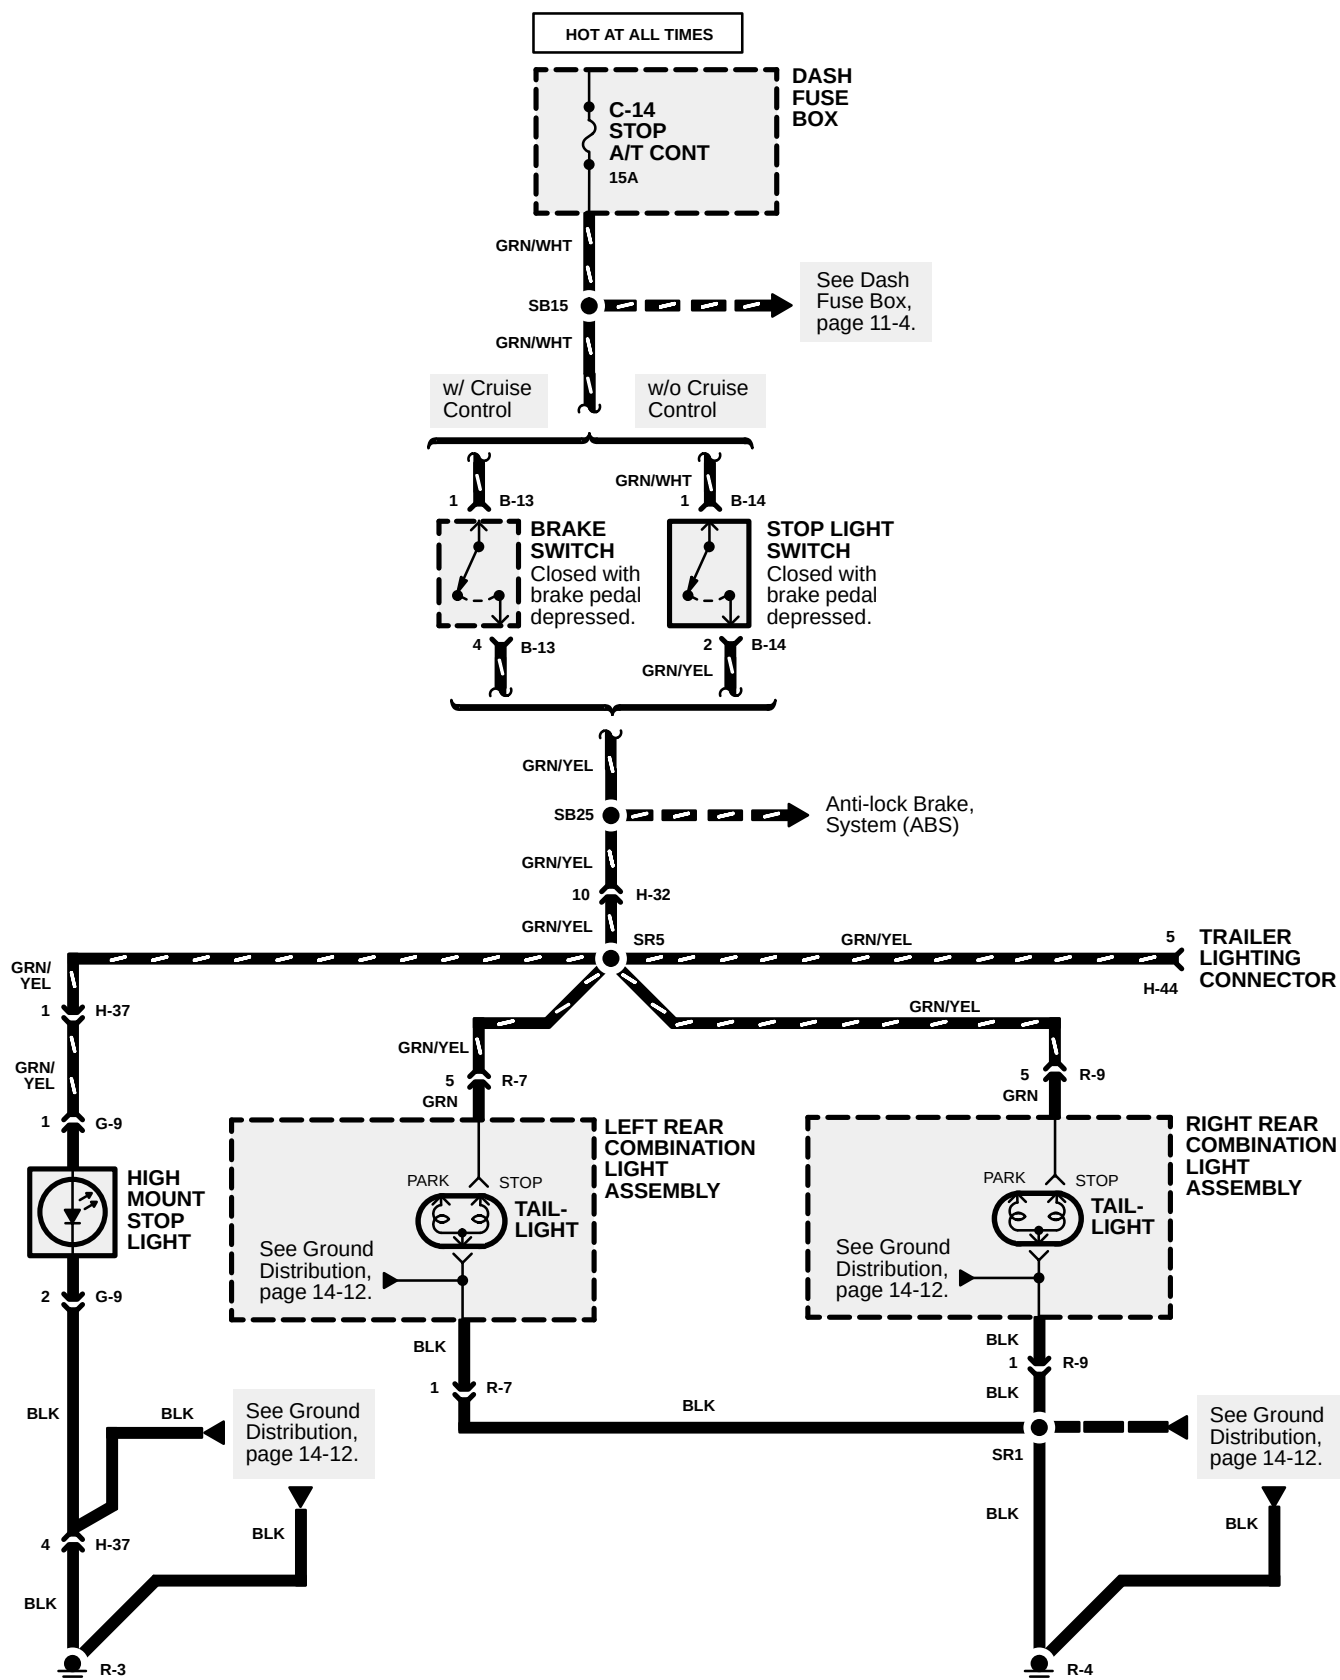

BRAKE LIGHTS

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>		<u>Photo No.</u>
Brake Switch	Below I/P, on brake pedal support	56
Dash Fuse Box	Behind left dash side trim panel	51
Stop Light Switch	Below I/P on brake pedal support	56
Trailer Lighting Connector		
H-44 (6-WHT)	Below left rear corner of vehicle, behind grommet	102
<u>Connector</u>		
G-9 (2-WHT/BLK)	Inside top center of left tailgate door	97
H-32 (16-CAVITY)		
(S w/o PEP)	Below left front seat	105
H-32 (22-BLK)		
(S w/PEP, LS, LTD)	Below left front seat	105
H-37 (4-GRY)	Left rear of luggage room	89
R-7 (6-WHT/BLK)	Behind left taillight assembly	103
R-9 (6-WHT/BLK)	Behind right taillight assembly	103
<u>Ground</u>		
R-3	Left side of luggage room	90
R-4	Left side of luggage room	90

Circuit Operation

Battery voltage is applied to the stop light switch (with-out cruise control) or brake switch (with cruise control) at all times from fuse C-14. With the brake pedal de-pressed, the switch is closed and battery voltage is applied to the stop lights and the stop lights go on.