


TRAILER ADAPTER

Component Index

- Brake Switch
- Dash Fuse Box
- Flasher Unit
- Fuse/Relay Box
- Stop Light Switch
- Taillight Relay
- Trailer Lighting Connector H-44 (6-WHT)


TRAILER ADAPTER

Circuit Schematic

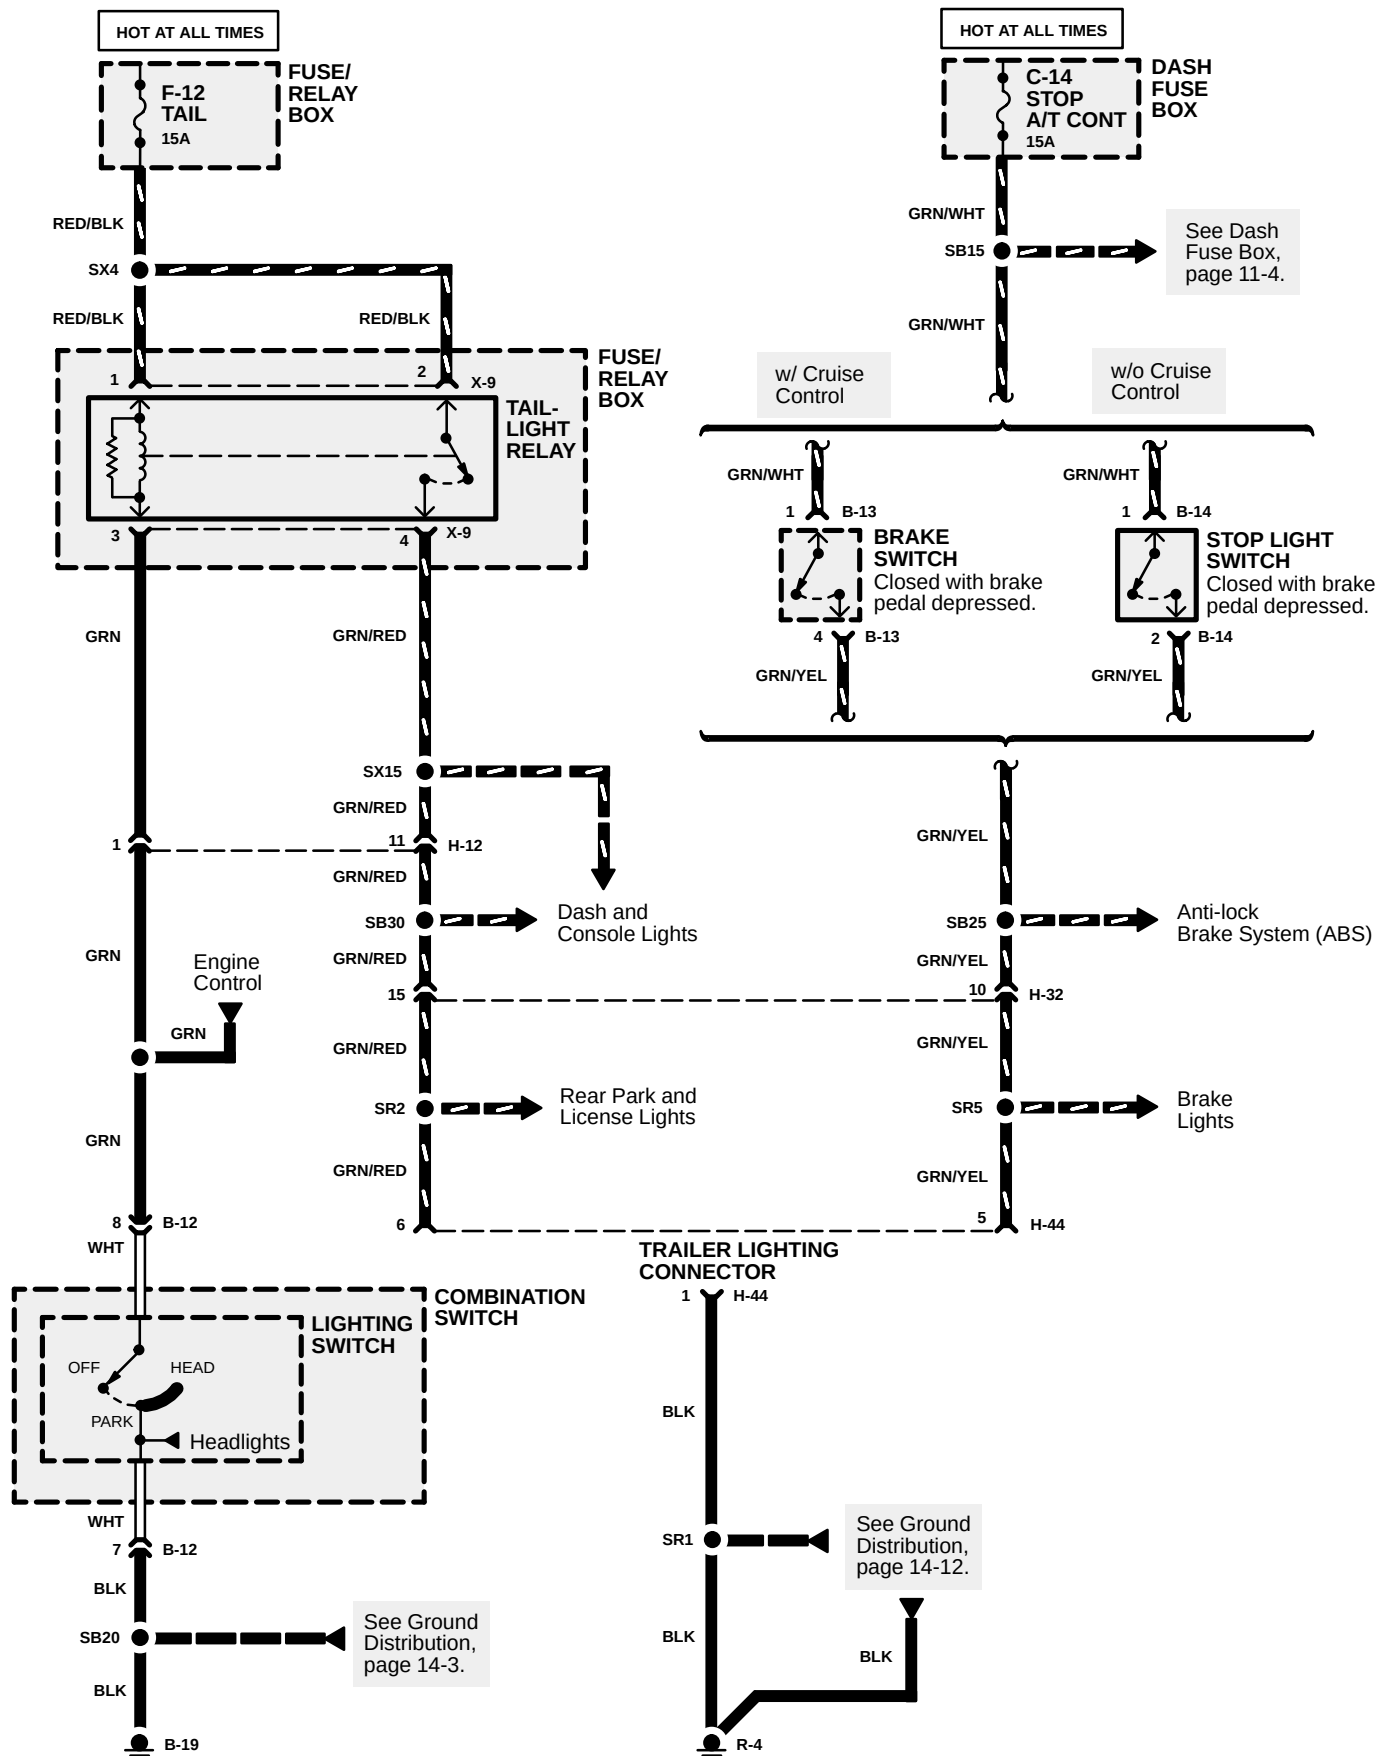

TRAILER ADAPTER

Circuit Schematic

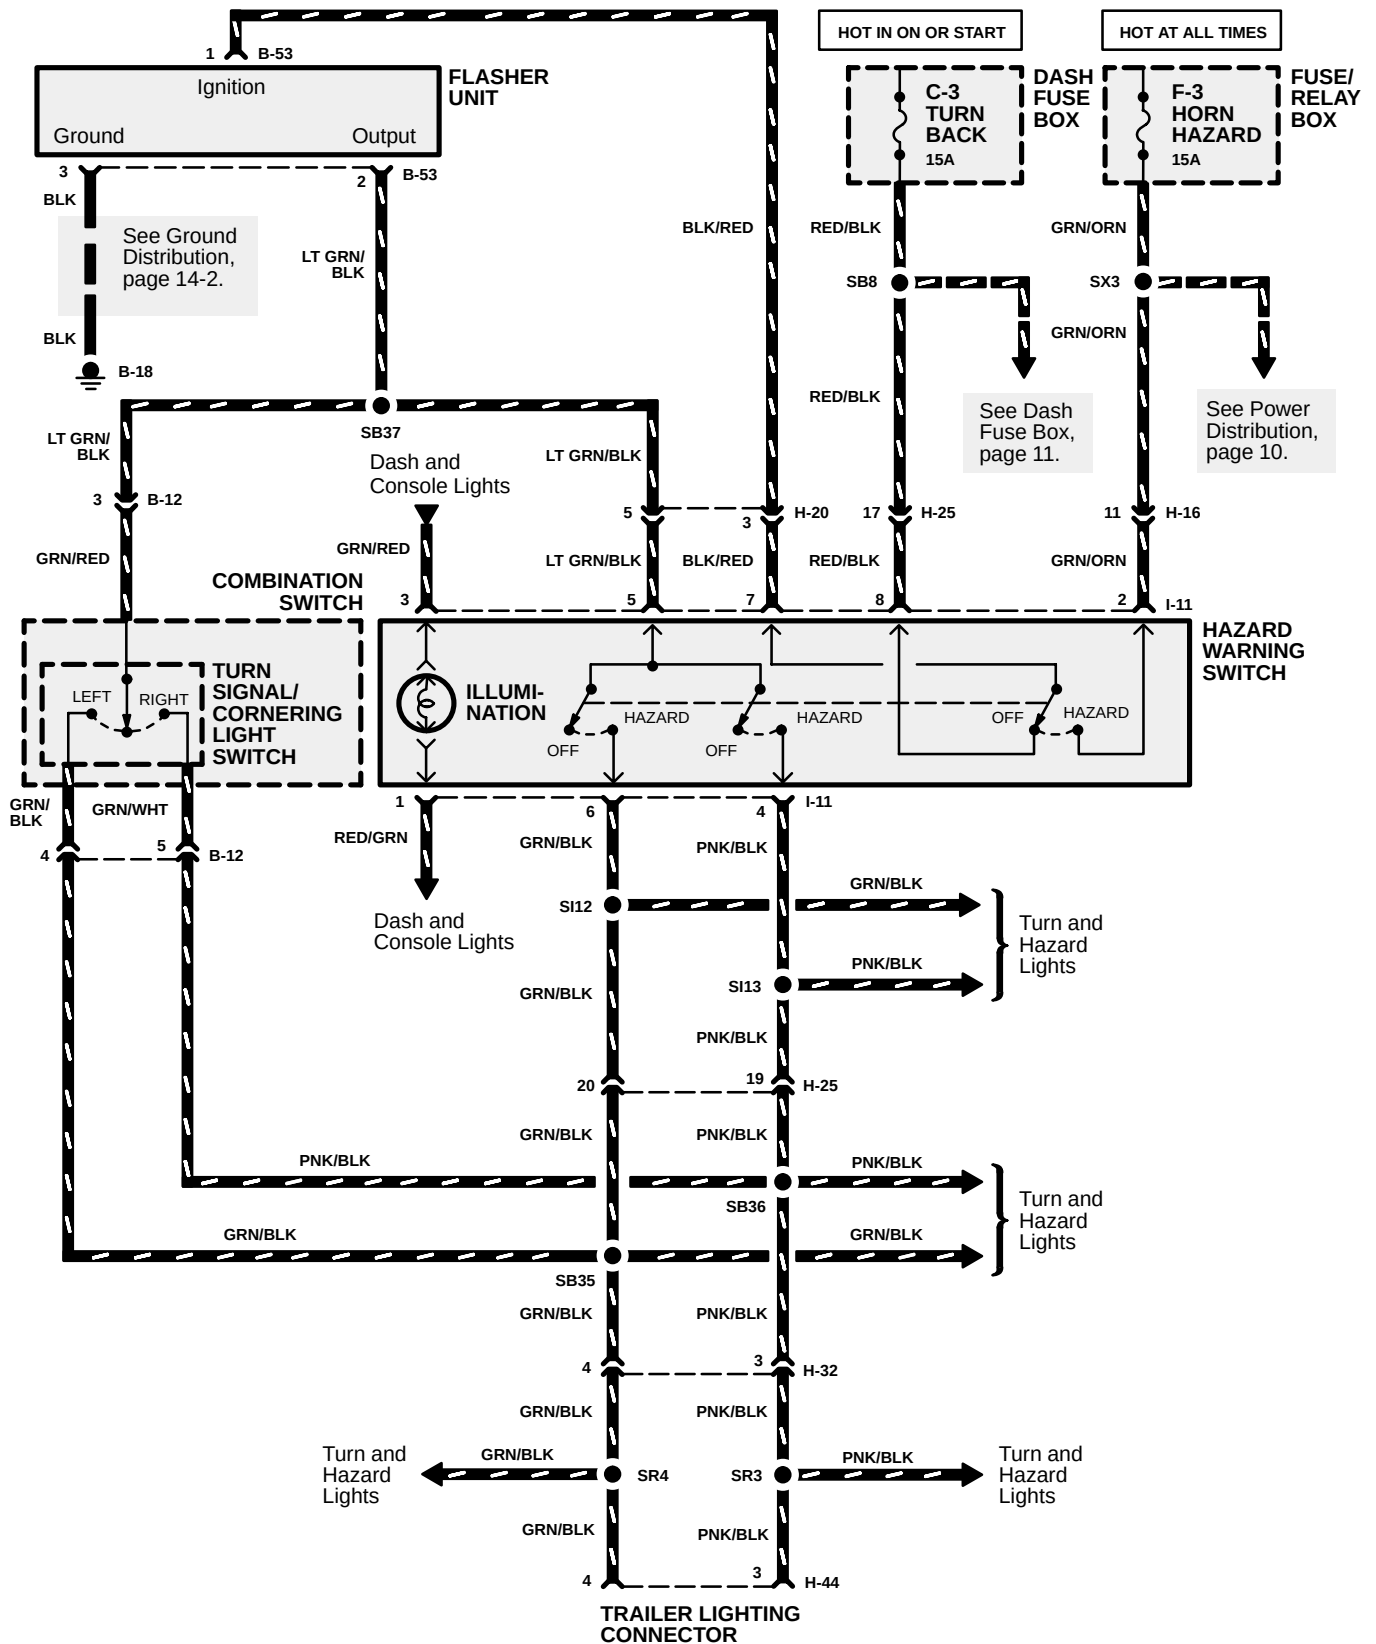

TRAILER ADAPTER

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>	<u>Photo No.</u>
Brake Switch	Below I/P, on brake pedal support 56
Dash Fuse Box	Behind left dash side trim panel 51
Flasher Unit	On top of dash fuse box 51
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 33
Stop Light Switch	Below I/P on brake pedal support 56
Taillight Relay	In fuse/relay box 35
Trailer Lighting Connector	
H-44 (6-WHT)	Below left rear corner of vehicle, behind grommet 102
<u>Connector</u>	
B-12 (16-WHT)	Below I/P, right of steering column 58
H-12 (20-WHT)	Below I/P, above right dash side trim panel, on bracket 69
H-16 (22-WHT)	Behind right dash side trim panel 73
H-20 (6-WHT)	Behind right dash side trim panel 73
H-25 (22-BLU)	Below I/P, above left dash side trim panel, on bracket 54
H-32 (16-CAVITY)	
(S w/o PEP)	Below left front seat 105
H-32 (22-BLK)	
(S w/PEP, LS, LTD)	Below left front seat 105
<u>Ground</u>	
B-18	Behind top of left dash side trim panel 54
B-19	Behind top of left dash side trim panel 54
R-4	Left side of luggage room 90

Circuit Operation

The trailer connector is an extension of the main wiring harness. See corresponding exterior lights cell for circuit operation.