


SOUND SYSTEM

Component Index

- Dash Fuse Box
- Left Antenna Amplifier
- Right Anenna Amplifier


SOUND SYSTEM

Circuit Schematic

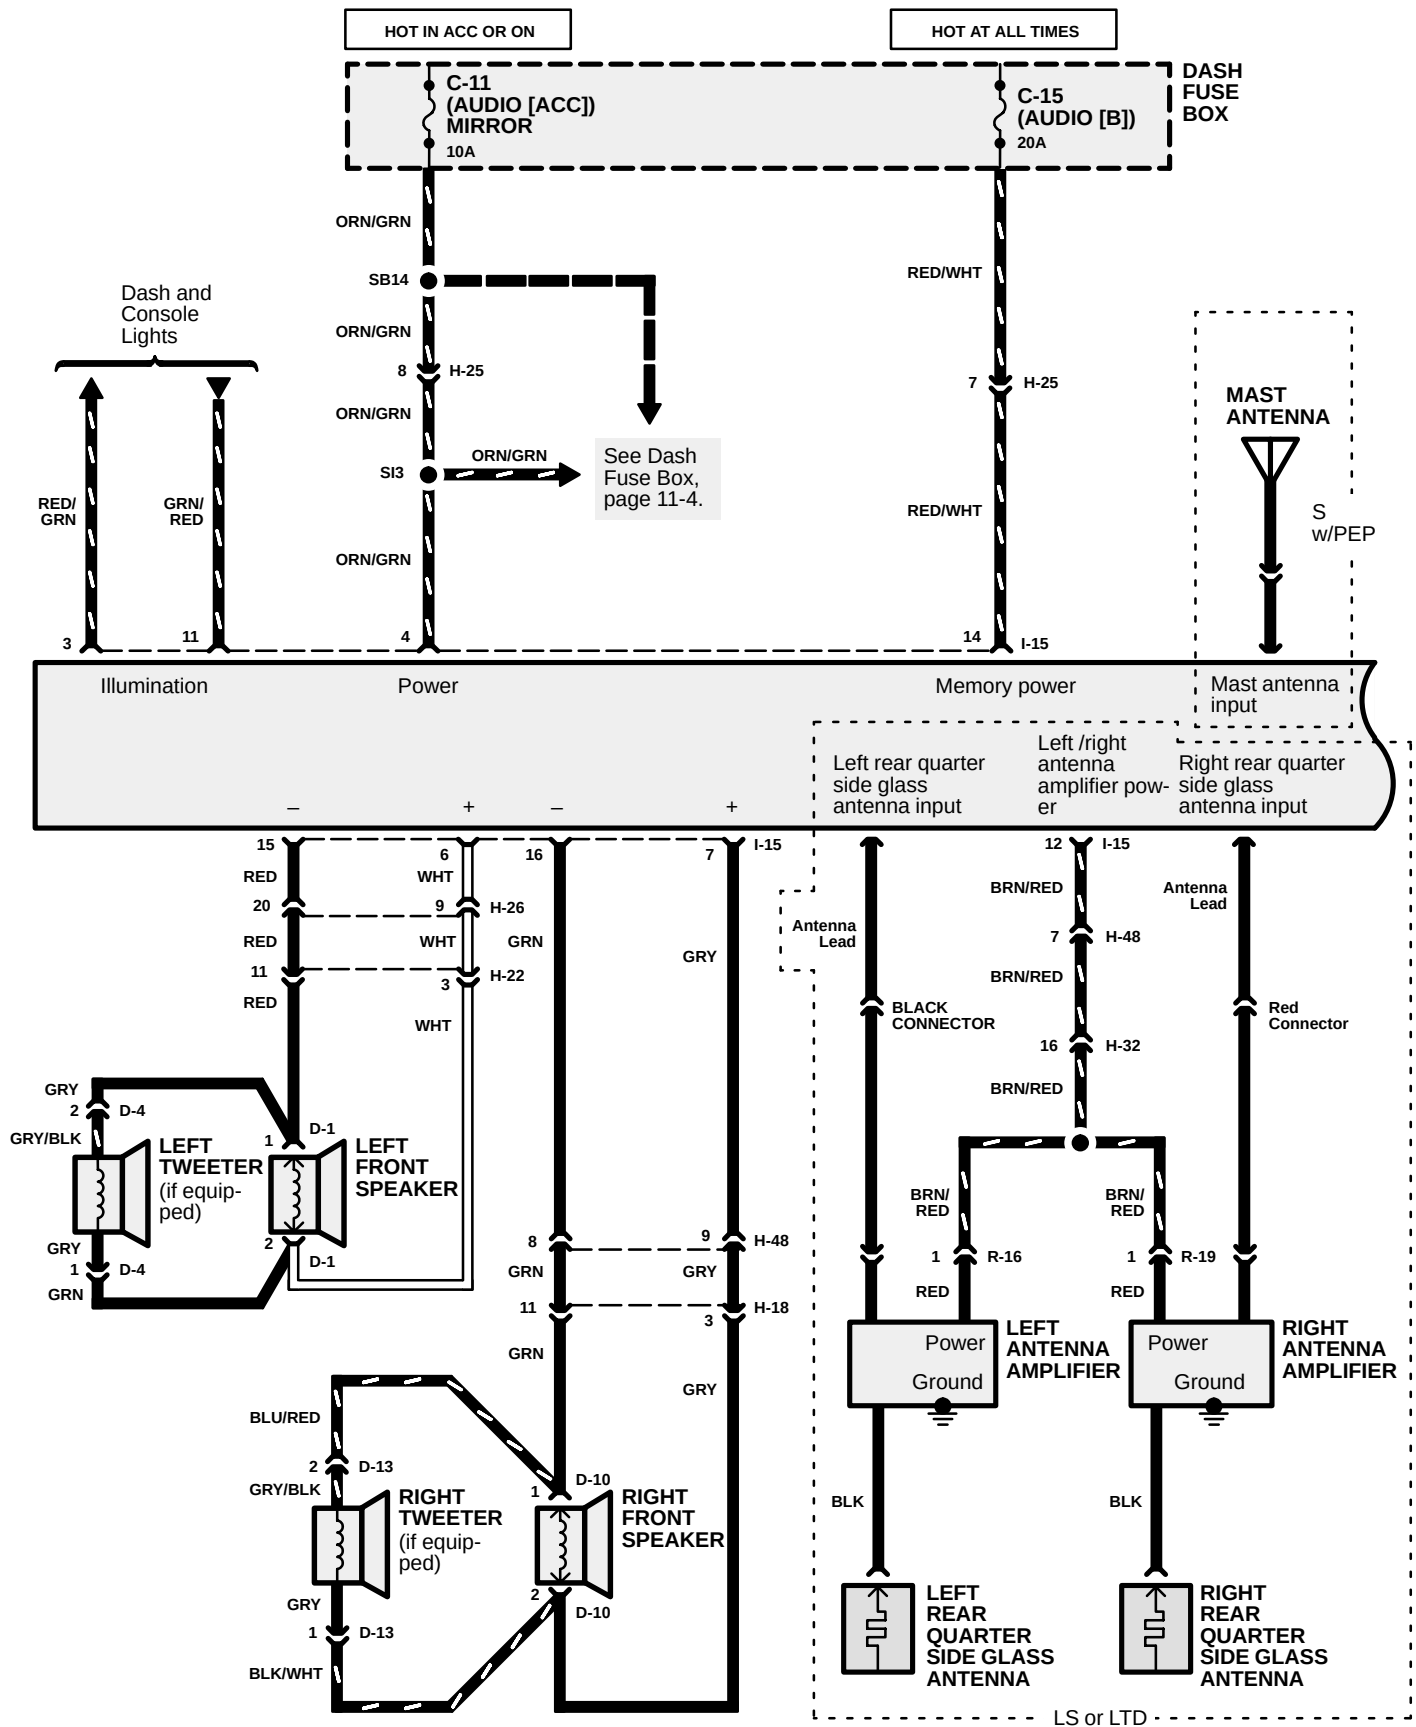

SOUND SYSTEM

Circuit Schematic

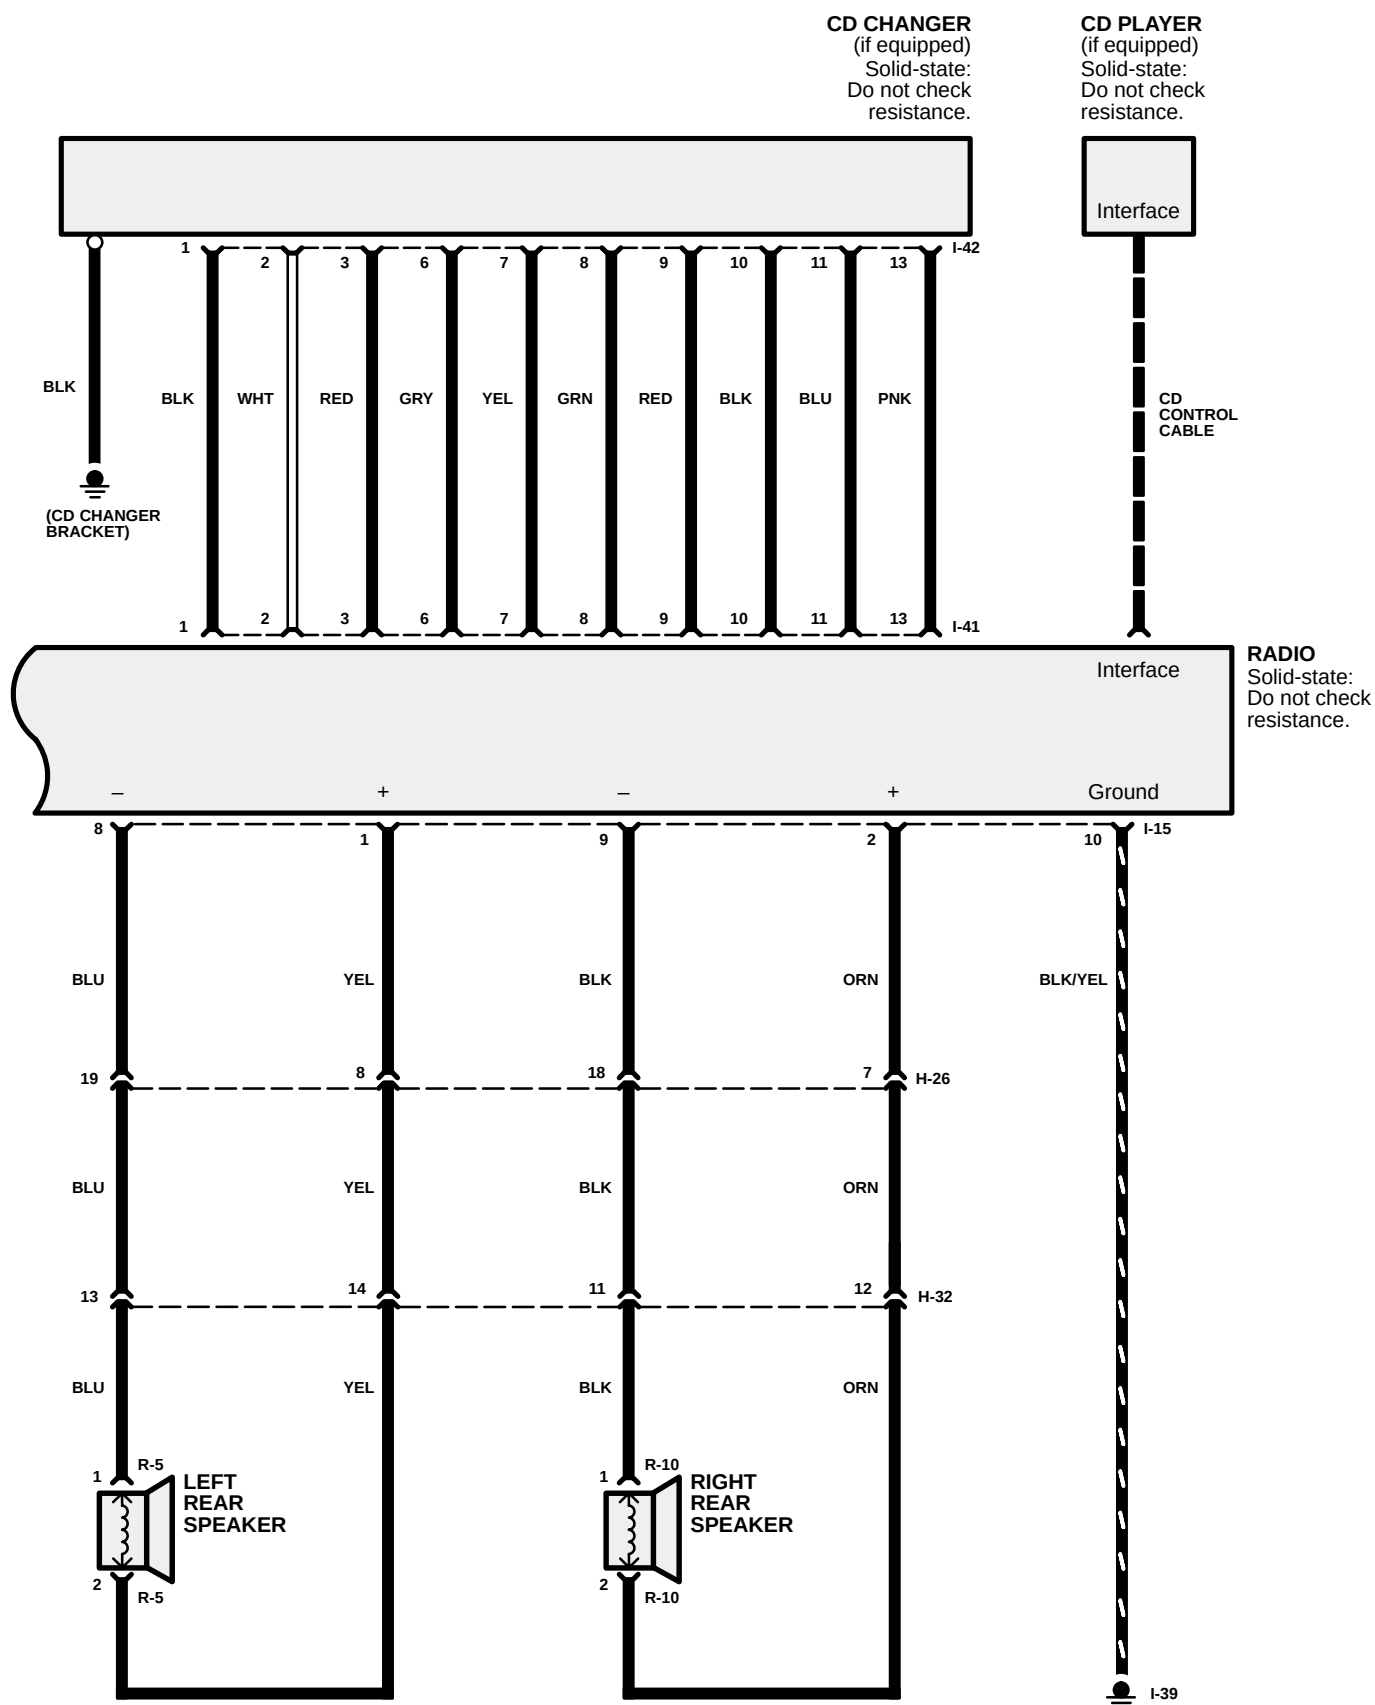

SOUND SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>		<u>Photo No.</u>
Dash Fuse Box	Behind left dash side trim panel	51
Left Antenna Amplifier	Left side of luggage room	117
Right Antenna Amplifier	Right side of luggage room	117
 <u>Connector</u>		
D-4 (2-BLK/WHT)	Top front of left front door	76
D-13 (2-BLK/WHT)	Top front of right front door	76
H-18 (18-WHT)	Behind right dash side trim panel, in access hole	74
H-22 (18-WHT)	Behind left dash side trim panel, in access hole	74
H-25 (22-BLU)	Below I/P, above left dash side trim panel, on bracket	54
H-26 (20-WHT)	Below I/P, above left dash side trim panel, on bracket	54
H-32 (16-CAVITY)		
(S w/o PEP)	Below left front seat	105
H-32 (22-BLK)		
(S w/PEP, LS, LTD)	Below left front seat	105
H-48 (16-BLK)	Behind right dash side trim panel	73
R-16 (2-WHT/BLK)	Left side of luggage room	117
R-19 (2-WHT/BLK)	Right side of luggage room	117
 <u>Ground</u>		
I-39	Behind right side of lower cluster assembly	63

Circuit Operation

With the starter switch in ACC or ON, battery voltage is applied to the radio from fuse C-11. When you turn the radio on, battery voltage is applied to the receiver circuits in the radio. Fuse C-15 is hot at all times and provides battery voltage to the radio for its memory circuits.