


CIGARETTE LIGHTER

Component Index

[Dash Fuse Box](#)

CIGARETTE LIGHTER

Circuit Schematic

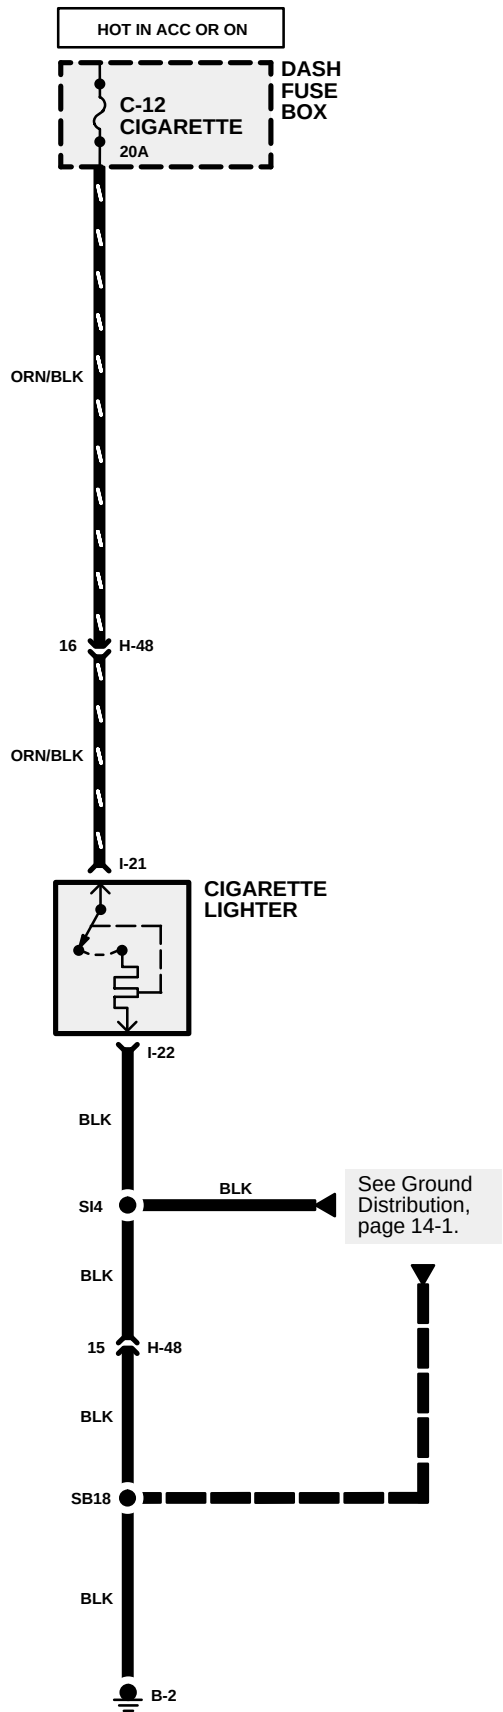

CIGARETTE LIGHTER

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>	<u>Photo No.</u>
Dash Fuse Box Behind left dash side trim panel	51
<u>Connector</u>	
H-48 (16-BLK) Behind right dash side trim panel	73
<u>Ground</u>	
B-2 Above right dash side trim panel	71

Circuit Operation

With the starter switch in ACC or ON, battery voltage is applied to fuse C-12 and to the cigarette lighter. When the cigarette lighter is depressed, the cigarette lighter element completes the circuit to ground. When the element becomes sufficiently heated, it is spring-released and the circuit opens.