



CONNECTOR AND WIRE HARNESS ROUTING

BATTERY CABLE (-)
BATTERY CABLE (+)
BODY HARNESS
ENGINE ROOM HARNESS (LH)
ENGINE ROOM HARNESS (RH)
TRANSMISSION HARNESS

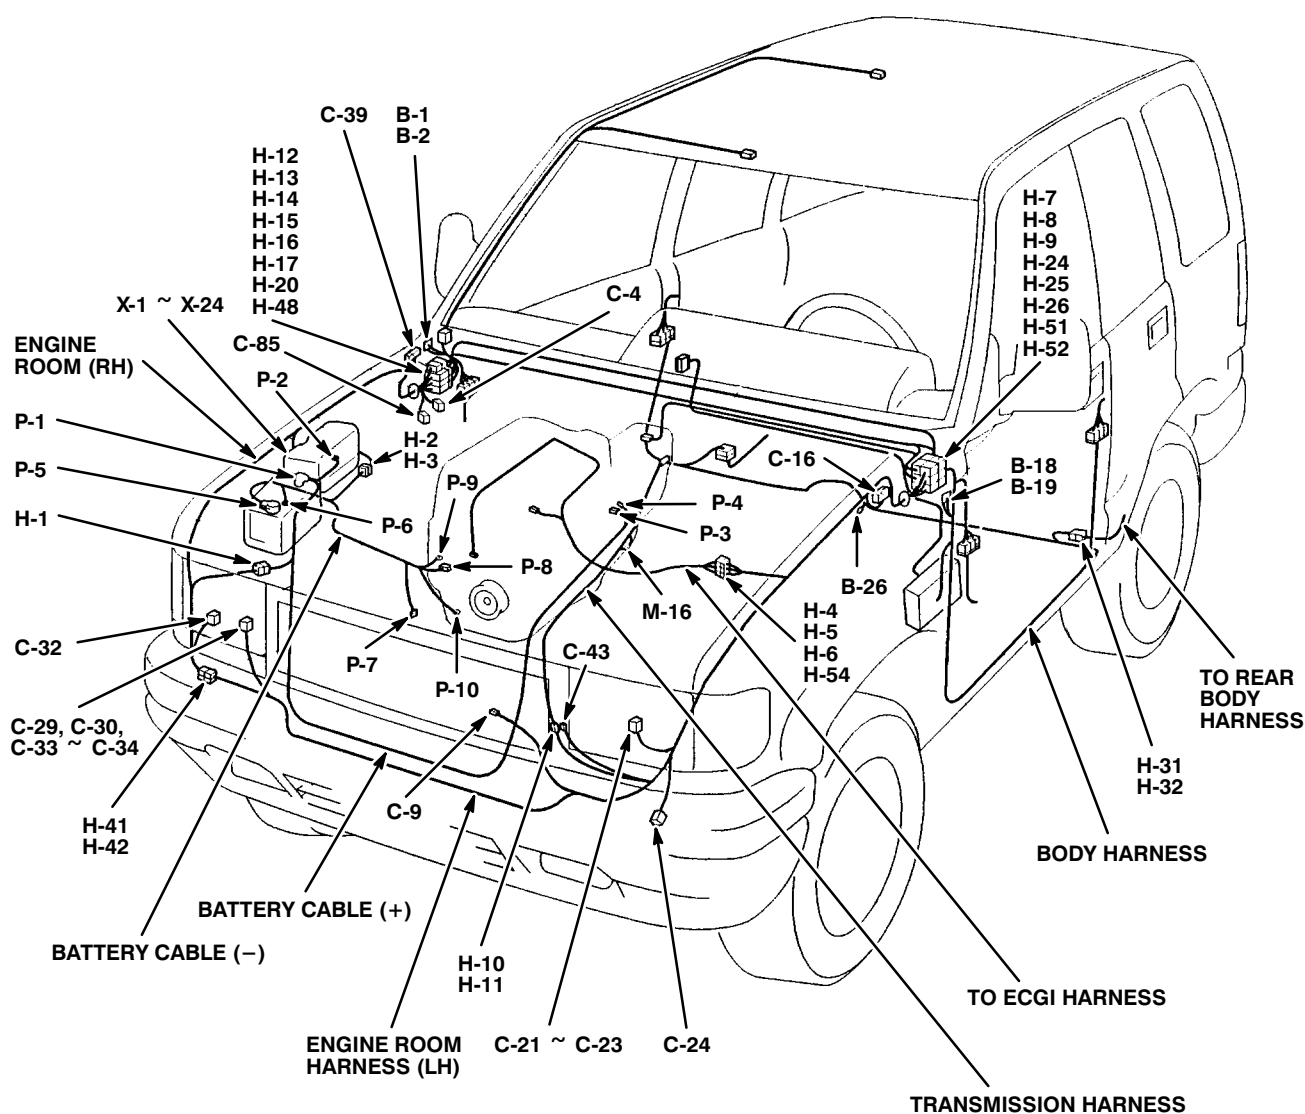


CONNECTOR AND WIRE HARNESS ROUTING

BODY HARNESS
CHASSIS HARNESS
DOME LIGHT HARNESS
FRONT DOOR HARNESS (LH)
FRONT DOOR HARNESS (RH)
REAR DOOR HARNESS (LH)
REAR DOOR HARNESS (RH)

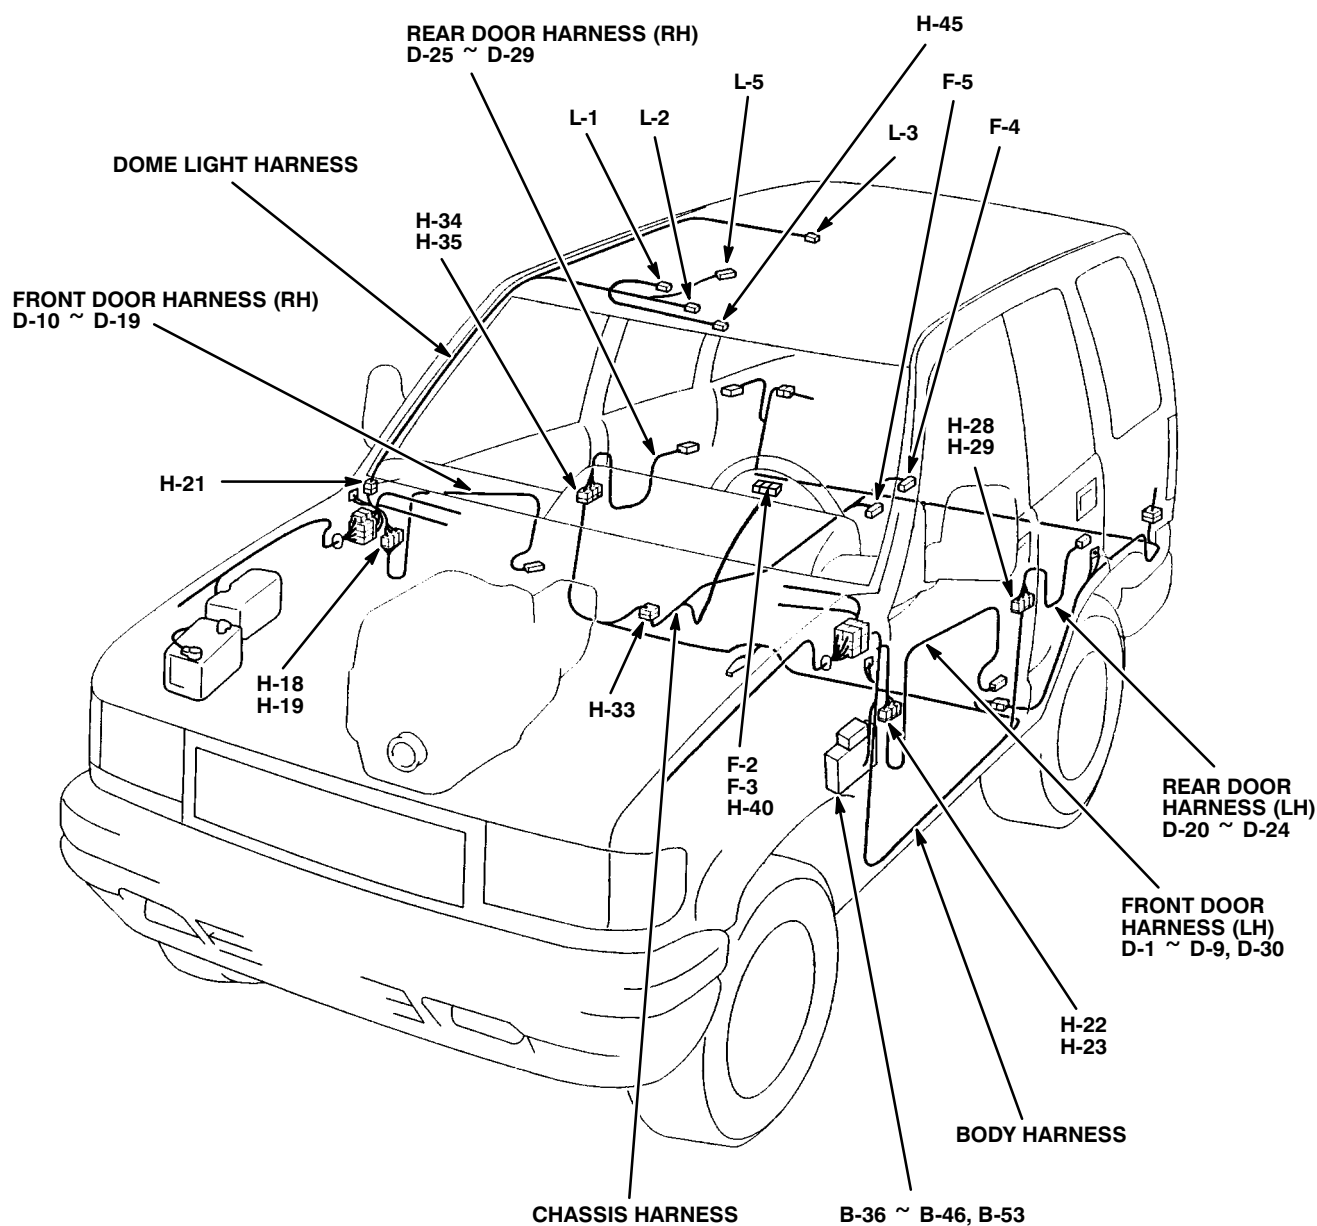


CONNECTOR AND WIRE HARNESS ROUTING

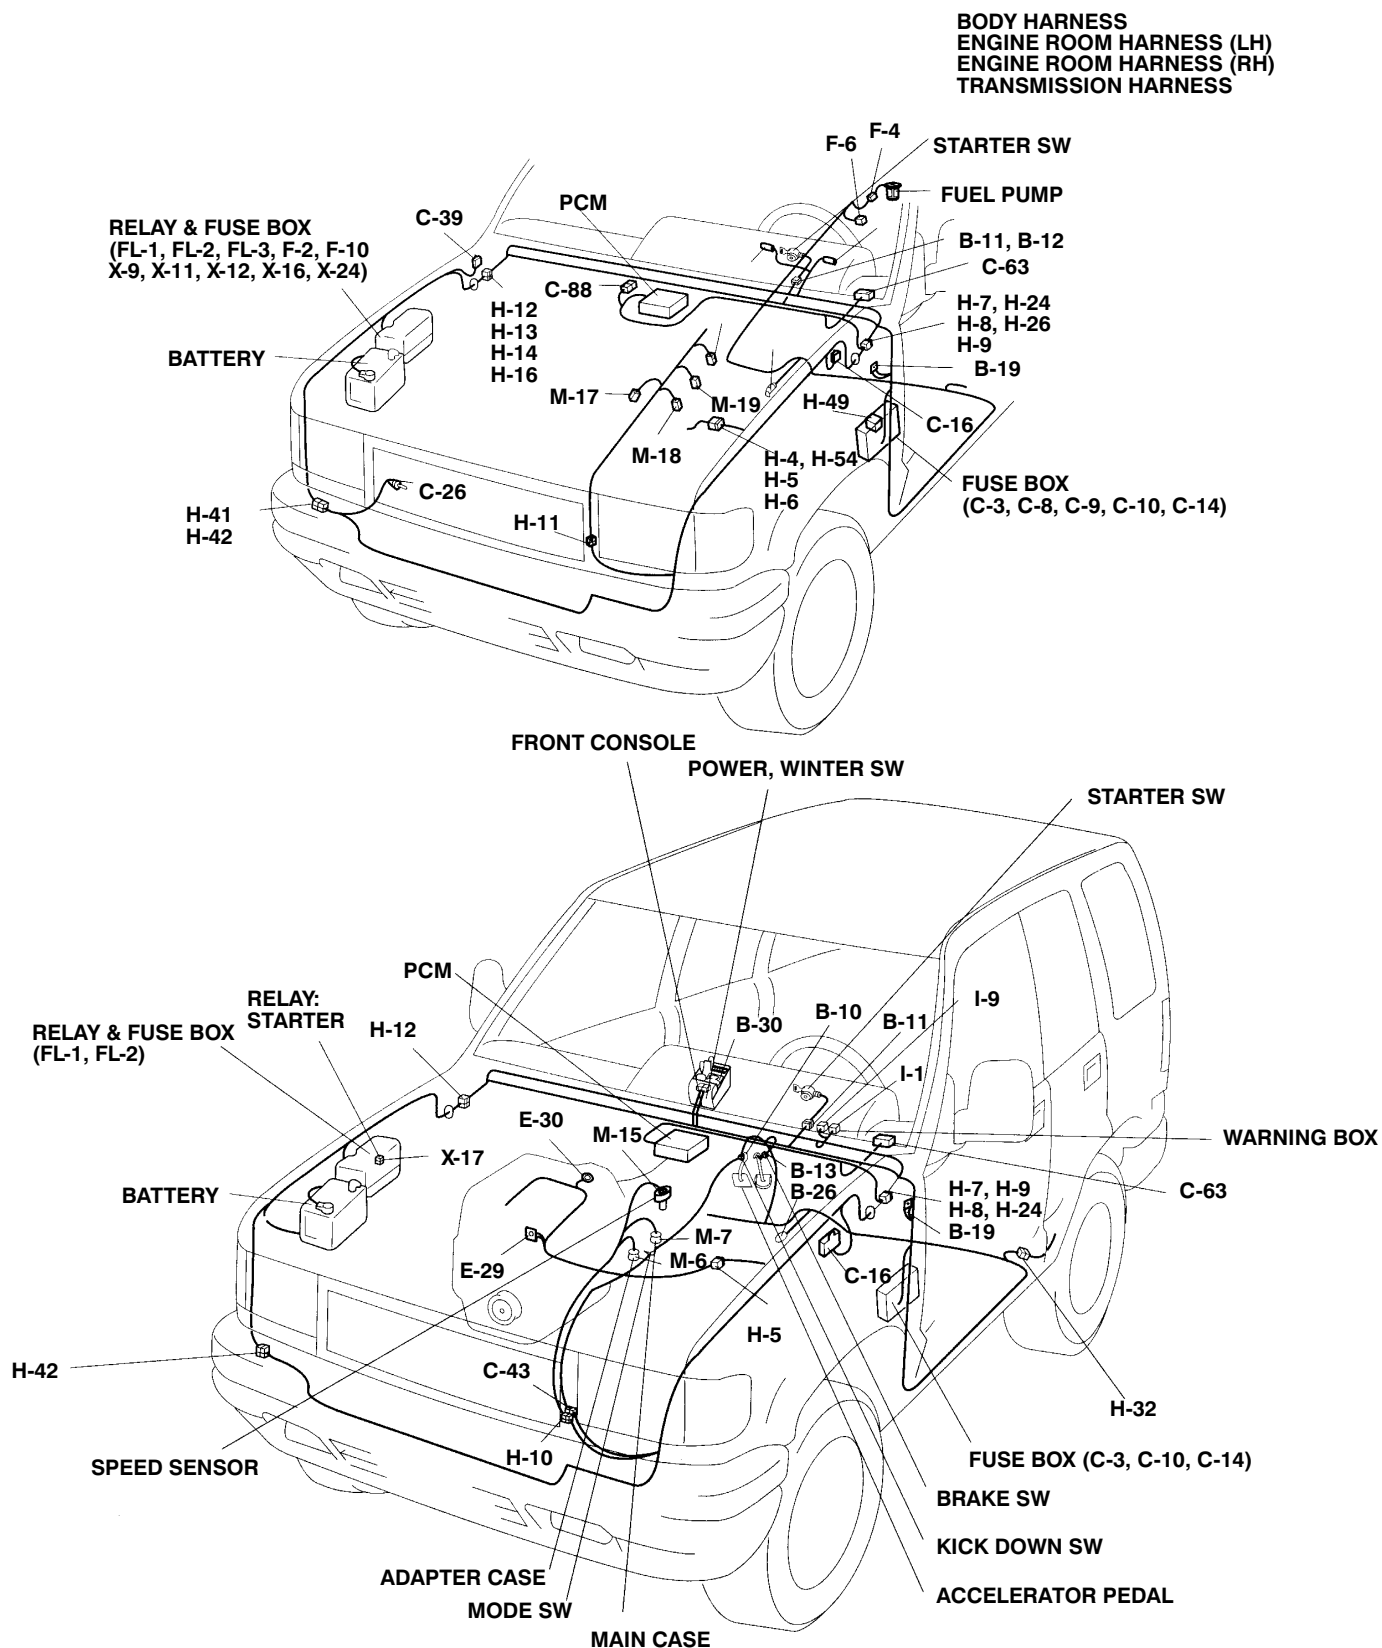


CONNECTOR AND WIRE HARNESS ROUTING

BODY HARNESS
ENGINE ROOM HARNESS (LH)
INSTRUMENT HARNESS

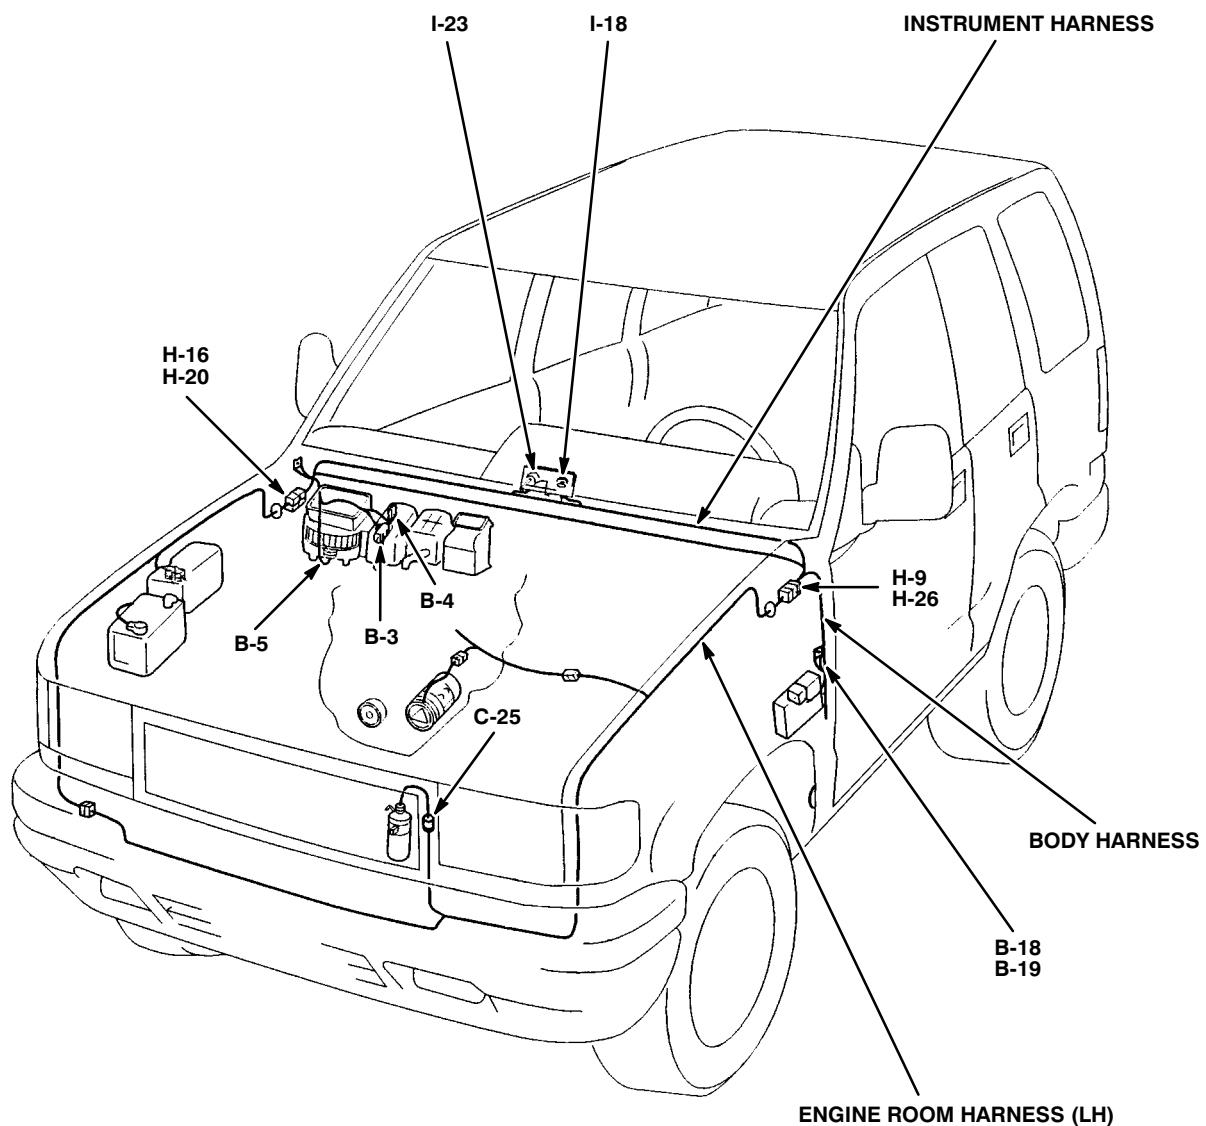


CONNECTOR AND WIRE HARNESS ROUTING

BODY HARNESS
ENGINE ROOM HARNESS (LH)
INSTRUMENT HARNESS

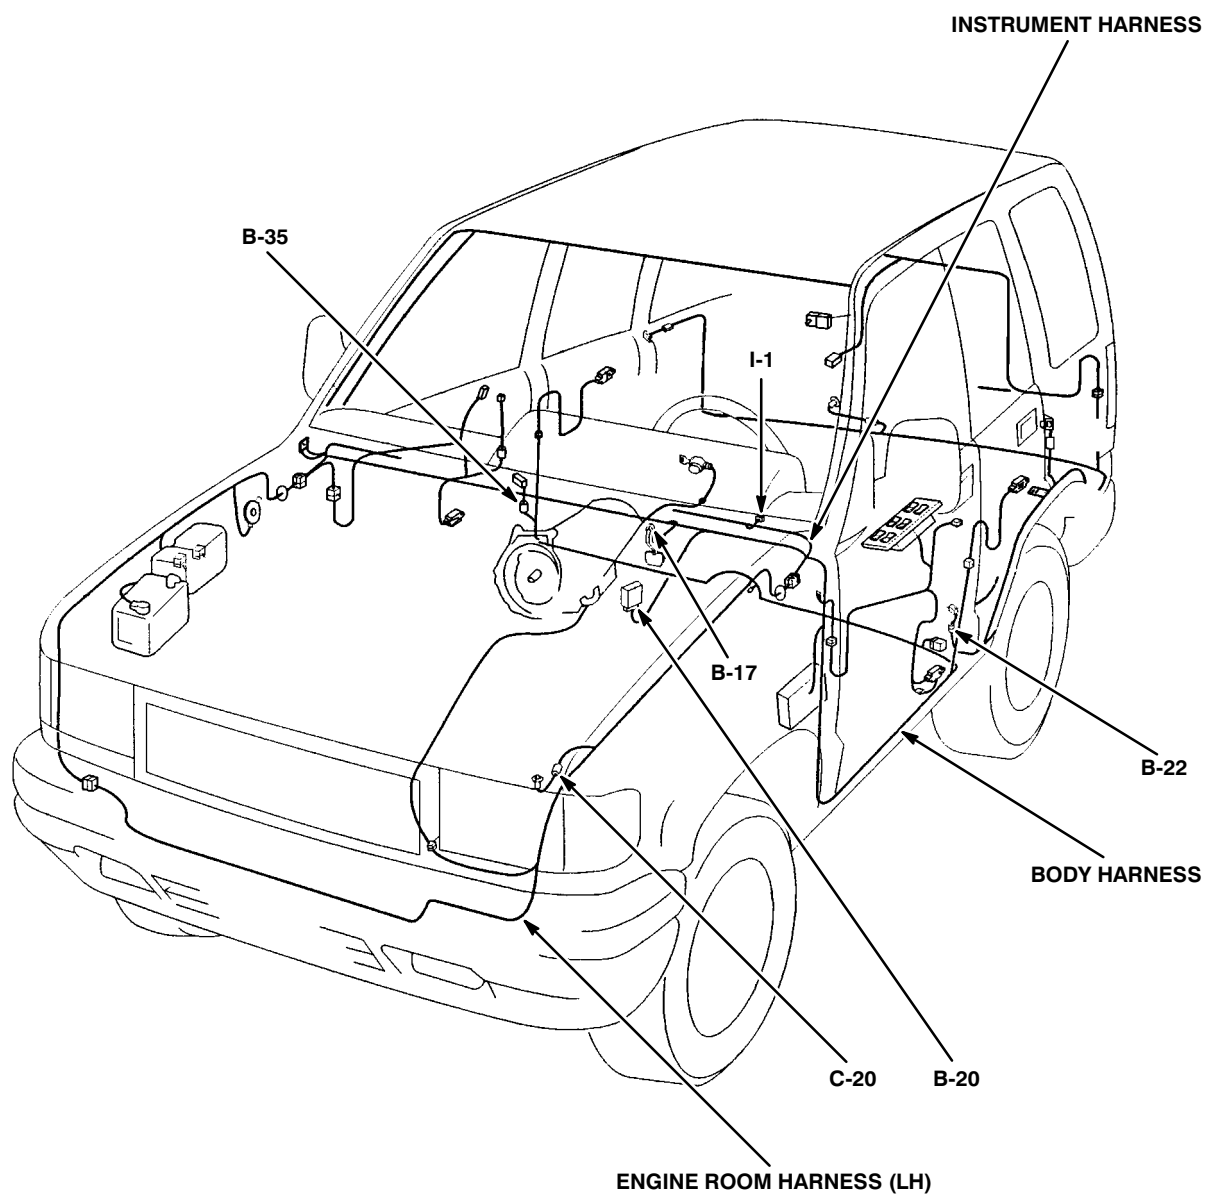


CONNECTOR AND WIRE HARNESS ROUTING

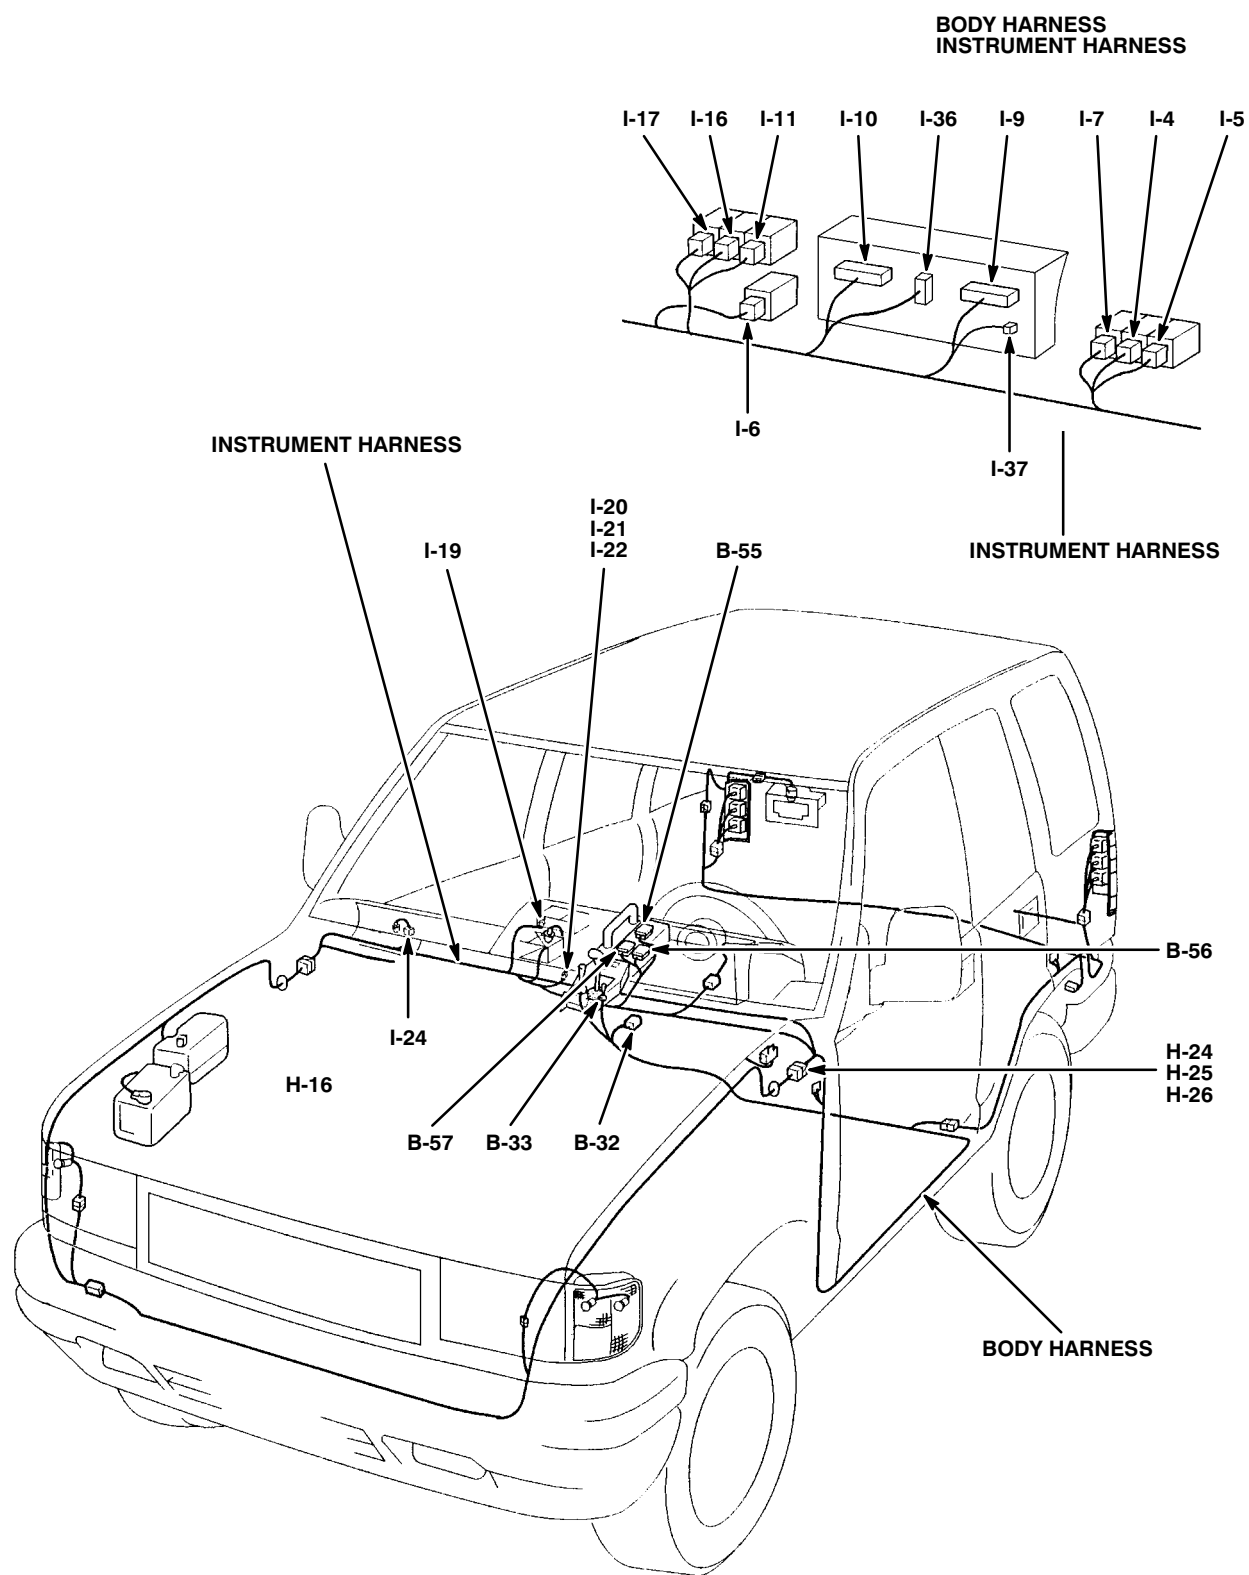


CONNECTOR AND WIRE HARNESS ROUTING

BODY HARNESS
INSTRUMENT HARNESS

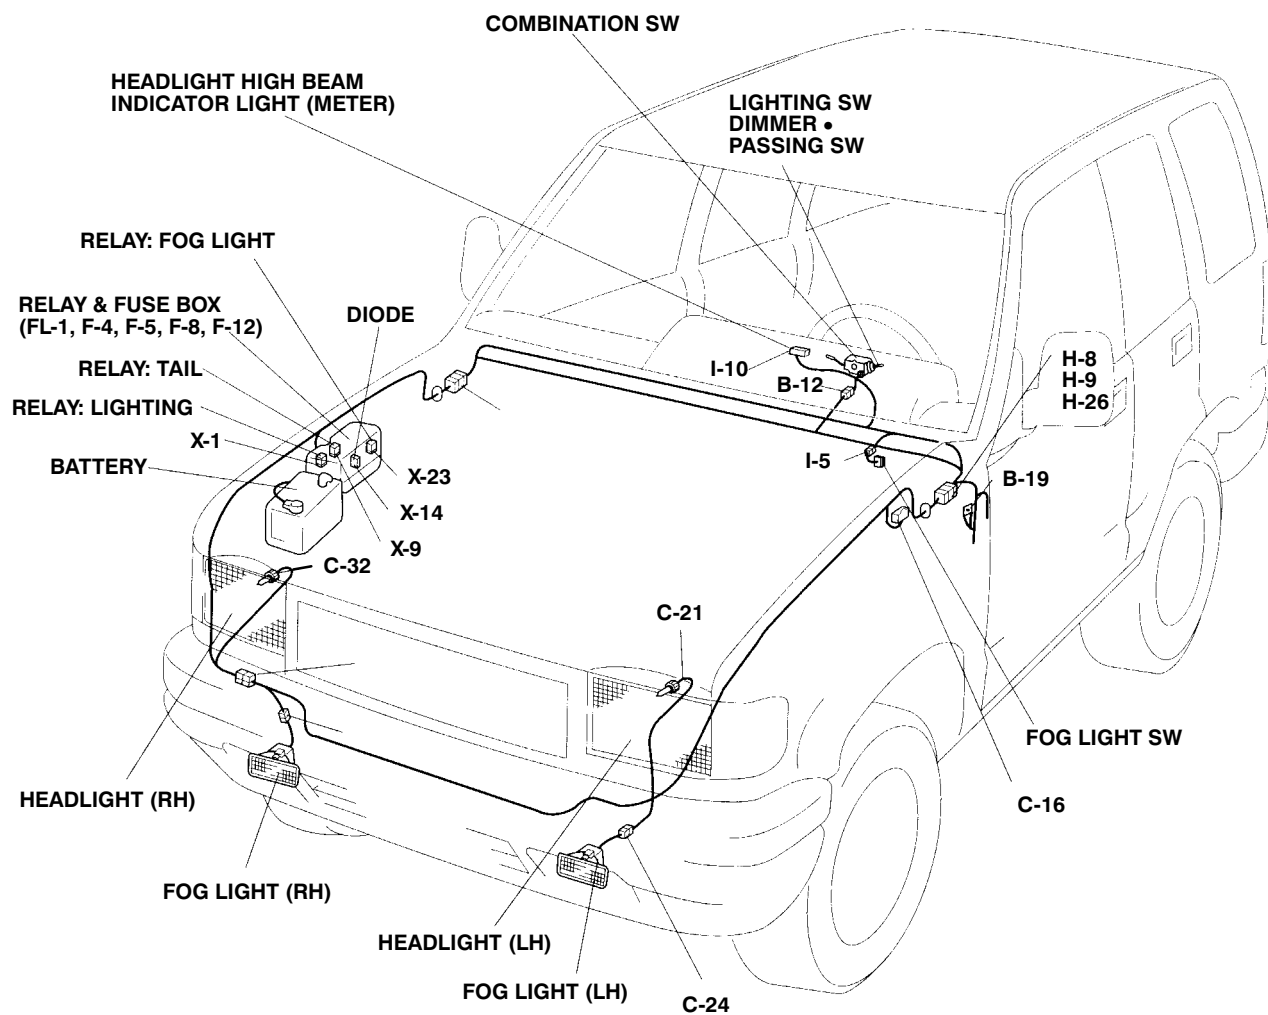


CONNECTOR AND WIRE HARNESS ROUTING

ENGINE ECGI HARNESS

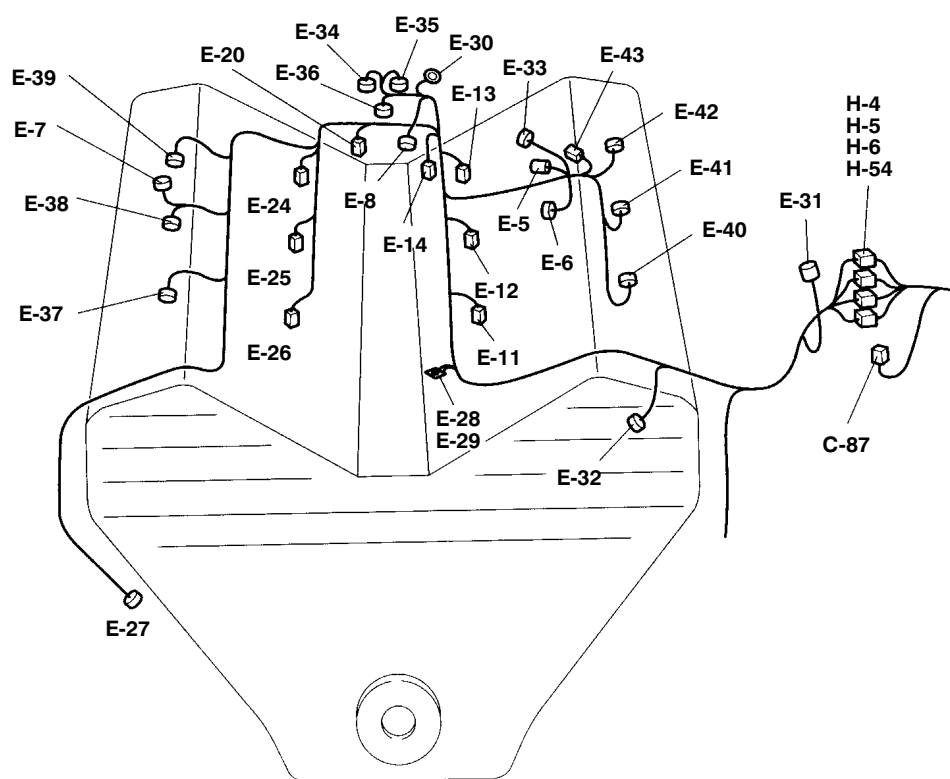

CONNECTOR AND WIRE HARNESS ROUTING

REAR BODY HARNESS
TAILGATE HARNES (LH)
TAILGATE HARNESS (RH)

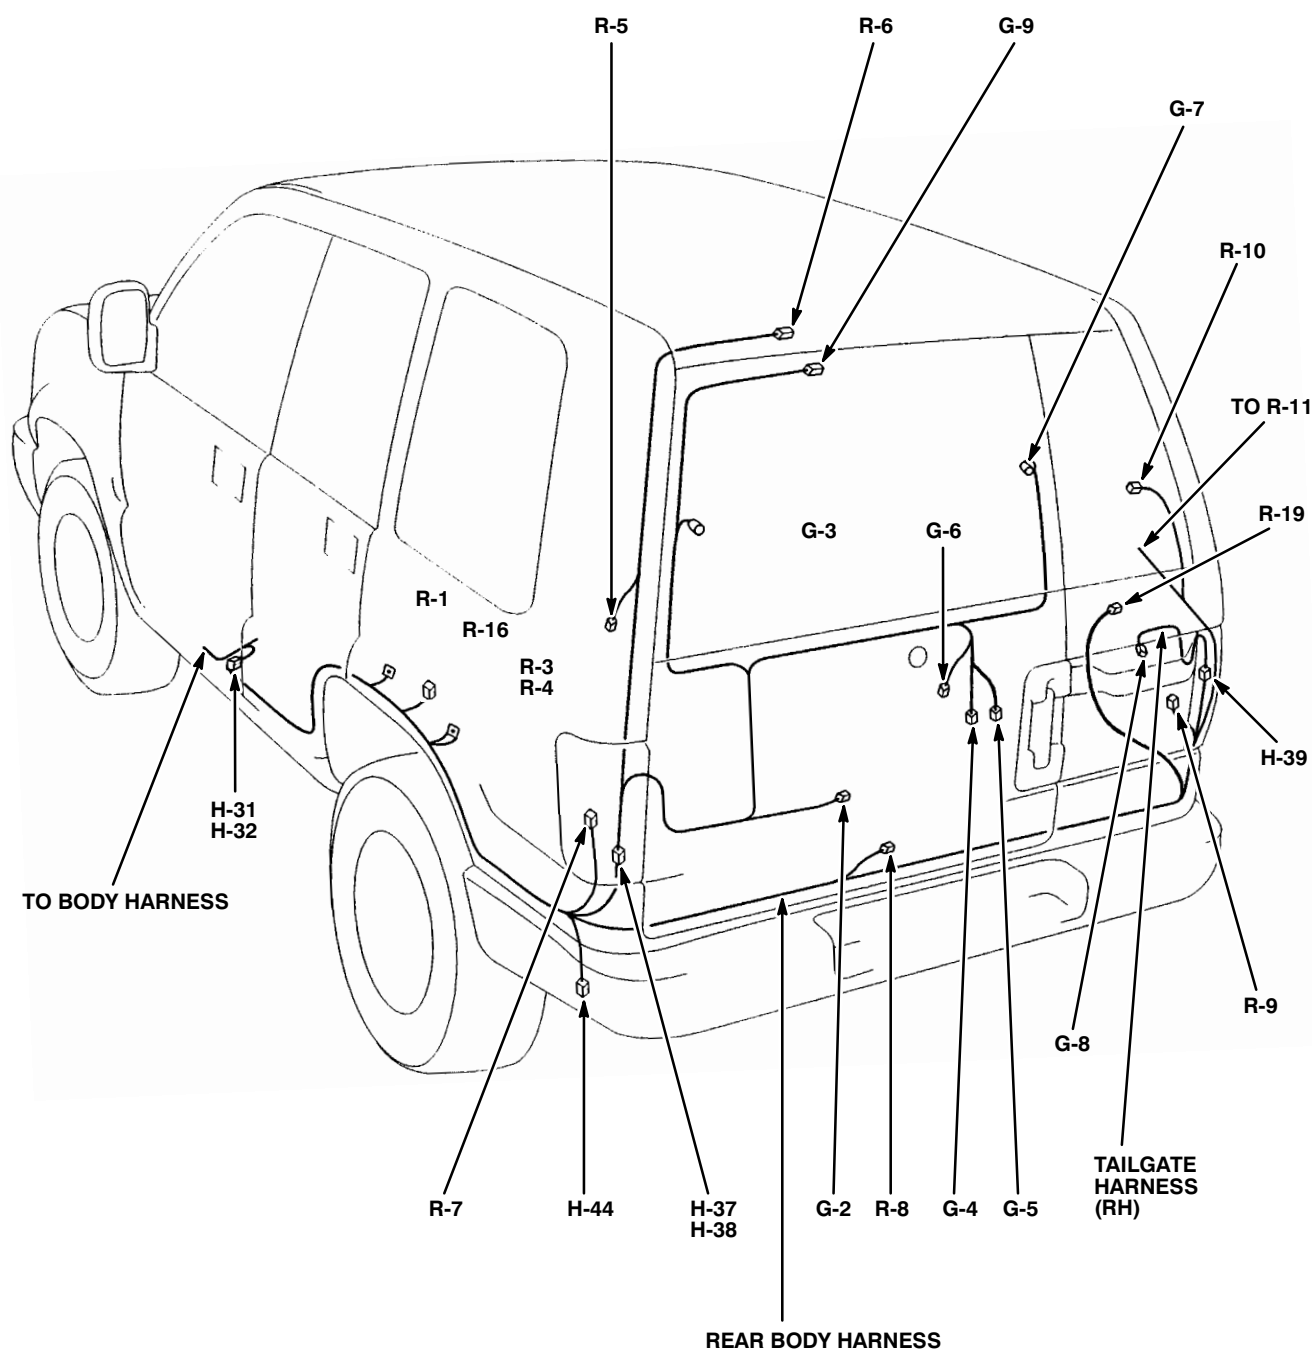

CONNECTOR AND WIRE HARNESS ROUTING

SRS HARNESS

