


POWER DISTRIBUTION

Component Index

- [Anti-theft Horn](#)
- [Dash Fuse Box](#)
- [ECM or PCM Main Relay](#)
- [Electronic Brake Control Module \(EBCM\)](#)
- [Engine or Powertrain Control Module \(ECM or PCM\)](#)
- [Fog Light Relay](#)
- [Fuel Pump Relay](#)
- [Fuse/Relay Box](#)
- [Generator](#)
- [Heater and A/C Relay](#)
- [Horn Relay](#)
- [Lighting Relay](#)
- [SRS Fuse Box](#)
- [Starter](#)
- [Starter Relay](#)
- [Starter Switch](#)
- [Taillight Relay](#)


POWER DISTRIBUTION

Circuit Schematic

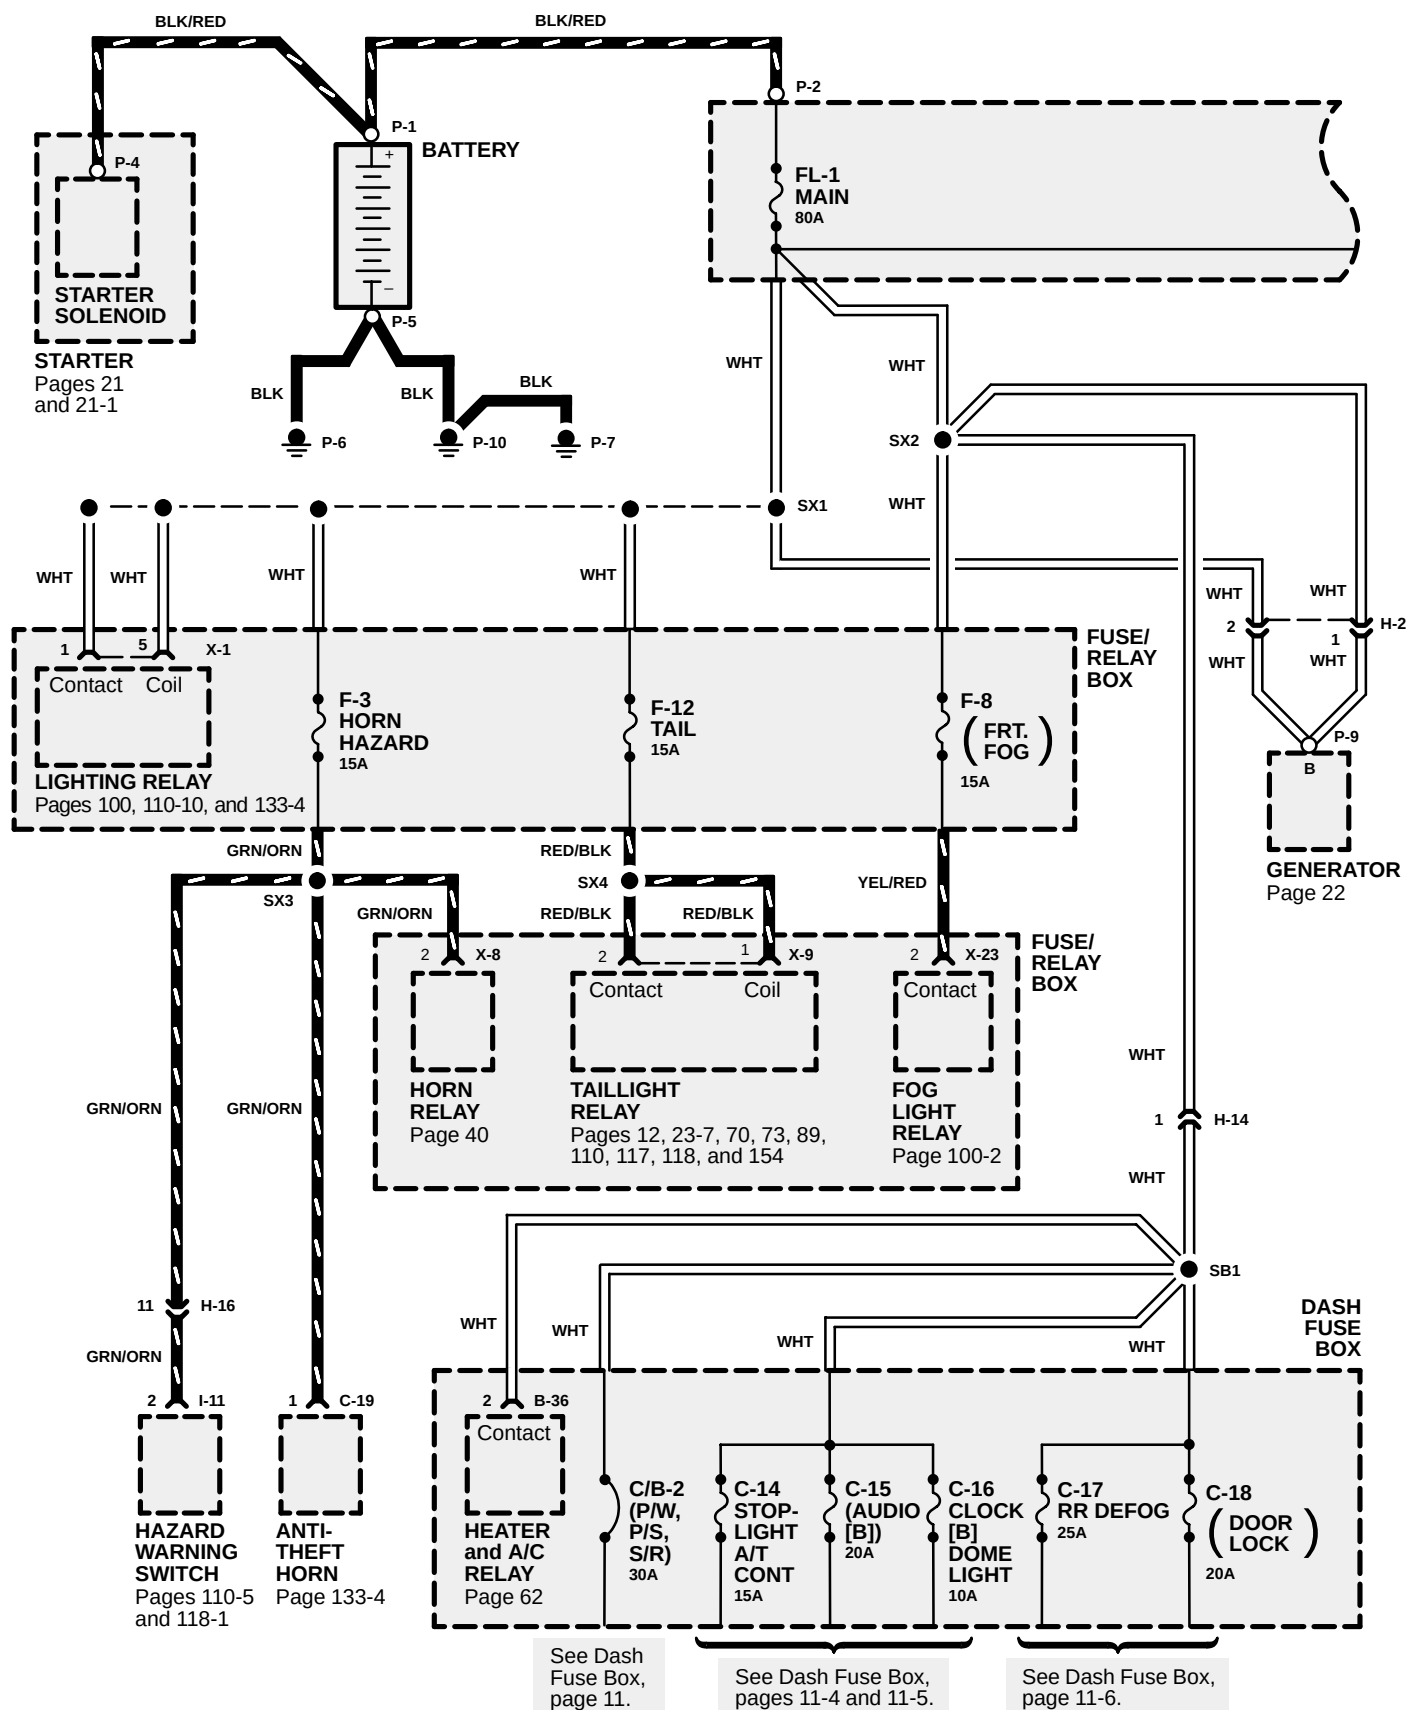


POWER DISTRIBUTION

Circuit Schematic

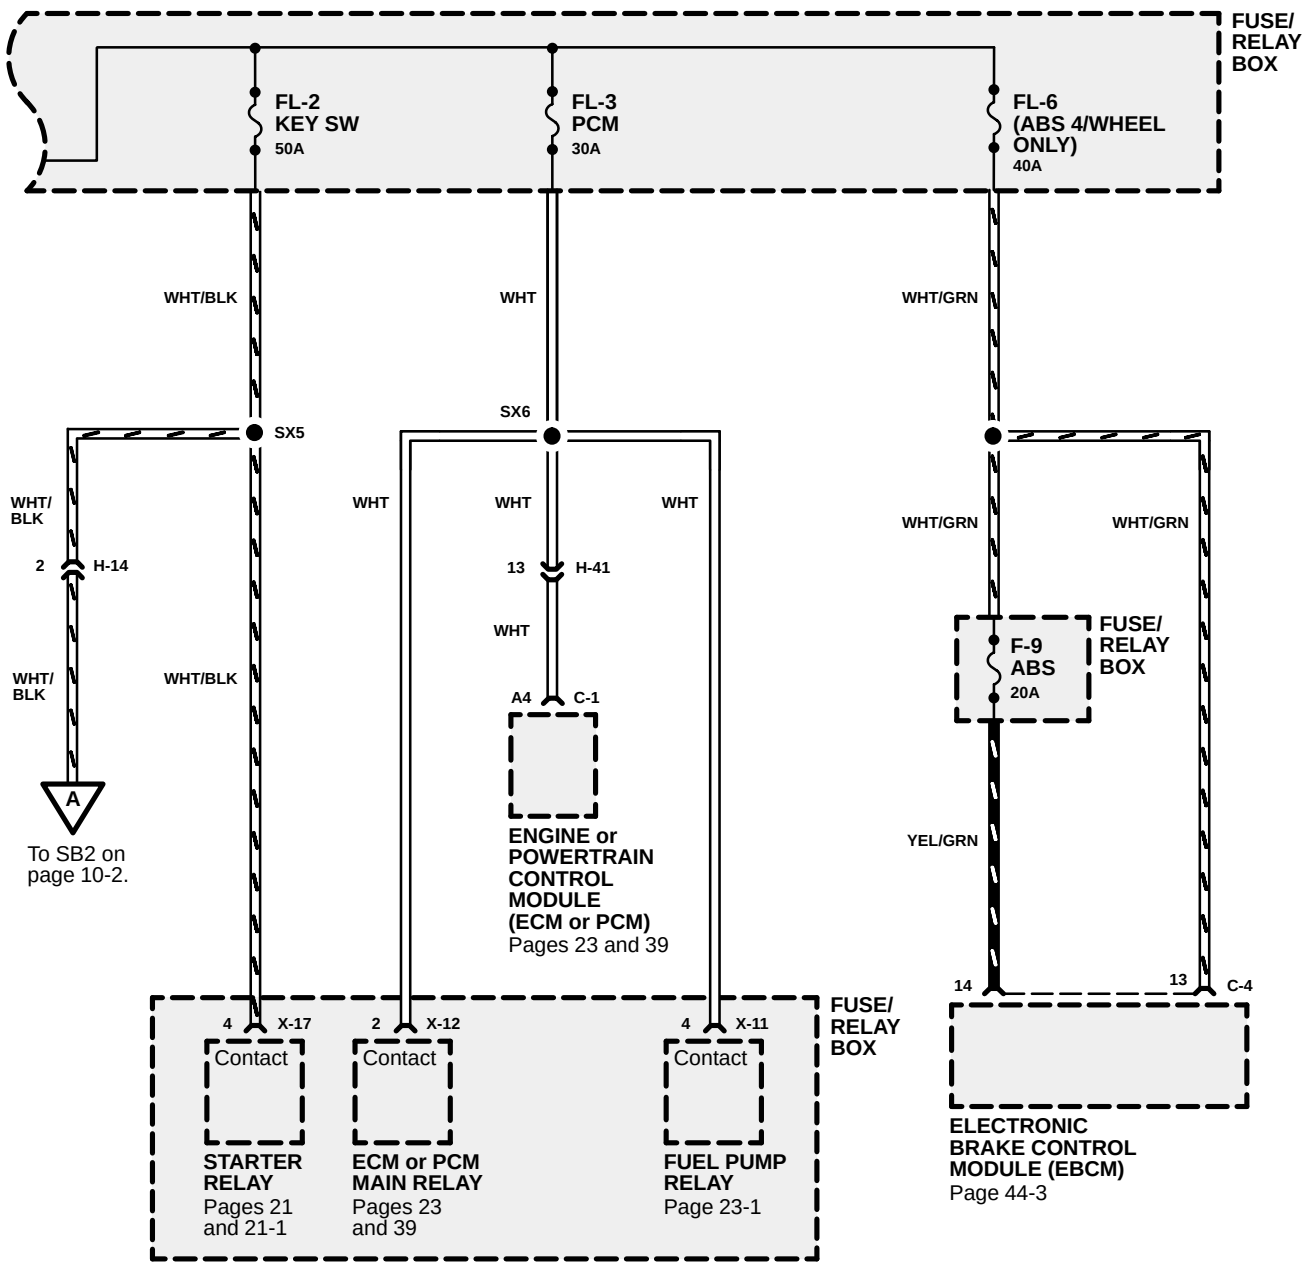


POWER DISTRIBUTION

Circuit Schematic

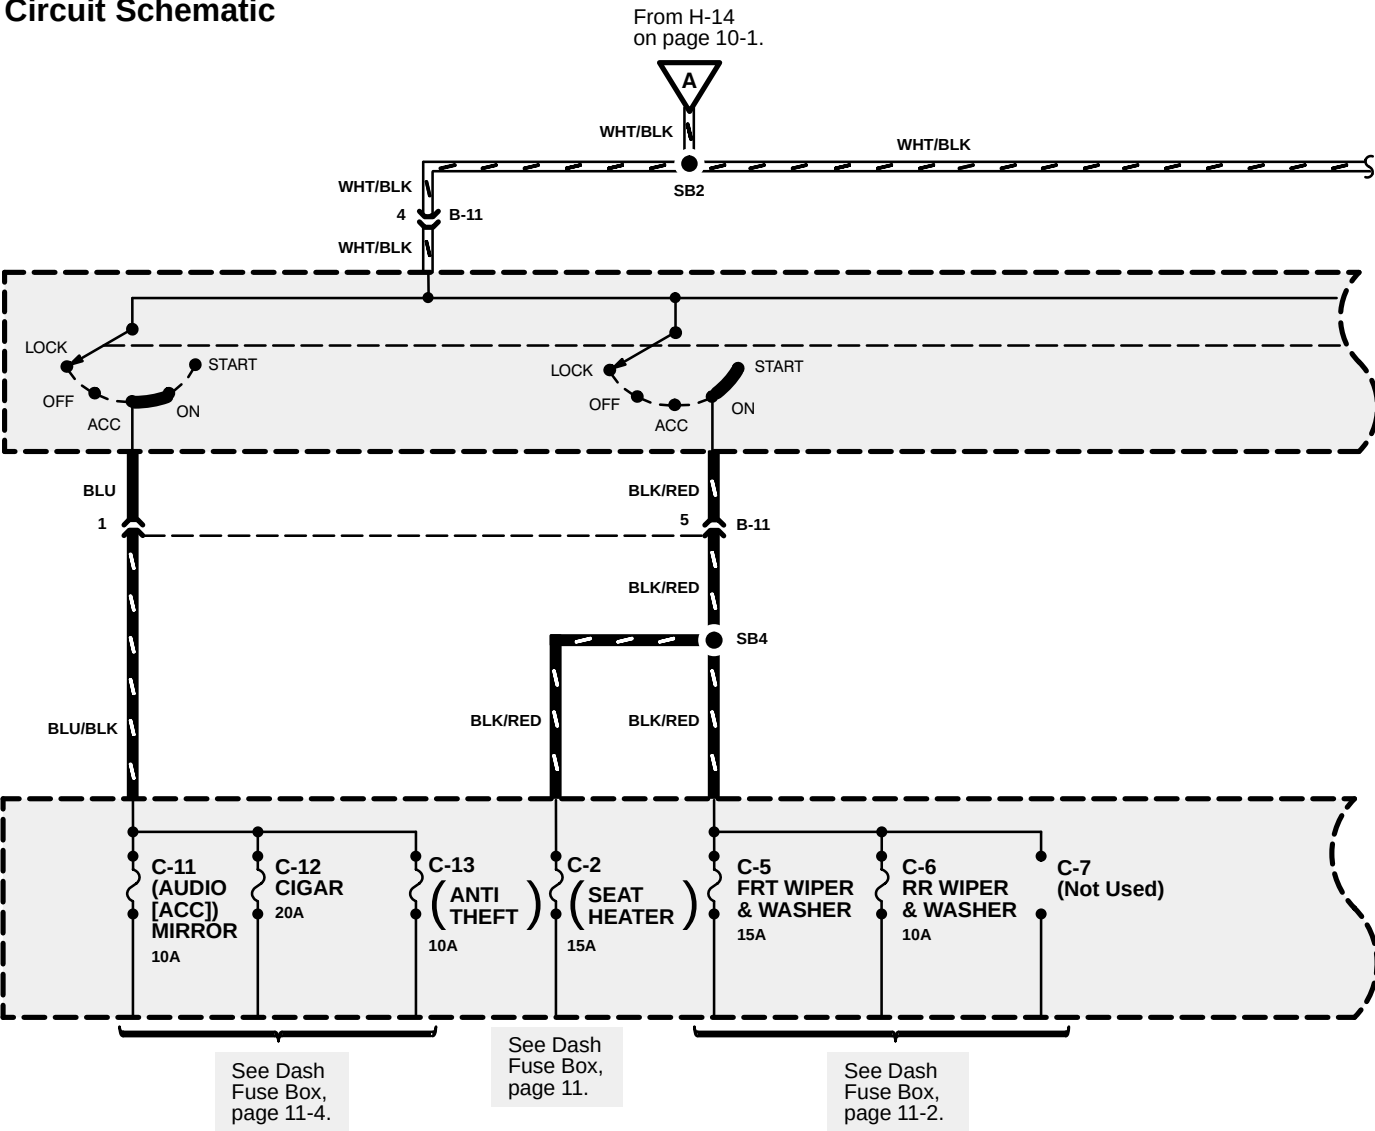

POWER DISTRIBUTION

Circuit Schematic

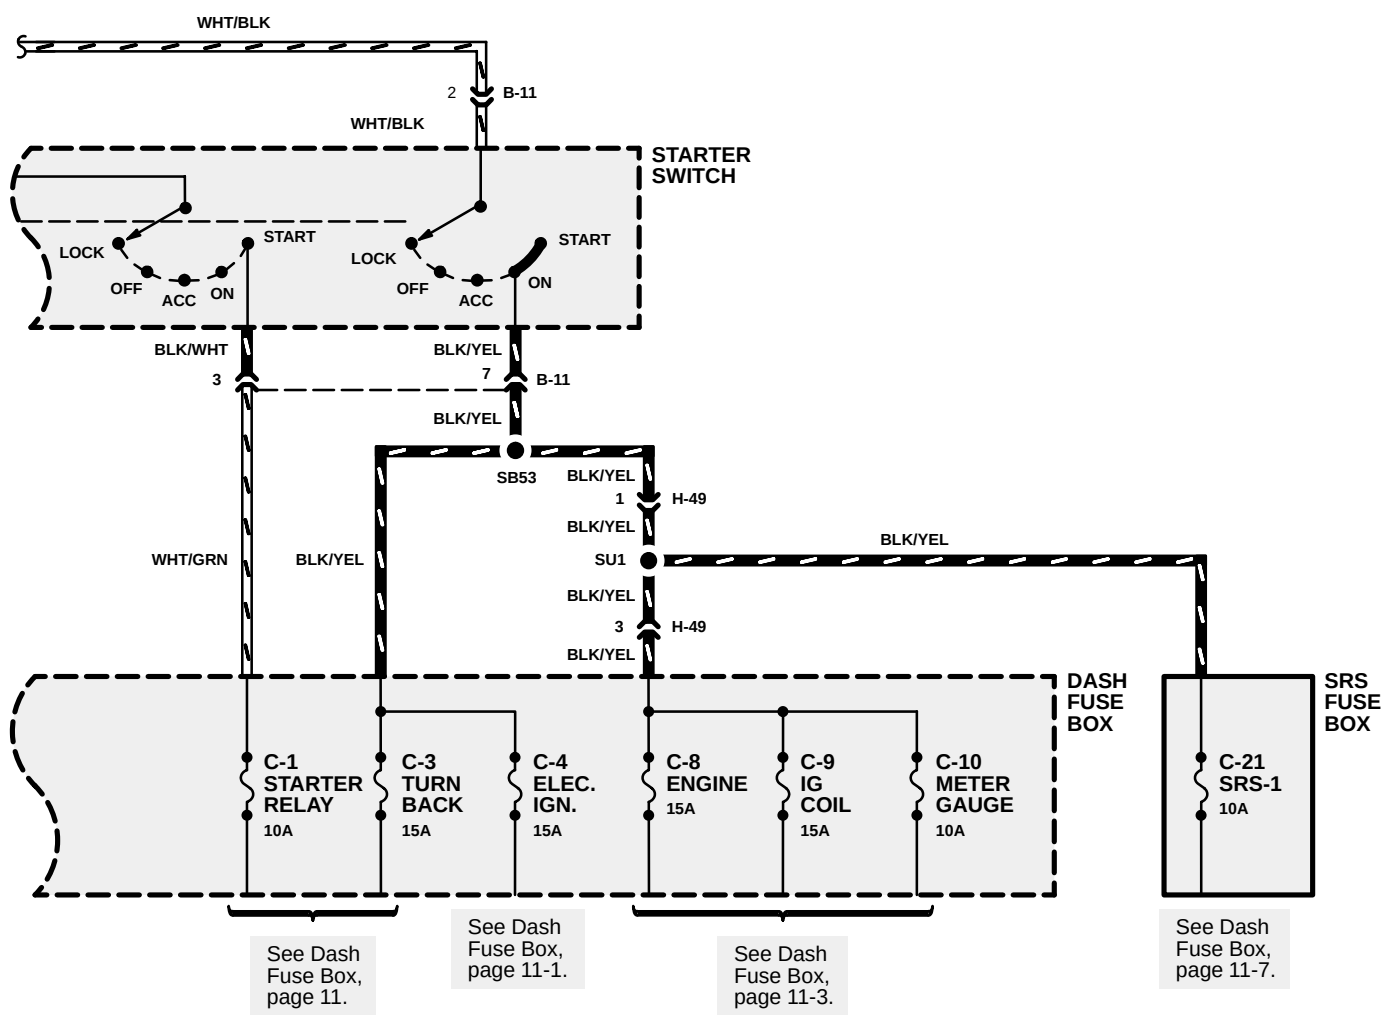

POWER DISTRIBUTION

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Anti-theft Horn	Right rear corner of engine compartment 48
Dash Fuse Box	Behind left dash side trim panel 55
ECM or PCM Main Relay	In fuse/relay box 38
Electronic Brake Control Module (EBCM)	Right front of engine compartment 41
Engine or Powertrain Control Module (ECM or PCM)	Behind front console 63
Fog Light Relay	In fuse/relay box 35
Fuel Pump Relay	In fuse/relay box 38
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 41
Generator	Lower right front of engine 5
Heater and A/C Relay	In dash fuse box 56
Horn Relay	In fuse/relay box 37
Lighting Relay	In fuse/relay box 35
SRS Fuse Box	On top of dash fuse box 68
Starter	Lower left rear of engine 24
Starter Relay	In fuse/relay box 38
Starter Switch	Underside of steering column 46
Taillight Relay	In fuse/relay box 35

Connector

B-11 (8-WHT)	Below I/P, right of steering column 58
H-2 (2-GRY)	Right side of engine compartment 40
H-14 (2-RED)	Below I/P, above right dash side trim panel, on bracket 115
H-16 (22-WHT)	Behind right dash side trim panel 120
H-41 (16-BLU)	Right front of engine compartment 31
H-49 (4-WHT)	On top of dash fuse box 68
I-10 (22-GRN)	On right top of meter assembly 53

Ground

P-6	Right side of engine compartment, on rear of battery tray 40
P-7	Lower right front of engine compartment 5
P-10	Lower right side of engine, near power steering pump

Terminal

P-2	In fuse/relay box 36
P-4	On starter solenoid 24