


DASH FUSE BOX

Component Index

4WD Control Unit	ECM or PCM Main Relay	No. 5 Ignition Coil
A/T Shift Indicator Control Unit	Electronic Brake Control Module (EBCM)	No. 6 Ignition Coil
Alarm and Relay Control Unit	Engine or Powertrain Control Module (ECM or PCM)	Power Window Relay
Anti-theft and Keyless Entry Control Unit	Evaporative Emission (EVAP) Canister Cut Valve	Rear Defogger Relay
Automatic Transmission Mode Switch	Evaporative Emission (EVAP) Canister Purge Valve	Rear Wiper Motor
Back-up Light Switch	Exhaust Gas Recirculation (EGR) Solenoid Valve	Shift Lock Controller
Brake Switch	Fuse/Relay Box	SRS Fuse Box
Clutch Start Switch	G Sensor - ABS	SRS Unit
Clutch Switch	Generator	Starter Switch
Condenser	Mass Air Flow (MAF) Sensor	T.O.D. Control Unit
Cornering Light Relay	No. 1 Ignition Coil	Transmission Switch 1-2
Cruise Control Unit	No. 2 Ignition Coil	Variable Intake Manifold Vacuum Switching Valve
Dash Fuse Box	No. 3 Ignition Coil	Vehicle Speed Sensor (VSS) (A/T)
Data Link Connector (DLC) C63 (16-BLK)	No. 4 Ignition Coil	Vehicle Speed Sensor (VSS) (M/T)
		Windshield Wiper Motor


DASH FUSE BOX

Circuit Schematic

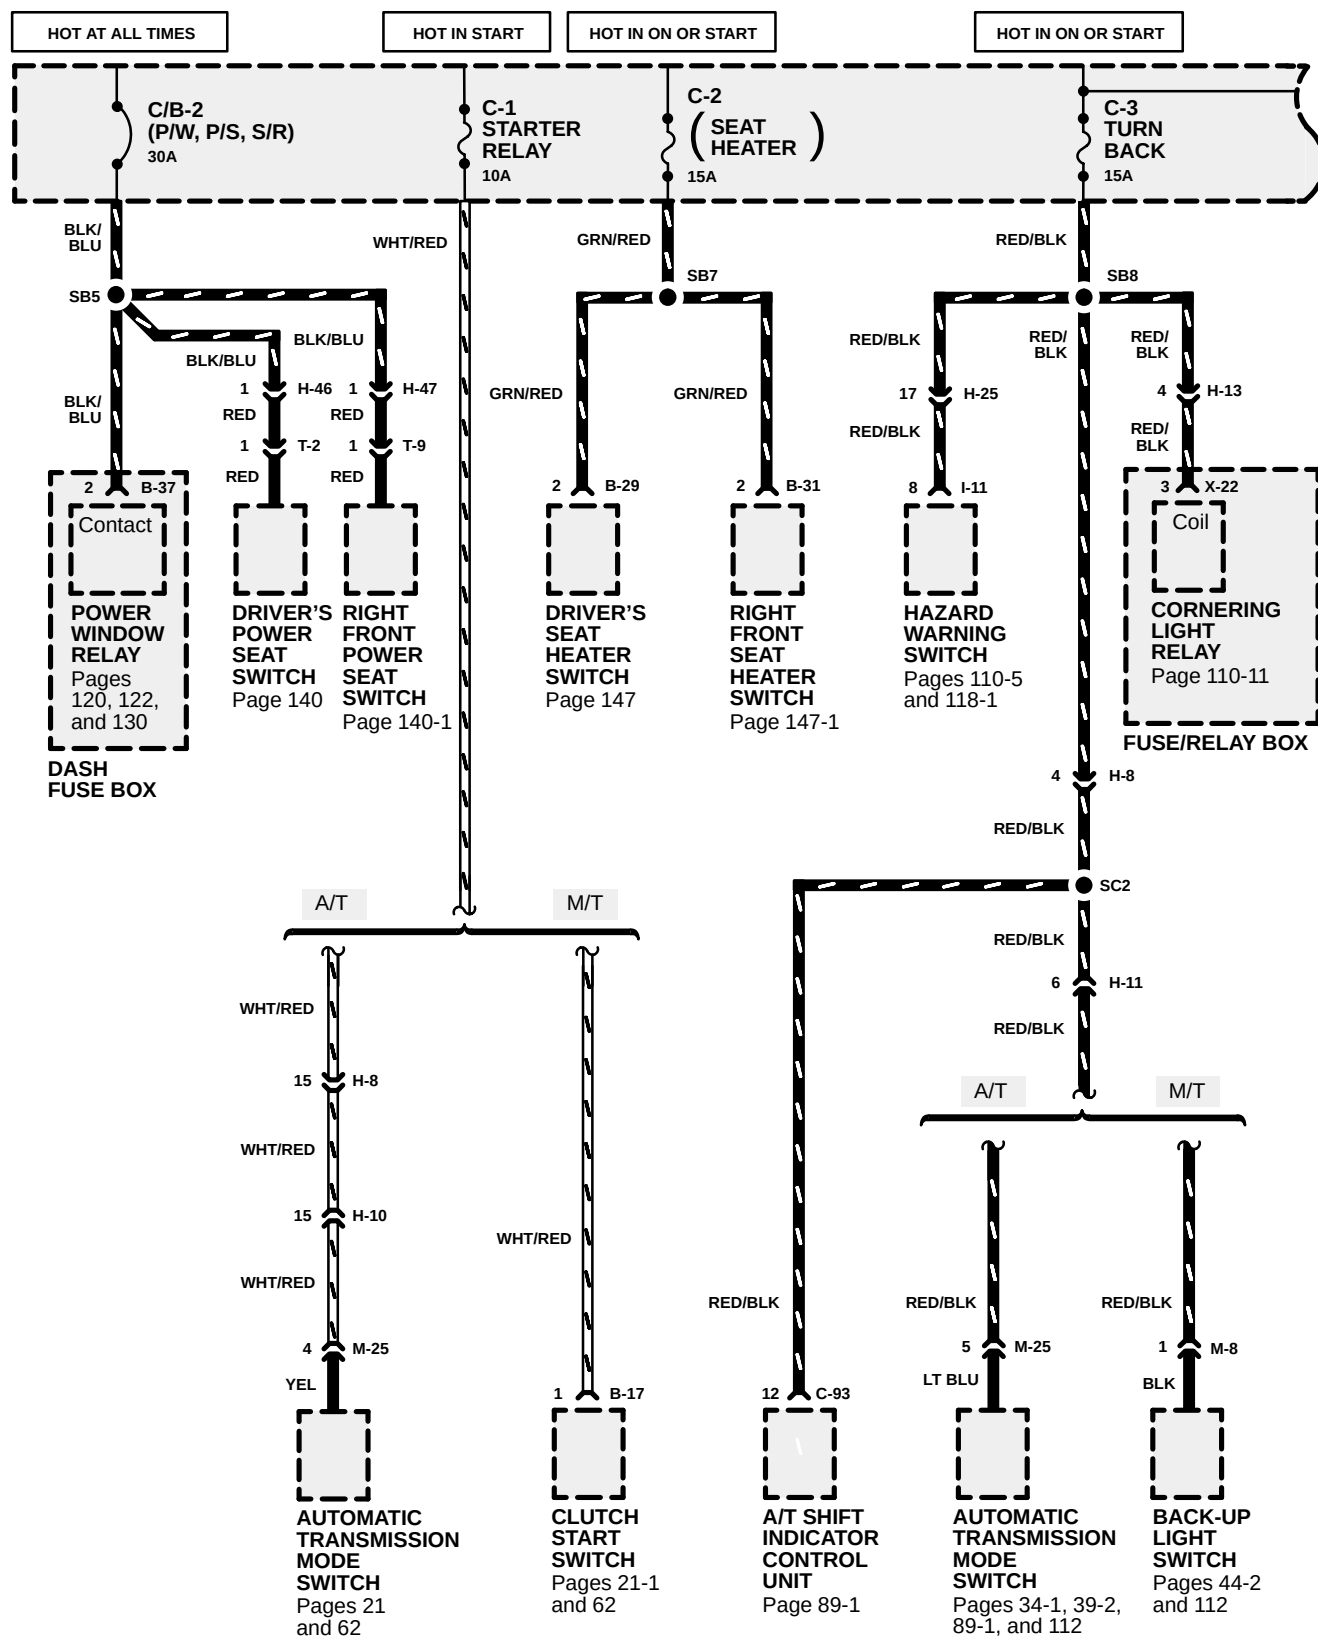


DASH FUSE BOX

Circuit Schematic

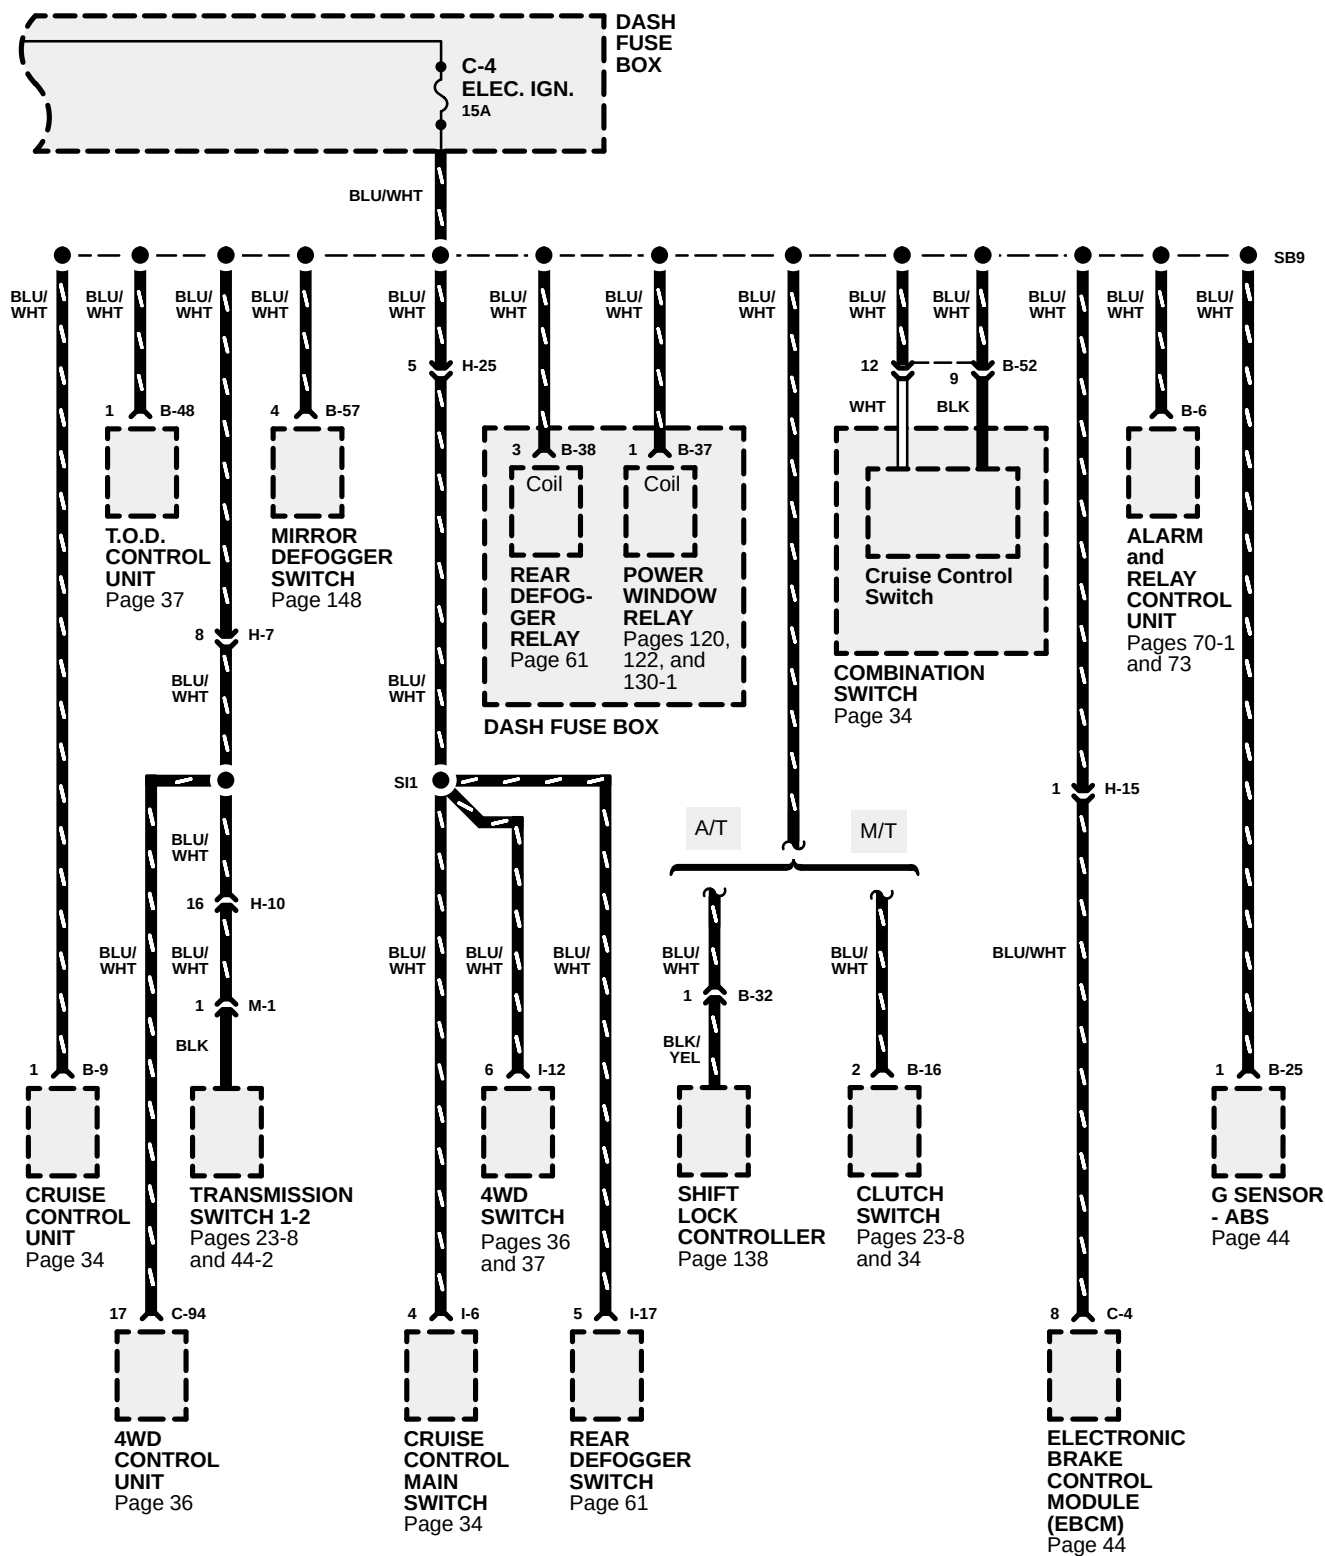


DASH FUSE BOX

Circuit Schematic

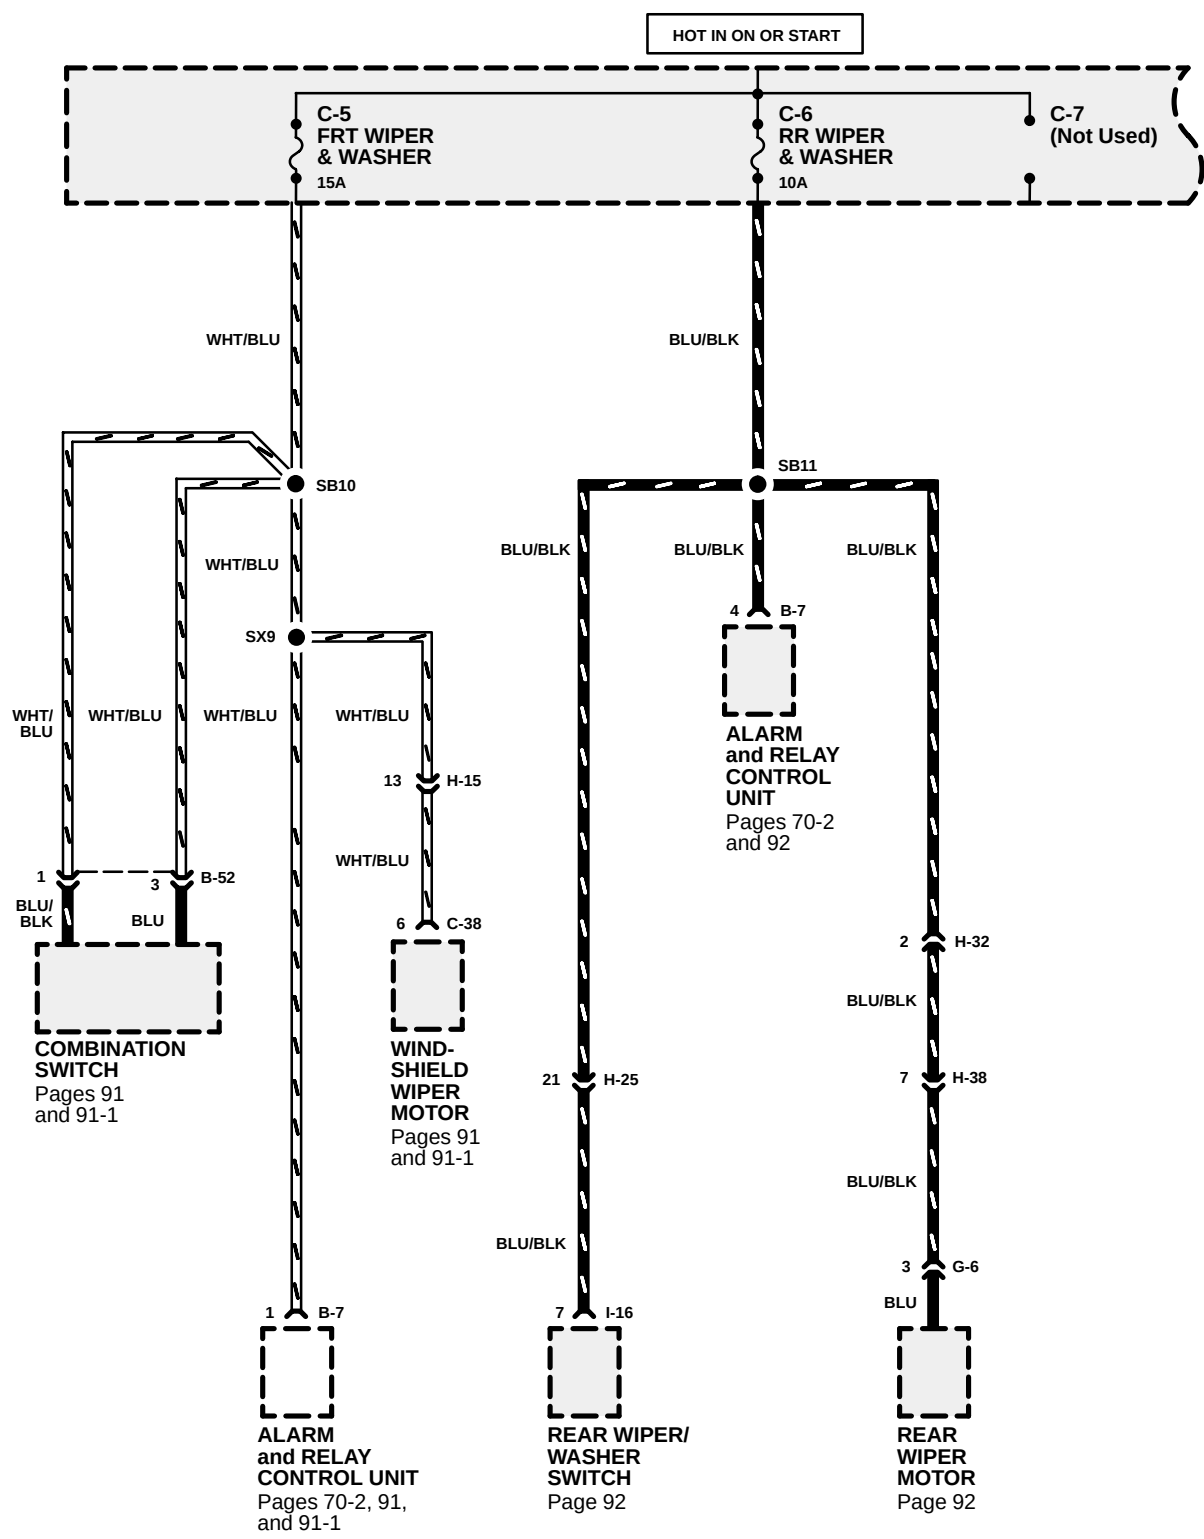


DASH FUSE BOX

Circuit Schematic

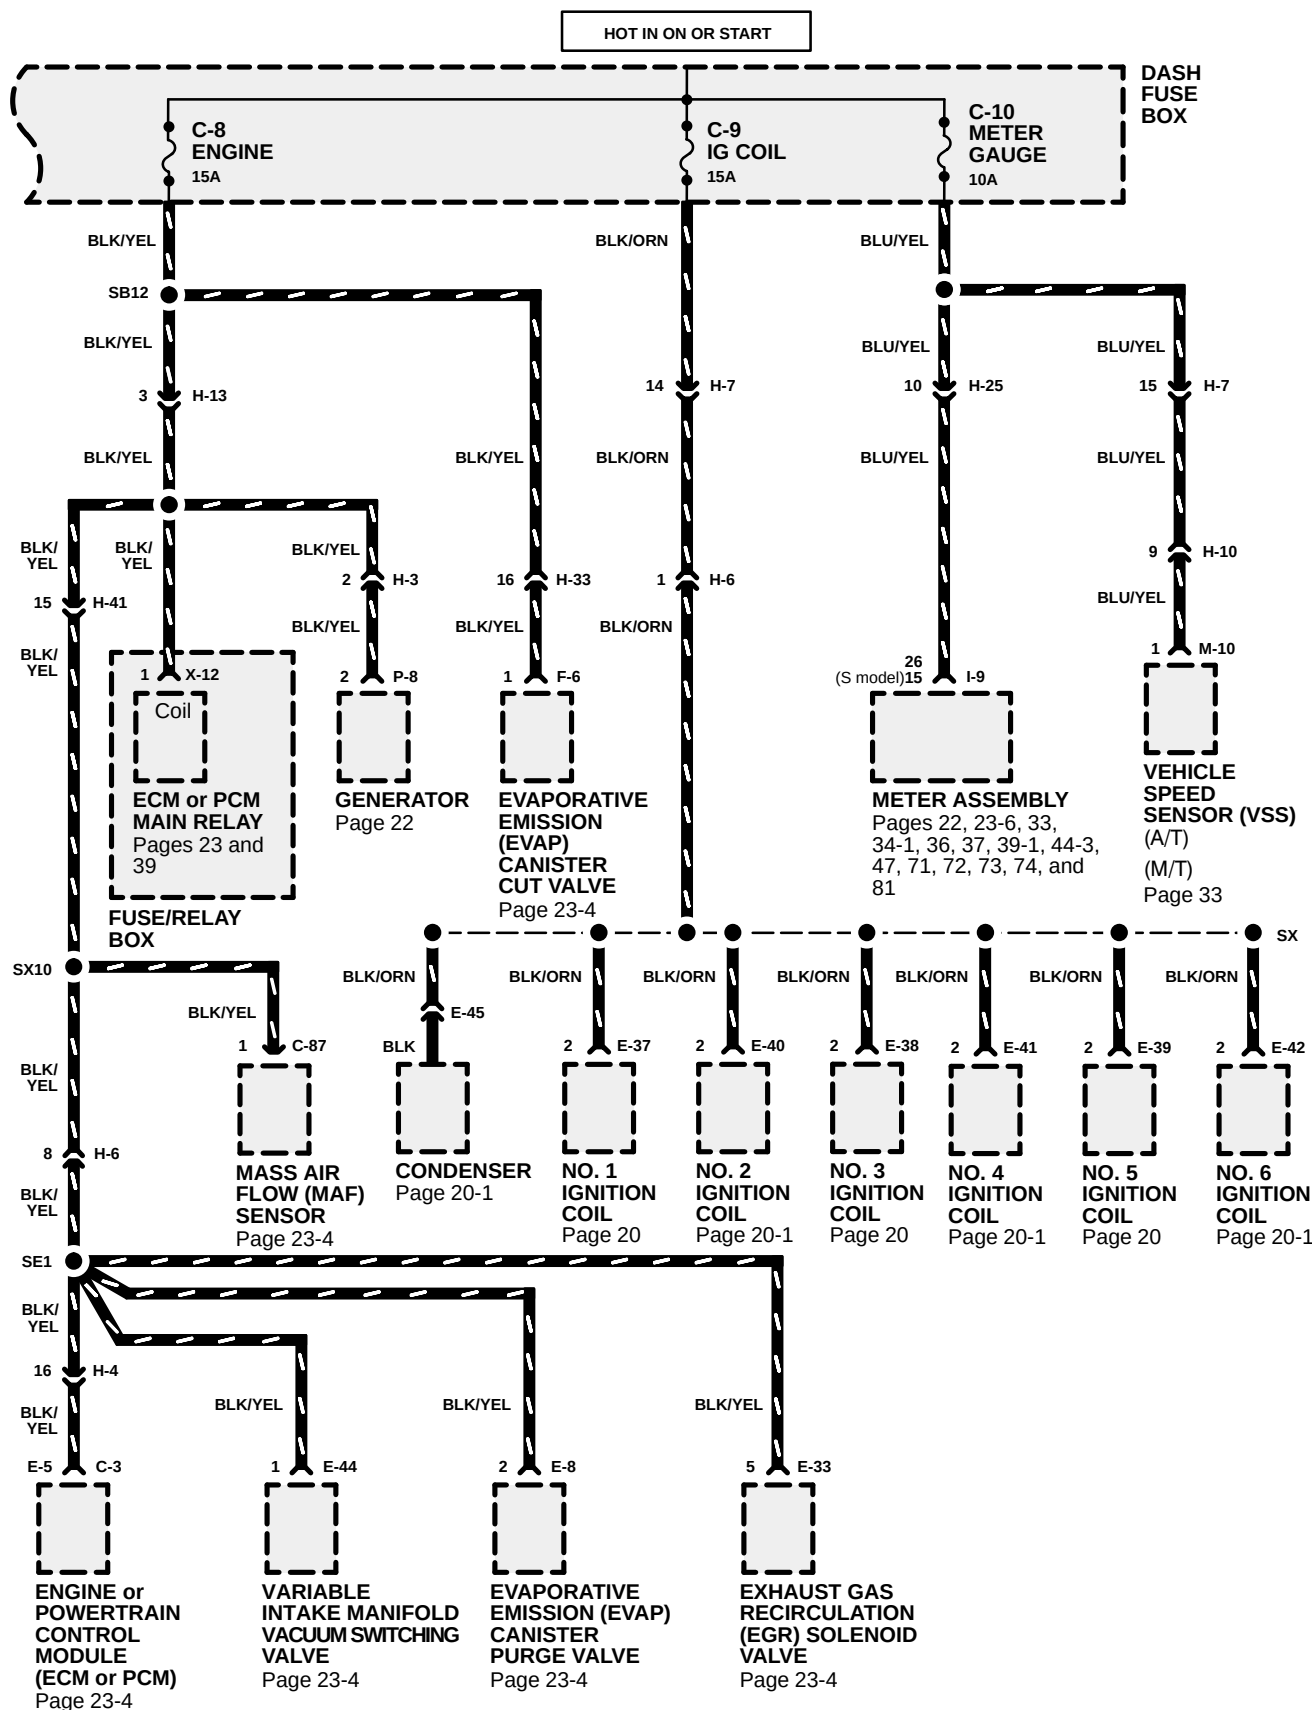


DASH FUSE BOX

Circuit Schematic

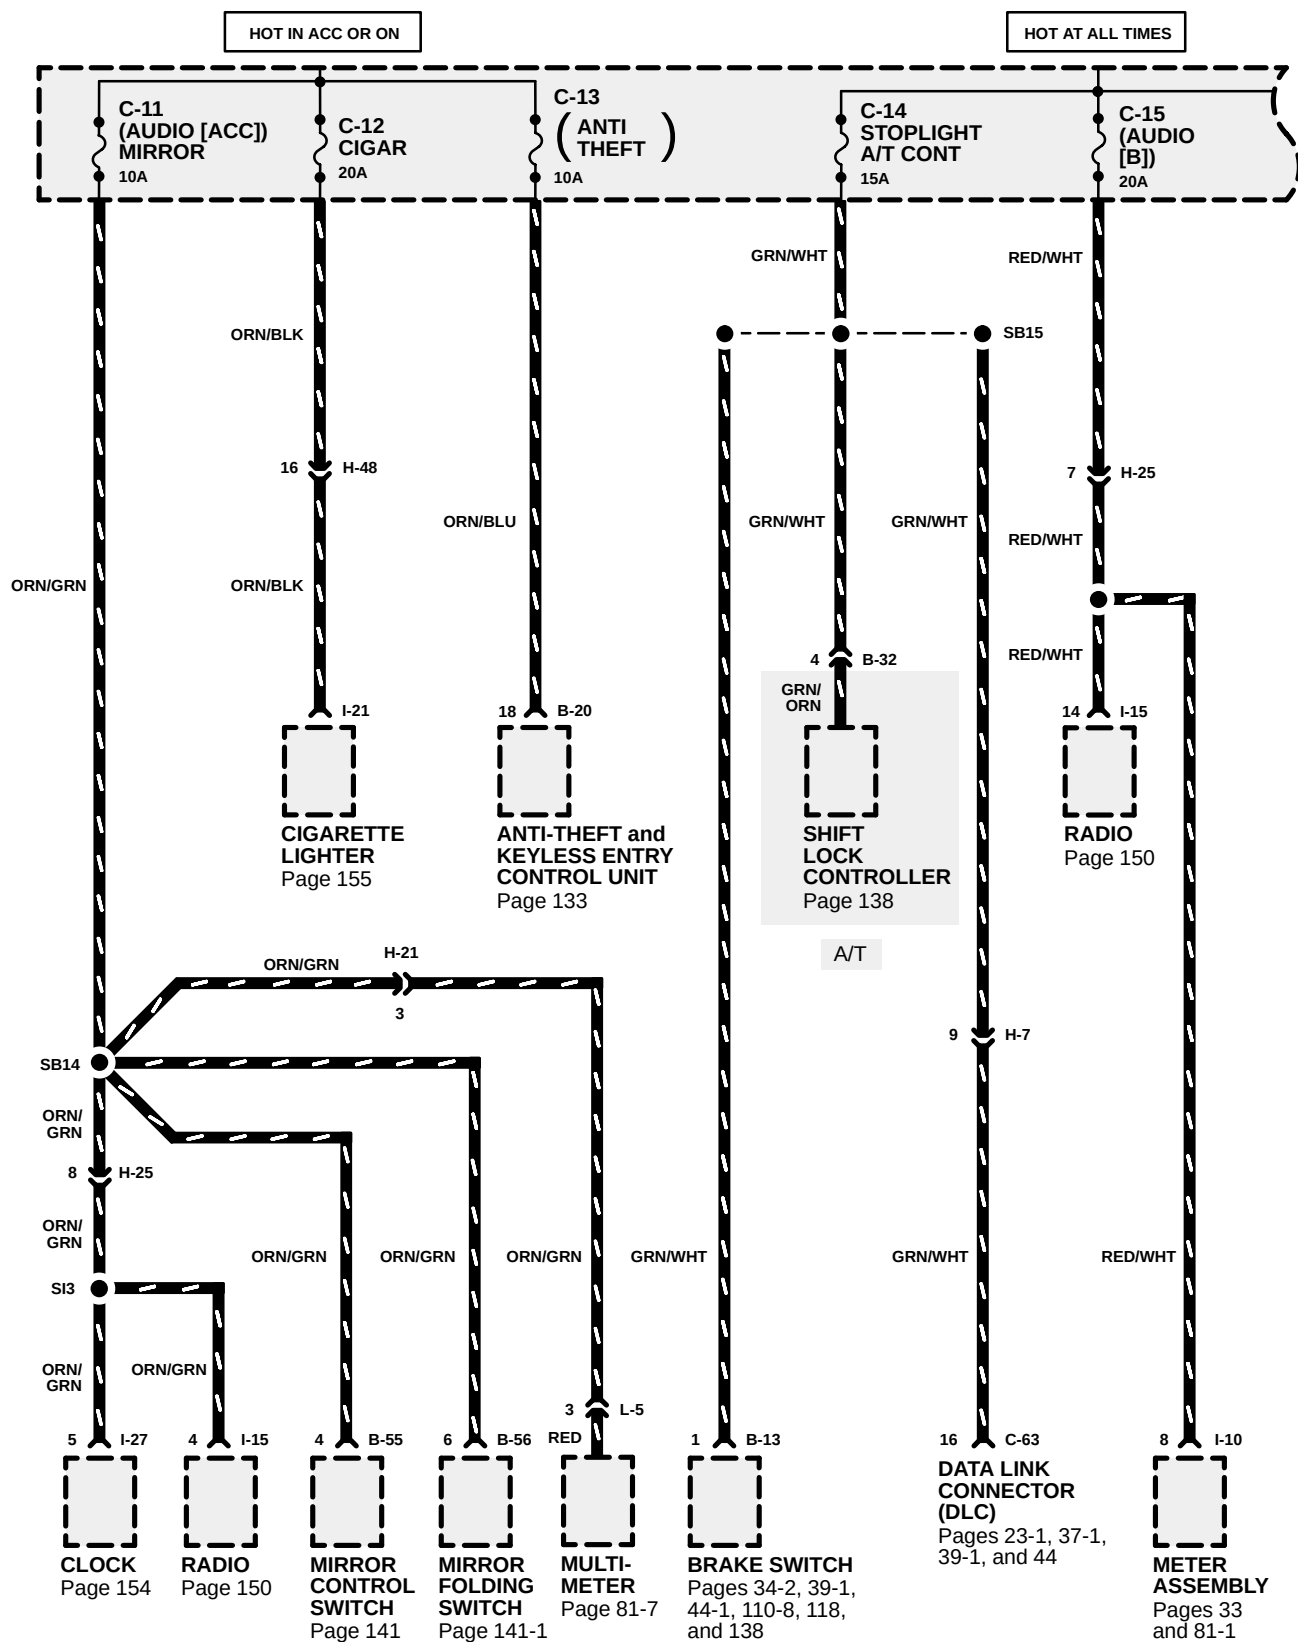


DASH FUSE BOX

Circuit Schematic

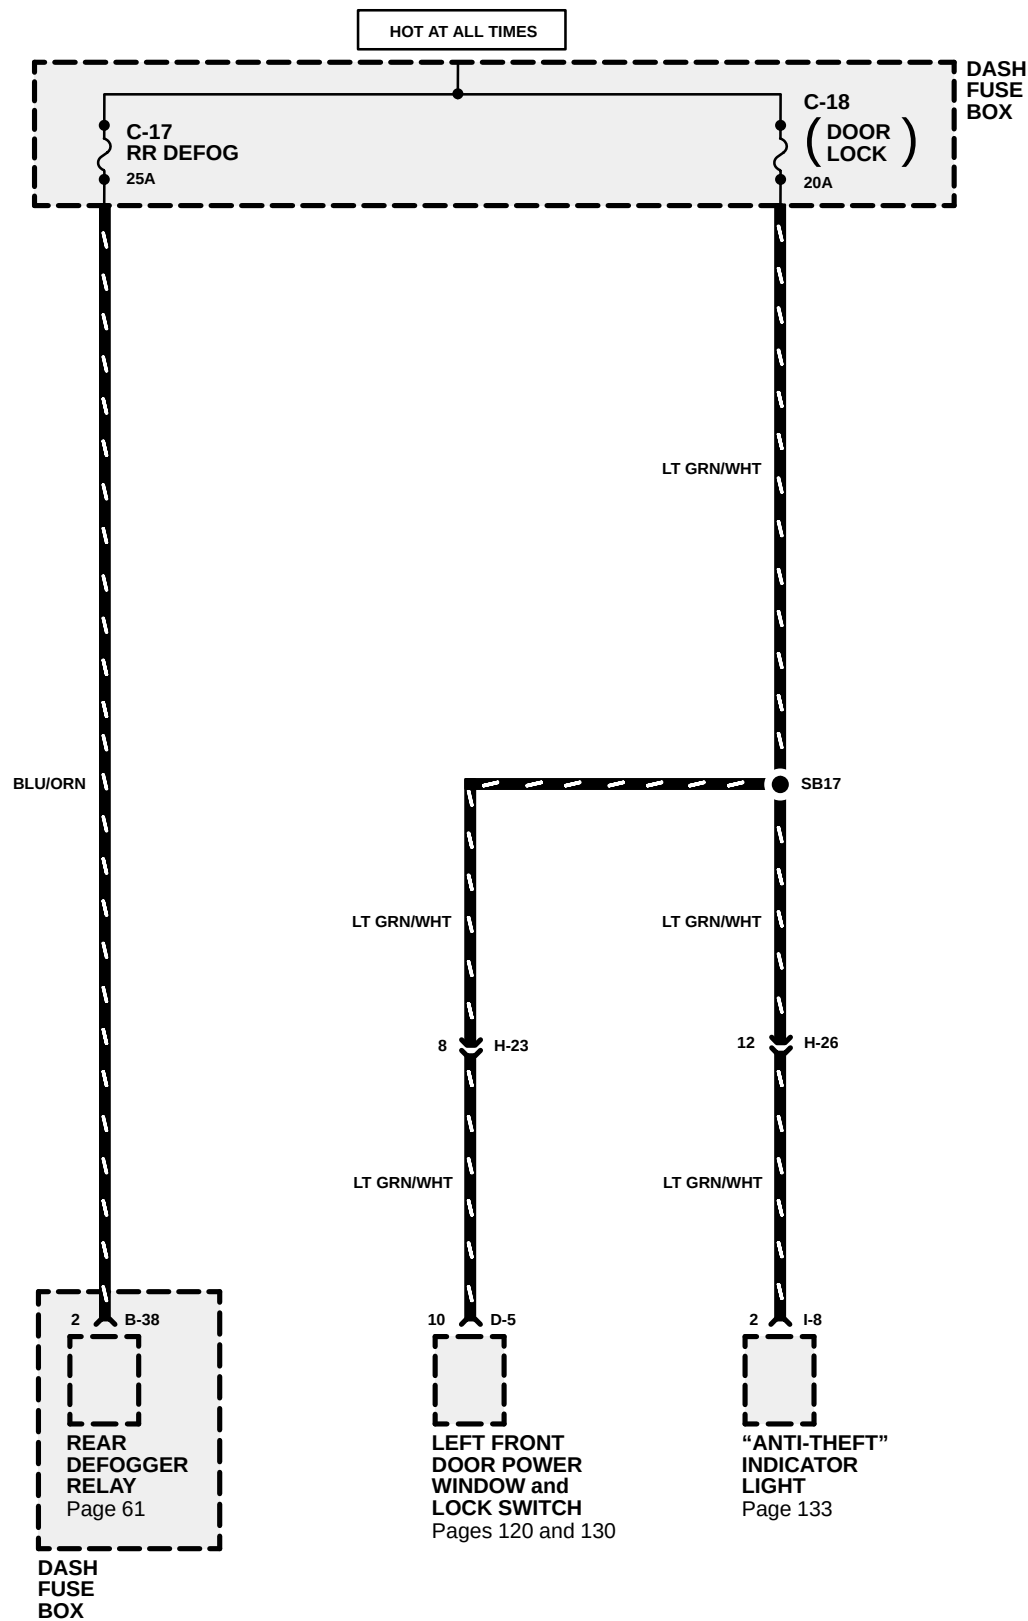

DASH FUSE BOX

Circuit Schematic

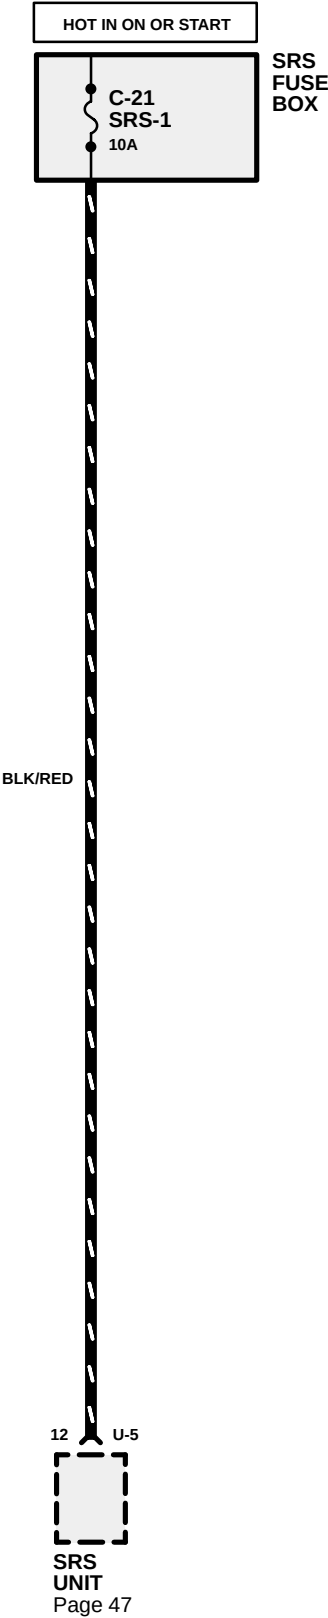

DASH FUSE BOX

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
4WD Control Unit	Behind front console 62
A/T Shift Indicator Control Unit	Below I/P, left of steering column 74
Alarm and Relay Control Unit	Behind right kick panel 116
Anti-theft and Keyless Entry Control Unit	Behind front console 62
Automatic Transmission Mode Switch	Beneath vehicle, on left side of transmission 43
Back-up Light Switch	Beneath vehicle, on right side of transmission 118
Brake Switch	Below I/P, on brake pedal support 74
Clutch Start Switch	Below I/P, top of clutch pedal support 57
Clutch Switch	Below I/P, top of clutch pedal support 57
Condenser	Top right front of engine 28
Cornering Light Relay	In fuse/relay box 35
Cruise Control Unit	Behind right kick panel 123
Dash Fuse Box	Behind left dash side trim panel 55
Data Link Connector (DLC) C63 (16-BLK)	Left I/P lower cover, behind access cover 47
ECM or PCM Main Relay	In fuse/relay box 38
Electronic Brake Control Module (EBCM)	Right front of engine compartment 41
Engine or Powertrain Control Module (ECM or PCM)	Behind front console 63
Evaporative Emission (EVAP) Vacuum Switching Valve	On left rear of engine 32
Evaporative Emission (EVAP) Canister Cut Valve	Underneath vehicle, above right side of rear axle 130
Evaporative Emission (EVAP) Canister Purge Valve	Top left front of engine 22
Exhaust Gas Recirculation (EGR) Solenoid Valve	Top right rear of engine 16
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 41
G Sensor - ABS	Beneath rear of center console 126
Generator	Lower right front of engine 5
Mass Air Flow (MAF) Sensor	Left front corner of engine compartment 13
No. 1 Ignition Coil	Right side of engine 11
No. 2 Ignition Coil	Left side of engine 12
No. 3 Ignition Coil	Right side of engine 11
No. 4 Ignition Coil	Left side of engine 12
No. 5 Ignition Coil	Right side of engine 11
No. 6 Ignition Coil	Left side of engine 12
Power Window Relay	In dash fuse box 56
Rear Defogger Relay	In dash fuse box 56
Rear Wiper Motor	Inside left tailgate door, behind trim pad 91
Shift Lock Controller	Below front console 65

Component Location Index

(Refer to Section 201 for photographs.)

Component (cont'd)	Photo No.
SRS Fuse Box	On top of dash fuse box 68
SRS Unit	Behind front console 61
Starter Switch	Underside of steering column 46
T.O.D. Control Unit	Below right front seat 125
Transmission Switch 1-2	Beneath vehicle, on right side of transmission 15
Vehicle Speed Sensor (VSS)	
(A/T)	Beneath center of vehicle, on rear of transmission 129
Vehicle Speed Sensor (VSS)	
(M/T)	Beneath center of vehicle, on rear of transmission 119
Windshield Wiper Motor	Right rear corner of engine compartment 45

Connector

B-11 (8-WHT)	Below I/P, right of steering column 58
B-32 (6-WHT)	Below rear of front console 66
B-52 (14-BLK)	Below I/P, right of steering column 58
D-7 (2-BLK)	Inside left front door, behind trim pad 77
D-18 (2-BLK)	Inside right front door, behind trim pad 77
D-24 (2-BLK)	Inside rear of left rear door, behind door courtesy light 83
D-29 (2-BLK)	Inside rear of right rear door, behind door courtesy light 83
E-45 (1-BLK)	Top right front of engine
G-6 (4-WHT)	Inside left tailgate door, behind trim pad 91
H-3 (3-BLK)	Right side of engine compartment 40
H-4 (16-BLK)	Left side of engine compartment 33
H-6 (16-BLU)	Left side of engine compartment 33
H-7 (20-BRN/WHT)	Below I/P, above left dash side trim panel, on bracket 69
H-8 (16-WHT)	Below I/P, above left dash side trim panel, on bracket 70
H-10 (16-BLU)	Left front of engine compartment 27
H-11 (16-BLK)	Left front of engine compartment 27
H-13 (6-GRY)	Below I/P, above right dash side trim panel, on bracket 100
H-15 (14-WHT)	Below I/P, above right dash side trim panel, on bracket 115
H-18 (18-WHT)	Behind right dash side trim panel, in access hole 54
H-21 (8-WHT)	Below I/P, above right dash side trim panel, on bracket 100
H-22 (18-WHT)	Behind left dash side trim panel, in access hole 54
H-23 (8-BLK)	Behind left dash side trim panel, in access hole 54
H-25 (22-BLU)	Below I/P, above left dash side trim panel, on bracket 71
H-26 (20-WHT)	Below I/P, above left dash side trim panel, on bracket 71
H-32 (22-WHT)	Below left front seat 105
H-33 (20-WHT)	In floor, below right front seat 110
H-34 (6-WHT)	In right center pillar 81
H-38 (10-WHT)	Left rear of luggage room 89
H-41 (16-BLU)	Right front of engine compartment 31
H-45 (6-BLK/WHT)	Center of roof, above map lights 85
H-46 (6-WHT)	Below left side of left front seat 105
H-47 (6-WHT)	Below right side of right front seat 110
H-48 (16-BLK)	Behind right dash side trim panel 120
I-9 (30-GRN)	On left top of meter assembly 53

DASH FUSE BOX

Component Location Index

(Refer to Section 201 for photographs.)

<u>Connector (cont'd)</u>		Photo No.
L-2 (1-WHT)	Center front of roof, above map lights	85
L-3 (2-WHT)	Center of roof, above dome light	86
L-5 (6-WHT)	Above multi-meter	26
M-1 (2-GRY)	Beneath center of vehicle, top right side of transmission	15
M-8 (2-BLU/GRY)	Beneath center of vehicle, top right side of transmission	118
M-25 (8-BLK)	On left side of transmission	52
R-6 (3-WHT)	Center rear of roof	87
T-2 (2-WHT)	Underside of driver's seat	108
T-9 (2-WHT)	Underside of right front seat	112