


ALARM AND RELAY CONTROLS

Component Index

- Alarm and Relay Control Unit
- Dash Fuse Box
- Driver's Seat Belt Switch
- Fuse/Relay Box
- Starter Switch
- Taillight Relay


ALARM AND RELAY CONTROLS

Circuit Schematic

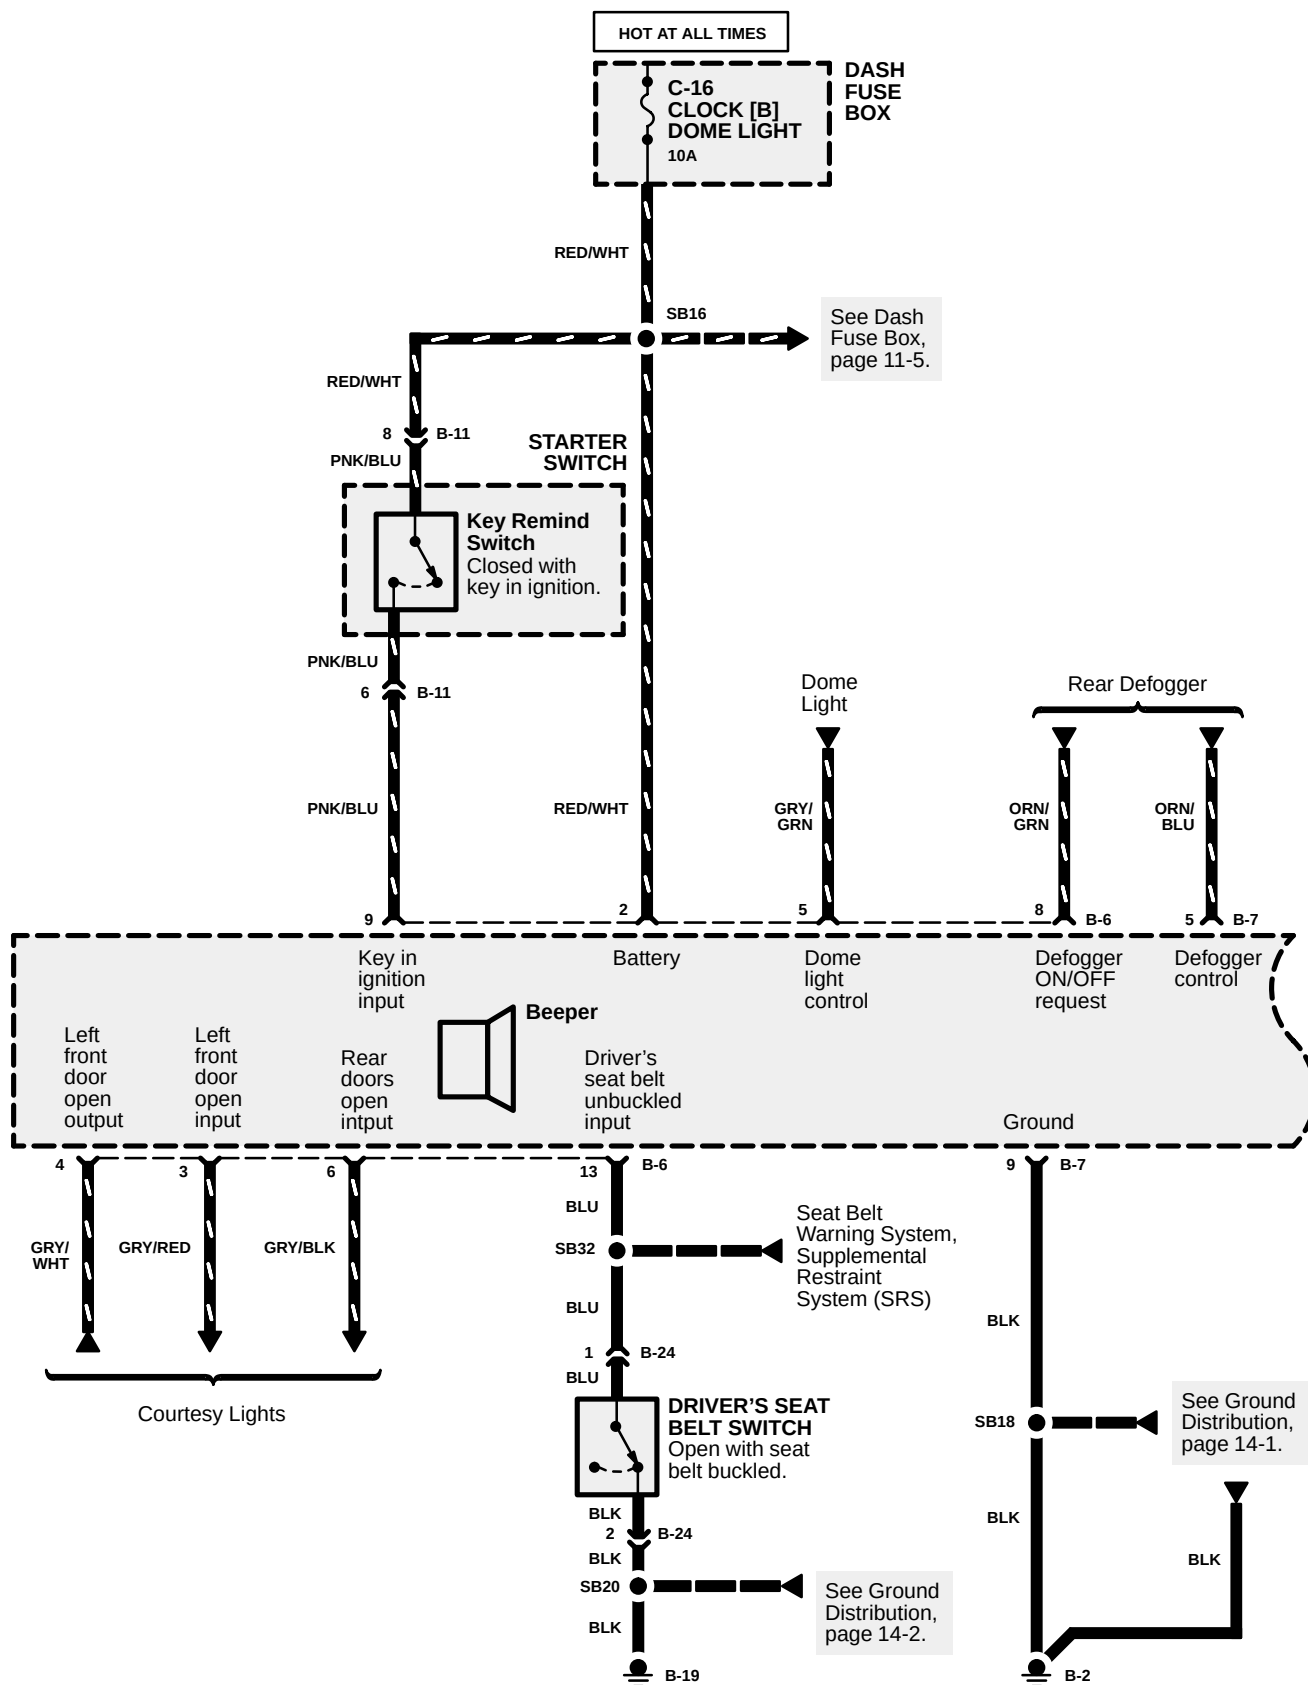


ALARM AND RELAY CONTROLS

Circuit Schematic

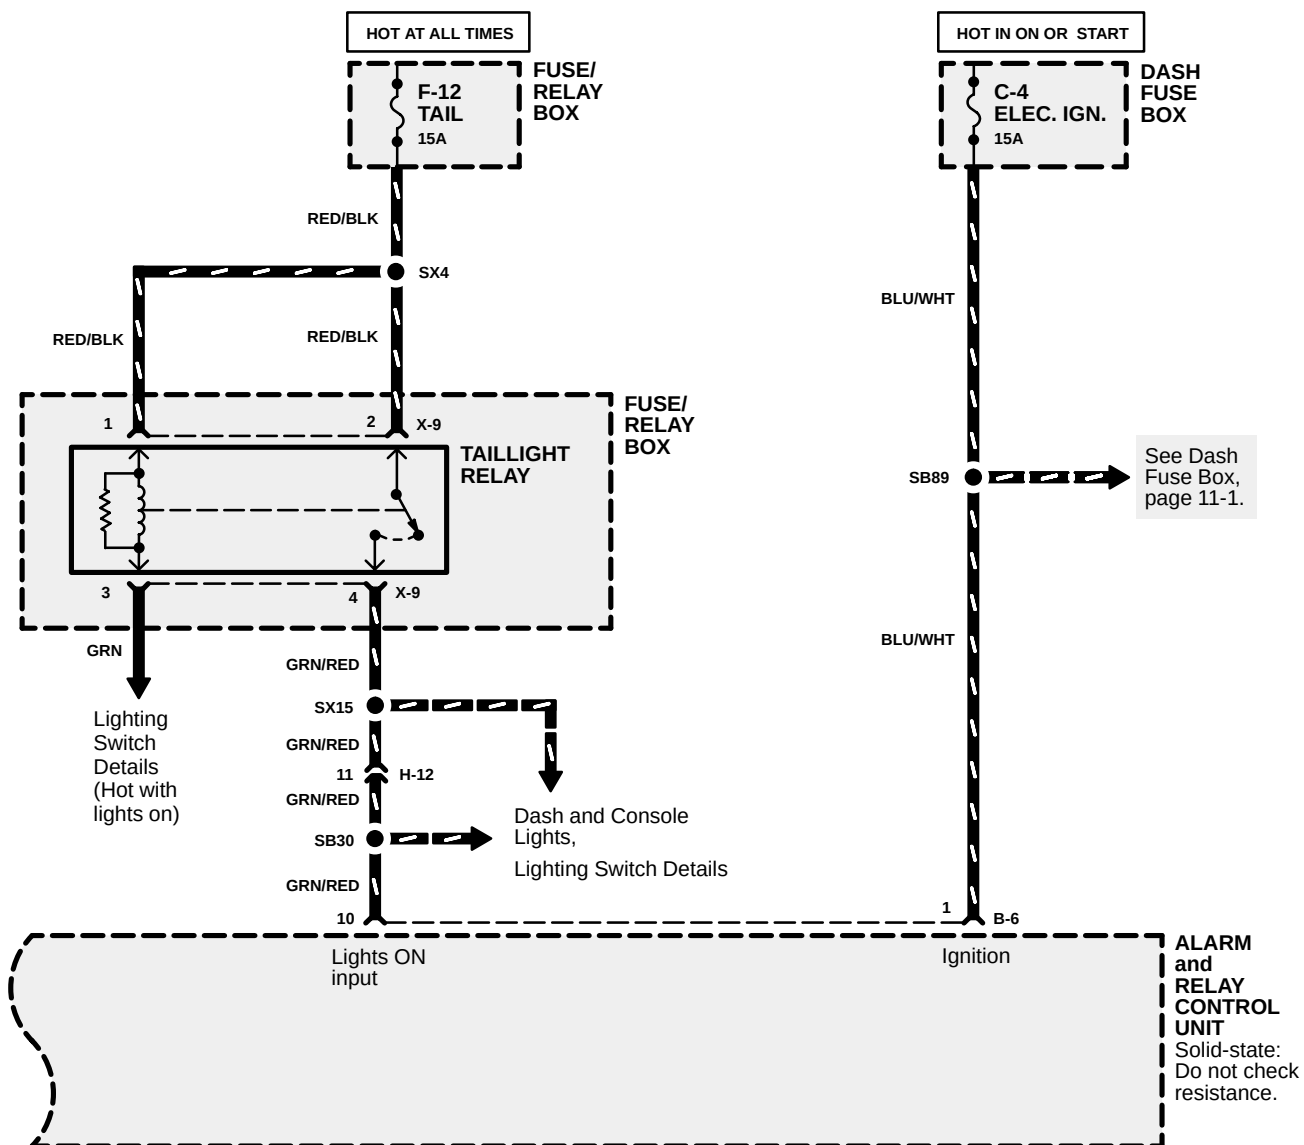

ALARM AND RELAY CONTROLS

Circuit Schematic

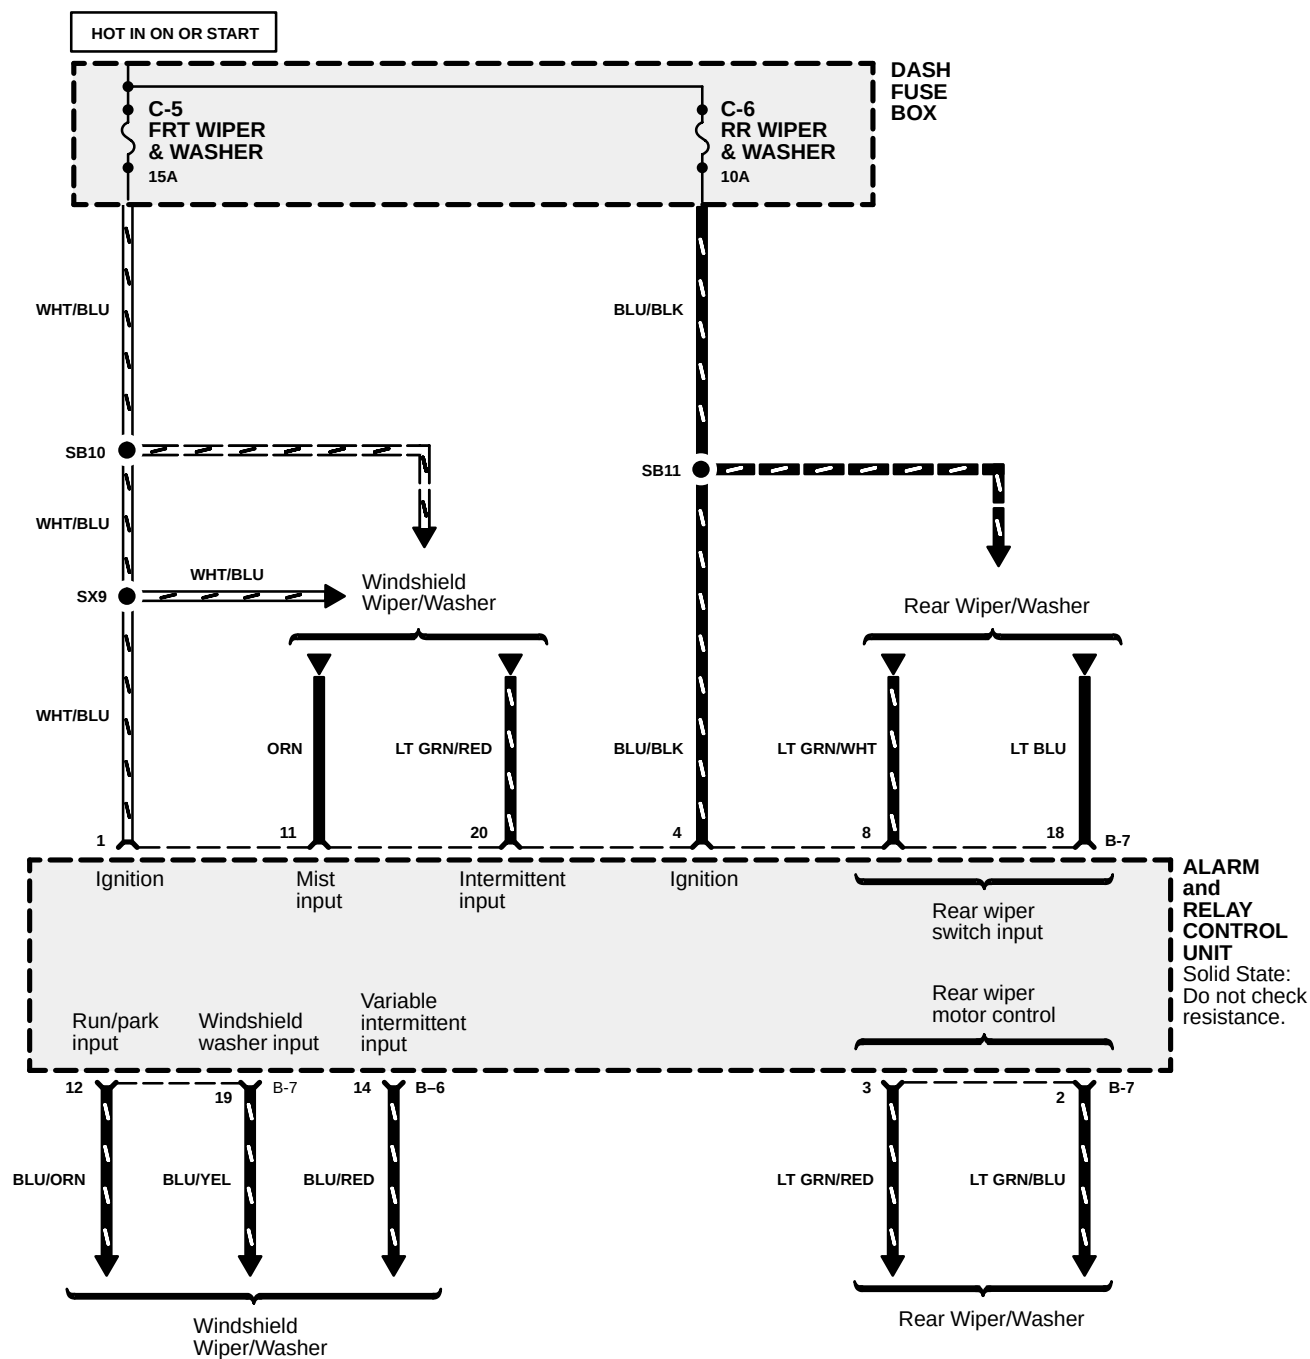

ALARM AND RELAY CONTROLS

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>		<u>Photo No.</u>
Alarm and Relay Control		
Unit	Behind right kick panel	116
Dash Fuse Box	Behind left dash side trim panel	55
Driver's Seat Belt Switch	In left front seat belt buckle	
Fuse/Relay Box	Right side of engine compartment, on inner fender panel	41
Starter Switch	Underside of steering column	46
Taillight Relay	In fuse/relay box	35
<u>Connector</u>		
B-11 (8-WHT)	Below I/P, right of steering column	58
B-24 (3-BLK)	Below driver's seat	104
H-12 (20-WHT)	Below I/P, above right dash side trim panel, on bracket	100
<u>Ground</u>		
B-2	Above right dash side trim panel	116
B-19	Behind top of left dash side trim panel	71

Circuit Operation

The alarm and relay control unit controls the Key-in ignition warning, seat belt warning, windshield wiper/washer system, rear wiper/washer system, doors open, dome light, and the rear defogger.