

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

BRAKE LIGHTS


Component Index

- [Brake Switch](#)
- [Dash Fuse Box](#)
- [Trailer Lighting Connector H-44 \(6-WHT\)](#)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

BRAKE LIGHTS

Circuit Schematic

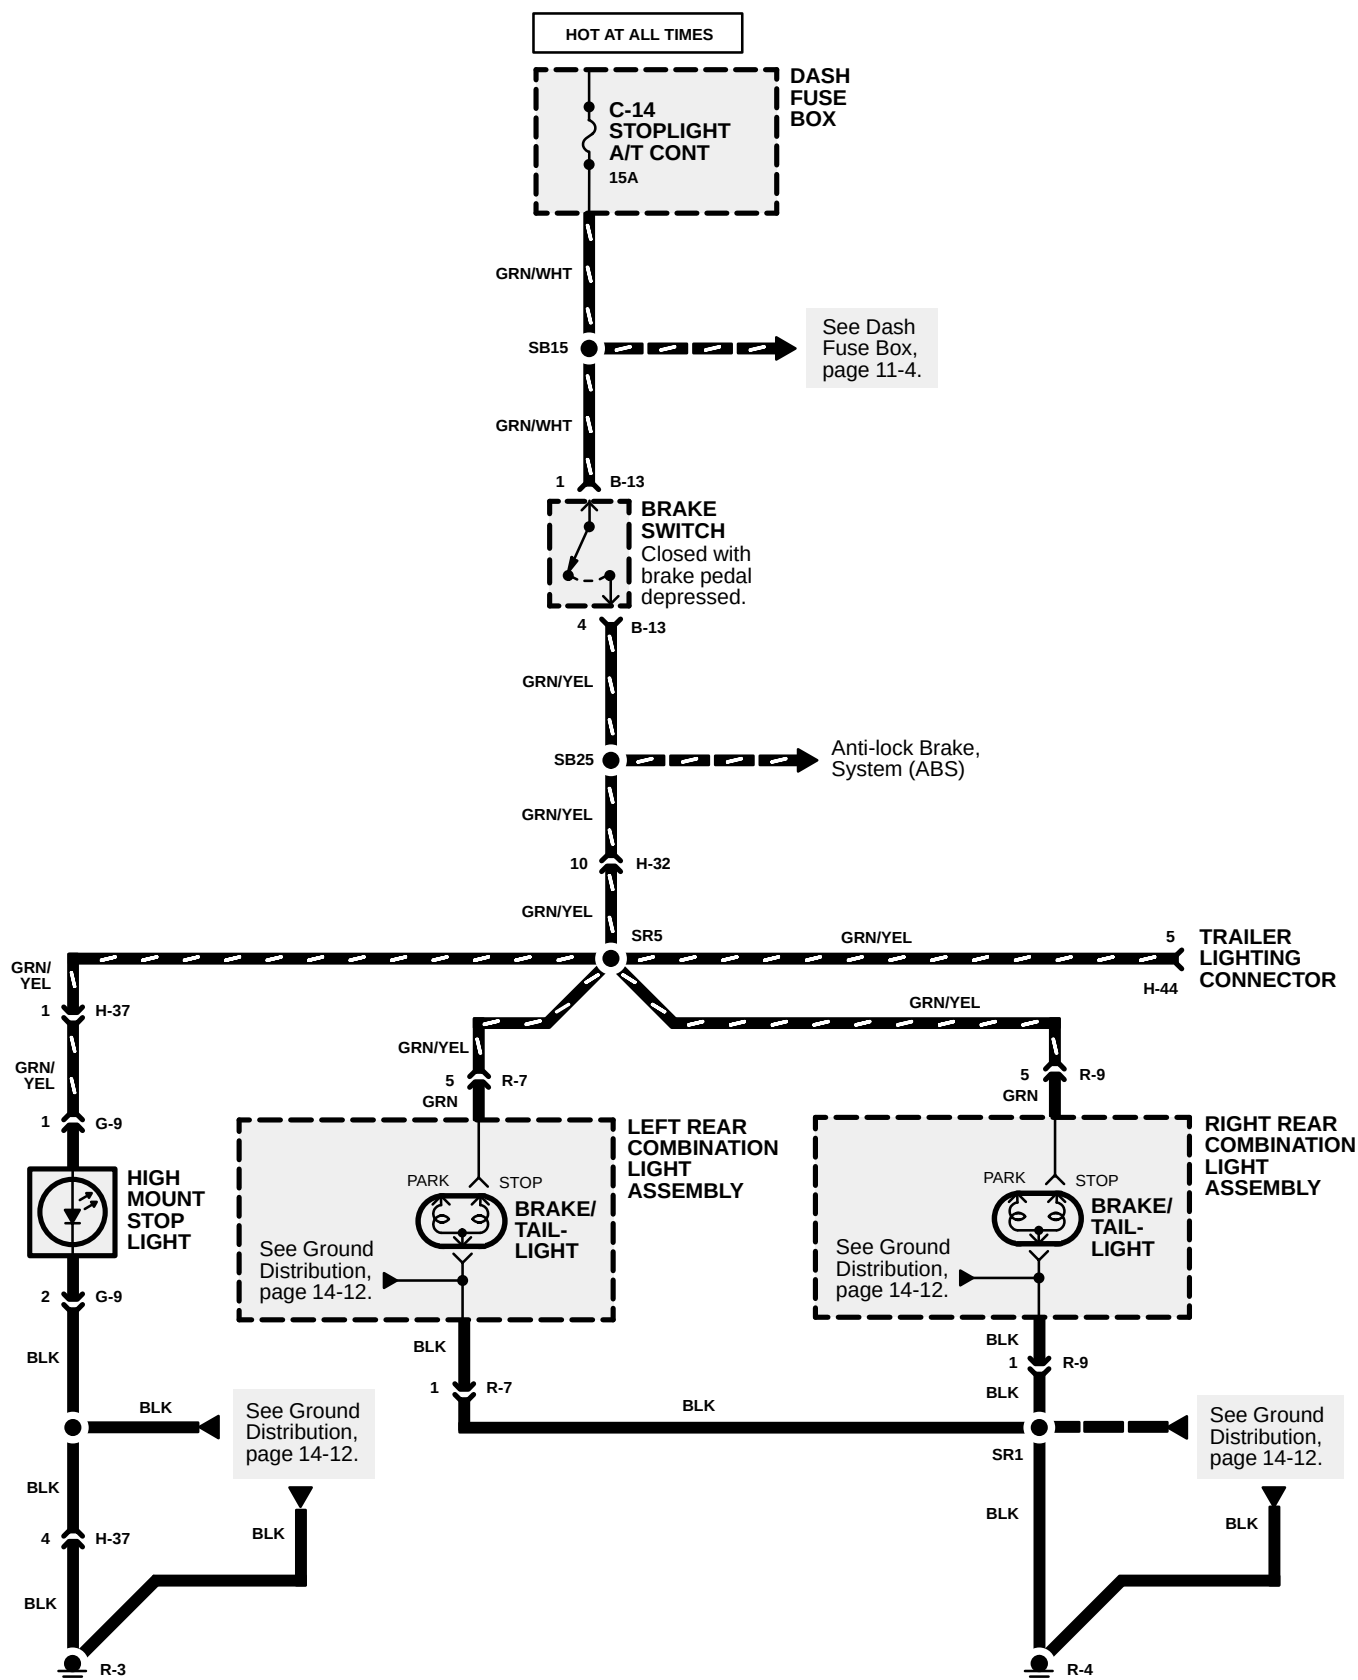

BRAKE LIGHTS

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Brake Switch	Below I/P, on brake pedal support 74
Dash Fuse Box	Behind left dash side trim panel 55
Trailer Lighting Connector	
H-44 (6-WHT)	Below left rear corner of vehicle, behind grommet 102

Connector	
G-9 (2-WHT/BLK)	Inside top center of left tailgate door 97
H-32 (22-WHT)	Below left front seat 105
H-37 (4-GRY)	Left rear of luggage room 89
R-7 (6-WHT/BLK)	Behind left taillight assembly 103
R-9 (6-WHT/BLK)	Behind right taillight assembly 103

Ground	
R-3	Left side of luggage room 90
R-4	Left side of luggage room 90

Circuit Operation

Battery voltage is applied to the brake switch at all times from fuse C-14. With the brake pedal depressed, the switch is closed and battery voltage is applied to the brake lights and the brake lights go on.