


BACK-UP LIGHTS

Component Index

- [Automatic Transmission Mode Switch](#)
- [Back-Up Light Switch](#)
- [Dash Fuse Box](#)

BACK-UP LIGHTS

Circuit Schematic

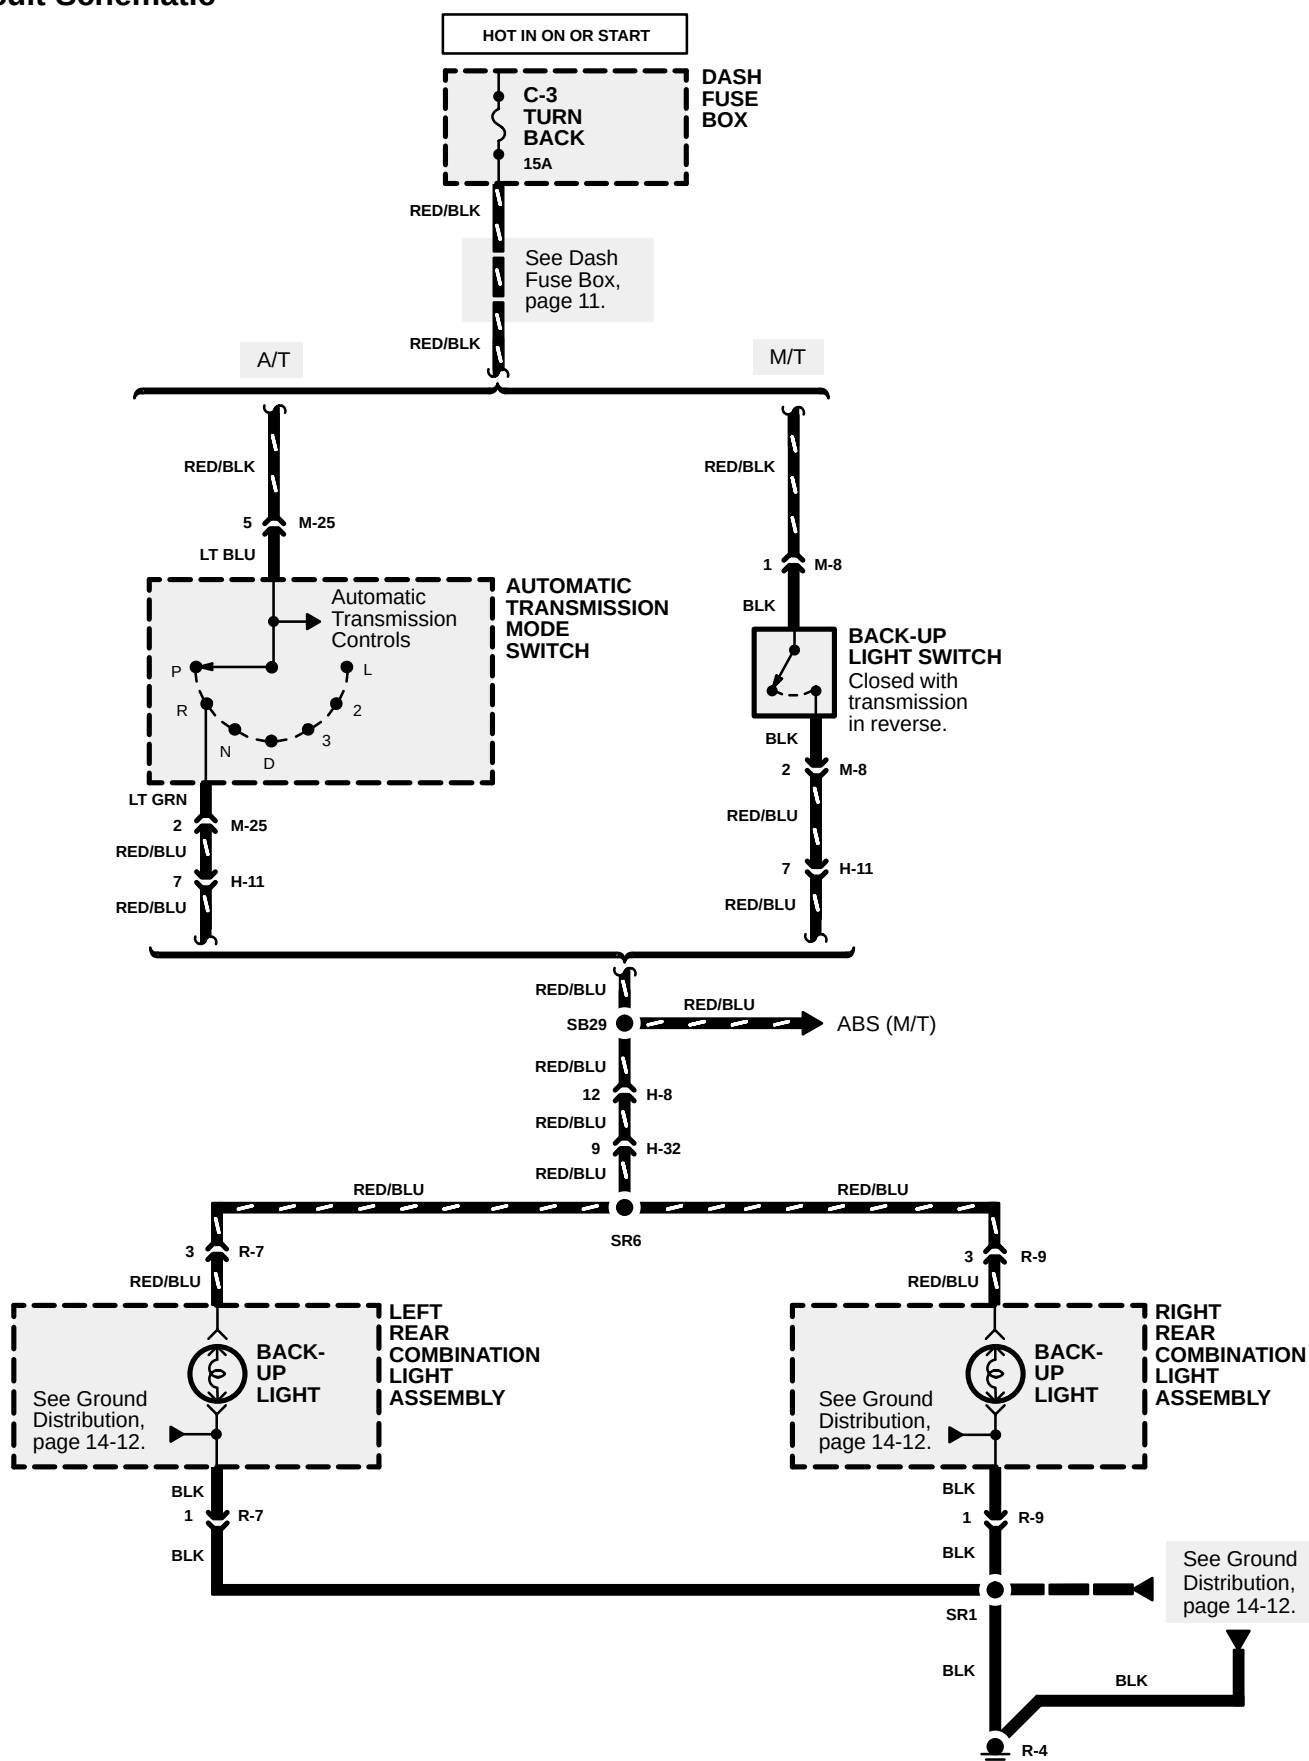

BACK-UP LIGHTS

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>		<u>Photo No.</u>
Automatic Transmission		
Mode Switch	Beneath vehicle, on left side of transmission	43
Back-Up Light Switch	Beneath vehicle, on right side of transmission	118
Dash Fuse Box	Behind left dash side trim panel	55
 <u>Connector</u>		
H-8 (16-WHT)	Below I/P, above left dash side trim panel, on bracket	70
H-11 (16-BLK)	Left front of engine compartment	27
H-32 (22-WHT)	Below left front seat	105
M-8 (2-BLU/GRY)	Beneath center of vehicle, top right side of transmission	118
M-25 (8-BLK)	On left side of transmission	52
R-7 (6-WHT/BLK)	Behind left taillight assembly	103
R-9 (6-WHT/BLK)	Behind right taillight assembly	103
 <u>Ground</u>		
R-4	Left side of luggage room	90

Circuit Operation

Automatic

With the starter switch in ON or START, battery voltage is applied to fuse C-3 and to the automatic transmission mode switch. With the transmission in reverse, the automatic transmission mode switch closes and battery voltage is applied to the back-up lights and the back-up lights go on.

Manual

With the starter switch in ON or START, battery voltage is applied to fuse C-3 and to the back-up light switch. With the transmission in reverse, the back-up light switch closes and battery voltage is applied to the back-up lights and the back-up lights go on.