

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

DOOR MIRROR DEFOGGERS


Component Index

[Dash Fuse Box](#)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

DOOR MIRROR DEFOGGERS

Circuit Schematic

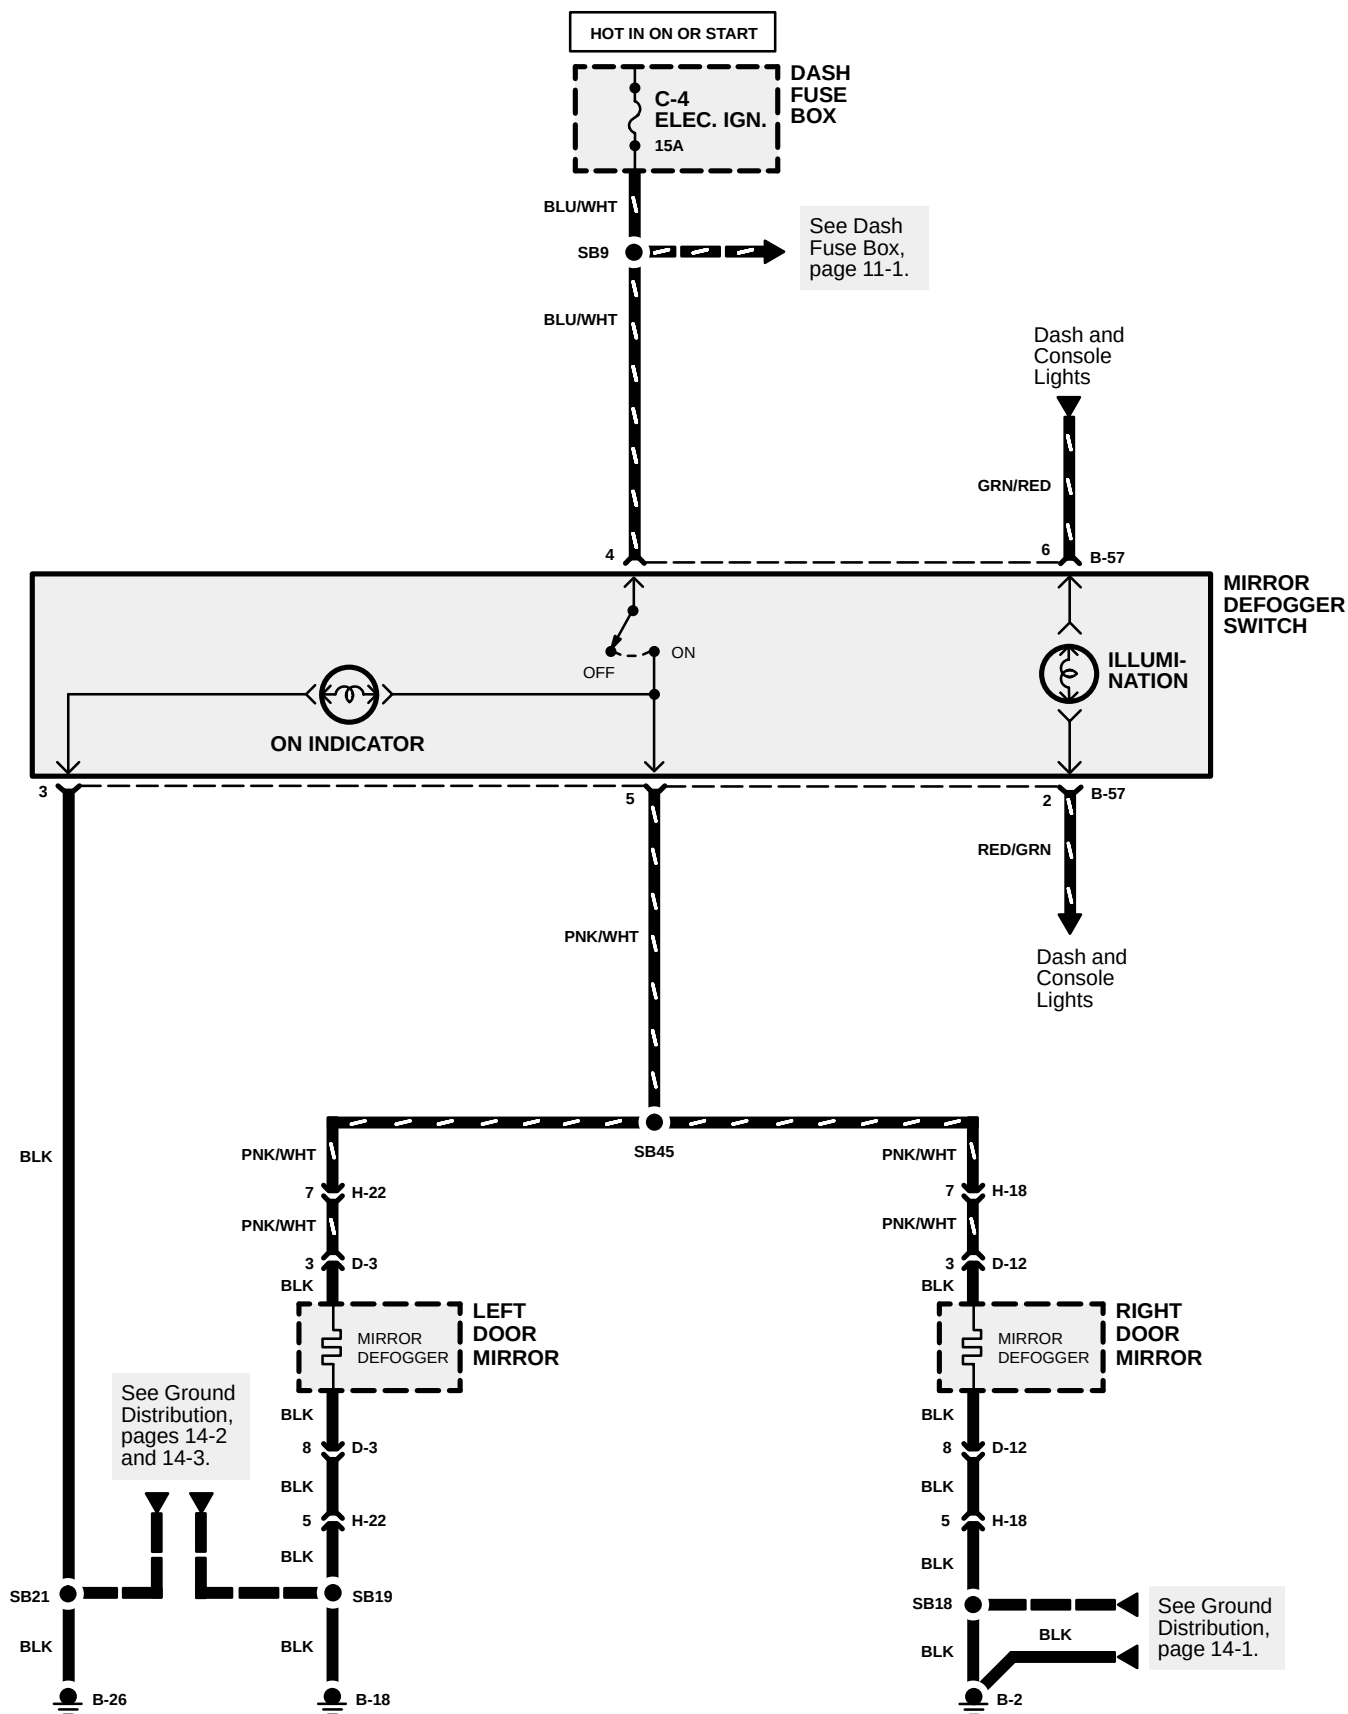

DOOR MIRROR DEFOGGERS

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>		<u>Photo No.</u>
Dash Fuse Box	 Behind left dash side trim panel	 55
<u>Connector</u>		
D-3 (8-WHT)	 In top of left front door	 78
D-12 (8-WHT)	 In top of right front door	 78
H-18 (18-WHT)	 Behind right dash side trim panel, in access hole	 54
H-22 (18-WHT)	 Behind left dash side trim panel, in access hole	 54
<u>Ground</u>		
B-2	 Above right dash side trim panel	 116
B-18	 Behind top of left dash side trim panel	 71
B-26	 Below rear of center console	 67

Circuit Operation

With the starter switch in ON or START, voltage is applied through fuse C-4 to the mirror defogger switch.

With the mirror defogger switch in ON, voltage is applied to the left and right door mirror defoggers and the defogger indicator light. The defogger on indicator lights up and the left and right door mirror defoggers heat the mirror surfaces to remove any fog.