

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
--------------	--------------------	---------------------	-----------------------	-----------------

CIGARETTE LIGHTER


Component Index

[Dash Fuse Box](#)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
--------------	--------------------	---------------------	-----------------------	-----------------

CIGARETTE LIGHTER

Circuit Schematic

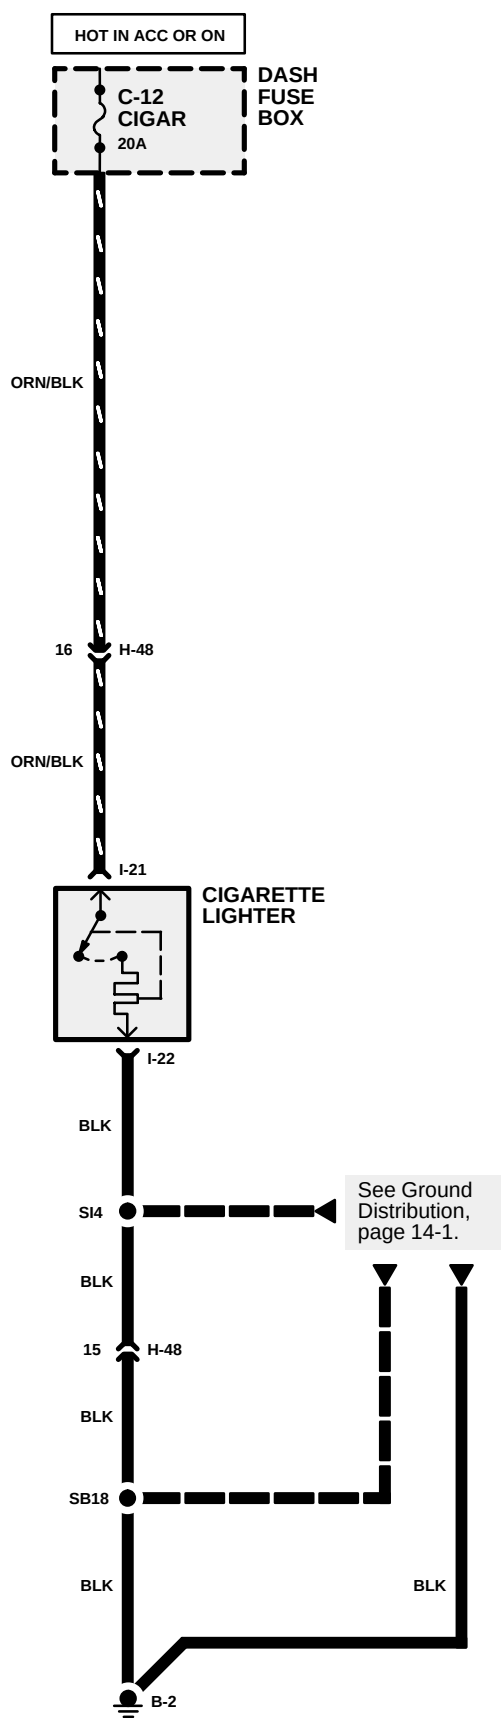

CIGARETTE LIGHTER

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Dash Fuse Box Behind left dash side trim panel	55
Connector	
H-48 (16-BLK) Behind right dash side trim panel	120
Ground	
B-2 Above right dash side trim panel	116

Circuit Operation

With the starter switch in ACC or ON, battery voltage is applied to fuse C-12 and to the cigarette lighter. When the cigarette lighter is depressed, the cigarette lighter element completes the circuit to ground. When the element becomes sufficiently heated, it is spring-released and the circuit opens.