


DASH FUSE BOX

Component Index

4WD Control Unit	Mass Air Flow (MAF) Sensor
A/T Shift Indicator Control Unit	No. 1 Ignition Coil
Alarm and Relay Control Unit	No. 2 Ignition Coil
Anti-theft and Keyless Entry Control Unit	No. 3 Ignition Coil
Automatic Transmission Mode Switch	No. 4 Ignition Coil
Back-up Light Switch	No. 5 Ignition Coil
Brake Switch	No. 6 Ignition Coil
Clutch Start Switch	Power Window Relay
Clutch Switch	Rear Defogger Relay
Condenser	Rear Wiper Motor
Cornering Light Relay	Shift Lock Controller
Dash Fuse Box	SRS Fuse Box
Data Link Connector (DLC) C63 (16-BLK)	SRS Unit
ECM or PCM Main Relay	Starter Switch
Electronic Brake Control Module (EBCM)	T.O.D. Control Unit
Engine or Powertrain Control Module (ECM or PCM)	Transmission Switch 1-2
Evaporative Emission (EVAP) Canister Cut Valve	Variable Intake Manifold (VIM)
Evaporative Emission (EVAP) Canister Purge Valve	Vacuum Switching Valve
Fuse/Relay Box	Vehicle Speed Sensor (VSS) (A/T)
G Sensor - ABS	Vehicle Speed Sensor (VSS) (M/T)
Generator	Windshield Wiper Motor
ION Sensing Module	


DASH FUSE BOX

Circuit Schematic

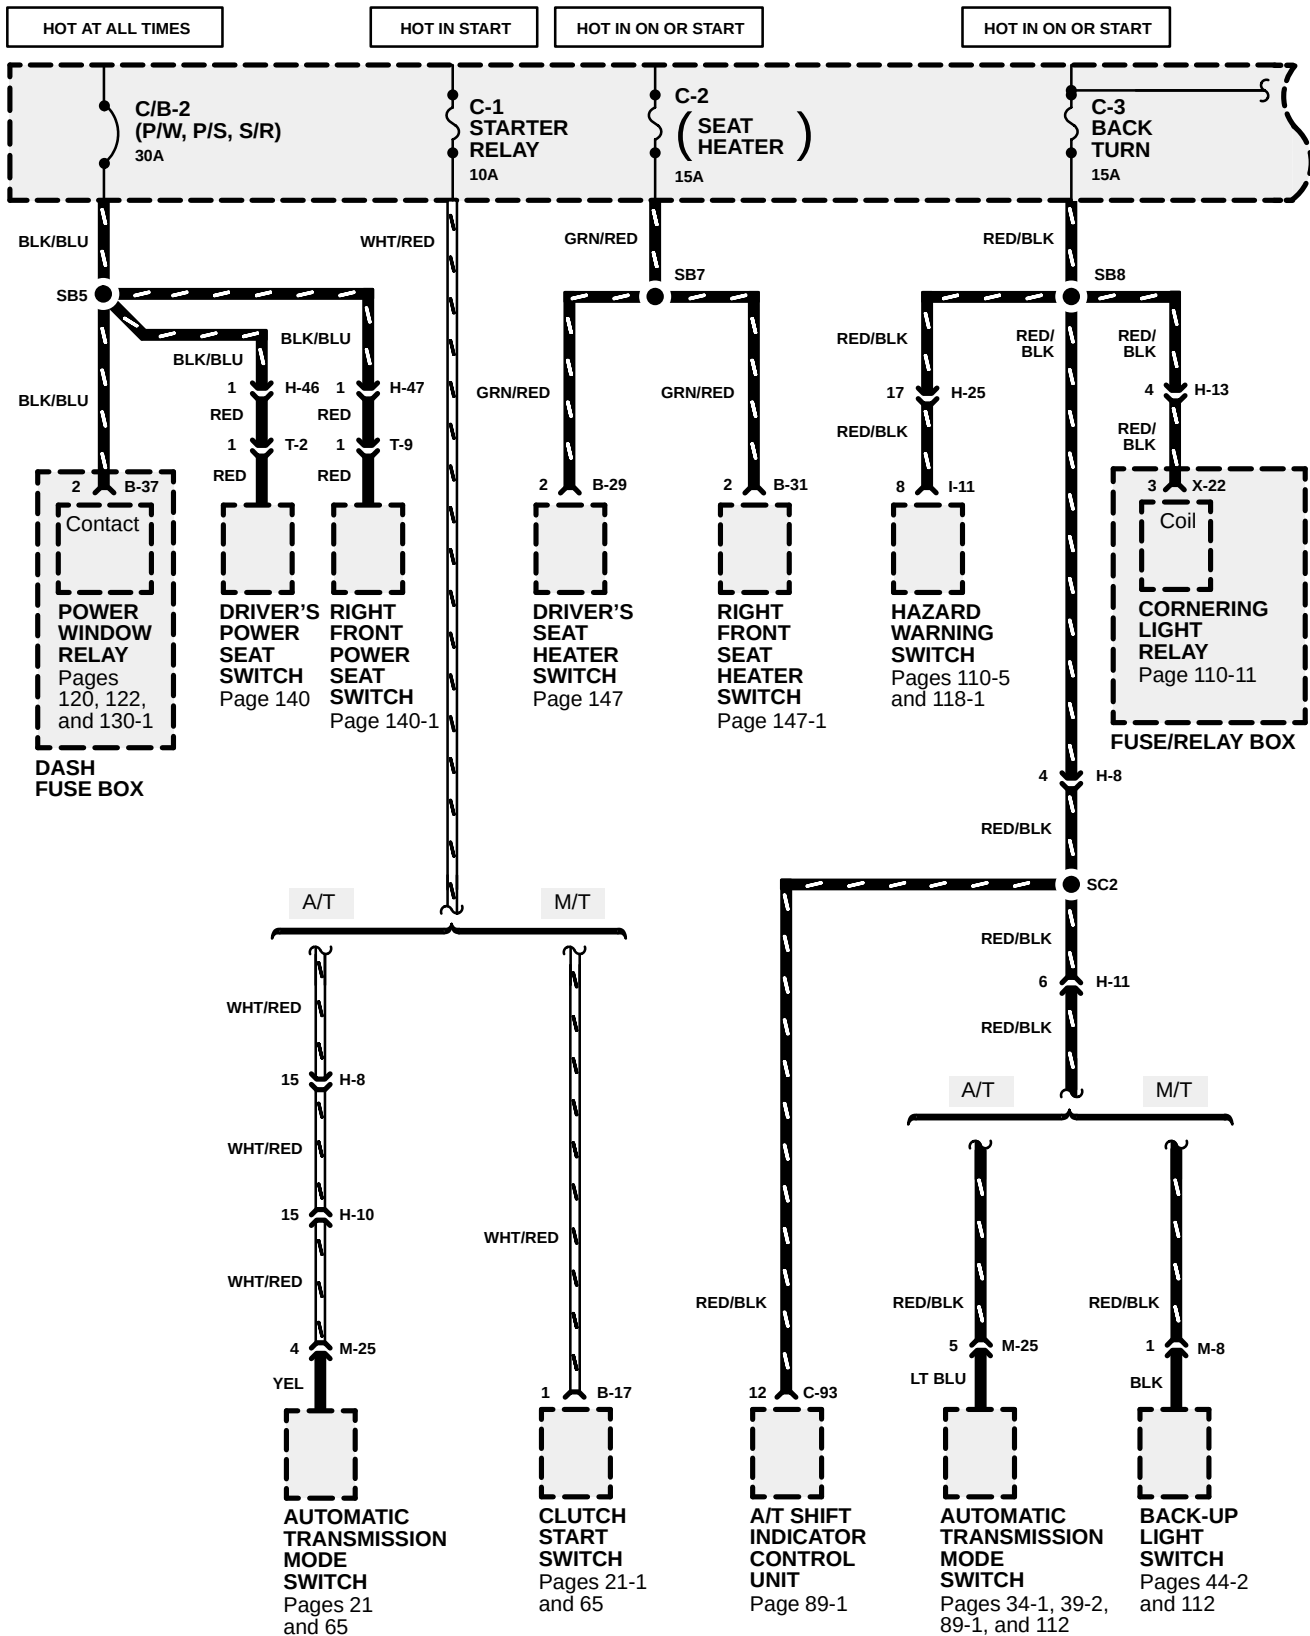


DASH FUSE BOX

Circuit Schematic

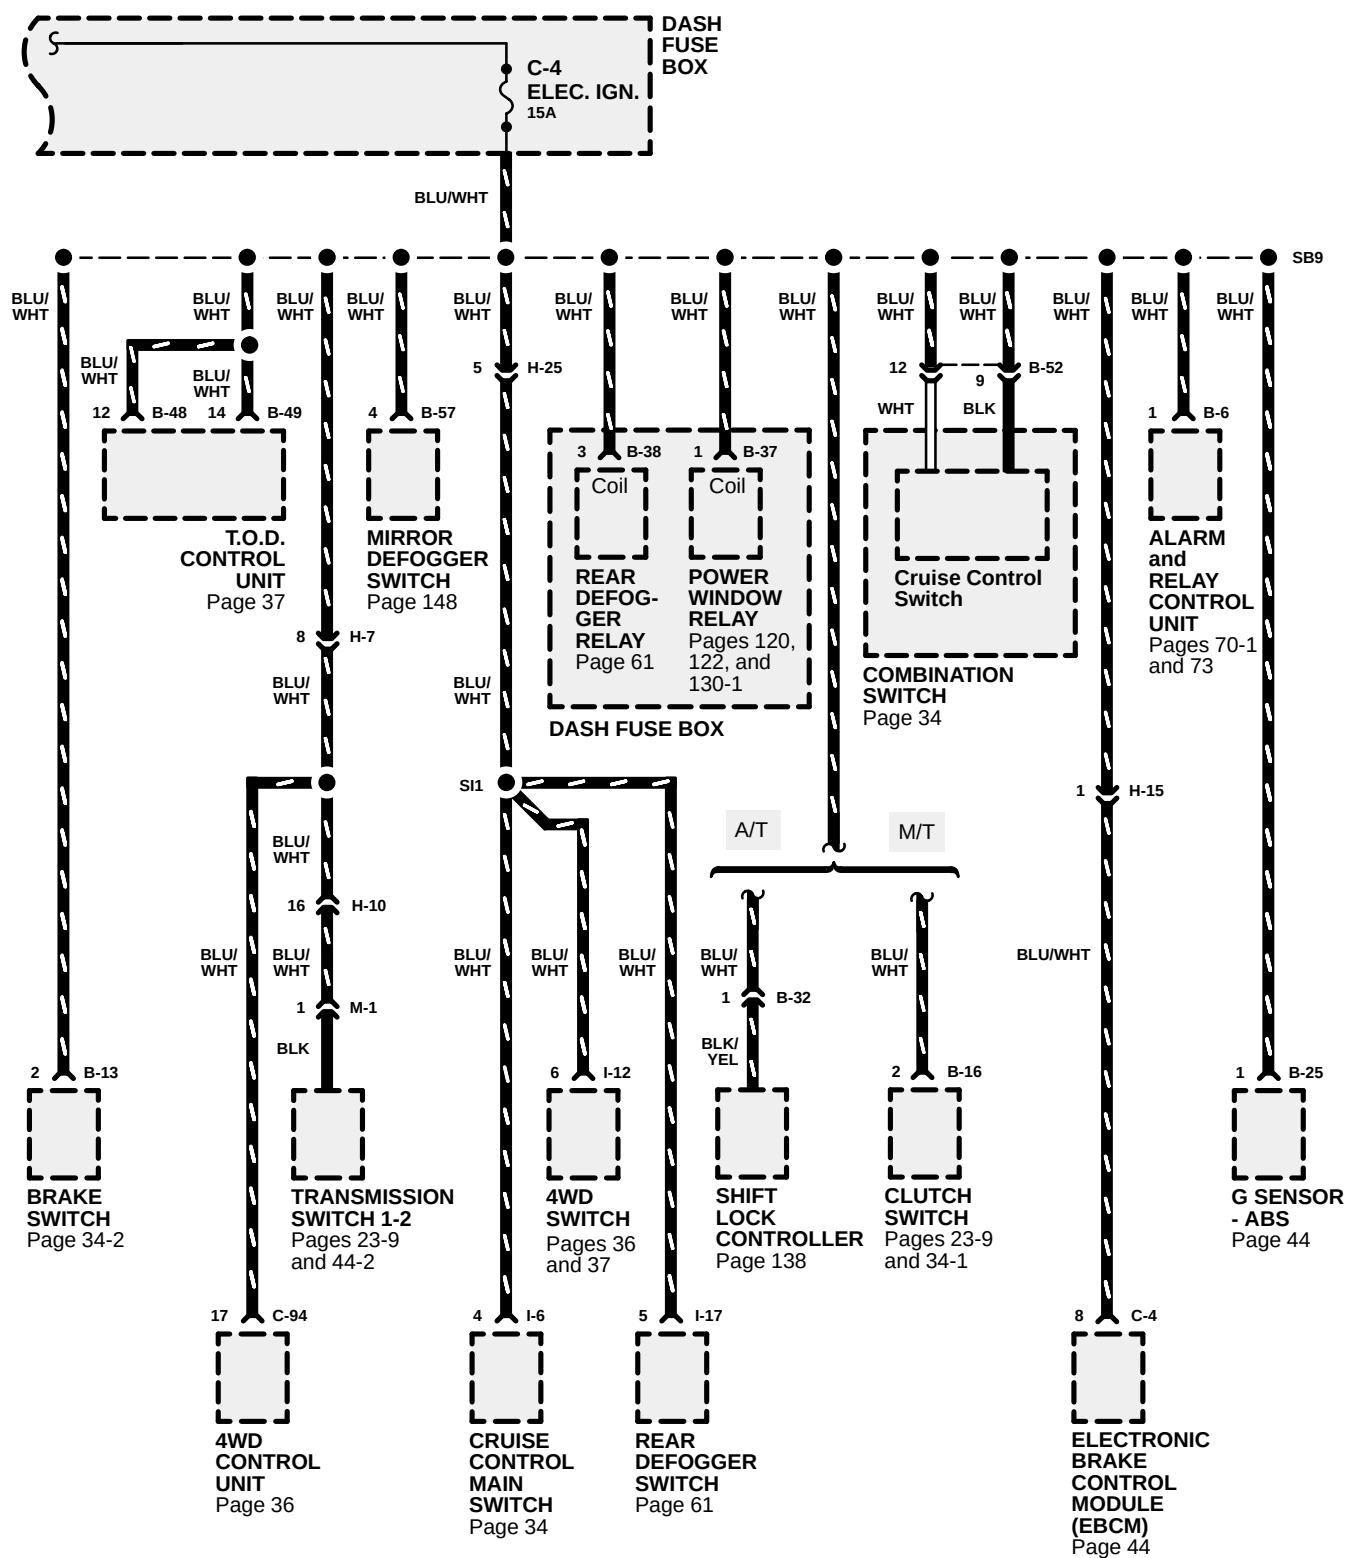


DASH FUSE BOX

Circuit Schematic

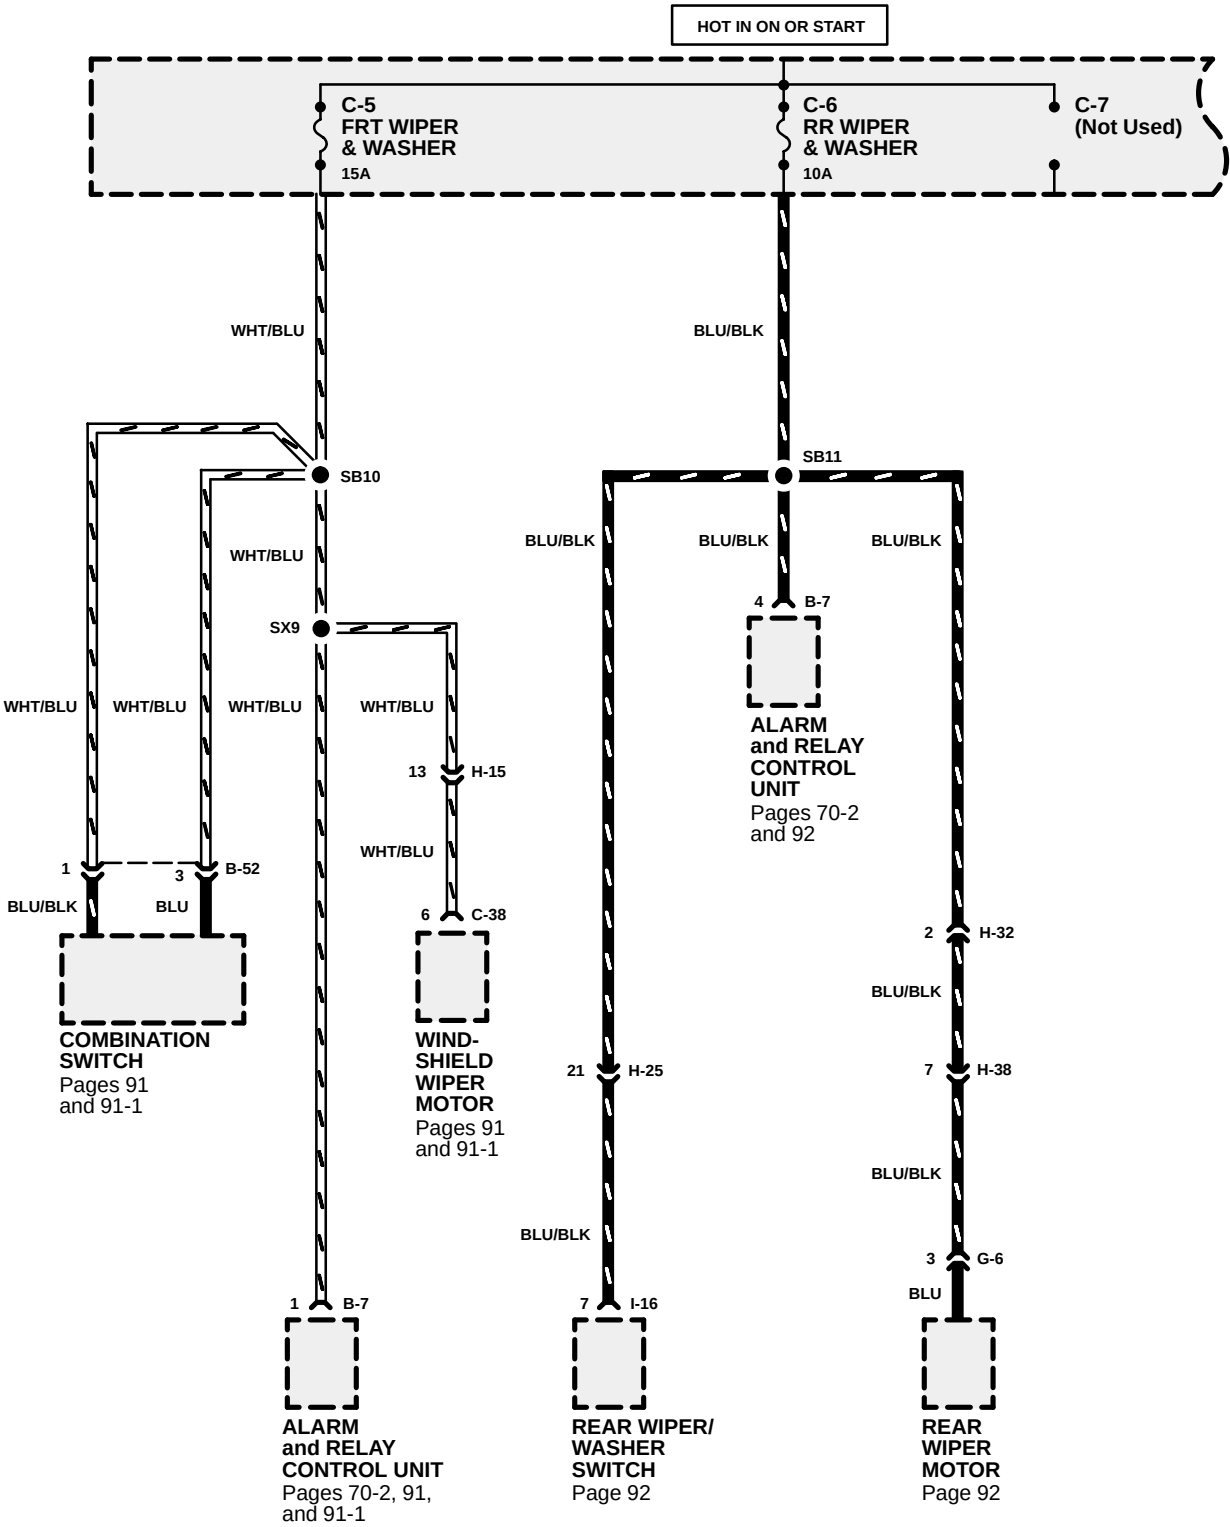


DASH FUSE BOX

Circuit Schematic

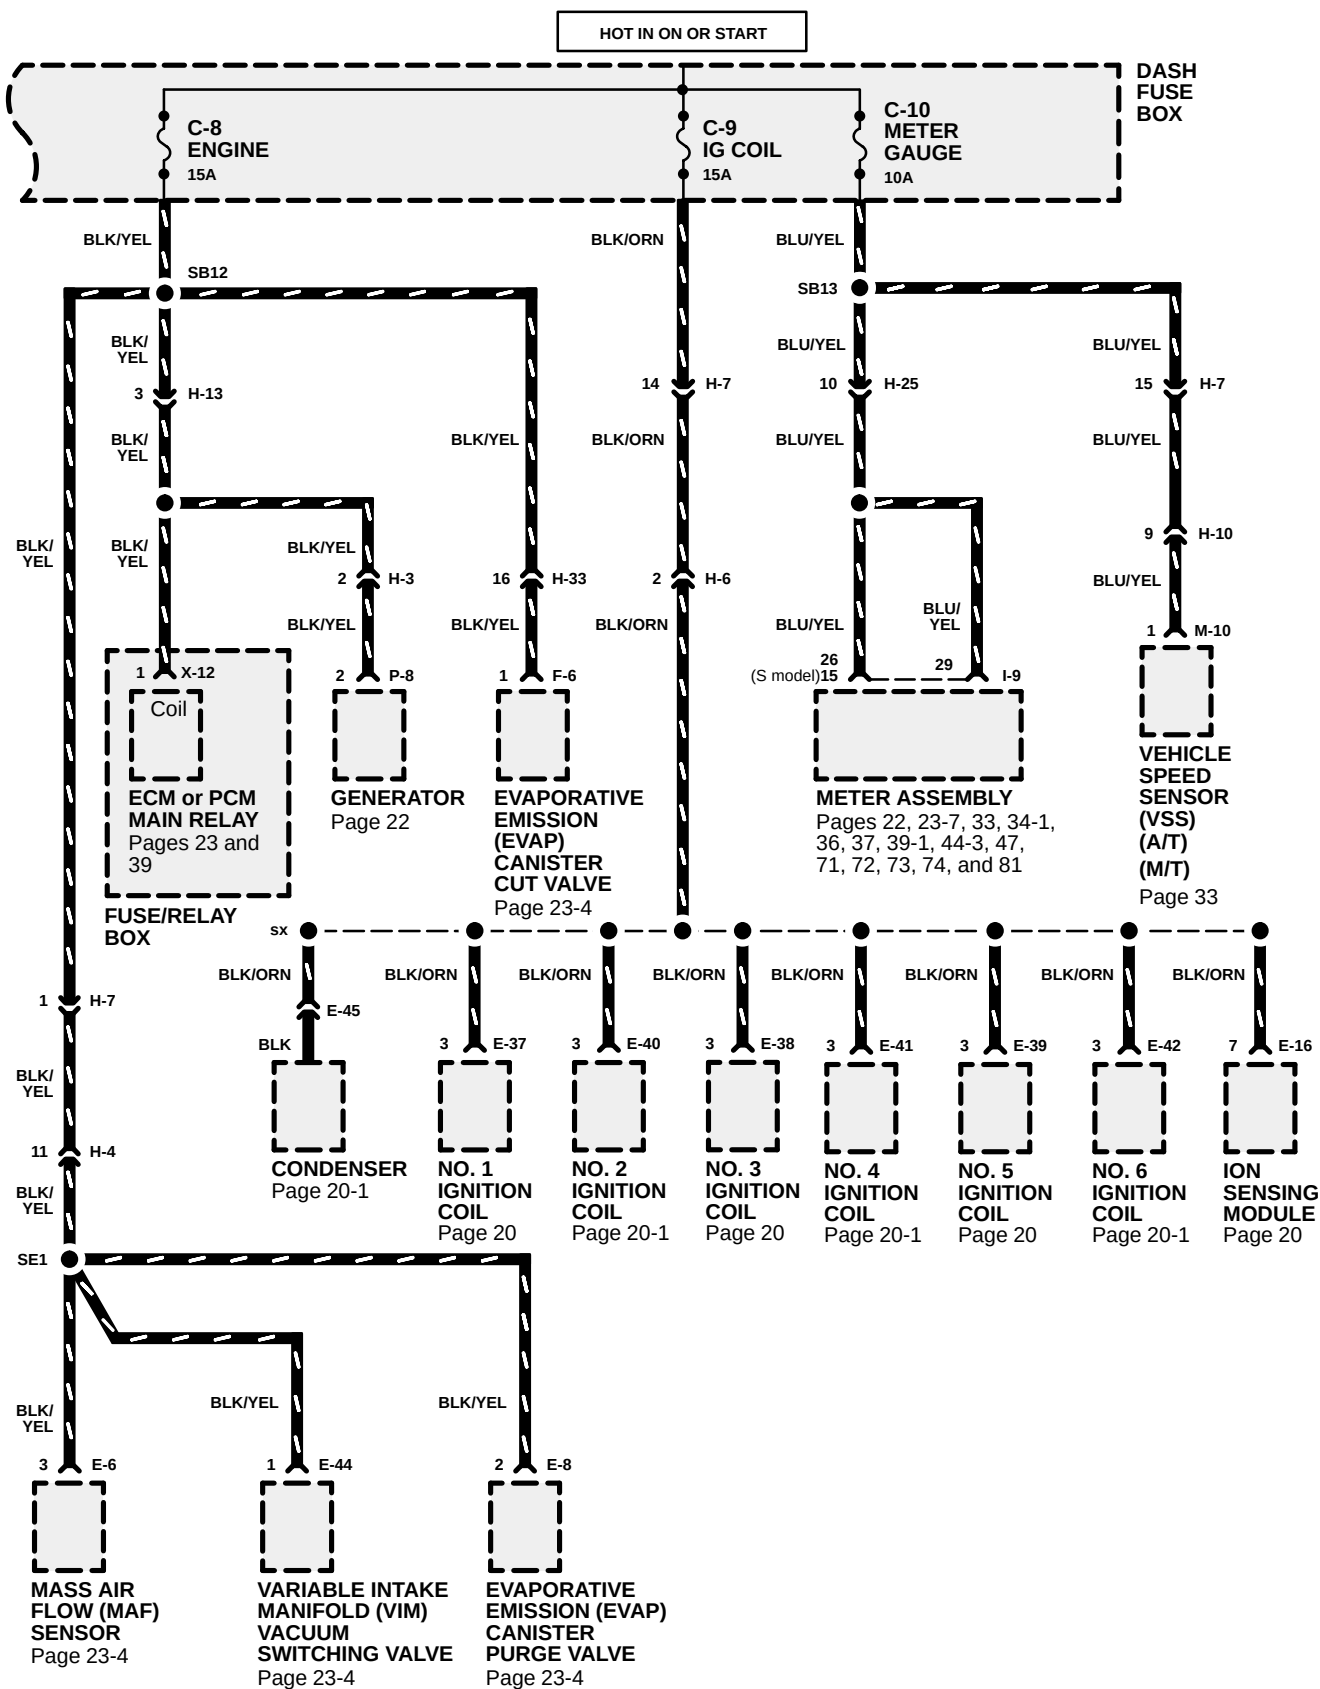


DASH FUSE BOX

Circuit Schematic

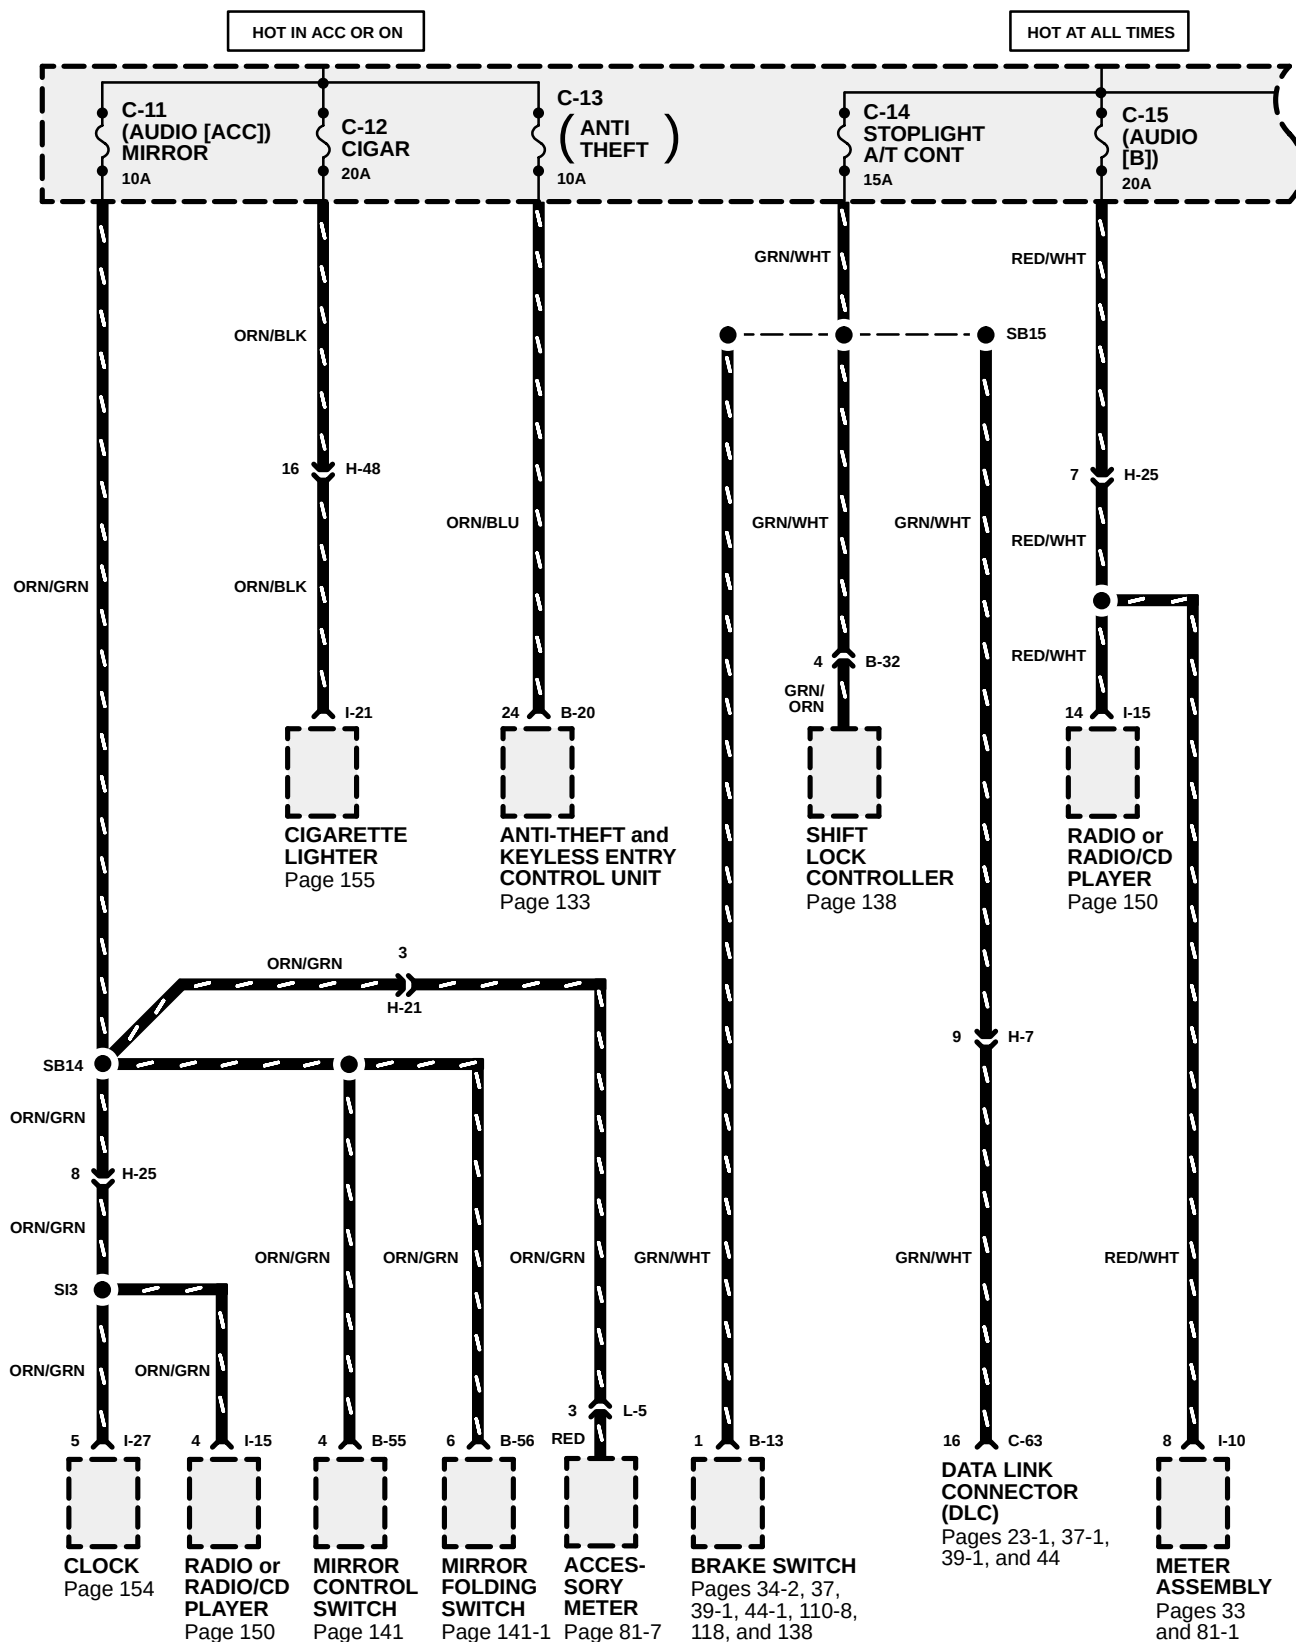


DASH FUSE BOX

Circuit Schematic

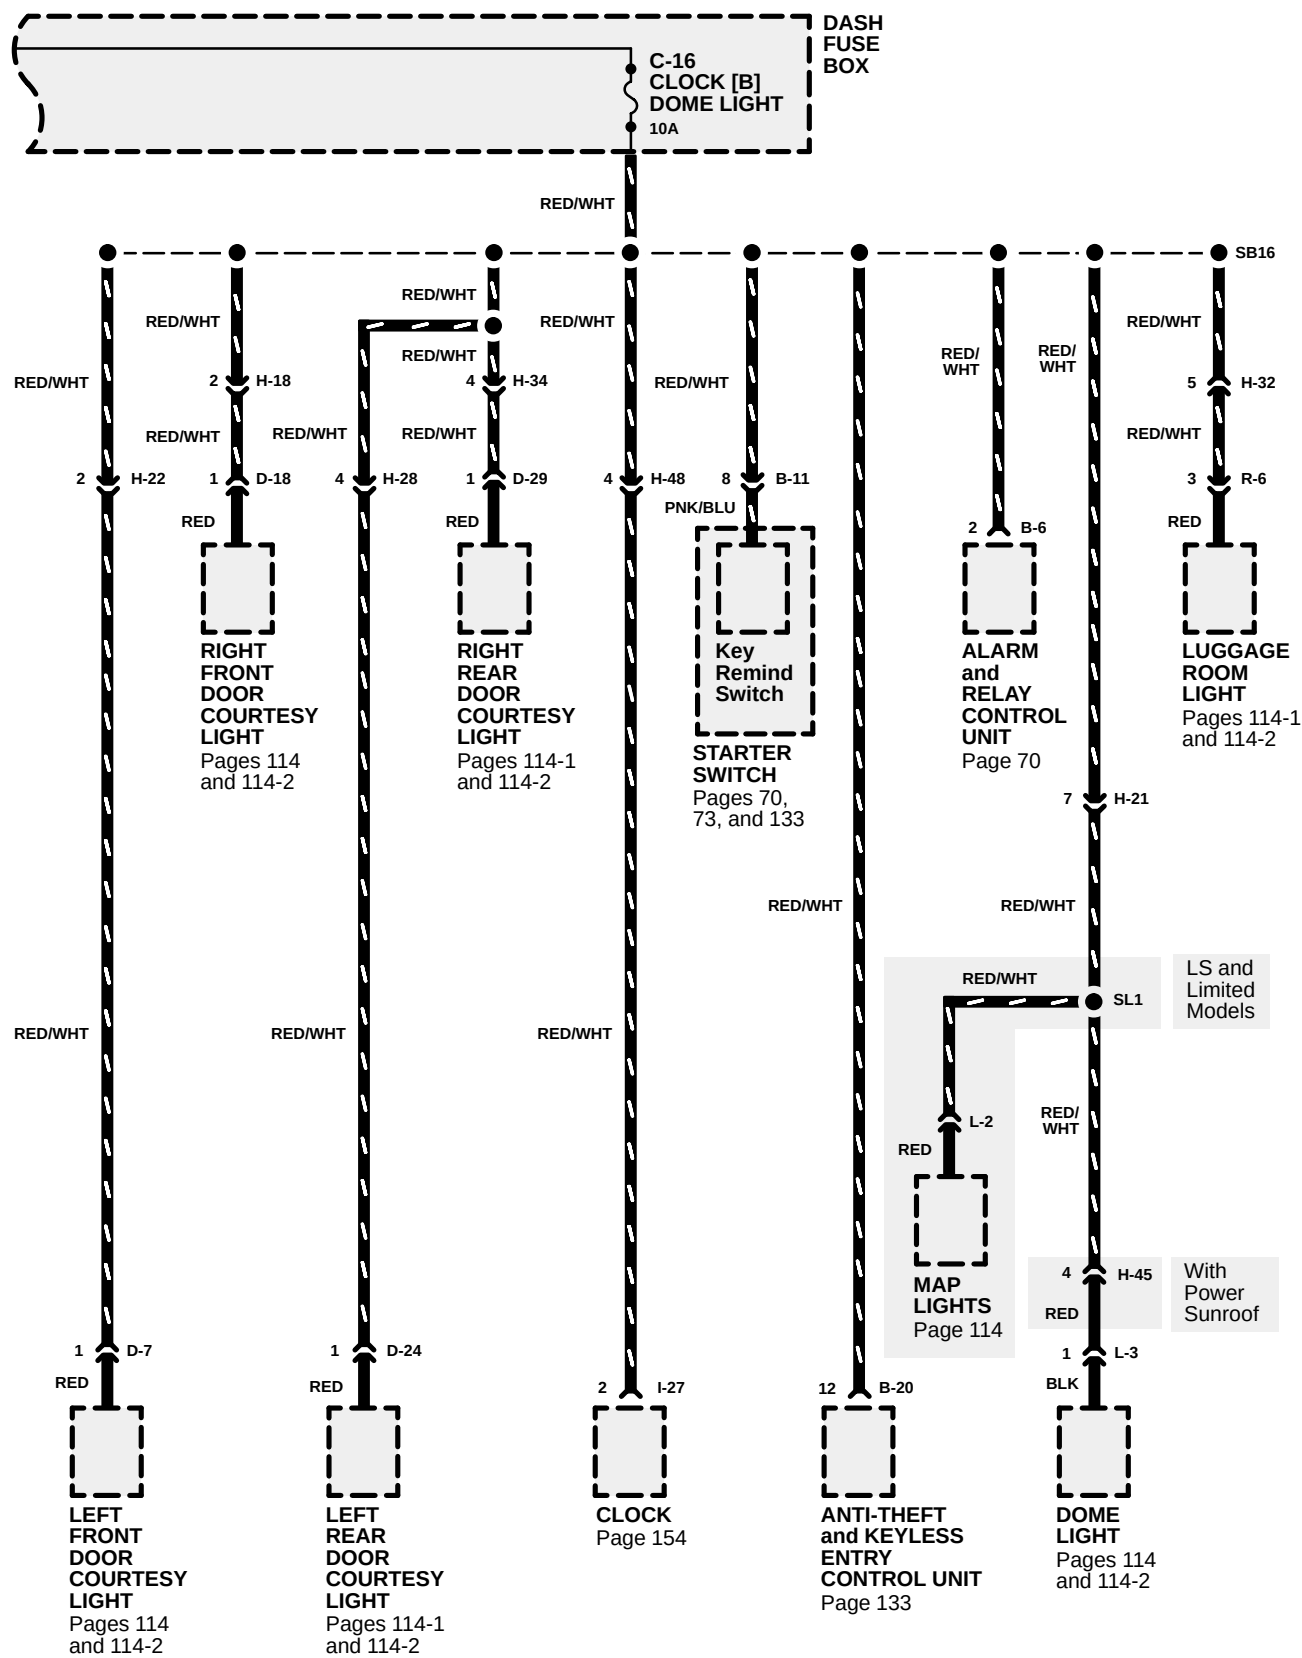


DASH FUSE BOX

Circuit Schematic

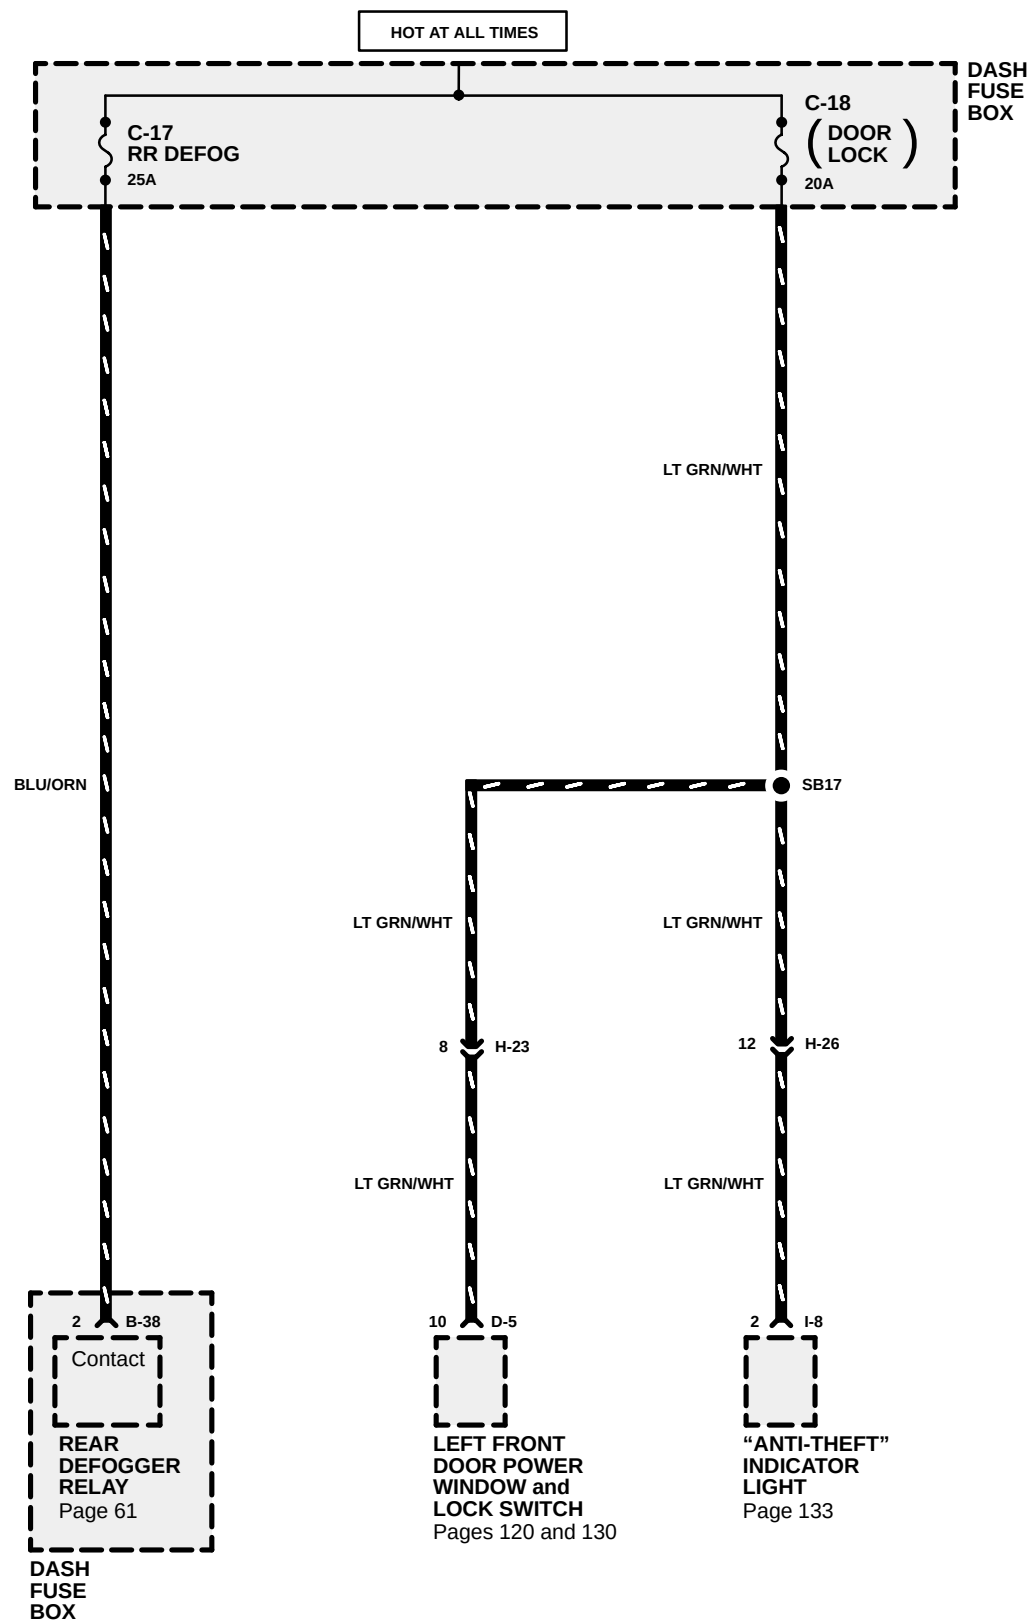

DASH FUSE BOX

Circuit Schematic

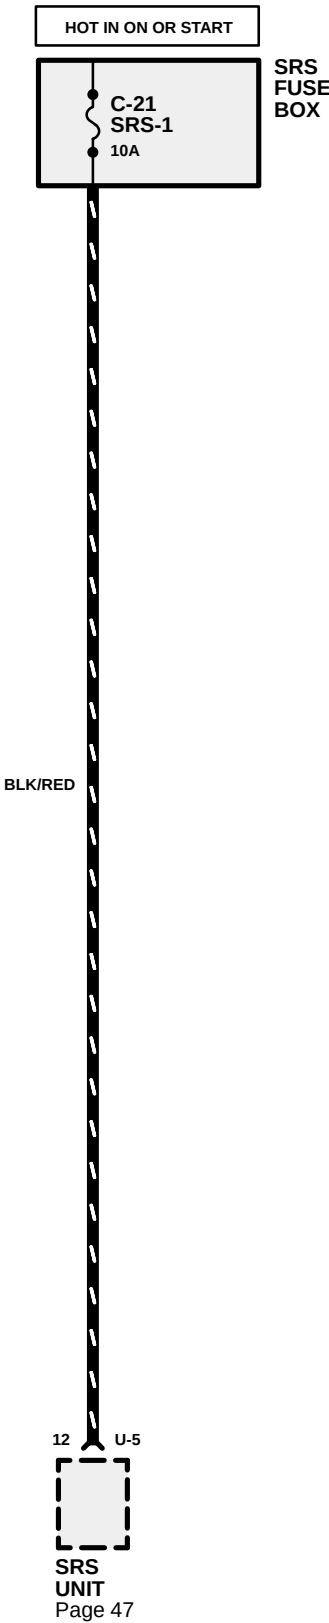

DASH FUSE BOX

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
4WD Control Unit	Behind front console 62
A/T Shift Indicator Control Unit	Below I/P, left of steering column 74
Alarm and Relay Control Unit	Behind right kick panel 116
Anti-theft and Keyless Entry Control Unit	Behind front console 62
Automatic Transmission Mode Switch	Beneath vehicle, on left side of transmission 43
Back-up Light Switch	Beneath vehicle, on right side of transmission 118
Brake Switch	Below I/P, on brake pedal support 74
Clutch Start Switch	Below I/P, top of clutch pedal support 57
Clutch Switch	Below I/P, top of clutch pedal support 57
Condenser	Top right front of engine 10
Cornering Light Relay	In fuse/relay box 35
Dash Fuse Box	Behind left dash side trim panel 55
Data Link Connector (DLC) C63 (16-BLK)	Left I/P lower cover, behind access cover 47
ECM or PCM Main Relay	In fuse/relay box 38
Electronic Brake Control Module (EBCM)	Right front of engine compartment 41
Engine or Powertrain Control Module (ECM or PCM)	Right side of engine compartment 60
Evaporative Emission (EVAP) Vacuum Switching Valve	On left rear of engine 32
Evaporative Emission (EVAP) Canister Cut Valve	Underneath vehicle, above right side of rear axle 130
Evaporative Emission (EVAP) Canister Purge Valve	Top left front of engine 22
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 41
G Sensor - ABS	Beneath rear of center console 126
Generator	Lower right front of engine 5
ION Sensing Module	Top rear of engine 28
Mass Air Flow (MAF) Sensor	Left front corner of engine compartment 13
No. 1 Ignition Coil	Right side of engine 11
No. 2 Ignition Coil	Left side of engine 12
No. 3 Ignition Coil	Right side of engine 11
No. 4 Ignition Coil	Left side of engine 12
No. 5 Ignition Coil	Right side of engine 11
No. 6 Ignition Coil	Left side of engine 12
Power Window Relay	In dash fuse box 56
Rear Defogger Relay	In dash fuse box 56
Rear Wiper Motor	Inside left tailgate door, behind trim pad 91
Shift Lock Controller	Below front console 65
SRS Fuse Box	On top of dash fuse box 68
SRS Unit	Behind front console 61
Starter Switch	Underside of steering column 46
T.O.D. Control Unit	Below right front seat 125

DASH FUSE BOX

Component Location Index

(Refer to Section 201 for photographs.)

Component (cont'd)	Photo No.
Transmission Switch 1-2	Beneath vehicle, on right side of transmission 15
Vehicle Speed Sensor (VSS) (A/T)	Beneath center of vehicle, on rear of transmission 129
Vehicle Speed Sensor (VSS) (M/T)	Beneath center of vehicle, on rear of transmission 119
Windshield Wiper Motor	Right rear corner of engine compartment 45
Connector	
B-11 (8-WHT)	Below I/P, right of steering column 58
B-32 (6-WHT)	Below rear of front console 66
B-52 (14-BLK)	Below I/P, right of steering column 58
D-7 (2-BLK)	Inside left front door, behind trim pad 77
D-18 (2-BLK)	Inside right front door, behind trim pad 77
D-24 (2-BLK)	Inside rear of left rear door, behind door courtesy light 83
D-29 (2-BLK)	Inside rear of right rear door, behind door courtesy light 83
E-45 (1-BLK)	Top right front of engine
G-6 (4-WHT)	Inside left tailgate door, behind trim pad 91
H-3 (3-BLK)	Right side of engine compartment 40
H-4 (16-BLK)	Left side of engine compartment 33
H-6 (16-BLU)	Left side of engine compartment 33
H-7 (20-BRN/WHT)	Below I/P, above left dash side trim panel, on bracket 69
H-8 (16-WHT)	Below I/P, above left dash side trim panel, on bracket 70
H-10 (16-BLU)	Left front of engine compartment 27
H-11 (16-BLK)	Left front of engine compartment 27
H-13 (6-BLK)	Below I/P, above right dash side trim panel, on bracket 100
H-15 (14-WHT)	Below I/P, above right dash side trim panel, on bracket 115
H-18 (18-WHT)	Behind right dash side trim panel, in access hole 54
H-21 (8-WHT)	Below I/P, above right dash side trim panel, on bracket 100
H-22 (18-WHT)	Behind left dash side trim panel, in access hole 54
H-23 (8-BLK)	Behind left dash side trim panel, in access hole 54
H-25 (22-BLU)	Below I/P, above left dash side trim panel, on bracket 71
H-26 (20-WHT)	Below I/P, above left dash side trim panel, on bracket 71
H-28 (6-WHT)	In left center pillar 81
H-32 (22-WHT)	Below left front seat 105
H-33 (20-WHT)	In floor, below right front seat 110
H-34 (6-WHT)	In right center pillar 81
H-38 (10-WHT)	Left rear of luggage room 89
H-45 (6-BLK/WHT)	Center of roof, above map lights 85
H-46 (6-WHT)	Below left side of left front seat 105
H-47 (6-WHT)	Below right side of right front seat 110
H-48 (16-BLK)	Behind right dash side trim panel 120
I-9 (30-GRN)	On left top of meter assembly 53
I-10 (22-GRN)	On right top of meter assembly 53
L-2 (1-WHT)	Center front of roof, above map lights 85
L-3 (2-WHT)	Center of roof, above dome light 86
L-5 (6-WHT)	Above accessory meter 26

DASH FUSE BOX

Component Location Index

(Refer to Section 201 for photographs.)

Connector (cont'd)	Photo No.
M-1 (2-GRY)	Beneath center of vehicle, top right side of transmission 15
M-8 (2-BLU/GRY)	Beneath center of vehicle, top right side of transmission 118
M-25 (8-BLK)	On left side of transmission 52
R-6 (3-WHT)	Center rear of roof 87
T-2 (2-WHT)	Underside of driver's seat 108
T-9 (2-WHT)	Underside of right front seat 112