

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

HORNS


Component Location Index

- [Fuse/Relay Box](#)
- [High Note Horn](#)
- [Horn Relay](#)
- [Low Note Horn](#)
- [SRS Coil Assembly](#)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

HORNS

Circuit Schematic

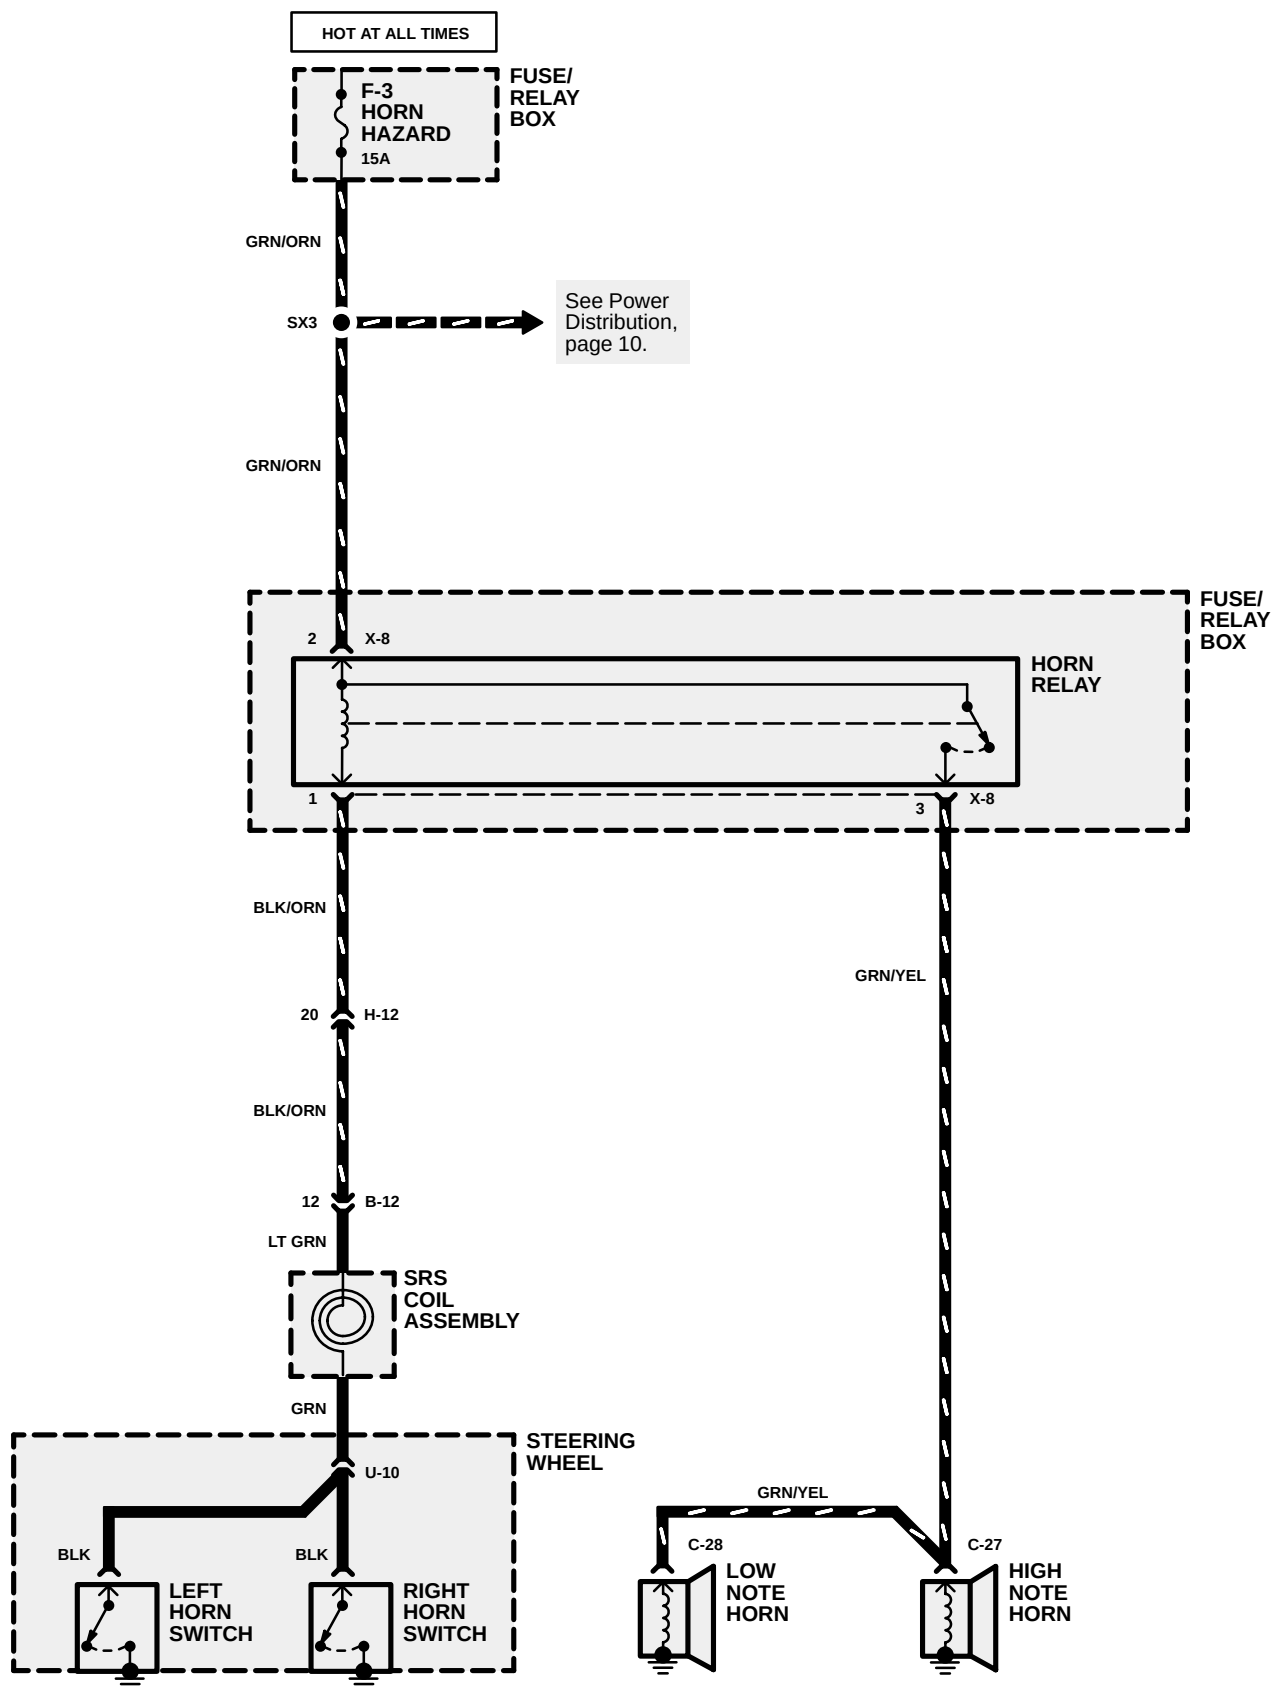

HORNS

Component Location Index

(Refer to Section 201 for photographs.)

Component		Photo No.
Fuse/Relay Box	Right side of engine compartment, on inner fender panel	41
High Note Horn	Behind right headlight	1
Horn Relay	In fuse/relay box	37
Low Note Horn	Behind right side of radiator grille	1
SRS Coil Assembly	Top of steering column	46
Connector		
B-12 (16-WHT)	Below I/P, right of steering column	58
H-12 (20-WHT)	Below I/P, above right dash side trim panel, on bracket	100
U-10 (1-WHT)	Inside steering wheel	

Circuit Operation

Voltage is applied at all times through fuse F-3 to the horn relay. The circuit continues from the horn relay to the SRS coil assembly and the horn switches. When a horn switch is closed, the circuit path is completed to ground and the horn relay energizes. The relay contact closes and battery voltage is applied to the horns. The horns sound.