


ALARM AND RELAY CONTROLS

Component Location Index

- [Alarm and Relay Control Unit](#)
- [Dash Fuse Box](#)
- [Driver's Seat Belt Switch](#)
- [Fuse/Relay Box](#)
- [Starter Switch](#)
- [Taillight Relay](#)


ALARM AND RELAY CONTROLS

Circuit Schematic

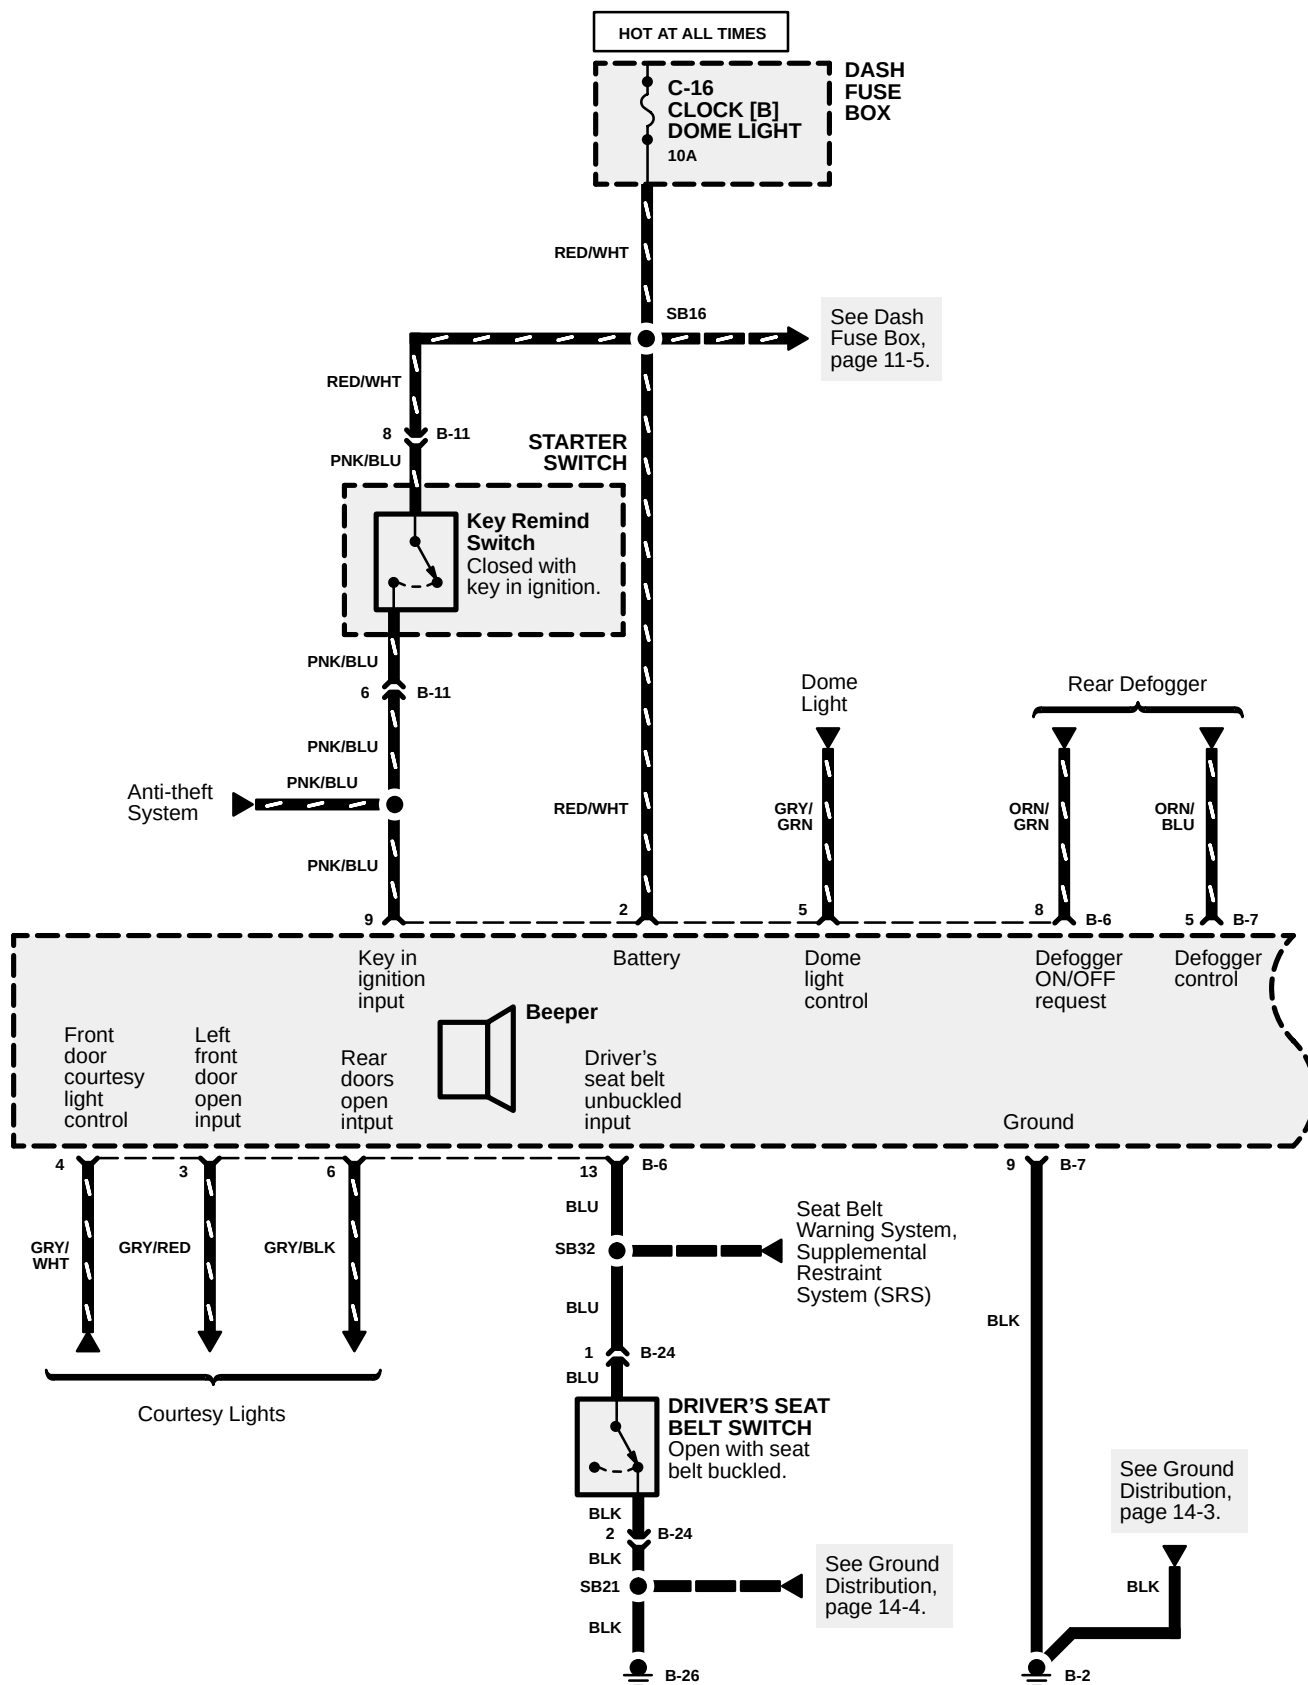


ALARM AND RELAY CONTROLS

Circuit Schematic

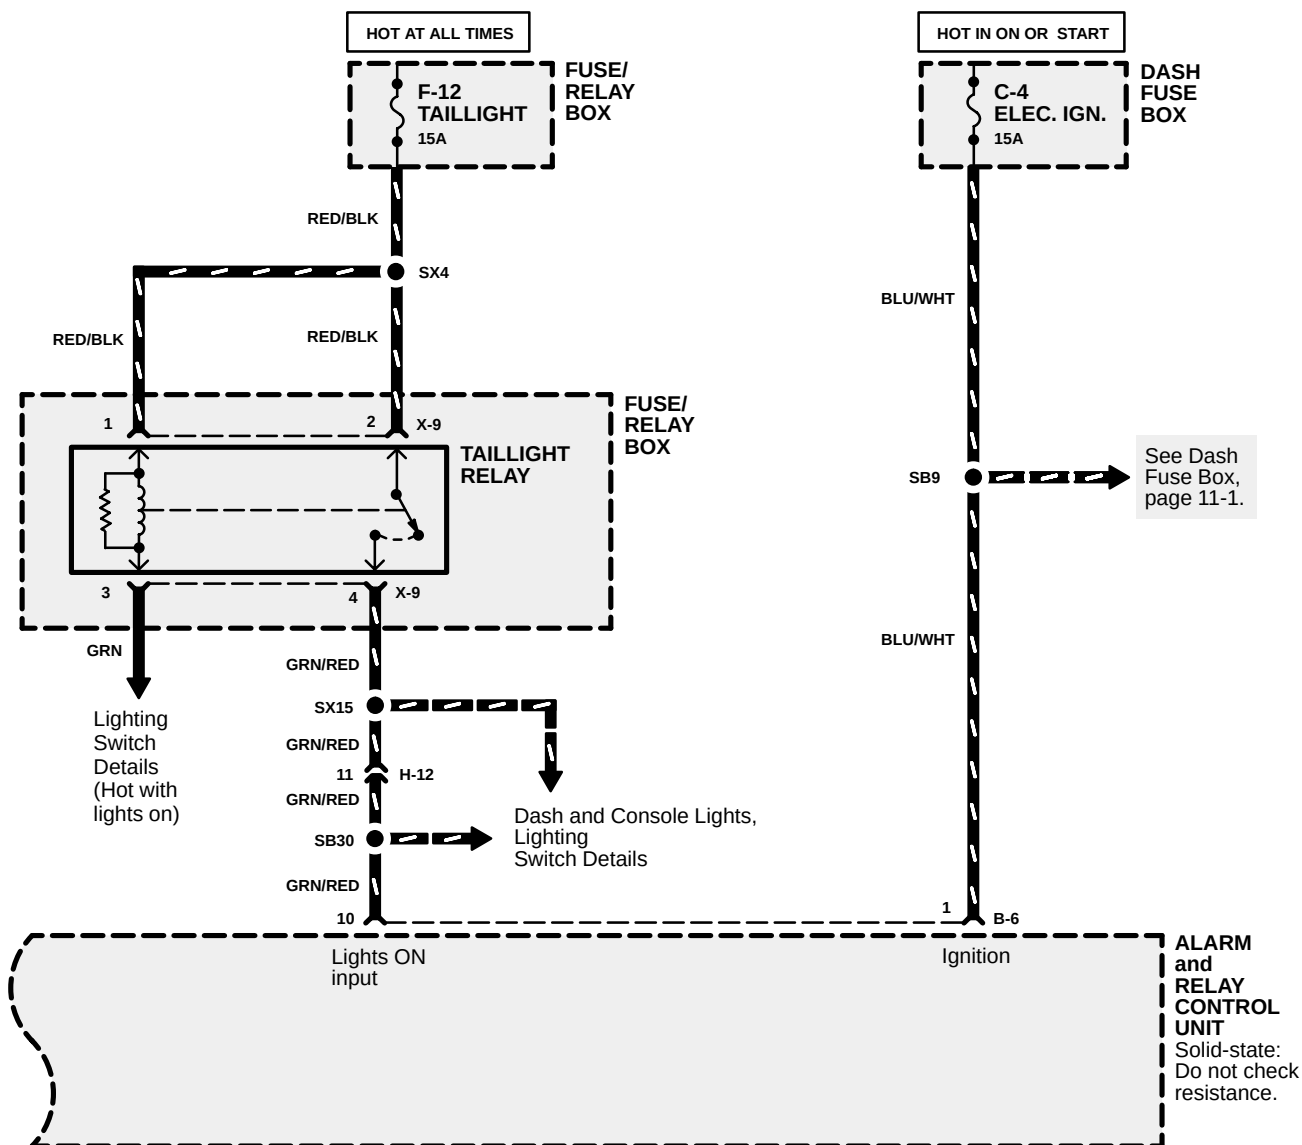

ALARM AND RELAY CONTROLS

Circuit Schematic

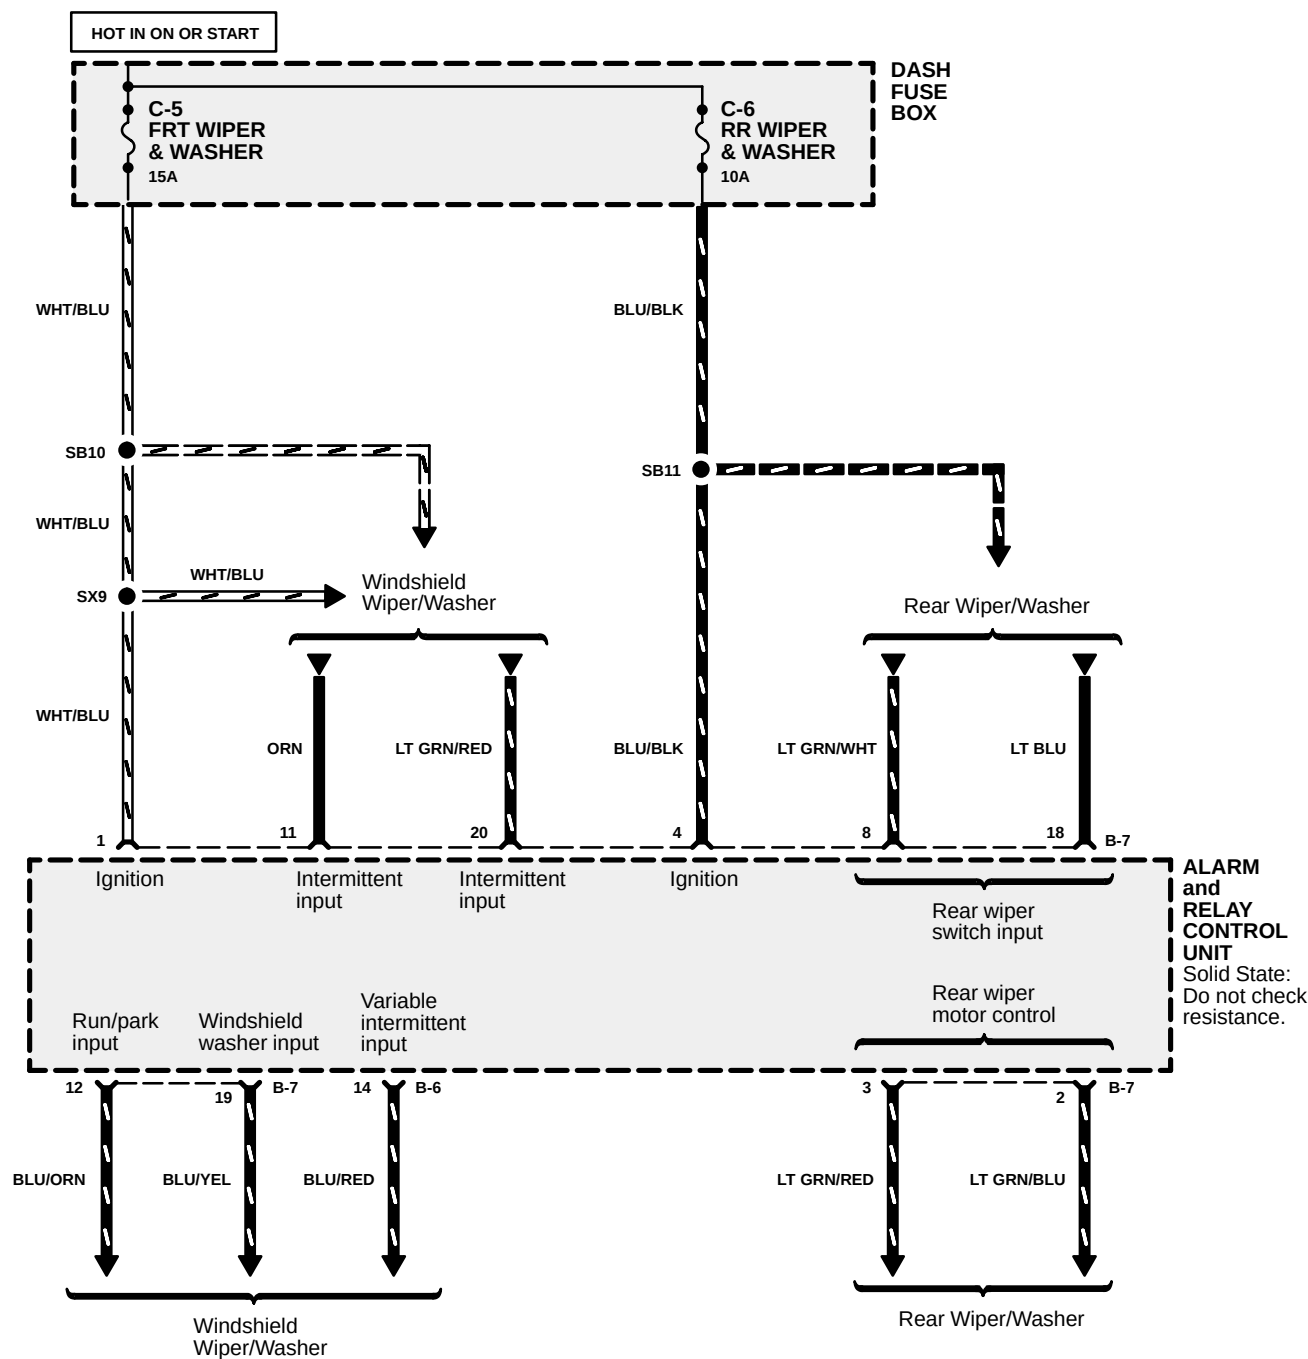

ALARM AND RELAY CONTROLS

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Alarm and Relay Control	
Unit	Behind right kick panel 116
Dash Fuse Box	Behind left dash side trim panel 55
Driver's Seat Belt Switch	In left front seat belt buckle
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 41
Starter Switch	Underside of steering column 46
Taillight Relay	In fuse/relay box 35
Connector	
B-11 (8-WHT)	Below I/P, right of steering column 58
B-24 (3-BLK)	Below driver's seat 104
H-12 (20-WHT)	Below I/P, above right dash side trim panel, on bracket 100
Ground	
B-2	Above right dash side trim panel 116
B-19	Behind top of left dash side trim panel 71

Circuit Operation

The alarm and relay control unit controls the Key-in ignition warning, seat belt warning, windshield wiper/washer system, rear wiper/washer system, doors open, dome light, and the rear defogger.