

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

A/T SHIFT INDICATOR


Component Location Index

- [A/T Shift Indicator Control Unit](#)
- [Automatic Transmission Mode Switch](#)
- [Dash Fuse Box](#)
- [Fuse/Relay Box](#)
- [Taillight Relay](#)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------


A/T SHIFT INDICATOR

Circuit Schematic

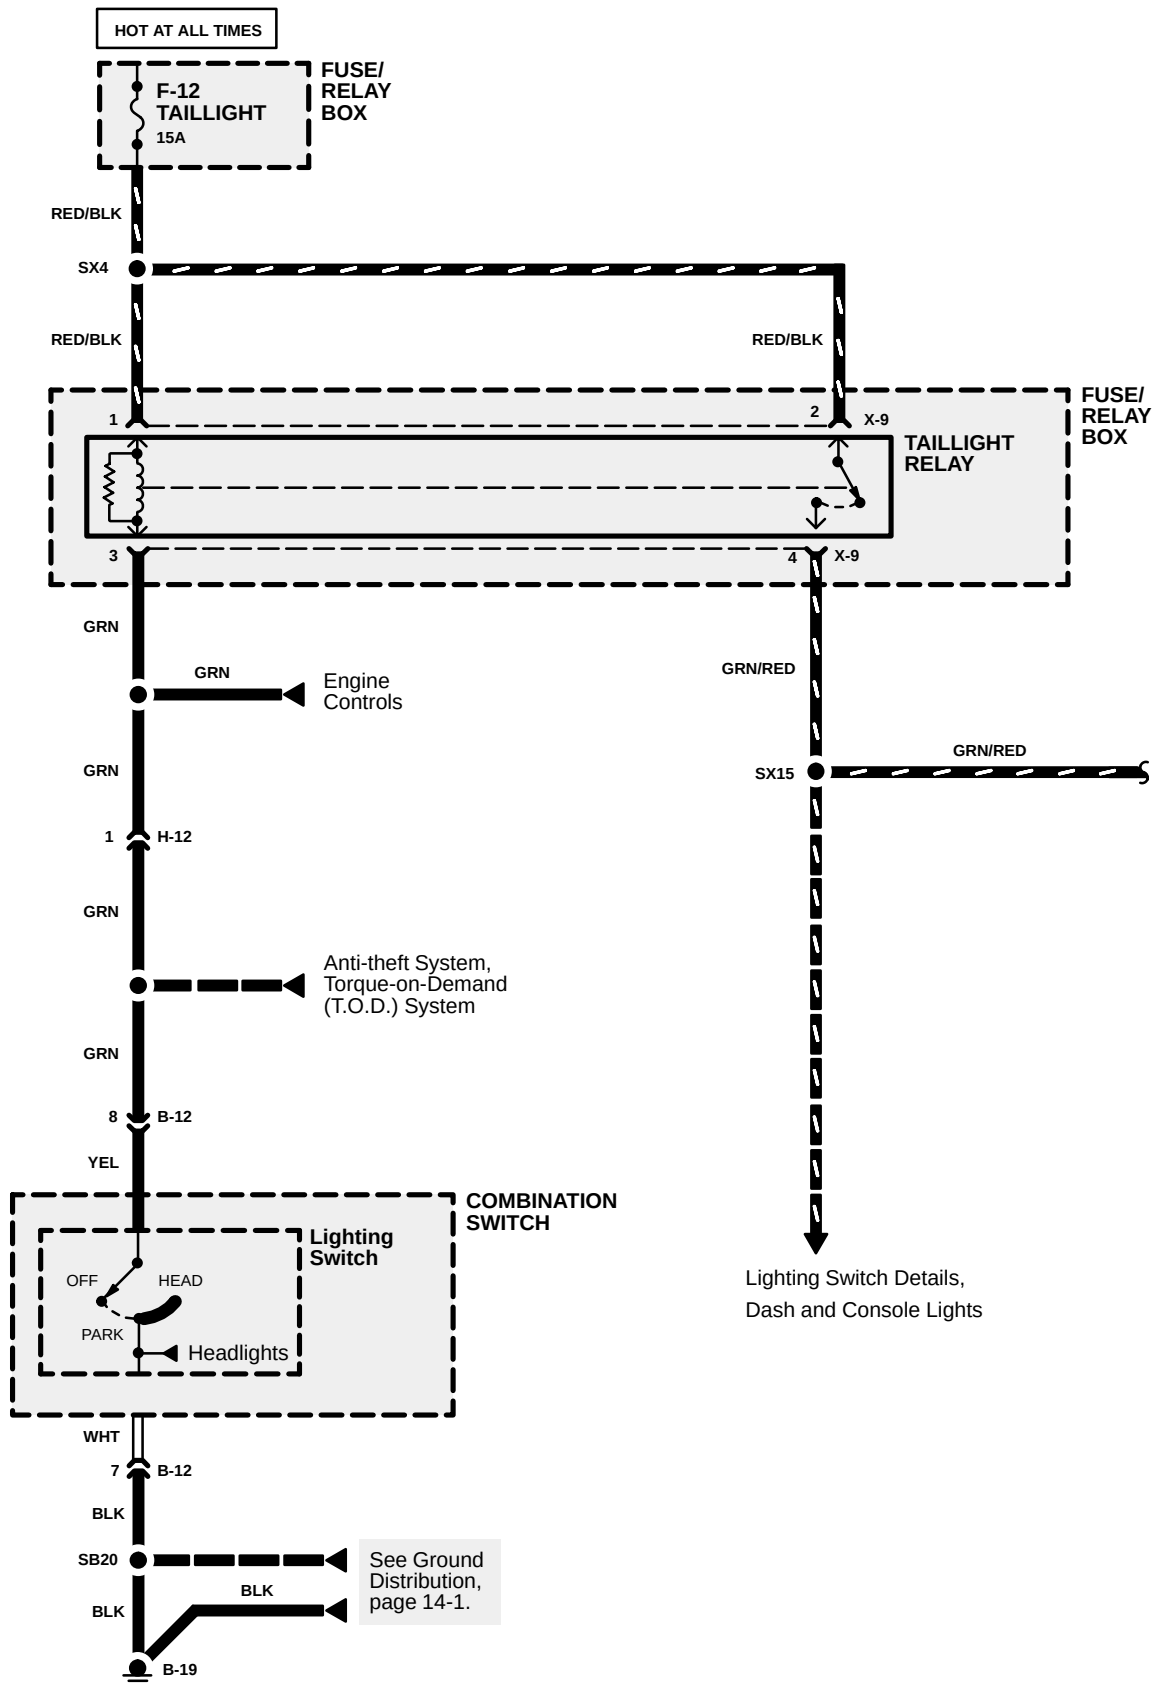

A/T SHIFT INDICATOR

Circuit Schematic

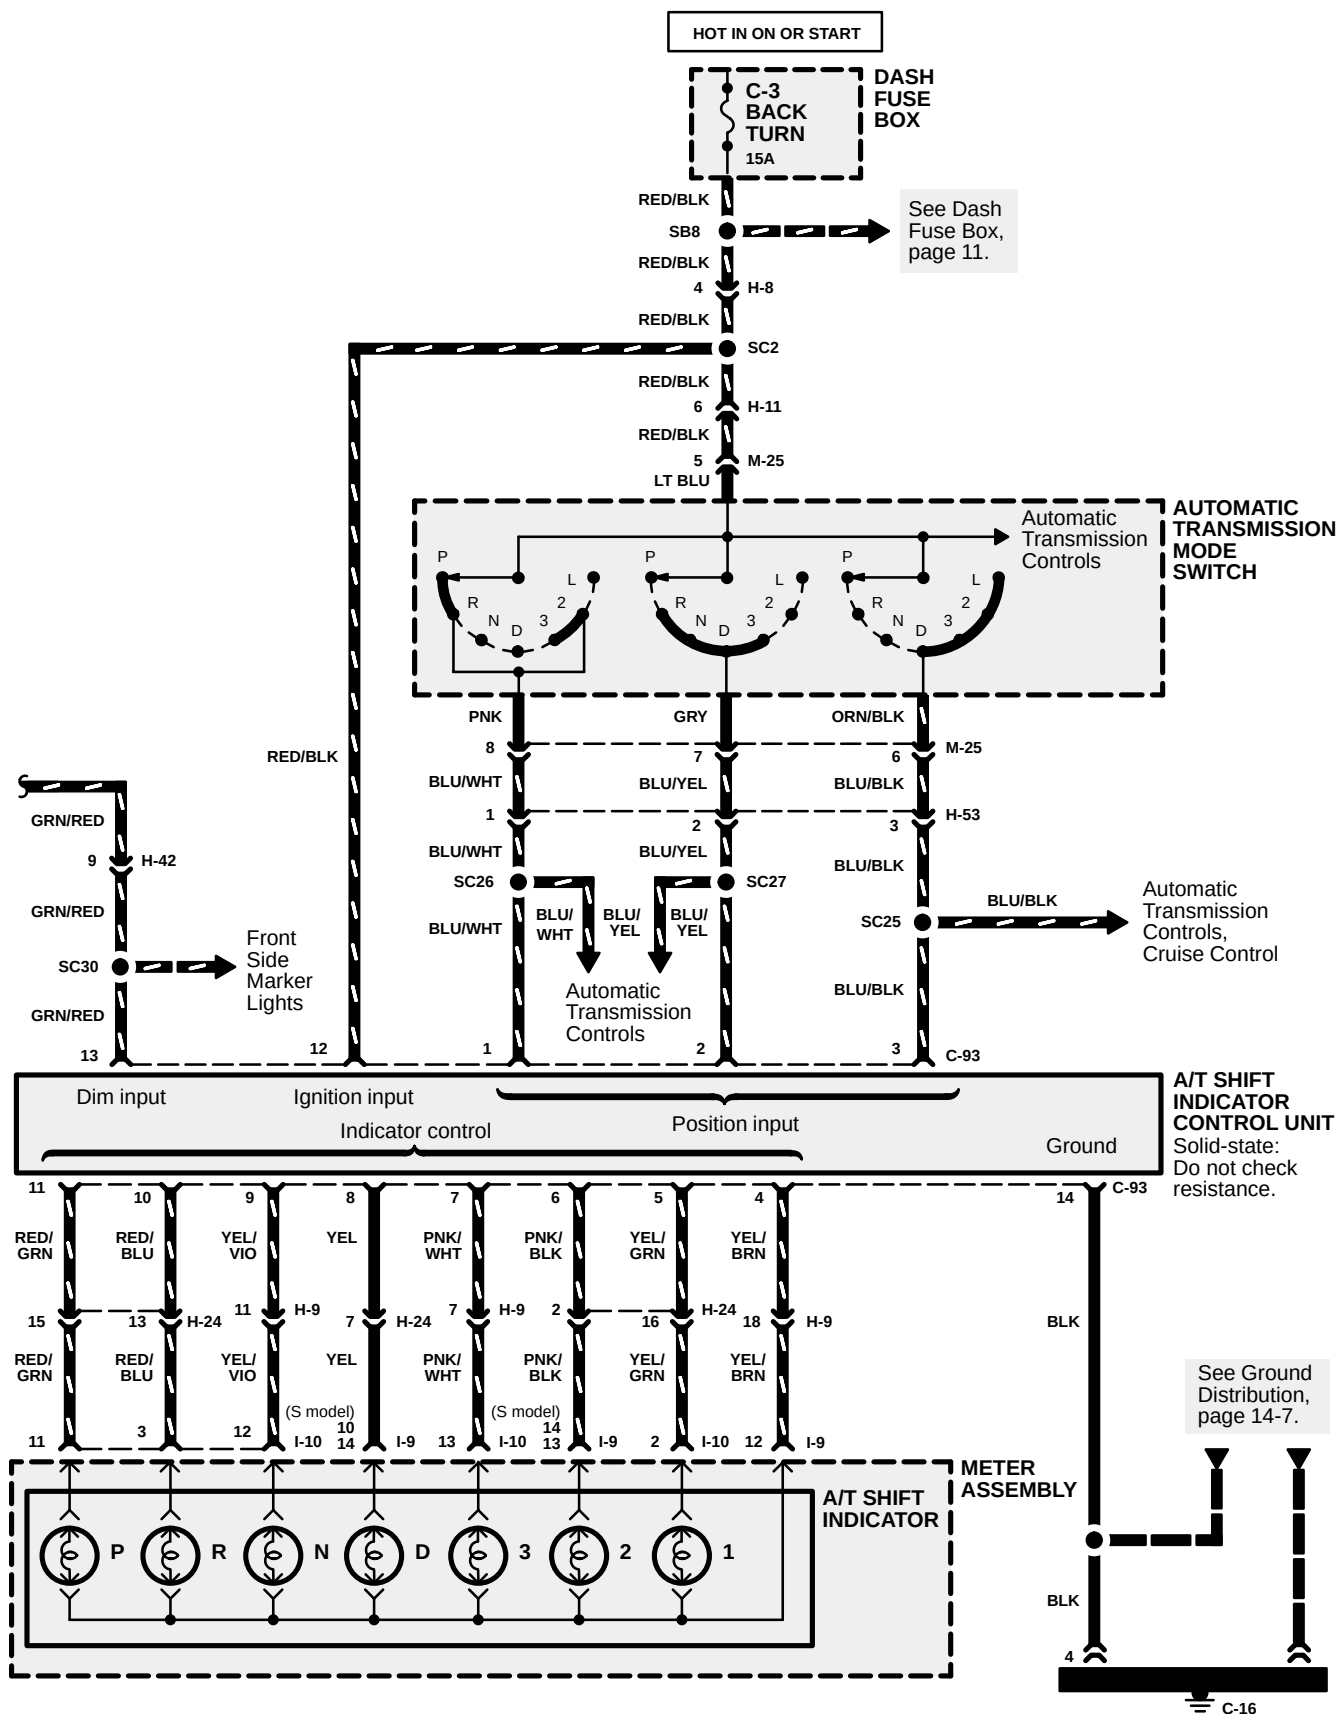

A/T SHIFT INDICATOR

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
A/T Shift Indicator Control	
Unit	Below I/P, left of steering column 74
Automatic Transmission	
Mode Switch	Beneath vehicle, on left side of transmission 43
Dash Fuse Box	Behind left dash side trim panel 55
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 41
Taillight Relay	In fuse/relay box 35
Connector	
B-12 (16-WHT)	Below I/P, right of steering column 58
H-8 (16-WHT)	Below I/P, above left dash side trim panel, on bracket 70
H-9 (20-BLK)	Below I/P, above left dash side trim panel, on bracket 70
H-11 (16-BLK)	Left front of engine compartment 27
H-12 (20-WHT)	Below I/P, above right dash side trim panel, on bracket 100
H-24 (18-YEL)	Below I/P, above left dash side trim panel, on bracket 70
H-42 (16-BLK)	Right front of engine compartment 31
H-53 (16-GRN)	Left front of engine compartment 27
I-9 (30-GRN)	On left top of meter assembly 53
I-10 (22-GRN)	On right top of meter assembly 53
M-25 (8-BLK)	On left side of transmission 52
Ground	
B-19	Behind top of left dash side trim panel 71
C-16	Left rear corner of engine compartment, on inner fender panel 39

Circuit Operation

With the starter switch in ON or START, battery voltage is applied to the automatic transmission mode switch and the A/T shift indicator control unit from fuse C-3. The automatic transmission mode switch sends a signal to the A/T shift indicator control unit corresponding to the gear selected. The A/T shift indicator control unit applies voltage to the appropriate A/T shift indicator causing it to light up.