


TRAILER ADAPTER

Component Index

- [Brake Switch](#)
- [Dash Fuse Box](#)
- [Flasher Unit](#)
- [Fuse/Relay Box](#)
- [Taillight Relay](#)
- [Trailer Lighting Connector](#)
 - [H-44 \(6-WHT\)](#)


TRAILER ADAPTER

Circuit Schematic

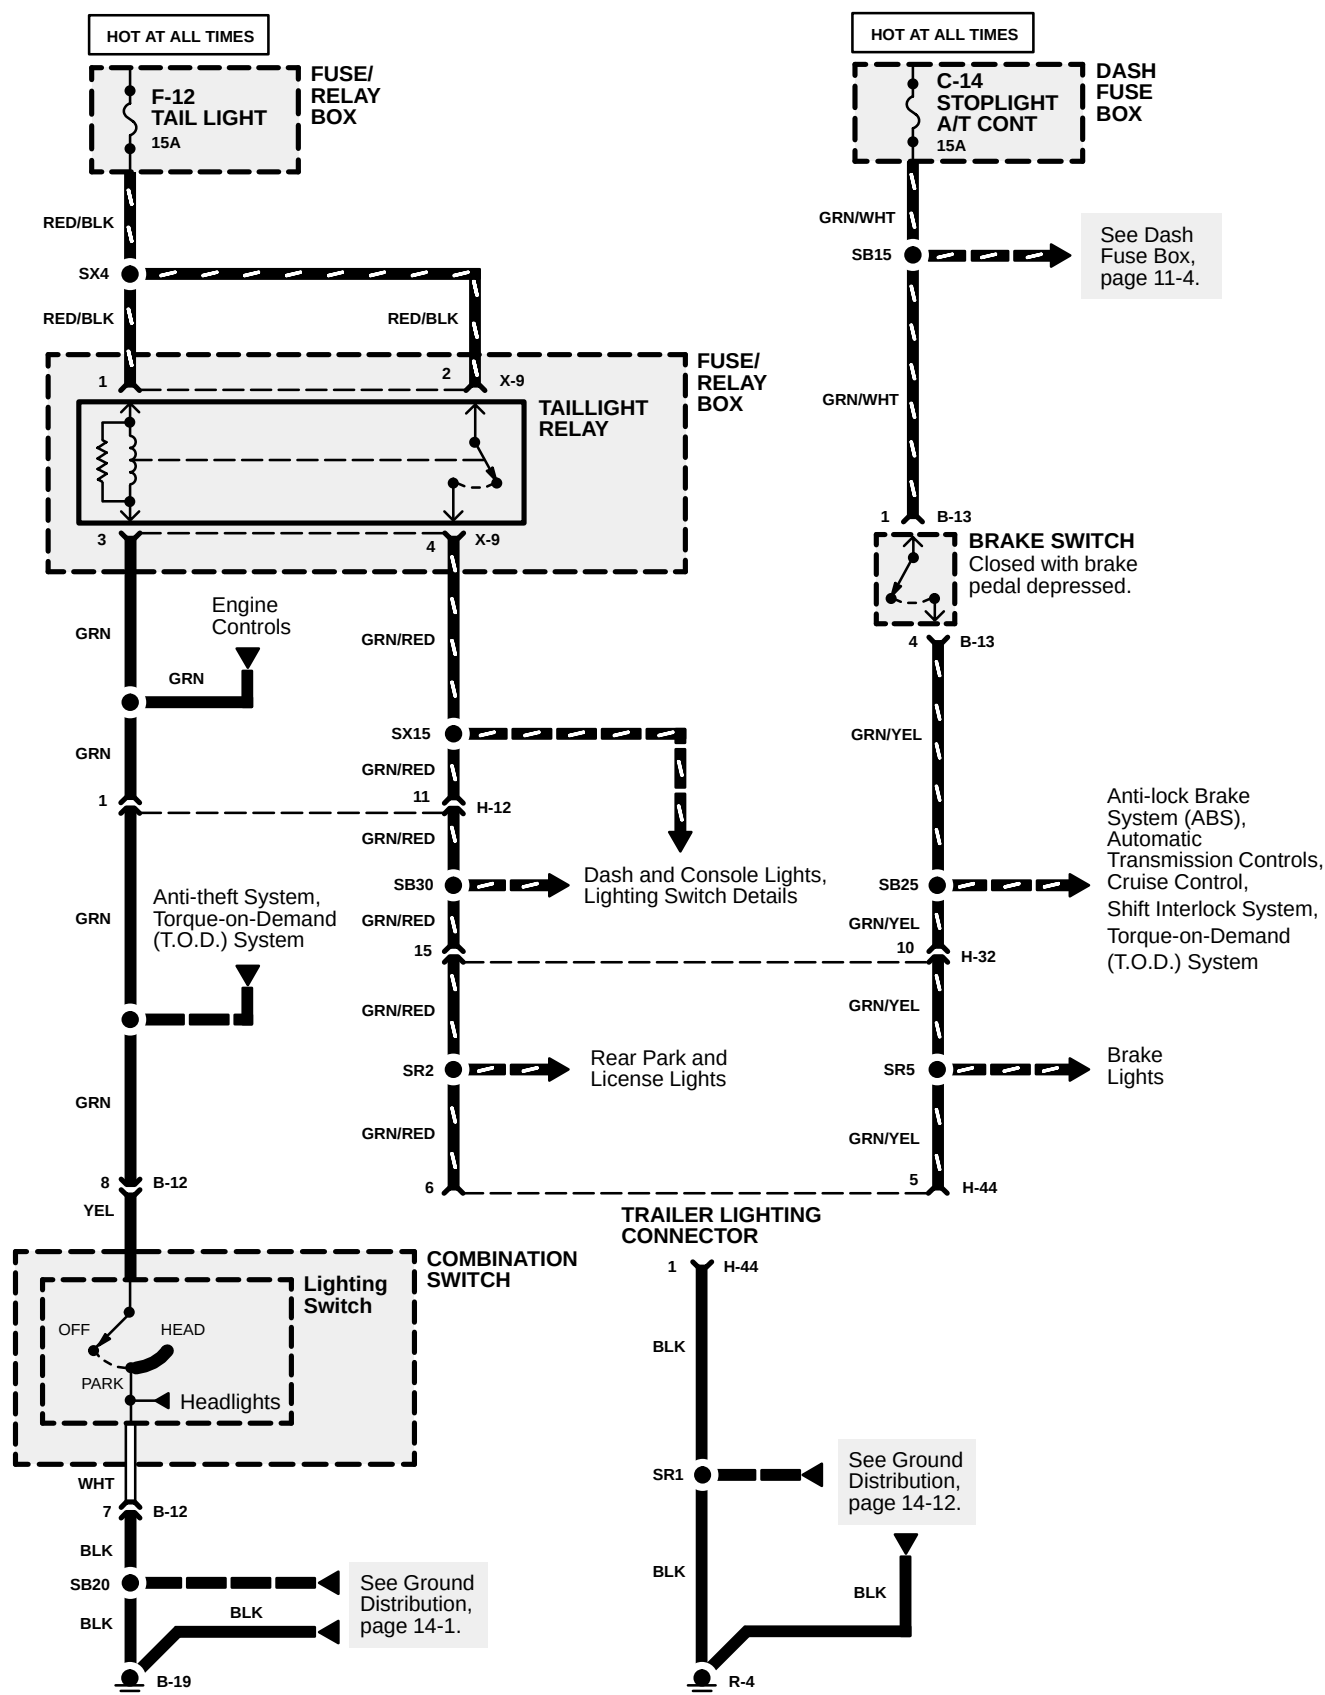

TRAILER ADAPTER

Circuit Schematic

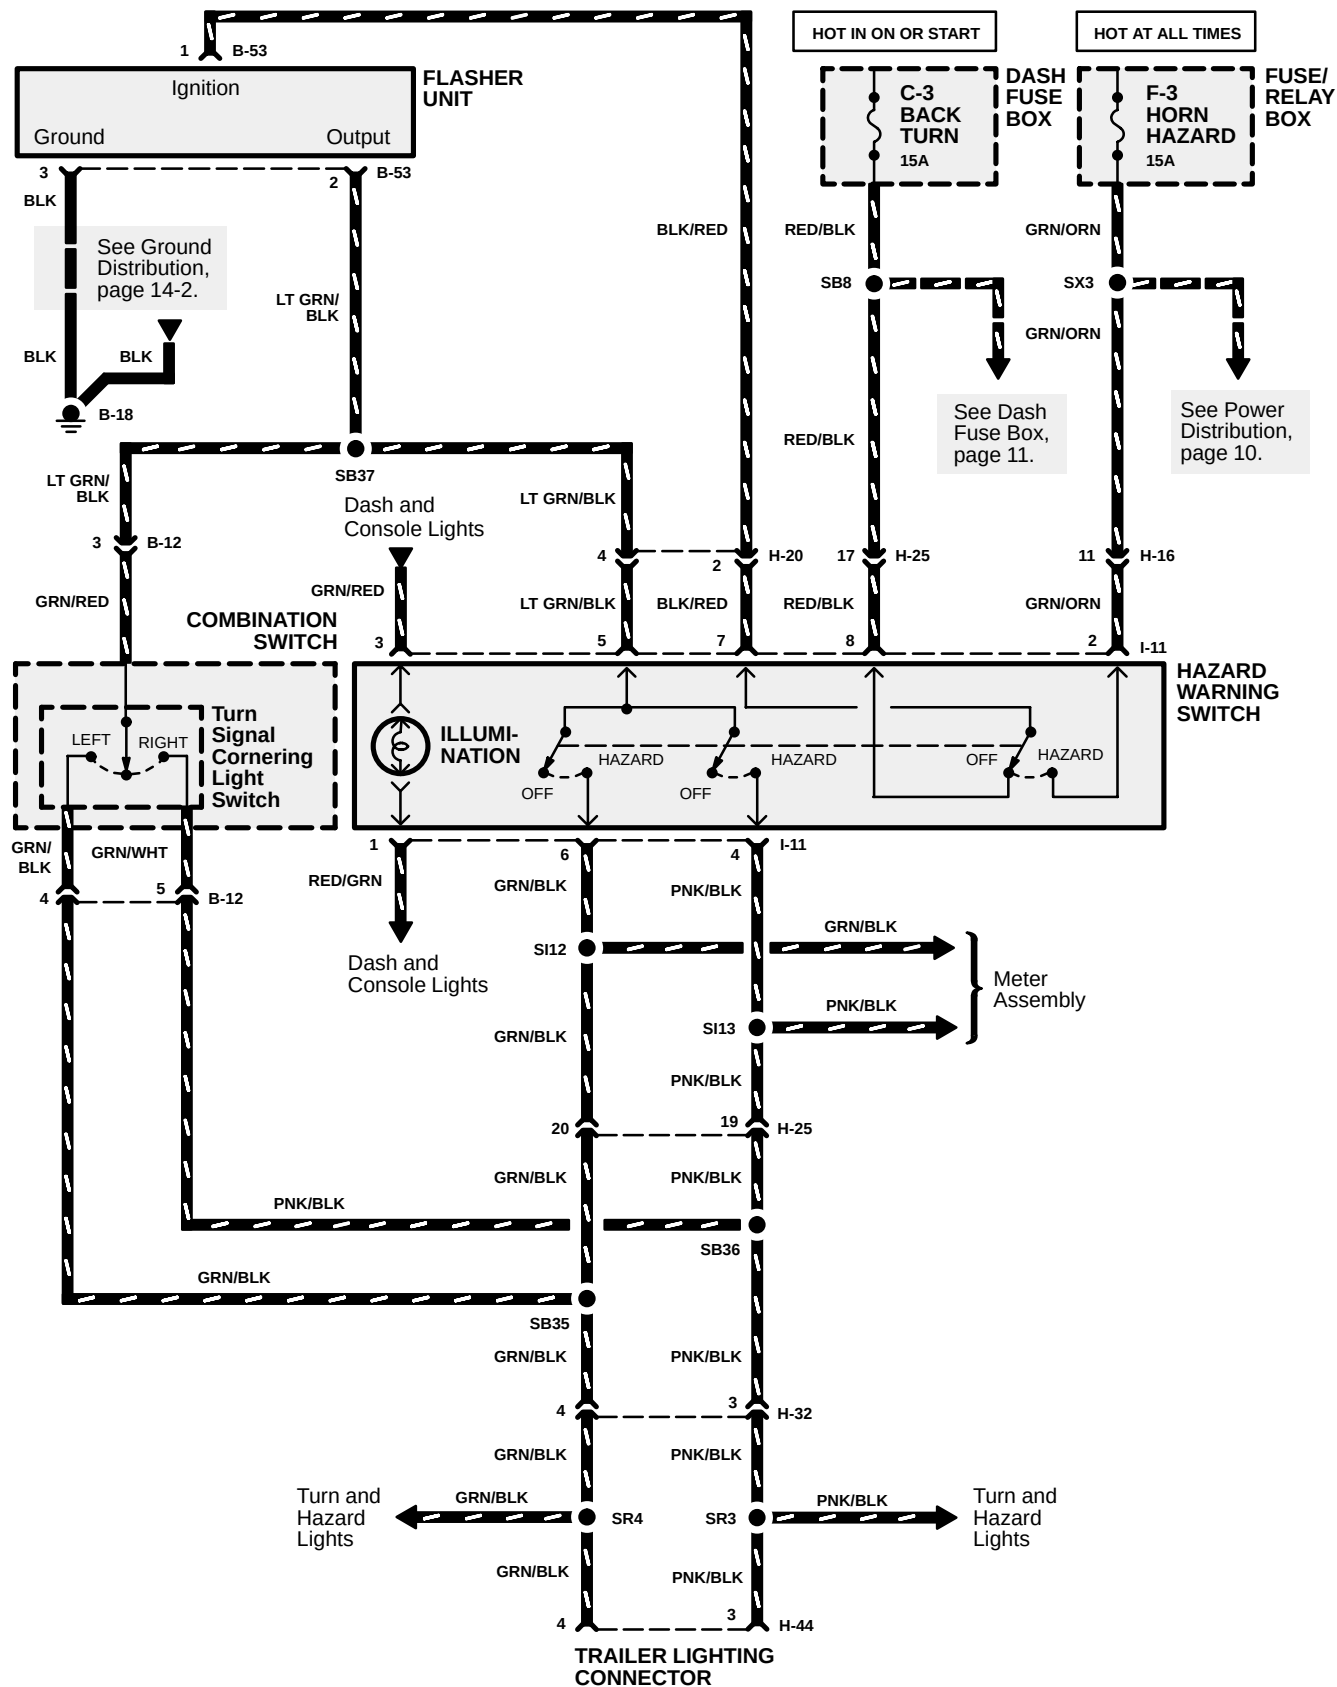

TRAILER ADAPTER

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Brake Switch	Below I/P, on brake pedal support 74
Dash Fuse Box	Behind left dash side trim panel 55
Flasher Unit	On top of dash fuse box 68
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 41
Taillight Relay	In fuse/relay box 35
Trailer Lighting Connector	
H-44 (6-WHT)	Below left rear corner of vehicle, behind grommet 102
Connector	
B-12 (16-WHT)	Below I/P, right of steering column 58
H-12 (20-WHT)	Below I/P, above right dash side trim panel, on bracket 100
H-16 (22-WHT)	Behind right dash side trim panel 120
H-20 (4-WHT)	Behind right dash side trim panel 120
H-25 (22-BLU)	Below I/P, above left dash side trim panel, on bracket 71
H-32 (22-WHT)	Below left front seat 105
Ground	
B-18	Behind top of left dash side trim panel 71
B-19	Behind top of left dash side trim panel 71
R-4	Left side of luggage room 90

Circuit Operation

The trailer connector is an extension of the main wiring harness. See corresponding exterior lights cell for circuit operation.