

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

DOOR MIRROR DEFOGGERS


Component Index

[Dash Fuse Box](#)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

DOOR MIRROR DEFOGGERS

Circuit Schematic

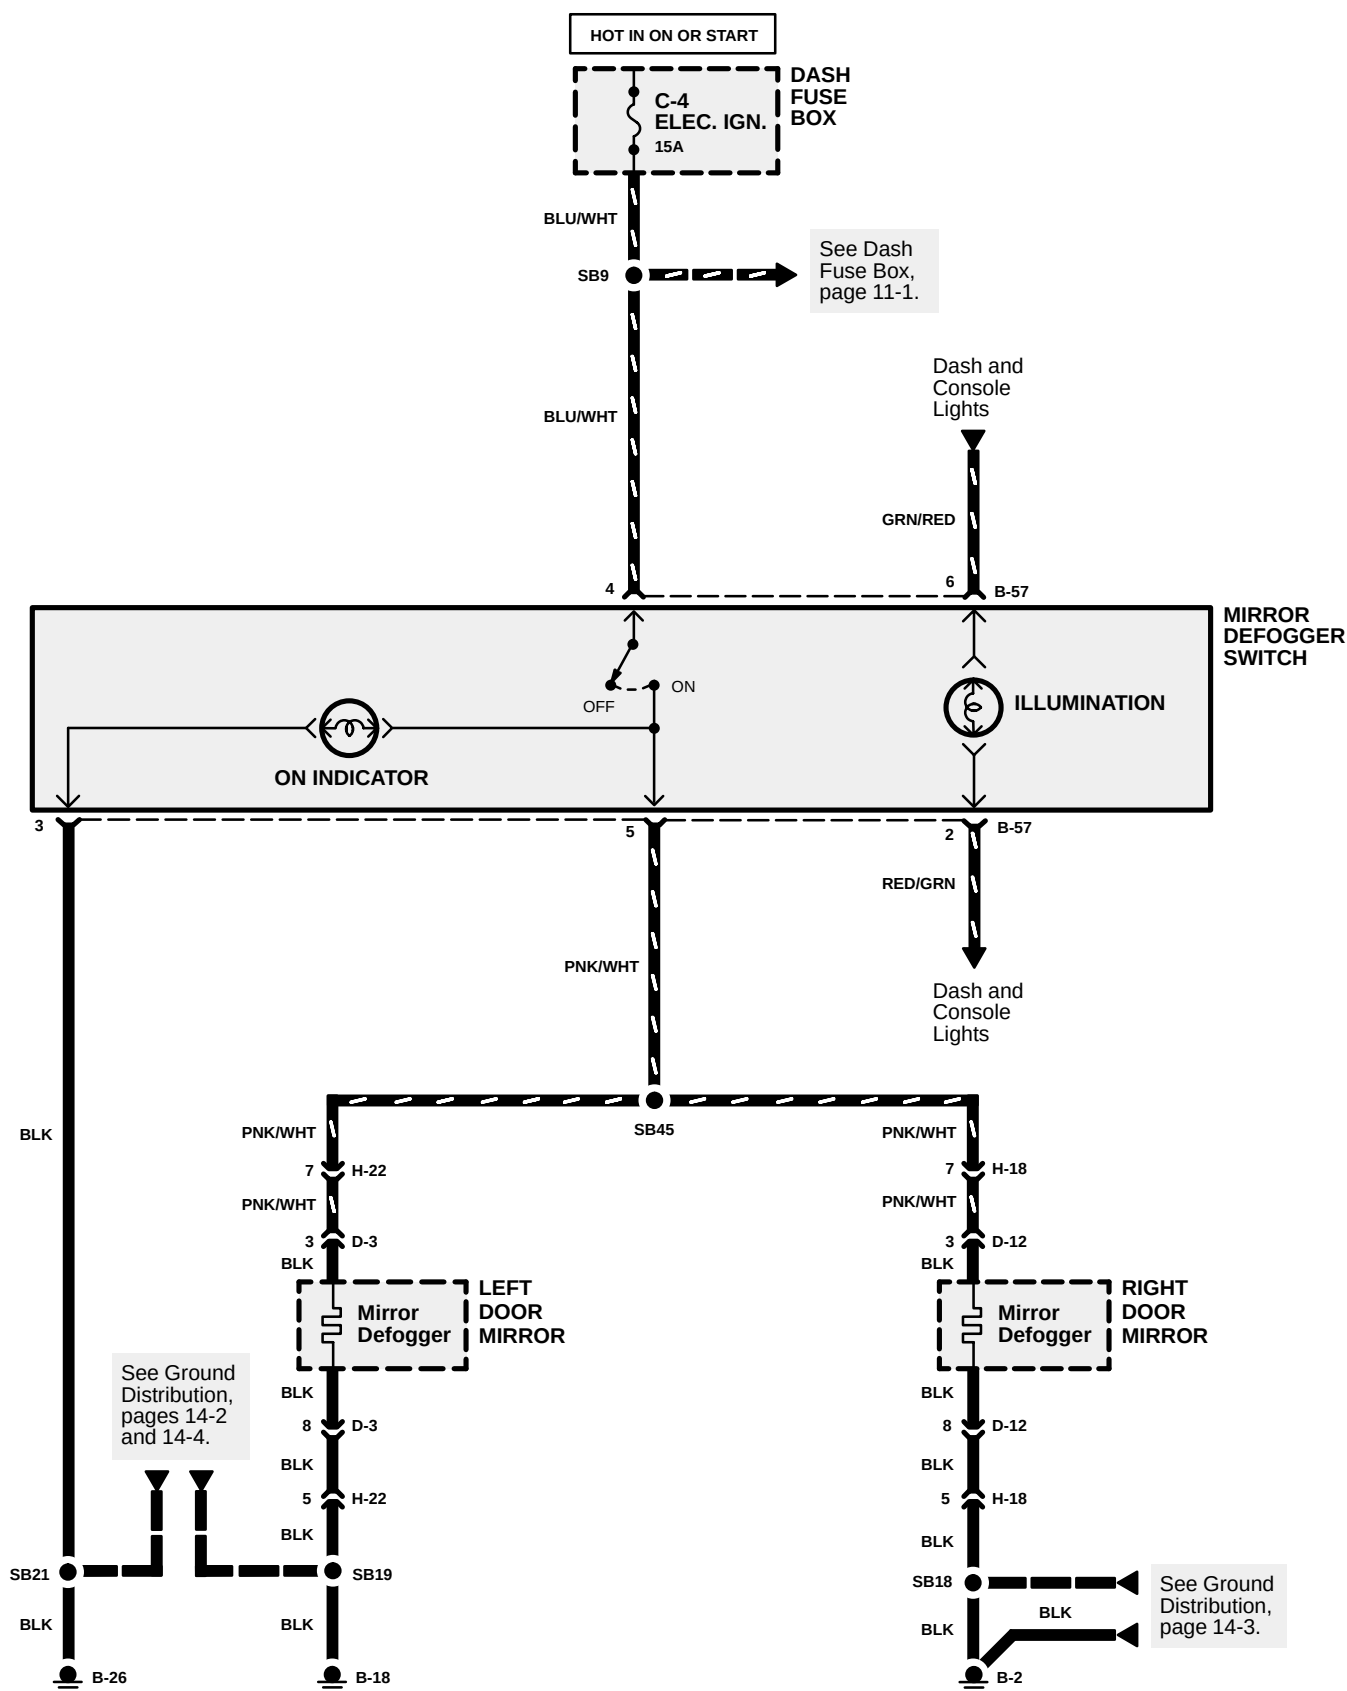

DOOR MIRROR DEFOGGERS

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Dash Fuse Box Behind left dash side trim panel	55
Connector	
D-3 (8-WHT) In top of left front door	78
D-12 (8-WHT) In top of right front door	78
H-18 (18-WHT) Behind right dash side trim panel, in access hole	54
H-22 (18-WHT) Behind left dash side trim panel, in access hole	54
Ground	
B-2 Above right dash side trim panel	116
B-18 Behind top of left dash side trim panel	71
B-26 Below rear of center console	67

Circuit Operation

With the starter switch in ON or START, voltage is applied through fuse C-4 to the mirror defogger switch.

With the mirror defogger switch in ON, voltage is applied to the left and right door mirror defoggers and the defogger indicator light. The defogger on indicator lights up and the left and right door mirror defoggers heat the mirror surfaces to remove any fog.