

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

CIGARETTE LIGHTER


Component Index

[Dash Fuse Box](#)

Master Index	Power Distribution	Ground Distribution	Harness Routing Views	Connector Views
------------------------------	------------------------------------	-------------------------------------	---------------------------------------	---------------------------------

CIGARETTE LIGHTER

Circuit Schematic

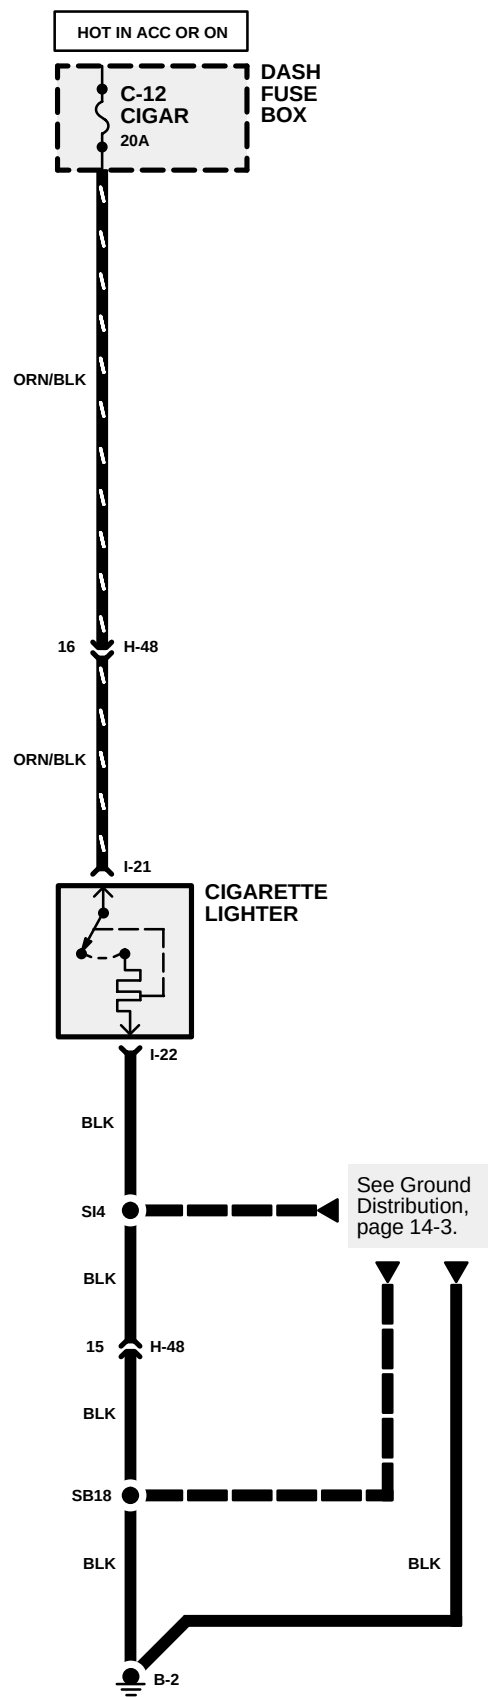

CIGARETTE LIGHTER

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>		<u>Photo No.</u>
Dash Fuse Box	Behind left dash side trim panel	55
<u>Connector</u>		
H-48 (16-BLK)	Behind right dash side trim panel	120
<u>Ground</u>		
B-2	Above right dash side trim panel	116

Circuit Operation

With the starter switch in ACC or ON, battery voltage is applied through fuse C-12 to the cigarette lighter. When the cigarette lighter is depressed, the cigarette lighter element completes the circuit to ground. When the element becomes sufficiently heated, it is spring-released and the circuit opens.