


Buick Lacrosse 2010 – 2016 fuse box diagram

Passenger Compartment Fuse Box

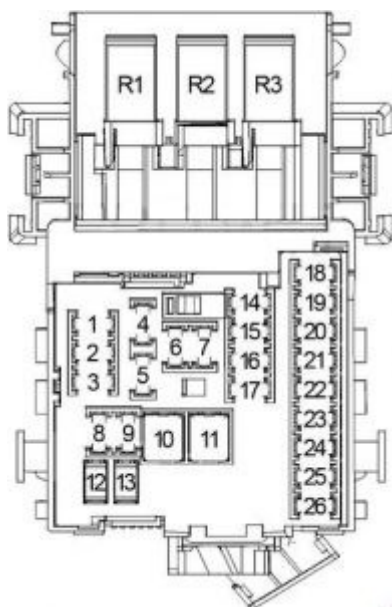


Buick LaCrosse – fuse box diagram – passenger compartment

Nº	A	Protected Component
1	2	Steering Wheel Control Switch
2	15	Body Control Module (BCM)
3	15	Body Control Module (BCM)
4	15	Audio System
5	7.5	Vehicle Communications Interface Module (VCIM)
6	20	Accessory Power Outlet (Center Console 1)
7	20	Accessory Power Outlet (Center Console 2)
8	15	Body Control Module (BCM)
9	15	Body Control Module (BCM)
10	30	Body Control Module (BCM)
11	40	HVAC Control Module
12	25	Circuit Breaker: Passenger Seat
13	25	Circuit Breaker: Driver Seat, Seat Memory Control Module
14	7.5	Data Link Connector
15	10	Inflatable Restraint Sensing and Diagnostic Module (SDM)
16	10	Rear Compartment Lid Latch
17	10	HVAC Control Module
18	25	Audio System
19	10	Head Up Display (HUD), Info Display Module, Multimedia Player Interface Module, Radio/HVAC Control
20	5	Inflatable Restraint Passenger Presence System (PPS) Module
21	5	Instrument Panel Cluster (IPC)

22	2	Ignition Switch
23	15	Body Control Module (BCM)
24	15	Body Control Module (BCM)
25	–	–
26	30	Accessory AC/DC Power Control Module
Relay		
R1		Accessory
R2		–
R3		Rear Compartment Lid Unlatch

Engine Compartment Fuse Box

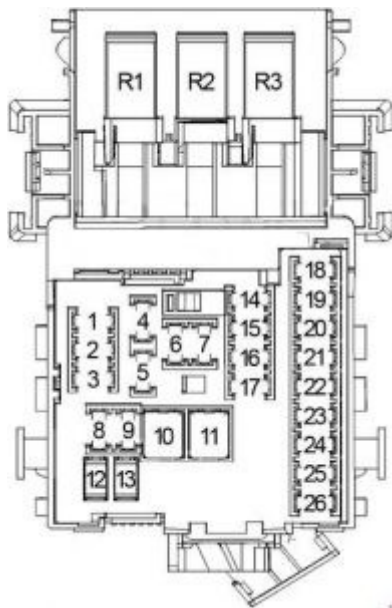

Buick LaCrosse – fuse box diagram – engine compartment


Nº	A	Protected Component
1	15	Transmission Control Solenoid Valve Assembly
2	5	Engine Control Module (ECM)
3	10	'14: A/C Compressor Clutch
4	–	–
5	5	Engine Control Module (ECM)
6	30	Windshield Wiper Motor
7	–	–
8	15	3.0L (LF1), 3.6L (LLT, LFX): Ignition Coils, Engine Control Module (ECM)
9	15	3.0L (LF1), 3.6L (LLT, LFX), 2.4L (LUK): Ignition Coils, Engine Control Module (ECM)
10	20	Engine Control Module (ECM)
11	10	3.0L (LF1), 3.6L (LLT, LFX): Heated Oxygen Sensors

	10	3.6L (LFX): Heated Oxygen Sensors, Mass Air Flow (MAF) Sensor/Intake Air Temperature (IAT) Sensor, Fuel Composition Sensor
12	30	Starter Motor
13	7.5	Fuel Pump Flow Control Module, Transmission Control Solenoid Valve Assembly
14	5	2.4L (LUK – Hybrid): Heater Coolant Pump
15	10	2.4L (LUK – Hybrid): Starter/Generator Control Module
16	7.5	3.6L (LLT): Mass Air Flow (MAF) Sensor/Intake Air Temperature (IAT) Sensor
17	5	Inflatable Restraint Sensing and Diagnostic Module (SDM)
18	–	–
19	–	–
20	–	–
21	30	Window Switch (Left Rear/Right Rear)
22	30	Sunroof Control Module, Sunroof Sunshade Motor Module
23	10	Power Steering Control Module
	7.5	2.4L (LUK – Hybrid): Hybrid/EV Battery Pack
24	30	"14: Window Switch (Left Front/Right Front)
25	–	–
26	60	ABS
27	30	Parking Brake Control Module
28	40	Rear Window Defogger
29	15	Seat Lumbar Adjuster Switch – Driver
30	15	2.4L (LUK -Hybrid): Hybrid/EV Battery Pack Cooling Fan
31	–	–
32	15	Body Control Module (BCM)
33	25	Heated Seat Control Module
	25	Memory Seat Module
34	25	ABS
35	30	Audio Amplifier
36	10	Adaptive Forward Lighting (AFL)
37	10	Right Headlamp (High Beam), High Beam Solenoid Actuator (Right)
38	10	Left Headlamp (High Beam), High Beam Solenoid Actuator (Left)
39	–	–

40	–	–
41	20	Brake Booster Pump Motor
42	30	Cooling Fan Motor (Right)
43	–	–
44	30	2.4L (LUK -Hybrid): Transmission Fluid Pump
45	30	Cooling Fan Motor (Left)
46	10	Cooling Fan Low Speed Relay, Cooling Fan Left High Speed Relay
47	10	2.4L (LAF), 3.0L (LF1), 2.4L (LUK): Heated Oxygen Sensors, Mass Air Flow (MAF) Sensor/Intake Air Temperature (IAT) Sensor
	10	3.6L (LLT): Camshaft Position (CMP) Actuators
	10	3.6L (LFX): Heated Oxygen Sensor, Multifunction Intake Air Sensor, Evaporative Emission Purge Solenoid Valves
48	15	Front Fog Lamps
49	15	Right Headlamp (Low Beam)
50	15	Left Headlamp (Low Beam)
51	15	Horn
52	5	Instrument Panel Cluster (IPC)
53	10	Air Quality Sensor, Brake Booster Vacuum Switch, Inside Rearview Mirror, Rearview Camera, Active Grille Air Shutter Actuator
54	5	HVAC Control Module
55	7.5	Outside Rearview Mirror Switch, Window Switch (Driver/Passenger Side), Garage Door Opener
56	15	Windshield Washer Fluid Pump
57	–	–
58	–	–
59	50	Secondary Air Injection Pump
60	7.5	Heated Mirror
61	–	–
62	10	Evaporative Emission (EVAP) Canister Vent Solenoid Valve
63	–	–
64	5	Headlamp Control Module
65	–	–
66	15	Secondary Air Injection Pressure Sensor
67	20	Fuel Pump Flow Control Module

68	–	–
69	5	Body Control Module (BCM)
70	5	Side Object Sensor (Left/Right), Rear Parking Assist Control Module
71	–	–
Relay		
R1	Air Conditioning Compressor Clutch	
R2	Starter	
R3	–	
R4	Front Wiper (Speed Control)	
R5	Front Wiper (On/Off)	
R6	2.4L (LUK -Hybrid): Heater Coolant Pump	
R7	Engine Control Module (ECM)	
R8	–	
R9	Cooling Fan Right (High Speed)	
R10	Cooling Fan (Low Speed)	
R11	2.4L (LUK -Hybrid): Transmission Fluid Pump	
R12	–	
R13	Cooling Fan Left (High Speed)	
R14	Low Beam	
R15	Ignition	
R16	Secondary Air Injection Pump	
R17	Rear Window Defogger	
Relay (Non-Serviceable)		
R18	Horn	
R19	Windshield Washer Pump	
R20	Front Fog Lamp	
R21	High Beam	
R22	Door Locks	
R23	2.4L (LUK – Hybrid): Starter/Generator Control Module	

Fusible Link Block

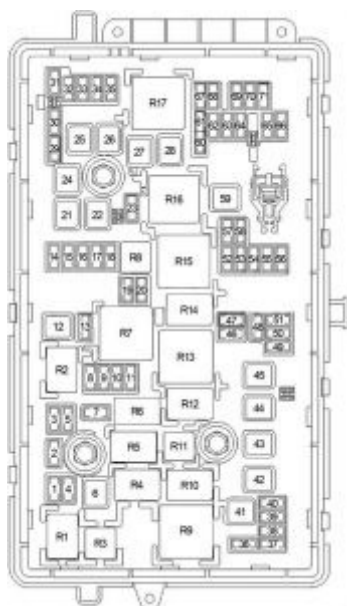

Buick LaCrosse – fuse box diagram – fuseible link block

No.	A	Circuit Protected
1	100	Fuse Block (Instrument Panel)
2	100	Fuse Block (Instrument Panel)
3	100	Fuse Block (Rear Left)
4	100	Fuse Block (Rear Left)
5	250	Fuse Block (Underhood)
6	300	Starter Motor