


Instrument panel fuse block

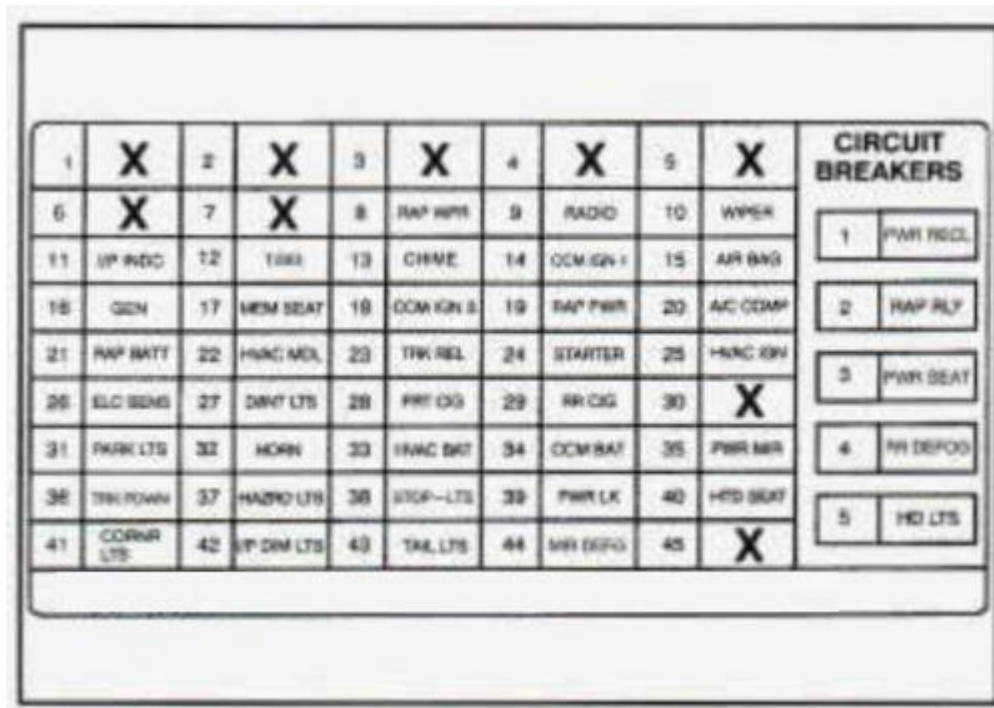

Fuse	Usage
RAP WPR	Component Center (RAP Wiper) Relay

RADIO	Radio Receiver
WIPER	Windshield Wipermasher Switch
I/P INDC	Inflatable Restraint Diagnostic Energy Reserve (with Sensor) Module, Instrument Panel Cluste
TISIG	Parneutral Position and Backup Lamp Switch, Turn Signal Lamp Flasher
CHIME	Warnin Alarm Cruise Control Release Switch, Inside Rearview Mirror,%ear dindow Defogge! Relay, Parmeutral Position and Backup Lamp Switch, Automatic Level Control Sensor
CCM IGN 1	Central Control Module (CCM)
AIR BAG	Inflatable Restraint Diagnostic Energy Reserve (with Sensor) Module
GEN	Generator, Secondary Engine Cooling Fan Relay
MEM SEAT	Driver's Seat Ad'uster Memory Module, Heated Driver's Seat Switch, Heated 4 assenger's Seat Swltch
CCM IGN 3	Central Control Module (CCM) Remote Control Door Lock Receiver and Theft Deterrent dodule, Cruise Control Module, Cruise Control Swtcht


RAP PWR	Accessory Time Delay Cut-Off (RAP Power) Relay
A/C COMP	A/C Compressor Relay, Primary Engine Cooling Fan Relay
RAP BATT	Component Center (RAP Wiper) Relay
HVAC MDL	Blower Motor Control Module
TRK REL	Rear Compartment Lid Release Switch
STARTER	Theft Deterrent Relay, Inflatable Restraint Diagnostic Energy Reserve (with Sensor) Module
HVAC IGN	Instrument Cluster, Heater-A/C Control, Vacuum/Electric Solenoid, Electric Actuator
ELC SENS	Automatic Level Control Sensor, Rear Compartment Courtesy Lamp
D/INT LTS	Compartment Center Relay
FRT CIG	Front Cigar Lighter
RR CIG	Rear Cigar Lighter

PARK LTS	Park Lamp Relay
HORN	Horn Relay
HVAC BAT	Warning Alarm, Heater-A/C Control, Instrument Cluster, Headlamp Switch, Radio Reciver
CCM BAT	Center Control Module (CCM)
PWR MIR	Door Lock Switches, Outside Rearview Mirrors, Ignition Key Disable Relay Assembly
TRK PDWN	Rear Compartment Lid Pull-Down Actutor
HAZARD LTS	Hazard Lamp Flasher
STOP-LTS	Stoplamps Switch
PWR LK	Door Lock Relay
HTD SEAT	Heated Driver's and Passenger's Seat Control Modules
CORNR LTS	Instrument Cluster, Radio Control, Cornering Lamps, Turn Signal Switch, Front Park Lamps

I/P DIM LTS	Headlamp Switch Control for Interior Lamps, Dimming
TAIL LTS	Rear Taillamps, Rear Side Marker Lamps, License Lamp
MIR DEFG	Outside Rearview Mirror Defogger
Circuit Breaker	Usage
PWR RECL	Lumbar, Power Antenna
RAP RLY	Accesory, Time Delay Cut-Off (RAP Power) Relay
PWR SEAT	Driver's amd Passenger's Adjuster Switches, Driver's Seat Adjuster Memory Module, Driver's and Passenger's Seats Recline Switches
RR DEFOG	Rear Defogger Relay
HD LTS	Headlamp Relay, Daytime Running Lamps (DRL) Relay

Underhood Electrical Center

The electrical center is located on the passenger side wheel housing in the engine compartment.

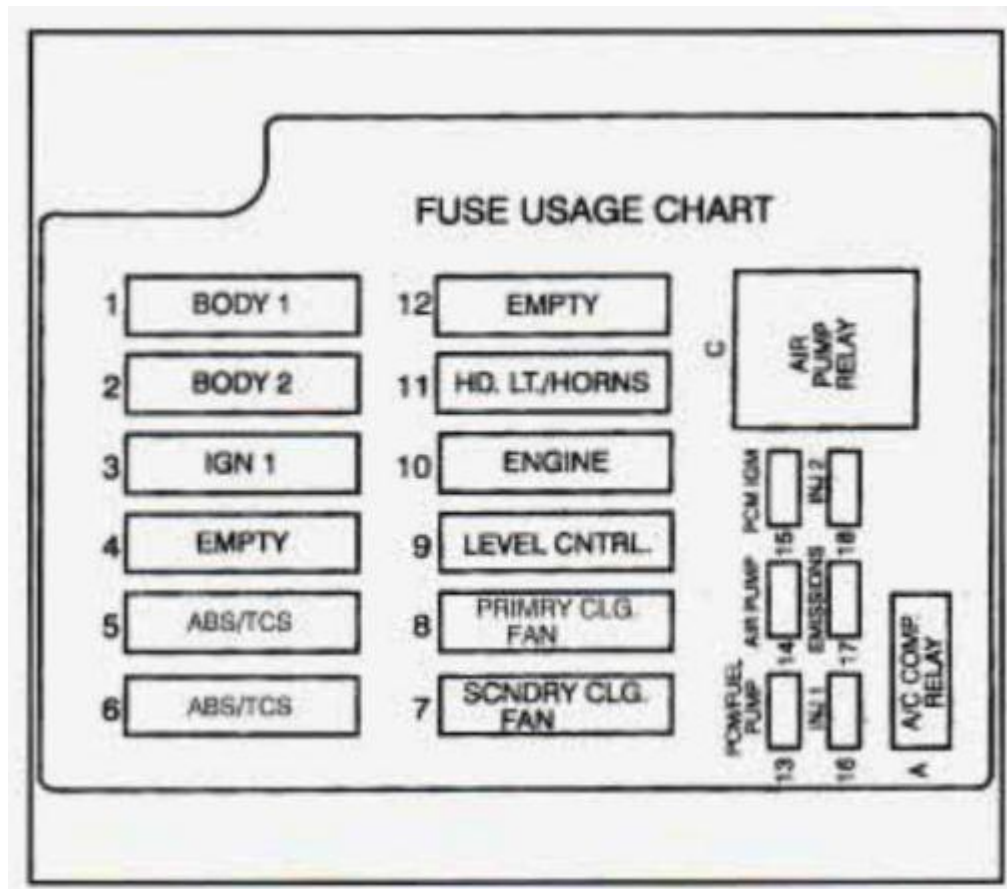

Maxi Fuse	Usage
BODY 1	Circuit Breakers: PWR SEAT, RRDEFOG; I/P Fuses: TRK PDWN, WRD LTS, HTD SEAT, STOP-LTS, PWR LK

BODY 2	Circuit Breaker: RAP RLY, I/P Fuses: RAP BAm, HVAC MDL, ELC SENS, D/INT LTS, FRT CIG, RRCIG, HVAC BAT, CCM BAT, PWR MIR
IGN 1	Concealed Fuse; I/p Fuses: RAP WPR, RADIO, WIPER, I/P INDC, T/SIG, CHIME, .CCM IGN 1, AIR BAG, STARTER; U/H Electrical Center: PCM IGN, INJ1, EMISSIONS, I
ABSECS (#5)	ABS/TCS Brake Pressure.Modulator Valve
ABSECS (#6)	ABS/TCS Brake Pressure.Modulator Valve
SCNDRY CLG FAN	Secondary Engine Cooling Fan Rel
PRIMRY CLG FAN	Pfimary .Engine Cooling Fan Relay
LEVEL CONTROL	Automatic Level Control Air Compress
ENGINE	U/H Electrical Center: PCM/FUEL PUMP, AIR PUMP
HEADLIGHTS/ HORNS	Circuit-Breaker: HD LTS; I/P Fuses: PARK LTS, HORN

Mini Fuse	Usage
PCM/FUEL PUMP	Fuel Pump Relay, Fuel Pump/Engine Oil Pressure Indicator Switch, Powertrain Control Module (PCM)
AIR PUMP	Secondary Air Injection (AIR) Pump Relay
PCM/IGN	Powertrain Control Module (PCM), Ignition Coil
INJ 1	Fuel Injectors Cylinders 1,4,6,7
EMISSIONS	Exhaust Gas Recirculation (EGR); Vacuum Control Signal Solenoid Valve, Secondary Air Injection (AIR), Pump Relay (Coil), Mass-Flow Sensor, Electronic Transmission, Left and Right Heated Oxygen Sensors, Evaporative Emission (EVAP) Canister Purge Solenoid Valve
INJ 2	Fuel Injectors Cylinders 2,3,5, 8

Relay	Usage
A/C COMP RELAY	A/C Compressor Relay
AIR PUMP RELAY	Secondary Air Injection -(AIR) Pump Relay

