

SPECIFICATIONS

HOOD	Type	Rear hinged, gas lifter type
FRONT DOOR	Construction	Front hinged, full door construction
	Regulator system	Wire drum type
	Locking system	Pin-fork system
REAR DOOR	Construction	Front hinged, full door construction
	Regulator system	Wire drum type
	Locking system	Pin-fork system
TAIL GATE	Type	Inner hinged, Gas lifter
SEAT BELTS	Front	3 point type with Emergency Locking Retractor (E.L.R)
	Rear	3 point type with Emergency Locking Retractor (E.L.R)






TIGHTENING TORQUE

Items		N·m	kgf·m	Lbf·ft
Front and rear doors	Door hinge to body	21.6~26.5	2.2~2.7	15.9~19.5
	Door hinge to door	21.6~26.5	2.2~2.7	15.9~19.5
	Door Striker	16.7~21.6	1.7~2.2	12.3~15.9
	Checker to body	16.7~21.6	1.7~2.2	12.3~15.9
	Checker to door	6.9~10.8	0.7~1.1	5.1~8.0
Hood	Hood hinge to body	21.6~26.5	2.2~2.7	15.9~19.5
	Hood hinge to hood	21.6~26.5	2.2~2.7	15.9~19.5
	Hood latch to body	6.9~10.8	0.7~1.1	5.1~8.0
Seat	Front seat mounting bolts	34.3 ~ 53.9	3.5~5.5	25.3~39.8
	Rear seat mounting bolts	16.7~25.5	1.7~2.6	12.3~18.8
Seat belt	Front seat belt height adjuster	39.2~53.9	4.0 ~ 5.5	28.9 ~ 39.8
	Front seat belt buckle mounting bolt	39.2~53.9	4.0 ~ 5.5	28.9 ~ 39.8
	Front seat belt anchor mounting bolt	39.2~53.9	4.0 ~ 5.5	28.9 ~ 39.8
	Front seat belt lower anchor	39.2~53.9	4.0 ~ 5.5	28.9 ~ 39.8
	Front seat belt upper anchor	39.2~53.9	4.0 ~ 5.5	28.9 ~ 39.8
	Rear seat belt anchor attaching bolt	39.2~53.9	4.0 ~ 5.5	28.9 ~ 39.8
	Rear seat belt retractor mounting bolt	39.2~53.9	4.0 ~ 5.5	28.9 ~ 39.8

TROUBLESHOOTING

Symptom	Suspect Area	Remedy (Refer to page)
Water leaks from sunroof	Dirt accumulated in drain tube	Clear dirt inside of drain
	Clogged drain tube	Blow air into drain to remove dirt
	Broken or dislocated drain tube, defective or cracked clip	Check tube installation and flange contact
	Deteriorated roof lid weatherstrip	Replace
	Excessive roof lid-to-body clearance and improperly fitted weatherstrip	Adjust
Wind noise around sunroof	Loose or deformed deflector, gaps in body work	Retighten adjust or replace
Sunroof lid makes a noise when move	Foreign particles lodged in guide rail	Check drive cable and guide rails for foreign particles
	Loose guide rails and lid	Retighten
Motor runs but sunroof Does not move or moves only partially	Foreign particles lodged in guide rail	Adjust or replace
	Incorrect engagement of motor pinion with drive cable	
	Decrease in motor's clutch slipping force	
	Increased sunroof sliding resistance or interference of sunroof with drive cables, weatherstrip, etc. due to maladjustment of sunroof	
Noise in motor (clutch slipping noise from motor when sunroofs fully opened or closed is not an unusual noise)	Incorrect engagement of motor pinion with drive cable	Check pinion installation and retighten motor
	Worn out or damaged motor pinion bearing	Replace motor assembly
	Worn out or deformed drive cable	Replace
Door glass fails to operate up and down	Incorrect window glass installation	Adjust position
	Damaged or faulty regulator arm or regulator	Correct or replace
Door does not open or close completely	Incorrect door installation	Adjust position
	Defective door check assembly	Correct or replace
	Door hinge requires grease	Apply grease
Hood does not open or close completely	Striker and latch not properly aligned	Adjust
	Incorrectly installed hood	Adjust
	Incorrect hood bumper height	Adjust
Water leak through windshield end rear window	Defective seal	Fill with sealant
	Defective flange	Correct

SPECIAL TOOLS

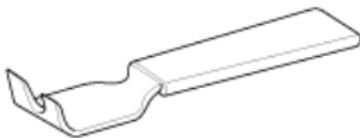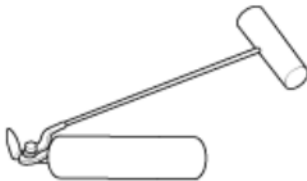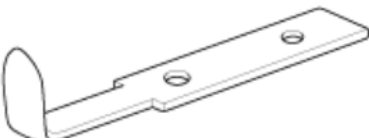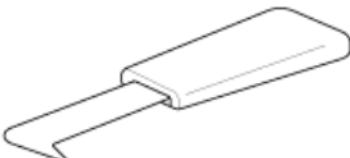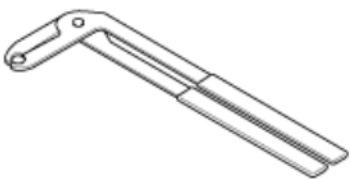Tool (Number and name)	Illustration	Use
09793-21000 Door hinge adjusting wrench		Adjustment, removal and installation of the door hinge
09800-21000 Ornament remover		Trim removal
09853-31000 Headliner clip remover		Removal of the headliner clips
09861-31100 Sealant cut-out tool		Cutting the sealant of the windshield (Use with 09861-31200)
09861-31200 Sealant cutting blade		Cutting the sealant of the windshield (Use with 09861-31100)
09861-31000 Windshield molding remover		Removal of the windshield molding
09880-4F000 Hog ring clip installer		Installation of the hog ring clip

09840-1E100
Center fascia remover



Center fascia removal

English ▼

REPLACEMENT

Hood Assembly Replacement

NOTICE

- When removing and installing the hood, an assistant is necessary.
- Take care not to damage the hood and body.
- When removing the clips, use a clip remover.

1. After loosening the hood hinge (E) mounting bolts, remove the hood (F).
2. Installation is the reverse of removal.

NOTICE

- Make sure the hood opens properly and locks securely.
- Adjust the hood alignment.

Bolt, 2.2-2.7 kgf.m (21.6-26.5 N.m, 15.9-19.5 lbf.ft)




Hood Insulator Pad Replacement

1. Using a clip remover, detach the clips, and remove the hood insulator (A).

NOTICE

Take care not to scratch the hood panel.

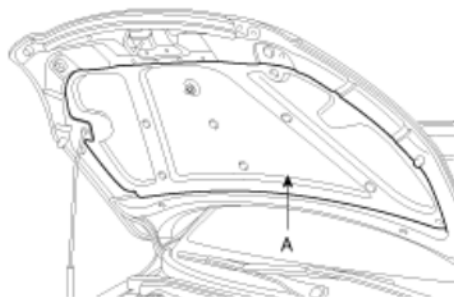

2. Installation is the reverse of removal.

English ▼

NOTICE

Replace any damaged clips.

Hood Seal Weatherstrip Replacement

1. Detach the clips, then remove the hood weatherstrip (A). Take care not to scratch the hood.




2. Installation is the reverse of removal.

NOTICE

- Replace any damaged clips.

Hood Weatherstrip Replacement

1. Remove the hood weatherstrip (A).

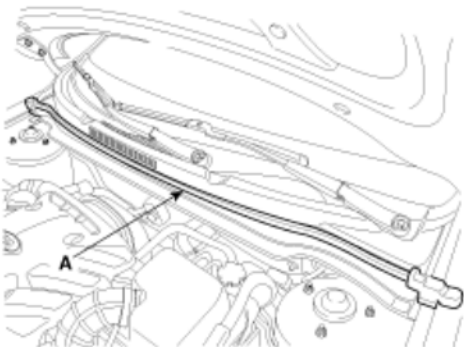


2. Installation is the reverse of removal.

NOTICE

Replace any damaged clips.

Hood Release Handle Replacement

1. After loosening the mounting screw, then remove the hood release handle (A).

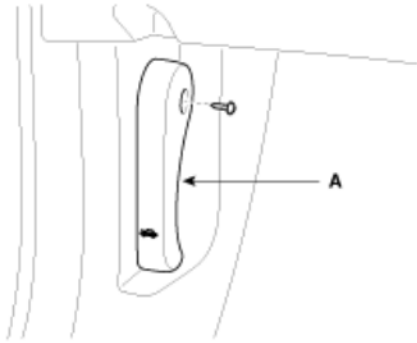


2. Installation is the reverse of removal.

NOTICE


- Make sure the hood latch cable is connected properly.
- Make sure the hood locks securely.

Hood Latch Replacement

1. Remove the radiator grille upper cover (A).

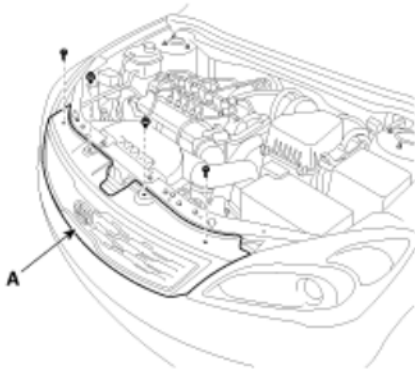


2. Loosen the bolts, then remove the hood latch cover(A).

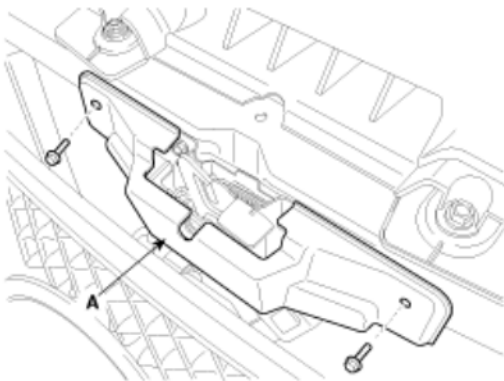


3. Remove the hood latch (A) mounting bolts.

Bolt, 0.7-1.1 kgf.m (6.9-10.8 N.m, 5.1-8.0 lbf.ft)

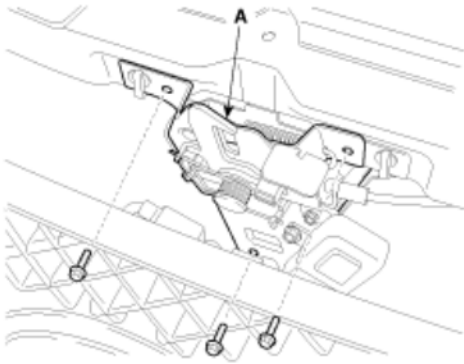

4. Disconnect the hood latch cable (A) and remove the latch (B).

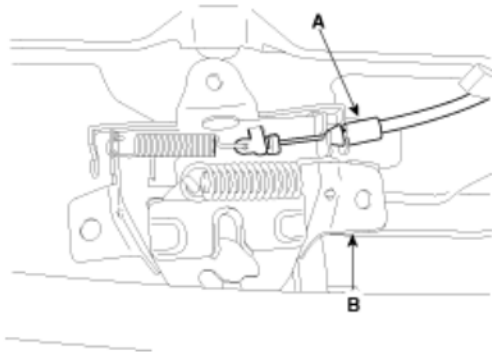

5. Installation is the reverse of removal.





NOTICE

- Make sure the hood latch cable is connected properly.
- Make sure the hood locks securely.

ADJUSTMENT

Adjust Hood

1. After loosening the hinge (A) mounting bolt, adjust the hood (D) by moving it up or down, or right or left.
2. Adjust the hood height by turning the hood overslam bumpers (B).
3. After loosening the hood latch (C) mounting bolts, adjust the latch by moving it up or down, or right or left.

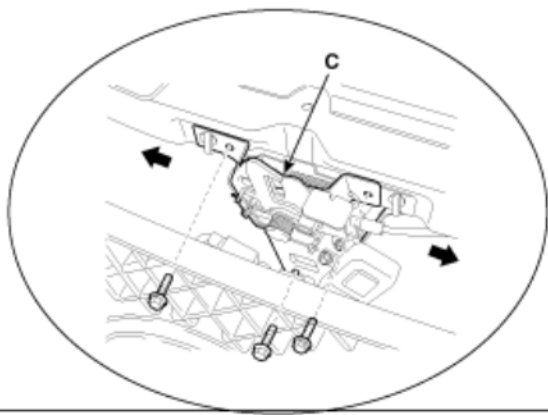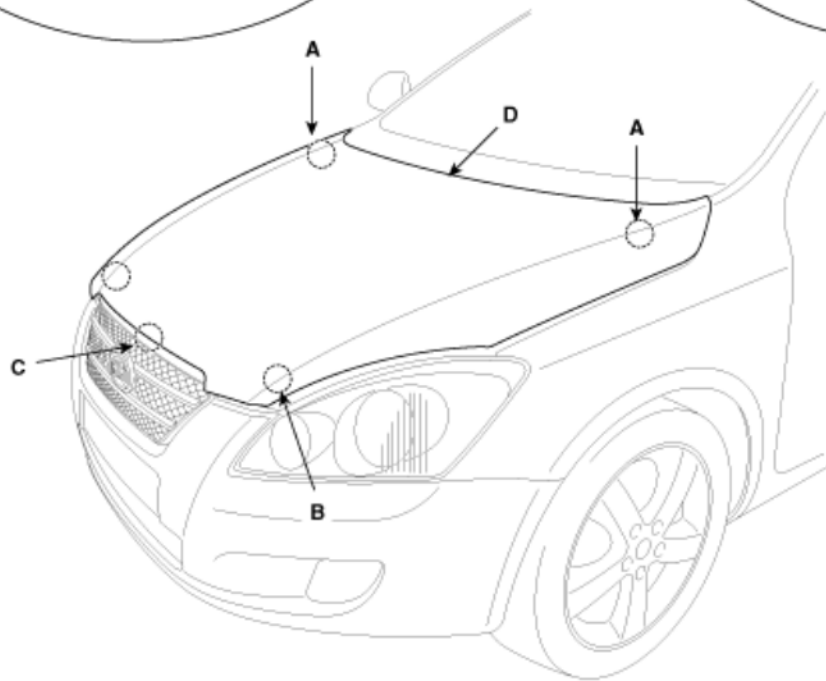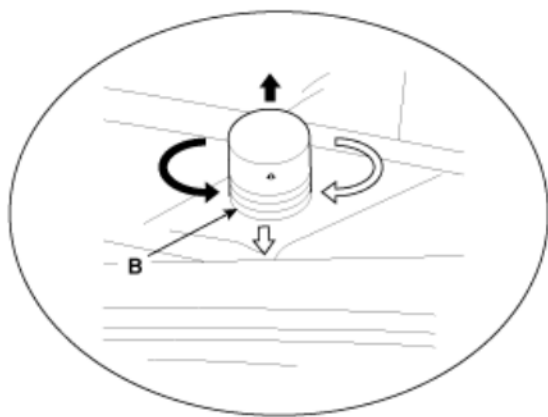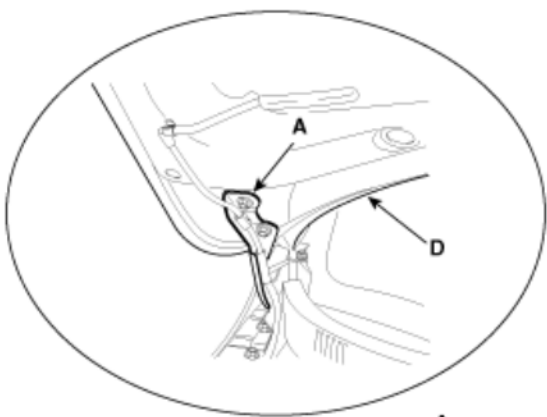

REPLACEMENT

Tailgate Trim Replacement (5Door)


NOTICE

- When prying with a flat-tipped screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Put on gloves to protect your hands.

1. After loosening the screws the remove the tailgate trim (A).
2. Remove the upper trim (B) and side trim (C).
3. Installation is the reverse of removal.

NOTICE

- Replace and damaged clips.

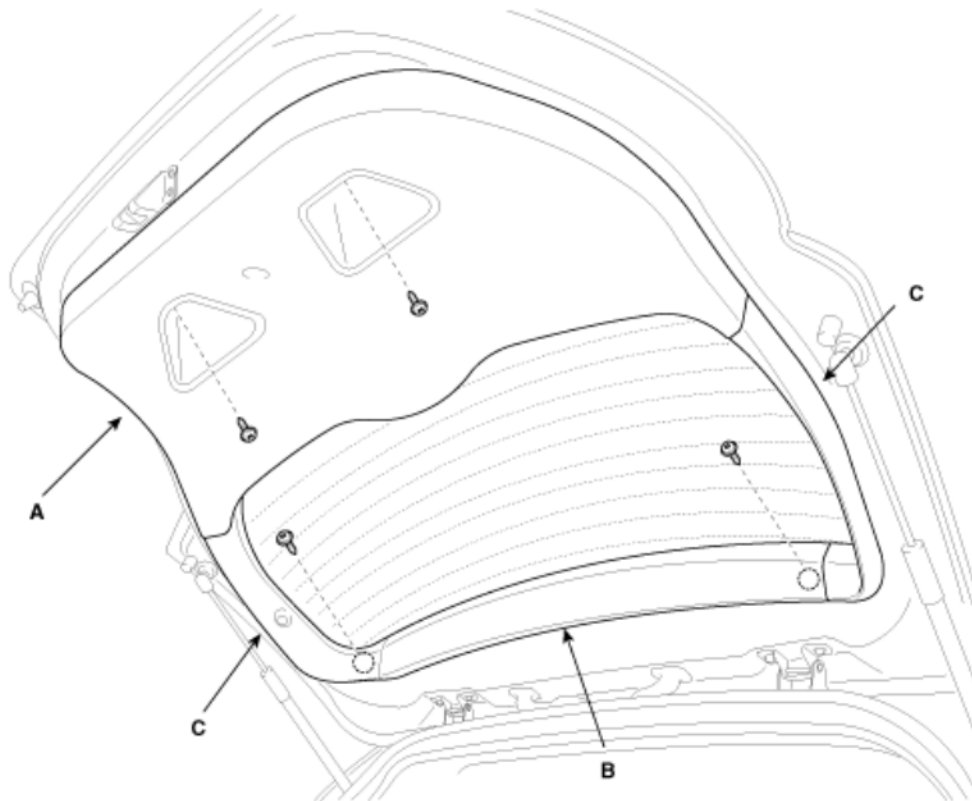

Tailgate Trim Replacement (3Door)


NOTICE

- When prying with a flat-tipped screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Put on gloves to protect your hands.

1. After loosening the screws the remove the tailgate trim (A).
2. Remove the upper trim (B) and side trim (C).
3. Installation is the reverse of removal.

NOTICE

- Replace and damaged clips.

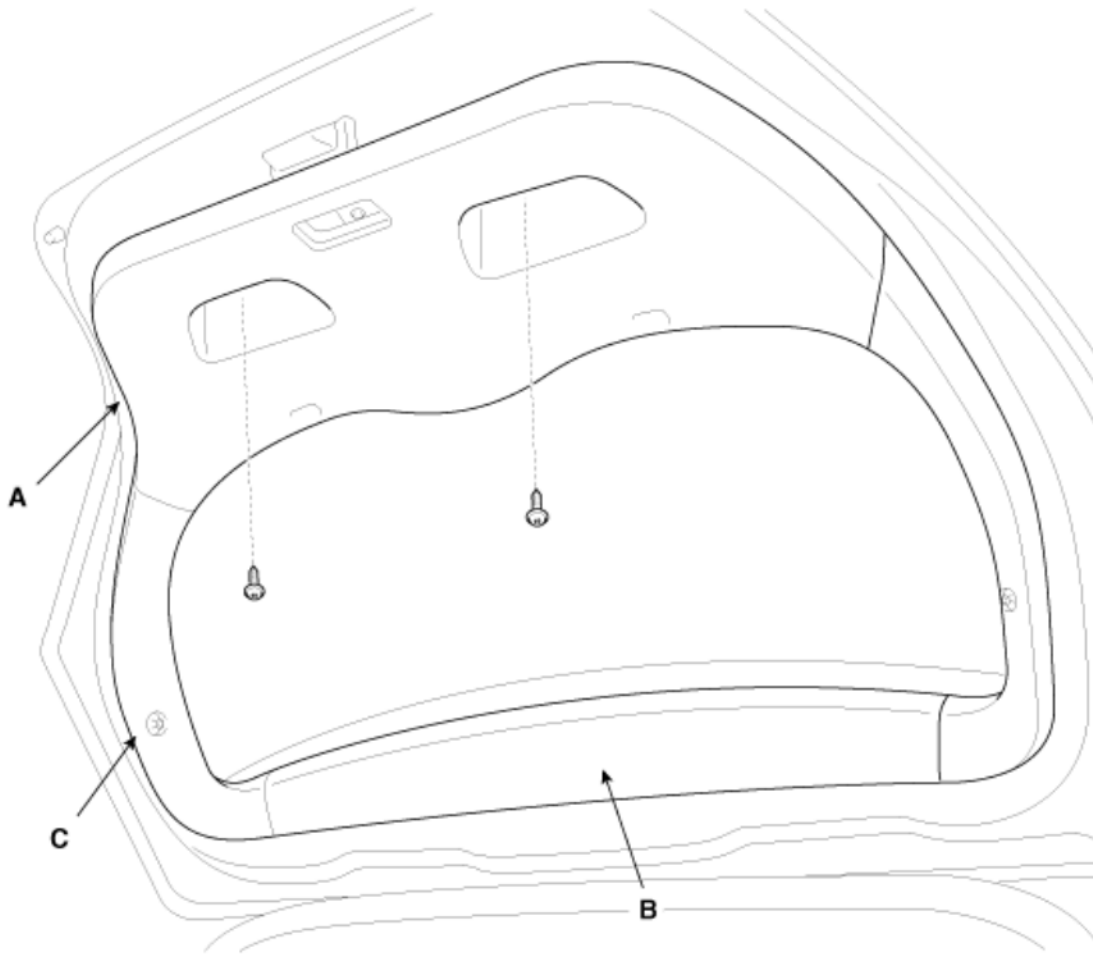
**Tailgate Trim Replacement (Wagon)****NOTICE**

- When prying with a flat-tipped screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Put on gloves to protect your hands.

1. After loosening the screws the remove the tailgate trim (A).
2. Remove the upper trim (B) and side trim (C).
3. Installation is the reverse of removal.


NOTICE

- Replace and damaged clips.

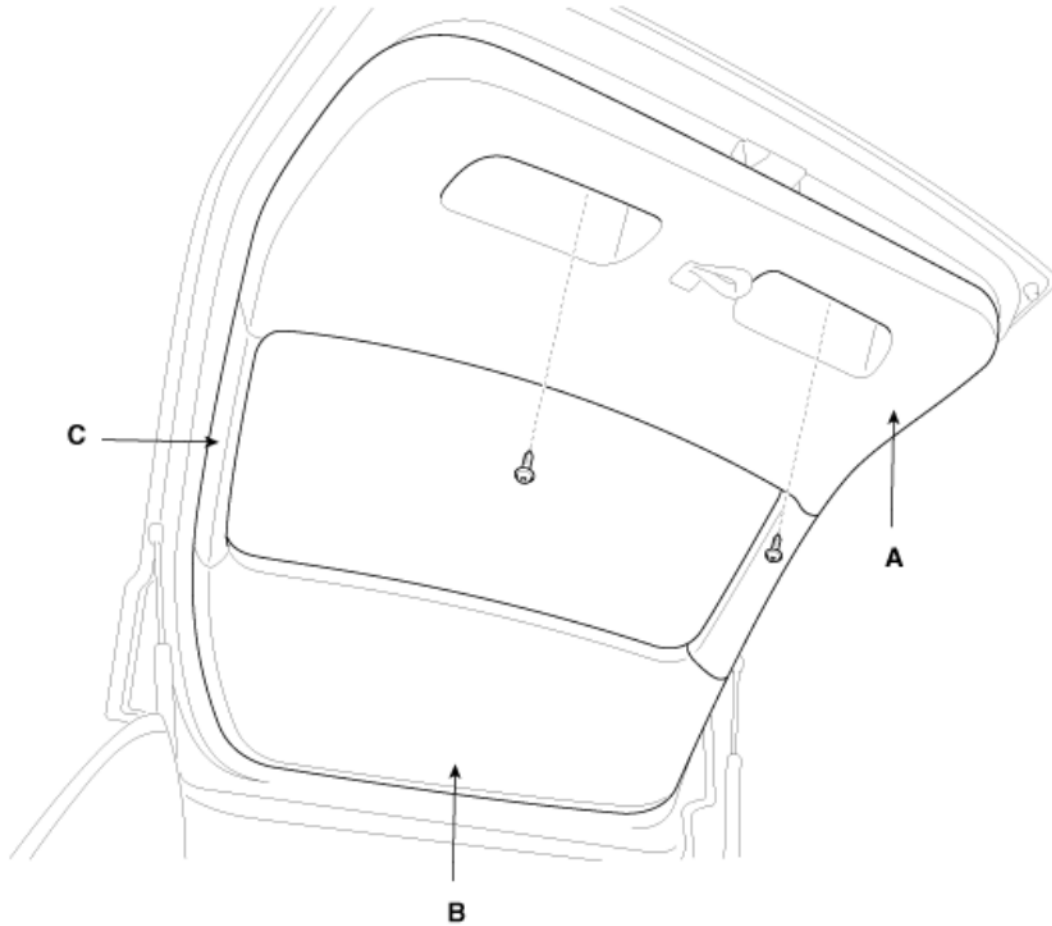

Latch Assembly Replacement

1. Remove the tailgate trim.
2. After loosening the mounting nuts, then remove the latch assembly (A).
3. Disconnect the connector.

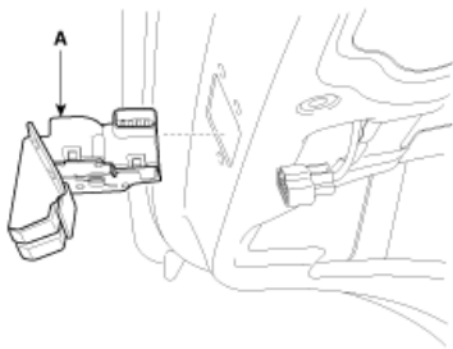


4. Installation is the reverse of removal.

NOTICE


- Make sure the connector is connected properly and the connecting rod is connected properly.
- Make sure the tailgate opens properly and locks securely.

Outside Handle Replacement

1. Remove the tailgate trim.
2. After loosening the tail gate garnish mounting nuts, then tailgate garnish (A).

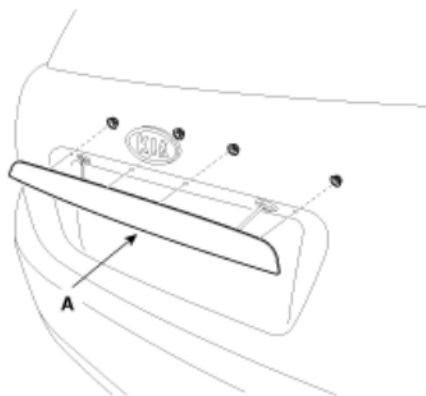

3. Remove the outside handle (A).

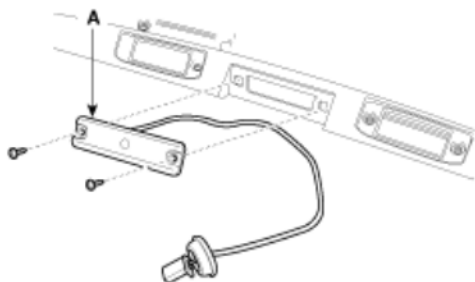


4. Installation is the reverse of removal.

NOTICE

- Make sure the tailgate opens properly and locks securely.

Lifter Replacement





1. Using a screwdriver (A), lift up slightly the socket clips (B) of both ends on the lifter (D), and then remove the lifter from the bracket (C).

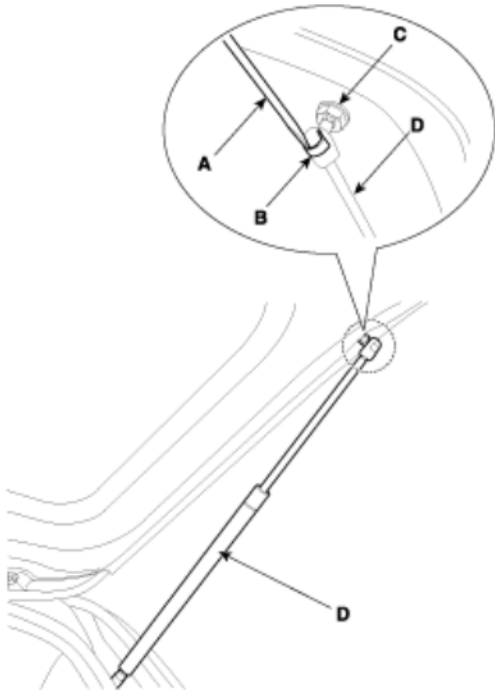

2. Push the socket of the lifter into the bracket for installation.

ADJUSTMENT

1. After loosening the tailgate hinge (A) mounting bolt, adjust the tailgate by moving it up or down, or right or left.
2. Adjust the tailgate fit by turning the tailgate over slam bumper and side bumper (B).
3. Adjust the striker (C) by moving it up or down, or right or left.

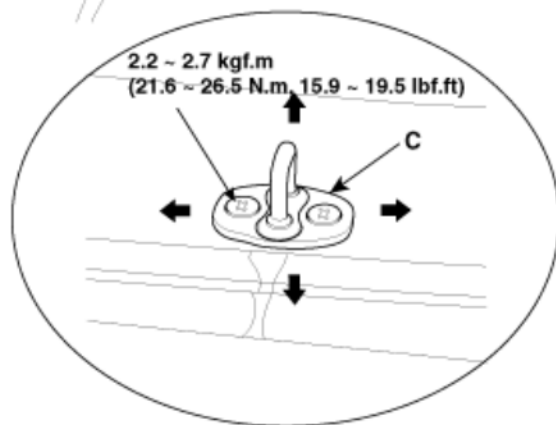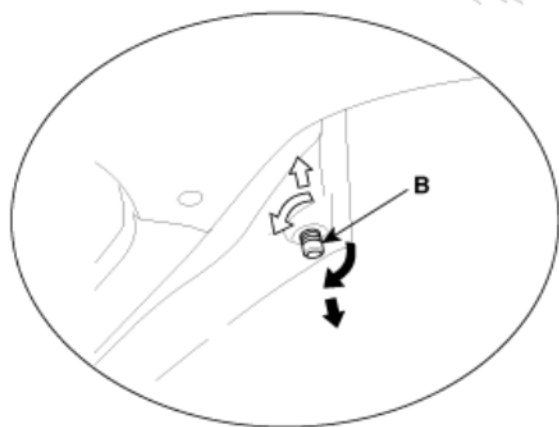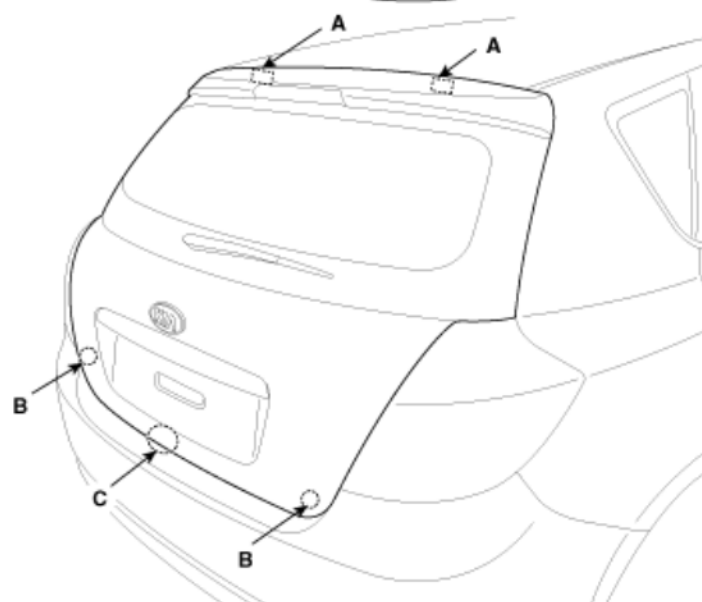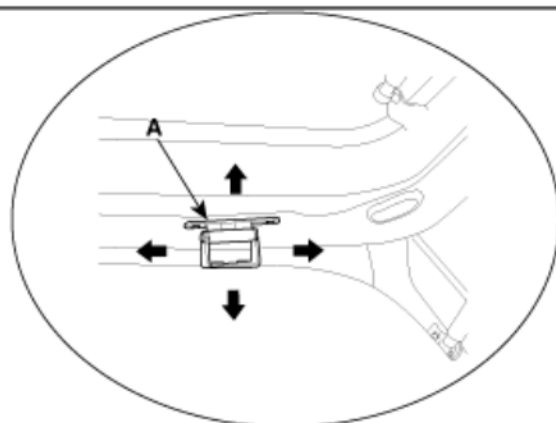


REPLACEMENTS

Door Trim Replacement


NOTICE

- Take care not to scratch the door trim and other parts.
- Put on gloves to protect your hands.


1. Remove the quadrant inner cover (A).

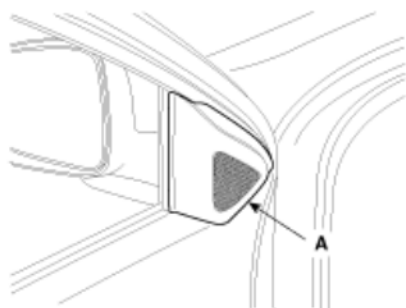

2. Loosen the door trim (A) mounting screws. Release the clips that hold the door trim, then remove the door trim by pulling it upward. Disconnect the power window switch connector, power mirror connector, and door courtesy lamp connector, trunk lid connector.

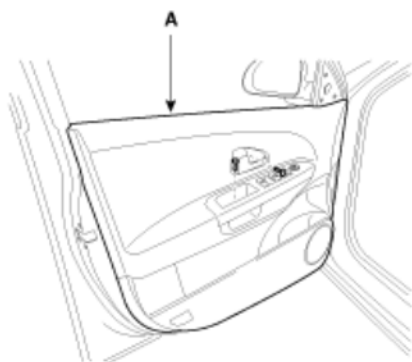

3. Disconnect the cable (A).

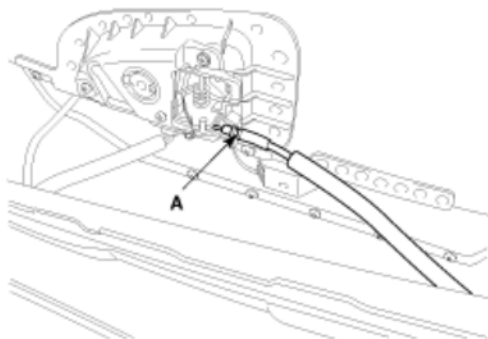

4. Installation is the reverse of removal.


English ▼

NOTICE

- Make sure of connectors is plugged in properly and each rod is connected securely.
- Make sure the door lock and opens properly.

Inside Handle Replaement

1. Remove the door trim.
2. Loosen the door inside handle mounting screws, remove the door inside handle (A).

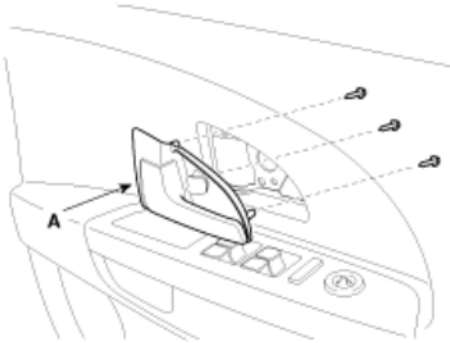

3. Installation is the reverse of removal.

Glass Replacement


1. Remove the front door trim.
2. Remove the glass mounting hole plug (B).

NOTICE

- Using the door switch to align the mounting hole with the hole on the door glass.
- If it is impossible, align the hole with hands after removing the motor.
- Take care not to drop to glass and scratch the glass surface.

3. Carefully move the glass (A) until you can see the bolts, then loosen them. Separate the glass from the glass run and carefully pull the glass out through the window slot.

Bolt, 0.9–1.2 kgf.m (8.8–11.8 N.m, 6.5–8.7 lbf.ft)

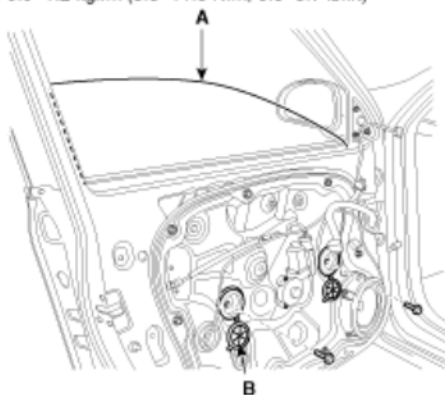


4. Installation is the reverse of removal.

NOTICE

- Roll the glass up down to see if it move freely without binding.
- Adjust the position of the glass as necessary.

Speaker Replacement


1. Remove the door trim.
2. Drill out the rivets to remove the speaker (B) from the door module.
3. Disconnect the speaker connector (A).

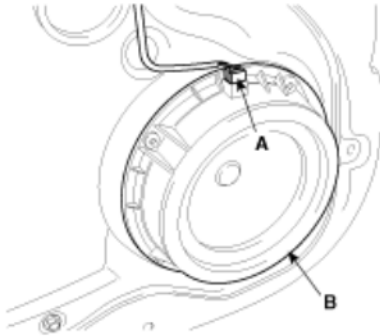

4. Installation is the reverse of removal.
Use sheet metal screws to secure the speaker.

Power Window Motor Replacement

1. Remove the door trim .
2. After disconnecting the connector (A), remove the power window motor (B).

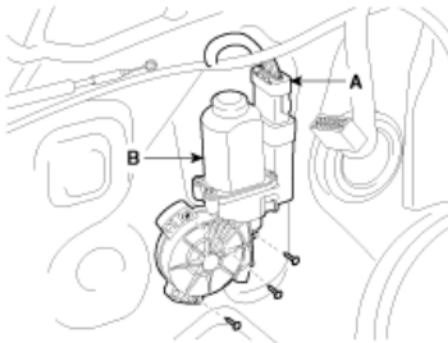

3. Installation is the reverse of removal.

NOTICE

- The area of rotational parts and springs should be applied with sufficient grease.
- Roll the glass up down to see if it move freely without binding.

Door Module Assembly Replacement


1. Remove the following parts.

- Door trim.
- Glass.
- Outside handle.

1. Loosen the mounting screw (A).




2. Loosen the door module mounting bolts, then remove the door module (A).

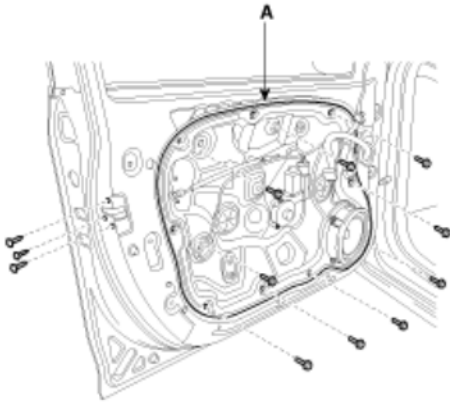

3. Disconnect the connector (A).

4. Disconnect the door module wiring harness (B), then remove the module assembly (C).

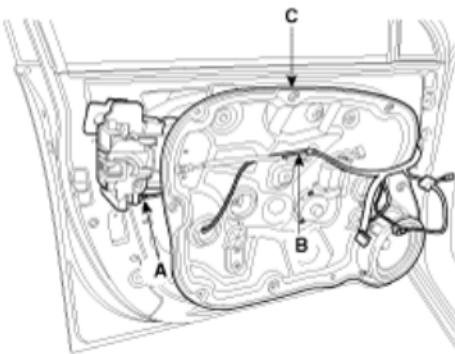


5. Installation is the reverse of removal.

NOTICE


- The area of whole parts should be applied with sufficient grease.
- Make sure the connector is plugged in properly and each rod is connected securely.
- Make sure the door lock and open properly.

Out Side Handle Replacement


1. After loosening the mounting bolt, then remove the key holder (A).

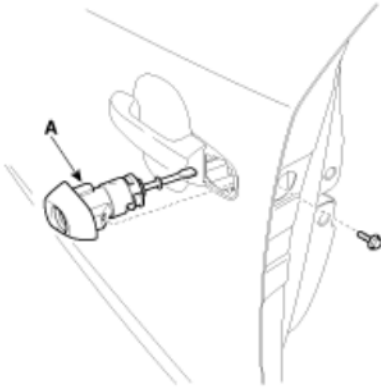

2. Remove the outside handle (A) by sliding it rearward.

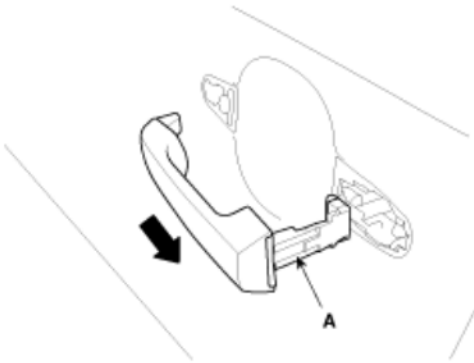

3. Remove the outside handle pad (A).

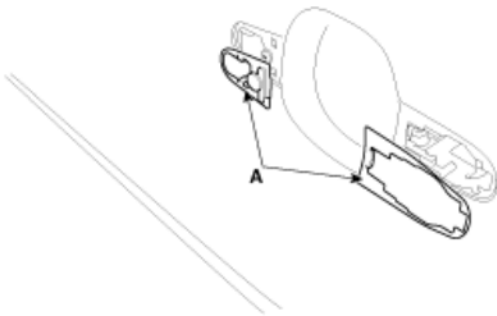


4. Installation is the reverse of removal.

NOTICE

- Make sure the door lock and open properly

Door Weatherstrip Replacement

1. Loosen the checker mounting bolts.
2. Detach the clips, then remove the weatherstrip(A).

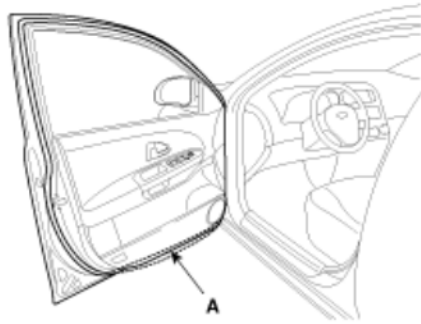

3. Installation is the reverse of removal.

ADJUSTMENT


Glass Adjustment

NOTICE

- Check the glass run channel for damage or deterioration, and replace them necessary.

1. Remove the following parts.
 - Quadrant inner cover.
 - Door trim.
2. Carefully move the glass (A) until you can see the glass mounting bolts (B), then loosen them.

Bolt, 0.9~1.2 kgf.m (8.8~11.8 N.m, 6.5~8.7 lbf.ft)

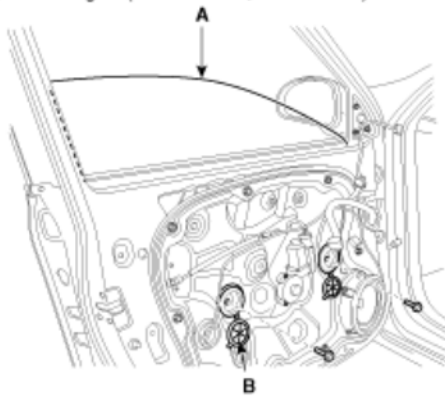



3. Check that the glass moves smoothly.
4. Raise the glass fully, and check for gaps.
Check that the glass contacts the glass run channel evenly.
5. Check for water leaks. Run water over the roof and on the sealing area as shown, and note these items:
 - Use a 12mm (1/2in.) diameter hose.
 - Adjust the rate of water flow as shown.
 - Do not use a nozzle.
 - Hold the hose about 300mm(12in.) away from the door.

Door Position Adjustment

NOTICE

- After installing the door, check for a flush fit with the body, then check for equal gaps between the front, Rear, and bottom, door edges and the body. Check that the door and body edges are parallel. Before adjusting, replace the mounting bolts.

1. Place the vehicle on a firm, level surface when adjusting the doors.
2. Adjust at the hinges (A):
 - Loosen the door mounting bolts slightly, and move the door IN or OUT until it aligns flush with the body.
 - Loosen the hinge mounting bolts slightly, and move the door BACKWARD or FORWARD, UP or DOWN as necessary to equalize the gaps.
 - Place a shop towel on the jack to prevent damage to the door when adjusting the door.

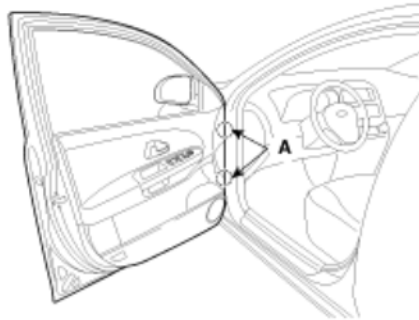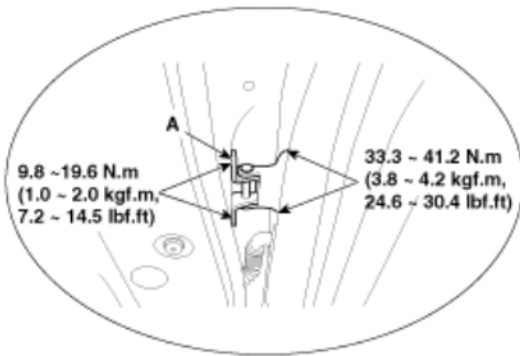

3. Check that the door and body edges are parallel.



4. Grease the pivot portions of the hinges indicated by the arrows.
5. Check for water leaks.


Door Striker Adjustment

Make sure the door latches securely without slamming it.

If necessary adjust the striker (A): The striker nuts are fixed.

The striker can be fine adjusted up or down, and in or out.

1. Loosen the screws (B), then insert a shop towel between the body and striker.

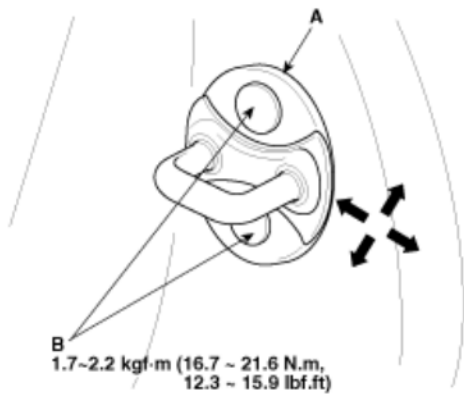

2. Lightly tighten the screws.
3. Wrap the striker with a shop towel, then adjust the striker by tapping it with a plastic hammer. Do not tap the striker too hard.
4. Loosen the screws and remove the shop towel.
5. Lightly tighten the screws.
6. Hold the outer handle out, and push the door against the body to be sure the striker allows a flush fit. If the door latches properly, tighten the screws and recheck.

REPLACEMENT


5Door, Wagon

Door Trim Replacement


NOTICE

- Take care not to scratch the door trim and other parts.
- Put on gloves to protect your hands.


1. Remove the delta inner cover (A).

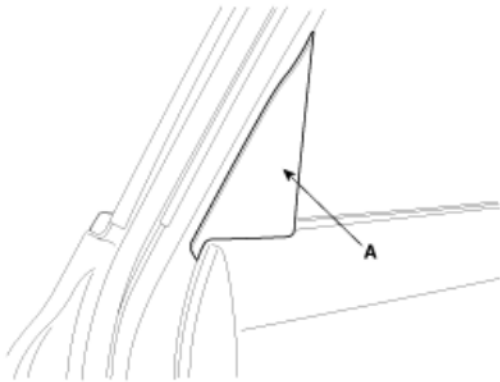

2. Loosen the door trim (A) mounting screws. release the clips that hold the door trim, then remove the door trim by pulling it upward. disconnect the power window switch connector.

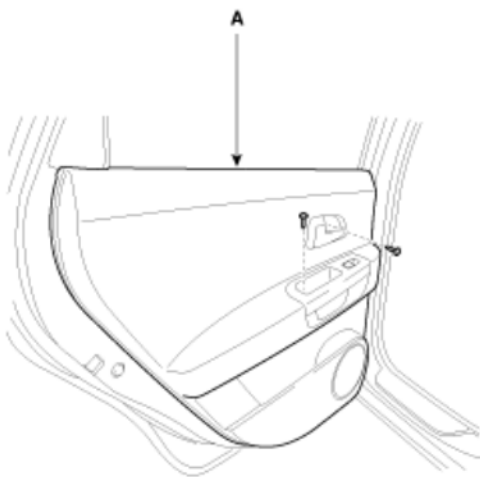

3. Disconnect the lock cable and (A) inside connect cable (B).

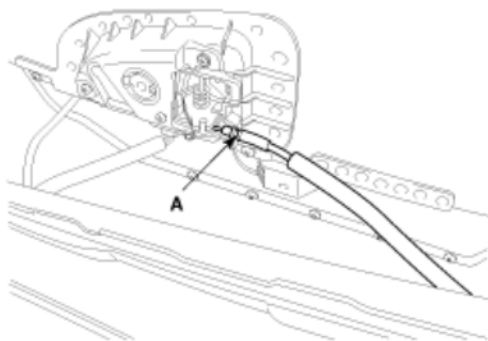

4. Installation is the reverse of removal.

NOTICE

- Make sure of connectors is plugged in properly and each rod is connected securely.
- Make sure the door lock and opens properly.

Inside Handel Replacement

1. Remove the door trim.
2. Loosen the door inside handle mounting screws, remove the door inside handle (A).



3. Installation is the reverse of removal.

Glass Replacement

NOTICE


- Put on gloves to protect your hands.

1. Remove the door trim.
2. Remove the door belt weatherstrip.
3. Release the rear channel mounting bolt and nut.

CAUTION

- Take care not to drop to glass and scratch the glass surface.

- Carefully move the glass (A) until you can see the bolts, then loosen them. Separate the glass from the glass run and carefully pull the glass out through the window slot.

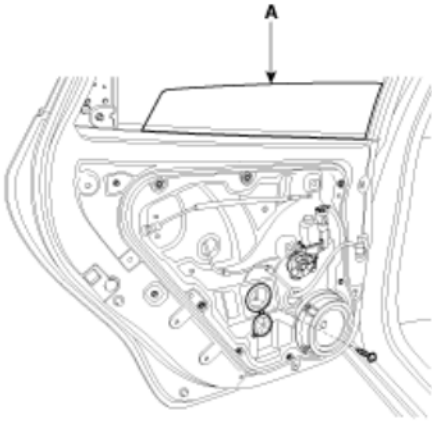


- Installation is the reverse of removal.

NOTICE

- Roll the glass up down to see if it move freely without binding.
- Adjust the position of the glass as necessary.

Speaker Replacement


- Remove the door trim.
- Drill out the rivets to remove the speaker (B) from the door module.
- Disconnect the speaker connector (A).

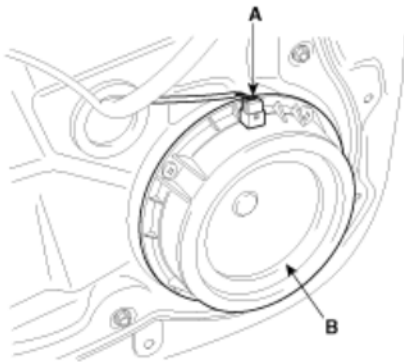

- Installation is the reverse of removal.
Use sheet metal screws to secure the speaker.

Power Window Motor Replacement

- Remove the door trim.
- After disconnecting the connector (A), remove the power window motor (B).

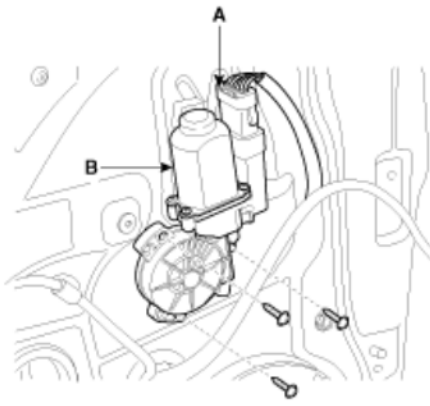


3. Installation is the reverse of removal.

NOTICE


- The area of rotational parts and springs should be applied with sufficient grease.
- Roll the glass up down to see if it move freely without binding.

Out Side Handle Replacement


1. After loosening the mounting bolt, then remove the handle cover (A).

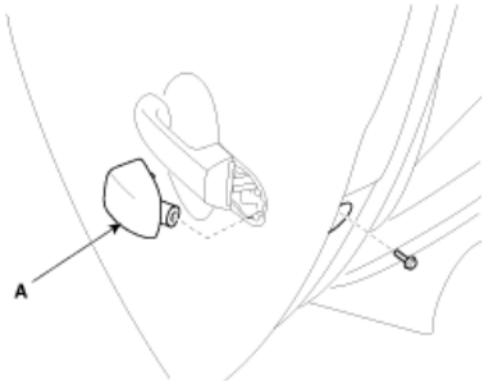

2. Remove the outside handle (A) by sliding it rearward.

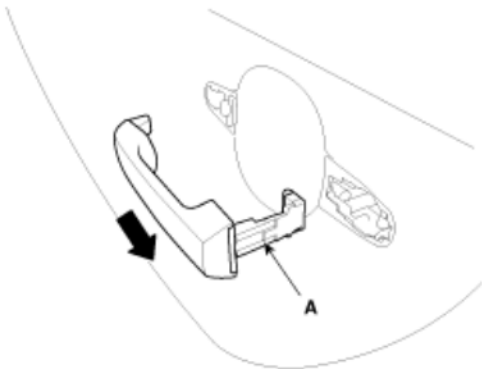

3. Remove the outside handle pad (A).

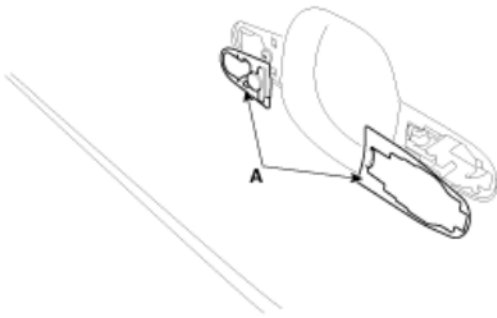

4. Installation is the reverse of removal.

NOTICE

- Make sure the door lock and open properly.

Module Assembly Replacement


1. Remove the following parts.

- Door trim.
- Window glass.
- Outside handle.

2. Loosen the mounting screw (A).




3. Remove the rear channel (A).

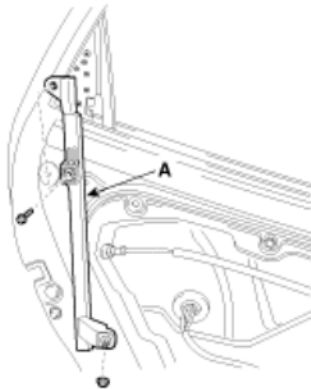


4. After loosening the door module mounting bolts, remove the door module (A).

Bolt, 0.8~1.2 kgf.m (7.8~11.8 N.m, 5.8~8.7 lbf.ft)

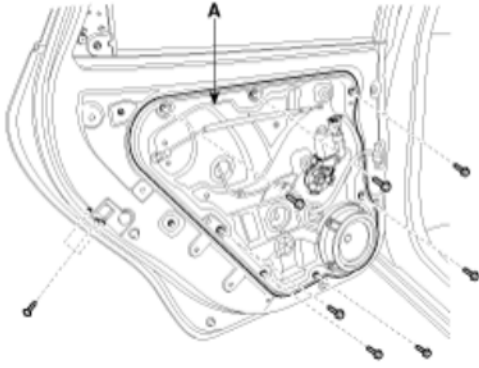

5. Disconnect the connector (B).
6. Detach the clips, then remove the wiring harness(C).

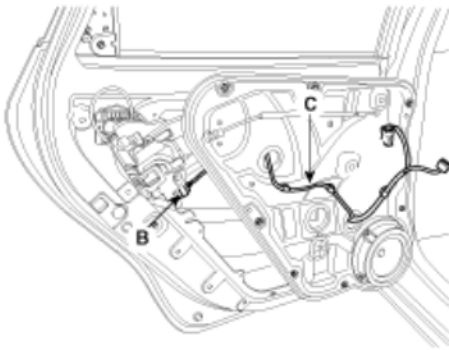

7. Installation is the reverse of removal.

NOTICE

- The area of whole parts should be applied with sufficient grease.
- Make sure the connector is plugged in properly and each rod is connected securely.
- Make sure the door lock and open properly.

Door Weatherstrip Replacement

1. Loosen the checker mounting bolts.
2. Detach the clips, then remove the weatherstrip(A).




3. Installation is the reverse the removal.

Glass Adjustment

NOTICE

- Check the glass run channel for damage or deterioration, and replace them necessary.

1. Remove the following parts.
 - Door trim.
2. Carefully move the glass (A) until you can see the glass mounting bolts, then loosen them.

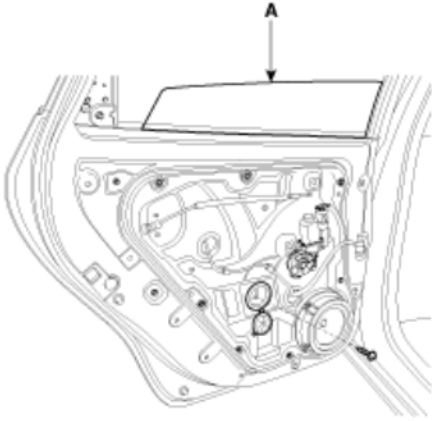

3. Push the glass against the channel, then tighten the glass mounting bolts.
4. Check that the glass moves smoothly.
5. Raise the glass fully, and check for gaps.
Check that the glass contacts the glass run channel evenly.
6. Check for water leaks. Run water over the roof and on the sealing area as shown, and note these items:
 - Use a 12mm (1/2in.) diameter hose.
 - Adjust the rate of water flow as shown.
 - Do not use a nozzle.
 - Hold the hose about 300mm(12in.) away from the door.


Door Position Adjustment

NOTICE


- After installing the door, check for a flush fit with the body, then check for equal gaps between the front, Rear, and bottom, door edges and the body. Check that the door and body edges are parallel. Before adjusting, replace the mounting bolts.

1. Place the vehicle on a firm, level surface when adjusting the doors.
2. Adjust at the hinges (A):
 - Loosen the door mounting bolts slightly, and move the door IN or OUT until it aligns flush with the body.
 - Loosen the hinge mounting bolts slightly, and move the door BACKWARD or FORWARD, UP or DOWN as necessary to equalize the gaps.

- Place a shop towel on the jack to prevent damage to the door when adjusting the door.

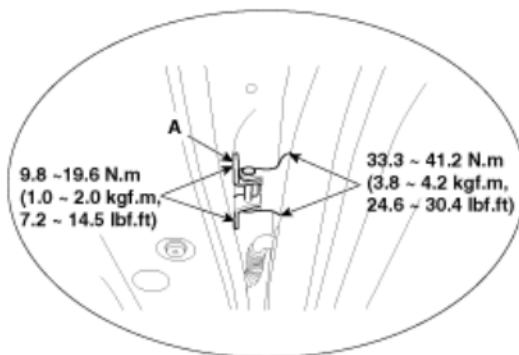

3. Check that the door and body edges are parallel.

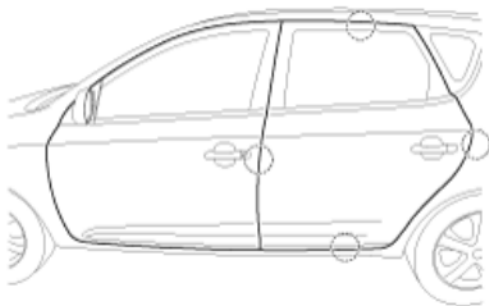

4. Grease the pivot portions of the hinges indicated by the arrows.
5. Check for water leaks.


Door Striker Adjustment

Make sure the door latches securely without slamming it.

If necessary adjust the striker (A): The striker nuts are fixed.

The striker can be fine adjusted up or down, and in or out.

1. Loosen the screws (B), then insert a shop towel between the body and striker.

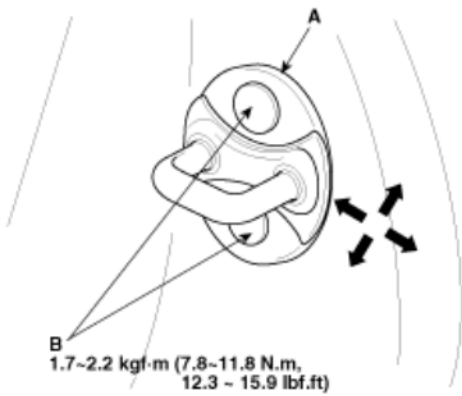

2. Lightly tighten the screws.
3. Wrap the striker with a shop towel, then adjust the striker by tapping it with a plastic hammer. Do not tap the striker too hard.
4. Loosen the screws and remove the shop towel.
5. Lightly tighten the screws.
6. Hold the outer handle out, and push the door against the body to be sure the striker allows a flush fit. If the door latches properly, tighten the screws and recheck.


REPLACEMENT

Roof Rack Replacement (Wagon)

NOTICE

- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Put on gloves to protect your hands.
- Take care not to scratch the body surface.


1. Remove the roof rack cover (A).
2. Remove the roof rack (B).

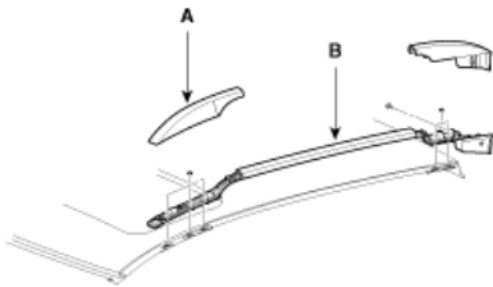

3. Installation is the reverse of removal.

Roof molding Replacement (Wagon)


1. Remove the roof molding (A).

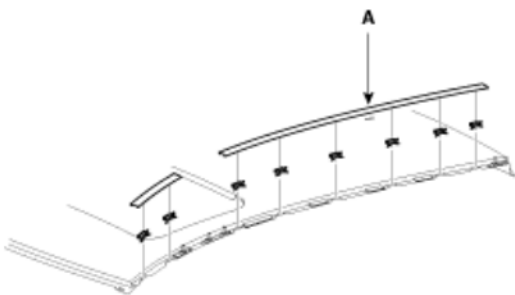

2. Installation is the reverse of removal.

Tailgate Garnish Replacement (5Door/Wagon)


1. Remove the tailgate trim.
2. Remove the tailgate garnish (A).

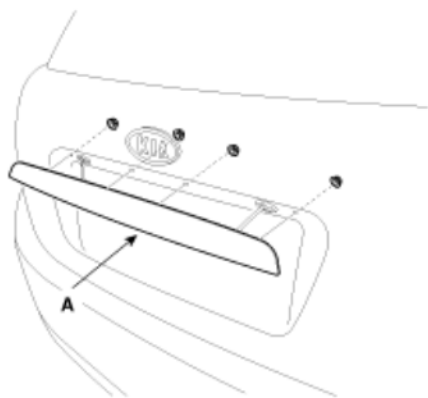

3. Installation is the reverse of removal.

Roof molding Replacement (3Door)

1. Remove the roof molding (A).

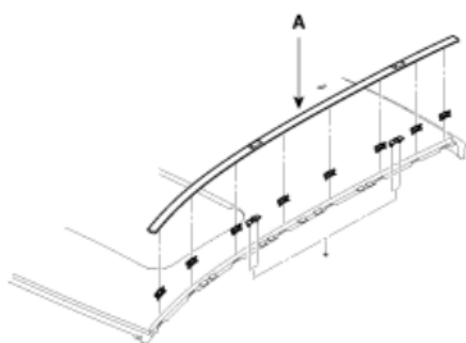


2. Installation is the reverse of removal.

Tailgate Garnish Replacement (3Door)

1. Remove the tailgate trim.

2. Remove the tailgate garnish (A).

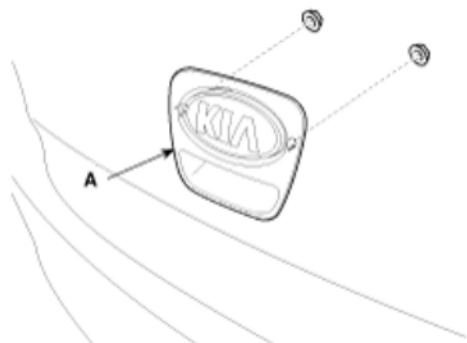

3. Installation is the reverse of removal.


REPLACEMENT

Outside Rear View Mirror Replacement


NOTICE

- When prying with a flat-up screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Put on gloves to protect your hands.

1. Remove the quadrant inner cover (A).

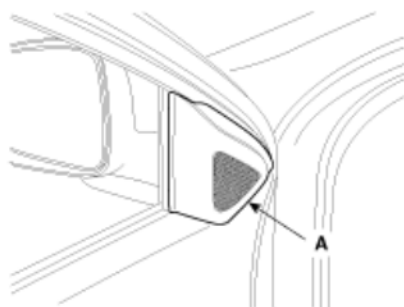


2. After disconnecting the connector (A), remove the outside rear view mirror (B).

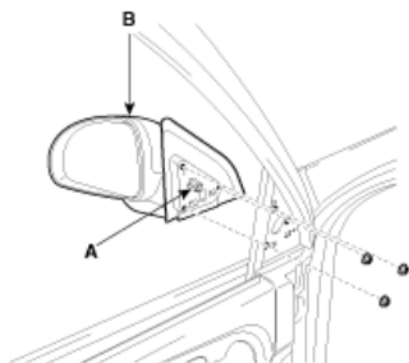

3. Installation is the reverse of removal.

Inside Rear View Mirror Replacement


1. Push the inside rear view mirror base (A) down to remove to inside rear view mirror assembly (B).

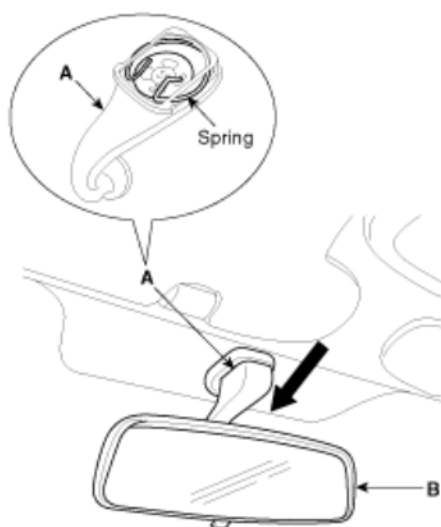

2. Installation is the reverse of removal.


ECM Mirror Replacement

1. Gently detach the hook, then remove the ECM mirror cover (A).

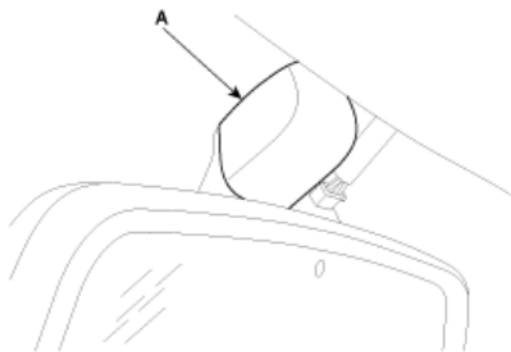

2. Disconnect the connector (B).

3. Push the ECM mirror base down to remove the ECM mirror assembly (A).

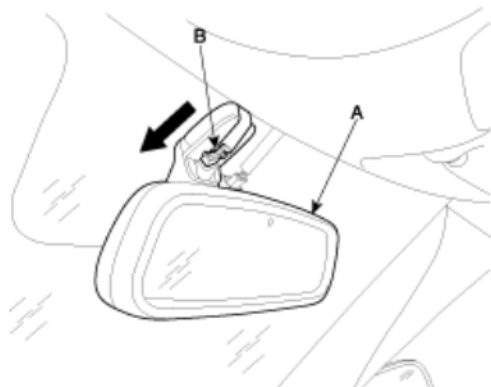


4. Installation is the reverse of removal.


REPLACEMENT

Cowl Top Cover Replacement

1. Remove the wiper (A).

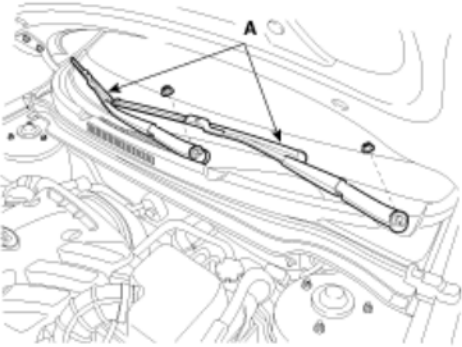

2. Detach the clips, then remove the cowl top cover (A).

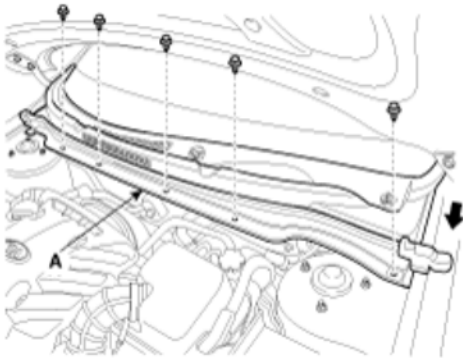


3. Installation is the reverse of removal.

REPLACEMENT


⚠ CAUTION

- When prying with a flat-tip screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Put on gloves to protect your hands.


1. Open the fuel filler door.
2. Remove the fuel filler door cap (A).

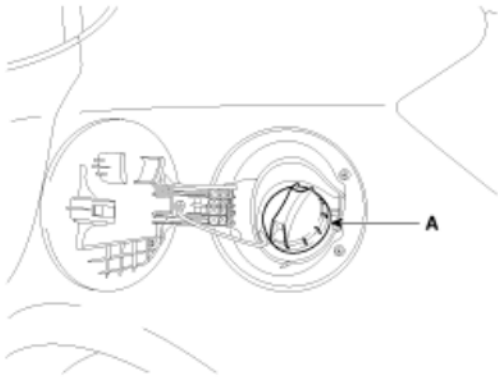


3. Pull out the fuel filler door cable (A) by pushing the lock pin.

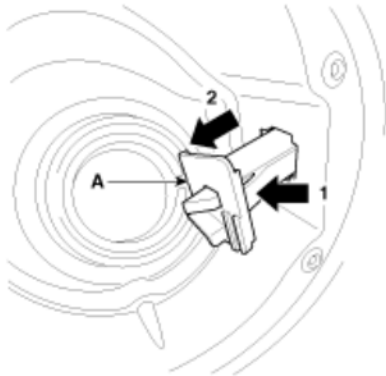

4. Remove the fuel filler door open switch (A) by pushing the both lock pins.

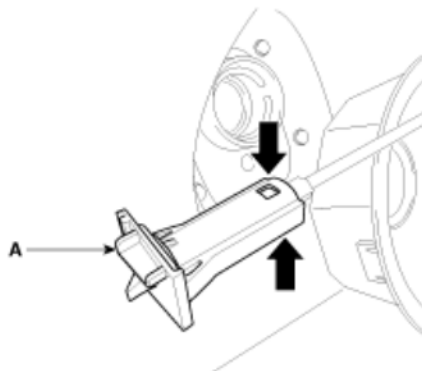

5. Remove the clips (A).

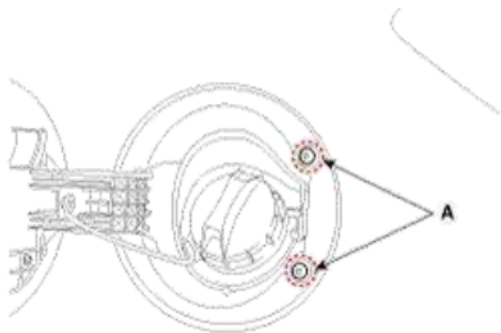


6. Remove the fuel filler door housing (B) by inserting the screwdriver (A) into the gap between the housing and body panel.

i Information

- Slightly pull out the packing part (C) inside of the housing before removing the fuel filler door housing.

⚠ CAUTION


- Be careful not to tear the housing.

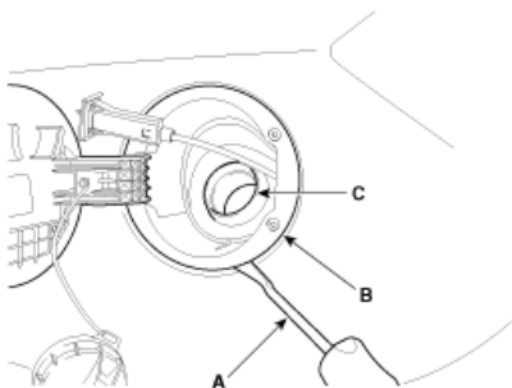

7. Slightly pry up the lock pin (A) using a flat head screwdriver and remove the fuel filler door (B) by pulling it in the direction of the arrow.

⚠ CAUTION

- Be careful not to damage the lock pin.

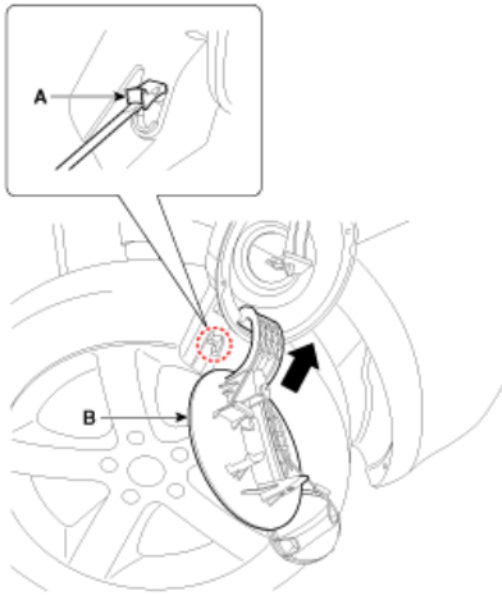


8. Reinstall all removed parts in the reverse order of removal.

i Information

- Make sure the fuel filler door locks/unlocks and opens/closes properly.

COMPONENTS

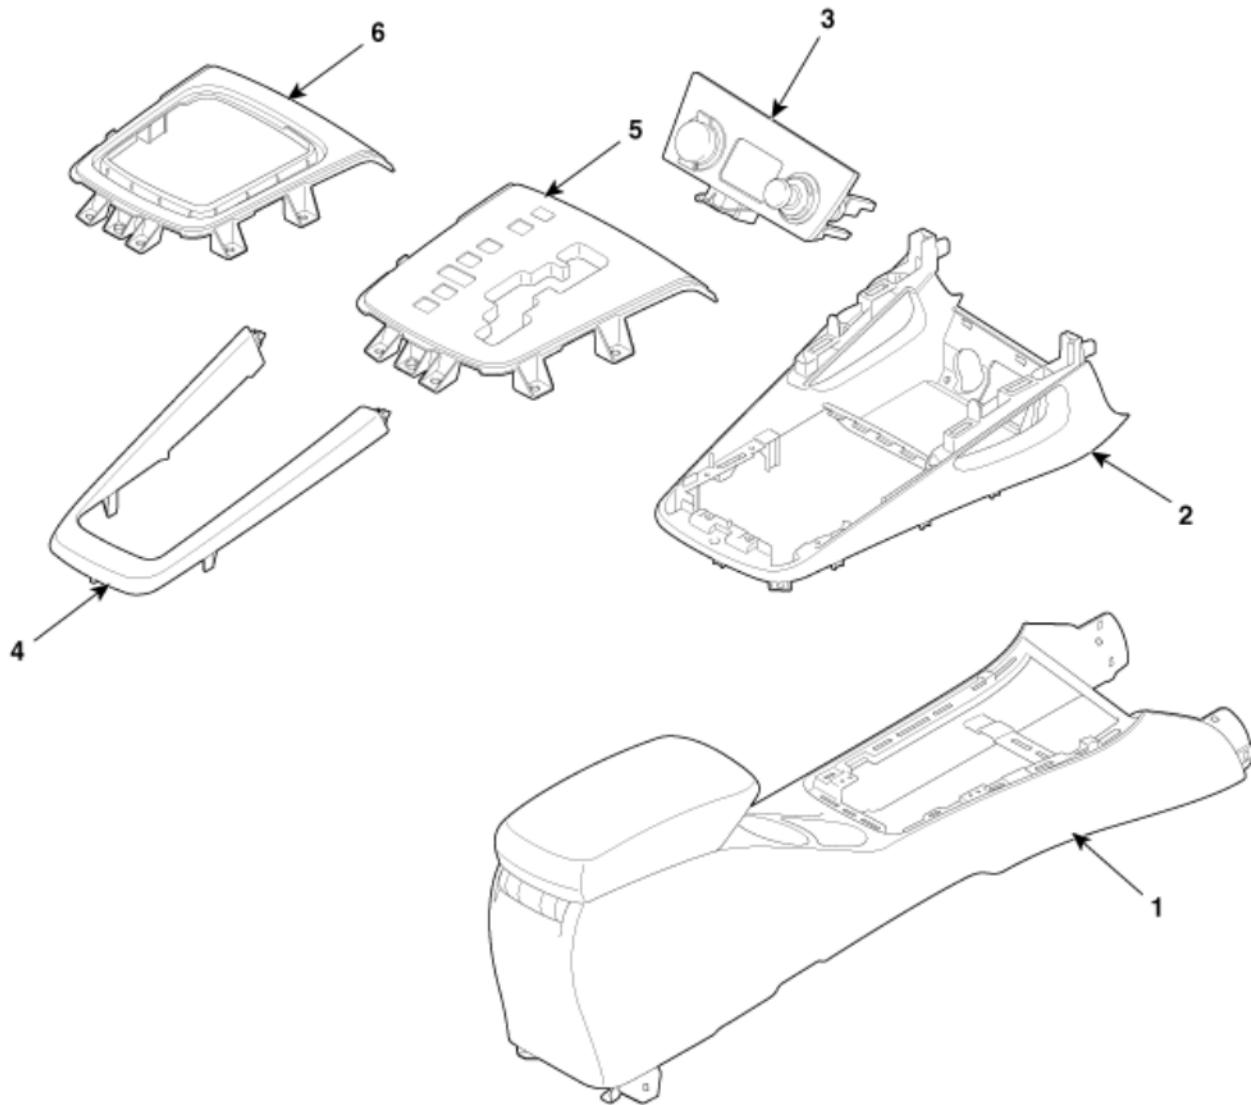

- | | |
|------------------------------|-----------------------------|
| 1. Console assembly | 4. Console upper cover |
| 2. Floor console upper cover | 5. Console upper bezel (AT) |
| 3. Console switch assembly | 6. Console upper bezel (MT) |


REPLACEMENT

Floor Console Replacement


NOTICE

- When prying with a flat-up screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Put on gloves to protect your hands.


1. Remove the console upper cover (A).

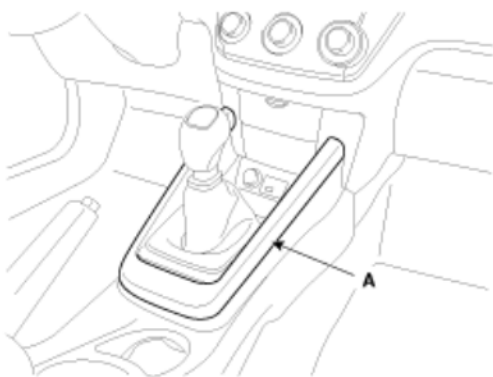

2. After loosening mounting screws, then remove the floor console upper cover (A).

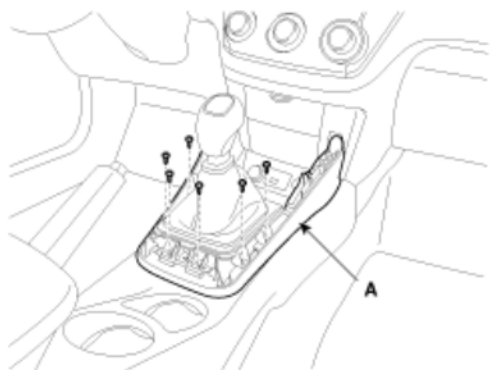

3. Disconnect the connector (B).

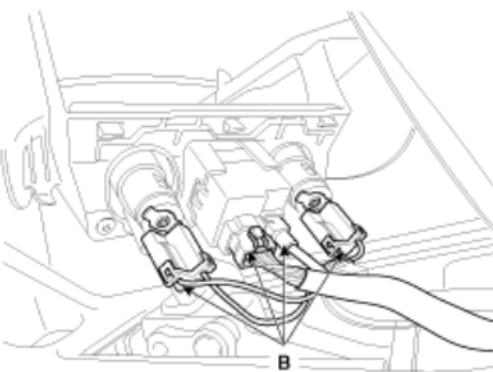

4. Gently detach the hook, remove the parking brake cover (A).



5. After loosening the console mounting screws, remove the floor console assembly (A).



6. Installation is the reverse of removal.


NOTICE

- Make sure the connector is plugged in properly.
- Replace any damage clips.


Console Extenser Cover

1. Remove the console extenser cover (A).

Driver's

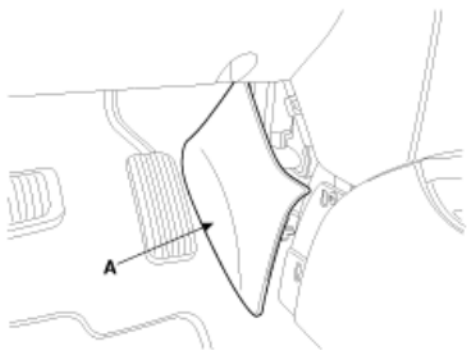


Passenger's

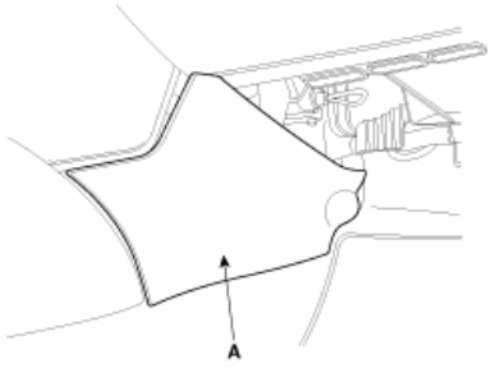

2. Installation is the reverse of removal.

COMPONENTS

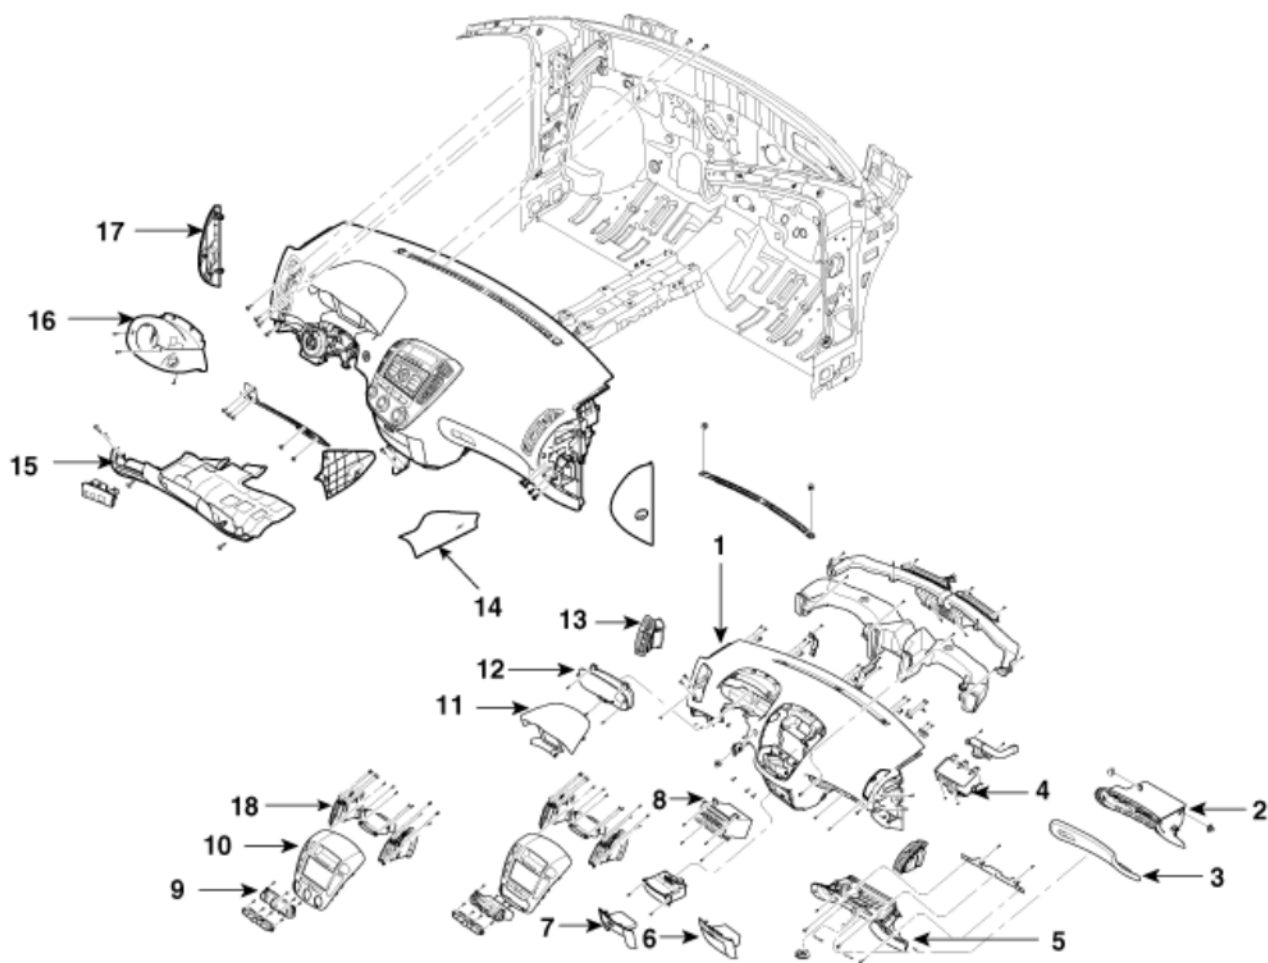

1. Crash pad main panel
2. Glove box housing
3. Glove box cover
4. Airback module
5. Crash pad lower panel
6. Storage box

7. Crash pad centr tray
8. Audio assembly
9. Heater control unit
10. Center fascia panel
11. Cluster panel
12. Cluster

13. Air vent
14. Crash pad centr side cover
15. Crash pad lower panel
16. Shroud
17. Crash pad side cover
18. Air vent


REPLACEMENT

Cluster Facia Replacement


NOTICE

- When prying with a flat-up screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Put on gloves to protect your hands.


1. Tilt the steering column down.
2. Separate the cluster facia panel (B) from the crash pad pulling the SST (09840-1E100) (A).

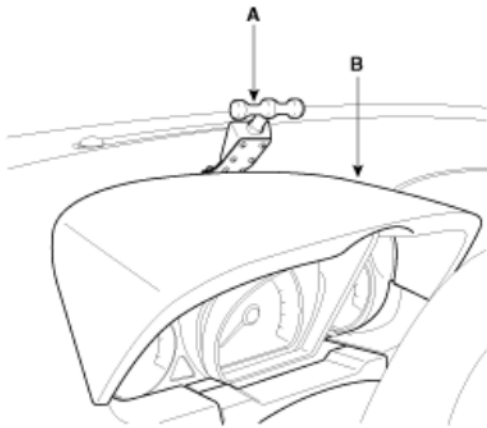

3. After loosening the mounting screws, then remove the cluster fascia (A).

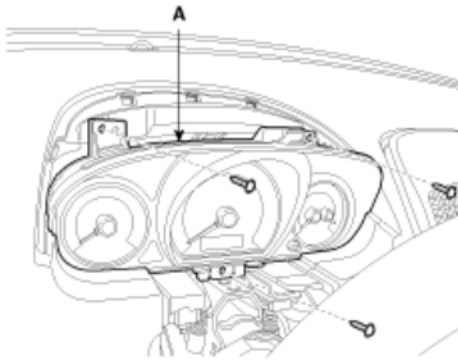

4. Disconnect the connector (A).

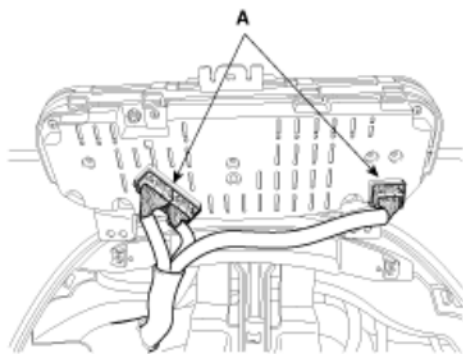

5. Installation is the reverse the removal.

NOTICE

- Make sure the connector is plugged in properly.

Center Facia Panel Replacement

NOTICE

- When prying with a flat-up screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Put on gloves to protect your hands.

1. Put the SST (09840-1E100) (A) into the space between the center fascia and crash pad.

NOTICE

- Be care not to damage the center fascia and crash pad.



2. Separate the center fascia panel from the crash pad pulling the SST (09840-1E100) (A) as shown on the photo.

CAUTION

- Pull the SST (09840-1E100) (A) slowly not to damage the center fascia panel.



3. Pull the other side of center facia panel with the SST (09840-1E100) in the way of "step 2)".

Center Facia Lower Tray Replacement



1. After loosening the mounting clips, then remove the center facia lower tray (A).




2. Installation is the reverse of removal.

Lower Panel Replacement

1. Remove the crash pad side cover.
2. Disconnecting the connector (B).
3. After loosening the crash pad lower panel mounting screws, then remove the lower panel (A).

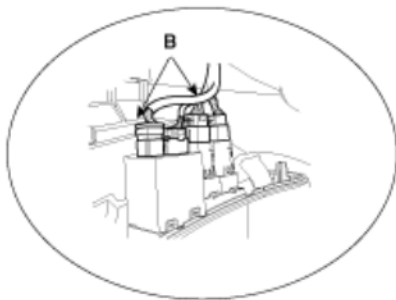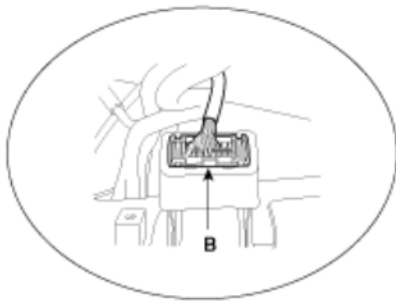


4. After loosening the mounting bolts, then remove the reinforcing panel (A).

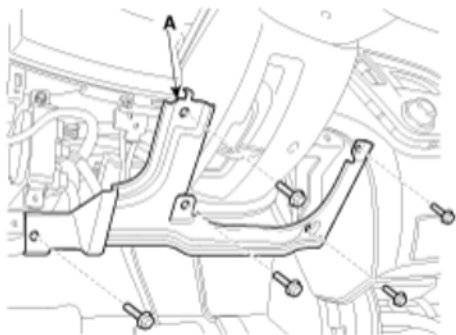


5. Installation is the reverse of removal.

Audio Assembly Replacement

1. Remove the center facia panel .
2. After loosening the mounting screws, then remove the audio assembly (A).

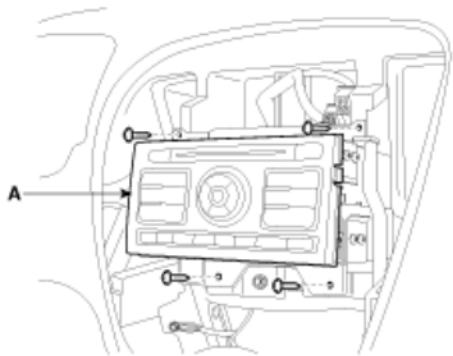

3. Disconnect the connector (A).

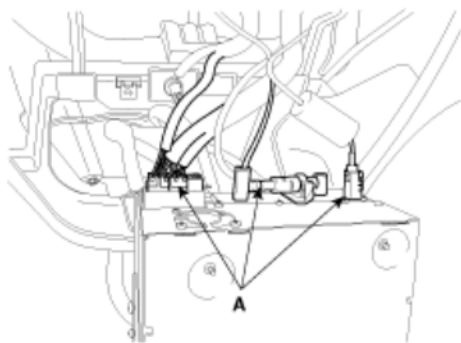



4. Installation is the reverse of removal.

NOTICE


- Make sure the connector is plugged in properly.

Glove Box Replacement

1. Disconnect the damper (B) from the glove box (A).

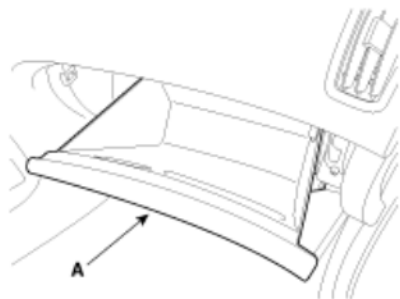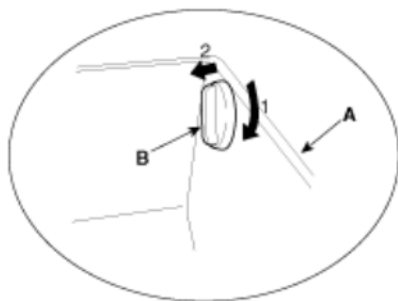


2. Remove the glove box (A) from the lift (B).

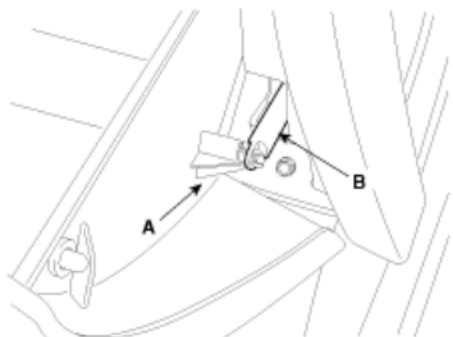

3. Disconnect the pine (A), then remove the glove box (B).




4. After loosening the mounting screws, then remove the glove box housing (A).
5. Disconnect teh connector (B).

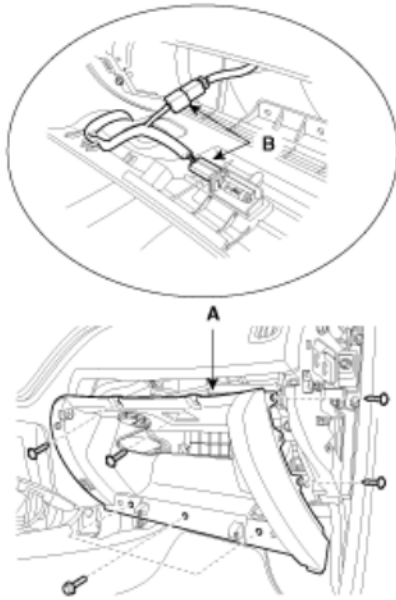

6. Installation is the reverse of removal.

Shroud Replacement

1. Loosen the screws.
2. Remove the shroud assembly (A).

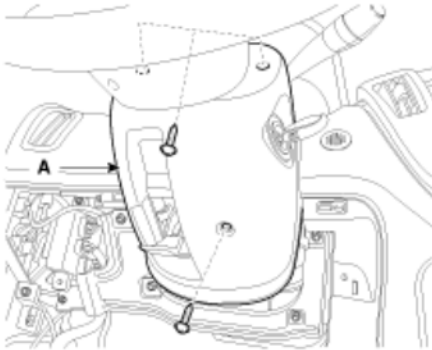

3. Installation is the reverse of removal.


Cover Replacement

NOTICE


- When prying with a flat-up screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Put on gloves to protect your hands.

1. Remove the crash pad side cover (A).

Driver's

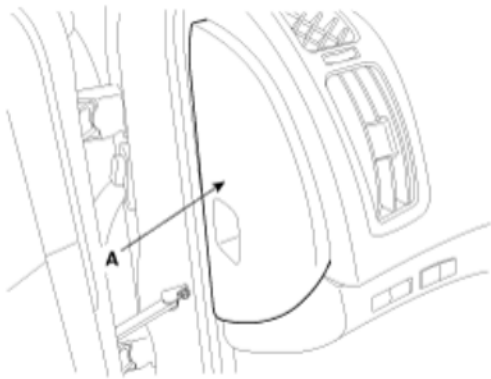

Passenger's

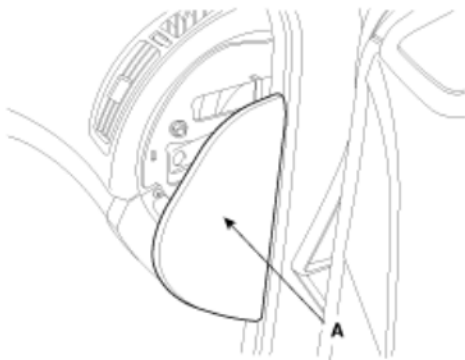

2. Installation is the reverse of removal.

Crash Pad Replacement


NOTICE

- When prying with a flat-up screwdriver, wrap it with protective tape, and apply protective tape around the related parts, to prevent damage.
- Put on gloves to protect your hands.

1. Remove the following items.
 - Front seat.
 - Cluster fascia panel, cluster.
 - Audio assembly.
 - Glove box.
 - Crash pad side cover.
 - Front pillar trim.
2. Remove the photo sensor.
3. Disconnect the passenger's air bag connector (A).
Loosen the bolts and nuts, then remove the crash pad (B).
4. Installation is the reverse of removal.

NOTICE

- Make sure the crash pad fits onto the guide pins correctly.
- Before tightening the bolts, make sure the crash pad wire harnesses are not pinched.
- Make sure the connectors are plugged in properly, and the antenna lead is connected properly.
- Enter the anti- theft code for the radio, then enter the customer's radio station presets.

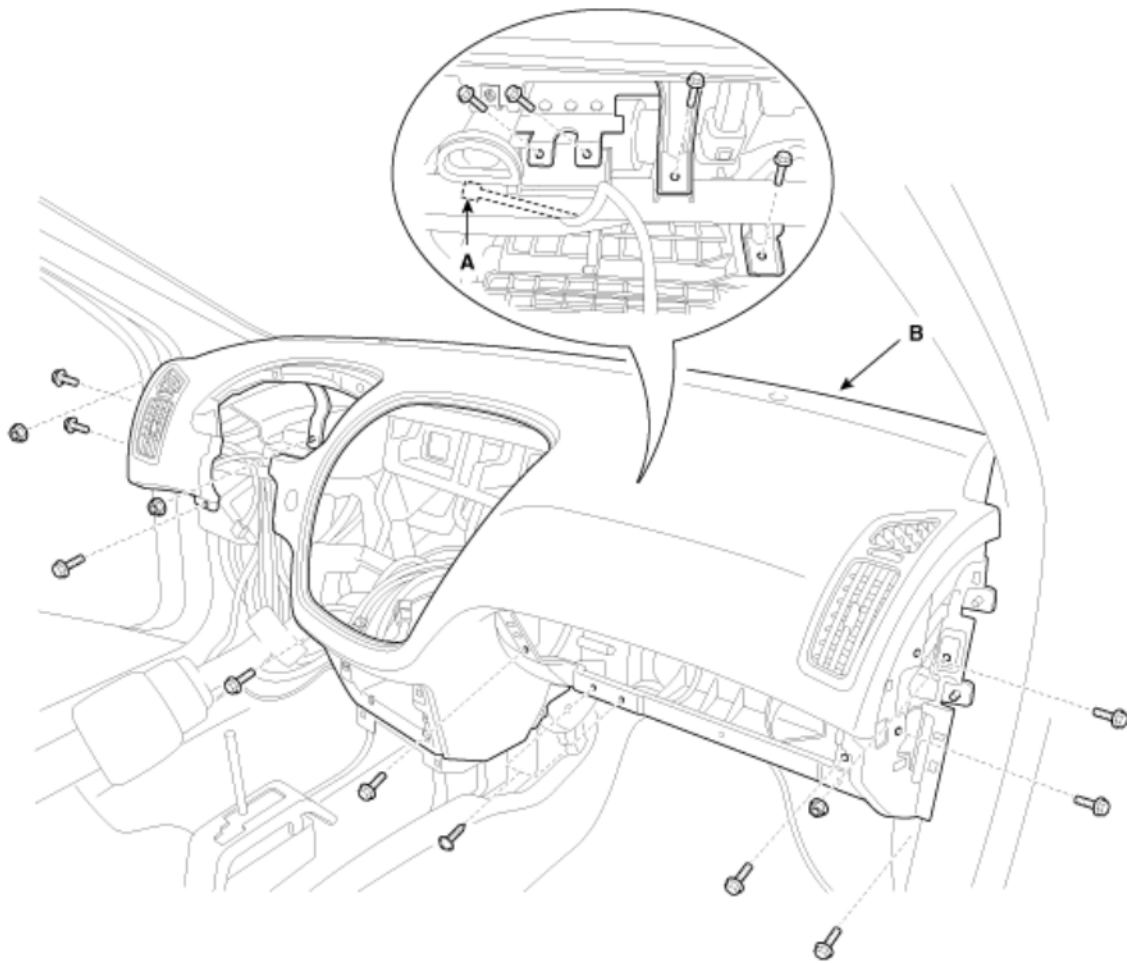


REPLACEMENT

Sunvisor Replacement

NOTICE

- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- Put on gloves to protect your hands.

1. Remove the cover (C).
2. Remove the sunvisor (A) and holder (B) from each side.
3. Disconnect the connector (D).

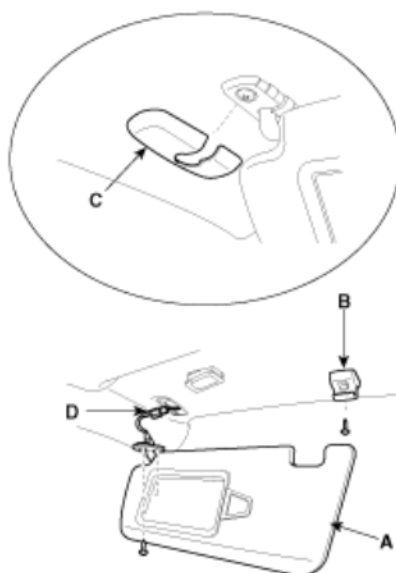


4. Installation is the reverse of removal.

Assist Handle Replacement

NOTICE

- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- Put on gloves to protect your hands.

1. Remove the covers (B), and remove the screws, then remove the assist handle (A).

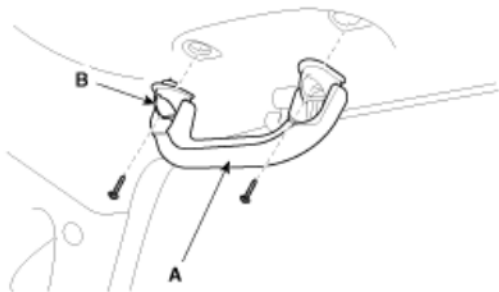



2. Installation is the reverse of removal.

Overhead Console Lamp Replacement

NOTICE

- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- Put on gloves to protect your hands.

1. Remove the overhead console
 - Remove the screw.
 - Pull out the roof console (A).
 - Disconnect the connector (B).

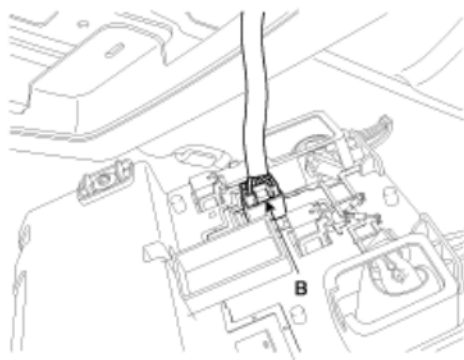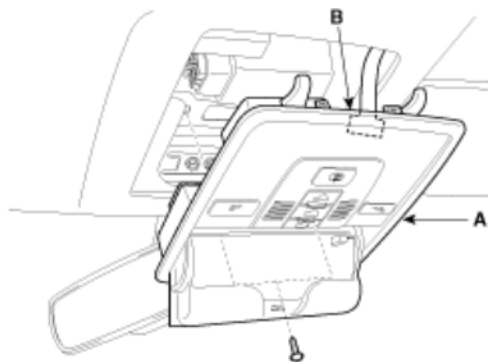


2. Installation is the reverse of removal.

Room Lamp Replacement

NOTICE

- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- Put on gloves to protect your hands.

1. Remove the room lamp.
 - Remove the lens (A).
 - Remove the screws.
 - Pull out the room lamp (B).
 - Disconnect the connector (C).

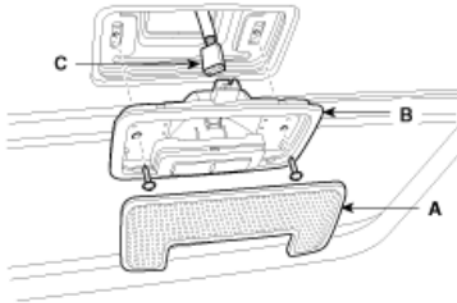

2. Installation is the reverse of removal.


Headliner Replacement

NOTICE

- Put on gloves to protect your hands.
- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- Take care not to bend or scratch the trim and panels.

1. Remove the following items.
 - Front seat, rear seat assembly.
 - Door scuff trim.
 - Front pillar trim.
 - Center pillar trim.
 - Rear pillar trim.
 - Overhead console.
 - Room lamp.
 - Sunvisor.
 - Assist handle

2. Remove the roof trim (A).

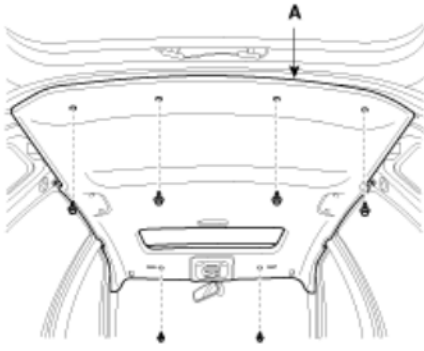

3. Installation is the reverse of removal.

NOTICE

- Replace any damage clips.


REPLACEMENT

5Door

NOTICE

- Put on gloves to protect your hands.
- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- Take care not to bend or scratch the trim and panels.

1. Remove the interior trim.

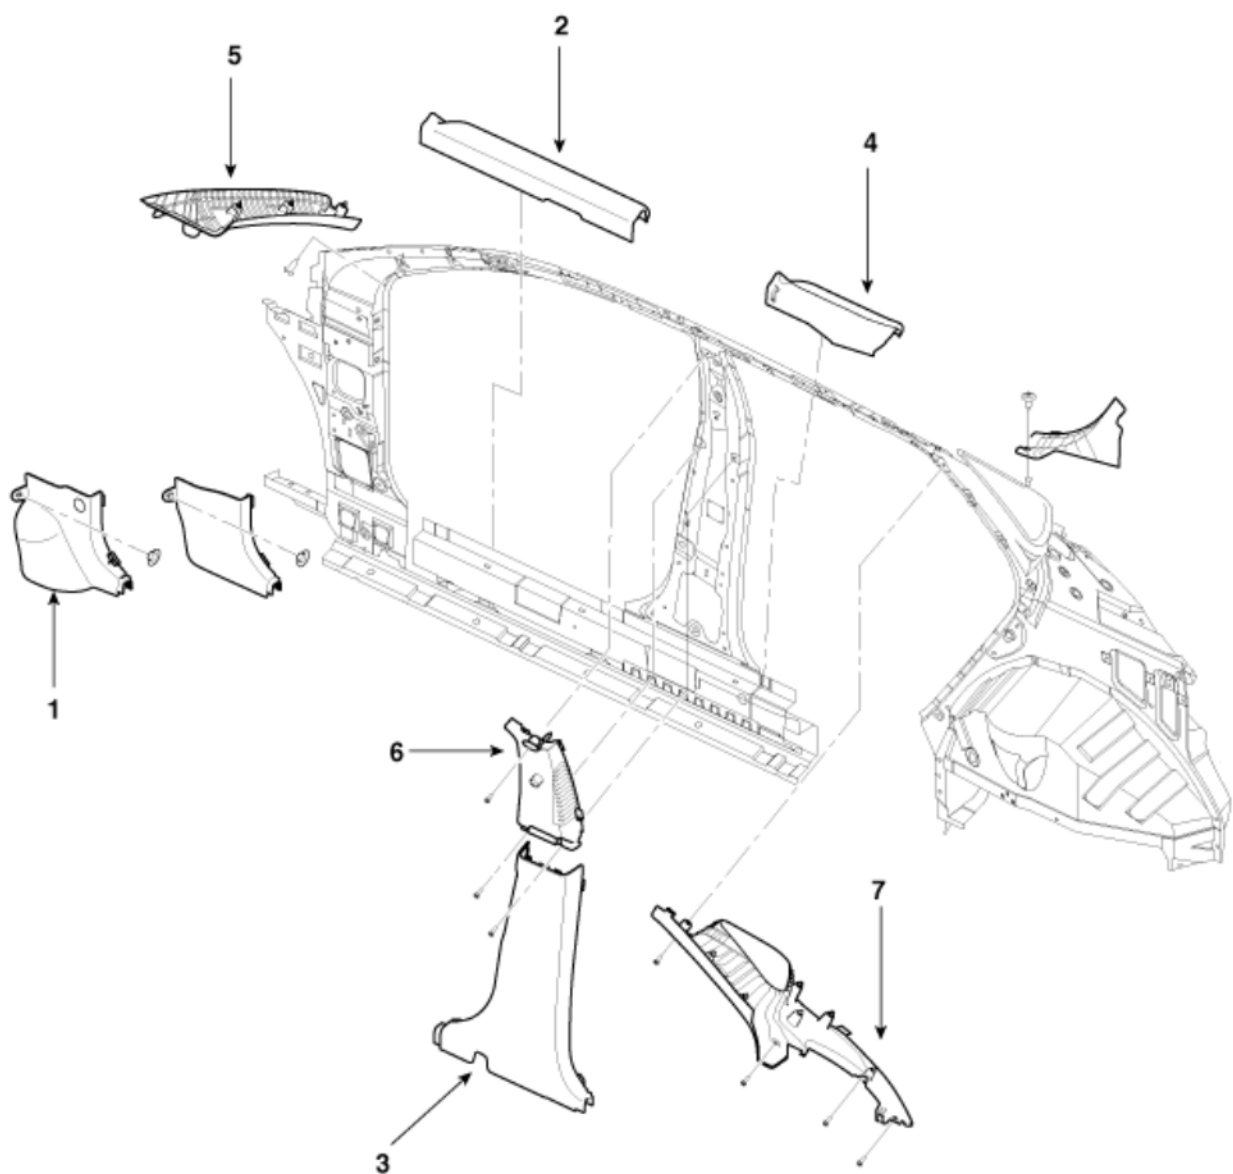

1. Cowl side trim
2. Front door scuff trim

5. Front pillar upper trim
6. Center pillar upper trim

3. Center pillar lower trim
4. Rear door scuff trim

7. Rear pillar trim


English ▼

3Door

NOTICE

- Put on gloves to protect your hands.
- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- Take care not to bend or scratch the trim and panels.

1. Remove the interior trim.

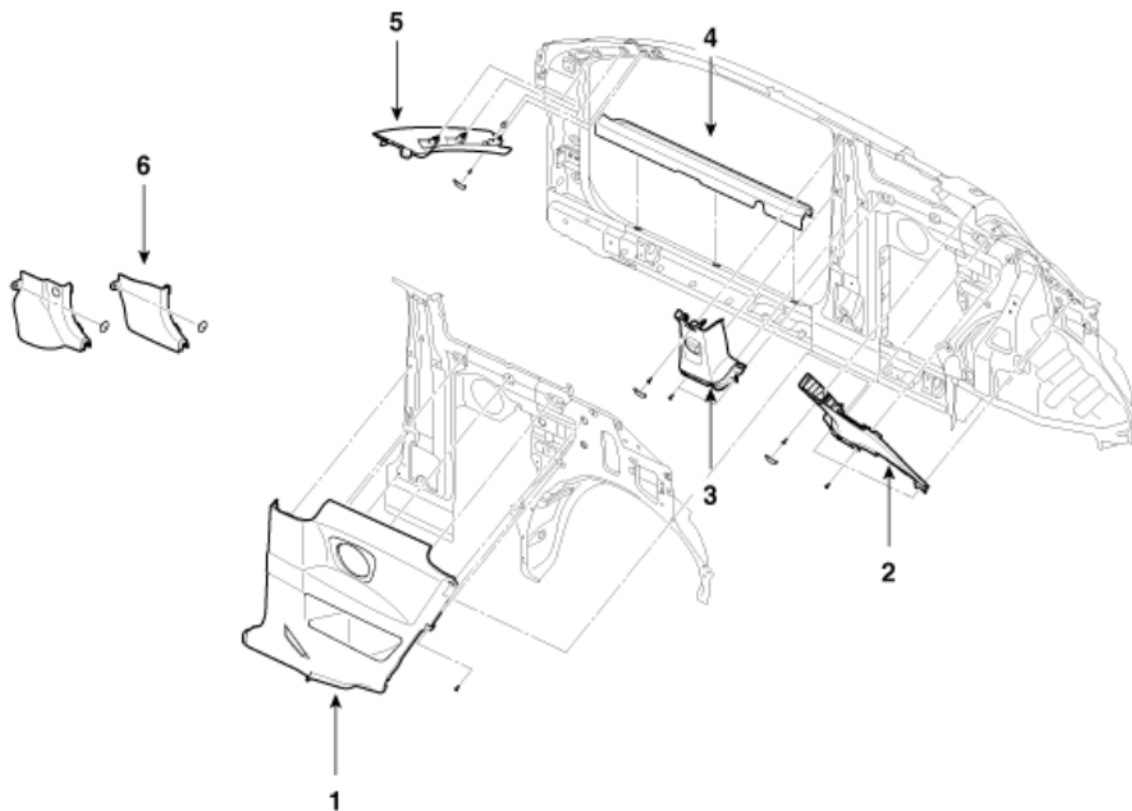

1. Rear quarter trim
2. Rear pillar trim
3. B pillar trim


4. Door scuff trim
5. Front pillar trim
6. Cowl side trim

Wagon

NOTICE

- Put on gloves to protect your hands.

- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- Take care not to bend or scratch the trim and panels.

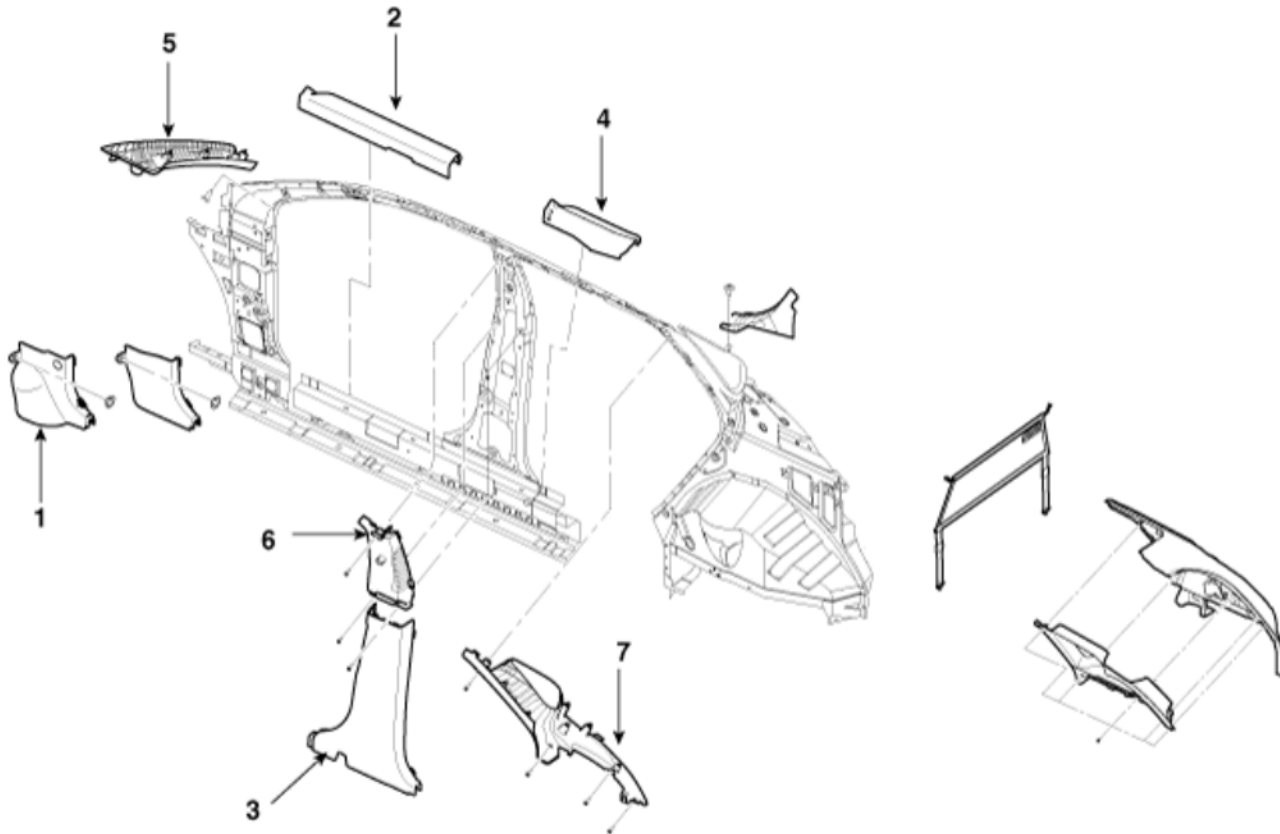

- | | |
|--|--|
| 1. Cowl side trim
2. Front door scuff trim
3. Center pillar trim
4. Rear door scuff | 5. Front pillar trim
6. Center pillar trim
7. Rear pillar trim |
|--|--|

Luggage Side Trim Replacement


5Door

NOTICE

- Put on gloves to protect your hands.
- When prying with a flat-tipped screwdriver, wrap it with protective tape to prevent damaged.

- Take care not to bend or scratch the trim and panels.

1. Remove the rear seat.
2. Remove the rear seat belt lower anchor.
3. After loosening the mounting screws, then remove the luggage side trim.
4. Installation is the reverse of removal.

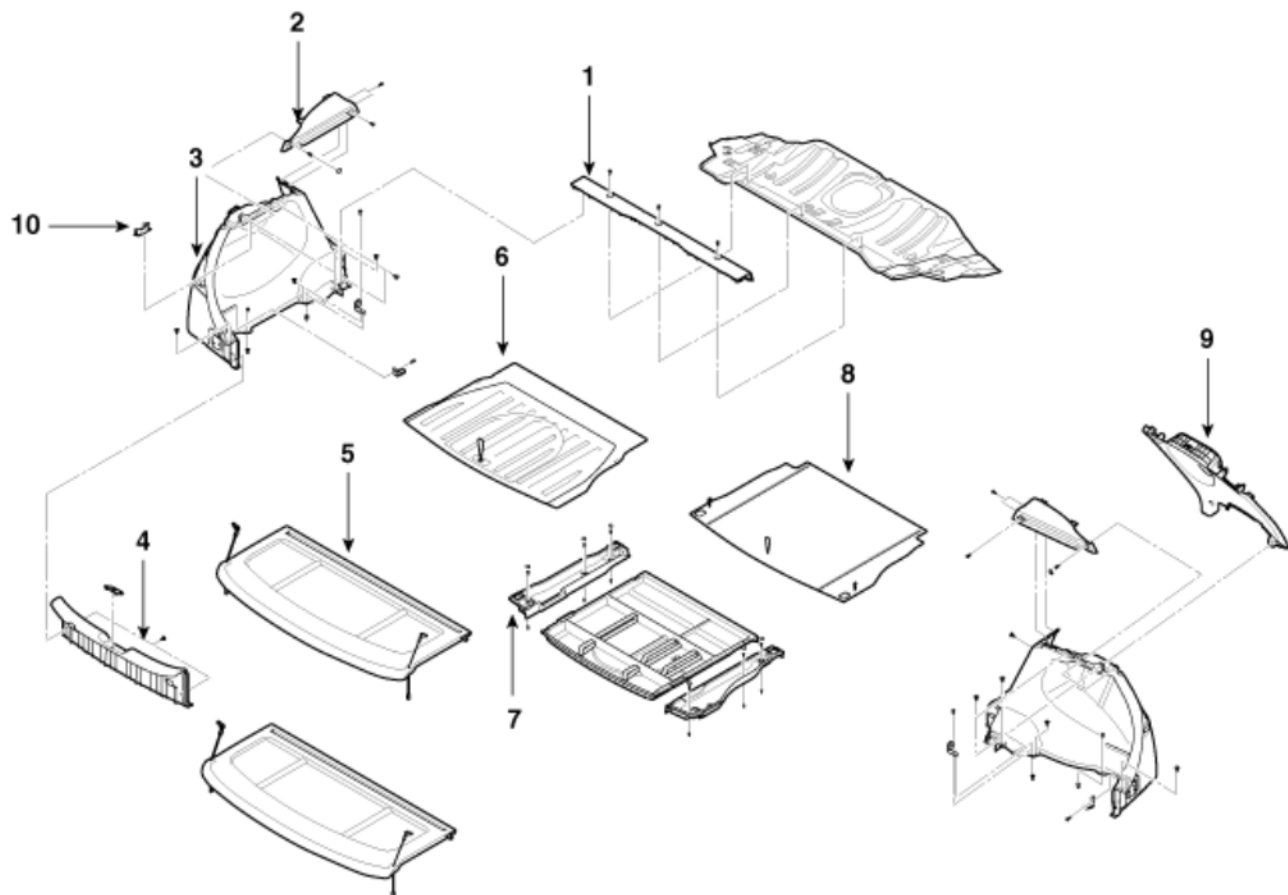

1. Front floor trim
2. Luggage side shelf
3. Luggage side trim
4. Rear transverse trim
5. Luggage center shelf

6. Luggage covering mat
7. Center luggage box
8. Luggage covering mat
9. Rear pillar trim
10. Luggage room lamp

Luggage Side Trim Replacement


3Door

NOTICE

- Put on gloves to protect your hands.
- When prying with a flat-tipped screwdriver, wrap it with protective tape to prevent damaged.
- Take care not to bend or scratch the trim and panels.

1. Remove the rear seat.

2. Remove the rear seat belt lower anchor.
3. After loosening the mounting screws, then remove the luggage side trim.
4. Installation is the reverse of removal.

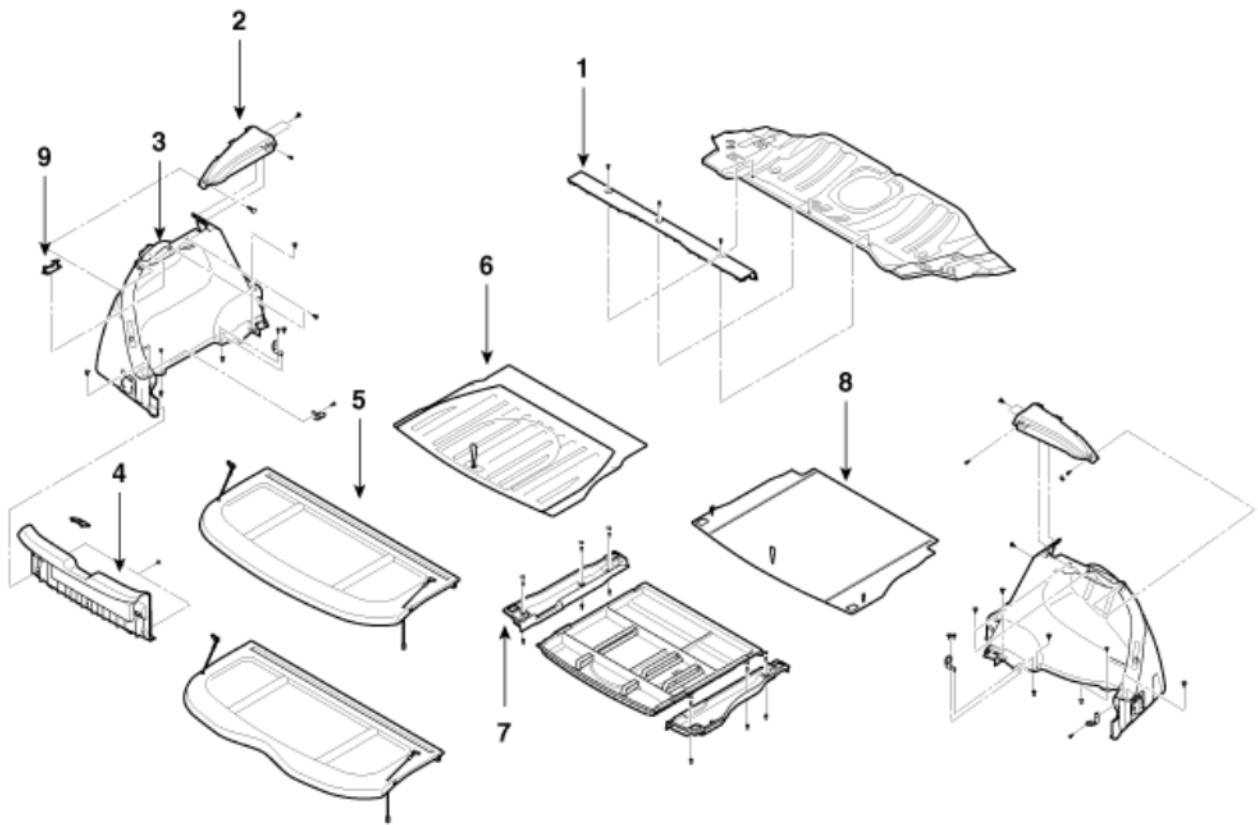

1. Front floor trim
2. Luggage side shelf
3. Luggage side trim
4. Rear transverse trim
5. Luggage center shelf

6. Luggage covering mat
7. Center luggage box
8. Luggage covering mat
9. Luggage room lamp

Luggage Side Trim Replacement


Wagon

NOTICE

- Put on gloves to protect your hands.
- When prying with a flat-tipped screwdriver, wrap it with protective tape to prevent damaged.
- Take care not to bend or scratch the trim and panels.

1. Remove the rear seat.
2. Remove the rear seat belt lower anchor.
3. After loosening the mounting screws, then remove the luggage side trim.

4. Installation is the reverse of removal.

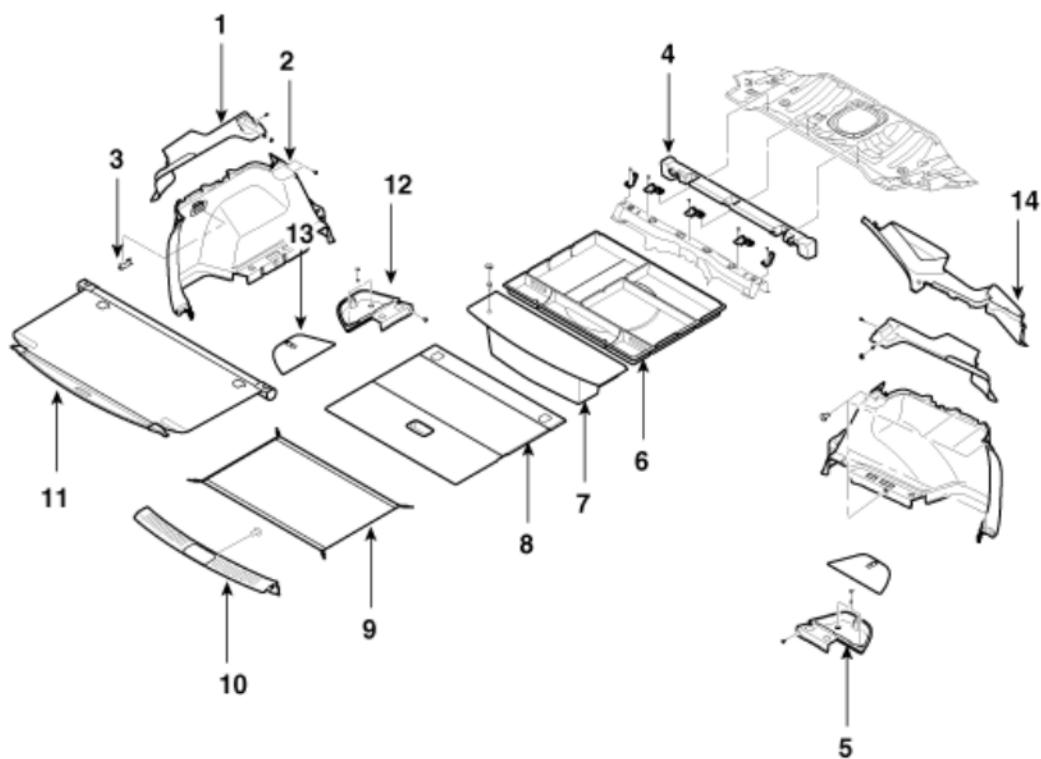


1. Side C/shelf trim
2. Luggage side trim
3. Luggage room lamp
4. Floor load trim
5. Luggage side box

6. Front luggage box
7. Rear luggage box
8. Front luggage covering
9. Luggage net
10. Rear transverse trim

11. Cargo screen
12. Luggage side box
13. Luggage side box cover
14. Rear pillar trim

COMPONENTS

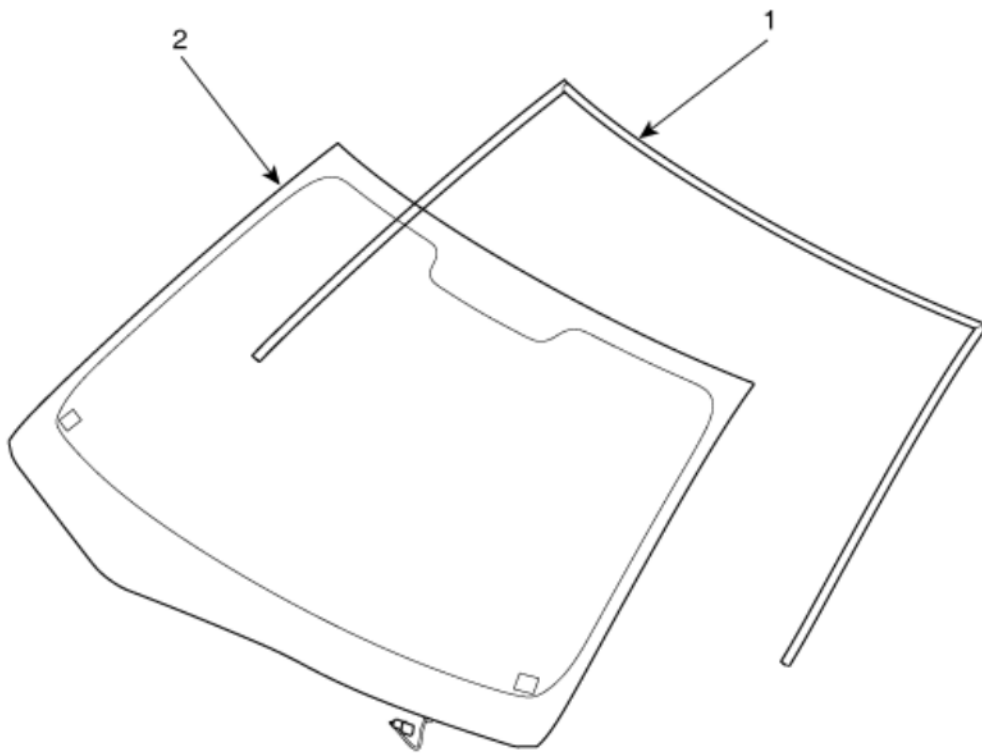

- 1. Windshield molding
- 2. Windshield glass


REPLACEMENT

Removal


NOTICE

- Put on gloves to protect your hands.
- Use seat covers to avoid damaging any surfaces.


1. Remove the following items:
 - Inside rear view mirror.
 - Sunvisors and holders, both sides, overhead console, Grab handles, both sides.
 - Front pillar trim, both sides.
 - Windshield wiper arms and cowl cover. (See page BE- "Windshield wiper")
2. Remove the molding (A) from the edge of the windshield (B). If necessary, cut the molding with a utility knife.

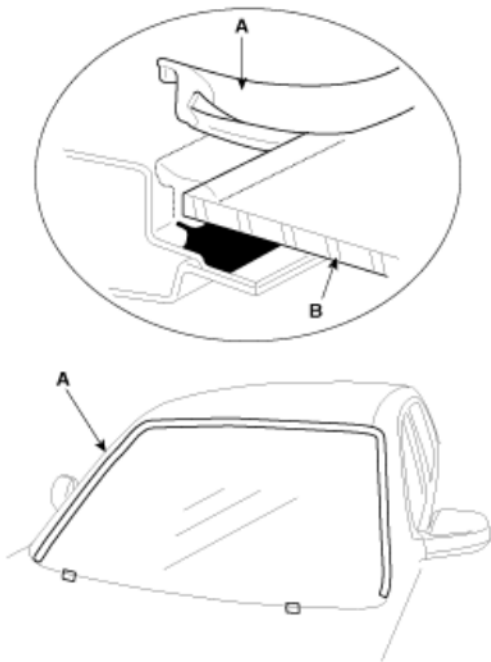

3. Pull down the front portion of the headliner. Take care not to bend the headliner excessively, or you may crease or break it.
4. Cut out the sealant using the sealant cutting tool [A(09861-31100)].

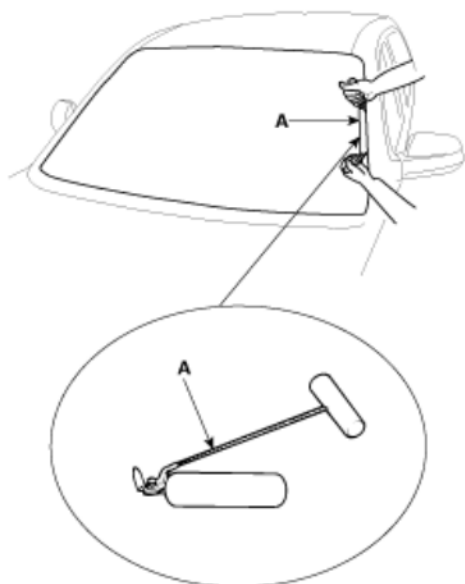


5. Remove the windshield (B) carefully using the glass holder [A].

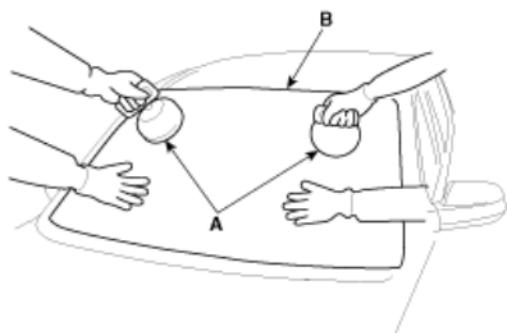


Installation

- With a knife, scrape the old adhesive smooth to a thickness of about 2mm (0.08 in.) on the bonding surface around the entire windshield opening flange:
 - Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
 - Remove the rubber dam and fasteners from the body.
 - Mask off surrounding surfaces before painting.
- Clean the body bonding surface with a sponge dampened in alcohol. After cleaning, keep oil, grease and water from getting on the clean surface.
- Apply the glass primer (A) to the side of the windshield glass edge and stick the both-sided adhesive tape (B) on the inside of molding (C).
- When attaching the molding, make it in line (D) with the windshield glass and attach the windshield glass pad (E) to the designated place.

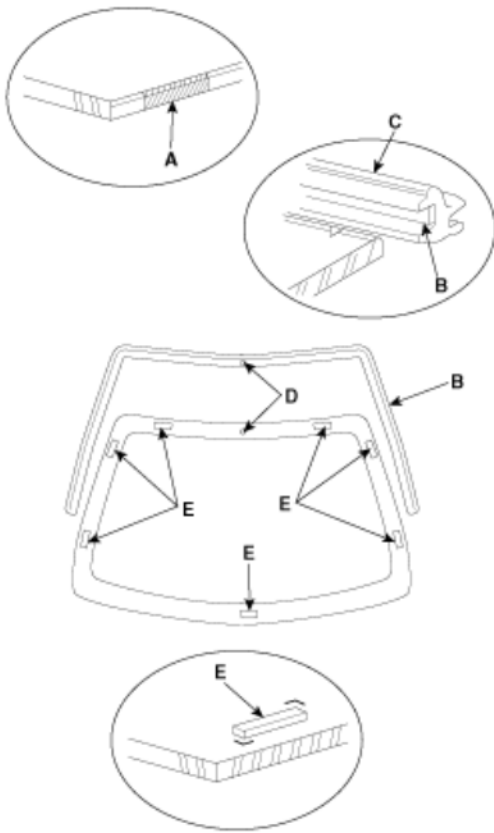

5. Install the spacer (A) install the windshield glass (B) temporarily with making sure to position them on the center, and then place the alignment mark (C).
6. Remove the windshield.

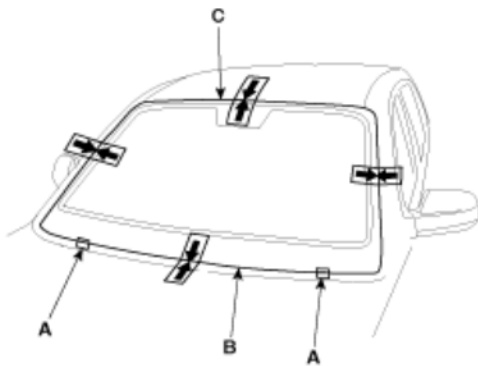


7. Apply a light coat of glass primer to the outside of the fasteners.

NOTICE

- Never touch the primed surface with your hand. If you do, the adhesive may not bond to the glass properly, causing a leak after the windshield glass is installed.
- Do not apply body primer to the glass.
- Keep water, dust, and abrasive materials away from the primer.

//// : Apply glass primer here.

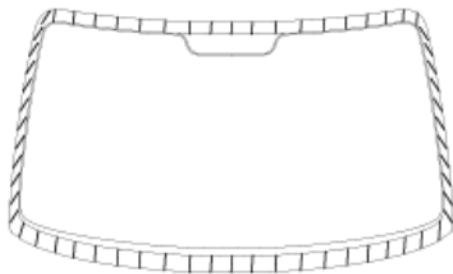


8. With a sponge, apply a light coat of body primer to the original adhesive remaining around the windshield opening flange. Let the body primer dry for at least 10 minutes:

- Do not apply glass primer to the body, and be careful not to mixup glass and body primer sponges.
- Never touch the primed surfaces with your hands.
- Mask off the dashboard before painting the flange.


//// : primer



9. Pack adhesive into the cartridge without air pockets to ensure continuous delivery. Put the cartridge in a caulking gun, and run a bead of sealant (A) around the edge of the windshield (B) between the fastener and molding as shown. Apply the adhesive within 30 minutes after applying the glass primer. Make a slightly thicker bead at each corner.

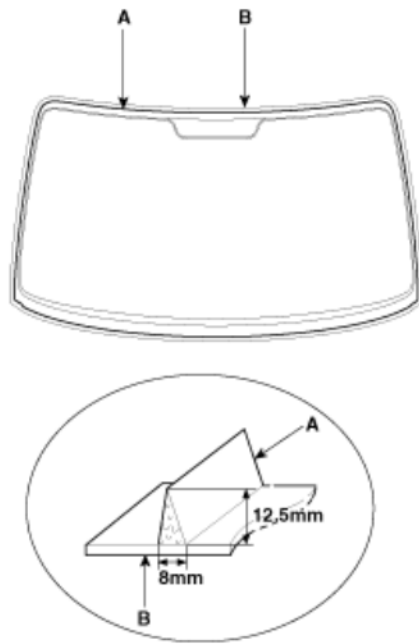


10. Use glass holder (A) to hold the windshield over the opening, align it with the alignment marks (B) made in step 15, and set it down on the adhesive. Lightly push on the windshield until its edges are fully seated on the adhesive all the way around. Do not open or close the doors until the adhesive is dry.

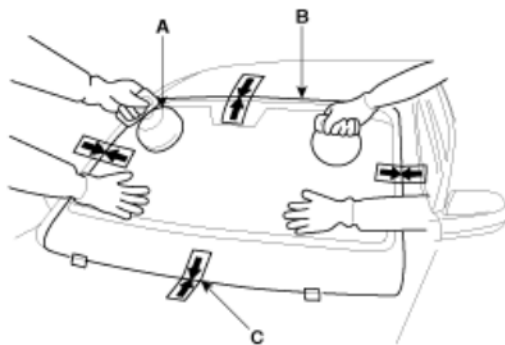

11. Scrape or wipe the excess adhesive off with a putty knife or towel. To remove adhesive from a painted surface or the windshield, wipe with a soft shop towel dampened with alcohol.
12. Let the adhesive dry for at least one hour, then spray water over the windshield and check for leaks. Make leaking areas, and let the windshield dry, then seal with sealant:
 - Let the vehicle stand for at least four hours after windshield installation. If the vehicle has to be used within the first four, it must be driven slowly.
 - Keep the windshield dry for the first hour after installation.
13. Reinstall all remaining removed parts. Install the rearview mirror after the adhesive has dried thoroughly. Advise the customer not to do the following things for two the three days:
 - Slam the door with all the windows rolled up.
 - Twist the body excessively (such as when going in and out of driveways at an angle or driving over rough, uneven roads).


COMPONENTS

< 3 Door, 5 Door >

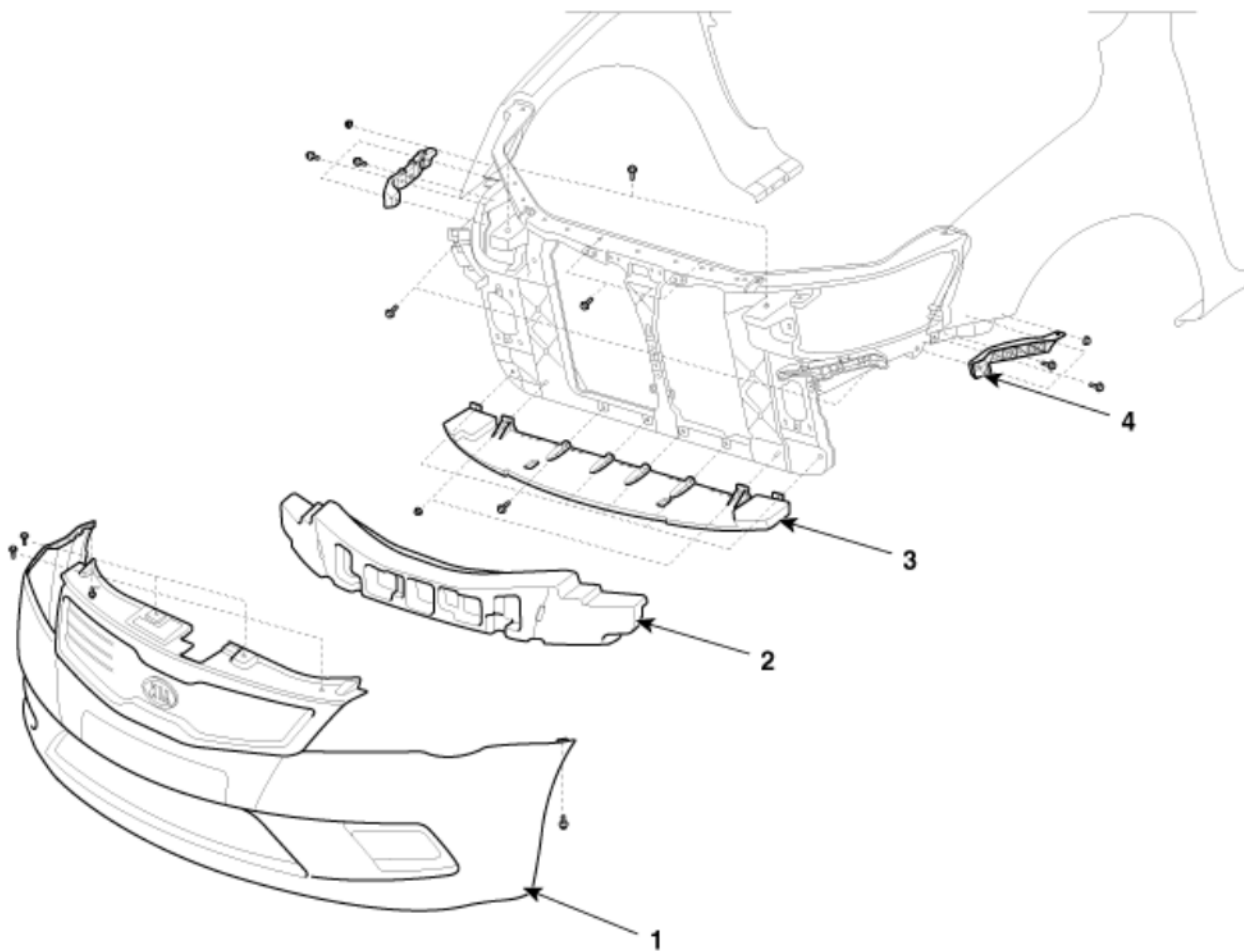

- | | |
|---------------------------------|---------------------------------|
| 1. Front bumper cover | 3. Front bumper lower stiffener |
| 2. Front bumper energy absorber | 4. Front bumper side bracket |

< Sports Pack >

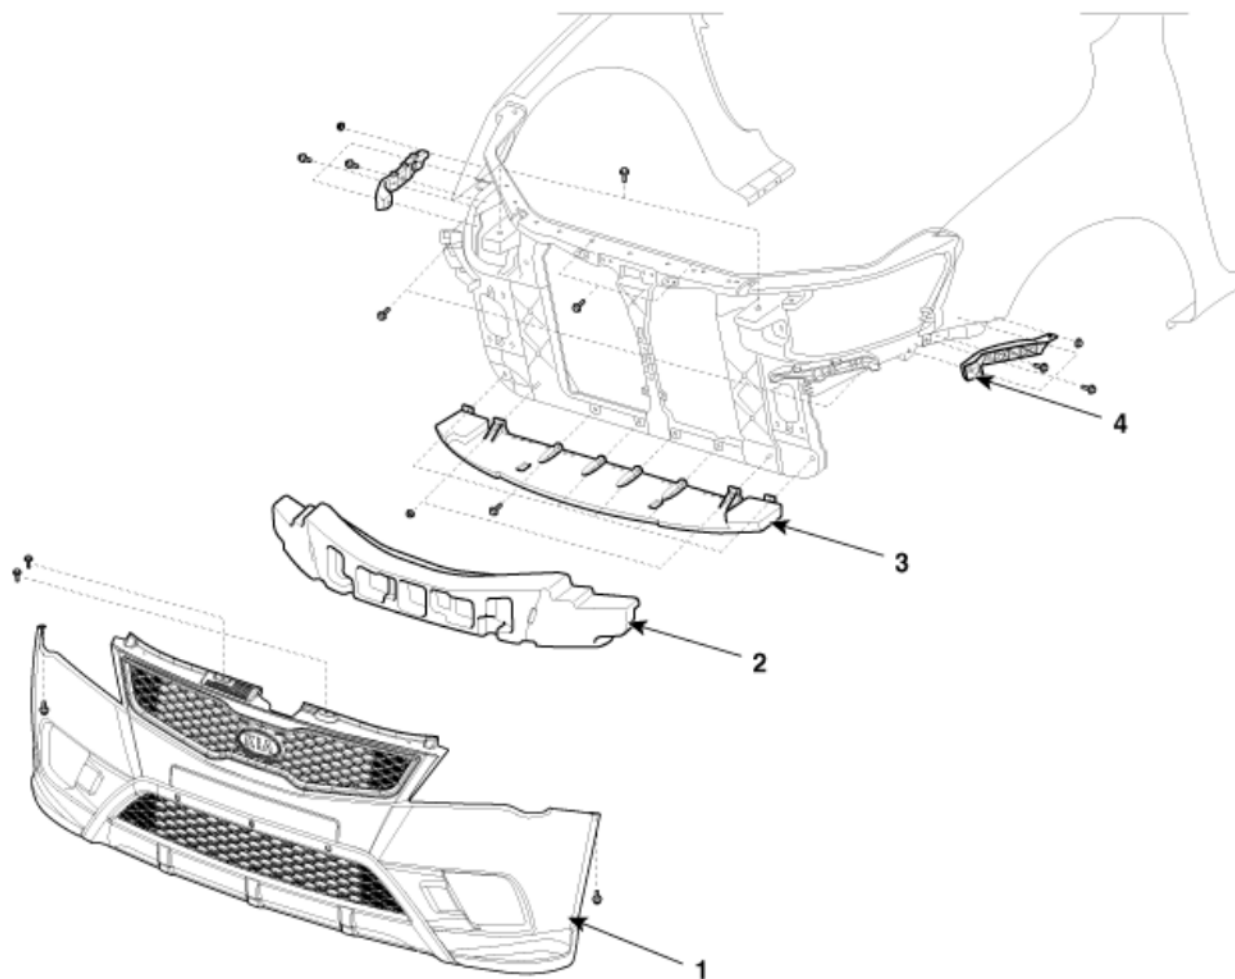


- | | |
|---------------------------------|---------------------------------|
| 1. Front bumper cover | 3. Front bumper lower stiffener |
| 2. Front bumper energy absorber | 4. Front bumper side bracket |

REPLACEMENT


NOTICE

- Put on gloves to protect your hands
- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- Take care not bend or scratch the cover and other parts.

1. Remove the mounting clips.

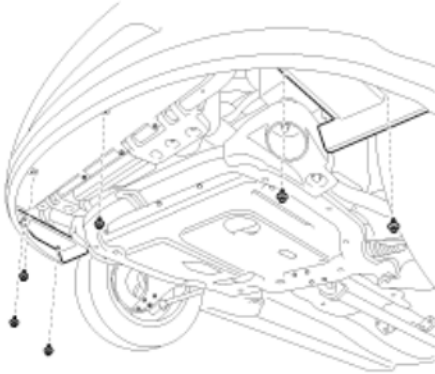

2. Loosen the radiator upper cover mounting screws and bolts.

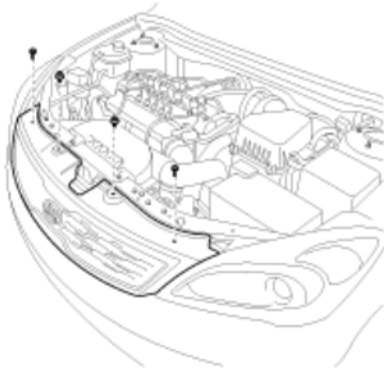

3. After loosening the front bumper side's mounting screw, then disconnect the side's.




4. Disconnect the fog lamp connector (A).



5. Remove the front bumper cover.
6. Installation is the reverse of removal.


COMPONENTS

< 3 Door, 5 Door >

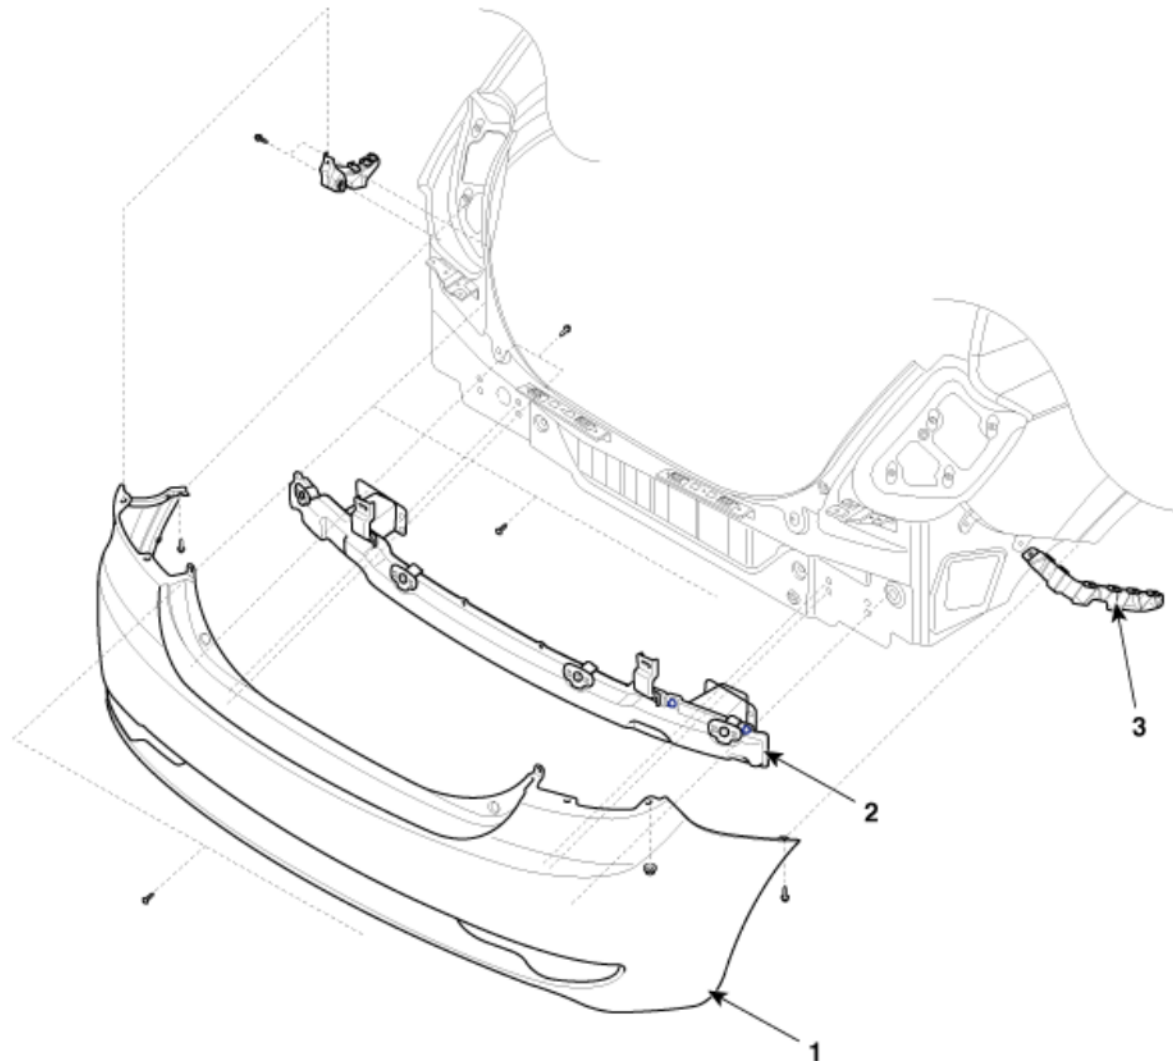

- | | |
|--------------------------------|-----------------------------|
| 1. Rear bumper cover | 3. Rear bumper side bracket |
| 2. Rear bumper energy absorber | |

< Sports Pack >

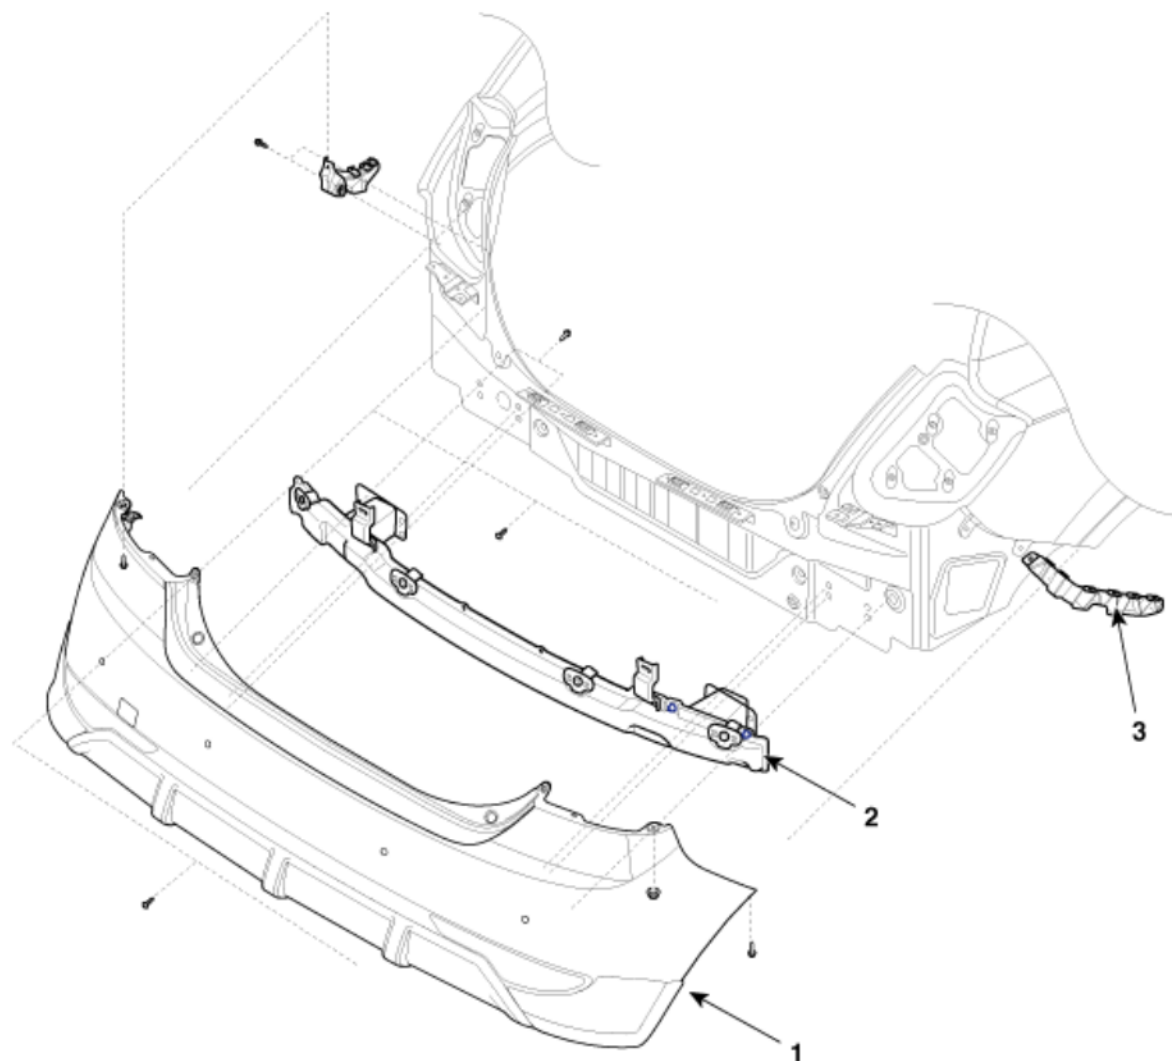

- | | |
|--------------------------------|-----------------------------|
| 1. Rear bumper cover | 3. Rear bumper side bracket |
| 2. Rear bumper energy absorber | |

REPLACEMENT


NOTICE

- Put on gloves to protect your hands
- When prying with a flat-tip screwdriver, wrap it with protective tape to prevent damage.
- Take care not bend or scratch the cover and other parts.


1. Remove the mounting nuts.




2. Disconnect the connector (A), then remove the rear combination lamp (B).

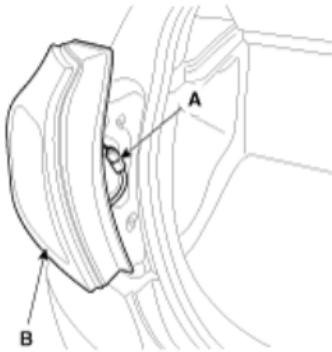


3. Remove the rear bumper side's screws.

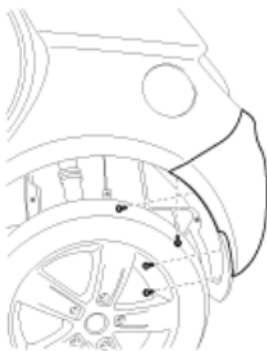


4. Loosen the inside mounting bolts.

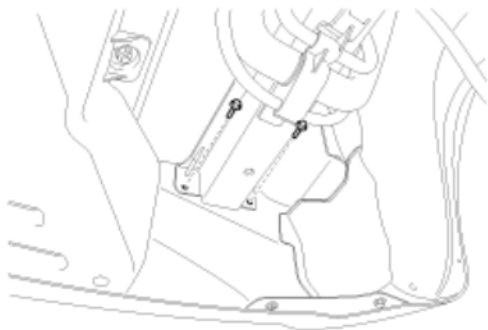

5. After loosening the mounting screws and clips, then remove the rear bumper cover (A).

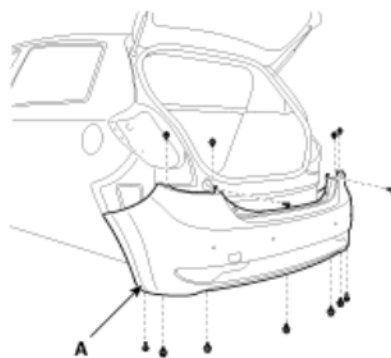

6. Disconnect the connector (A).

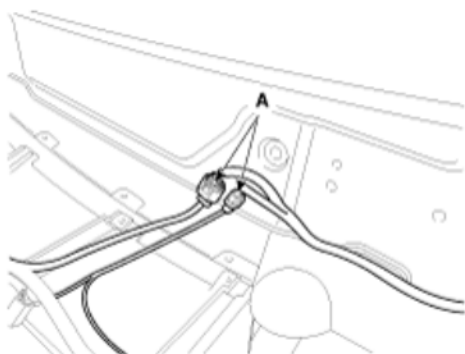


7. Installation is the reverse of removal.

NOTICE

- Replace any damage clips.

COMPONENTS

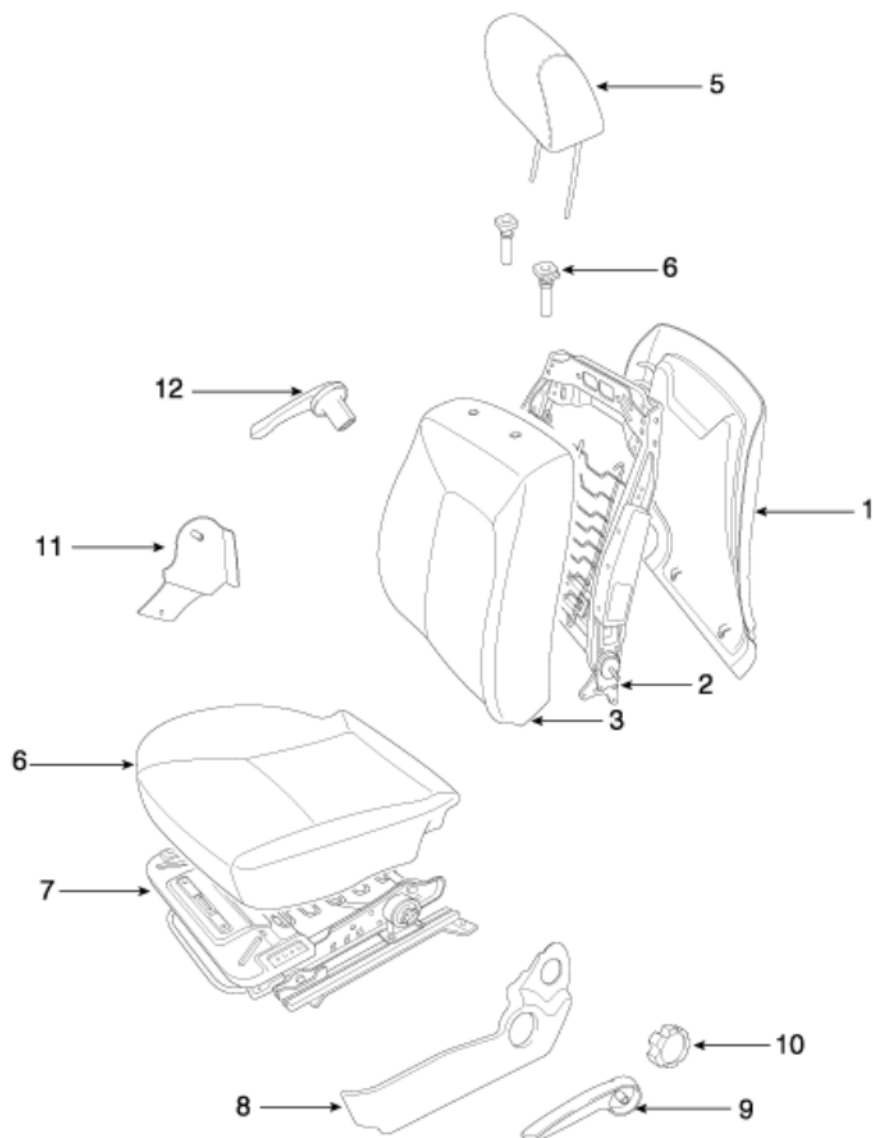

- 1. Back panel
- 2. Back frame
- 3. Seat back pad
- 4. Headrest

- 5. Headrest guid
- 6. Seat cushion
- 7. Seat cushion frame
- 8. Recliner cover


- 9. Hight lever
- 10. Recliner lever
- 11. Recliner cover
- 12. lumbar sport lever

REPLACEMENT

Seat Assembly Replacement


1. Remove the seat assembly mounting cover.
2. After loosening the seat assembly mounting bolts, remove the seat assembly (A).

Bolt, 3.5–5.5 kgf.m (34.3–53.9 N.m, 25.3–39.8 lbf.ft)

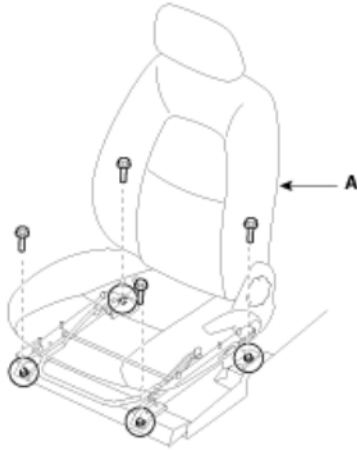


3. Disconnect the connectors, and remove the seat assembly.

Driver`s

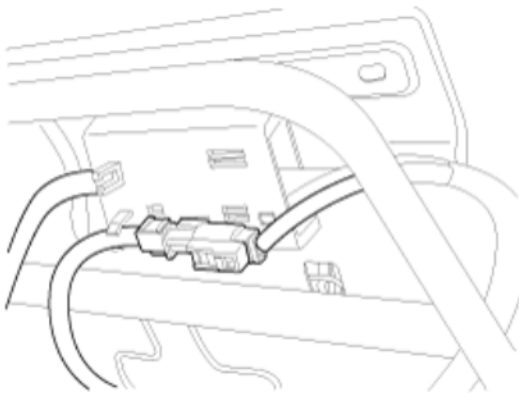

Passenger`s

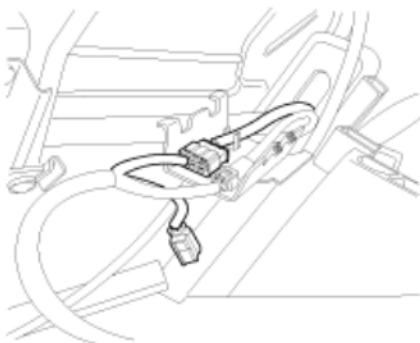

4. Installation is the reverse of removal.

CAUTION


English ▼

SEAT MOUNTING BOLT INSTALLATION PROCEDURE (manual seat only)


- Set the seat into the most rearward position. Check then each slide is locked, and then Tighten the front mounting bolt temporarily.
- Set the seat into most forward position. Check that each slide is locked, and then Tighten the rear mounting bolt completely.
- Set the seat into the most rearward position. Check the front mounting bolt completely.
- Check that the seat operates to and fro smoothly and the locking portion locks properly.

Recliner Cover Replacement

1. After loosening the recliner mounting screw, then remove the recliner lever (A) and height lever (B).
2. After loosening the mounting screws, then remove the recliner cover (C).

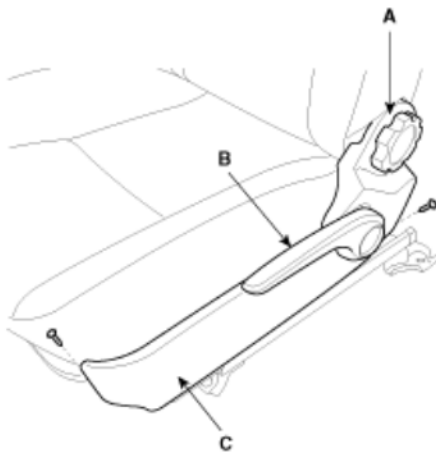

3. Gently detach the hook, remove the recliner cover (A).

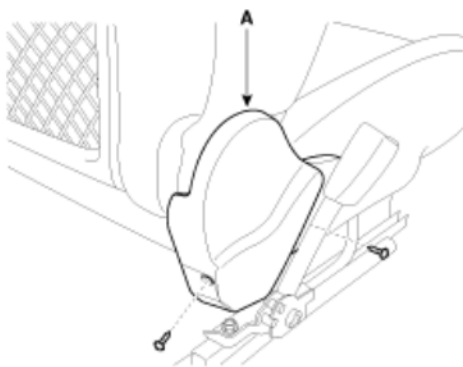

4. Installation is the reverse of removal.

Seat Back Cover Replacement

1. Remove front seat assembly.
2. Remove the recliner cover .
3. After disconnecting the scuff band, remove the seat back panel.




4. Disconnect the protector (A) from the back frame.




5. Remove the lumbar support lever.



6. Pull out the headrest guides (A) while pinching the end of the guides, and remove them.

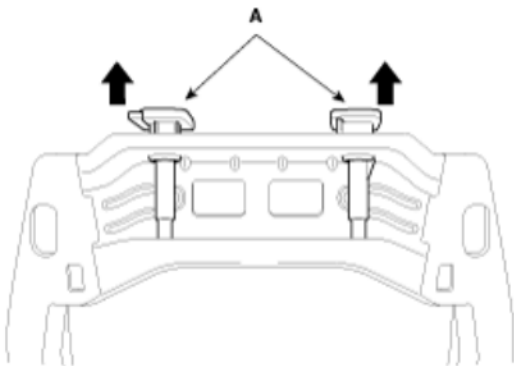


7. After removing the tape on the front of seat back remove the seat back cover (A).

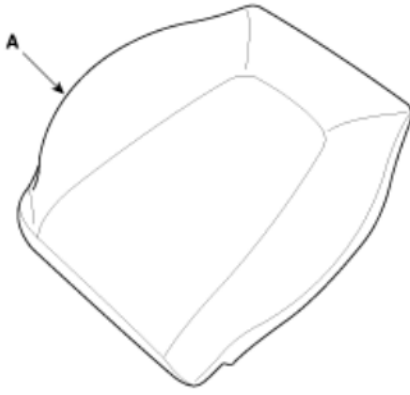


8. Installation is the reverse of removal.

Seat Cushion Cover Replacement

1. Remove front seat assembly.
2. Remove the recliner cover.
3. After disconnect the protector (A), then remove the seat cushion (B).

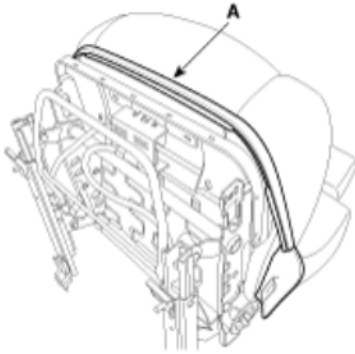

4. After removing the hogring clip on the front of seat cushion and remove the seat cushion cover (A).

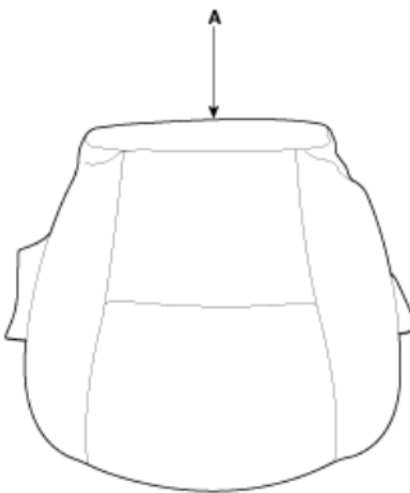

5. Installation is the reverse of removal.

Seat Frame Replacement


1. Remove the following items.
 - Recliner cover

- Seat back panel
- Headrest guide
- Seat back cover

2. After loosening the mounting bolts, then disconnect the seat back frame (A) and seat cushion frame (B).


NOTICE

- Remove the side air bag for replacing side air bag installation seat.
- Before service, be fully aware of precautions and service procedure relevant to air bag (Refer to page RT-Airbag)

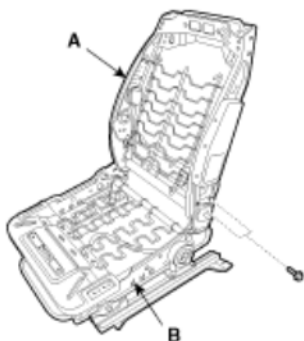

3. Installation is the reverse of removal.

COMPONENTS

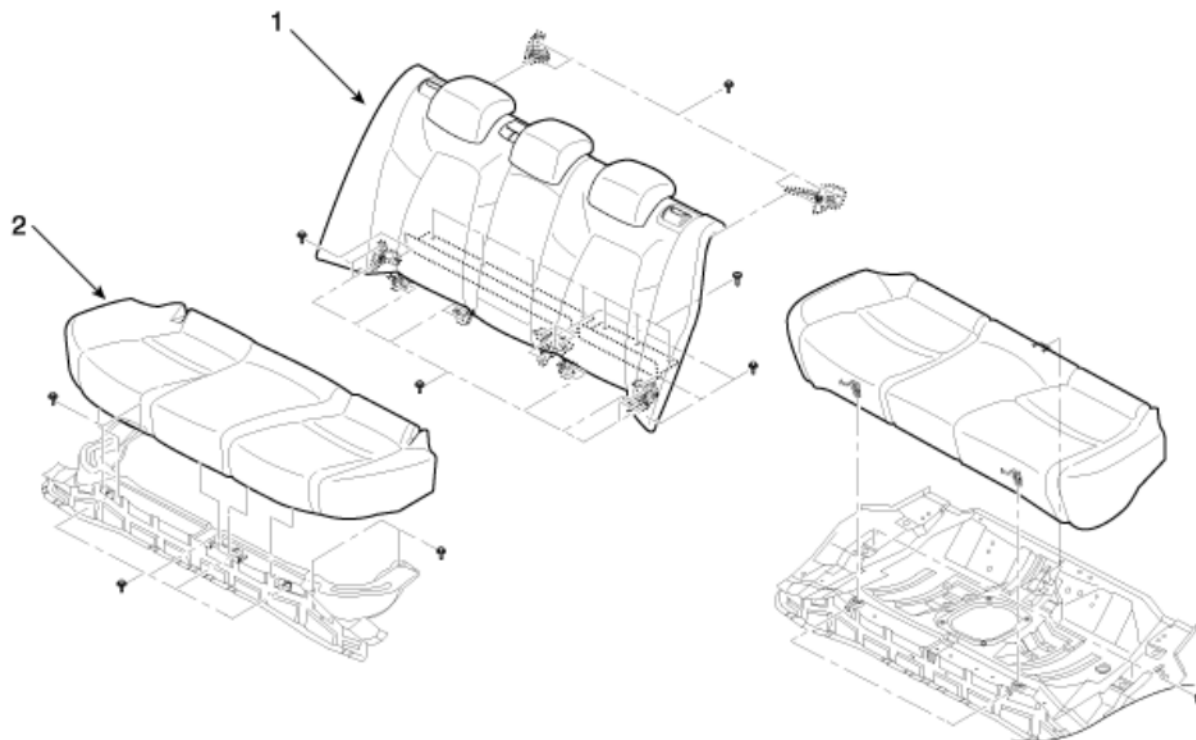


1. Rear seat back

2. Rear seat cushion


REPLACEMENT

Seat Assembly Replacement

1. Remove the seat cushion (A).

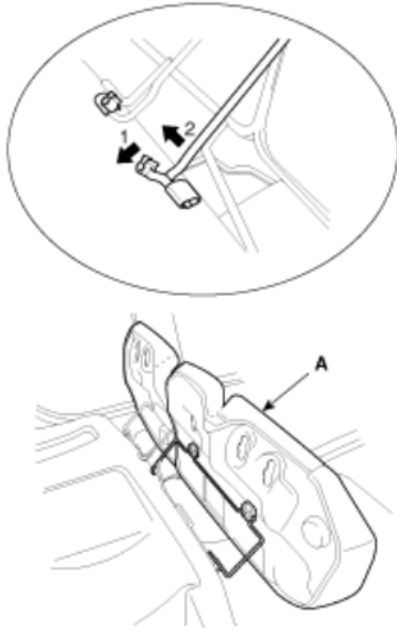

2. After loosening the mounting bolts, then remove the rear seat back (A).

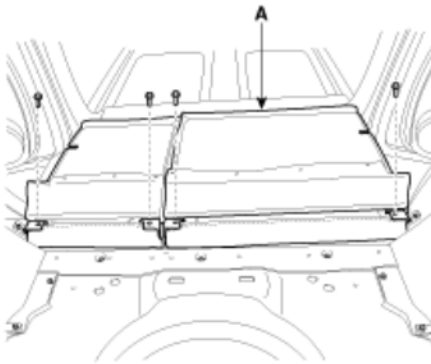

3. Installation is the reverse of removal.

REPLACEMENT


5Door/Wagon

Front Seat Belt Replacement


⚠ CAUTION

- When installing the belt, make sure not to damage the pretensioner.

1. Disconnect the battery negative cable, and wait for at least three minutes before beginning work.
2. After raise the lower anchor cover (A), loosen the lower anchor mounting bolt (B).

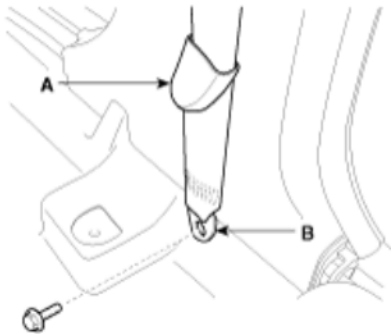


3. Remove the center pillar lower trim.
4. Remove the center pillar upper trim.
5. After disconnecting the pretensioner connector lock pin, remove the SIS connector (B), Loosen the mounting bolt, then remove the pretensioner (C).

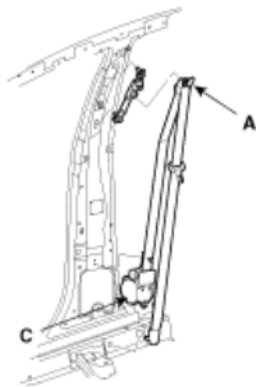

Height Adjuster Replacement

1. Remove the following items first.
 - Front seat assembly.
 - Door scuff trim.
 - Front seat belt.
 - Center pillar trim.


2. After loosening the mounting bolt, then remove the height adjuster (A).

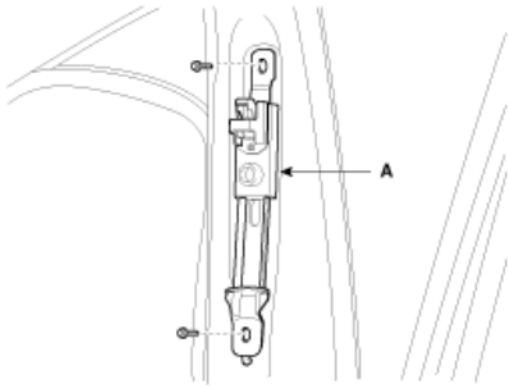

3. Installation is the reverse of removal.

Front Seat Belt Buckle Replacement

1. Remove the following items first.
 - Front seat assembly.
2. Remove the wire harness of buckle from seat.
3. Remove the seat belt buckle (A).

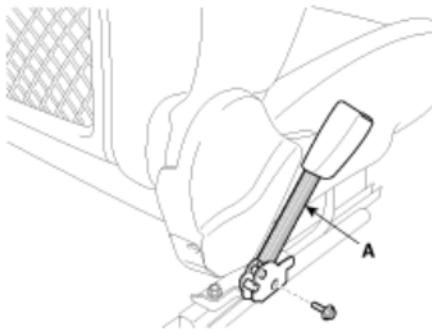

4. Installation is the reverse of removal.


3Door

Front Seat Belt Replacement


⚠ CAUTION

- When installing the belt, make sure not to damage the pretensioner.

1. Disconnect the battery negative cable, and wait for at least three minutes before beginning work.
2. After raise the lower anchor cover (A), loosen the lower anchor mounting bolt (B).
Tightening torque :
4.0~5.5kgf.m (39.2~53.9N.m, 28.9~39.8lb-ft)

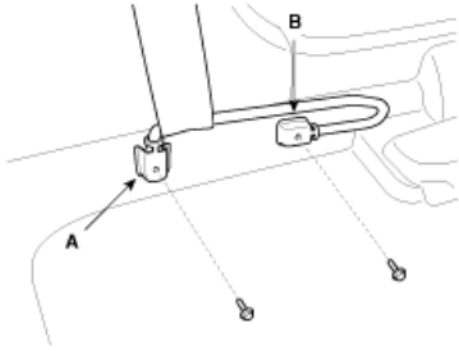


3. Remove the door scuff trim (A).

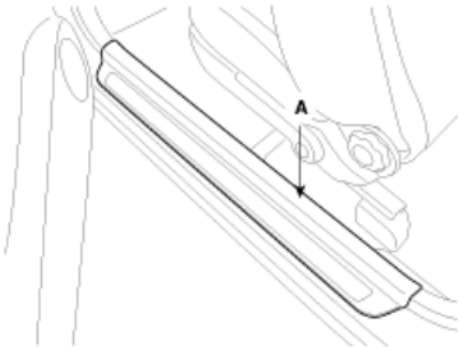


4. Remove the rear quarter trim (A).




5. Remove the B pillar upper trim (A).

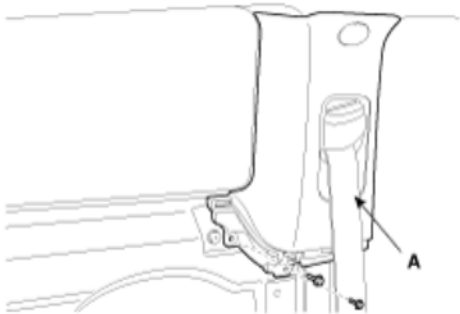

6. Remove the upper anchor (A).

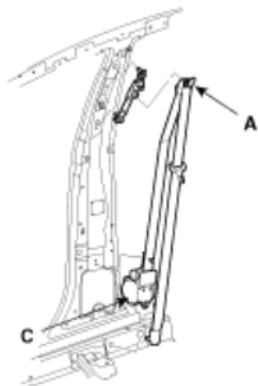


7. After disconnecting the pretensioner connector lock pin, remove the SIS connector, Loosen the mounting bolt, then remove the pretensioner (C).

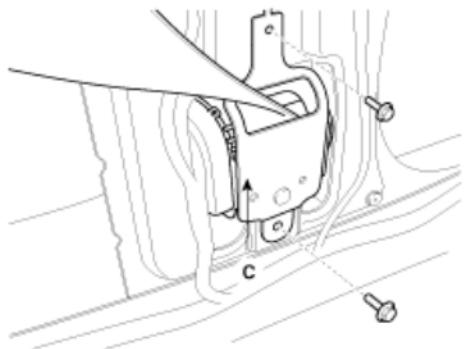

Height Adjuster Replacement


1. Remove the following items first.
 - Front seat assembly.
 - Door scuff trim.
 - Front seat belt.
 - Center pillar trim.
2. After loosening the mounting bolt, then remove the height adjuster (A).
Tightening torque :
4.0~5.5kgf.m (39.2~53.9N.m, 28.9~39.8lb-ft)

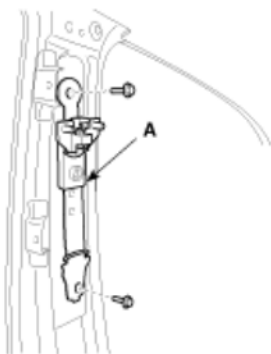

3. Installation is the reverse of removal.

Front Seat Belt Buckle Replacement

1. Remove the following items first.
 - Front seat assembly.
2. Remove the wire harness of buckle from seat.
3. Remove the seat belt buckle (A).

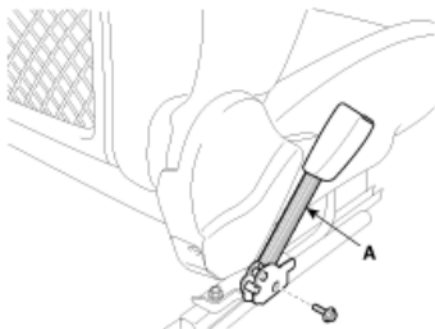

4. Installation is the reverse of removal.

REPLACEMENT


5Door

Rear Seat Belt Replacement

CAUTION

- When installing the belt, make sure not to damaged the pretensioner.


1. Remove the lower anchor (A).
2. After loosening retractor (C) mounting bolt, remove the rear seat belt (B).

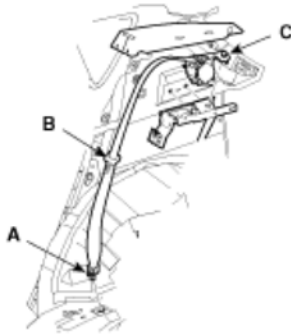

3. Installation is the reverse of removal.

Rear Seat Belt Buckle Replacement


1. Remove the rear seat cushion.
2. Remove the seat belt buckle and center seat belt (A).

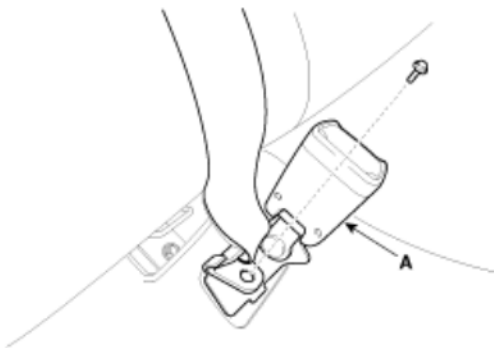

3. Remove the seat belt buckle (A).

Tightening torque :

4.0~5.5kgf.m (39.2~53.9N.m, 28.9~39.8lb-ft)

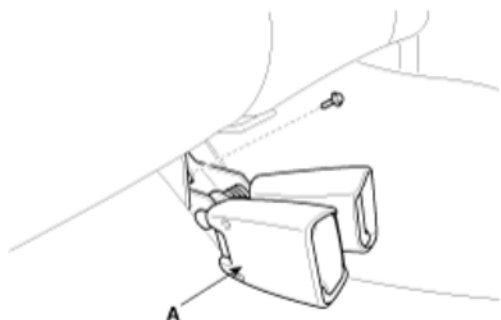

4. Installation is the reverse of removal.

3Door

Rear Seat Belt Relacement


⚠ CAUTION

- When installing the belt, make sure not to damaged the pretensioner.


1. Remove the following items first.
 - Rear seat assembly.
 - Rear door scuff trim.
2. Remove the lower anchor (A).



3. Remove the side seat (A).

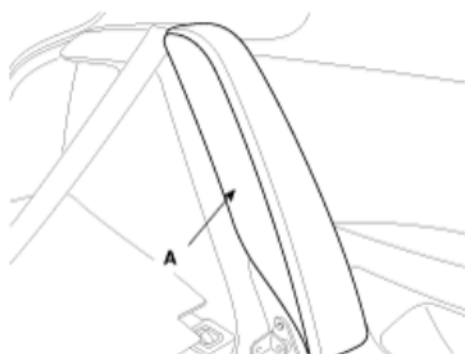


4. Remove the luggage side shelf (A).

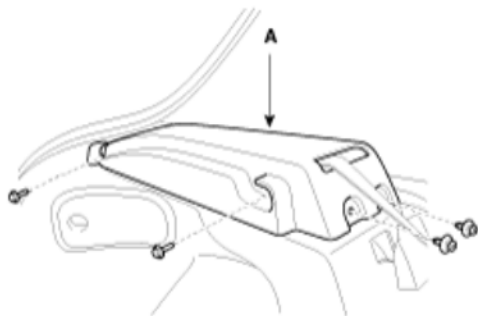

5. After loosening the retractor (B) mounting bolt, remove the rear seat belt (C).

Tightening torque :

4.0~5.5kgf.m (39.2~53.9N.m, 28.9~39.8lb-ft)

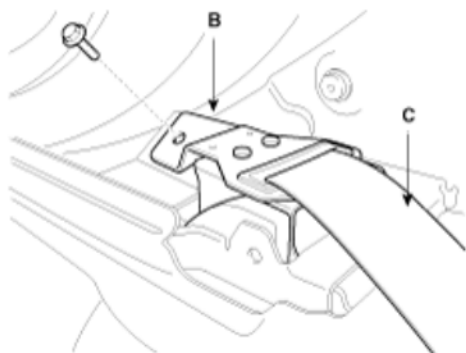


6. Installation is the reverse of removal.

Rear Seat Belt Buckle Replacement

1. Remove the rear seat cushion.
2. Remove the seat belt buckle (A).
3. Disconnect the connector (B).

Tightening torque :


4.0~5.5kgf.m (39.2~53.9N.m, 28.9~39.8lb-ft)

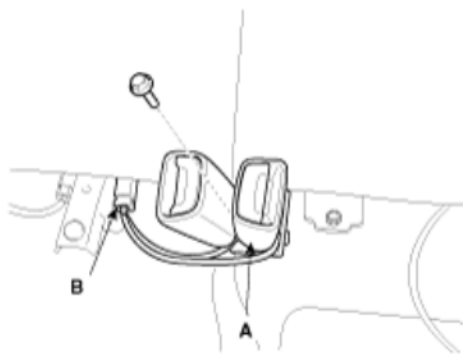

4. Remove the center seat belt and buckle (A).

Tightening torque :

4.0~5.5kgf.m (39.2~53.9N.m, 28.9~39.8lb-ft)

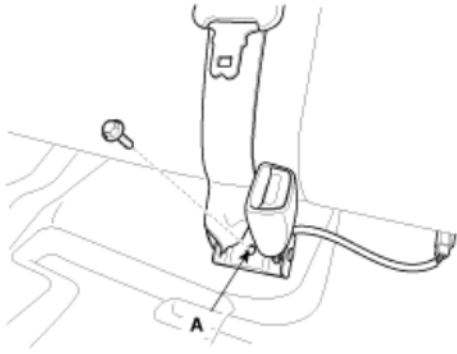

5. Installation is the reverse of removal.

Wagon

Rear Seat Belt Relacement

CAUTION

- When installing the belt, make sure not to damaged the pretensioner.


1. Remove the following items first.

- Rear seat assembly.
- Rear door scuff trim.


2. Remove the lower anchor (A).

Tightening torque :


4.0~5.5kgf.m (39.2~53.9N.m, 28.9~39.8lb-ft)

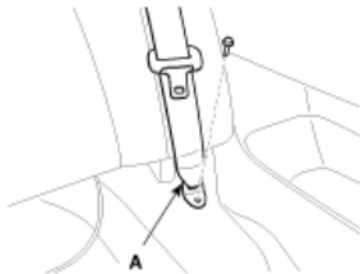


3. Remove the side shelf trim (A).

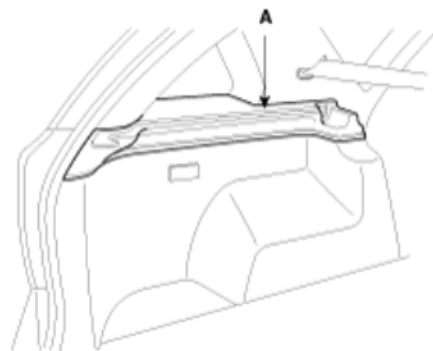

4. Remove the rear pillar trim (A).

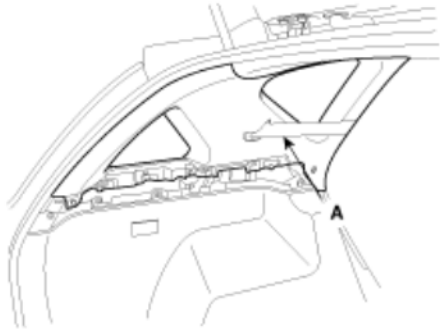


5. Remove the luggage side trim.
6. After loosening the retractor (B) mounting bolt, remove the rear seat belt (C).
Tightening torque :
4.0~5.5kgf.m (39.2~53.9N.m, 28.9~39.8lb-ft)

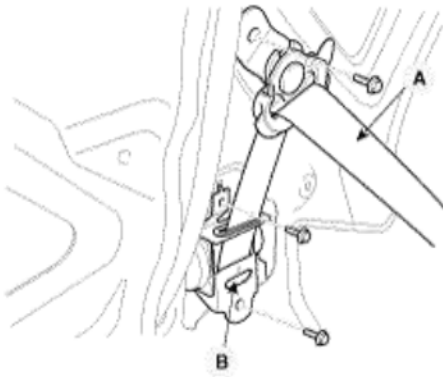

7. Installation is the reverse of removal.


Rear Seat Belt Buckle Replacement

1. Remove the rear seat cushion.
2. Remove the seat belt buckle (A).
3. Disconnect the connector (B).
Tightening torque :
4.0~5.5kgf.m (39.2~53.9N.m, 28.9~39.8lb-ft)

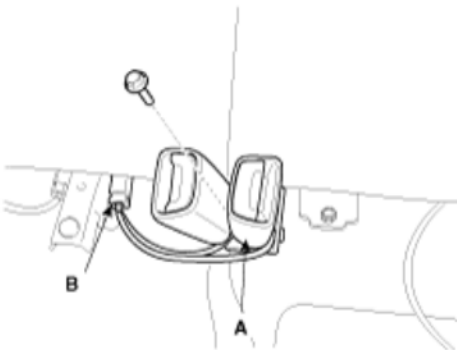

4. Remove the center seat belt and buckle (A).
Tightening torque :

4.0~5.5kgf.m (39.2~53.9N.m, 28.9~39.8lb-ft)

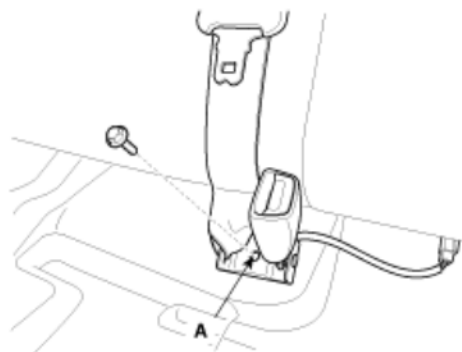

5. Installation is the reverse of removal.