


Assist systems , (6K2),(6K4)

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

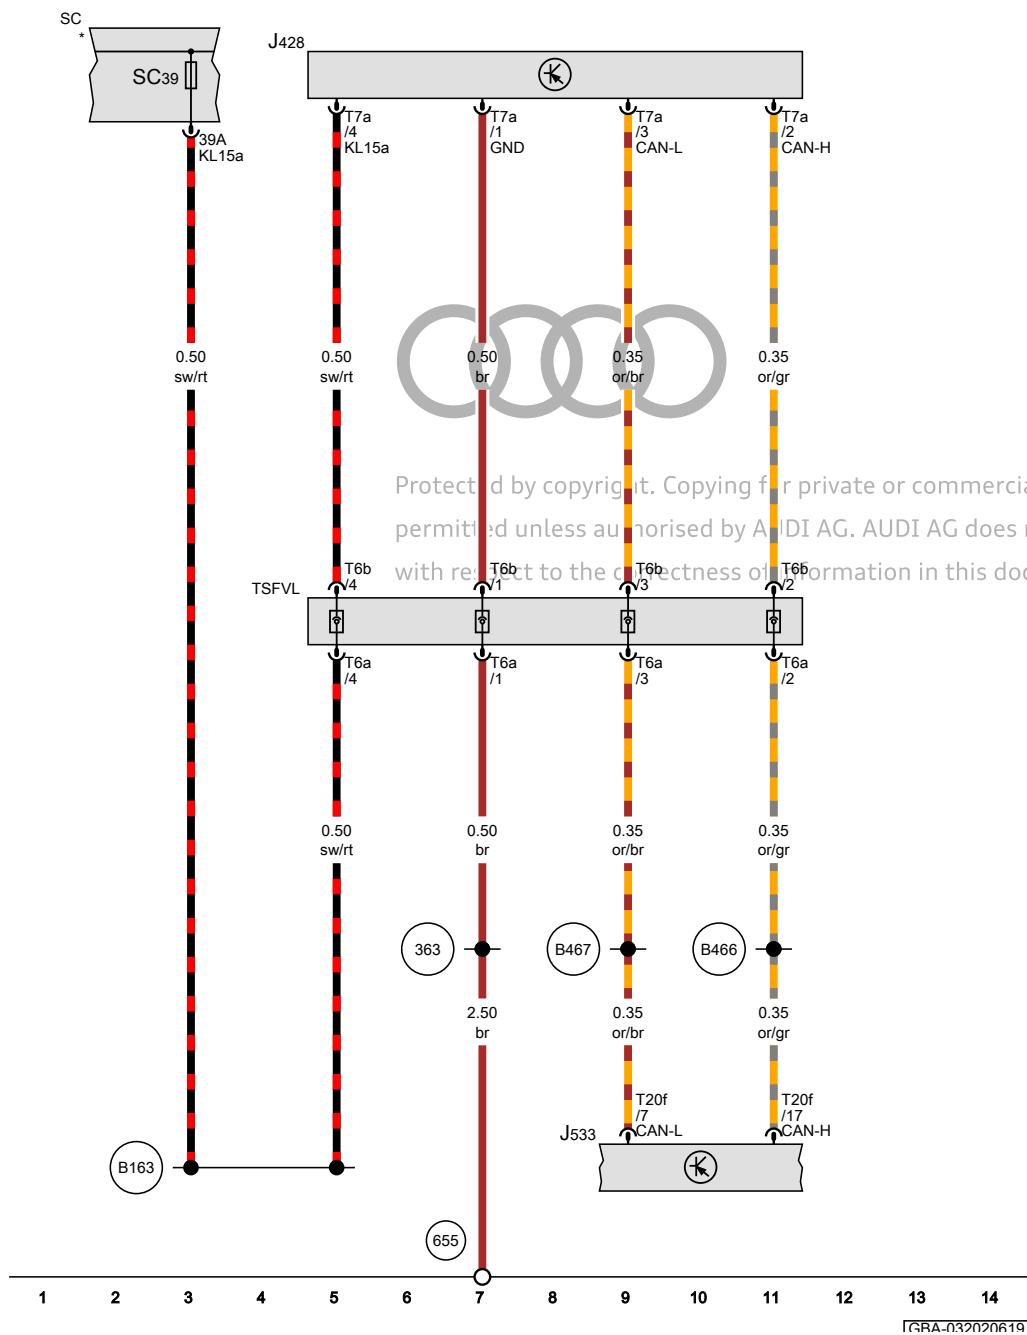

Adaptive cruise control unit, Data bus diagnostic interface, Fuse holder C

- J428 Adaptive cruise control unit
- J533 Data bus diagnostic interface
- SC Fuse holder C
- SC39 Fuse 39 on fuse holder C
- T6a 6-pin connector, black
- T6b 6-pin connector, black
- T7a 7-pin connector, black
- T20f 20-pin connector, red
- TSFVL Coupling point on front left bumper

- 363 Earth connection 8, in engine compartment wiring harness
- 655 Earth point, on left headlight
- B163 Positive connection 1 (15), in interior wiring harness
- B466 Connection 2, in main wiring harness
- B467 Connection 3, in main wiring harness
- * see applicable current flow diagram for fuses in interior