


Front passenger door , (L0L)

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.


Front passenger door control unit, Data bus diagnostic interface, Fuse holder C

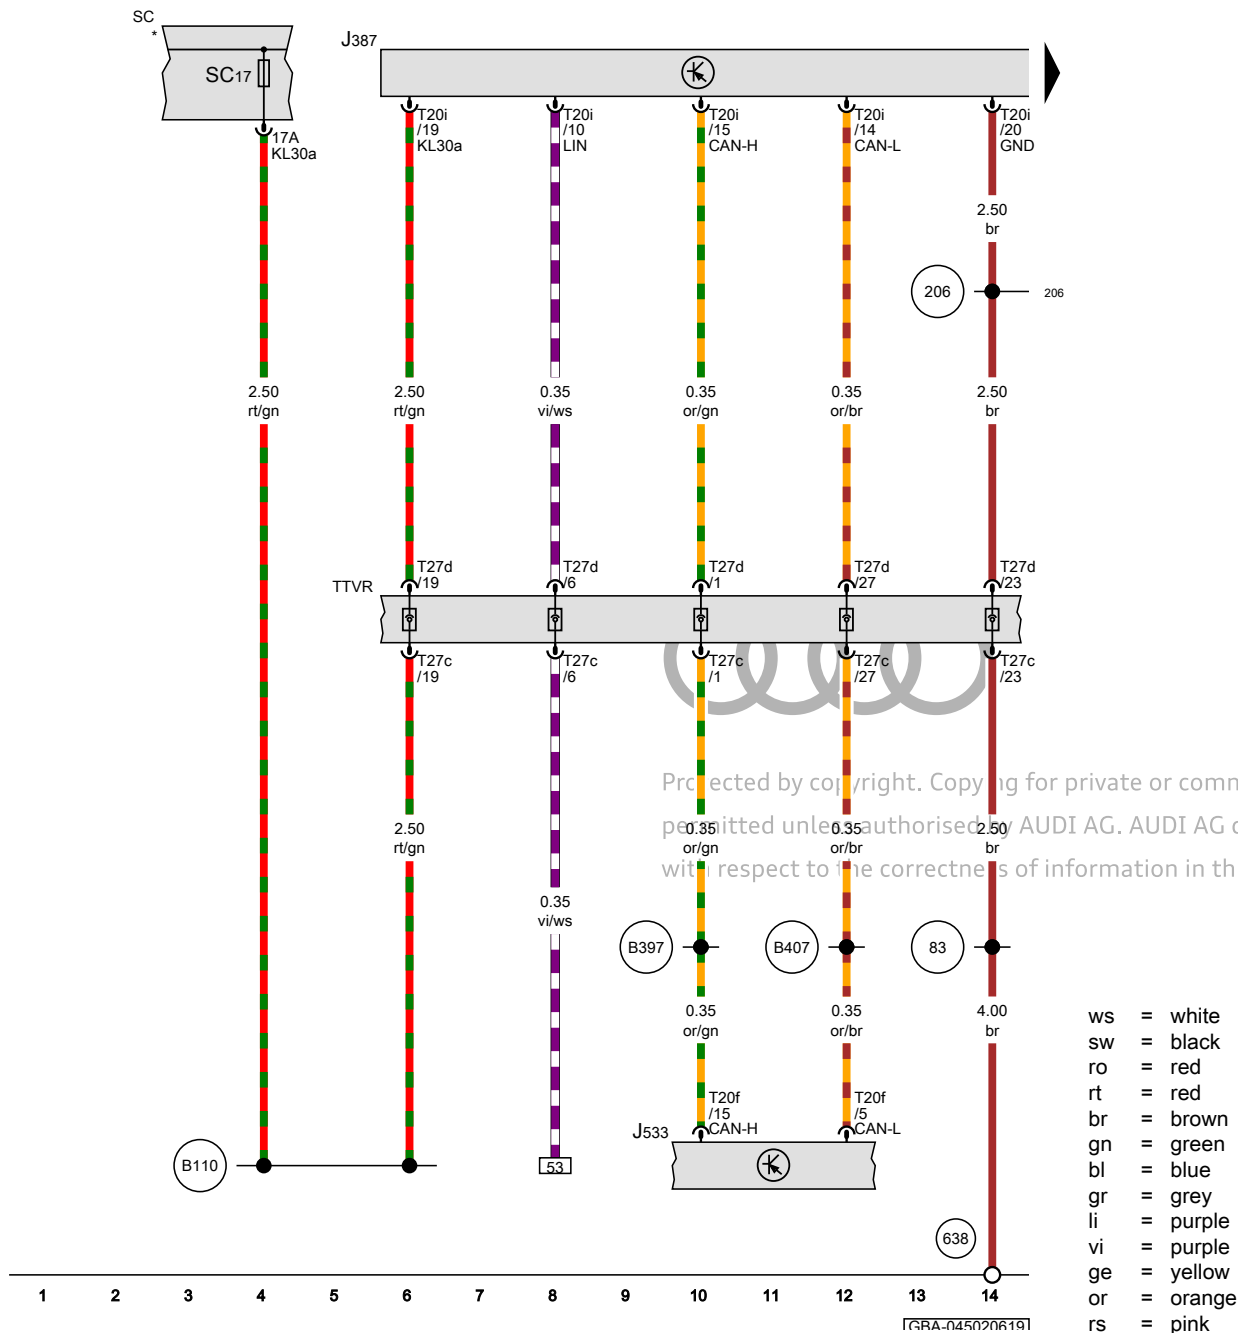

- J387 Front passenger door control unit
- J533 Data bus diagnostic interface
- SC Fuse holder C
- SC17 Fuse 17 on fuse holder C
- T20f 20-pin connector, red
- T20i 20-pin connector, white
- T27c 27-pin connector, black
- T27d 27-pin connector, black
- TTVR Coupling point for front right door

- 83 Earth connection 1, in front right wiring harness
- 206 Earth connection, in front passenger door wiring harness
- 638 Earth point, on right A-pillar
- B110 Connection (30, window regulators), in interior wiring harness
- B397 Connection 1 (convenience CAN bus, high), in main wiring harness
- B407 Connection 2 (convenience CAN bus, low), in main wiring harness
- * see applicable current flow diagram for fuses in interior

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

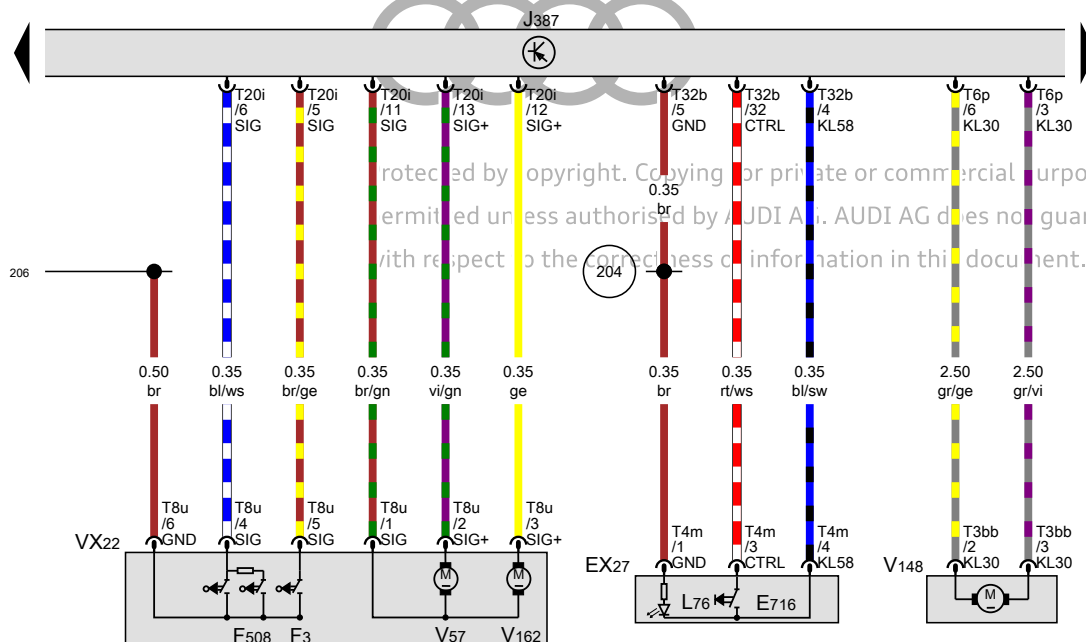


Window regulator switch in front passenger door, Front passenger door control unit, Front passenger door lock unit, Front passenger side window regulator motor

- EX27 Window regulator switch in front passenger door
- E716 Front passenger side window regulator button
- F3 Front passenger door contact switch
- F508 Passenger side central locking actuator
- J387 Front passenger door control unit
- L76 Button illumination bulb
- T3bb 3-pin connector, blue
- T4m 4-pin connector, black
- T6p 6-pin connector, black
- T8u 8-pin connector, black
- T20i 20-pin connector, white
- T32b 32-pin connector, blue
- VX22 Front passenger door lock unit
- V57 Front passenger door central locking motor
- V148 Front passenger side window regulator motor
- V162 Front passenger door central locking SAFELOCK function motor

- 204 Earth connection 3, in Digifant wiring harness
- 206 Earth connection, in front passenger door wiring harness

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Front passenger door control unit, Passenger side exterior mirror

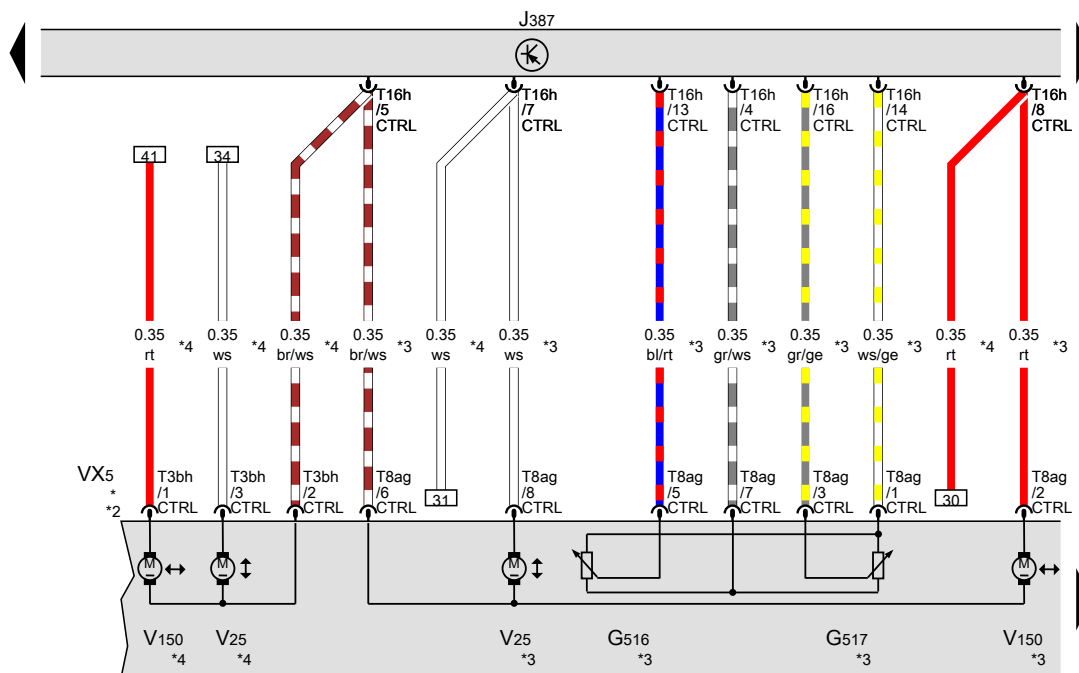


- G516 Potentiometer for horizontal adjustment of front passenger side mirror
- G517 Potentiometer for vertical adjustment of front passenger side mirror
- J387 Front passenger door control unit
- T3bh 3-pin connector, black
- T8ag 8-pin connector, black
- T16h 16-pin connector, black
- VX5 Passenger side exterior mirror
- V25 Front passenger side mirror adjustment motor 2
- V150 Front passenger side mirror adjustment motor
- * Pre-wired component
- *2 see applicable current flow diagram for lane change assist
- *3 For models with electric folding exterior mirrors
- *4 For models with no electric folding exterior mirrors



Protected by copyright. Copying for private or commercial purposes in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 vi = purple
 ge = yellow
 or = orange
 rs = pink

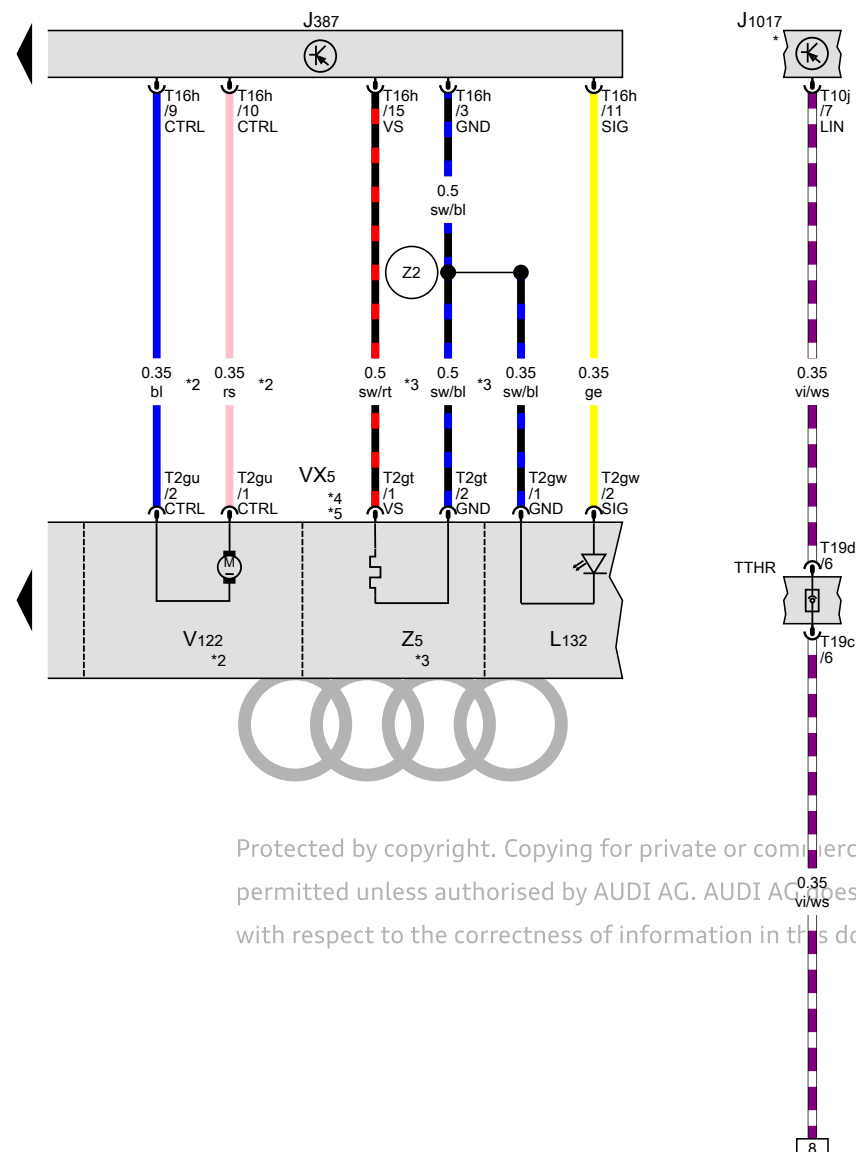

Front passenger door control unit, Control unit with rear passenger side window regulator motor, Passenger side exterior mirror

- J387 Front passenger door control unit
- J1017 Control unit with rear passenger side window regulator motor
- L132 Front passenger side turn signal repeater bulb
- T2gt 2-pin connector, black
- T2gu 2-pin connector, black
- T2gw 2-pin connector, black
- T10j 10-pin connector, black
- T16h 16-pin connector, black
- T19c 19-pin connector, black
- T19d 19-pin connector, black
- TTHR Coupling point for rear right door
- VX5 Passenger side exterior mirror
- V122 Front passenger side fold-in mirror motor
- Z5 Heated exterior mirror on passenger side

Z2 Connection 2, in mirror adjustment/heating wiring harness

- * see applicable current flow diagram
- *2 For models with electric folding exterior mirrors
- *3 For models with heated exterior mirrors
- *4 Pre-wired component
- *5 see applicable current flow diagram for lane change assist

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink