

MITSUBISHI MOTORS
GENUINE PARTS

TO THE CUSTOMER HANDLING INSTRUCTIONS

LED ASH CUP

GENERAL

MZ520635EX

Thank you for purchasing the Mitsubishi Genuine Accessory.

Read this publication carefully to ensure correct use of the product in the best condition with proper knowledge of it.

Keep this publication for reference when maintenance is required.


Attention

- 1) Contained in the boxes marked **⚠ Caution** and **📖 Note** are safety precautions that must be observed when the product is used.
- 2) If there is anything unclear about the usage of the product, contact your Mitsubishi Motors dealer for clarification.

⚠ Caution

- Never modify the product.
- Mitsubishi Motors Corporation is not responsible for any defects or difficulties caused by or resulting from the failure to follow given instructions.

Complete Assembly Drawing

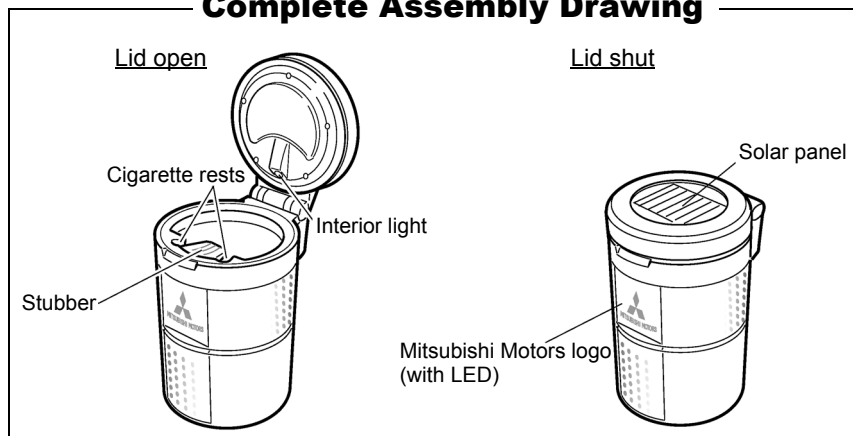

0780-5091A-0705
(07B1416)

■ INSTALLATION

- Fit this ash cup into the vehicle's cup holder (or genuine accessory cup holder) on the center console or another similar location. Do not force it into place.




Caution

- Do not place the ash cup on the dashboard or in any location that can reach 80°C or higher. The ash cup may warp.
- If the ash cup warps, cigarettes may not be extinguished as intended. In order to avoid this extremely dangerous situation, immediately discontinue use of a warped ash cup.
- Do not set the ash cup into a cup holder of an inappropriate shape or a cup holder in which opening and closing of the ash cup lid is difficult. Failure to observe this precaution can lead to the LED ash cup and other vehicle components being damaged.


Typical installation 1

Ash cup fit inside retractable cup holder

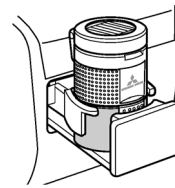

Typical installation 2

Ash cup fit inside center-console cup holder

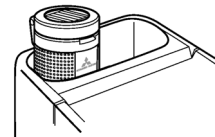


■ HOW TO USE

Open the ash cup lid.



Caution

Always use the black stubber to extinguish a cigarette. If the lit end of a cigarette should come into contact with any other part of the ash cup, damage such as the peeling of paint could result.

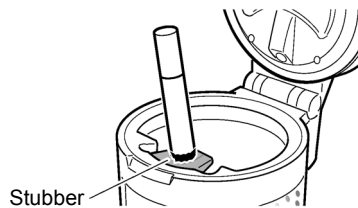


- When the lid is opened, the interior light and the logo illumination will come on.
- When the lid is closed, the interior light will go out and the logo illumination will gradually dim.

■ PRECAUTIONS FOR USE

- Be sure to extinguish the cigarette before discarding it in the ash cup. Never discard waste paper and other flammable materials in the ash cup. Failure to observe these precautions could result in a fire.
- Be sure to fully close the lid whenever the ash cup is not being used.
- Do not drop the ash cup onto hard surfaces or the like. Do not apply any excessive force to an open lid. Failure to observe these precautions can result in the ash cup or its lid being damaged.
- The lid of the ash cup is water resistant but not waterproof. As the interior of the lid contains lighting and other electrical components, the ash cup must not be submerged or exposed to water at high pressure. Failure to observe this precaution can damage the illumination system and prevent it from lighting.
- Lighting of this ash cup is controlled using a magnet and sensor. As such, it should not be installed or used in the vicinity of sensitive electronic components.
- In order to ensure that cigarette butts do not spill out, do not allow the ash cup to roll freely on a seat or place it upside-down.
- This product is designed specifically for use in vehicles, and its functionality cannot be guaranteed if used in any other way.

■ HOW TO CHARGE THE SOLAR BATTERY

Charging locations:

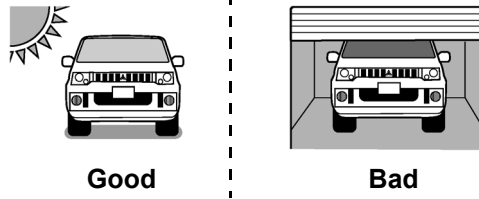

Charging time:

The ash cup will be fully charged in approximately 8 hours when placed in direct sunlight on a sunny day.

Note

Insufficient charging and failure to light can occur as a result of rainy or cloudy weather, insufficient expose to sunlight, adverse temperature conditions, and inappropriate storage locations such as garages.

Battery life:

A fully charged ash cup can stay illuminated for approximately 3 hours.

Caution

If the ash cup's lid is left open for an extended period of time, the internal battery may fully discharge, significantly affecting its ability to power the illumination system.

Note

When the ash cup is first unpacked, its internal battery may not be fully charged; furthermore, insufficient charging also may occur when the lid is left open for an extended period of time or, for whatever reason, recharging is not possible. In this type of situation, the illumination LEDs may flash or light in green. To rectify this situation, close the lid and place the ash cup in direct sunlight for approximately one day to allow the internal battery to fully charge.

■ CARE

- 1) When emptying cigarette butts and ash, open the lid and hold the ash cup upside-down.

Caution

Before emptying the ash cup, ensure that all of the cigarette butts inside it have been fully extinguished.



- 2) Wipe the ash cup using a soft cloth that has been dampened in water or a weak solution of neutral detergent and fully wrung out.